

MONACO MOTORHOME LIMITED WARRANTY

WHAT THE PERIOD OF COVERAGE IS:

This Limited Warranty provided by Monaco (“Warrantor”) covers those Components, assemblies and systems of your new motorhome not excluded under the section “What is Not Covered” and when sold by an authorized dealer, for twelve (12) months from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. However, this Limited Warranty provided by Warrantor covers the steel or aluminum frame structure, only, of the sidewalls (excluding slide outs), roof, and rear and front walls for sixty (60) months from the original retail purchase date or the first 50,000 miles of use, whichever occurs first.

If you use your motorhome for any rental, commercial or business purposes whatsoever, the Limited Warranty provided by Warrantor covers your new motorhome when sold by an authorized dealer for ninety (90) days from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. In addition, the Limited Warranty provided by Warrantor covers the steel or aluminum frame structure, only, of the sidewalls (excluding slide outs), roof, and rear and front walls for twelve (12) months from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. A conclusive presumption that your motorhome has been used for commercial and/or business purposes arises if you have filed a federal or state tax form claiming any business tax benefit related to your ownership of the motorhome.

The above Limited Warranty coverage applies to all owners, including subsequent owners, of the motorhome. However, a subsequent owner must submit a warranty transfer form by filing the form through an authorized Monaco dealer. A subsequent owner’s warranty coverage period is the remaining balance of the warranty coverage period the prior owner was entitled to under this Limited Warranty. Warranty transfer forms can be obtained by contacting the Customer Relations Department. There is no charge for the transfer.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES:

IMPLIED WARRANTIES, IF ANY, ARISING BY WAY OF STATE LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE TERM OF THIS LIMITED WARRANTY AND ARE LIMITED IN SCOPE OF COVERAGE TO THOSE PORTIONS OF THE MOTORHOME COVERED BY THIS LIMITED WARRANTY. WARRANTOR DISCLAIMS ALL IMPLIED AND EXPRESS WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ON COMPONENTS AND APPLIANCES EXCLUDED FROM COVERAGE AS SET FORTH BELOW. There is no warranty of any nature made by Warrantor beyond that contained in this Limited Warranty. No person has authority to enlarge, amend or modify this Limited Warranty. The dealer is not the Warrantor’s agent but is an independent entity. Warrantor is not responsible for any undertaking, representation or warranty made by any dealer or other person beyond those expressly set forth in this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

WHAT THE WARRANTY COVERS:

Warrantor’s Limited Warranty covers defects in the manufacture of your motorhome and defects in materials used to manufacture your motorhome. “Defect” means the failure of the motorhome and/or the materials used to assemble the motorhome to conform to Warrantor’s design and manufacturing specification and tolerances. Also see the section “What the Warranty Does Not Cover” set out below.

WHAT WE WILL DO TO CORRECT PROBLEMS:

Warrantor’s sole and exclusive obligation is to repair and/or replace, at its option, any covered defect if: (1) you notify Warrantor or one of its authorized servicing dealers of the defect within the warranty coverage period and within five (5) days of discovering the defect; and (2) you deliver your Motorhome to Warrantor or Warrantor’s authorized servicing dealer at your cost and expense. It is reasonable to expect some service items to occur during the warranty period. The performance of warranty repairs shall not extend the original warranty coverage period. Further, any performance of repairs after the warranty coverage period has expired or any performance of repairs to component parts and appliances that are excluded from coverage shall be considered “good will” repairs, which shall not alter the express terms of this limited warranty. If the repair or replacement remedy fails to successfully cure a defect after Warrantor received a reasonable opportunity to cure the defect(s), your sole and exclusive remedy shall be limited to Warrantor paying you the cost of having an independent third party perform repair(s) to the defect(s).

Warrantor may use new and/or remanufactured parts and/or components of substantially equal quality to complete any repair.

Defects and/or damage to interior and exterior surfaces, trim, upholstery and other appearance items may occur at the factory during manufacture, during delivery of the motorhome to the selling dealer or on the selling dealer’s lot. Normally, any such defect or damage is detected and corrected at the factory or by the selling dealer during the inspection process performed by the Warrantor and the selling dealer. If, however, you discover any such defect or damage when you take delivery of the motorhome, you must notify your dealer or Warrantor within five days of the date of purchase to have repairs performed to the defect at no cost to you as provided by this Limited Warranty.

If either three or more unsuccessful repair attempts have been made to correct any covered defect that you believe substantially impairs the value, use or safety of your motorhome or repairs to any covered defect(s), which you believe substantially impairs the value, use or safety of your motorhome, have taken 30 or more days to complete, you must, to the extent permitted by law, notify Warrantor directly in writing of the failure to successfully repair the defect(s) so that Warrantor can become directly involved in exercising a repair attempt for the purpose of performing a successful repair to the identified defect(s).

HOW TO GET SERVICE:

The “Acknowledgement of Receipt of Warranty/Production Information” form must be returned to Warrantor promptly upon purchase to assure proper part replacement and repair of your motorhome. Failure to return the “Acknowledgement of Receipt of Warranty/Production Information” form will not affect your rights under the Limited Warranty so long as you can furnish proof of purchase. For warranty service simply contact one of Warrantor’s authorized service centers for an appointment, then deliver your motorhome (at your expense) to the service center. If you need assistance in locating an authorized warranty service facility, contact Warrantor’s Warranty Department (1-877-466-6226). The mailing address is:

**91320 Coburg Industrial Way
Coburg, Oregon 97408**

In the event the motorhome cannot be driven to a servicing dealer to have warranty repairs performed to it due to a malfunction of a warranted part, Warrantor will pay the cost of having the motorhome towed to the nearest authorized repair facility provided you notify Warrantor prior to incurring the towing charges to receive directions to the nearest repair facility.

Because Warrantor does not control the scheduling of service work by its authorized servicing dealers, you may encounter some delay in scheduling and/or in the completion of the repairs.

WHAT THE WARRANTY DOES NOT COVER:

This Limited Warranty does not cover: any motorhome sold or registered outside of the United States or Canada; items which are added or changed after the motorhome leaves Warrantor’s possession; items that are working as designed but which you are unhappy with because of the design; normal wear and usage, such as fading or discoloration of fabrics, or the effects of moisture inside the motorhome; blistering, crazing, thermal fatigue, cracking, chalking, fading, discoloration, rot, corrosion, mildew, wood separation and core voids of the exterior fiberglass; defacing, scratching, dents and chips on any surface or fabric of the motorhome, not caused by Warrantor; owner maintenance, including by way of example wheel alignments and resealing exterior sealant areas; the automotive chassis and power train, including, by way of example the engine, drivetrain, steering and handling, braking, wheel balance, muffler, tires, tubes, batteries and gauges; appliances and components covered by their own manufacturer’s warranty including, by way of example: the exterior fiberglass panels, microwave, refrigerator, icemaker, stove, oven, generator, roof air conditioners, hydraulic jacks, VCR, television(s), water heater, furnace, stereo, radio, compact disc player, washer, dryer, inverter and cellular phone; or flaking, peeling and chips or other defects or damage in or to the exterior or finish caused by rocks or other road hazards, the environment including airborne pollutants, salt, tree sap and hail. Component part and appliance manufacturers issue limited warranties covering those portions of the motorhome not covered by the Limited Warranty issued by Warrantor. To learn more on what specific component parts and appliances are excluded from the Limited Warranty issued by Warrantor please contact your selling dealership or Warrantor directly or review the warranty packet inside the Motorhome.

EVENTS DISCHARGING WARRANTOR FROM OBLIGATION UNDER WARRANTY:

Misuse or neglect, accidents, unauthorized alteration, failure to provide reasonable and necessary maintenance (see Owner’s Manual), damage caused by off road use, collision, fire, theft, vandalism, explosions, overloading in excess of rated capacities, and odometer tampering shall discharge Warrantor from any express or implied warranty obligation to repair any resulting defect.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:

THE ORIGINAL PURCHASER OF THE MOTORHOME AND ANY PERSON TO WHOM THE MOTORHOME IS TRANSFERRED, AND ANY PERSON WHO IS AN INTENDED OR UNINTENDED USER OR BENEFICIARY OF THE MOTORHOME, SHALL NOT BE ENTITLED TO RECOVER FROM WARRANTOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE MOTORHOME, INCLUDING BY WAY OF EXAMPLE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE PRODUCT TO THE SERVICING DEALER, HOTEL ROOMS, LOST WAGES AND MOISTURE DAMAGE SUCH AS MOLD AND MILDEW. THE EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES SHALL BE DEEMED INDEPENDENT OF, AND SHALL SURVIVE, ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusions may not apply to you.

LEGAL REMEDIES:

THIS LIMITED WARRANTY DOES NOT “EXTEND TO FUTURE PERFORMANCE.” ANY ACTION TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE YEAR AFTER THE EXPIRATION OF THE ONE YEAR WARRANTY COVERAGE PERIOD DESIGNATED ABOVE. IF YOU USE YOUR MOTOR HOME FOR COMMERCIAL OR BUSINESS PURPOSES, ANY ACTION TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE YEAR AFTER THE EXPIRATION OF THE NINETY (90) WARRANTY COVERAGE PERIOD DESIGNATED ABOVE. THE PERFORMANCE OF REPAIRS SHALL NOT SUSPEND THIS LIMITATIONS PERIOD FROM EXPIRING. Some states do not allow the reduction in the statute of limitations, so the above reduction in the statute of limitations may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

LARGER PRINT VERSION AVAILABLE WITHIN THE OWNERS MANUAL AND UPON REQUEST ADDRESSED TO YOUR SELLING DEALER OR WARRANTOR’S WARRANTY DEPARTMENT.

ROADMASTER CHASSIS LIMITED WARRANTY

WHAT THE PERIOD OF COVERAGE IS:

This Limited Warranty provided by Roadmaster® (“Warrantor”) covers your Roadmaster Chassis for thirty-six (36) months from the original retail purchase date or the first 36,000 miles of use, whichever occurs first.

If you use the Roadmaster Chassis that your motorhome is mounted upon for any rental, commercial or business purposes whatsoever, this Limited Warranty covers your new Roadmaster Chassis for Ninety (90) days from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. A conclusive presumption that the Roadmaster Chassis has been used for commercial and/or business purposes arises if you have filed a federal or state tax form claiming any business tax benefit related to your ownership of the motorhome.

This Limited Warranty applies to all owners, including subsequent owners, of the Roadmaster Chassis. However, a subsequent owner must submit a warranty transfer form. A subsequent owner’s warranty coverage period is the remaining balance of the warranty coverage period the prior owner was entitled to under this Limited Warranty. Warranty transfer forms can be obtained by contacting the Customer Relations Department. There is no charge for the transfer.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES:

IMPLIED WARRANTIES, IF ANY, ARISING BY WAY OF STATE LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE TERM OF THIS LIMITED WARRANTY AND ARE LIMITED IN SCOPE OF COVERAGE TO THOSE PORTIONS OF THE MOTORHOME COVERED BY THIS LIMITED WARRANTY. WARRANTOR DISCLAIMS ALL IMPLIED AND EXPRESS WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ON COMPONENTS AND APPLIANCES EXCLUDED FROM COVERAGE AS SET FORTH BELOW. There is no warranty of any nature made by Warrantor beyond that contained in this Limited Warranty. No person has authority to enlarge, amend or modify this Limited Warranty. The dealer is not the Warrantor’s agent but is an independent entity. Warrantor is not responsible for any undertaking, representation or warranty made by any dealer or other person beyond those expressly set forth in this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you

WHAT THE WARRANTY COVERS:

Warrantor’s Limited Warranty covers defects in the manufacture of the Roadmaster Chassis and defects in materials used to manufacture the Roadmaster Chassis. “Defect” means the failure of the Roadmaster Chassis and/or the materials used to assemble the Roadmaster Chassis to conform to Warrantor’s design and manufacturing specification and tolerances. Also see the section “What the Warranty Does Not Cover” set out below.

WHAT WE WILL DO TO CORRECT PROBLEMS:

Warrantor’s sole and exclusive obligation is to repair and/or replace, at its option, any covered defect if: **(1)** you notify Warrantor or one of its authorized servicing dealers of the defect within the warranty coverage period and within five (5) days of discovering the defect; and **(2)** you deliver your Roadmaster Chassis to Warrantor or Warrantor’s authorized servicing dealer at your cost and expense. It is reasonable to expect some service items to occur during the warranty period. The performance of warranty repairs shall not extend the original warranty coverage period. Further, any performance of repairs after the warranty coverage period has expired or any performance of repairs to component parts and appliances that are excluded from coverage shall be considered “good will” repairs, which shall not alter the express terms of this limited warranty. If the repair or replacement remedy fails to successfully cure a defect after Warrantor received a reasonable opportunity to cure the defect(s), your sole and exclusive remedy shall be limited to Warrantor paying you the cost of having an independent third party perform repair(s) to the defect(s).

Warrantor may use new and/or remanufactured parts and/or components of substantially equal quality to complete any repairs.

Defects and/or damage to interior and exterior surfaces, trim, upholstery and other appearance items may occur at the factory during manufacture, during delivery of the motorhome to the selling dealer or on the selling dealer’s lot. Normally, any such defect or damage is detected and corrected at the factory or by the selling dealer during the inspection process performed by the Warrantor and the selling dealer. If, however, you discover any such defect or damage when you take delivery of the motorhome, you must notify your dealer or Warrantor within five days of the date of purchase to have repairs performed to the defect at no cost to you as provided by this Limited Warranty.

If either three or more unsuccessful repair attempts have been made to correct any covered defect that you believe substantially impairs the value, use or safety of your motorhome, or repairs to any covered defect(s) which you believe substantially impairs the value, use or safety of your motorhome have taken 30 or more days to complete, you must, to the extent permitted by law, notify Warrantor directly in writing of the failure to successfully repair the defect(s) so that Warrantor can become directly involved in exercising a final repair attempt for the purpose of performing a successful repair to the identified defect(s).

HOW TO GET SERVICE:

For warranty service simply contact one of Warrantor's authorized service centers for an appointment, then deliver your Roadmaster Chassis (at your expense) to the service center. If you need assistance in locating an authorized warranty service facility, contact **Warrantor's Warranty Department** (1-877-466-6226). The mailing address is:

**91320 Coburg Industrial Way
Coburg, Oregon 97408**

In the event the Roadmaster Chassis is inoperative due to malfunction of a warranted part, Warrantor will pay the cost of having the motorhome towed to the nearest authorized repair facility provided you notify Warrantor prior to incurring the towing charges to receive directions to the nearest repair facility. Because Warrantor does not control the scheduling of service work by its authorized servicing dealers, you may encounter some delay in scheduling and/or in the completion of the repairs.

WHAT THE WARRANTY DOES NOT COVER:

This Limited Warranty does not cover: modifications and alterations to the Roadmaster Chassis by others; the motorhome that is mounted upon the Roadmaster Chassis, including by way of example the motorhome manufacturer's design, manufacture, assembly and/or installation of the side walls, roof, windows, flooring, electrical system, plumbing system, LP-Gas system, appliances and slide outs; items that are working as designed but which you are unhappy with because of the design; normal wear and usage; routine maintenance including by way of example wheel alignments; component parts covered by their own manufacturer's warranty, including by way of example the engine, radiator, transmission, tires, tubes, batteries, exhaust system and the emission control systems; and, flaking, peeling rusting and chips or other defects or damage in or to the frame and frame cross members caused by rocks or other road hazards and the environment including airborne pollutants and salt. Component part manufacturers issue limited warranties covering those portions of the Roadmaster Chassis not covered by the Limited Warranty issued by Warrantor. To learn more on what specific component parts are excluded from the Limited Warranty issued by Warrantor please contact your selling dealership or Warrantor directly or review the warranty packet inside the Motorhome.

EVENTS DISCHARGING WARRANTOR FROM OBLIGATION UNDER WARRANTY:

Misuse or neglect, accidents, unauthorized alteration, failure to provide reasonable and necessary maintenance (see Owner's Manual), damage caused by off road use, collision, fire, theft, vandalism, explosions, overloading in excess of rated capacities, and odometer tampering shall discharge Warrantor from any express or implied warranty obligation to repair any resulting defect.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:

THE ORIGINAL PURCHASER OF THE ROADMASTER CHASSIS AND ANY PERSON TO WHOM THE ROADMASTER CHASSIS IS TRANSFERRED, AND ANY PERSON WHO IS AN INTENDED OR UNINTENDED USER OR BENEFICIARY OF THE ROADMASTER CHASSIS, SHALL NOT BE ENTITLED TO RECOVER FROM WARRANTOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE ROADMASTER CHASSIS, INCLUDING BY WAY OF EXAMPLE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE PRODUCT TO THE SERVICING DEALER, HOTEL ROOMS, LOST WAGES AND WATER DAMAGE. THE EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES SHALL BE DEEMED INDEPENDENT OF, AND SHALL SURVIVE, ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusions may not apply to you.

LEGAL REMEDIES:

THIS LIMITED WARRANTY DOES NOT "EXTEND TO FUTURE PERFORMANCE." ANY ACTION TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE YEAR AFTER THE EXPIRATION OF THE THIRTY-SIX (36) MONTH WARRANTY COVERAGE PERIOD DESIGNATED ABOVE. IF YOU USE YOUR MOTORHOME FOR COMMERCIAL OR BUSINESS PURPOSES, ANY ACTION TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE YEAR AFTER THE EXPIRATION OF THE NINETY (90) DAY WARRANTY COVERAGE PERIOD DESIGNATED ABOVE. THE PERFORMANCE OF REPAIRS SHALL NOT SUSPEND THIS LIMITATIONS PERIOD FROM EXPIRING. Some states do not allow the reduction in the statute of limitations, so the above reduction in the statute of limitations may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

LARGER PRINT VERSION AVAILABLE WITHIN THE OWNERS MANUAL AND UPON REQUEST ADDRESSED TO YOUR SELLING DEALER OR WARRANTOR'S WARRANTY DEPARTMENT.

121605

Diplomat 2007

Sections

SECTION 1 ~ GENERAL INFORMATION	3
SECTION 2 ~ DRIVING & SAFETY.....	15
SECTION 3 ~ EXTERIOR & INTERIOR CARE.....	51
SECTION 4 ~ APPLIANCES	73
SECTION 5 ~ EQUIPMENT.....	95
SECTION 6 ~ WATER SYSTEMS.....	127
SECTION 7 ~ LP-GAS SYSTEMS.....	143
SECTION 8 ~ ELECTRICAL SYSTEMS - HOUSE	153
SECTION 9 ~ ELECTRICAL SYSTEMS - CHASSIS.....	171
SECTION 10 ~ CHASSIS INFORMATION	189
INDEX	233

The information contained in this document is intended to reflect standard and optional equipment included in a typically equipped model at the time of delivery to the initial retail owner. Your actual unit may vary from this document as a result of optional equipment that is not generally offered on this model. In the case that you are not the initial retail owner of the unit, this document will not reflect modifications that may have been performed by previous owners.

Product information and specifications are shown herein as of the time of printing. The motorhome manufacturer reserves the right to change product specifications, designs and standard equipment without notice and without incurring obligation.

©Copyright Monaco Coach Corporation. All rights reserved. All other trademarks or registered trademarks are property of their respective holders. Brand name products of other companies mentioned in this manual are not endorsed by the manufacturer of the motorhome.

Diplomat 2007

General Information — Section I

WARRANTY INFORMATION FILE	4
REPORTING SAFETY DEFECTS.....	4
SAFETY TERMS.....	4
GLOSSARY OF TERMS	5
VENDOR LIST	7
OWNER'S MANUAL SURVEY: DIPLOMAT 2007	11
LIMITED WARRANTY TRANSFER APPLICATION/ CHANGE OF OWNER INFORMATION.....	13

WARRANTY INFORMATION FILE

In addition to this Owner's Manual you will find a Warranty Information File in your unit. This file contains valuable documents about your motorhome's systems and equipment. Many of the component manufacturer's warranty registration cards can be found in the box. They will need to be filled out and mailed. Be sure you read and understand all the information in this file to help you safely operate, maintain and troubleshoot those items.

Additional Information:

Changes, additions and supplemental information in the form of Manual Addendums and "Tech Tips" can be obtained by visiting our Web Site at www.monaco-online.com. Select one of the products from the product lineup. Go to the Service menu. A submenu will appear.

It may also be helpful to browse the "Tech Tips" menu for the other product lines. The tips may not completely apply to your particular model, but information contained therein can be useful.

REPORTING SAFETY DEFECTS

If you believe that your motorhome has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Monaco Coach. If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of motorhomes, it may order a recall or

remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer or Monaco Coach. To contact NHTSA you may call the Auto Safety Hot line toll-free at 1-888-327-4236 (TTY: 1-800-424-9153) (or 1-202-366-0123 in the Washington D.C. area), visit their websites at www.nhtsa.gov or www.safercar.gov, or write to:

NHTSA
U.S. Department of Transportation
400 Seventh Street S.W.
Washington, DC 20590

SAFETY TERMS

Many of the safety terms are personal safety instructions. Definitions for the terms are listed below. It is important to thoroughly read and understand the safety instructions displayed throughout the manual. Failure to comply with specific instructions may result in personal injury or death. Many instructions are required by National Safety Associations.

WARNING:

Warnings contain information regarding personal safety and/or pertaining to potential extensive or permanent damage to the motorhome or its components by means of hazards or improper use.

CAUTION:

Cautions pertain to potential damage to the motorhome and/or its components.

POISON:

A warning or caution pertaining to safety and/or use of a poisonous substance or harmful chemical.

NOTE:

Information and reminders concerning proper operation of the motorhome and/or its components.

INSPECTION:

Inspection of the motorhome and/or its components is required. Additional instruction may follow.

LUBE:

Lubrication, or addition of a lubricant product, to the motorhome and/or a specified component or part is required. Additional instruction may follow.

ASSEMBLE or REPAIR:

Assembly, disassembly or installation of a component or part, and/or repair to the motorhome may be required. Assistance of Technical Support or Technician may be necessary.

INFORMATION:

References to additional information regarding operation of the motorhome and/or its components found in additional sources, other than the Owner's Manual. Also refers to the WARRANTY INFORMATION FILE, found within the Warranty Information Box in the motorhome.

TIP:

Tips contain information, helpful hints and/or suggestion for ease of operation of the motorhome or its components.

GLOSSARY OF TERMS

AC Electricity - Alternating current also known as household power.

Air Compressor - Pumps air to and builds air pressure in an air system.

Air Dryer - Cools, filters and dries the air delivered by an air compressor.

Air Governor - Controls the operation of the air compressor by constantly monitoring air pressure in the supply tank of the air system. The air governor initiates the unload cycle when the cut-out pressure is reached. The air governor also controls the air dryer by sending an air signal (at the beginning of the compressor unload cycle) to the control port of the air dryer, initiating the purge cycle. When this air signal is removed by the governor (at the beginning of the compressor load cycle) the purge valve closes and the drying cycle begins.

Alternating Current (AC) - A current that varies periodically in magnitude and direction. A battery does not deliver alternating current. Also referred to as shore power, utility power, inverter power, generator power, etc.

Ampere (Amp) - The unit of measure of electron flow rate of current through a circuit.

Ampere-hour (Amp-hr. AH) - A unit of measure for a battery electrical storage capacity, obtained by multiplying the current in amperes by the time in hours of discharge. *Example:* A battery which delivers 5 amperes for 20 hours, delivers 5 amperes times 20 hours, or 100 Amp-Hr. of capacity.

ANSI - American National Standards Institute.

ASTM - American Society for Testing and Materials.

Black Water - Term associated with the sewage holding tank. The toilet drains directly into this tank.

CCA - Cold Cranking Amperage is the amount of current a battery can deliver for 30 seconds at 0° F without dropping below a specified voltage, usually 10.5 Volts DC.

Chassis Battery - Powers chassis 12 Volt accessories and starts engine.

Circuit - An electric circuit is the path of an electric current. A closed circuit has a complete path. An open circuit has a broken or disconnected path.

City Water - A term associated with the water supply that you hook-up to at campgrounds. It is called city water because

water is pulled from a central source (like in a city) and not the fresh water tank.

Compressor Load Cycle - The time during which the air compressor is building air pressure in an air system.

Compressor Unload Cycle - The time during which the air compressor is idling and is not building air pressure in an air system.

Curbside - This refers to the side of the motorhome which faces the curb when it is parked. Often called the door side or the passenger side.

Current - The rate of flow of electricity or the movement rate of electrons along a conductor. It is comparable to the flow of a stream of water. The unit of measure for current is the ampere.

Cut-In Pressure - The pressure level in the air system supply tank which triggers the compressor load cycle.

Cut-Out Pressure - The pressure level in the air system supply tank which triggers the compressor unload cycle.

Cycle - In a battery, one discharge plus one recharge equals one cycle.

Desiccant - A granular substance that has a high affinity for water and is used to retain moisture from the air stream flowing through the air dryer cartridge.

Direct Current (DC) - Power that is stored in a battery bank or supplied by photovoltaics, alternator, chargers and DC generators. Direct current is also known as battery power. Current only flows one way.

Drain Trap - This is a curve that is in all drains. Water is trapped in the curve and this creates a barrier so tank odors cannot escape through the drain.

Dry Camping - Camping in the motorhome when there is no city water hook-up or shore power. In other words, using only the water and power that is in the motorhome and not from another source.

Drying Cycle - The time during which the air dryer cools, filters and removes moisture from the air delivered by the air compressor. The drying cycle begins and ends the same as the compressor load cycle.

Dump Station - A site where the waste (grey) and sewage (black) tanks can be drained. In most states it is illegal to drain waste tanks anywhere other than at a dump station.

Dump Valve - Another name for the T-handle valve used to drain the sewage (black) and waste (grey) tanks.

Escape (Egress) Window - The formal name for the emergency window located in the rear of the motorhome. Egress windows can be easily identified by their red handles.

Full Hook-Up Site - A campground that has city water, shore power and sewer hook-ups or connections available.

Grey Water - Term associated with the waste water holding tank. Water from the sink drains, the shower and the washer-dryer (if equipped) go into this tank.

House Battery - Powers 12 Volt DC lights and accessories inside motorhome.

LED (Light Emitting Diode) - Indicator light.

Low Point Drain - The lowest point in the plumbing. These drains must be closed when you fill the water tank.

OEM - Term for Original Equipment Manufacturer.

OHM - A unit for measuring electrical resistances.

Ohm's Law - Expresses the relationship between Volt (E), amperes (I) in an electrical circuit with resistance (R). It can be expressed as follows: $E = IR$. If any two of the three values are known, the third value can be calculated by using the above formula.

Potentiometer - A device for measuring an unknown potential difference or electromotive force.

Pounds Per Square Inch Gauge (psig) - Pressure measured with respect to that of the atmosphere. This is a pressure gauge reading in which the gauge is adjusted to read zero at the surrounding atmospheric pressure. It is commonly called gauge pressure.

Purge - The initial blast of air (decompression) from the air dryer purge valve at the beginning of the air compressor.

Purge Cycle - The time during which the air dryer is undergoing purge and regeneration. This cycle starts at the beginning of the compressor unload cycle and normally ends well before the beginning of the compressor load cycle.

Regeneration - The mild backflow of air through the air dryer and out the purge valve that begins immediately after the purge and lasts normally 10 to 15 seconds. This backflow of air, from the air system and through the air dryer, removes moisture from the desiccant cartridge and prepares the air dryer for the next compressor load cycle.

Roadside - This refers to the side of the motorhome which faces the road when it is parked. Often called the off-door side or the driver side.

SCA - Term for Supplemental Coolant Additive. Chemical added to coolant for diesel engines to help prevent cylinder liner pitting and internal corrosion.

Shore Line - This is the electrical cord which runs from the motorhome to the campground 120 Volt AC electrical supply.

Shore Line Plug - The 120/240 Volt AC outlet allows the motorhome to be hooked up to a campground facility.

Stinger - An arm attachment on a tow truck that is used to lift the motorhome slightly for towing.

VIM - Vehicle Interface Module.

Volt - The unit of measure for electric potential.

Watt - The unit for measuring electrical power, i.e. the rate of doing work, in moving electrons by or against an electric potential.

Wet Cell Battery - A type of battery that uses liquid as an electrolyte. This type of battery requires periodic maintenance to clean the connections and check the electrolyte level.

Air Conditioner - Roof
Dometic Corp.
800-544-4881
www.dometic.com

Air Filter
Donaldson
952-887-3131
www.donaldson.com

Air Mattress (Optional)
Select Comfort
800-318-2231
www.selectcomfort.com

Aladdin™ (Optional)
Monaco Coach Corporation
Technical Support
877-466-6226

Alternator
Leece-Neville
800-354-0560
www.prestolite.com

Awnings
Carefree
303-469-3324
www.carefreeofcolorado.com

Axles - Brakes
Eaton Corporation
800-826-4357
www.truck.eaton.com

Batteries
Interstate
800-772-3600
www.interstatebatteries.com

Brakes-Anti-Lock Brake System
Eaton
800-826-4357
www.truck.eaton.com

Brakes-Automatic Traction Control
Eaton
800-826-4357
www.truck.eaton.com

Carbon Monoxide Detector
Safe-T-Alert
800-383-0269
www.safe-t-alert.com

Cooktop
Atwood
800-873-4328
www.atwoodmobile.com

Dumping System (Optional)
RV Sani-Con
866-410-1965
www.emptythetanks.com

Energy Management System
Intellitec
800-251-2408
www.intelliteccsve.com

Engine
Cummins
800-343-7357
www.cummins.com

Entry Step
Coach Step
800-275-7524
www.scsfrigitte.com

VENDOR LIST

Air Bags
Firestone
800-367-3872
www.bridgestone-firestone.com

Air Conditioner - Dash
SCS/Frigette
800-275-7524
www.scsfrigitte.com

Exhaust Brake

Jacobs Vehicle Systems
800-343-7357
www.jakebrake.com

Fan - Bathroom Exhaust

Fan-Tastic Vent
800-521-0298
www.fantasticvent.com

Faucet

Moen
800-289-6636
www.moen.com

Filters - Coolant, Fuel, Oil

Fleetguard
800-223-4583
800-22Filter
www.fleetguard.com

Fire Extinguisher

Kidde
800-880-6788
www.kiddeus.com

Furnace

Atwood Mobile Products
800-873-4328
www.atwoodmobile.com

Generator

Onan
800-888-6626
www.onan.com

Home Theater

Magnadyne
800-538-3600
www.magnadyne.com

Inverter

Magnum
305-386-5125
www.magnumteknologies.com

Keyless Entry (Optional)

Trimark
800-447-0343
www.trimarkcorp.com

Leveling Jacks - Hydraulic

Power Gear
800-334-4712
www.powergearus.com

LP-Gas Detector

Safe-T-Alert
800-383-0269
www.safe-t-alert.com

LP-Gas Tank

Manchester
800-877-8265
www.mantank.com

LP-Gas Controls

Marshall Gas Controls
(Division of S.H. Leggitt Company)
800-877-2495
www.shleggitt.com

Microwave

Sharp Electronics Corp.
800-237-4277
www.sharp-usa.com

Navigation System (Optional)

Audiovox
800-645-4994
www.audiovox.com

Outside Mirrors

Ramco Industries, Inc.
800-321-4819
www.ramco-eng.com

Power Cord Reel (Optional)

TDI Products
866-713-1489
www.tdiproducts.com

Power Hose Reel (Optional)

TDI Products
866-713-1489
www.tdiproducts.com

Power Sun Visors

Carefree of Colorado
303-469-3324
www.carefreeofcolorado.com

Radio

CD/DVD - Dash
Magnadyne
800-538-3600
www.magnadyne.com

CD/DVD - Bedroom (Optional)
Magnadyne
800-538-3600
www.magnadyne.com

Rear Vision System

Voyager
www.asaelectronics.com

Refrigerator

Norcold
800-543-1219
www.norcold.com

Dometic Corp. (Optional)
800-544-4881
www.dometic.com

Satellite Radio (Optional)

Sirius
888-539-7474
www.siriusradio.com

Satellite System (Optional)

Kingdome
800-982-9920
www.kingcontrols.com

Seats - Driver & Passenger

Flexsteel
www.flexsteel.com

Shock Absorbors

Monroe
800-880-7580
www.tenneco-automotive.com

Slide-out Motor - Cable

BAL Accu-slide
800-347-2232
www.norcoind.com

Slide-out Motor - Electric & Hydraulic

Lippert Components
866-524-7821
www.lippertcomponents.com

Smoke Alarm

Safe-T-Alert
800-383-0269
www.safe-t-alert.com

Solar Panels (Optional)

Morningstar Corp.
215-321-4457
www.morningstarcorp.com

Steering Gear

TRW
765-423-5377
www.trw.com

Steering Wheel (Smart Wheel)

Vehicle Improvement Products
847-395-7250
www.vipwheels.com

Storage Bay Slide-out Tray

Lippert Components
866-524-7821
www.lippertcomponents.com

Television

RCA
877-266-2728
www.rca.com

Sharp

800-237-4277
www.sharp-usa.com

Television Antenna

Winegard
800-288-8094
www.winegard.com

Tires

Goodyear Tire & Rubber
800-321-2136
www.goodyear.com

Toilet

Thetford
800-521-3032
www.thetford.com

Transfer Switch

Iota Engineering
800-866-4682
www.iotaengineering.com

Transmission

Allison Transmission
800-524-2303
www.allisontransmission.com

Vacuum (Optional)

Eureka
800-282-2886
www.eureka.com

Washer/Dryer (Optional)

Splendide
800-356-0766 ext. 5
www.splendide.com

Water Filter

Flowmatic Systems
800-461-4406
www.flowmatic.com

Water Heater

Atwood Mobile Products
800-873-4328
www.atwoodmobile.com

Water Pump

Shurflo
800-854-3218
www.shurflo.com

Wheels - Accushield

Accuride
812-962-5000
www.accuridewheels.com

Windshield Wipers

Diesel Equipment
800-632-4959
www.diesequipment.com

OWNER'S MANUAL SURVEY: Diplomat 2007

Your suggestions are very important to us and we are continually striving to improve the quality of our manuals. After becoming familiar with your new recreational vehicle and the accompanying manual, please take the time to answer the following questions. When you are finished please return the survey via mail to our Technical Publications Department, or you may fax the survey to: **(541) 681-8031 Attention: Technical Publications Department**. Feel free to attach an additional page if you desire.

1. Is this your first recreational vehicle? YES / NO (circle one)

2. If no, what was your previous recreational vehicle brand/model? _____

3. Was the overall appearance and lay-out of this manual what you expected to see in your new recreational vehicle?

4. Was the information within this manual helpful in acquainting you with your new recreational vehicle? If not please address any area(s) we need to expand or improve on.

5. Were the operating instructions clearly written, and were you able to follow the steps without any difficulty?

6. Is there any additional information you would like to see incorporated within the owner's manual?

NAME: _____

PHONE: (____) _____

ADDRESS: _____

VIN # _____

TEAR OFF PAGE AND MAIL TO:

TECHNICAL PUBLICATIONS PLT. 17
MONACO COACH CORPORATION
91320 COBURG INDUSTRIAL WAY
COBURG, OR 97408

LIMITED WARRANTY TRANSFER APPLICATION/CHANGE OF OWNER INFORMATION

Mail to:

**Monaco Coach Corporation
Warranty Transfer
91320 Coburg Industrial Way
Coburg, OR 97408**

Please read terms and representations below before signing.

Submitted By:

Name: _____

Address: _____

City: _____ State: _____ Zip: _____

Phone: (_____) _____

Limited Warranty Transfer

Address Change

A. Current Owner Information:

First Name Initial Last Name

Vehicle Identification Number Unit # (15 digits) (6 digits) Model/Year

B. New Owner Information, Transfer Coverage To:

First Name Initial Last Name

(_____)
Phone Number Street Address City State Zip

Date of Transfer (If Applicable) Odometer Reading at Transfer (If Applicable)

C. Signatures:

(New) Owner's Signature Date Selling Dealer's Signature (If Applicable) Date

Terms & Representations

By your signature(s) on face side of this form, and in order to induce Monaco Coach Corporation to transfer its Limited Warranty, you represent the following:

1. That you have received and read a copy of the Limited Warranty.
2. You understand that the unit is to be used only for family camping and cross country travel on improved roads.

3. All information provided by you on face side of this form is true and correct.
4. You understand that you are purchasing a pre-owned recreational vehicle and Monaco Coach Corporation does not make any representation as to its present condition.

TEAR OFF PAGE AND MAIL TO:
WARRANTY TRANSFER, MONACO COACH CORPORATION,
91320 COBURG INDUSTRIAL WAY
COBURG, OR 97408

Diplomat 2007

Driving & Safety — Section 2

DRIVING & SAFETY	16	WHEEL MOUNTING	37
Inspections	16	WEIGHING THE MOTORHOME	38
Familiarize Yourself.....	16	Weight Terms.....	38
Mirror Adjust.....	16	Weight Label.....	40
Safety Seat Belts	16	Four Corner Weighing (Example)	41
DRIVING TIPS	18	Cargo Carrying Capacity Flowchart	43
TRIP PREPARATION	21	Weighing Procedure Worksheet	44
HITCH	22	Weight Record Sheet.....	45
Using the Rear Receiver	22	SMOKE DETECTOR	46
Tow Plug Connection.....	24	Operation	46
REAR VISION SYSTEM	24	Testing.....	46
BACKING UP A MOTORHOME	25	Maintenance	46
SET-UP PROCEDURES	26	Troubleshooting	46
DRY CAMPING	27	CARBON MONOXIDE DETECTOR	46
BREAKING CAMP	28	Operation	47
EMERGENCY ROADSIDE PROCEDURES	29	Alarm.....	48
In Case of Flat Tire	30	Testing.....	48
Dead Chassis Battery	30	Cleaning & Maintenance.....	48
TOWING PROCEDURES	31	FIRE EXTINGUISHER	48
Disabling Parking Brake.....	32	ESCAPE (EGRESS) WINDOW	49
TIRES	32		
Importance of Air Pressure.....	33		
Tire Pressure Inflation Guideline.....	33		
Tire Chart - Goodyear.....	34		
Inspecting & Pressure	35		
Air Pressure Checklist	36		
Supporting When Leveling.....	36		
Tire Vibration.....	36		
Tire Rotation	37		
Tread	37		
Storage of Tires - Long Term.....	37		

DRIVING & SAFETY

Section Two contains information on driving tips, emergency situations, towing, safety devices, weighing the motorhome and tires.

NOTE

The motorhome has an electronic data recording device that may record information about direction, road speed, engine speed, brake application, steering attitude or other vehicle operating data. Data recording devices can be present in engines, transmissions, ABS (Antilock Brake Systems) or other systems affiliated with operation of the vehicle. Information from data recording devices can be examined in case of an accident. Contact the component manufacturer to learn more about these devices.

Inspections

There are significant differences between a passenger automobile and a motorhome. Always be aware of these differences when traveling. The key to safely operating a motorhome is **inspection**. Undetected problems could cause problems on the road and may result in lost time and increased repair costs. Several states require a special license endorsement and that the motorhome be inspected prior to registration. Know and observe the laws of the states in which you will be traveling. Laws may vary from state to state. A systematic **inspection** conducted prior to moving the motorhome can help ensure nothing is overlooked and will assist in familiarizing the owner with the motorhome. Prior to moving the motorhome perform a

general **inspection**, which includes examining the condition of the motorhome and the surrounding area of the motorhome. Look high and low when walking around the motorhome.

Familiarize Yourself


Because the location of the driver's seat in the motorhome is higher and farther to the left than most vehicles, a different perspective of the roadway is created. Rely on the outside mirrors to line up with the center of the road and to check conditions behind the motorhome. The dashboard may include more gauges and controls than are normally found in passenger automobiles. Become familiar with these gauges and their indications before starting out.

Mirror Adjust


Adjust the mirrors, prior to starting out. It is recommended that an assistant help to simplify the mirror adjustment process.

Mirror Adjusting:

- ◆ Tools needed: Allen wrench, flat blade screw driver and socket wrench.
- ◆ Adjust the driver seat to the travel position.
- ◆ Remove plug at the bottom of the arm.

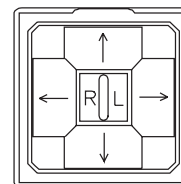

Mirror Adjust 080378
Switch on
Driver's
Console

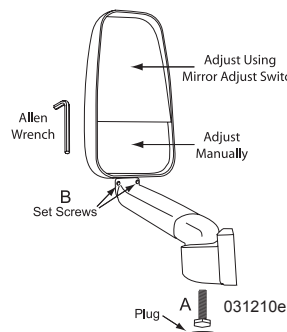

- ◆ Use the socket wrench to loosen the bolt located at the base of the arm. (See point A on the drawing.)
- ◆ Adjust the mirror for a clear side view of the coach.
- ◆ Tighten the bolt once the proper adjustment is made.
- ◆ Reinstall the plug.
- ◆ To adjust the "head" of the mirror, loosen the set screws located below the mirror shown as point B. Adjust the head of the mirror to the left or right.
- ◆ Manually adjust the bottom section of the mirror.
- ◆ Tighten set screws once the proper adjustment is made.
- ◆ Repeat procedure for passenger side mirror.

NOTE

Use the mirror adjust switch located on the driver's console to fine tune the view.

Safety Seat Belts

All occupants must be furnished with and use seat belts while the motorhome is moving. The driver's seat, and all other seats designed to carry passengers while the motorhome is in motion, are equipped with safety seat belts. **DO NOT** occupy beds or seats that are not equipped with a safety belt while the motorhome is in motion. The driver's seat must be locked in the forward facing position while motorhome is in motion. **DO NOT** use a seat belt on more than one person.

To fasten the seat belt, pull the belt out of the retractors and insert the tab into the buckle; a click will sound when the tab locks into the buckle. Seat belt lengths automatically adjust to your size and sitting position. **DO NOT** route belts over armrest.

WARNING

Safety belts are supplied at affixed seating positions. **DO NOT** occupy seats not equipped with safety belts while the motorhome is in motion. Seat belts must only be used on permanently mounted seats. **DO NOT** use a single seat belt on more than one person. Pilot and Co-pilot seats must be locked in a forward facing position with seat belts fastened while the motorhome is in motion. Avoid seat rotation while in transit.

Child Safety Seat:


Children that fit into *Example 1* and *Example 2* require the use of a child safety seat. In the motorhome, the child safety seat can be positioned in two places: the front passenger (co-pilot) seat and the forward facing permanently mounted booth dinette seat.

WARNING

Only forward facing booth dinette seats equipped with seat belts are designed for occupancy while the motorhome is in motion.

WARNING

Children must not be transported unrestrained. Infants must be placed in approved safety seats. Small children must be restrained in child safety seats. **DO NOT** use a single seat belt on more than one child. Failure to comply with these rules can lead to injury or death.

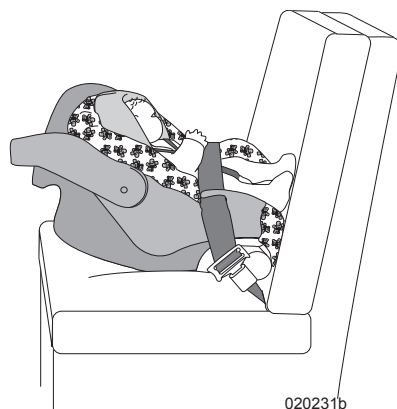

Example 1: Convertible seat facing to the rear.



Example 2: High back booster seat facing forward.

NOTE

Individual states and Canadian provinces may have laws that can exceed the requirements described above. It is your obligation to know and comply with the laws in the state or province in which you travel.

A child safety seat is required for any child:

- ♦ **Infants** - from birth to one year, or up to 21 pounds, the child is considered an infant. A (convertible) safety seat for an infant must be secured facing to the rear. The top of the head must be below the

top of the safety seat. Secure safety seat harness straps at or below the shoulders (*Example 1*).

- ♦ **Toddlers** - Children over one year and between 20-40 pounds are considered toddlers. A (convertible) safety seat for a child must be secured facing forward. The top of the head must be below the top of the safety seat. Secure safety seat harness straps at or below the shoulders (*Example 2*). Most seats require a top slot for facing forward.
- ♦ **Young Children** - Children (ages four to eight) over 40 pounds and under 4' 9" require a booster seat. The booster seat places the child's waist and shoulders at the proper height for the supplied safety belt to be effective. The top of the head must be below the top of the safety seat (*Example 2*).

WARNING

Installation illustrations are for reference only and are not to be used as a guide. Because there are many styles of safety and booster seats, refer to the safety seat manufacturer's manual for proper installation and how to properly install and secure the safety or booster seat.

NOTE

Individual states and Canadian provinces may prohibit use of a safety or booster seat in the front seat.

Seat Belt Care:

Keep the belt clean and dry. Clean with mild soap and lukewarm water. **DO NOT** clean seat belts with bleach, dye or abrasive cleansers that may weaken the belt material. Periodically **inspect** belts for cuts, frays or loose parts, and replace damaged parts. **DO NOT** disassemble or modify the system. Replace the seat belt assembly after a severe impact, even when damage is not obvious.

DRIVING TIPS

The motorhome is a complex vehicle that requires increased driving awareness because of its size and various components. Due to the motorhome length the turning radius will be much wider than that of a standard automobile. Always pay close attention to the perimeter of the motorhome including front, sides, rear, roof and undercarriage. Ensure the surrounding area is clear of obstacles. Utilize the driving mirrors to observe traffic conditions as well as the motorhome exterior including tires, bay doors, blind spots, etc. Use a push-pull method of steering, with both hands parallel on the steering wheel.



The motorhome is also heavier than an automobile and has a higher center of gravity. These factors affect the reaction time of the motorhome. Swerving and sharp turning, especially performed at high speeds, could result in loss of control of the motorhome. Keep the size of the motorhome in mind and drive with extra caution to avoid situations which might

require quick momentum changes. Increase reaction time by paying attention to traffic and road conditions 12 to 15 seconds ahead of the motorhome's position.

The motorhome will travel safely and comfortably at highway speed limits. However, it takes more time to reach highway speed. When passing another vehicle, allow extra time and space to complete the pass due to the added length of the motorhome.


When descending a long hill, manually shift to a lower gear and begin the descent at a slow speed. Do not allow the motorhome to gain momentum before trying to slow down. Use the exhaust brake in conjunction with the service brakes to help maintain a slow, safe downhill speed. The transmission and engine will help control downhill speed and can extend the service life of the brake lining.

The distance required to stop the motorhome is greater than an automobile. The brakes are designed for the **(GVWR)** Gross Vehicle Weight Rating. Practice stopping away from traffic to get the "feel" of distance required to stop the motorhome.

When backing up, have the co-pilot stand at the roadside rear corner so the co-pilot remains visible in the roadside mirror. The co-pilot can watch for obstacles and give hand signals during the backing up process.

Check the tonnage limit of the bridges before crossing. Signs should be posted at bridge entrances. Check the posted height of all overpasses or situations where overhead clearance is limited. Keep in mind that road surfaces may be repaved or packed with snow; therefore, the actual posted clearance height would not apply in such conditions.

Use the pilot seat controls to comfortably position the seat. Stay seated and adjust the outside mirrors if necessary to gain a clear line of vision down both sides of the motorhome. After the outside mirrors have been adjusted, confirm the rear view camera system is working and clear of any obstruction.

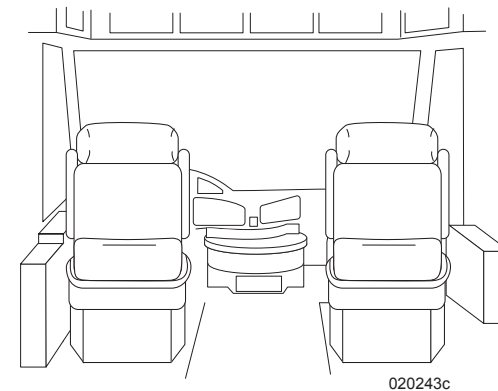

Adjust to road, weather and terrain conditions as necessary to keep the motorhome under control. Pay attention to road signs that advise of local road hazards and driving conditions.

The cockpit, dash area and windshield are larger than those found on passenger cars and trucks. Keep the windshield clear of humidity in the form of water or ice. Start the motorhome and turn on the dash defrost to help remove moisture from inside the windshield. In conjunction with the dash defrost it may be necessary to use a clean cloth to wipe away moisture.

Keep quality windshield wipers in good working order when driving in adverse conditions.

Keep the windshield clear. Do not operate the motorhome when road, weather and terrain conditions seem unsafe.

Driving Cautions:


- ◆ Avoid getting too close to the shoulder of the road, which may be too soft to support the weight of the motorhome.
- ◆ Side spacing is best maintained by keeping the motorhome centered in the driving lane.
- ◆ Driving lanes in work zones can be uneven, congested and narrower than usual.
- ◆ Be cautious of road debris that can damage the undercarriage of the motorhome or become lodged in the dual tires and cause damage to the tires, wheel rims or tow vehicle.
- ◆ On back roads and single divided roads, tree branches and shrubbery can protrude into the roadway. Watch for low hanging branches especially during inclement weather. Rain and snow will cause branches to hang lower than usual.
- ◆ Keep in consideration that posted speed signs are usually passenger automobile rated. Be extra aware of driving conditions and use the appropriate speed for a motorhome when necessary, especially on corners and mountain roads.
- ◆ Downgrade speed should be at least 5 mph less than upgrade speed, or downgrade speed should be attainable

within three seconds of a brake application.

- ◆ Use a four second rule when following other vehicles at speeds under 40 mph. Use a five second rule when following at speeds over 40 mph.

Right Turns:

Negotiating a right hand turn in a motorhome can be difficult. Many drivers fear they cannot make the turn without entering into the other lane or jumping the curb. Here are a few tips to make a right hand turn easier:

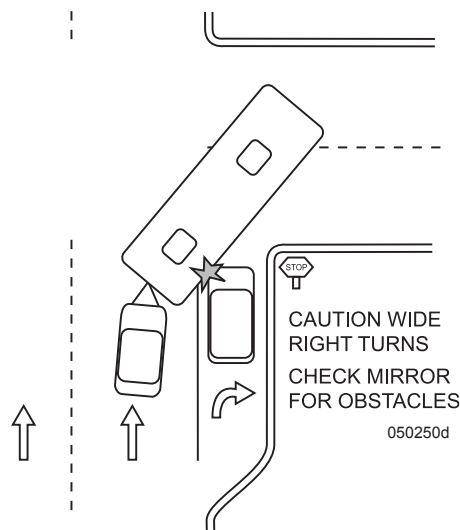

- ◆ As the turn approaches, look into the mirror to ensure the lane to the left is clear, then move wide over to the left.
- ◆ When making the right turn, the left rear wheel should touch the center line of the road and the driver's hips should be parallel to the roadside curb of the corner being turned to aid in avoiding a premature turn.

- ◆ Make the turn slowly.
- ◆ Check mirrors frequently. Stay aware of necessary clearance and space management of the motorhome while negotiating the turn.

Left Turns:

- ◆ **DO NOT** start the turn until the center of the intersection is reached with your hips. If there are two lanes available, take the right hand lane. A car or driver on the left hand side is easier seen.

Ascending a Grade:

When approaching an uphill grade, assess the grade and length before beginning the climb. Prepare early for long climbs. Unlike gasoline engines, diesels do not necessarily produce more power by pressing further on the accelerator! A gasoline engine will happily work at full throttle (at least for a short period of time), but a diesel usually just wastes fuel at full throttle. The power output from a diesel engine is dependent upon the following:

- ◆ **RPM** - Every engine has a range of RPM that produces power most efficiently.
- ◆ **Fuel/Air mixture** - At a given RPM, the engine, even with the help of a turbo-charger, can only “pump” a given volume of air into the combustion chamber. This volume of air can efficiently combine with only so much fuel; so it follows logically that feeding more fuel to the fire will simply waste fuel.

Determine ranges where the motorhome works best by driving long grades when temperatures remain stable for the duration of the climb.

IMPORTANT SAFETY TIP

Turn on the four way flashers if road speed degrades to the point where the motorhome is moving significantly under the posted speed. Use pullouts if traffic is building. Once in a pullout, if there is sufficient clearance for safety, idle the engine for a while to allow the exhaust and the turbo to cool. While these are cooling, the transmission will also cool. Monitor the gauges while waiting.

Descending a Grade:

Prepare to descend a grade at the crest of the hill. Observe any signs indicating grade angle and duration. The sign may suggest maximum downhill speed according to Gross Combined Weight (the combined weight of the motorhome and a trailer/tow car). At the crest of the hill, manually shift the transmission into a lower gear. **DO NOT** allow the motorhome to gain momentum before slowing down.

Use the exhaust brake to help maintain a slow, safe downhill speed. Located on the Driver Side console is an exhaust brake switch. When the exhaust brake switch is on, the exhaust brake will activate when the throttle is released.

With exhaust brake applied, road speed may increase until the transmission automatically shifts to the next higher gear. Apply the brakes using moderately heavy pressure on the brake pedal to reduce speed and manually downshift to maintain a safe, slow speed. Do not “pump” the brakes, as this can result in a loss of air pressure.

Avoid “riding” the brakes, as this can cause brakes to overheat. Either method can result in brake failure or loss of brake effectiveness.

Night Driving:

- ◆ Be well rested and alert while driving. If necessary, find a safe stopping place to rest until ready to continue.
- ◆ Avoid using interior lights while driving that create a glare on the windshield and decrease visibility.
- ◆ Dim dash lights to a comfortable level to reduce glare.


Extreme Heat and Hot Weather Conditions:

- ◆ Frequently observe all gauges. Variations from normal conditions should be promptly evaluated.
- ◆ Check tire pressure before traveling in hot conditions. Tire air pressure increases with heat. **DO NOT** let air out of a hot tire. When the tires cool down they will return to the correct/previous tire pressure.
- ◆ Pay extra attention to hoses and belts that are more susceptible to fatigue in extreme heat.

Winter and Cold Climate Conditions:

- ◆ The motorhome should be prepared for Cold Weather Use.
- ◆ Keep speeds slow and steady. Make moves gradually and increase visual distance for a gain in reaction time.
- ◆ If road or weather conditions are treacherous, find a safe stopping place and wait for conditions to improve.

- ◆ Avoid downshifting or using the exhaust brake on wet or slippery surfaces, which can cause the drive wheels to skid.
- ◆ Wiper blades should be in good condition. Fill the washer reservoir with antifreeze formula window washer fluid.
- ◆ Use mirror heat to keep mirrors clear.
- ◆ Remove any ice build-up from the entry step to avoid accidental slipping.

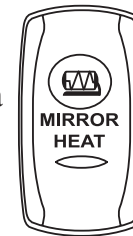

080498n
Located
on Driver's
Console

Wet Conditions:

- ◆ Worn or improperly inflated tires can increase the risk of hydroplaning.
- ◆ Heavy rain or deep standing water can cause brakes to apply unevenly or grab.

Refueling:

- ◆ Truck stops are good refueling points for motorhomes.
- ◆ Check overhead clearance heights before pulling through the fuel island.
- ◆ Be aware of concrete/steel posts installed around fuel islands.
- ◆ Avoid running over the fuel hose as it can get hung up on the motorhome and cause body damage.
- ◆ Use of gloves is recommended for refueling. Store gloves in the outside compartment.
- ◆ To prevent grease and fuel deposits from being tracked into the motorhome when refueling, change shoes before entering. Store the extra pair of shoes near the entry door.

WARNING

LP-Gas and gasoline are highly flammable and can ignite, resulting in explosion, fire or death. Ensure all flames are extinguished, all LP-Gas appliances are turned off and the primary LP-Gas valve is off prior to refueling.

Fuel Economy:

Driving style, wind resistance, terrain, vehicle weight, and engine-driven accessories are some of the factors that affect fuel economy.

Guidelines to Help Increase Fuel Efficiency:

- ◆ When starting out, apply the throttle lightly and accelerate gradually. Avoid excess throttle and accelerating quickly.
- ◆ Check the tire pressure. A low tire is not only a safety hazard, but also increases rolling resistance and increases fuel consumption.
- ◆ Keep the engine at a low to mid operating range of 1100 to 1500 RPM. This will use less fuel than operating at higher RPM.
- ◆ Avoid using full throttle when ascending a long hill. This wastes fuel and increases engine operating temperature from incomplete combustion. Manually shift to a lower gear and use less throttle. Fuel will burn more efficiently.
- ◆ Avoid extended idling to warm-up the engine. Start the engine and wait for normal oil pressure to register. Engage the high idle feature until the engine coolant temperature gauge rises. The engine is now ready for travel. Whenever coolant temperature is below operating

temperature (idling engine) incomplete combustion occurs, causing carbon build-up and raw fuel to wash lubricating oil from the cylinder walls and dilute the crankcase oil.


- ◆ Excessive idling (more than 10 or 15 minutes) can clog fuel injectors, eventually causing piston rings and valves to stick.
- ◆ Operate the transmission with the **MODE** function set to Economy whenever possible; this allows for earlier shifts and enhanced fuel economy.
- ◆ Follow the maintenance schedule for the engine.

TRIP PREPARATION

The following suggestions are general guidelines to follow when preparing for a trip:

Items to Carry:

- ◆ An emergency road kit containing a flashlight, road flares, warning signs and a fire extinguisher.
- ◆ Local, State and National Maps, as well as a 'Motor Carrier' road atlas (for refueling station and truck repair facility locations).

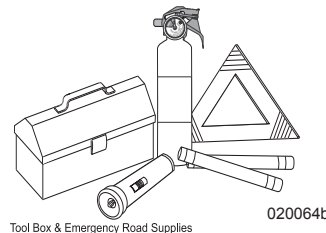


Tool Box & Emergency Road Supplies

020064b

Tool Box & Emergency Road Supplies

- ◆ Hand tools, a 12 Volt DC test light, a 120 Volt AC polarity tester, battery hydrometer, an assortment of blade fuses and alternator belt.
- ◆ Potable and non-potable water hoses, a water pressure regulator and various termination connectors for sewage.

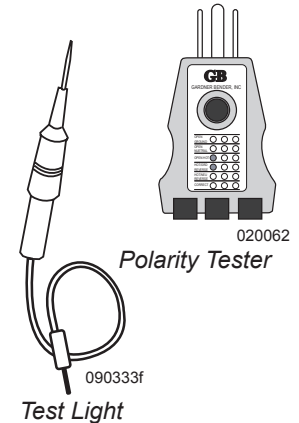

Polarity Tester

Test Light

Inspection:

- ◆ Ensure all exterior items are stowed or secured (i.e. TV antenna, ceiling vents and windows).
- ◆ Check belts, hoses, battery and engine fluid levels. **Inspect** the engine, transmission and generator per the OEM manuals.
- ◆ Evenly distribute and secure cargo. Store heavy items near the rear axle and lighter items toward the front to prevent uneven stress and handling problems.
- ◆ Check all tires outside the motorhome for accurate pressure and physical condition. Look around, above and under the motorhome for obstruction or leaks. Test all exterior lighting: headlamps, taillights, brake and clearance lights.

- ◆ Inside the motorhome store and secure heavier objects in the lower cabinets to maintain a low center of gravity for sway reduction. Secure loose items to prevent weight shifts. Store lighter items in the overhead cabinets. Close and secure all cabinet doors and drawers, shower and pocket doors. Turn off interior lighting. Adjust exterior mirrors and check dash gauges for proper operation.

INFORMATION


For chassis maintenance details refer to the chassis section.

CAUTION

Open the bay doors slowly. Cargo may shift during travel.

WARNING

To avoid injury, never place hands or fingers near the edges of the bay door when opening or closing. Always use the latch handle. Apply pressure with the other hand just above the latch handle.

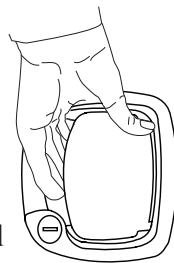

020134h

TIPS


Multi-purpose items, versatile clothing and periodic removal of unused cargo will streamline cargo storage.

HITCH

Using the Rear Receiver


When using the rear hitch receiver, remember that the motorhome is intended for towing light loads and is primarily designed as a recreational vehicle. Safety and durability of the hitch

receiver requires proper receiver use. Avoid excessive towing loads or other misuse of the receiver. Towing will affect fuel economy.

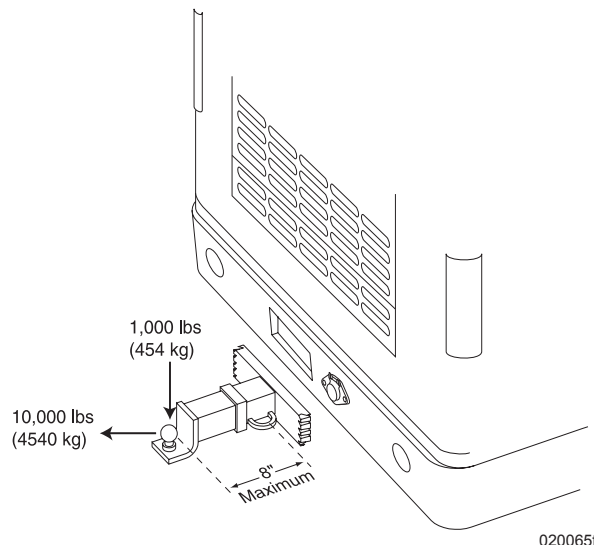

020065f

Weight pushing down on the rear hitch (tongue weight) must not exceed 10% of maximum tow capacity. It is recommended to weigh the motorhome when fully loaded to ensure proper weight distribution of the GCVW (Gross Combined Vehicle Weight).

 <p>MONACO COACH CORPORATION Coburg, Oregon Bend, Oregon Wakarusa, Indiana Elkhart, Indiana</p>	Do Not Cut, Weld or Modify
	Do Not Exceed Vehicle Ratings
	Maximum Towing Capacity 10,000 lbs. (4,536 Kg.)
	Maximum vertical Load 1,000 Lbs. (454 Kg.)
Any Towed Vehicle or Trailer Over 1000 lbs. (450 kg) Should Have Separate Functioning Brake System	
Refer To Owner's manual For Additional Towing Guidelines	

020144e

When weighing the motorhome, add all passenger weight to the GCVW total. The motorhome fully loaded, including fresh water, LP-Gas and any vehicle or trailer towed, must not exceed the GCWR (Gross Combined Weight Rating).

WARNING


Most states and Canadian provinces require trailers and/or towed vehicles to have adequate auxiliary brakes. Failure to comply with these State and Canadian province requirements may result in fines and/or pose a safety hazard, which may result in an accident.

WARNING


DO NOT tow a trailer or vehicle that exceeds the rated capacity of the hitch receiver. Overloading the hitch receiver can cause unusual handling characteristics and overstress the hitch receiver and chassis. It could also void the warranty. If there are any questions, call customer support.

Ball Mount:

Ball mounts come in various configurations and weight limitations. There are three things to consider when selecting a ball mount: weight rating, pin to ball center length and rise/drop. The weight rating of the ball mount, tongue weight and tow weight must meet or exceed the total load weight.

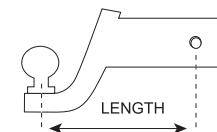


 Distance from the center of the hitch ball hole to the center of the pin hole.



Distance from the shank to the top of the hitch ball platform.

Pin to ball center should not exceed 8". Ball mounts of longer length will significantly reduce the weight rating of the hitch receiver. Observe weight reduction percentages that may be listed on ball mounts longer than 8".

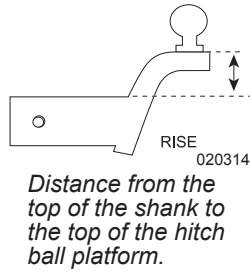

Selecting how much rise or drop a ball mount will need is relative to hitch receiver height and height of the towed load with respect to the type of towing equipment between the motorhome and towed load.

Weight Distributing Hitches:

A weight distributing hitch uses spring bars of spring steel to compensate for lack of adequate rear suspension of the tow vehicle. This type of hitch is generally used for towing heavier loads as tongue weight and gross tow weight increases. The spring bars attach to the hitch head assembly and the trailer frame.

Hitch Ball:

The hitch ball is what the trailer attaches to. A hitch ball is available in three common diameters, 1-7/8", 2" and 2-5/16". The larger the diameter of the hitch ball, the higher the weight rating. The diameter of the hitch ball shank also factors into weight rating. Match shank diameter with the hole in the ball mount or weight distributing head. Shank clearance should not exceed 1/16". There should be at least two additional threads extending past the nut when the hitch ball is secure.

Safety Chains:

Safety chains are required by law when towing any load. The chains and any fasteners used to attach the chains to the hitch receiver must be rated for the load being towed. Attach chains so they crisscross under the towing equipment. Allow just enough slack in the chains to make sharp corners. Too much slack will allow the chains to drag on the road surface. If towed load should become uncoupled from the hitch ball, the towing equipment will be cradled by the safety chains. If the towed load does uncouple, do not attempt to make a sudden stop and exacerbate the situation. Apply the brakes with gentle, steady pressure. Pull over to the side of road at a safe location.

Tow Capacity and Class Ratings:

Several components may comprise a tow hitch system. The weight rating of individual components that are part of the towing system must be greater than the gross weight of the load being towed.

Components are classified into weight groups to help define weight capacity of towing equipment. Maximum tow capacity is limited to the component with the lowest weight rating in the tow hitch system. Example: a ball mount may have a weight rating of 5,000 pounds but the hitch ball is rated 3500 pounds. Maximum tow capacity is reduced to 3500 pounds. Many times a component will have a Class weight rating. These groups are shown in chart:

WARNING

Be sure the weight ratings of the ball mount, tow ball and safety chains are equal to or greater than the load. The use of an extension to the receiver or extended ball mount will significantly reduce hitch receiver weight ratings. Modifications to the hitch receiver, or use of the hitch receiver other than intended, can void the warranty of the hitch receiver, chassis or both.

	CLASS I	CLASS II	CLASS III	CLASS IV	CLASS V
Weight Carrying Hitch	TW - Up to 200 lbs.	WC TW - Up to 350 lbs.	TW - Up to 500 lbs.	TW - Up to 750 lbs.	TW - Up to 1,200 lbs.
	GTW - Up to 2,000 lbs.	WC GTW - Up to 3,500 lbs.	GTW - Up to 5,000 lbs.	GTW - Up to 7,500 lbs.	GTW - Up to 12,000 lbs.
Weight Distributing Hitch	---	---	---	TW - Up to 1,200 lbs.	TW - Up to 1,400 lbs.
	---	---	---	GTW - Up to 12,000 lbs.	GTW - Up to 14,000 lbs.

- ◆ **GTW** = Gross Trailer Weight. Weight of trailer fully loaded.
- ◆ **TW** = Tongue Weight. Weight pushing down on Tow Ball.
- ◆ **WC** = Weight Carrying. Weight carrying capacity of the Ball Mount.
- ◆ **WD** = Weight Distributing. Weight carrying capacity of a weight distributing hitch.

Taillight Configuration:


Taillights come in a 2-wire or 3-wire configuration. A 2-wire configuration has all red lens. A 3-wire configuration usually has red and amber lens. Amber is used for turn signals only and red for taillight and brake light. These systems are electrically different. Whenever hooking a 2-wire system to a 3-wire system, or vice versa, a converter box must be installed for correct taillight function. A taillight converter is available from auto and RV supply stores. **DO NOT** attempt to wire a tow plug connector if unfamiliar with these systems. A trained technician will install the proper converter so the taillights and turn signals work correctly on the motorhome and towed vehicle or trailer when the tow plug connection is made.

Tow Plug Connection

The motorhome is pre-wired from the factory with an electrical connection for towing. The connection is located on the rear cap, near the hitch receiver. Convoluted tubing protects the tow harness wires. Current draw should not exceed ten amps for each designated light circuit. Within the electrical connection is a positive terminal for use when towing a trailer equipped with a battery. The positive terminal maintains the charge of the trailer battery.

When preparing a tow plug connection, strip the wires 3/8". Twist the wire strands and place under the clip and secure the screw. Make sure there are no loose strands of wire that could short against the case or other terminals.

DO NOT accidentally mirror image the trailer connection.

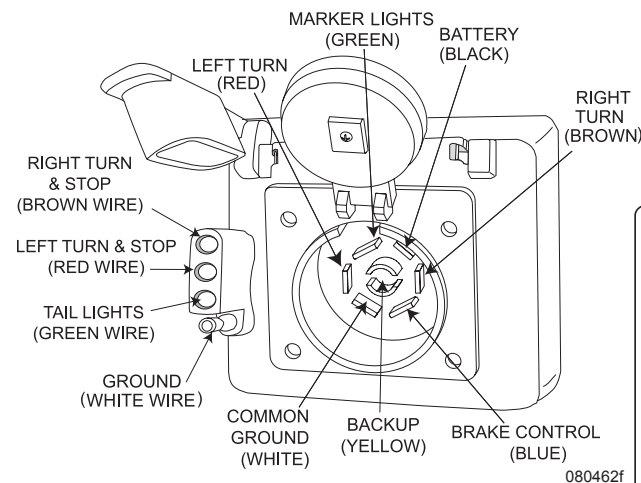

CAUTION

Positive terminal connection of the tow plug remains live at all times. When towing a trailer equipped with a battery, unplug the electrical tow connection when parked. Failure to unplug the tow connection may result in discharged chassis batteries.


REAR VISION SYSTEM

The motorhome can be equipped with either a rear camera, or an optional three camera vision system. The rear vision system consists of a camera with a microphone both located at the rear of the motorhome. The microphone aids in communication while the camera is designed to provide the driver with a rear view when backing up. The rear camera is adjustable up and down and is controlled by the driver.

On the optional three camera system, side cameras are located at the front of the motorhome directly above the front wheels

and are not adjustable. This system provides the driver with a rear view as well as roadside and curbside views of the motorhome and a microphone for audio communication.

Turning the main power switch to ON will allow continuous operation of the rear vision system when the ignition key is turned on.

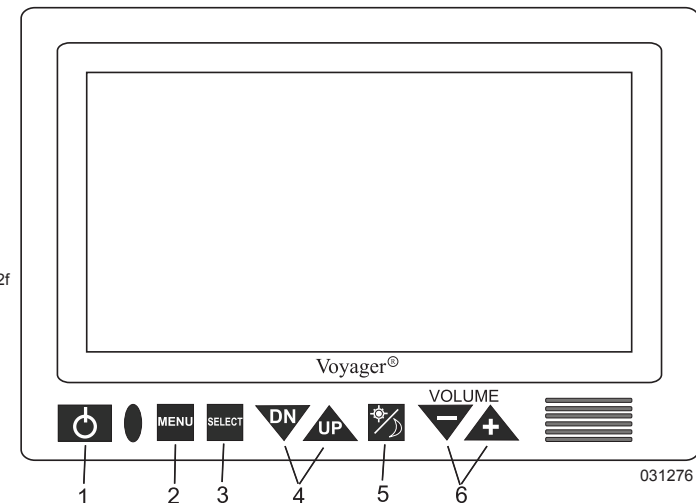

Features:

- 1. POWER BUTTON:** Press this button to turn the unit ON or OFF. Turning the unit ON will allow continuous operation of the rear vision system when ignition key is on.
- 2. MENU:** Press to enter/exit the main menu mode. Functions that can be adjusted include brightness, contrast, color, tint, initial setup, auto-scan, split screen, distance markers, and advanced menu.

- 3. SELECT:** Pressing the “select” button sequences source input modes. Press the “Select” button to repeatedly change camera views, if equipped with the optional side camera. The monitor will display each input channel separately, and then will display a split-screen, tri-screen and quad-screen view. These multi-screen views can’t be adjusted to include different inputs. In addition, the Select button is used to select a highlighted function or option setting.
- 4. UP/DOWN:** Adjusts rear camera position upward and downward. In addition, while in the Menu mode, the Up/Down button navigates through the available menu options.
- 5. DAY/NIGHT:** Press this button to change setting for daylight or nighttime driving conditions.
- 6. VOLUME -/+:** Pressing will decrease or increase speaker volume. In addition, while in the Menu mode, the “-” and “+” button adjusts settings and navigates through the available menu options.

NOTE

The rear vision system will automatically turn on when the gear selector is placed in reverse.

NOTE

If equipped with the optional side cameras, the system will automatically change views, left or right, with turn

signal activation. When the hazard light button is activated the left camera will come on.


INFORMATION

For more information, consult the manufacturer’s owner’s manual or visit the manufacturer’s website at www.asaelectronics.com.

The Voyager monitor is also used with the optional Aladdin system for displaying up-to-date engine data, road and trip monitoring information..

To Display the Aladdin Using the Controller:

- ◆ Turn the ignition switch to ACC, On or Run position.
- ◆ Press the select or right button to enter a menu item.
- ◆ Press the left button to return to the previous menu.
- ◆ Press the up or down buttons to scroll through or change information.

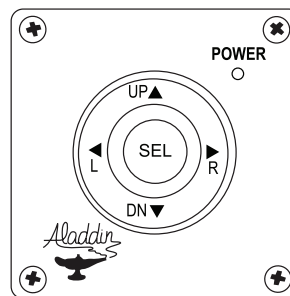**BACKING UP A MOTORHOME**

Whether you are a long time owner of recreational vehicles, or just starting out, backing up can be a challenge. Following some simple guidelines may help to reduce that challenge. When backing up, the driver (pilot) should be comfortable using the mirrors, the back-up camera and the co-pilot’s directions (ground guide) for assistance. Practice backing

up with the co-pilot’s guidance in a large, unobstructed parking lot. Backing up is a team effort.

The backing process should begin while the motorhome is in forward motion. Maneuver the motorhome to align with the chosen site. Aligning the motorhome with the site after the backing process begins may require more than one attempt. When the motorhome is properly aligned with the site, the parking area will be visible in both mirrors. Use road markings as reference points when possible.

When “pull-through” sites are not available, pick a solid, level site on the left side for a better field of vision using the roadside mirror. If the site is on the right, use the curbside mirror for backing up, but stay aware of blind spots. Get out and walk the area prior to backing in. Look for potential hazards or obstacles that may damage the motorhome. If the site is satisfactory, prepare to back in carefully. Have the co-pilot provide guidance using the five hand signals. Use of walkie-talkies will also aid in guidance.

The co-pilot will perform just as important a job as the driver. When guiding the driver, the co-pilot should be located safely at the left rear corner of the motorhome, facing forward, while remaining visible in the roadside mirror at all times. The co-pilot should make a conscious effort to maintain sight of the driver through the roadside mirror as the motorhome maneuvers. If the driver loses sight of the co-pilot, stop the backing up process until the co-pilot returns to view. To avoid mishaps, the co-pilot should be focused only on what the driver is doing, with brief observation moments. If necessary, stop the backing up process to have co-pilot inspect other areas or angles of concern.

The driver should receive directions only from the co-pilot. When the co-pilot is guiding the driver, five clearly defined signals should be used, with only one signal given at a time. Flailing arms with indecisive signals confuse the driver. Signals should be given with purpose and confidence. Directional signals are directing travel of the rear of the motorhome.

If the desired direction is left, the co-pilot points left. **For example:** The co-pilot will use his/her right arm and forefinger pointing distinctly left with arm and finger held on a horizontal plane, indicating desired direction of travel of the rear of the motorhome. The directional signal given should remain steady until the desired movement is complete.



Five Directional Signals:

1. Co-pilot uses left hand and arm held horizontal, with forefinger pointing right, to direct rear of motorhome to the right.
2. Co-pilot uses right hand and arm held horizontal, with forefinger pointing left, to direct rear of motorhome to the left.
3. Co-pilot uses both arms and hands parallel with thumbs pointing up and to rear in a waving vertical motion. This signals driver to maintain a straight back direction.
4. Co-pilot holds arms horizontally, hands open with palms facing one another. Start with a wide separation, gradually closing distance of hands in a rate appropriate to vehicle speed to indicate amount of distance to the stop point.
5. Closed fists and crossed arms indicate **STOP**.

Backing Up Trailers:

Towed vehicles using a tow bar or tow dolly have more than one pivot point and are not suitable for backing. Attempting to back up the motorhome while connected to a tow bar or tow dolly can jack-knife the tow device causing the wheels of the towed vehicle to move in a forward “sideways” motion that will cause irreparable and expensive damage. If necessary, disconnect the tow vehicle to avoid a backing up situation.

Trailers have one pivot point and may be backed up. The same rules for backing a motorhome can be applied to backing a trailer. When preparing to back the trailer into a space, maneuver the motorhome sweeping wide. Turn back to the opposite direction to maneuver the trailer into the space. Keep the bottom of the steering wheel in the desired direction of travel for the trailer. **For example:** If the desired direction of the trailer is left, rotate the bottom of the steering wheel left.

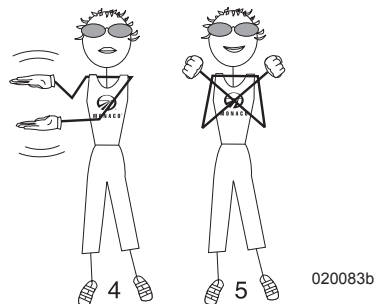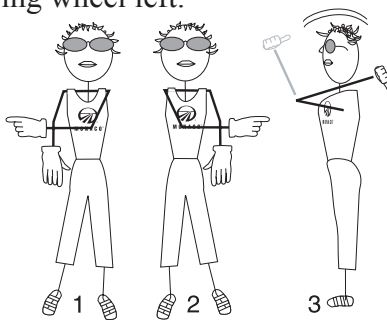


If the trailer moves in an undesired direction, use a short “pull-up” method, pulling forward just far enough to align the trailer with the space. The co-pilot should stand safely at the left rear corner of the trailer within view of the driver in the roadside mirror, using the five hand signals for guidance.

CAUTION

Tow bars or car dollies are generally made to travel in a forward direction only. Most towing equipment of this type is not designed for backing. Never attempt short back up distances with a tow bar or tow dolly. Damage to the motorhome, vehicle or towing device will result.

SET-UP PROCEDURES

If the site for the motorhome provides full hook-ups, use this quick reference as a guide only. This information is an overview on hooking up the utilities and preparing appliances for use. Specific information on slide room, awning and leveling system operations is discussed in detail in other sections.

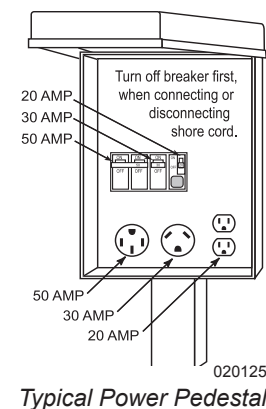

1. Level the motorhome:

- ◆ Follow the procedures and guidelines for “**Leveling the Motorhome**” in **Section 10** when using the hydraulic jacks confirm that the parking surface will accommodate the weight placed on the jacks.

2. Hook up utilities and prepare appliances for use:

- ◆ Open the LP-Gas tank primary valve.
- ◆ Prepare the shore cord for connection. Uncoil and **inspect** the cord. Perform necessary cord maintenance. Install proper electrical adapters if anything other than 50 Amp service is provided. Operate electrical appliances in sequence when hooked to limited shore power service. Turn shore power circuit breaker **OFF** prior to plugging in the shore cord.
- ◆ Begin appliance operation on LP-Gas, if hooked to less than 50 Amp service, for the first 60 minutes. Switch the refrigerator operation to gas.

CAUTION

If shore power service is limited to 15 or 20 Amps, use of light duty extension cords and electrical adapters will create a voltage loss through the cord and at each electrical connection. Line voltage loss and the resistance at each electrical connection can be a hazardous combination. Damage to sensitive electronic equipment may result.

CAUTION

DO NOT remove cover from the shore power supply to troubleshoot electricity to the motorhome. Serious personal injury or death may occur. If there is no power to the motorhome, inform the park manager. It is the park manager's responsibility to fix any problems with the shore hook-up at the site.

NOTE

To avoid shore power overload when hooked to 30 Amp service, determine appliances current load prior to turning on appliances or using interior outlets.

- ◆ If cable service is provided, hook-up a 75 Ohm RG59 or RG6 cable to the cable connection in the roadside rear compartment.
- ◆ A phone connection port is provided in a curbside and roadside rear compartment. Phone utility outlets are placed throughout the motorhome, including a phone line attached to the satellite receiver for Pay-Per-View movies and events.
- ◆ Hook the potable water hose to the city water connection in the service center.
- ◆ Hook-up the sewer hose. Sewer drain pipe diameters are generally either three or four inches. Proper sewer hose adapters will ensure against leaks or spillage. With the sewer hose properly connected open the grey water valve (small valve). The black water valve (large valve) remains closed until the tank is full or until time of departure.

DRY CAMPING

Below are suggestions to follow when staying at a location that does not have electrical, water or sewage hook ups. Plan ahead and conserve resources. Before arriving at the site, ensure batteries are fully charged and properly maintained (see **Section 8 in Batteries - House under "Battery Maintenance"**), the fresh water tank and water heater are full and waste holding tanks are empty.

To conserve water and fuel:

- ◆ Operate the refrigerator on LP-Gas. Plan what is needed from the refrigerator prior to opening. You can conserve LP-Gas by cooking over a campfire.
- ◆ Turn the water heater on about twenty minutes prior to use. Once heated, water will remain hot for several hours. Turn the water heater off when not in use.
- ◆ Set the thermostat temperature slightly lower than desired to prevent frequent cycling of the heating system.
- ◆ Know the tank capacities and routinely check fuel levels, especially during cold weather.
- ◆ Open windows during the day to reduce use of the roof air conditioner.
- ◆ Frequently monitor water consumption. Limit shower usage; turn water off when soaping down and back on to rinse. When water conservation is critical, take a sponge bath or use campground shower facilities if available. **DO NOT** fill the sink with water to wash only a few dishes. Use disposable dishes when possible.
- ◆ Evacuate waste holding tanks prior to filling fresh water tank.

To conserve battery power:

- ◆ **DO NOT** allow batteries to fully discharge before operating the generator. If possible, run the generator twice a day, morning and afternoon, to charge the batteries.
- ◆ When not using the inverter for 120 Volts AC, turn it **OFF**.

- ◆ Turn **OFF** interior 12 Volt DC power whenever possible. Refrigerator, battery charging and inverter operation will not be affected. Turn **OFF** small battery operated items i.e., porch, bay exterior step, generator and engine compartment lights, etc. Turn **OFF** the antenna boost when not watching TV. One light left on can quickly reduce battery reserves.

Typical Current Draw	
Battery Cut-out	1.5 Amps
13" TV	1.7 Amps
Rope Light (10 ft.)	1.3 Amps
Porch Light	2.0 Amps
Fluorescent Bulb (1)	2.1 Amps
Halogen Ceiling Light (1)	.09 Amps


- ◆ Keep a working flashlight handy for night trips through the campsite and inside motorhome. When interior lighting is desired, use one light in a central location such as the vanity. Unscrew all but one or two bulbs.
- ◆ Turn on the water pump only when using water.
- ◆ If weather does not permit or no outdoor table is available, eat at the dinette table by candlelight.
- ◆ Operate the generator when using microwave/convection oven.

BREAKING CAMP

Preparing the motorhome for travel will require several small tasks. Properly securing and storing items will help to prevent them from getting lost or damaged. Below is a checklist guide to reference when preparing to break camp.

Outside Checklist:

- ◆ Disconnect the cable TV and lower the TV antenna.
- ◆ Disconnect and stow the telephone line.
- ◆ Retract awnings and secure them for travel.
- ◆ Close the primary LP-Gas tank valve.
- ◆ Connect the sewer hose.
- ◆ Drain and flush holding tanks. Start by closing the grey water valve. Run enough cold water down sink and shower drains to fill the grey tank at least 50%. Use caution to avoid overfilling or flooding the grey tank. Open the black tank valve and allow adequate time for black tank to drain. If applicable, connect a non-potable water hose to the No-Fuss hose bib and flush the black tank system. Close black tank valve and open grey water valve. Water from the grey tank will help to flush the drain hose. Once evacuated, close grey water valve. Disconnect the sewer hose and flush that hose with clean water

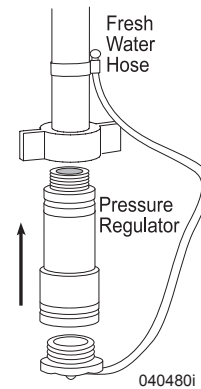

from a non-potable hose. Store the hose. Replace the sewer cap.

- ◆ Fill fresh water tank, then disconnect fresh water hose from the source. Store hose with end cap in place. If applicable, remove the hose protection water pressure regulator from the city water faucet.
- ◆ Turn shore power breaker off and disconnect shore line. Wind up and store shore cord. Secure door.
- ◆ Check all tire pressures.
- ◆ Secure all compartment doors.
- ◆ **Inspect** tires and wheels.
- ◆ Check for fluid leaks under and around the motorhome.

Engine Checklist:

- ◆ **Inspect** the engine, transmission and the engine compartment for fluid leaks.
- ◆ **Inspect** the area under the motorhome for fluid leaks or puddles.
- ◆ **Check all fluid levels:** oil, antifreeze, transmission, hydraulic fluid and washer fluid.
- ◆ **Inspect** belts and hoses for wear.
- ◆ **Inspect** wiring for loose, frayed or corroded connections.
- ◆ Start engine and listen for unusual noise.
- ◆ **Inspect** gauges and controls for proper operation.

Interior Checklist:

- ◆ If applicable, retract leveling jacks allowing the air suspension to obtain proper ride height.

- ◆ Clear the slide room path, clean the floor and move the driver seat forward. After confirming bay doors are closed, retract the slide room.

NOTE


To extend/retract the slide-out room, the ignition must be OFF and the park brake set.

- ◆ Secure and fasten the bi-fold and pocket doors. Lock the shower door.
- ◆ Close roof vents and windows.
- ◆ Secure all loose, heavy or sharp objects in case of a sudden stop.
- ◆ Close all cabinet doors and drawers.
- ◆ Turn off interior lights.
- ◆ Turn off the water pump.
- ◆ Check the fuel level gauge and all other dash gauges for operation and correct level indications.

Departure Checklist:

- ◆ Check items in storage bays to ensure shifting or damage of items will not occur.
- ◆ Look around, above and under the motorhome for obstructions. Check for debris stuck between the rear dual tires.
- ◆ Outside compartment doors should be closed and locked.
- ◆ Check operation of all exterior lights, headlamp, taillamp, brake and clearance lights.
- ◆ Secure all awning and travel locks.

- ◆ If applicable, ensure jack pad is clear of debris when retracting hydraulic jacks. Loose rocks, gravel and debris can be thrown from the jack pad and can possibly damage the tow car.

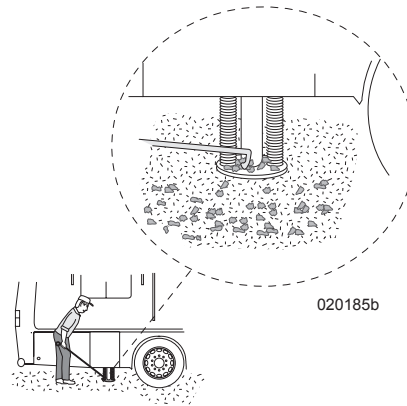

- ◆ Secure and lock the entry door for travel.
- ◆ Pull forward out of the campsite. Ensure the site is clean and no items are forgotten.

appropriate braking technique and pull off the roadway a safe distance from traffic (if possible). Set the parking brake and turn on the hazard warning flashers, especially when parked alongside traffic lanes. In the event of an emergency stop due to a mechanical breakdown or other motorhome related problems, contact the manufacturer’s customer support or an emergency service provider.

Road flares or reflective warning signs should be displayed if the motorhome is on the side of the road for any length of time. Guidelines for placing warning triangles depend upon the road characteristics and visibility. **For example:** The standard placement is 10 feet, 100 feet and 200 feet from the rear of the motorhome when on a divided highway or one-way road. On a two-way road, with traffic traveling both directions, the same placement is required at the front of the motorhome. Roads with curves and hills may require the placement of the last/furthest triangle to be 500 feet behind the motorhome in order to safely warn approaching traffic.

EMERGENCY ROADSIDE PROCEDURES

If an emergency situation occurs use the

EMERGENCY SERVICE PROVIDER		
Equipment	Provider	Emergency Number
Motorhome: Monaco Coach	Monaco Customer Support	1-877-466-6226
Chassis: Roadmaster	Roadmaster	1-877-466-6226
Engine: Cummins	Cummins Customer Assistance Center	1-800-343-7357
Transmission	Allison Transmission	1-800-524-2303
Towing	Owner’s Advantage Program	1-877-882-0614
Tires: Goodyear	Goodyear	1-877-484-7376

In Case of Flat Tire

In the event of a flat tire, it is recommended to call for roadside assistance. The size and weight of the motorhome and its tires require proper equipment to change the tire. A professional service technician will have the equipment and training needed to repair or replace the tire. In the case of sudden tire failure, avoid heavy braking. Hold the steering wheel firmly and gradually decrease speed. Slowly move to a safe off-road place, which should be a firm level spot. Turn the ignition **OFF** and turn the hazard flasher system **ON**. Save the old tire for possible warranty coverage.




Dead Chassis Battery

A weak or discharged battery will not supply the amount of **CCA (Cold Cranking Amps)** necessary to initiate the required voltage to start the engine. If the engine fails to crank, or cranks slowly due to a weak chassis battery, there are electrical back-up systems in place that may increase chassis battery voltage.


Battery Boost Switch:

The Battery Boost switch engages a heavy-duty solenoid to electrically connect the house batteries to the engine battery in the event the engine will not crank or cranks slowly. The solenoid is designed for short-term high current intermittent use. Engaging the boost solenoid for an extended period will damage the solenoid.

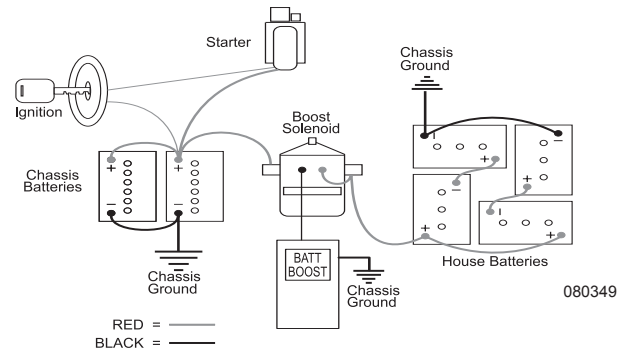

Jump Starting Using the Battery Boost Switch:

- ◆ With the ignition key **OFF**, press and hold the Battery Boost switch for ten seconds. After ten seconds, continue to hold the switch down and turn on the ignition.
- ◆ If the engine fails to crank or does not crank fast enough, discontinue the attempt. Continued attempts will only diminish any remaining surface charge in the chassis battery and end future alternative attempts.
- ◆ Next, start the generator. This may require using the Battery Boost switch for the generator to start from the engine battery. Once the generator is operating, the electrical combination of the generator and the inverter will charge the batteries.
- ◆ Allow the generator to run approximately ½ hour before attempting to start the engine.

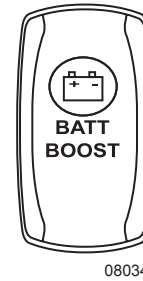


- ◆ After ½ hour of generator operation, leave the generator on and hold down the Battery Boost switch for one minute. Release the switch for one minute, then press the switch again for one minute. Alternate this cycle three to five times.
- ◆ Next, hold the switch down and turn the ignition **ON**. The battery voltage gauge on the dash should indicate at least 12 Volts. If voltage is sufficient with the Boost switch held down, try to start the engine.
- ◆ If the engine fails to crank, or fails to crank quickly, the chassis battery may be depleted and the motorhome will require jump-starting or an external charger hooked to the chassis battery.

Jump Starting Using an External Source:

When using jumper cables to start the engine, the cables must connect in a parallel configuration. That is, positive (+) to positive and negative battery (-) to negative chassis (-). Always connect the positive (+) before connecting the negative (-). To prevent arcing when disconnecting the cables; disconnect the negative (-) before disconnecting the positive (+).

WARNING

Always ventilate the battery compartment prior to any work or service to the batteries. Gas emitted by the batteries can explode when exposed to smoking material, flames, sparks or other sources of ignition, resulting in injury or vehicle damage. Batteries contain sulfuric acid that can burn skin, eyes and clothing. **DO NOT** connect the end of the second cable to the negative (-) terminal of the battery to be jumped. Connect only to the chassis, away from the battery.

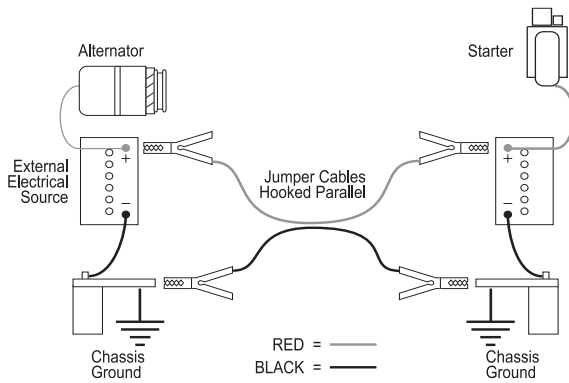**CAUTION**

A large amount of electrical current is required to jump-start an engine. The sizes of the battery, alternator and jumper cables supplying the “jump” are current limiting factors. Wait a sufficient amount of time for a surface charge to build before attempting to start the engine. Voltage fluctuations that occur during a jump-start procedure can damage sensitive electronic equipment and charging systems. If a jump-start is necessary, it is recommended to call Roadside Assistance. They will have the equipment necessary to jump-start the motorhome.

CAUTION

DO NOT use the towed vehicle for jump-starting. The charging system of the towed vehicle does not supply the amperage necessary to jump-start the motorhome. Voltage sensitive equipment on the towed vehicle can be damaged and render the towed vehicle disabled.



1. When using an external electrical source to connect to the chassis battery, turn the main battery disconnect switches **OFF** prior to hooking up the jumper cables.
2. Hook up the cables then wait several minutes to allow a surface charge to build in the chassis battery before attempting to start the engine.
3. Turn **ON** the battery disconnect switches and attempt to start the engine. **DO NOT** crank the engine more than a few seconds.
4. After the engine has started, disconnect the cables. Disconnect the negative (-) cables before disconnecting the positive (+) cables to prevent arcing.
5. If the engine does not crank, or cranks slowly, **DO NOT CONTINUE**. Extensive damage, fire or injury can occur. Obtain help from a qualified technician.

TOWING PROCEDURES


If calling a towing company for service, it is recommended to use a lowboy/landall type of trailer. If a tow truck is used it needs to have a support arm that goes under the motorhome

and secures to the front axle. Inform the tow company of the axle weights and total weight of the motorhome.

Other important information is the length of the motorhome, number of passengers and milepost location. Two tow trucks may be necessary to tow the motorhome and to tow a trailer or tow vehicle if it is not operational.

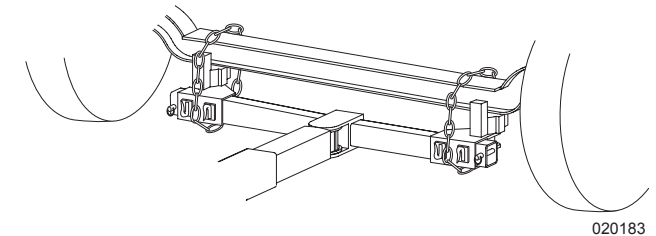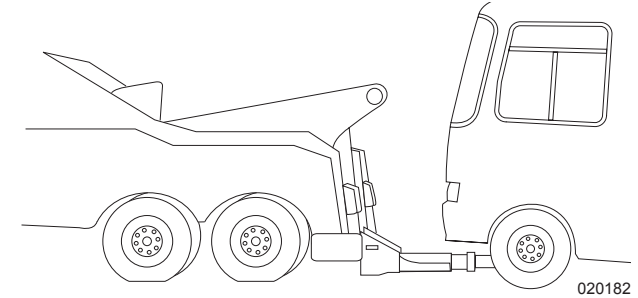


The towing company may need to locate the air nipple to release the air brakes. The air nipple is located in the front generator compartment and should be used by towing personnel only. Generally, if the motorhome ever needs to be towed, use the following instructions.

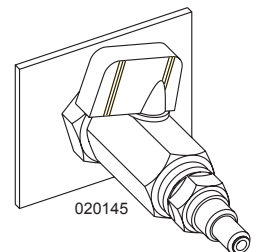

*Air Nipple:
Located in the
front generator
compartment.*

- ◆ Secure any loose or protruding parts if the motorhome is damaged.
- ◆ **Inspect** the points of attachment on a disabled motorhome. If attachment points are damaged, select other attachment points at a substantial frame structural member.
- ◆ Never allow anyone to go under a motorhome while it is being lifted by towing equipment unless the disabled motorhome is adequately supported by safety stands.
- ◆ **DO NOT** tow the motorhome from the rear. Towing from the rear will severely overload the front tires and suspension, possibly resulting in tire and/or front suspension failure. Rear frame extensions are not designed to support weight loads imposed by lifting the motorhome from the rear.

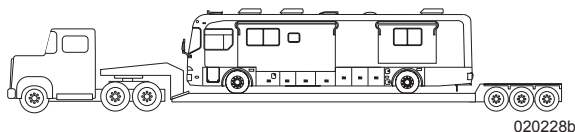


- ◆ If the rear wheels are disabled, place the motorhome on a flat bed trailer, or use a heavy duty dolly under the rear wheels and tow the motorhome from the front.
- ◆ The drive shaft must be removed to prevent damage to the transmission. Secure end caps to prevent losing or contaminating the needle bearings.
- ◆ The mud flap may need to be removed to prevent damage due to limited ground clearance.

WARNING

In case the motorhome requires towing, ensure all precautions are followed. The drive shaft must be disconnected and the mud flap may need to be removed. The manufacturer WILL NOT cover damage to the motorhome caused by a towing company.

Disabling Parking Brake

The park/emergency brakes apply to the drive axle only. The brakes can be manually released if the air system will not build sufficient air pressure to release them. This emergency procedure is to be used by trained technicians or towing personnel to move the motorhome to a safe location or repair facility.

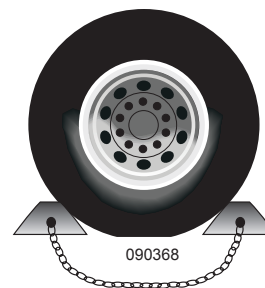

Example of a properly chocked wheel.

WARNING

Only trained personnel should perform this procedure. Brake chamber spring is under high pressure. Removal of retaining band could result in serious injury or death.

Disabling Brakes:


- ◆ Place wheel chocks firmly against the wheel before performing this procedure.
- ◆ Remove the plug from the center of rear brake chamber on the drive axle.
- ◆ Remove the caging tool from its holder on the brake chamber and insert the tool

into hole. Turn clockwise to engage.

- ◆ Screw nut and washer onto caging tool. Use a wrench to tighten the nut, compressing the internal spring to release the brake.
- ◆ Repeat procedure for the other side.

Enabling Brakes:

- ◆ After towing, or when air pressure is again available, loosen the nut and remove the tool. Return the caging tool to its original location and replace the plug. Repeat for the other side.

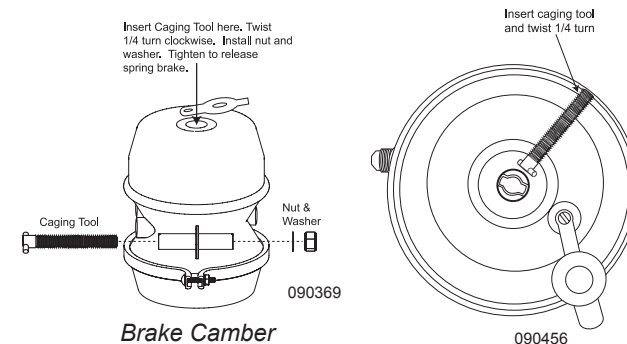

WARNING

Failure to securely chock the wheels can result in the motorhome rolling when the spring brakes are released. Severe injury or death can occur.


TIRES

Tires designed for the motorhome are a technically engineered product. Since the tire is the only contact the motorhome has with road surface, it is critical that proper air pressure be maintained. Improper pressure will lead to abnormal wear or sudden tire failure.

The motorhome must be weighed fully loaded before proper tire inflation pressures can be determined. The following information concerning tires and weighing the motorhome are set in the order in which the process is performed.

The tire performs additional functions of traction for moving, stopping and steering, as well as providing a cushion for the motorhome. Modern tire technology blends a unique mix of chemistry, physics and engineering to provide a high degree of comfort, performance, efficiency, reliability and safety. To obtain the maximum wear and best service from tires, it is helpful to understand their components and functions.

Tire Components:

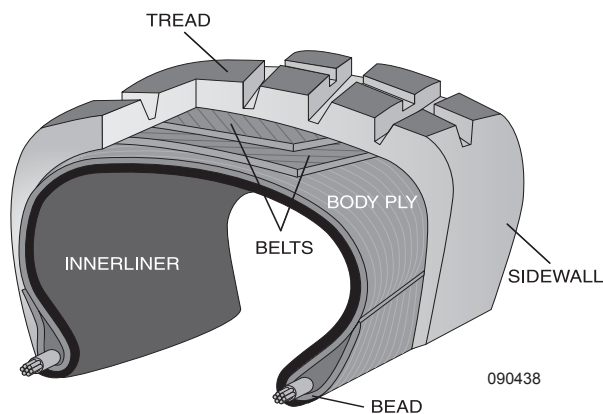

Tread: Provides traction and cornering grip.

Belts: Stabilize and strengthen the tread.

Sidewall: Protects the side of the tire from road and curb damage.

Body Ply: Gives the tire strength and flexibility.

Bead: Assures an air-tight fit with the wheel.

Inner Liner: Keeps air inside the tire.

Importance of Air Pressure

The most important factor in maximizing the life of the tires is maintaining proper inflation. Driving on a tire without the correct inflation pressure for the load of the motorhome is dangerous and may cause premature wear, tire damage and/or loss of control of the motorhome.

An under-inflated tire will build up excessive heat that may go beyond the design limits of the rubber and radial cords and could result in sudden failure. An under-inflated tire will also cause poor motorhome handling, rapid and/or irregular tire wear and an increase in rolling resistance that results in decreased fuel economy.

An over-inflated tire will reduce the tire's footprint/contact patch with the road, thus reducing traction, braking capacity and handling of the motorhome. Over-inflation of a tire for the load will result in a harsh ride, uneven tire wear and is susceptible to impact damage. Maintaining correct tire inflation pressure for each loaded wheel position on the motorhome is of the utmost importance and must be a part of regular motorhome maintenance.

WARNING

Driving on a tire that is under-inflated may damage the sidewall and burst upon inflation resulting in serious damage, injury or death. Aged tires are also susceptible to sidewall damage.

Tire Pressure Inflation Guideline

Federal law requires that the specifications for the tire's maximum load rating be molded into the sidewall of the tire. The amount of air pressure to use is dependent on the weight of the motorhome when fully loaded. The tire chart indicates the weights that can be properly supported by varying air pressures. Decreasing air pressure decreases load carrying capacity.

Always comply with the tire manufacturer's recommended pressure inflation guideline. The actual weight of the motorhome can vary significantly depending on how it is loaded. For optimum tire wear, ride and handling always comply with the manufacturer guideline. A tire inflation chart listing proper inflation pressure for different loads can be found in this section.

The tires of the motorhome are inflated to pressure(s) appropriate for the actual weight on each axle in the unloaded, shipped condition. When the motorhome is loaded, check and adjust the inflation pressure on each tire as needed.

Always inflate tires to the pressure indicated in the tire chart for the load carried by the tire. **DO NOT OVERINFLATE OR UNDERINFLATE THE TIRES.**

The **Gross Axle Weight Rating (GAWR)** of the axles listed on the federal certification label attached to the motorhome is the maximum allowable loaded weight on an axle.

When the actual loaded weight of the motorhome and the weight on each axle is unknown, follow the recommended tire inflation pressure(s) listed on the federal certification label. When loading a motorhome never exceed the motorhome's **Gross Vehicle Weight Rating (GVWR)** or the **GAWR** for each axle.

Contact the tire manufacturer for further information concerning proper tire pressure inflation and other tire issues.

Tire Chart - Goodyear

Tire Size	Max Speed Rating (MPH)	Single (S) Dual (D)	INFLATION PRESSURE PSI											
			65	70	75	80	85	90	95	100	105	110	115	120
8R19.5	75	S	2410	2540	2680	2835	2955	3075	3195	3305	3415	3525(F)		
		D	2350	2460	2610	2755	2865	2975	3085	3195	3305	3415(F)		
225/70R19.5	75	S		2895	3040	3195	3315	3450	3640(F)	3715	3845	3970(G)		
		D		2720	2860	3000	3115	3245	3415(F)	3490	3615	3750(G)		
245/70R19.5	75	S		3640	3740	3890	4080(F)	4190	4335	4540(G)				
		D		3415	3515	3655	3970(F)	4115	4265	4410(G)				
265/70R19.5	75	S				3970	4180	4355	4540	4685	4850	5070	5170	5355(G)
		D				3750	3930	4095	4300	4405	4560	4805	4860	5070(G)
9R22.5	75	S		3370	3560	3730	3890	4080	4235	4390	4540(F)			
		D		3270	3410	3550	3690	3860	4005	4150	4300(F)			
10R22.5	65	S		4080	4280	4480	4675	4850	5025	5205(F)	5360	5515	5675(G)	
		D		3860	4045	4230	4410	4585	4760	4940(F)	5075	5210	5355(G)	
11R22.5	75	S		4530	4770	4990	5220	5510	5730	5950	6175(G)	6320	6465	6610(H)
		D		4380	4580	4760	4950	5205	5415	5625	5840(G)	5895	5950	6005(H)
12R22.5	75	S		4940	5200	5450	5690	6005	6205	6405	6610	6870	7130	7390(H)
		D		4780	4990	5190	5390	5675	5785	5895	6005	6265	6525	6780(H)
245/75R22.5	75	S		3470	3645	3860	3980	4140	4300	4455	4610	4675(G)		
		D		3260	3425	3640	3740	3890	4080	4190	4335	4410(G)		
255/70R22.5	75	S				4190	4370	4550	4675	4895	5065	5205	5400	5510(H)
		D				3970	4110	4275	4410	4455	4610	4675	4915	5070(H)
265/75R22.5	75	S		3875	4070	4255	4440	4620	4800	4975	5150	5205(G)		
		D		3870	4040	4205	4370	4525	4685	4805(G)				
275/70R22.5	75	S				5170	5400	5630	5850	6070	6290	6510	6730	6940(H)
		D				4770	4980	5180	5390	5590	5800	6000	6200	6395(H)
275/80R22.5	75	S					5500	5745	5985	6225	6460	6700	6930	7160(H)
		D					5080	5305	5530	5750	5965	6185	6400	6610(H)
295/75R22.5	75	S			4725	4940	5155	5370	5510	5780	5980	6175(G)	6370	6610(H)
		D			4690	4885	5070	5260	5440	5675(G)	5800	6005(H)		
295/80R22.5	75	S				5480	5750	6020	6285	6550	6810	7070	7320	7580
		D				4855	5100	5335	5570	5805	6035	6265	6490	6720
315/80R22.5	75	S					6415	6670	6940	7190	7440	7610	7920	8270(J)
		D					5840	6070	6395	6540	6770	6940	7210	7610(J)
11R24.5	75	S				5310	5550	5840	6095	6350	6610(G)	6790	6970	7160(H)
		D				5070	5260	5510	5675	5840	6005(G)	6205	6405	6610(H)
285/75R24.5	75	S			4770	4990	5210	5420	5675	5835	6040	6175(G)		
		D			4740	4930	5205	5310	5495	5675(G)				

The motorhome manufacturer is not the author of this chart and makes no representation or warranty concerning the accuracy of the information disclosed by the chart. Monaco is not responsible for the accuracy of the information disclosed or for any errors within the Tire Inflation Chart. **WARNING: Do not exceed tire manufacturer's maximum speed rating.**

Understanding the Inflation Table:

The tire size is on the left margin of the table. Determine the Single or Dual inflation reading, denoted with a D or S on the Table. Single is for the front axle and tag axle (if equipped). Dual is for the drive axle. On the following chart, find the corresponding psi at the top columns to see the corresponding maximum weight capacity for that psi.

Rated load capacities are listed for individual tires in a Dual or Single position.

NOTE

Every load range has a maximum rating as well as a minimum rating. DO NOT exceed those ratings.

WARNING

DO NOT exceed tire manufacturer's maximum speed rating.

Inspecting & Pressure

The Load and Inflation Table will help determine correct tire inflation pressure after properly weighing the motorhome. All pressures are rated at a cold psi. Cold psi is defined as early in the morning before the day's ambient temperature, sun's radiant heat or the heat generated while driving have caused the tire pressure to temporarily increase. This means the tire inflation pressure should be checked early and when the motorhome has not been driven more than one mile. Check tire inflation pressure regularly. The check interval should be in the morning, before the "drive" trip and every morning on extended trips. A quality truck tire gauge with an angle airhead is needed to access the dual wheel positions of the drive

axle. Ensure the valve cap is replaced on the stem after the inflation pressure is checked. Use valve stem caps with a positive seal to prevent air escaping from the valve stem. If there are extension hoses on the valve stem, make sure they are good quality reinforced stainless steel braid. Attach hoses securely to the outer wheel.

The valve stem cap guarantees the valve core will remain free of dirt and foreign material. Material lodged between the valve core and internal stem can cause slow leaks resulting in tire failure.


Optimum tire performance is achieved at proper inflation pressure for the load carried. **DO NOT** mix tires of different tread patterns, size or construction on the same axle. The difference in traction could cause rear end gear bind and mechanical damage to the drive train.

CAUTION


Never let air out of a hot tire.

Over-inflation can cause:

- ◆ Hard ride.
- ◆ Tire bruising or carcass damage.
- ◆ Rapid tread wear in the center of the tire.

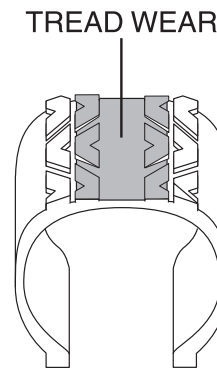

Over-inflation wears in center of tire.

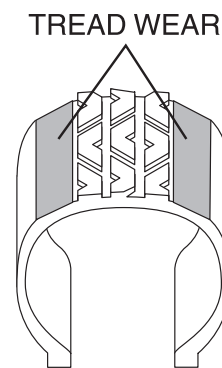

Under-inflation wears on edges of tire.

090440b

Under-inflation can cause:


- ◆ Tire squeal on turns.
- ◆ Separations.
- ◆ Rapid and uneven wear on the edges of the tread.
- ◆ Circumferential breaks.
- ◆ Tire container may bruise or rupture.
- ◆ Higher risk of road hazard.
- ◆ Tire cord breakage.
- ◆ Loss of casing durability.
- ◆ Excessive tire temperature.
- ◆ High fuel consumption.
- ◆ Reduced handling quality.

WARNING

A slow leak may go unnoticed on one of the dual tires. This can cause the good tire to fail by exceeding the load limit. Tires with damaged sidewalls can burst upon inflation. A flat or nearly flat tire can also generate enough heat from friction to ignite.

Unequal tire pressures on same axle can cause:

- ◆ Uneven braking, swerve upon acceleration.
- ◆ Steering lead, torque steer.
- ◆ Reduced handling quality.

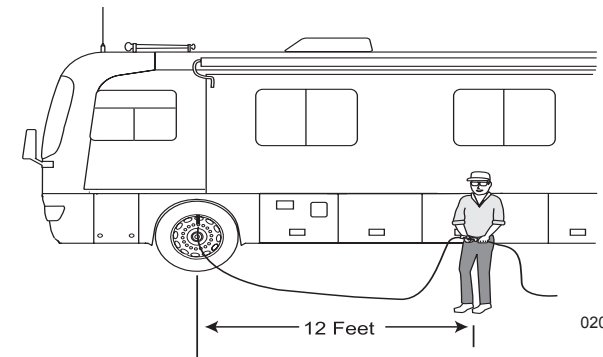

020161c

WARNING

For safety purposes clear the area of people and pets during tire inflation. Inflate tires using a remote inflation device.

Air Pressure Checklist

1. When inspecting the tires, confirm the tires are cool before increasing or reducing air pressure. Even driving a short distance can heat up tires.

NOTE

If the motorhome must be driven a distance to get air, check and record the tire pressure first and add the recorded calculation when reaching the pump. It is normal for tires to heat up and the air pressure inside to go up as driven. NEVER "bleed" or reduce air pressure when tires are hot.

2. Remove the cap from the valve on one tire.
3. Firmly press a tire gauge onto the valve and record reading.
4. Add air to achieve recommended air pressure.
5. If the tire is over filled, release air by pushing on the metal stem in the center of the valve. Recheck the pressure with the tire gauge.
6. Replace the valve cap.
7. Repeat with each tire.
8. Visually **inspect** all the tires for nails, or other objects that could be embedded or puncture the tire and cause an air leak.

9. Check the sidewalls for gouges, cuts, bulges, or other irregularities.

NOTE

Air pressure in a tire goes up (in warm weather) or down (in cold weather) one to two pounds for every 10° F of temperature change.

Supporting When Leveling

Extreme caution must be taken to ensure that the tires are fully supported when placing blocks under the tires. The load on the tire should be evenly distributed on the support block. In the case of dual tires, distribute the load evenly on blocks for both tires. If not properly supported, the steel cables in the sidewall of the tires may be damaged and could lead to premature fatigue of the sidewall.

CAUTION


Supporting the tires prevents damage to the sidewall of the tires but does not prevent tire roll.

Tire Vibration


Sudden tire failure is often preceded by tire vibration. Symptoms that can cause tire failure are a bulge in the sidewall or swelling in the tire carcass. Striking an object or large hole in the road surface can damage a tire. **Inspect** the tires periodically thereafter as rotational forces can continue to stress damaged areas and later manifest in tire failure. If an unusual vibration begins, or a bulge is noticed in the sidewall, have the tires evaluated by a qualified professional as soon as possible.

Tire "Support" Methods**INCORRECT****Singles**





Only a portion of the tire is supporting the full load.

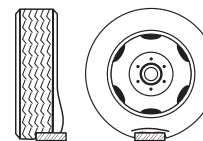**Duals**

One tire or a portion of one tire is supporting the full load.

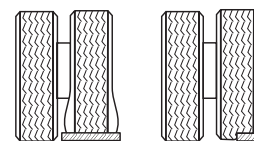

  One tire or a portion of the two tires supporting the full load.

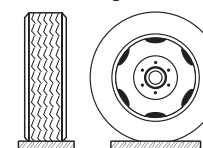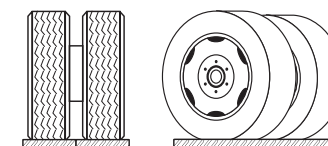**CORRECT****Singles****Tire Footprints****Duals****Dual Tire Footprints**

Tire Rotation

Tire rotation can increase the useful life of the tires by achieving uniform wear on all of the tires. Have the tire manufacturer determine the rotation pattern. The first tire rotation is the most important in determining which rotation pattern to use. Any unusual or unique wear patterns, or indications of uneven wear that may have developed, should be evaluated for possible tire rotation. Misalignment, imbalance or other mechanical problems may exist and will need to be corrected prior to rotation.

Tread

To prevent skidding and hydroplaning, replace tires when the tread is worn down to 4/32 of an inch on the front, and 2/32 of an inch on the rear. Questions regarding tread wear should be directed to the tire manufacturer.

Built in tread wear indicators, or “wear bars” which look like narrow strips of smooth rubber across the tread, will appear on the tire when the tread is worn down to one-sixteenth of an inch. When “wear bars” are noticed, the tire should be replaced.

Visually check the tires for signs of uneven wear. Signs of irregular tread wear are usually exhibited by low or unusually smooth areas on the tire surface. Consult the tire manufacturer as soon as possible.

WARNING

In many instances the life of the tires on the motorhome is not determined by mileage but by age. Tires are subject to weathering. Weathering cracks run in

circumference with the tire. Though the sidewall of the tire may look structurally sound, weathering can occur inside the well of the tread. Have the tire manufacturer inspect the tires for age weathering.

Storage of Tires - Long Term

A cool, dry garage with a sealed cement floor is the preferred method of storage. Tires stored outside may prematurely age.

Prior to Storage:

- ◆ Thoroughly clean the tires.
- ◆ Unload the motorhome to reduce weight on the tires.
- ◆ Ensure the surface is reasonably level, firm, clean and has good drainage.
- ◆ Inflate the tires to the maximum inflation pressure as indicated on the Federal Identification Tag.

During Storage:

- ◆ Cover the tires to block direct sunlight.
- ◆ Periodically ensure tires are at proper pressure.
- ◆ Move the motorhome every three months to prevent cracking in bulge areas, as well as flat spotting from prolonged sidewall strain and tread deflection.

Removal from Storage:



Before removing the motorhome from long-term storage thoroughly **inspect** each tire’s tread area and air pressure. If the tires have lost air during storage, inflate them to the correct pressure.

WHEEL MOUNTING

Hub Piloted Mounting:

- ◆ Flange nuts generate higher clamping force. Always use grade eight studs with hub mount wheels.
- ◆ Before installing the wheels, lubricate the hub pilot pads with a drop of oil to prevent galling. **DO NOT** lubricate any other wheel or hub surface.
- ◆ For a hub with intermittent pilot pads, position a pad at the twelve o’clock position to center the wheel and reduce runout.

For used nuts add two drops of oil between flange and hex.

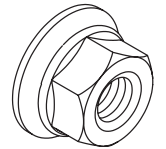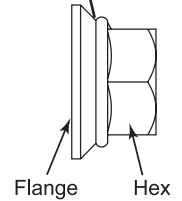

*090268c
Flange Nut:
Front & Side
View.*

NOTE


Loosen and tighten lug nuts in sequence (see illustration above). Sequence tighten to 50 ft. lbs. first, then sequence tighten to 500 ft lbs. Over-tightening can cause distortion.

WARNING

Never use wheels or lug nuts different than the original equipment as this could damage the wheel or the mounting system. Damage to the wheel or mounting system could cause a wheel to come off while the motorhome is in motion.

Front Wheels:

Slide the front wheel over the studs. Use caution to avoid damaging stud threads. Snug the nuts in sequence. When all nuts have been seated, tighten the nuts to 500 ft. lbs. in sequence (as in illustration).

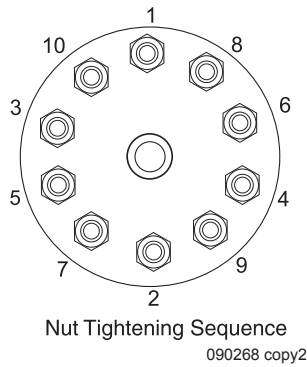**WEIGHING THE MOTORHOME**

Proper weight distribution, load management and operating within established limitations will aid in safe and enjoyable travel. The information in this section outlines guidelines and provides worksheets for weighing procedures.

Proper weight distribution and load management is an individual responsibility. In order to correctly manage load and weight distribution, more than one weight measurement will be required. Each wheel position must be weighed to accurately determine the weight placed on each wheel position for proper weight computations. The entire process of weight management begins with the **Gross Vehicle Weight Rating** as listed on the Federal Certification Label. **This weight cannot be exceeded.**

CAUTION

Most States limit the amount of weight carried by any single axle position. It is the responsibility of the operator to know the legal weight limit of the State in which they travel.

Weight Terms

Numerous Federal, State and local governments mandate weight limits. Understanding the terminology and performing proper weighing procedure will help eliminate confusion. It is important to weigh the motorhome to calculate **Cargo Carrying Capacity (CCC)** and ensure no axle is overloaded.

The **Gross Axle Weight Rating (GAWR)** of the axles is listed on the federal certification label attached to the motorhome. This is the maximum allowable loaded weight on a particular axle. This label is generally located to the rear of the driver's seat, on the wall.

When the actual loaded weight of the motorhome, and the weight on each axle is unknown, follow the recommended tire inflation pressure(s) listed on the federal certification label. When loading a motorhome never exceed the **Gross Vehicle Weight Rating (GVWR)** or the **GAWR** for each axle.

NOTE

Contact the tire manufacturer for further information concerning proper tire pressure inflation and other tire issues.

The **Gross Vehicle Weight Rating (GVWR)** and **Gross Axle Weight Rating (GAWR)** listed on the Federal Certification Label attached to the motorhome details the chassis manufacturer's and/or the RV manufacturer's total vehicle maximum weight rating and per axle weight rating.

The **GVWR** is the maximum total weight for which the motorhome is rated - including passengers, fluids and cargo. The **GAWR** is the maximum weight for which a single axle is designed. The tires, wheels, axle, motorhome frame and/or other components of the motorhome may limit these per axle and total maximum weight ratings.

Torque the Nuts Properly:

- ◆ Tighten the wheel nuts to the recommended lug nut torque. **DO NOT** over tighten.
- ◆ Maintain the nut torque at the recommended level through planned periodic checks or at 10,000 mile intervals, whichever comes first.
- ◆ If air wrenches are used, they must be periodically calibrated for the proper torque output. Use a torque wrench to check air wrench output and adjust line pressure for the correct torque.

The Federal Certification Label is a guide in knowing the maximum loaded axle weight rating **GAWR**, and subsequently the correct tire inflation pressure for that weight. Every motorhome, even of the same make and model, will vary in actual loaded axle weights because of different options and personal loads.

While the actual loaded axle weight should be below the **GAWR**, the motorhome must be weighed in a loaded condition to determine actual weight. Separately weigh the front and rear axle. It is possible for a motorhome to be within the **GVWR** yet overloaded on one axle. It is even possible for one wheel position to be overloaded, even though the **GAWR** has not been exceeded. For this reason it will be necessary to weigh each wheel position of the motorhome to give a clear indication of exactly how the weight of the motorhome is distributed.

Instructions and diagrams are presented on the following pages. When the total weight and the weight on each axle is known, the tire load data chart in this manual will show the correct cold inflation pressure per tire for each axle.

There are two important factors to consider when loading the motorhome: total weight and balance. When loading heavy objects keep them as low as possible, preferably on the floor or below in storage compartments. Load weight must be distributed as evenly as possible.

The following is an explanation of commonly used weight abbreviations:

- ◆ **Gross Vehicle Weight Rating (GVWR):** Maximum permissible weight of this motorhome.
- ◆

- ◆ **Unloaded Vehicle Weight (UVW):** Weight of this motorhome as built at factory with full fuel, engine oil and coolants. **UVW** does not include cargo, fresh water, LP-Gas, occupants or dealer installed accessories.
- ◆ **Cargo Carrying Capacity (CCC):** Equal to **GVWR** minus each of the following: **UVW**, full fresh potable water weight (including water heater), full LP-Gas weight, and **SCWR**. Tongue weight of towed vehicle and dealer installed equipment will reduce **CCC**.
- ◆ **Gross Combination Weight Rating (GCWR):** The maximum allowable loaded weight of this motorhome and any towed trailer or towed vehicle.
- ◆ **Gross Axle Weight Rating (GAWR):** Load-carrying capacity specified by manufacturer of a single axle system, as measured at tire ground interfaces.
- ◆ **Sleeping Capacity Weight Rating (SCWR):** The manufacturer's designated number of sleeping positions multiplied by 154 pounds.

Tire Pressure:

A motorhome may weigh slightly heavier on one side. Tire inflation pressure of the heavier side tires determine the inflation pressure for all tire(s) on that axle due to the weight transfer that occurs when cornering.

Improperly inflated tires, or an incorrectly loaded suspension, can result in poor fuel

economy, poor handling and over-stressed chassis components. How the motorhome is loaded will influence tire inflation pressure and the load carried by each axle. This is why each wheel position must be weighed. Motorhome axle configuration and floor plan styles will require different weighing procedures.

NOTE

When weighing a motorhome, each tire on any axle must be inflated to the same pressure. The wheel position carrying the most weight will determine the tire inflation pressure for each tire of that particular axle.

Scales:

Certified public scales are located in moving and storage lots, farm supplies with grain elevators, gravel pits, recycling companies and large commercial truck stops. To locate a nearby public scale access, check the local area telephone book yellow pages under Scales-Public or Weighers. A nominal fee may be charged, but this is money wisely spent.

Weight scale types and weighing methods determine the procedure used to calculate proper tire inflation pressure and axle loading. Several types of scales are in use today. A platform scale will allow the entire motorhome to fit on the scale to read the **GVW** in one scale recording. A segmented platform scale is designed to weigh one axle at a time. A single axle scale weighs one axle at a time. Some scales read only one wheel position at a time due to physical size. Several scale readings may be required to determine the **GAW** or **GVW** total. Each wheel position requires weighing, referred to as a four-point weigh to accurately determine the correct tire inflation pressure.

NOTE

The most accurate method to determine proper tire pressure is four-point weighing. Each wheel position must be weighed independently. Weighing the entire axle will not accurately determine the total weight carried by that wheel position. When calculating the drive axle dual tire pressure using a independent corner weigh method, divide the total weight by two to determine the weight carried by each tire. Each wheel position must be weighed and recorded.

When weighing, the scales and the motorhome must be level to obtain an accurate scale reading. Even when an axle is not physically on the scale, a definite lean in the motorhome will produce inaccurate scale readings.

Weight Label

MODEL YEAR: _____ MAKE: _____ MODEL: _____	
UNIT NO. _____ CHASSIS VIN: _____	
	<u>LBS.</u> <u>KGS.</u>
GVWR	(Gross Vehicle Weight Rating) is the maximum permissible weight of this fully loaded motorhome _____
UVW	(Unloaded Vehicle Weight) is the weight of this motorhome as manufactured at the factory with full fuel, engine oil and coolants..... _____
SCWR	(Sleeping Capacity Weight Rating) is the manufacturer's designated number of sleeping positions multiplied by 154 pounds (70 kilograms) _____
CCC	(Cargo Carrying Capacity) is the GVWR minus each of the following: UVW, full fresh (potable) water weight (including water heater), full LP-Gas weight and SCWR (*1)..... _____
GCWR	(Gross Combination Weight Rating) is the maximum allowable combined weight of this motorhome and the towable product. (*1)..... _____
	FACTORY INSTALLED OPTIONS are options installed at the factory but do not include dealer installed after market equipment.. _____
CARGO CARRYING CAPACITY (CCC) COMPUTATION	
GVWR	_____
minus UVW	_____
minus fresh water (*2) weight of _____ gallons @ 8.3 lbs./gal	_____
minus LP-Gas weight of _____ gallons @ 4.2 lbs./gal	_____
minus SCWR of _____ persons @ 154 lbs./person.....	_____
CCC for this motorhome (*3)	_____
WARNING: CONSULT OWNER MANUAL(S) FOR SPECIFIC WEIGHING INSTRUCTIONS AND TOWING GUIDELINES INCLUDING AUXILIARY BRAKE REQUIREMENTS FOR ANY TOWED TRAILER OR TOWED VEHICLE.	
Factory installed options do not include dealer installed after market equipment.	
WARNING: DO NOT EXCEED THE GVWR, GCWR AND/OR GAWR AFTER LOADING YOUR MOTORHOME WITH WATER, FUEL, PASSENGERS AND CARGO.	
GAWR (Gross Axle Weight Rating) means the maximum permissible load weight a specific axle is designed to carry. See Federal Certification Label for disclosure of The GAWR for each axle.	
(*1) Towing capacity is limited by GCWR; your vehicle's towing capacity is the difference between the GCWR and the actual vehicle weight; including all water, fuel, passengers, and cargo. Consult your Owner's Manual for further information.	
(*2) Your motorhome's fresh water tank and water heater taken together determine the gross fresh water capacity. Your usable fresh water capacity, however, may be less.	
(*3) Dealer installed equipment and towed vehicle tongue weight will reduce CCC.	


Four Corner Weighing (Example)

NOTE

Following scale readings and Gross Axle Weight Ratings are fictitious. Actual scale readings and Gross Axle Weight Ratings will vary with model and options.

The motorhome must be weighed fully loaded to obtain accurate scale readings and to determine the proper tire pressure. All slide rooms must be in retracted position.

- ◆ Take the rear axle **Gross Axle Weight Rating (GAWR)** and divide it by two. Example: Rear axle **GAWR** taken from the motorhome Vehicle Certification Label is 14,500 lbs. Divide the figure by 2, using chart below, record 7,250 lbs. on Scale B and D, line 1.
- ◆ Weigh the driver side rear corner (Scale B) and record weight on chart Scale B, line 2. Example: 4,400 lbs.
- ◆ Weigh the passenger side rear corner (Scale D) and record weight on chart Scale D, line 2. Example: 4,100 lbs.
- ◆ Add chart Scale B and D, lines 1, for **Gross Axle Weight Rating (GAWR)** and record on chart under Totals. Example: 14,500 lbs.
- ◆ Add chart Scale B and D, lines 2, for actual **Gross Axle Weight (GAW)** and record on chart under Totals. Example: 8,500 lbs.
- ◆ **Actual Gross Axle Weight (GAW).** Example: 8,500 lbs., is not to exceed **Gross Axle Weight Rating (GAWR).** Example: 14,500 lbs.

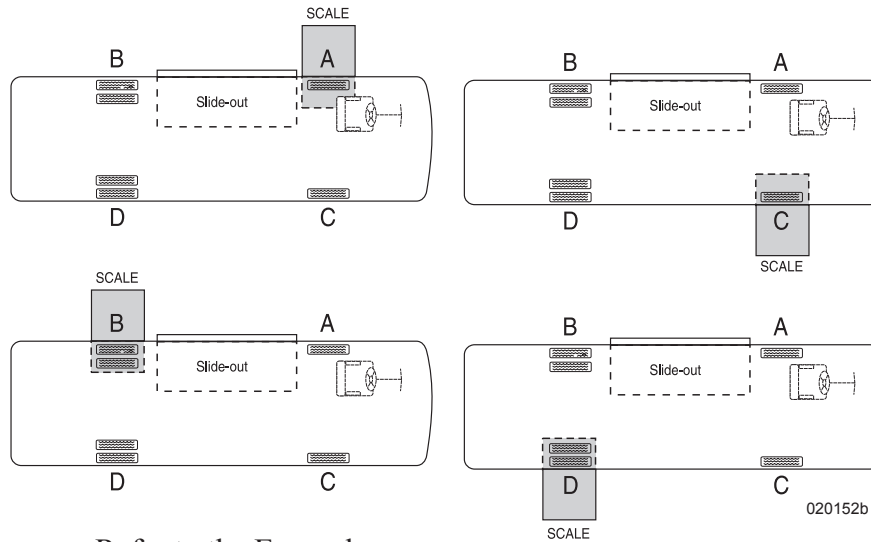


- ◆ Refer to the Example Tire Chart (Tire size 275/80R22.5). Use the highest actual weight, Scale B or D, line 2. Example 4,400 lbs. Determine the proper tire pressure for each tire using the Load Inflation chart. Example: 95 psi or stamp on the sidewall of the tire.
- ◆ Repeat above procedures to determine front axle Scale A and C, tire pressures.

WARNING

Improperly inflated or overloaded tires can cause a blowout. An overloaded axle can cause a component failure of the suspension system. Tire blowout or broken suspension components can lead to loss of vehicle control resulting in property damage, personal injury or death.

	ROADSIDE		CURBSIDE		TOTAL AXLE WEIGHT	GROSS AXLE WEIGHT RATING GAWR	GAWR Minus Total Axle Weight
FRONT AXLE	1. 4,000	+	4,000	=	8,000	8,000	2,200
	2.(A) 3,000		(C) 2,800	=	5,800		
DRIVE AXLE	1. 7,250	+	7,250	=	14,500	+ 14,500	6,000
	2.(B) 4,400		(D) 4,100	=	+ 8,500		
			Total Axle Weight	=	14,300	=	22,500
					UVW	=	GVWR
							CCC

NOTE: These measurements are with a full fuel tank and nobody in the motorhome. 020255b conv

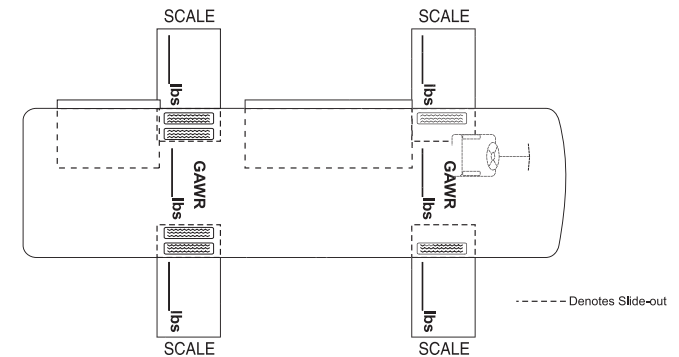

CAUTION

If actual weight carried by any tire is below the tire chart weight specification minimum tire pressure, the minimum inflation pressure must be maintained. Tire pressure below the minimum inflation pressure can overheat and damage the tire casing leading to premature tire failure or blowout.

Load and Inflation Table:

The load and inflation table helps to determine the correct inflation for the motorhome tire, after properly weighing the motorhome. All pressures are rated at a cold psi. Cold conditions are defined as early in the morning before the day's ambient temperature, sun's radiant heat or the heat generated while driving have caused the tire pressure to temporarily increase. This means that the pressure should be checked early and when the motorhome has not been driven more than one mile. The check interval should be in the morning, before the "drive" trip and every morning on extended trips. A quality truck tire gauge with a multiple angle airhead is needed to ensure access to both dual wheel positions of the drive axle. Ensure the valve cap is replaced on the stem after the inflation is checked. This guarantees the valve core will remain free of dirt and foreign material. Material lodged between the valve core and internal stem can cause slow leaks resulting in tire failure.

Understanding the Inflation Table:

- ◆ Tire Size is on the left margin of the Table.
- ◆ Determine the "Single" inflation reading or "Dual" inflation reading. This is denoted with a "D" or "S" on the Table.

Single is for the Front axle. Dual is for the Drive axle.

- ◆ Find the corresponding psi at the top columns to see the corresponding maximum weight capacity for that psi.

NOTE

Every load range has a maximum rating as well as a minimum rating. Do not exceed those ratings.

- ◆ Rated load capacities are listed for individual tires in a Dual or Single position.

Cargo Carrying Capacity:

When weighing the motorhome it is important to understand that each motorhome, even of the same model year, floorplan and length will weigh different due to options and accessories. The **Gross Vehicle Weight Rating (GVWR)**, **Gross Combination Weight Rating (GCWR)** and/or **Gross Axle Weight Rating (GAWR)** must not be exceeded.

GVWR limits the weight of the entire load combination, regardless of the water, LP-Gas, passengers and cargo weight.

It is important to understand that the weighing process is performed in two phases. First, by determining the **Cargo Carrying Capacity (CCC)**; and second, to ensure the **GVWR** is not exceeded when adjusting tire pressures. The weighing process should start by recording the **GVWR** from the Federal Weight Label, then weighing the motorhome unloaded, without passengers and with a full fuel tank. Engine and transmission fluid levels must be full. This is known as the **Unloaded Vehicle Weight (UVW)**. Once this weight has been recorded it

can be subtracted from the **GVWR**.

$$\text{GVWR } \underline{22,500} - \text{UVW } \underline{14,300} = \text{A } \underline{8,200}$$

Next, begin to calculate the **Cargo Carrying Capacity (CCC)**. Fresh water weight and LP-Gas weight can now be subtracted from the remaining total line A.

- ◆ Water weight is the number of gallons multiplied by 8.3.
- ◆ LP-Gas weight is the number of gallons multiplied by 4.2.

A 10-gallon water heater with a 40-gallon fresh tank would total 50 gallons times 8.3, or 415 lbs. A 30-gallon LP-Gas tank will have 24 gallons of LP-Gas due to the 80% valve. This would mean 24 gallons multiplied by 4.2, or 100.8 lbs.

$$\text{A } \underline{8,200} - 581 = \text{B } \underline{7,619}$$

$$\text{B } \underline{7,619} - 100.8 = \text{C } \underline{7,518.2}$$

Next, calculate the **Sleep Capacity Weight Rating (SCWR)** the manufacturer's designated number of sleeping positions for the motorhome multiplied by 154 lbs.

The 154 lbs. (70kg) is the average weight established by the U.S. Federal Government and Transport Canada, and is used to arrive at **Cargo Carrying Capacity (CCC)**. However, actual sleep capacity weight may be greater. The **SCWR** is not intended to limit the sleeping capacity to a specified weight.

Example: If the manufacturer has designated the motorhome sleeping position at 4 (616 lbs.) and there are four people who weigh 200, 200, 178 and 138 lbs., totaling 716 lbs., that doesn't mean the sleeping capacity is reduced to three individuals, but rather the CCC is reduced by 100 lbs. due to the actual passenger weight.

C 7,518.2 - SCWR 770 = CCC 6,748.2

Cargo Carrying Capacity (CCC) is how much cargo the motorhome can carry. However, tongue weight of a towed vehicle will further reduce this amount.

Now the motorhome can be fully loaded and weighed to ensure **GVWR** is not exceeded. Once the motorhome is fully loaded it is ready for weighing to obtain an accurate scale reading and determine the proper tire pressure. All slide rooms must be in the retracted position when weighing the motorhome. The motorhome must remain as level as possible on the scale, even when an axle or side is not physically on the scale.

- ◆ Each wheel position must be weighed to accurately determine the weight carried at each wheel position.
- ◆ Refer to the previous examples on how to weigh each wheel position. Each wheel position must be weighed and recorded to determine proper tire inflation.
- ◆ Wheel position weights are not to exceed **Gross Axle Weight Rating (GAWR)** and **Gross Vehicle Weight Rating (GVWR)** as printed on the Motorhome Vehicle Certification Label.

- ◆ Compare wheel position weights with weight ratings on the label. If wheel position weights exceed maximum specifications, items will need to be removed until rating weight is within specification.

WARNING

Further instructions for towing guidelines, including auxiliary brake requirements for any towed trailer or towed vehicle, are found in other areas of this manual.

Cargo Carrying Capacity Flowchart

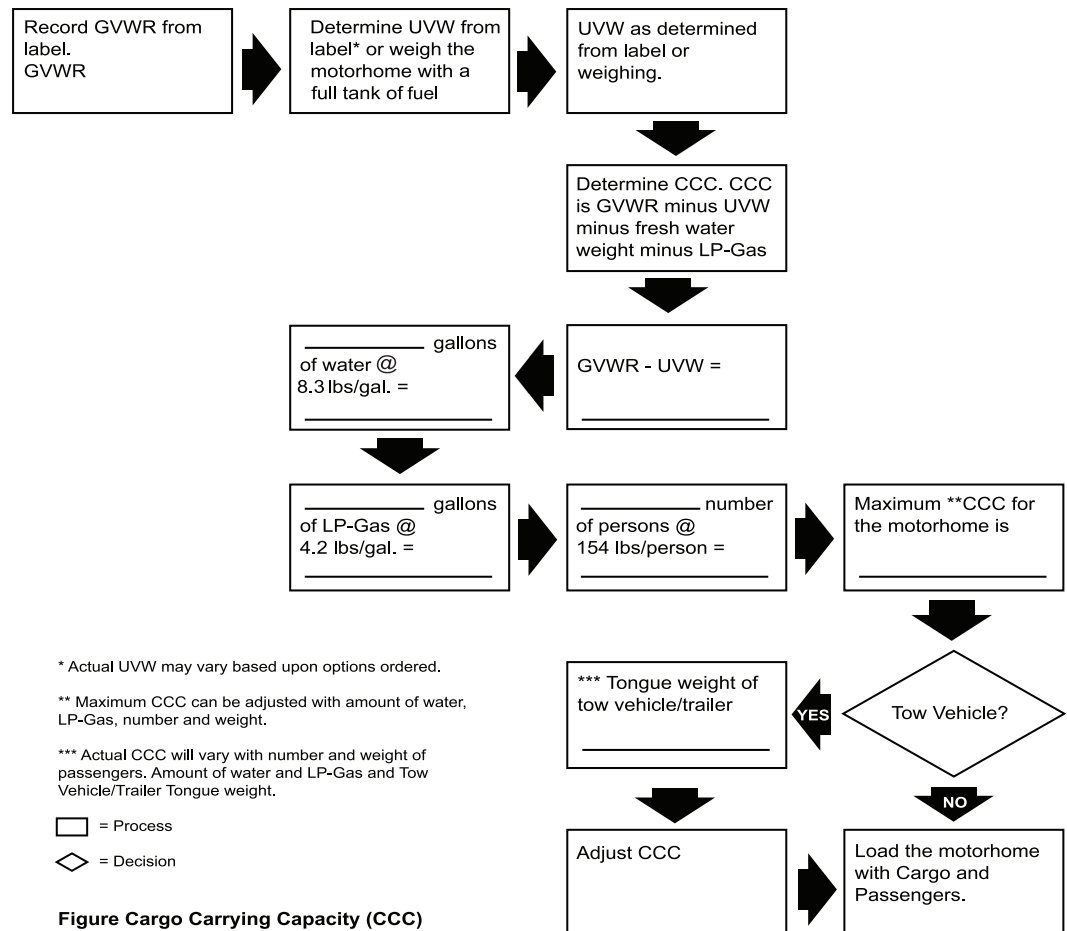


Figure Cargo Carrying Capacity (CCC)


Weighing Procedure Worksheet

Example Worksheet

	ROADSIDE		CURBSIDE		TOTAL AXLE WEIGHT	GROSS AXLE WEIGHT RATING GAWR	GAWR Minus Total Axle Weight
FRONT AXLE	1. 4,000	+	4,000	=	8,000	8,000	2,200
	2.(A) 3,000		(C) 2,800		5,800		
DRIVE AXLE	1. 7,250	+	7,250	=	14,500	+ 14,500	6,000
	2.(B) 4,400		(D) 4,100		+ 8,500		
			Total Axle Weight		= 14,300 UVW	= 22,500 GVWR	= 8,200 CCC

NOTE:

These measurements are with a full fuel tank and nobody in the motorhome.

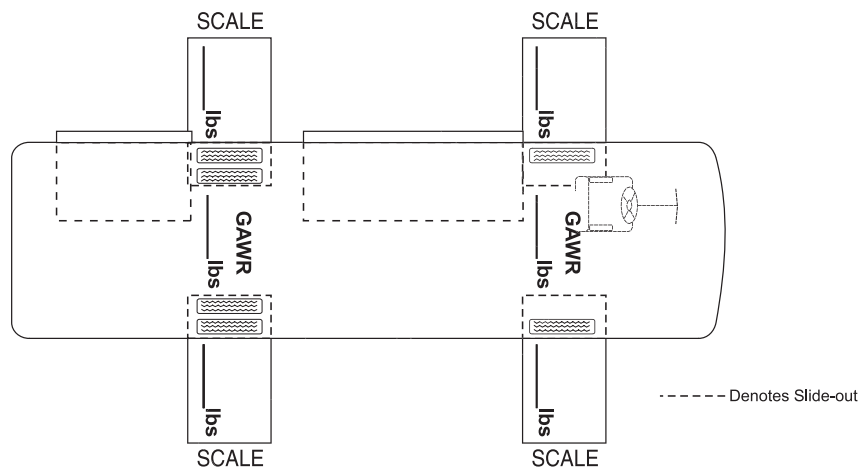


	FORMULA	UVW CAPACITY	CCC
FRESH WATER	Subtract Gallon @ 8.3 lbs/gal	60 X 8.3 = 498	- 7,702
WATER HEATER	Subtract Gallon @ 8.3 lbs/gal	10 X 8.3 = 83	- 7,619
LP-GAS	Subtract Gallon @ 4.2 lbs/gal	24 X 4.2 = 100.8	- 7,518.2
SLEEP CARRYING WEIGHT RATING	Subtract Persons @ 154 lbs/person	5 X 154 = 770	- 6,748.2
		Maximum Cargo Carrying Capacity CCC	6,748.2

Maximum Cargo Carrying Capacity will change by varying any of the capacities. Tongue Weight of a towed vehicle will reduce the Cargo Carrying Capacity (CCC).

Actual Worksheet

	ROADSIDE		CURBSIDE		TOTAL AXLE WEIGHT	GROSS AXLE WEIGHT RATING GAWR	GAWR Minus Total Axle Weight
FRONT AXLE	1.	+		=			
	2.(A)		(C)				
DRIVE AXLE	1.	+		=			
	2.(B)		(D)		+	+	
			Total Axle Weight	=	UVW	=	GVWR
				=		=	CCC

NOTE: These measurements are with a full tank and nobody in the motorhome.

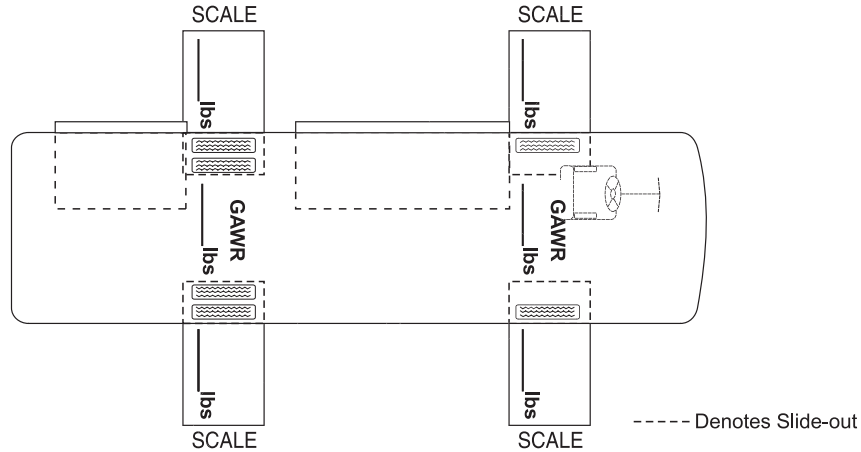

	FORMULA	UVW CAPACITY	CCC
FRESH WATER	Subtract Gallon @ 8.3 lbs/gal	X 8.3 =	-
WATER HEATER	Subtract Gallon @ 8.3 lbs/gal	X 8.3 =	-
LP-GAS	Subtract Gallon @ 4.2 lbs/gal	X 4.2 =	-
SLEEP CAPACITY WEIGHT RATING	Subtract Persons @ 154 lbs/person	X 154 =	-
		Maximum Cargo Carrying Capacity CCC	

Maximum Cargo Carrying Capacity will change by varying any of the capacities. Tongue Weight of a towed vehicle will reduce the Cargo Carrying Capacity (CCC).

020255b

Weight Record Sheet

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

SMOKE DETECTOR

Statistics show that most fire casualties are not caused by direct flame, but by less visible smoke (products of combustion). The smoke detector


responds to both visible and invisible products of combustion. The smoke detector automatically returns from alarm to normal state when the reason for activation, the presence of smoke, is completely removed. Fires are commonly caused by smoking in bed, leaving children unattended or using flammable cleaning fluids. Please be safety conscious and avoid unnecessary risk.

WARNING

There is no way to insure against injury or loss of life in a fire; however, the smoke detector is intended to help reduce the risk of tragedy. Additional smoke detectors may help to reduce the risk. Proper use and care of the smoke detector could save lives.

Operation

When a 9 Volt DC battery is correctly connected, the smoke alarm is operating. The LED flashes every minute, showing the battery is supplying power. A loud alarm sounds when a production of combustion is sensed.

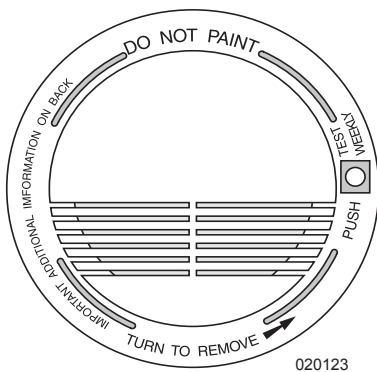

NOTE

The unit will not operate without a battery. A battery flag pops up preventing the unit from being installed to the mounting bracket without a battery. Carbon zinc batteries average a service life of one year. Alkaline batteries average a service life of one to two years.

Testing

Simply press the test button on the smoke alarm cover for approximately three seconds. The alarm sounds if all electronic circuitry, horn and battery are working properly. The smoke alarm should be tested at least once a week when the motorhome is in use, prior to each trip and when the motorhome has been in storage. When testing the smoke alarm it is advised to stand at arm's length.

CAUTION

Never use an open flame to test the smoke alarm as this may ignite the alarm or surrounding area and set fire to the motorhome.

Maintenance

Steps to keep the smoke alarm working properly:

- ◆ Test the smoke alarm once a week.
- ◆ Keep a supply of 9 Volt DC batteries on hand.
- ◆ Vacuum the slots in the cover and sides with a soft brush attachment every month. Test the smoke alarm once the unit has been vacuumed.

- ◆ The smoke alarm beeps once a minute when a low battery exists. Replace battery immediately.

Troubleshooting

If the alarm does not sound when the test button is pushed, or with a smoke test, try the following:

- ◆ Inspect alarm for obvious damage.
- ◆ Check for the recommended battery type.
- ◆ Check the battery for proper connection or replace the battery if needed.
- ◆ Gently vacuum as recommended.

If these procedures do not correct the problem, do not attempt repairs. If the smoke alarm is within the warranty period and the terms indicate the nature of the problem, return the unit to your dealer. Smoke detectors beyond the warranty period cannot be economically repaired.

CARBON MONOXIDE DETECTOR

American National Standards Institute (ANSI) A119.2 - Fire & Life Safety 3-4.6 Carbon Monoxide Detectors states "All RV's equipped with an internal combustion engine or designed with features to accommodate future installation of an internal combustion engine and truck campers shall be equipped with a listed CO detector installed in accordance with its listing."

The motorhome is equipped with a Carbon Monoxide detector. Everyone is at risk with Carbon Monoxide poisoning. Carbon Monoxide (CO) is a colorless, odorless and tasteless gas that binds with hemoglobin reducing the body's ability to absorb and carry oxygen to vital organs. Even low levels of CO have been known to cause brain and other vital organ damage in unborn infants, with no effect on the mother.

When removed from exposure, the symptoms dissipate as Carbon Monoxide is expelled through the lungs. Level of contamination in the body reduces at half-life increments at approximately four-hour intervals. Treatment with Oxygen will quicken recovery time.



Located in bedroom

In cases of mild exposure, the symptoms may include: a slight headache, nausea, vomiting and fatigue. Some consider this a “Flu-like Symptom.” Symptoms for medium exposure may include a severe throbbing headache, drowsiness, confusion and fast heart rate. Extreme exposure can result in unconsciousness, convulsions, cardio-respiratory failure and death. Young children and household pets may be the first affected. Other highly sensitive people include the elderly and those with lung or

heart disease or anemia.

The CO detector is designed to detect the toxic CO Gas resulting from incomplete combustion of any fuel. This can be gasoline, propane, natural gas, oil, charcoal or wood. Anything that burns fuel such as engines, generators, furnaces, gas stoves or water heaters, produce CO Gas. Consequently, it is uncommon for household smoke from cigarettes or normal cooking to cause the alarm to sound.

CAUTION

Activation of this device indicates the presence of carbon monoxide (CO), which can be fatal. A concentration of above 100 PPM will cause a warning condition. Individuals with medical problems may consider using detection devices with lower carbon monoxide alarming capabilities. Prolonged exposure to the horn at a close distance may be harmful to hearing.

WARNING


Constant beeping and a flashing red light means CO gas has been detected. Shut off appliances, motorhome engine, and water heater. Evacuate the motorhome and call the fire department. Have any problems corrected before restarting any appliances or the coach.

The CO detector is wired to the house batteries to allow reliable and continuous protection by alerting the build up of potentially dangerous levels of CO. The battery cut-out switch must be on. Once the unit is powered, it will run through a brief warm-up and self check prior to monitoring for CO gas. There are no switches that can accidentally turn the system off.

Operation

The detector is equipped with a self-cleaning CO sensor and requires a ten minute initial warm-up period to clean the sensor element and achieve stabilization. During the warm-up period, the green power light will flash **ON** and **OFF**. The green power light should be lit when the power is on. If the light is not lit, turn off the power and check all wire connections. If the power is on and the connections are correct, but the indicator still does not light, the detector should be returned for service. **Do not attempt to fix the detector.** The indicator light displays a specific color to monitor along with a matching sound pattern.

Indicator Lights and Sound Patterns:

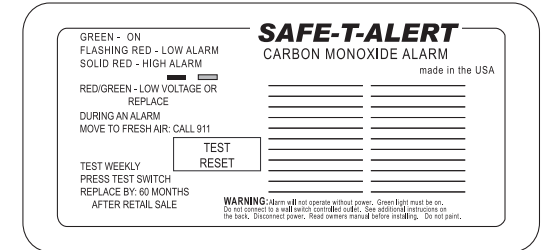

020150b

- ◆ **ON** or normal condition is indicated by **green**. The CO detector has power and is sensing air for the presence of CO Gas. The alarm horn will not sound.
- ◆ Flashing **red** indicates low CO alarm condition along with **four** beeps then **OFF** for five seconds. The alarm horn will sound and can be reset by the **TEST/RESET** button. The CO detector has detected the presence of 60 ppm.

- ◆ Steady **red** indicates a **CO ALARM** condition. The detector has sensed the presence of levels over 100 ppm of Carbon monoxide. The alarm horn will sound continuously until the **RESET** switch is reset.
- ◆ Alternating **red** and **green** indicates a malfunctioning alarm.

Alarm

When the alarm sounds have the detector and the motorhome checked by an authorized service technician as soon as possible. Never disconnect a CO detector to silence an annoying alarm. Evacuate the motorhome immediately when the red light is lit and the alarm sounds. Do a head count to check that all persons are accounted for. Call the nearest fire department and ask them to determine the source of the Carbon Monoxide. Do not re-enter the motorhome until it has been aired out and the problem corrected.

Potential Sources of CO when operating the motorhome:

- ◆ Engine Exhaust
- ◆ Portable Grills
- ◆ Portable Space Heaters
- ◆ Camp Fires
- ◆ Gas Stoves and Ovens
- ◆ Generator Exhaust
- ◆ Portable Generators
- ◆ Nearby Motorhomes
- ◆ Defective Engine Exhaust System

Testing

Test Procedures:

Test the Carbon Monoxide detector operation after the motorhome has been in storage, before each trip and at least once a week during use. Test the alarm by holding the **TEST/RESET** button in until the alarm sounds. The alarm will sound four beeps and the indicator lamp goes steady **red**. Six seconds later the alarm will again beep four times and the indicator light goes steady **green**.

Peak Level Memory:

The CO detector has the capability to remember the level of Carbon Monoxide that activated the alarm. Press the **TEST/RESET** button for less than one second and observe the visual and audible signals.

- ◆ **One beep** and **one green** flash indicate memory is clear.
- ◆ **Two beeps** and **two red** flashes indicate less than 100 ppm.
- ◆ **Three beeps** and **three red** flashes indicate less than 200 ppm.
- ◆ **Four beeps** and **four red** flashes indicate greater than 200 ppm.

NOTE

Memory is erased when power is disconnected for 15 seconds.

Cleaning & Maintenance

Use a vacuum cleaner to remove dust or any other buildup on the detector. Do not wash. Wipe the detector with a damp cloth and dry with a towel. Do not open the detector for cleaning. Do not paint the detector. It is recommend that the Carbon Monoxide detector be replaced every 5 years. The CO detector has no user service parts. If there is a problem with the detector refer to an authorized service center. **DO NOT REMOVE POWER.**


INSPECT

Check the CO detector weekly and at the beginning and end of each trip.

FIRE EXTINGUISHER

The fire extinguisher in the motorhome is located near the main entrance door. Please read the operating instructions that are printed on the fire extinguisher. If there is any doubt on how to operate the fire extinguisher practice using it. Replace or recharge the extinguisher immediately after use.

Inspect the fire extinguisher at least once a month. Do so more frequently if the extinguisher is exposed to weather or possible tampering. Do not test the extinguisher by partially discharging. Internal pressure will escape and the fire extinguisher will need to be replaced.

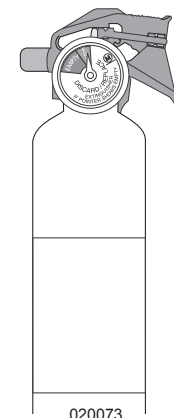

020073


Use the PASS word!

Pull the pin to unlock the extinguisher.

Aim at the base (bottom) of the fire and stand 6 to 10 feet away.

Squeeze the lever to discharge the agent.

Sweep the spray from left to right until totally extinguished.

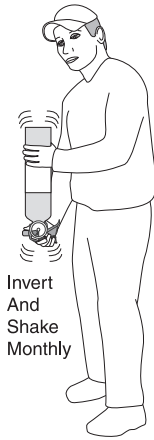

020261

WARNING

Road vibration will cause extinguisher powder to compact and may cause extinguisher malfunction. Invert and shake extinguisher monthly.

There are three classes of fire to be concerned with in a motorhome. Any fire can fall into more than one class; a fire that involves both burning paper and kitchen grease is a Class AB fire.

Classes of Fire:

A- Fires that are fueled by materials that leave a residue when they burn: paper, wood, cloth, rubber, and certain plastics.



B - Fires that involve flammable liquids and gases: gasoline, paint thinner, kitchen grease, propane and acetylene.




100209

C - Fires that involve energized electrical wiring or equipment. If electricity to the equipment is turned off, a class C fire becomes one of the other two class fires.

ESCAPE (EGRESS) WINDOW

The Egress window, designated for use as an emergency exit, is identified inside of the motorhome by a red locking handle and Exit label. To open, lift the red handle and push outward. Pull closed and lower handles to lock the Egress window.

Hinges along the outside window top identify the Egress window on the motorhome exterior. The glass slider in the Egress window operates the same as all other windows in the motorhome. Occasionally open and close the Egress window to prevent the rubber seal from sticking.

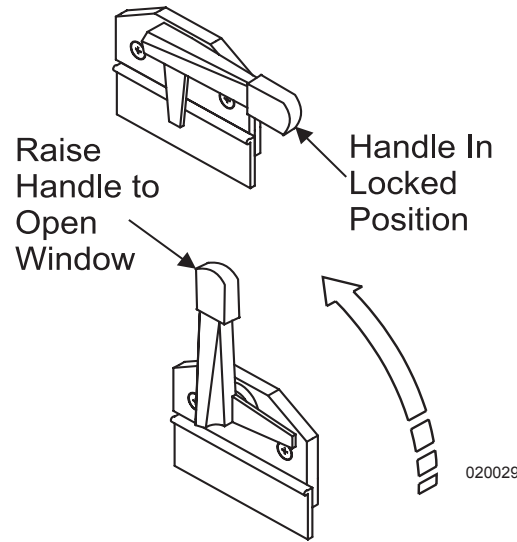

020029

Egress Window Handle

NOTES

Diplomat 2007

Exterior & Interior Care — Section 3

EXTERIOR CARE	52	SHOWER	61
Corrosion.....	52	CEILING	61
Washing	52	WALL COVERINGS	62
Drying.....	52	WOOD CARE	62
Waxing	52	COUNTERTOPS	64
Paint Codes	53	Solid Surface	64
Tire Care.....	53	Laminate.....	64
Wheels - Coated Aluminum	53	STAINLESS STEEL SURFACES	64
Bright Metal	54	WINDOWS	64
EXTERIOR MAINTENANCE	54	Condensation.....	65
Fiberglass	54	WINDOW TREATMENTS	65
Roof Care & Seal Inspections	55	Mini-Blinds	65
Sealant Types.....	55	Day/Night Shades	65
INTERIOR CARE	57	MOLD & MILDEW	66
Cockpit	57	PEST CONTROL	67
FABRICS	57	STORAGE	69
General Care & Cleaning.....	57	Short Term.....	69
Vinyl	57	Long Term	69
Leather	59	Winter Storage Checklist	71
Ultra-Leather	59	Removal from Storage.....	71
FLOORS	60		
Carpet Cleaning.....	60		
Tile Floor.....	61		
Laminate Floor	61		

NOTE

“Section 3 - Exterior Care & Maintenance” is a general cleaning section. Some of the articles within this section may or may not apply to your motorhome.

EXTERIOR CARE***Corrosion***

The most common cause of corrosion to the motorhome exterior is accumulation of road salts, grime and dirt. These elements, combined with moisture, may possibly cause early component failure. The undercarriage, around wheel openings and the radiator charge air cooler package require periodic cleaning to prevent component failure caused from corrosive materials collected on roadways. If the motorhome is driven in areas where road salts are used it should be washed at least once a week. Otherwise, it is recommended to hose off the undercarriage area at least once a month to help minimize the corrosion process. High pressure washers or steam cleaners are the most effective way of cleaning off the underside and inside wheel openings. Avoid directly spraying the painted surface with a high-pressure washer.

CAUTION

Exercise caution when cleaning the radiator charge air cooler package. Damage to the fins can result when using a high pressure washer or steam cleaner. Nozzle discharge pressure can exceed 1800 psi. Avoid using high pressure steam cleaners on the exterior paint surfaces. Remove all spattered washing debris from the exterior paint surfaces as soon as possible.

Washing

Periodic cleaning will help to preserve the paint finish. The motorhome is painted with a “base coat, clear coat system.” Clear coat is a polyurethane-based material which brings out the shine and luster to the base coat paint. Care should be used when washing the motorhome. Use only mild detergents or (preferred) specifically designed automotive detergents. Avoid abrasive cleansers or laundry detergents that will scratch the clear coat and leave a soap film. Use a soft cloth to wash the paint finish. Avoid brushes as they can scratch the surface and damage the paint. Before washing the motorhome, remove most of the accumulated dirt and “road wash” behind wheel openings, below the windshield and on the rear of the motorhome. If build up is excessive, run water over a soft cotton cloth while gently wiping the surface in one direction. This will help float away the “build-up” from the clear coat. Avoid back and forth or circular motions as this may act like sandpaper, scratching the clear coat and leaving a haze or “swirl marks.” After removing the heavy build-up, use the mixed detergent solution to wash the motorhome. Start washing at the top of the motorhome working towards the bottom. If possible, wash the motorhome in a shaded area when the exterior is not hot to the touch. If necessary, turn the motorhome around to keep the area being washed in the shade. Try not to allow the detergent to dry onto the clear coat surface. Use plenty of water when rinsing the surface to remove all detergent residue.

Drying

Chamois cloths come in natural and synthetic materials. Either type is acceptable as long as the surface is clean. Soak the chamois in clean water, then wring it dry. Remove the water from the surface, starting at the top and working towards the bottom, using a downward “S” pattern. Wring out the chamois as needed. Using a chamois cloth to remove the rinse water is not necessary, but the effort can be worthwhile.

Waxing

It is recommended to wax the motorhome twice a year: spring and fall. Many types of protective barriers are available today that may be applied to the clear coat: glazes, waxes, polishes, rubbing compounds or combinations of these products.

NOTE

Use a grease and wax remover before applying another coat of wax. Chemicals can become trapped between layers of wax, possibly damaging the paint finish.

INFORMATION

When selecting a product, follow the product manufacturer’s recommended application instructions.

Types of Products:

Glazes - Glazes are generally used to fill very fine scratches in the clear coat. They are applied either by hand or by using a polisher with a special pad.

Waxes - Waxes come in many types of chemical make-up. The popular Carnuba wax is a natural wax from the leaves or fronds of the Carnuba palm tree. Mineral waxes have a paraffin base. There are also waxes which contain silicone.

Polishes - Polishes usually contain a combination of wax based substances with an abrasive, getting the two for one idea. These products can be too abrasive for clear coats and are not recommended for use.

Rubbing Compounds - These types of products are generally applied by using a buffer. The use of rubbing compounds should be left to professionals as undesired results can quickly occur. These types of products are generally used to correct or flatten a surface by removing high spots or small amounts of material.

When selecting a product, the container should be marked, “**safe for clear coats**” or “**clear coat safe.**” Carefully follow the application instructions when using a product. Upon first use of a product, try it on a small test spot in an inconspicuous area in case an undesired reaction occurs.

Observe the test area from different angles to check for hazing or swirl marks. If an abnormal reaction to the finish occurs, discontinue product use and consult the product manufacturer. If the product is a paste, **do not** allow dried paste to be baked on by the sun. Remove paste shortly

after drying. Clean, dry, 100% cotton cloths are best suited for the removal of dried paste. Turn the cloth often. Use a separate clean cloth to buff. The surface should feel slick when rubbing the cloth lightly over it. Avoid repeated wax applications which can cause to build up. Some very fine scratches or swirl marks may be removed by an application of a glaze. These types of glazes fill the scratches or swirl marks.

The motorhome has a large surface area. Washing and waxing may not be completed in one afternoon. Select sections to wax until the motorhome is complete. If the task seems overwhelming, have an automotive detailer perform the task.

Paint Codes

The motorhome color scheme is comprised of specific paint colors, each assigned a code used to achieve a desired color of paint. “Touch-up” paint may be used to repair a small scratch or imperfection in the paint surface. To paint a larger area, it is necessary to obtain the paint code to get the correct color match.

To Obtain the Paint Code:

1. Contact **National Parts** at **1-877-466-6226**.
2. Specify the year, model, serial number and exterior color scheme name (if known).
3. This formula can be mixed at a local BASF paint store.

NOTE

All special paint schemes require contacting Monaco Coach directly for paint codes.

Tire Care

Road oil will cause deterioration of the rubber. Dirt build-up can trap chemicals next to the tire and also cause deterioration.

Proper care and methods in cleaning must be used to obtain the maximum service years out of the tires. Use a soft brush and a mild detergent to clean the tires. If a dressing product is used to “protect” the tires from aging, use extra care and caution. Tire dressings that contain petroleum products or alcohol may cause deterioration or cracking.

In many cases it is not the dressing that causes a problem but the chemical reaction that subsequently occurs. When these same dressing products are used on a passenger car tire that is replaced every three to four years, it is rare to see a major problem. However, in most cases motorhome tires may last longer due to limited annual mileage and exposure.

Wheels - Coated Aluminum

Inside:

If the tires are removed, **inspect** and clean the entire rim. Air used to fill the tire may contain moisture and can cause the areas of the wheel under the tire to severely corrode. Use a soft brush to remove any foreign materials from the tire side of the rim. Lubricate the rim and tire bead with a non-water-based lubricant before mounting the tire and ensure the inside of tire is dry before installing.

WARNING

DO NOT use a flammable solution to coat the inside of the rim. This can lead to an explosion during tire inflation or in subsequent operation of the motorhome.

Outside:

The coated surface of the wheels should be treated the same as the paint finish on the motorhome. Road soils, grime and brake dust trap moisture which can cause corrosion over a period of time.

1. Frequently clean using high-pressure water.
2. Wash with a 100% cotton cloth and a mild soap solution (dish soap or carwash soap is recommended).
3. Rinse all remaining soap residue with high-pressure water and wipe the surface dry using a 100% cotton cloth to avoid water spots.
4. A secondary hand washing may be required to remove some stubborn road films.
5. Carnauba wax can be applied to help protect the finish.

NOTE

Allow heated wheels that are extremely hot to cool before spraying with cold water.

CAUTION

DO NOT use the following items on coated aluminum wheels:

- ◆ Polishes (unless marked “safe for clear coat” or Alcoa Aluminum Care).

- ◆ Synthetic cleaning pads, wire or abrasive brushes, steel wool or scouring pads (these can mar or scratch the finish).
- ◆ Strong detergents, alkaline or acidic cleaners, acids or lye-based chemical products or solvents.

CAUTION

Rinse aluminum wheels using high-pressure water to remove debris from the surface before washing. DO NOT scrub. Rubbing debris against the surface of the wheel can result in scratches. DO NOT allow soap solution to dry on the finish of the wheel as spotting will occur.

INFORMATION

Instructions for cleaning, handling and minor scratch repair to the coating can be found in Accuride service bulletin 2.0037 Rev 1. Contac Accuride at 1-800-823-8332 for further information.

Bright Metal

All chrome and stainless steel should be washed and cleaned each time the motorhome is washed. Use only automotive approved non-abrasive cleaners and polishes on exterior bright work. **DO NOT** use rubbing compounds. **DO NOT** use abrasive cleaners or compounds to clean the mirrors.

NOTE

When using chemicals to remove road tars, use only automotive products that are recommended for painted surfaces and fiberglass. Observe the warning recommendations and directions printed on the container of any agent being used.

EXTERIOR MAINTENANCE

When parked, the motorhome is exposed to extreme temperatures, humidity, ultraviolet rays, rain and other environmental conditions. While in operation the motorhome is subject to twisting and flexing caused by rough roads, potholes and winding mountain roads. Maintenance is necessary not only to keep the exterior looking nice, but also to keep it in proper working order.

Fiberglass

Inspect the fiberglass exterior. Periodic **inspection** may reveal that flexing of the fiberglass exterior has created imperfections in the surface commonly known as “spider” or “hairline” cracks. A crack that has opened up to reveal the cloth weave threatens the integrity of the fiberglass. If the exterior exhibits signs of damage, prevent moisture penetration, particularly in freezing climates. Cover the area using plastic sheeting and/or tape, and have the damaged fiberglass repaired as soon as possible.

Roof Care & Seal Inspections

Wherever there is something affixed to the motorhome, such as the “beltline” or vent attached on the roof, there is a seal preventing water intrusion. There are many types of sealants and each has a specific use. While the beltline uses a silicone or urethane base sealant to prevent water intrusion, roof openings use an acrylic based sealant. Moisture intrusion can occur at any time for a number of reasons. Therefore regular sealant inspection and maintenance will greatly reduce the likelihood of moisture intrusion and costly repairs.

The motorhome is sealed at the factory. However, extreme weather conditions can shorten the life of the sealant while harsh road conditions can compromise sealant integrity. Maintaining sealant integrity is part of regular motorhome maintenance. Inspect all joints, seams and openings at least once every 6 months. While sealant integrity may appear fine, a small void under the right conditions can quickly cause major damage. Make a full interior inspection for signs of moisture intrusion every two weeks if the motorhome is in storage.

CAUTION

Inspect exterior seals, seams and joints for sealant integrity at least twice a year. Make a full interior inspection for water leaks every two weeks while the motorhome is in storage.

INSPECTING

Surface must be clean and dry. Inspect seal for voids, cracks, bubbling, peeling or pulling away. Sealant that looks fine without imperfections is acceptable

for continued service. Sealant that is old, cracking, flaking or bubbling will allow moisture intrusion and must be repaired.

WARNING

Inspecting sealant will require use of a ladder or scaffold assembly. Roof access is also required. Follow proper safety measures accordingly. Exercise extreme care whenever using a ladder/scaffold assembly. Avoid getting on the roof if it is icy or moisture laden as the surface can be very slick. Use judgment if inspection is considered dangerous. Have the motorhome inspected or sealed (if necessary) by a qualified service technician.

Sealant Replacement:

Carefully remove sealant that is cracking, flaking, bubbling, peeling or pulling away from the surface. The area under the removed sealant will need to be clean and dry before applying new sealant. Applying new sealant over a dirty or moisture laden surface will not allow proper adhesion. Sealant application may require simple hand tools and paper towels or rags for cleanup. Some sealants may be labeled hazardous or require chemicals for cleanup. Follow all of the manufacturer’s warnings and precautions when dealing with these substances.

WARNING

Some sealants may be labeled hazardous or require use of petroleum distillates for cleanup. Use proper precautions as suggested by the sealant or chemical manufacturer. Use of protective eye wear, gloves, respirator or open ventilation may be required. Use

judgment when working with chemicals. If health limits exposure to chemicals or inhibits skills or abilities, employ a qualified service technician to perform the tasks.

Sealant Types

Silicone Sealant:

Product Manufacturer Dow Corning Part # 999-A


This clear product is used on all roof openings such as around vents, skylights, any roof mounted antennas and ladder roof mounts. The sealant is applied as a “bead of caulk” where the equipment bases meet the roof. Old peeling sealant should be removed with nylon sticks or equivalent. Avoid using metal utensils which can scratch the painted surface. Use nylon sticks or equivalent. Avoid lacquer thinners or ketone based solvents as these chemicals can damage painted surfaces. Confirm that surface is clean and dry before a new application. Cut the tube at an angle with the smallest usable opening. Avoid a heavy bead as a little goes a long way. Use finger at a 45° angle on beaded surface to smooth out product. DO NOT moisten finger, use a disposable latex glove. Keep rags or paper towels handy for clean up. Use care when applying silicone and plan ahead before starting a bead. Look for obstacles that may impede application.

The roof air conditioners use a closed cell foam base gasket. No sealants are required. The roof air conditioners should be checked for tightness by the four mounting bolts located in each interior corner of the air conditioner roof opening. Torque specification is 40 to 50 in/lbs. The base gasket should be compressed to about 1/2".


Rubber Sealant:

Dolphin Part # 7589 UVR Elastiseal

This product is used on roof openings such as around vents, skylights, any roof mounted antennas and ladder roof mounts when large areas of a sealant are needed. Clean the old sealant that is lifting before applying the new. Make sure the roof is dry and free of dirt. This product is found in a tub container. Care should be used when near an edge, as the product will spread out. Masking tape may be used to mask around area to avoid mishaps.

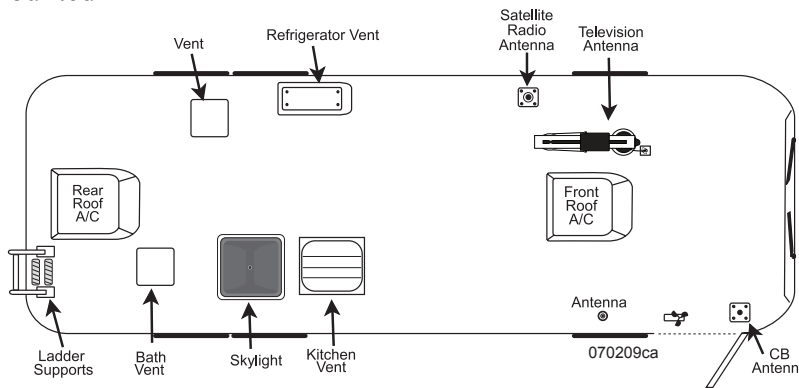

Typical Roof Layout: Inspect each item for sealant integrity. Roof A/C's use a special foam gasket.

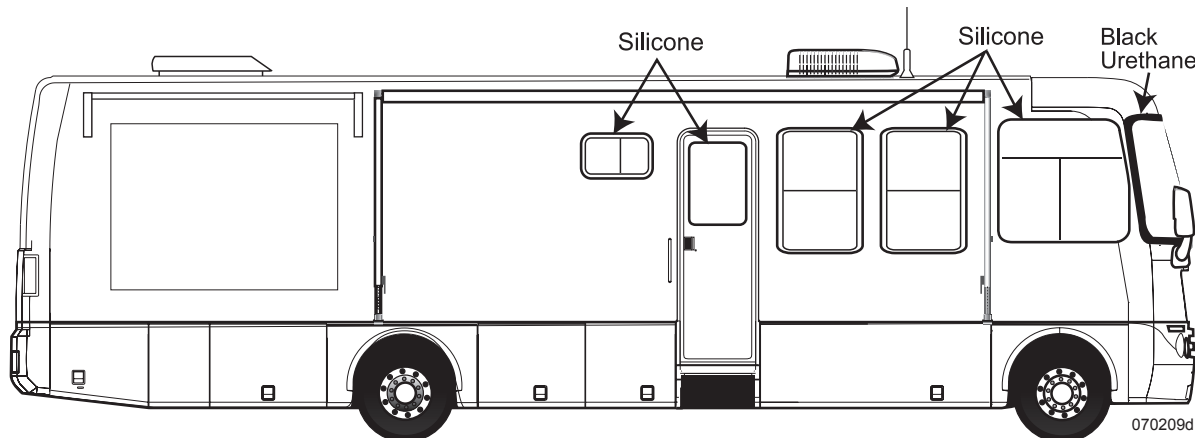

Typical Side View: Side window seals require silicone. Windshield requires black urethane

Acrylic Sealants:

Product Manufacturer Geocel Part # 2300

Used where items are sealed under a painted surface such as the metal corners of slide out rooms and roof mounted awning brackets. The material is specially formulated to allow paint adhesion.

Black Urethane:

Used for sealing the windshields, not to fill holes or other imperfections. Black urethane comes in a tube and it applies much the same way as silicone. Clean up using solvents such as paint thinner. Gloves are required as this considered a hazardous material.

Black Silicone Sealant:

Product Manufacturer Dow Corning Part #795

Used for sealing small areas or imperfections around windshields. The product is available in a tube. Clean up using solvents such as mineral spirits.

Clear Silicone:

Product Manufacturer Dow Corning Part # 999-A

Primarily used on the sidewalls around windows, doors, handles, beltline molding, latches and bases of surface mounted items such as clearance lights. Old peeling sealant should be removed with nylon sticks or equivalent. Avoid using metal utensils which can scratch the painted surface. Use nylon sticks or equivalent. Avoid lacquer thinners or ketone based solvents as these chemicals can damage painted surfaces. Confirm that surface is clean and dry before a new application. Cut the tube at an angle with the smallest usable opening. Avoid a heavy bead as a little goes a long way. Use finger at a 45° angle on beaded surface to smooth out product. DO NOT moisten finger, use a disposable latex glove. Keep rags or paper towels handy for clean up. Use care when applying silicone and plan ahead before starting a bead. Look for obstacles that may impede application.

Spray Foam:

This product is used as a sealant where a hole has been made for items such as water lines or wires that are coming through a floor or bulkhead opening.

INTERIOR CARE**Cockpit**

The cockpit area dashboard is a molded-fiberglass, vinyl-wrapped pod. The instrument panel is comprised of various gauges and switches. The dashboard and instrument panel each have different cleaning requirements. Clean the vinyl wrapped dash pod following the instructions under Vinyl Care in this section. In the event a blemish or small cut occurs in the vinyl, contact a professional upholstery repair service.

Clean the plastic or Plexiglas® instrument panels using a cloth dampened in a mild soap and water solution. Dry using a separate cotton cloth. Plastic polish products that will help to brighten the appearance of plastic or Plexiglas instrument panels are Novus Plastic Care®, a three-part system; Meguires® and Johnson Paste Wax®, which will require extensive buffing and rubbing.

Glass lens gauges can be cleaned using glass cleaner. Spray cleaner on the cloth, not directly onto the lens, to prevent over spray or runoff.

CAUTION

DO NOT allow glass cleaners to come in contact with the plastic. Most glass cleaning products are volatile to plastics, and will cause it to become brittle or dull the finish.

TIP

To determine if the lens is glass or plastic, tap the lens with a fingernail. Plastic lens will have a dull hollow sound whereas glass will have a clear ping sound.

FABRICS**General Care & Cleaning**

Special care needs to be taken when the motorhome is exposed to a very humid climate for an extended period of time. Protect the fabric from any unnecessary exposure to moisture. Cover all upholstery and make sure window coverings are down to protect fabrics from sun damage. Frequently used items require more attention than those items not regularly used.

If a spill occurs, blot the moisture as quickly as possible. **DO NOT** use soap and hot water as this may set a stain. Clean the spot as soon as possible.

Cleaning Upholstery Fabrics:

- ◆ Water-based cleaners are not recommended.
- ◆ If a spill does occur, blot the soiled area, **DO NOT** rub it.
- ◆ Some solvents may have an adverse reaction on a specific backing of the upholstery fabric and are not recommended.
- ◆ To prevent overall soiling, frequently vacuum or lightly brush to remove dust and grime.
- ◆ Clean spots using a mild water-free solvent or dry cleaning product.

- ◆ Clean only in a well ventilated area and avoid any product containing carbon tetrachloride or other toxic materials.
- ◆ Use a professional furniture cleaning service for overall cleaning.

Vinyl

Several areas of the motorhome, such as the dash, ceiling and items of furniture, may be covered in vinyl. The care and cleaning of these areas are as follows:

Normal Cleaning:

Most common stains can be cleaned using warm soapy water and a clear water rinse. Moderate scrubbing with a medium bristle brush will help to loosen soil from the depression of embossed surfaces. For stubborn stains use the following commercially available mild detergents in accordance with the manufacturer's instructions: Mr. Clean or Fantastik®.

Full strength rubbing alcohol or mineral spirits may be tried cautiously as a last resort on very stubborn stains if the above suggestions do not work. Indiscriminate use of any solvent, or solvent containing cleaner, can severely damage or discolor the vinyl. Stains may become permanent if they are not immediately removed.

NOTE

Detergents should never be used on a regular or repeated basis for normal cleaning.

CAUTION

Powdered cleaners containing abrasives, steel wool and industrial strength cleaners are not recommended for vinyl.

Bird Excreta & Vomit Stains:

Sponge the area with soapy water containing a diluted bleach until the stain is removed. Rinse thoroughly.

Urine Stains:

Sponge with soapy water containing a small amount of household ammonia. Rinse thoroughly with clean water.

Surface Mildew:

Wash with diluted bleach and use a soft brush for stubborn growth. Rinse repeatedly with clear, cold water.

Ballpoint Ink:

Wipe the stain immediately with rubbing alcohol in a well ventilated area.

WARNING

If flammable solvents such as alcohol, turpentine or varsol are used for cleaning, use only small quantities while in a well-ventilated area. Exercise proper caution by notifying any persons in the area. Keep away from any ignition source. Always wear protective gloves.

Oil-Base Paint:

Use turpentine in a well ventilated area to remove any fresh paint. Dried paint must be moistened using a semi-solid, gel-type stripper. The softened paint can be gently scraped away. Rinse with soap and water.

CAUTION

Lacquer solvent will cause immediate irreparable damage to the vinyl. **DO NOT use wax on vinyl upholstery as it will cause premature embrittlement and cracking. Dilute chlorine bleach before using. Never use full strength bleach. Paint strippers will remove the print pattern and damage the vinyl if it comes in direct contact.**

Latex Paint:

Fresh paint can be wiped off with a damp cloth. Hot soapy water will normally remove dried latex.

Tar or Asphalt:

Remove immediately. Prolonged contact will result in a permanent stain. Use a cloth lightly dampened with mineral spirits and rub the stain gently, working from the outer edge of the stain toward the center to prevent spreading. Rinse with soap and water.

Crayon, Mustard or Ketchup:

Sponge with mild soap and water. For stubborn stains that have set, use a cloth soaked in diluted mild detergent with gentle rubbing. Any remaining stain should be washed with diluted bleach. Rinse repeatedly with cold water.

Chewing Gum:

Scrape off as much gum as possible using a dull knife. Rub the gum with an ice cube to harden and for easier removal. In a well ventilated area, use a cloth saturated with mineral spirits and gently rub the remaining gum. Rinse thoroughly with clean water.

Lipstick, Grease, Oil, Make-Up or Shoe Polish:

Apply a small amount of mineral spirits with a cloth. Rub gently. Be careful not to spread the stain by smearing beyond the original source. Remove shoe polish immediately as it contains a dye which will cause permanent staining. Rinse thoroughly with clean water.

Candy, Ice Cream, Coffee, Tea, Fruit Stains, Liquor, Wine, Tanning Lotion or Soft Drinks:

Loose material should be gently scraped with a dull knife. Use lukewarm water and sponge repeatedly. Any soiled area that remains after drying should be gently rubbed with a cloth or dampened with a mild detergent solution. Rinse thoroughly with clean water.

Blood or Plant Residue:

Rub out spots using a clean cloth, soaked in cool water. For stubborn spots, use household ammonia and rinse repeatedly with a clean, wet cloth. **DO NOT** use hot water or soap suds as this will set the stain.

TIP

Vinyl requires periodic cleaning to maintain its appearance and to prevent the buildup of dirt and contaminants that may permanently stain or reduce the life of the vinyl if left untreated. Frequency of cleaning and procedures used depend upon the amount of use and the environmental conditions in which the vinyl is subjected. Tears or holes in the vinyl can be temporarily covered with clear tape to prevent further damage. Repairs should be made by a professional upholstery shop. Commercial repair products may contain lacquers and cause the vinyl to become brittle and more difficult to repair.

Leather**Spots & Spills:**

Absorb excess liquid immediately with a clean cloth or sponge. Use water only if necessary. Do not use a cleaning product. If water is used, clean the entire area where the spot occurred. An example would be the entire seat cushion or the entire arm. Allow to air dry. Do not dry the wet areas with hair dryers, etc.

Stubborn Spots and Stains:

Use lukewarm water and a mild soap to work up a thin layer of suds on a piece of cheesecloth. Scrub the surface. Rinse with a piece of clean, damp cheesecloth. Allow to air dry. Do not use saddle soap, cleaning solvents, furniture polish, oils, varnish, abrasive cleaners, soaps or ammonia water.

NOTE

These are recommended or suggested methods of cleaning. The manufacturer is not responsible for damage incurred while cleaning. Always test the cleaning method in an inconspicuous area first before applying to the entire area.

Ultra-Leather**Care Instructions:**

- ◆ Spot clean with mild soap and water.
- ◆ Air dry or dry quickly with warm setting of a hair dryer.
- ◆ For stubborn stains, use mild solvent.
- ◆ For tougher stains, try Fantastik® brand spray cleaner.
- ◆ Disinfect with a **5:1 NON-CHLORINATED** (only) bleach solution.
- ◆ Dry clean using commercial dry cleaning solvents only.
- ◆ Use a mild detergent for:
 - Red Wine, Liquor, Coffee, Tea, Cola, Milk
 - Ketchup, Mustard, Mayonnaise, Steak Sauce, Soy Sauce
 - Butter, Salad Oil, Chocolate, Lipstick, Make-up, Face Cream
 - Suntan Oil, Machine Oil, Urine, Blood

Removing ballpoint pen stains:

Wipe the stain off with ethanol (ethyl alcohol). Follow all manufacturer safety instructions when using chemicals.

If the stain remains, use the following procedure:

1. Dilute household bleach (sodium hypochloride) with the same amount of water. (One part to one part solution.)
2. Apply the bleach/water solution to a piece of tissue (do not apply too much). Place the tissue on the stained surface and cover it with polyethylene film to prevent the solution from drying.
3. Periodically remove the tissues to check on the condition of the stain. When the stain is almost gone, remove the tissues completely. Do not leave on for more than one hour.
4. Wash the stain with sufficient amount of clean water.

CAUTION

If there is residue of bleach, the polyurethane resin and back cloth will deteriorate.

Neutralize bleach by the following method:

- ◆ Place a piece of tissue, as in Step 2, and apply hydrogen peroxide solution (15%).
- ◆ Leave the solution on for approximately 30 minutes, then remove the tissue.
- ◆ Completely remove the residue of hydrogen peroxide on the Ultra-leather with water.

Sodium hypochloride is the only chemical that will remove ballpoint pen stains. However, this chemical may cause polyurethane to yellow or the back cloth to deteriorate. It is recommended to remove ballpoint pen stains as early as possible with ethanol.

For more information, please call:
Ultrafabrics, LLC
Customer Service: 1-877-309-6648

FLOORS

Carpet Cleaning

Spot Removal Procedures:

- ◆ Act quickly when anything is dropped or spilled. Remove spots before they dry.
- ◆ Blot liquids with a clean, white absorbent cloth or paper towel.
- ◆ For semi-solids, scoop up with a rounded spoon.
- ◆ For solids, break up and vacuum out as much as possible.
- ◆ Pretest the spot removal agent in an inconspicuous area to make certain it will not damage the carpet dyes.
- ◆ Apply a small amount of the cleaning solution recommended for the particular spot. **DO NOT** scrub. Work from the edges of the spot to the center. Blot thoroughly. Repeat until spot is removed.
- ◆ Follow steps on the Carpet Spot Removal Guide.
- ◆ After each application, absorb as much as possible before proceeding to the next step.
- ◆ Absorb remaining moisture with layers of white paper towels, weighted down with a non-staining glass or ceramic object.
- ◆ When completely dry, vacuum or brush the pile to restore texture.

- ◆ If the spot is not completely removed, contact a professional carpet cleaner.

Cleaning Solutions:

- A. Dry Cleaning Fluid:** A nonflammable spot removal liquid, available in grocery and hardware stores.
- B. Nail Polish Remover:** Any acetate, which often has a banana fragrance. **DO NOT** use if it contains acetone.
- C. Detergent Solution:** Mix two cups of cold water and 1/8 teaspoon mild liquid detergent (no lanolin, non-bleach).
- D. Warm Water:** Lukewarm tap water.
- E. Vinegar Solution:** One cup white vinegar to one cup water.
- F. Ammonia Solution:** One tablespoon household ammonia to one cup water.
- G. Stain Removal Kit:** Available from retail carpet stores or professional cleaners.
- H. Call Professional:** Additional suggestions, special cleaning chemicals or the ability to patch the area may be available.
- I. Permanent Change:** Due to the nature of the stain, there may be color loss. The carpet has been permanently dyed or the carpet yarns have been permanently damaged.

NOTE

While the recommended cleaning agents have proven to be effective, some stains may become permanent.

	A	B	C	D	E	F	G	H	I
Use the solution specified in order from 1-8 until stain is removed.	DRY CLEANING FLUID	NAIL POLISH REMOVER	DETERGENT SOLUTION	WARM WATER	VINEGAR SOLUTION	AMMONIA SOLUTION	STAIN REMOVAL KIT	CALL PROFESSIONAL	PERMANENT CHANGE
SPOTS									
Acid				2		1		3	*
Acne Medication		1		2	5	4	3	6	*
Alcoholic Beverage			1	4	3	2			*
Ammonia				2	1				*
Bleach		1	2					3	*
Blood		1	3		2	4			
Candle Wax	1					2			
Cement & Glue	2	1	3		5	4	6		*
Chalk		1	2						
Charcoal		1	2						
Chewing Gum	1								
Coffee			1	3	2		4	5	*
Cosmetics		2	1	3	6	5	4	7	*
Crayon	1		2	3					
Drain/Toilet Cleaner			2	1	3			4	*
Dye	1		2		4	3	5	6	*
Food			1	4	3	2	5	6	*
Fungicides, Insecticides, Pesticides	1		2	5	4	3	6	*	
Furniture Polish (Water Based)			1	4	3	2	5	6	*
Furniture Polish (Solvent Based)	2	1	3	6	5	4	7	8	*
Furniture Stain	2	1	3	6	5	4	7	8	*
Graphite		1	2						
Grease	1	2	3				4	5	*
Ink	2	1	3	6	5	4	7	8	*
Iodine	1		2	5	4	3	6	7	*
Lipstick	2	1	3	6	5	4	7	8	*
Medicine	2	1	3	6	5	4	7	8	*
Merthiolate			1	4	3	2	5	6	*
Nail Polish	2	1	3				4	5	*
Oil	1		2	4		3		5	*
Paint	2	1	3				4	5	*
Plant Food			1	4	3	2	5	6	*
Rust			2	3	1		4	5	*
Shoe Polish	2	1	3	5		4	6	7	*
Soft Drinks			1	4	3	2	5	6	*
Soot	1		2	3				4	*
Tar	1						2	3	*
Toothpaste			1						
Urine			1		2		3	4	*
Vomit			1	4	3	2	5	6	*

* While recommended cleaning agents are effective, some stains may become permanent.

Tile Floor

Tile floors vary in porosity and surface irregularities. Regular maintenance is important to keep the tile in the motorhome looking showroom new. Once the slide-out has been extended, keep the tile floor clean to prevent dirt from scratching the tiles prior to retracting the slide-out.

NOTE

Tile is ceramic and will chip or break. Avoid dropping heavy or sharp objects on the tile.

Cleaning Tile:

Use a damp sponge mop or a cloth to clean tile. If moderate staining occurs, cleaning with a window cleaner such as *Windex*® should do the job. A mild solution of hot water and all-purpose cleaner for tile floors, walls and countertops can also be used. Rinse well with clear water and dry with a soft cloth to prevent streaking. Avoid cleaning tile with soap. Soap forms a film to dull the luster. Soap also promotes the growth of mildew and bacteria. **DO NOT** use powdered cleaners on unglazed tile floors. Undissolved powder will dull the surface. Grout sealers are available that protect the porous surfaces. If a sealer is used, follow the sealant manufacturer guideline for application. Never use sealers on unglazed tile. With the exception of terra cotta, which may be oiled or waxed, tile does not need to be polished or buffed to maintain its finish.

NOTE

Before using any solution to clean the tile, check the manufacturer's warning label to ensure safety of the

product. If there is any doubt, apply several test patches of the solution in an inconspicuous place to determine product suitability.

Grout:

Grout used is a two part concrete mix and can develop surface cracks over time. In motorhome application, due to the constant flexing of the flooring, this process may accelerate. If the grout requires cleaning, scrub with a plastic brush. **DO NOT** use steel wool as small particles may remain and produce unsightly stains.

Laminate Floor

Laminate flooring used in the motorhome provides style, durability and ease of maintenance. This high-pressure laminated flooring is designed to be incorporated as a floating floor.

Laminate flooring is constructed of three main material components. The surface, similar to many countertops, contains aluminum oxide particles to form an extremely hard, durable outer layer. The carrier, or core layer, is constructed from high density fiberboard. A tongue and groove design provides a tighter bond. The backer or bottom layer is also made of laminate for strength.

Cleaning and Maintenance:

For everyday cleaning, vacuum the floor to remove dirt and debris. It is recommended to occasionally mop the floor using a cotton string mop and a minimal amount of water. Use a mixture of soap-free household cleaner (either

vinegar or ammonia work well) and water for a more thorough cleaning.

SHOWER

Showers are susceptible to soap build-up. To control mildew growth, spray the shower with household chlorine bleach. Allow it to stand for five minutes, then rinse with clear water. Clean the glass shower doors with window cleaner on a weekly basis to maintain shine. If water spots cannot be removed from glass, rub lightly with the flat edge of a razor blade to remove deposits.

To prevent excessive moisture and a continual growth of mildew, use the shower only with adequate ventilation. The sealant in a regularly used shower should be replaced once a year. To replace sealant, remove the old sealant using a sharp non-metallic instrument. Apply a new sealant, which can be found at most recreational vehicle supply stores.

CEILING

The ceiling of the motorhome can be a variety of materials or fabrics:

Hardwood, Vinyl and Decorated Paneling:

 
Certain cleaning agents will affect the surface on both printed and unprinted vinyl. Use only a mild, non-abrasive detergent and warm water with a soft cloth or sponge to clean. **DO NOT** use bleach, alcohol, oil-based spray cleaners or cleaning agents that contain solvents, citrus oil or harsh chemicals.

WALL COVERINGS

Immediately remove solvent based or pigmented substances from wall coverings. **DO NOT** use abrasive cleaners containing chlorine bleach or solvents. *Fidelity* and *Jolie* brands are recommended. Always begin with a mild detergent or soap and warm water. To remove normal dirt, clean with a soft sponge. Rinse and wipe dry.

Care for the Tower Wall Covering:

Remove ordinary stains with mild soap and warm water. Sponge on. Rinse well and dry with a soft cloth. To remove ball point pen, blood, lipstick, etc., use a sponge or soft bristle brush and *Formula 409*®, *Fantastik*® or a similar product. Rinse well and dry. Finish cleaning by applying full strength isopropyl alcohol with a sponge or soft brush. Rinse well and dry.



Care for the Satinesque Wall Covering:

Remove stain quickly to minimize the reaction on the wall covering, especially if the stain is solvent-based or pigmented. **Examples:** nail polish, oil, shampoo, lacquer, enamel, paint, ink and lipstick.

Begin cleaning the stain with a mild soap-based detergent; and if necessary, move to a stronger cleaner such as household bleach, liquid household cleaners or rubbing alcohol. Before applying a stronger cleaner, test the cleaning agent on a small inconspicuous portion of the wallcovering to ensure the cleaner does not affect the color or gloss of the wall covering.

Stain Removal Procedures for Specific Stain Types:

Normal Dirt:

Remove normal dirt using a mild soap or detergent and warm water. Allow it to soak for a few minutes then rub briskly with a cloth or sponge.

Nail Polish, Shellac or Lacquer:

Remove liquid using a dry cloth. Use care not to spread the stain. Quickly clean the remaining stain with rubbing alcohol. Rinse with clean water.

Ink:

Remove immediately by wiping with a cloth dampened in rubbing alcohol. Rinse with clean water.

Chewing Gum:

Rub with an ice cube to cool and harden. Gently pull off the bulk of the gum. Remove remaining gum with rubbing alcohol.

Pencil:

Erase as much of pencil mark as possible. Wipe remaining marks with rubbing alcohol.

Blood, Feces or Urine:

Remove these staining substances as quickly as possible. Wash the stained area with a strong soap. If the stain does not disappear, rinse the soapy area thoroughly with clean water. Mix a solution of 50% water and 50%

household bleach. Clean the stained area with the bleach solution. Rinse with clean water.

WOOD CARE

For general cleaning, regularly wipe wood surfaces using a soft cloth lightly dampened with clear warm water. Thoroughly dry to prevent streaking. For stubborn stains, use a clean cloth dampened with a solution of mild non-alkaline soap (dishwashing liquid) and water and rinse. Dry thoroughly, buffing in the direction of the wood grain. Never use abrasive cleaners, scouring pads or powdered cleansers. Polishing products used on the solid wood surface depends on individual preference. Always follow product instructions.

Excessive dampness, dryness, heat, or cold can damage solid wood finishes. Sunlight can change the color or age the wood. Never allow moisture or spills to stand, always blot dry immediately. Solvents, alcohol, nail polish and polish removers, as well as harsh cleaners, should not be used on finished wood surfaces.

Minor damage to solid wood surfaces can be repaired quickly and effectively with a bit of hard work, some careful attention to details, and most importantly, the right materials. However, any wood repair or finishing job is best left for a professionally trained individual.

NOTE

It is important to inform the service technician of any products used for the care and cleaning in the event of wood repairs.

Sanding and Sandpaper:

The following table is a general guide, but this may vary with wood type. The key to sanding is using the right sandpaper for the repair that is needed. Always sand with the grain.

GRIT	GRADE	USE
80-120	Medium	Smoothing the surface, removing small marks.
150-180	Fine	Final sanding prior to finishing.
220-240	Very Fine	Sanding between coats of sealing.
280-320	Extra Fine	Removing dust spots or mark between finish coats.
360-600	Super Fine	Removing luster or surface blemishes.

Steel Wool:

Abrasive material composed of long steel fibers of varying degrees of fineness that are matted together. Coarser grades are used to remove paint and other finishes; the finer grades for polishing or smoothing a finished surface.

Nail Holes and Small Cracks:

Fill nail holes and small cracks with wood putty or dough for unstained woods prior to any sanding. Stained finishes require filling holes and cracks after the stain has been applied. Putty should match the stain closely in color.

TIP

A little sawdust and wood glue can be used to make putty for end grains.

Scratches and Nicks:

“Quick and simple” rarely describes repairs to stained wood finishes; however, a few tricks used by professional woodworkers can be tried to repair nicks and scratches.

Fixing scratches in stained woodwork:

Light scratches will often disappear when carefully rubbed with furniture polish or paste wax. When scratches appear lighter than the surrounding dark-stained woodwork, it usually means either that the scratch goes through the stain into the wood or that the varnish is flaking off. Deeper scratches can be hidden by carefully rubbing with a piece of oily nut meat such as Brazil nut, black walnut or pecan. Be careful to rub the nut meat directly into the scratch to avoid darkening of the surrounding wood. Color the scratch with brown coloring crayon or liquid shoe dye (especially good on walnut). Always test a procedure on an inconspicuous area on the wood to ensure no damages to the finish occurs.

Staining the scratch with iodine:

Mahogany - Use new iodine.

Brown or Cherry Mahogany - Use iodine that has turned dark brown.

Maple - Dilute one part iodine with one part denatured alcohol.

Commercial scratch removers, or stick wax to match the wood finish, can also be used. After the scratch has been hidden, polish or wax the entire area. Deep scratches should be repaired and finished by a professional.

Dents:

Small dents may be repaired by using steam. To raise a small dent, place a damp cloth over the area and hold a medium-hot iron on it. The steam causes the wood fibers to swell back into place. It may be necessary to repeat this process until the dented area is level with the surface. Allow the area to dry.

Restoring the clear finish:

Check the scratches carefully. If flaking varnish is visible with dark-stained wood underneath, only the clear finish may need to be restored. Rub the loose varnish with fine steel wool or fine synthetic steel wool until you have removed the flaking varnish and slightly roughened a small area of the finish surrounding the scratch. With the tip of a rag, a small brush, or even a cotton swab, apply a thin coat of wipe-on finish. Apply finish to the damaged area only. Several coats may be needed to hide the scratch.

Re-staining the wood:

If bare wood is visible at the bottom of the scratch, the wood will need to be re-stained. To remove damaged varnish, lightly roughen a small area around the scratch with sandpaper, steel wool or synthetic steel wool. Find a stain that is a shade lighter than the wood finish. Stain the bare wood with a very small amount of stain on a rag, brush or cotton swab. If the color is too light, apply additional coats. Rub away excess stain with a dry rag. If the wood becomes too dark, use a rag moistened in mineral spirits to lighten the wood. Select a lighter color stain and continue.

Several companies have simplified this repair process by designing oil-based wood stain into marker-like containers to rub on to the scratch. Torn and scratched wood fibers will absorb stain and darken quickly. Start with a stain color that is lighter than the original finish. A second coat can always be applied if the color of the first coat is too light. Once the color is blended, patch the clear finish as described above and apply a wipe-on finish.

COUNTERTOPS

Solid Surface

Routine Care:

The motorhome solid surface countertops and sinks have a matte/satin finish. Soapy water or ammonia-based cleaners will remove most dirt and stains from all tops and bowls. Individual techniques may be used to remove different stains. Follow the recommendations below.

Cleaning the Countertops:

- ◆ **Most dirt and stains:** Use soapy water or ammonia-based cleaner.
- ◆ **Water marks:** Wipe with damp cloth and towel dry.
- ◆ **Difficult stains:** Use soft scrub and a grey *Scotchbrite* Pad.
- ◆ **Disinfecting:** Occasionally wipe surface with diluted household bleach (one part water and one part bleach).

Cleaning the Solid Surfaces Sink:

Occasionally clean by using *Soft Scrub Liquid Cleanser* and a grey *Scotchbrite* pad. Scrub the sink, rinse and towel dry.

Removing Cuts and Scratches:

Solid Surface countertops are completely renewable. Use the following instructions to remove minor cuts and scratches.

- ◆ Sand area starting with 180 grit sandpaper, working your way up to 2000 grit or until blemish is gone and renewed finish is achieved.
- ◆ Never sand in one small area. Feather out lightly at each increase in sandpaper grit to blend restoration.

Preventing Heat Damage:

Hot pans and heat-generating appliances, such as frying pans or crockpots, can damage the surface. To prevent heat damage, always use a hot pad or a trivet with rubber feet to protect the surface.

Other Important Tips:

Avoid exposing the solid surface to chemicals such as paint removers or oven cleaners. If these chemicals come in contact with the Solid Surface, quickly wash with water. Avoid contact with nail polish or nail polish remover. If contact is made, quickly wash with water.

NOTE

DO NOT cut directly on the solid surface. When pouring boiling water into the Solid Surface sink, run the cold water faucet to dilute the excess heat.

Laminate

Clean laminate countertops with a damp cloth or sponge. Use a spray cleaner to remove

stubborn stains. Avoid using harsh abrasives, scouring powders, peroxides or bleaches as these products may dull or damage the surface. Avoid contact with dyes, bleaches and indelible inks used on food packages. Do not use laminated countertops as a cutting board. Laminated countertops are resistant to minor heat; however, hot pans, irons and lit cigarettes damage the surface. Use hot pads under pans taken directly from the stovetop.

STAINLESS STEEL SURFACES

Clean stainless steel once a week with a damp sponge. Apply stainless steel cleaner/polish with the grain, not across, using a non-abrasive cloth or sponge. **DO NOT** use steel wool, wire brushes or abrasive sponge pads. These will mar the finish. Cleaner containing chloride is not recommended; however, if used, thoroughly rinse the surface to prevent corrosion. To avoid water spots, **DO NOT** allow water to evaporate on the surface.

WINDOWS

Water Spots:

Glass will develop water spots when not properly cleaned. Water spots are magnified on a reflective finish. Use a squeegee immediately after washing to reduce water spotting. To remove stubborn water stains from reflective glass we recommend *Cerium Oxide Polishing Compound*, made by C.R. Lawrence, available at most glass shops.

Condensation

Condensation occurs from water vapor present in the air. More vapor added by breathing, bathing, cooking, etc. collects wherever there is available air space. When the temperature reaches the dew point, water vapor in the air condenses and changes to liquid form.

Controlling Moisture Condensation:

Reduce or eliminate interior moisture condensation during cold weather by using the following steps:

- ◆ Partially open the roof vents and windows so that outside air can circulate into the interior. Increase the ventilation when large numbers of people are in the motorhome. Even in raining or snowing conditions the air outside will be far drier than interior air.
- ◆ Install a dehumidifier. Continuous use of a dehumidifier is effective in removing excess moisture from interior air. Using a dehumidifier is not a cure-all, however, it will reduce the amount of outside air needed for ventilation.
- ◆ Run the range vent fan when cooking and the bath vent fan (or open the bath vent) when bathing, to reduce water vapor. Avoid excessive boiling or use of steam producing hot water.
- ◆ **DO NOT** heat the motorhome interior with the range or oven. Heating with the range or oven increases the risk of toxic fumes and depletes oxygen. Open flames also add moisture to the interior air and increase condensation.

- ◆ In very cold weather, leave cabinet and closet doors partially open. Air flow will warm and ventilate the interior storage compartments and exterior walls to reduce or eliminate condensation and prevent the possibility of ice formations.

WINDOW TREATMENTS

Mini-Blinds

Dusting:

Regular dusting will maintain the appearance of the mini-blinds. Keep aluminum blinds looking their best by periodically wiping with a soft cloth or a dusting mitt. By tilting the slats down, not quite closed, most of the top surface of each slat can be cleaned. Blinds may be cleaned while hanging in place using this method.

Vacuuming:

For deeper cleaning, vacuum gently with the soft brush attachment of a vacuum cleaner.

Compressed Air or Hair Dryer (non-heat setting):

Blow dust off each slat. Dust will be air-borne using this method so ventilate the motorhome.

Spot-Cleaning:

Spot-clean shades and blinds using a soft cloth or a moistened sponge with lukewarm water. Add mild detergent, if needed. Blot gently to avoid creasing. In a dusty environment, the blinds may need to be cleaned regularly using a sponge or dampened soft cloth. Use warm (not hot) water and a mild detergent that does not contain abrasives. Rinse the blinds using a clean

cloth and water to prevent water spots. Place a towel directly under the blinds to absorb water that may drip.

Ultrasonic cleaning:

Professional ultrasonic cleaning may be preferred.

Day/Night Shades

Guidelines for care and maintenance of polyester blended day/night shades:

- ◆ Leave Day-Night shades in the up position when not in use to help the shades hold their shape.
- ◆ String tension for the shades should be equal.

Dusting:

Vacuum with a brush attachment or use a dusting tool on a regular basis.

Cleaning:

A dry foam cleaner may be used for soil and dirt removal. Follow all directions on the container, or a cleaning solution of ¼ ounce clear liquid soap to 8 ounces water.

NOTE:

DO NOT use colored liquid soap as a stain may appear when fabric dries.

MOLD & MILDEW

What is Mold?

Mold is a type of fungus that occurs naturally in the environment and can leave a musty odor, discolor fabrics, stain surfaces and cause considerable damage to the motorhome.

What Does Mold Need to Grow?

Mold requires a food source such as grease or soil. Synthetic fabrics, such as acetate, polyester, acrylic and nylon, are mildew resistant, but soil on the surface of these fabrics are susceptible to mold.

Temperate climate and moisture also help to cultivate mold growth. Moisture in the motorhome can result from unattended spills, leaks, overflows and condensation. Moisture allowed to remain on a growth medium can develop mold within 24 to 48 hours. Minimizing moisture inside of the motorhome can reduce or eliminate favorable mold growth conditions. Good housekeeping and regular maintenance are essential in the effort to prevent or eliminate mold growth.

Consequences of Mold:

All mold is not necessarily harmful, but certain strains of mold have been shown to cause, in susceptible persons, allergic reactions, including skin irritation, watery eyes, runny nose, coughing, sneezing, congestion, sore throat and headache. Individuals with suppressed immune systems may risk infections. Some experts contend that mold causes serious symptoms and disease which may even be life threatening. However, experts disagree about the level of mold exposure that may cause health problems,

and about the exact nature and extent of the health problems that may be caused by mold. Moreover, the Center for Disease Control states that a casual link between the presence of toxic mold and serious health conditions has not been proven.

Standards or threshold limit values for concentration of mold or mold spores have not been set. Currently, there are no EPA regulations or standards for airborne mold contaminants. There is simply no practical way to eliminate all mold and mold spores in the indoor environment. For example, studies have shown that ozone cleaners are not effective at killing airborne mold or surface mold contamination.

Controlling Mold Growth:

The motorhome owner should eliminate mold growth in the motorhome. Take the following steps to eliminate mold growth in the motorhome:

1. Carefully examine items for signs of mold before loading them in the motorhome. Potted plants (roots and soil), furnishings, clothing and linens, as well as many other household items, may contain mold.
2. Regular vacuuming and cleaning will help reduce mold levels. Mild bleach solutions and most tile cleaners are effective in eliminating or preventing mold growth.
3. Indoor humidity can be reduced by 30 to 60% when venting clothes dryers to the outdoors. Ventilate the kitchen and bathroom by opening windows, using exhaust fans or a combination of both. Operating the air conditioning will remove excess moisture in the air, and help facilitate evaporation of water from wet surfaces.
4. Promptly clean up spills, condensation and other sources of moisture. Thoroughly dry any wet surfaces or material. **DO NOT** let water pool or stand in the motorhome. Promptly replace materials that cannot be thoroughly dried.
5. **Inspect** for leaks on a regular basis. Look for discolorations or wet spots. Repair leaks promptly. **Inspect** condensation pans (refrigerators and air conditioners) for mold growth. Take notice of musty odors and any visible signs of mold.
6. Should mold develop, thoroughly clean the affected area with a mild solution of bleach. First, test to see if the affected material or surface is color safe. If mold growth is severe, call on the services of a qualified professional cleaner.
7. If mold cannot be removed, throw the item away.

Whether or not a motorhome owner experiences mold growth depends largely on how the motorhome is managed and maintained. As a manufacturer, our responsibility is limited to things that we can control. As explained in the written warranty, we will repair or replace defects in the construction (defects defined as a failure to comply with reasonable standards of motorhome construction) for the Limited Warranty coverage period provided. **THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR DAMAGE CAUSED BY MOLD THAT MAY BE THE CONSEQUENCE OF OR ASSOCIATED WITH DEFECTS IN THE CONSTRUCTION.**

PEST CONTROL

Regardless of the area one lives in or travels to, it is safe in stating there will be pests waiting. These pests are not only annoying; they can pose a health risk and create serious damage to the motorhome.

- ◆ Common pests include insects such as ants, cockroaches, termites, flies, pantry pests and wasps as well as wildlife such as rodents, raccoons, bats, birds and snakes. It is important to remember that pests are searching for food, water and a place to live. Eliminating any one of those elements will help control the pest infestation. Take immediate steps to remove pests as soon as their presence is detected.

Steps to help control pests:

- ◆ Reduce clutter inside the motorhome and storage bays. All storage items, particularly food (including pet food), should be kept in tightly sealed containers. Seal all cracks and holes, and insure that window, door and vent screens are securely in place.
- ◆ Routinely clean the motorhome, including storage bays. Wipe down the water bay. Promptly remove all crumbs from areas where food is regularly prepared and eaten. Garbage should be placed in a sealed container and removed to an outside receptacle daily. Only put out pet food that will be immediately eaten.
- ◆ Keep foods such as flour, cereal, spaghetti and pet food in re-sealable containers with tight lids.
- ◆ Sweep and vacuum often (especially in eating areas) to help eliminate a food source for pests.
- ◆ Seal cracks, crevices, and gaps around doors and windows.
- ◆ Many pests need moisture to successfully live and reproduce. Limit their access to water or moisture sources by sealing any cracks and leaks in pipes and faucets. Reduce moisture in the motorhome by controlling condensation, immediately wiping up spills and promptly repairing leaks. Be extra alert around areas that attract rodents and insects, including the sewer hose, fresh water hose, bay doors and items that may be leaning against the outside of the motorhome, such as fishing poles and golf clubs.

- ◆ When the motorhome is stored outdoors, clear the surrounding area of all rodent friendly hiding places: shrubs, trees and clutter. Completely seal the underside of the motorhome. Wire mesh will work well to prevent points of entry, but beware of blocking necessary air vents. Prior to operating the motorhome after storage, remove all insect and animal nests that may have developed around vents, engine compartments, the exhaust pipe and in the wheel wells.

Rodents:

Rodents may chew through wires or build nests in components of the motorhome. Signs of rodent infestation include droppings, shredded material or chewed furniture fabrics and vinyl. Rodents like to build nests with wire insulation, and are commonly attracted to the outside coating of 120 Volt AC wiring more than 12 Volt DC wiring.

NOTE

Although the back cap of the motorhomes is well sealed, rodents are capable of chewing through the foam insulation and that area should be routinely inspected.

If there are signs of rodent infestation around the motorhome, place traps or poisons in suspected areas. Keep the traps and poisons safely away from pets and children. Cheese is not the best bait for a rodent trap. Use peanut butter or chocolate in small amounts. Place the bait on the trigger of the trap to induce the rodent to climb onto the trigger to reach the bait. Rodents do not limit invasion to unused vehicles.

Insects:

Eliminate insects when signs of infestation appear. If you are unable to identify the type of insect, purchase sticky traps from the hardware store and place the tape where the insects have been seen. Once a sample is caught, seek assistance in identifying the insect to determine what will be required to remove the infestation.

Regularly **inspect** the exterior of the motorhome for signs of a budding wasp nest, and promptly destroy small nests before they become too large.

Spiders can be in any structure. Immediately remove spider webs. Some types of spiders like to nest on top of the diesel tank and around the diesel hoses. Dispense of spiders using a vacuum. Use care to capture the spider and egg sacs. Throw the vacuum bag away in a sealed bag.

Fruit flies invade the motorhome by attaching to fresh fruits and vegetables. Determine what food items are generating the flies and discard that item in an outdoor trash receptacle. Fruit flies can be eliminated with a homemade trap. Pour a few ounces of vinegar into a cup and cover the cup with plastic wrap. Secure the wrap with tape or a rubber band and poke a ¼" hole in the plastic. Place the trap in the area where fruit flies are present.

Ants live in colonies. Only a fraction of the ant colony will leave to seek food. Spraying pesticides will only kill the ants that are away from the colony. The colony must be destroyed to eliminate all ants. Keep ants away from the sewer hose by spraying the hose ends with a soap and water solution.

Fleas can be removed by properly treating pets with a veterinarian approved treatment and by

thoroughly cleaning the motorhome. Vacuum vinyl areas and tile floors to remove dust, flea larva and flea eggs. Follow by thoroughly washing those areas with soap and water. Carpets must be vacuumed and treated with a residual flea control product labeled safe for indoor carpet and furniture use. Perform the cleaning treatment daily for three days to ensure that all fleas have encountered the treatment.

Flying outdoor insects are attracted to bright light. Yellow porch light covers on the motorhome work to discourage insect invasion. During nighttime hours insects will be attracted to docking lights, or other bright exterior lighting.

If the presence of moths is detected inside of the motorhome, usually by holes appearing in material, clean the affected clothing and all other items stored in the same area. Follow by completely cleaning the closet, dresser or storage area. If cracks are detected, seal the cracks and treat the area with a properly labeled indoor pest control product.

Birds:

Even birds can be considered pests, particularly when the motorhome is parked in the flight path of a flock. Bird droppings are hard to remove and will leave stains. Prevent permanent staining to the motorhome roof by regularly cleaning the surface to remove all bird droppings.

Damage from Pests:

Lizards have been known to crawl into the inverter and short out the circuit board. Lizards can be captured using glue traps. To remove the lizard from the trap, dissolve the glue with

vegetable oil and release it outside and well away from the motorhome. A scorpion will glow blue-green in UV light. If the presence of scorpions in the motorhome is suspected, investigate with an UV black light during the nighttime hours.

Best sources of information about common household pests:

The Internet is a great place to find information about common pests. The National Pest Management Association website can be useful resource about common pests. Another good source for information are colleges and universities with entomology (study of insects) departments.

Electronic pest control devices can be costly and most likely will not work on all types of rodents and insects. When calling on the services of a professional to combat pest infestation, call a reputable business that is licensed in handling pesticides. Check references. Explain that you are seeking assistance for a motorhome, as treatments may differ from standard household jobs.

If a pest problem is suspected in the motorhome, consider professional pest control help. The following guidelines can be used for selecting a pest control service:

- ◆ Seek referrals from those who have used pest control services. Inquire about the type of pest problem encountered and if they were satisfied with the service.

- ◆ Membership in the national, state or local pest control associations is a good indicator that the company has access to modern technical information and is committed to further education.
- ◆ Reach a complete understanding with the company before work starts; find out what the pest is, how the problem will be treated, how long the period of treatment will be, and what results can be expected.
- ◆ Be sure to understand what is guaranteed and what is not.

STORAGE

Short Term

Short term storage is defined as storing the motorhome for a period of thirty days or less. Properly preparing the motorhome during periods of short term storage will make bringing the motorhome out of storage a much easier process. Winterize the plumbing system if the motorhome is stored in winter months, or if stored when temperatures are below 32° F.

Checklist - Short Term Storage:

- ◆ Retract the slide rooms. **DO NOT** store the motorhome with slide rooms extended.
- ◆ Shut off all appliances. Close the primary LP-Gas valve.
- ◆ Remove all articles from refrigerator/freezer and clean thoroughly. Prop doors open to prevent mildew.
- ◆ Holding tanks should be drained and fresh water system winterized with potable antifreeze and winterize the

- plumbing system using air pressure.
- ◆ Retract and secure all awnings.
- ◆ Turn **OFF** the interior house power.
- ◆ If applicable, cancel the Automatic Generator Start program.
- ◆ Batteries should be stored fully charged. Batteries stored in a discharged state will readily freeze.
- ◆ If possible, position the motorhome so the batteries are accessible for charging or changing without having to move the motorhome.
- ◆ If available, leave the motorhome hooked to shore power. Leave the main battery disconnect switches **ON**.
- ◆ Careful placement of a small heat source in the interior will help control moisture. Desiccate filter systems will help remove interior moisture.
- ◆ If AC power is not available, turn the chassis battery disconnect switch **OFF**.
- ◆ If possible, store the motorhome inside a storage building.
- ◆ If stored outside, **inspect** all seams and seals twice a month for possible leakage.
- ◆ Store the motorhome with a full fuel tank to minimize moisture condensing at top of fuel tank.
- ◆ Vents and windows should be closed to prevent wind driven rain entrance.
- ◆ Tires should be stored at maximum inflation pressure.
- ◆ A full interior **inspection** for water leaks should be made twice a month. Be sure to check behind all cabinet doors and drawers.

Long Term

Long term storage of the motorhome can be defined as leaving a motorhome unattended for a period of thirty days or more. A motorhome requires protection from the elements just as a house or a car would. When left out in the environment without proper storage or maintenance, a motorhome, house or car is vulnerable to the moisture and oxidation processes inherent in the environment.

NOTE

The natural process of condensation will occur with temperature changes of 30° F or more in one day. Humidity readings of 60% or greater will allow the accumulated moisture to remain for extended periods of time.

If AC power is not available in storage area:

- ◆ Turn **OFF** all appliances.
- ◆ Turn **OFF** the interior battery cut-out switch.
- ◆ If possible, situate the motorhome so the batteries remain accessible. This allows a battery to be charged or replaced without moving the motorhome.
- ◆ Charge the batteries to a full state of charge.
- ◆ If applicable, cancel the Automatic Generator Start program.
- ◆ Turn the main battery disconnects **OFF**.
- ◆ When stored outside, check battery voltage while the motorhome is in storage.

- ◆ Preventive measures should be used if the voltage readings are low. When using preventative measures, taking the motorhome out of storage or moving the motorhome in case of emergency is a much easier process.

NOTE

Batteries in a low state of charge will readily freeze. Freezing will damage the battery.

If AC power is available:

The chassis battery disconnect switch should remain **ON**. The inverter will charge both house and engine battery banks. A 30 Amp shore power service will be more than adequate.

CAUTION

A 20 Amp service using light duty extension cords and the required adapters create serious voltage losses. Line voltage loss and the resistance at each electrical connection is a hazardous combination and should be avoided. Damage to sensitive electronic equipment may result!

Type of surface to park and store the motorhome on:

- ◆ Avoid parking the motorhome on a grass or gravel surface to prevent moisture accumulation.
- ◆ Concrete pads seal the surface and allow better ventilation under the motorhome.
- ◆ Storage buildings with concrete floors, or heated storage facilities, greatly reduce the amount of moisture accumulation and protects the motorhome from moisture damage.

Outdoor Storage Area:

- ◆ The interior should be heated to help prevent mold and mildew growth. Moisture removing desiccate filter systems are available from hardware and RV supply stores. Place the filter system inside the motorhome to reduce interior moisture condensation or humidity.
- ◆ Proper winterization of the fresh water system will prevent potential damage in extreme cold.
- ◆ Ultraviolet radiation affects soft goods and rubber products such as privacy curtains, window shades and tires. These items should be protected. Store Day/Night Shades in the Up position.
- ◆ Cardboard templates can be made for the windows to protect the interior from exposure to direct sunlight.
- ◆ Tire covers are available to protect the sidewall of the tires from cracking. Make sure tires in storage contain the correct air pressure to prevent damaged caused by underinflation.
- ◆ Regularly wash the exterior to help control moss accumulation. Waxing the motorhome twice a year will augment these substances.

Inspect the motorhome:

- ◆ Perform a full interior **inspection** for water leaks every two weeks while the motorhome is in storage. Check inside all cabinets for signs of dampness or leaks. **Inspect** the ceiling areas around roof vents or other roof openings.
- ◆ The roof and sidewall seams should be inspected and cleaned at least twice a

year. **Inspect** for exterior sealant gaps of all roof seams, vents, skylights, roof air conditioners and windows.

Fuel:

Storing the motorhome with a full fuel tank will minimize moisture condensing at the top of the tank. Diesel fuel is an organic material which will develop a microbe growth (black slime). Fuel stabilizers may be added to control microbe growth and degrading of the fuel. Consult the engine manufacturer's owner's manual or a distributor for further detailed information on fuel stabilizers and additives.

Brakes:

Brakes suffer from non-use during periods of storage. The bare metal machined surfaces of brake drums or rotors have only a light coating of dust from the brake lining friction material. The brake dust is the only thing protecting the bare metal surfaces from rusting. Only regular brake applications dry the moisture preventing rust on brake drum or rotor surfaces. During periods of non-use, oxygen and moisture oxidize the machined surfaces. Only occasional use keeps these surfaces from oxidizing. Rusty brake drum or rotor surfaces permeate the brake lining upon the first few applications, reducing the friction action of the linings.

Engine:

Internal combustion engines need to be “exercised” on a regular basis to ensure an adequate supply of lubricating oil coats the cylinder walls and piston rings. Valve and valve seat surfaces also suffer from non-use. Some valves will remain open depending at which part of the combustion cycle the engine has stopped. The heat and cold of the day allows moisture to accumulate through the exhaust system. Start all engines at least twice a month.

Electric Motors:

Electric motors in the motorhome should be occasionally operated to help lubricate and keep surfaces freely rotating. These items include the roof air conditioners, dash fans, dash blower motor, furnace and powered roof vents.

Winter Storage Checklist

- ◆ **Plumbing Lines** - Drain and protect by filling with approved RV antifreeze. (*See Winterizing - Section 6.*)
- ◆ **Fresh Water Tank** - Drain.
- ◆ **Body** - Clean and wax. Oil locks and hinges. Repair roof seams as needed.
- ◆ **Countertop and Cabinets** - Wash with mild soap and water.
- ◆ **Curtains** - Remove and clean according to care specifications.
- ◆ **Windows** - Cover windows by pulling blinds, closing shades or using a separate cover such as a sheet.
- ◆ **Holding Tank** - Drain and rinse. Close valves.

NOTE

Add a small amount of antifreeze to waste holding tanks to keep valves and gaskets lubricated.

- ◆ **Drain Traps** - Pour RV antifreeze down all drains.
- ◆ **Refrigerator** - Clean and leave both doors propped open. Cover exterior panels and roof vents.
- ◆ **Batteries** - Add distilled water and recharge if needed. If necessary, disconnect the cables, remove the batteries and store them in a cool dry place. Check and recharge as needed.
- ◆ **Air Conditioner** - Remove the air filters. Clean or replace.
- ◆ **Roof** - Keep clear of snow accumulation or damage may occur.
- ◆ **Interior/Exterior** - Storing under cover or indoors helps extend interior and exterior life.
- ◆ **Fuel Tank** - Diesel fuel tank should be full of fuel.

Removal from Storage

Extensive freeze damage or other serious deterioration can occur if the motorhome is not properly winterized. If the motorhome is properly and carefully prepared for storage, removal from storage will not be difficult. The following checklist pertains to items or areas that should be inspected when it is time to take the motorhome out of storage and put back into operation. If you have any questions regarding storage or winterization, consult a qualified service technician.

- ◆ Thoroughly **inspect** the outside of motorhome. Look for animal nests in the wheel wells or in other out of the way places.
- ◆ Remove all appliance flue vent covers, ceiling vent covers and air conditioning covers. Be sure the refrigerator openings are free of debris, insect nests, webs, etc.
- ◆ Open all doors and compartments. Check for animal or insect intrusion, water damage or other types of damage which may have occurred.
- ◆ Check the state of charge of the batteries. If necessary, fill LLA cells with distilled water only. Charge as necessary. **Inspect** the cable ends and terminals. They should be secure and free of corrosion.
- ◆ Check all the chassis fluid levels: engine oil, engine coolant, hydraulic fluid reservoir, transmission oil and rear axle oil.
- ◆ Start the engine, allowing it to reach operating temperature. Ensure the engine instruments indicate proper readings.
- ◆ While the engine is running, check the operation of headlights, taillights, turn signals, back-up lights, license plate light and emergency flasher. Operate the dash air conditioner. If the air conditioner does not work or the compressor makes unusual noises, have the system checked by a qualified air conditioner technician.
- ◆ Shut the engine down. Adjust or add fluids as necessary. **Inspect** around the engine and under the motorhome for fluid leaks.

- ◆ Drain, sanitize and flush the fresh water system as outlined in the *Water Systems-Section 6. Inspect* the sewer drain hose and connections for leaks. Replace if necessary.
- ◆ Operate all faucets and fixtures in the fresh water system. Run a sufficient amount of fresh water through all the water lines and faucets to thoroughly purge any potable antifreeze from the fresh water system.

NOTE

Discard at least the first two trays of ice from the icemaker to ensure the ice does not contain traces of antifreeze or other contaminants.

- ◆ Open cabinet doors and drawers. **Inspect** for water leaks at joints or fittings. Repair as necessary.
- ◆ Operate all 12 Volt DC lights and accessories. If something does not work there may be a bad 12 Volt DC circuit breaker or blown fuse.
- ◆ Install new batteries in battery operated safety detectors or devices. Test the Carbon Monoxide, LP-Gas and smoke detectors for proper operation.
- ◆ Check that the monitor panel is properly functioning.
- ◆ **Inspect** the 120 Volt AC electrical system which includes the power cord, inverter/converter, all outlets and exposed wiring.

NOTE

Prepare the generator for operation following the instructions in the

Generator OEM manual.

- ◆ Start and run the generator.
 - ◆ Confirm that the batteries are charging. Operate the 120 Volt AC appliances and air conditioners. If an electrical item or appliance is not properly functioning, contact the dealer or an authorized service center to have it evaluated.
 - ◆ Have a qualified technician inspect the LP-Gas system and perform an LP-Gas leak test. The leak test should also include an LP-Gas regulator adjustment (if needed). The test can also verify if the regulator is faulty and should be replaced. Have the LP-Gas tank inspected.
 - ◆ Operate each LP-Gas appliance. Observe all burner/pilot flames for proper color and size.
 - ◆ Inspect and clean the interior.
 - ◆ Check the sealant around all roof and body seams and windows. Reseal if necessary.
 - ◆ Lubricate all the exterior locks, hinges and latches with a graphite lubricant.
 - ◆ Check the windshield wiper blade condition. Check the wiper/washer operation.
 - ◆ Wash and wax the exterior. Check the body for scratches or other damage; touch up or repair as necessary. Flush the underside thoroughly.
- ◆ Run through the operational checks for steering, brakes, engine and transmission. Operate the motorhome slowly during these checks to allow sufficient circulation of fluids and resetting of the components.
 - ◆ If desired, have the dealer or repair center double-check preparation to make necessary adjustments and/or correct defects.

Diplomat 2007

Appliances — Section 4

APPLIANCES - INTRODUCTION	74	AIR CONDITIONING - ROOF	85
REFRIGERATOR.....	74	Operation	85
Operation Specifics	74	Heat Pump Operation	86
Control Panel - Four Door	75	AC Service	86
Icemaker	76	Return Air Filters	86
Refrigerator Alarm	76	FURNACE	86
Cooling Unit Fans	76	Operation	87
Doors	77	Using the Furnace	87
Storage Procedures	77	If the Furnace Fails to Light	87
Interior Light	77	WATER HEATER.....	88
Service	77	WASHER/DRYER PREPARED.....	90
Exterior Refrigerator Access Panel	77	WASHER/DRYER (OPTIONAL)	91
Air in LP-Gas Supply Lines	78	Operation	91
Control Panel – Two Door (Optional)	78	Washer/Dryer Maintenance	92
MICROWAVE/CONVECTION OVEN.....	80	Winterizing the Washer/Dryer	93
Care & Cleaning	80	CENTRAL VACUUM (OPTIONAL)	93
COOKTOP	82	Operation	93
Cooktop Covers	82	Maintenance	93
Burner Grate	83		
Care & Cleaning	83		
COOKTOP WITH OVEN (OPTIONAL)	83		
Cooktop Covers	83		
Lighting the Burners	84		
Burner Grate	84		
WALL THERMOSTAT	85		

APPLIANCES - INTRODUCTION

This section covers operation and care of various appliances found in the motorhome: refrigerator, cooktop, microwave, roof air conditioner and optional appliances. These appliances operate on AC or DC current, LP-Gas or a combination of the three.

INFORMATION

Detailed information with **CAUTION** or **WARNING** instructions for the various appliances, other than what is found in this section, can be found in the manufacturer manuals.

WARNING

Before entering any type of refueling station, turn off all LP-Gas operated appliances. Most LP-Gas appliances used in motorhomes are vented to the outside. When parked close to a gasoline pump, it is possible for fuel vapors to enter this type of appliance and ignite, resulting in an explosion or fire.

WARNING

Carbon Monoxide gas may cause nausea, fainting or death. Operating an LP-Gas appliance with inadequate ventilation or partial blockage of the flue can result in Carbon Monoxide poisoning. **DO NOT** store flammable liquids such as lighter fluid, gasoline or propane in the outside refrigerator compartment.

NOTE

Features and options vary with floorplans.

REFRIGERATOR

Refrigerant is heated until it vaporizes. When the refrigerant cools, heat is extracted from inside the refrigerator. Gravity returns the coolant to a reservoir and the cycle is repeated. To ensure longevity and proper operation of the refrigerator, follow the specific guidelines in the refrigerator manual.

INFORMATION

Refer to the refrigerator manual for detailed operating and maintenance instructions.

NOTE


To reduce the possibility of food spoilage, keep the interior box temperature at or below 40° F. The refrigerator will consume more energy to maintain low temperature, especially in hot, humid climates. Lower temperature may also lead to more frost build-up.

Operation Specifics

- ◆ The refrigerator operates from LP-Gas or 120 Volts AC electric.
- ◆ DC Voltage for control pad operation must be no higher than 15.4 Volts DC or lower than 10.5 Volts DC.
- ◆ AC voltage must be no higher than 132 Volts AC or lower than 108 Volts AC.

Important: Operate refrigerator only when level. Level the refrigerator using a torpedo or bulls eye (fence post) level.

Place the levels on the bottom shelf of the refrigerator. The bubble should be at least half-way inside the circles.

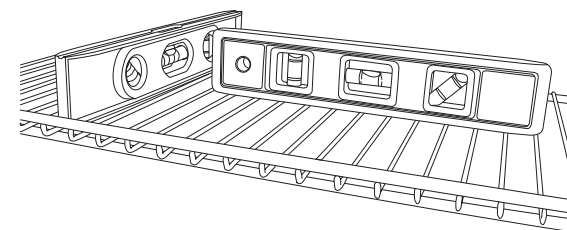

020295


CAUTION

Operating the refrigerator off-level separates chemicals, causing them to crystallize and block the circulation action of the cooling unit. Damage is cumulative and irreversible.


WARNING

DO NOT use the refrigerator if there is an ammonia smell inside or outside of the refrigerator, or if a yellowish substance appears inside or at the outside access compartment. This can be an indication of a refrigerant leak. Contact an authorized repair facility.

- ◆ **For the refrigerator to operate:**
- ◆ The house batteries must be charged.
- ◆ The primary LP-Gas valve must be open.
- ◆ **Figure A:** The refrigerator 120 Volt AC cord(s) must be plugged in (located outside behind refrigerator access door).
- ◆ **Figure B:** If controls do not light up, check house battery charge status or see if the 12 Volt DC wires are plugged into the refrigerator's circuit board (located outside behind refrigerator access door).

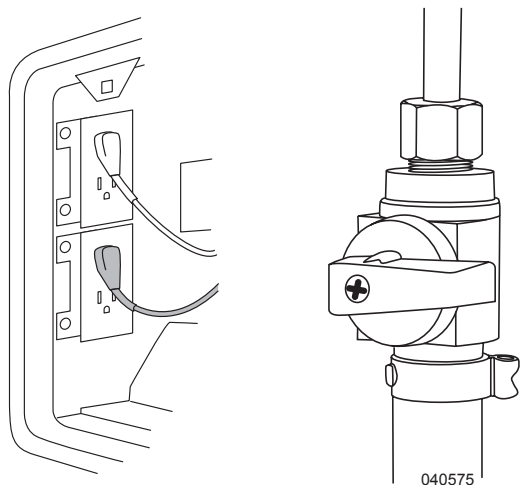**Figure A**

The water valve (located under the refrigerator or outside behind refrigerator access door) must be open if the refrigerator is equipped with an icemaker.

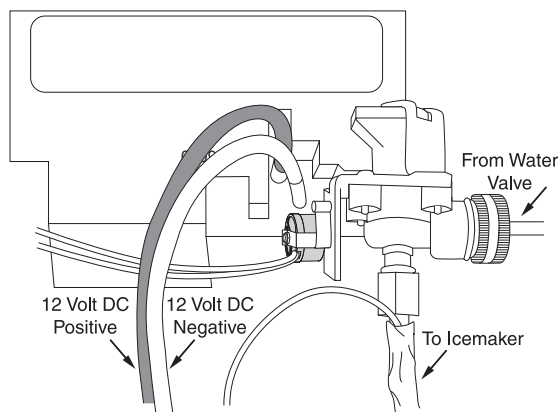
**Figure B**

Control Panel - Four Door

ON/OFF Button:

Turns the refrigerator **ON** or **OFF**.

- ◆ Push the **ON/OFF** button to start the refrigerator in **Auto mode**.
- ◆ Push and hold the **ON/OFF** button for two seconds to shut it off.

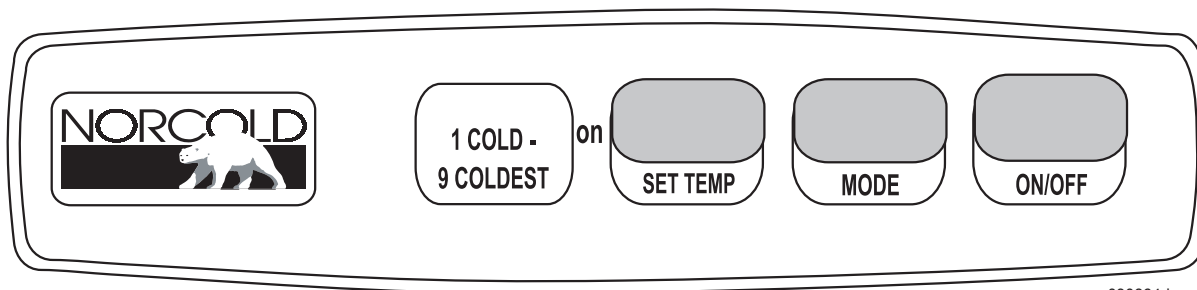

030864d

LED Display:

This screen is used for mode, temperature and fault code display.

MODE Button:

Controls the operation mode of the refrigerator.

- ◆ Press the **MODE** button to select between Automatic **AU**, **AC** or **LP** operation.

SET TEMP Button:

Adjusts the temperature.

- ◆ To adjust, push and hold the **SET TEMP** button.
- ◆ Number “9” is the coldest setting.

Manual Mode (MAN):

When one of the two manual modes is selected:

1. **AC** = The refrigerator is operating on AC electric.
2. **LP** = The refrigerator is operating on LP-Gas.

Automatic Mode (AU):

This feature selects AC over LP-Gas operation. If AC discontinues, the refrigerator will automatically switch to LP-Gas operation. An alarm will sound and a code will display if the LP-Gas igniter fails to light.


- ◆ Press the **MODE** button until **AU** displays. Release the button.
- ◆ Press and hold the **SET TEMP** button until the desired temperature displays. Release button.
- ◆ In **AUTO** mode, **AU/AC** or **AU/LP** will alternate three times when a mode has changed.

If the LP-Gas does not ignite within 30 seconds, the control changes to a different energy source or the gas safety valve closes and “**NO**” “**FL**” displays. Turn the refrigerator **OFF** then back **ON**. If the gas does not ignite after several attempts, consult an authorized service technician.

Tips:

- ◆ Cool items first, if possible, before putting them into the refrigerator.

- ◆ Keep the doors shut. Know what you want before opening the doors.
- ◆ Allow the refrigerator 24 hours of operation before actual use to help get a head start with the refrigeration process.
- ◆ A box of open baking soda will help absorb food odors.
- ◆ Ice build up can be slowed in high humidity if the end of the drain tube is submersed in drip pan. It may be necessary to add water to the drip pan to keep the tube submersed.

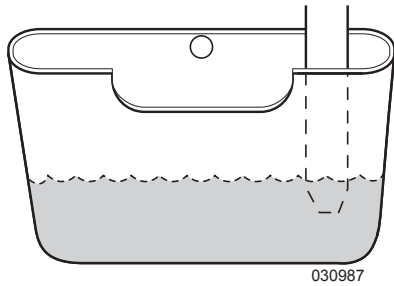


Drip Pan: Located behind the outside access.

Icemaker

The icemaker requires 120 Volts AC to operate. Only after the freezer reaches freezing temperature will the icemaker function. City water or the water pump must be on and the valve for the water supply line to the icemaker must be on. The valve is located on plumbing manifold in water service bay.

- ◆ Pull the metal arm (bail) down to turn the icemaker **ON**.
- ◆ Push the arm up to turn the icemaker **OFF**.

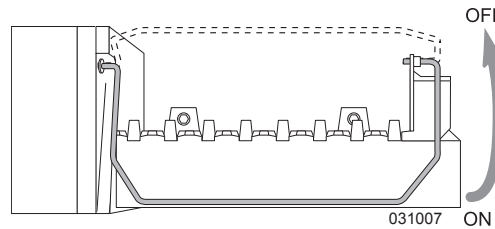


NOTE

Water may spill out of the ice tray if the icemaker is in operation while the motorhome is in transit. DO NOT use the first one or two trays of ice following storage. Operating the icemaker without water pressure supplied to the refrigerator will risk damage to the icemaker assembly.

Water Line Heater:

A thermal disc supplies voltage to heater tape when ambient temperature is less than 38° F (+/- 4°) and shuts off at temperature greater than 48° F (+/- 5°). The water line heater is only for the line from the solenoid to the icemaker. The line from the icemaker shut-off valve to the water valve is protected with foam insulation.

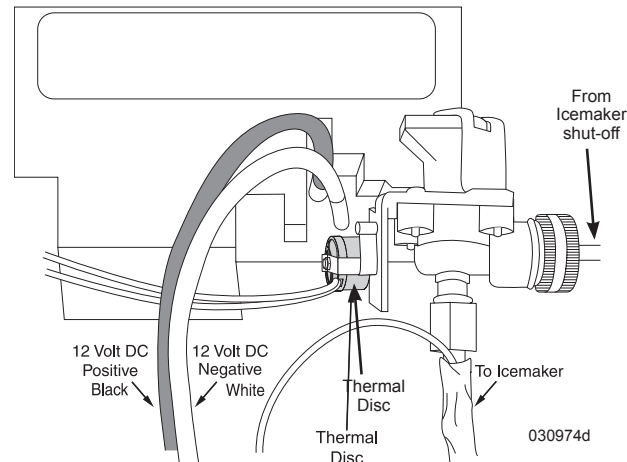

Refrigerator Alarm

The refrigerator audible alarm will sound for the following reasons:

1. DC or AC voltage is higher or lower than allowed.
2. The refrigerator fails to light on LP-Gas or fails to light after a period of operation.
3. Refrigerator is set to **Auto**, 120 Volts AC is discontinued and LP-Gas fails to light. **NO AC** will display, followed by **NO FL**, and the alarm will sound. Consult the OEM manual.
4. Door is open longer than two minutes.
5. The circuit board detects a failure. The control panel will display a code.

NOTE

If the alarm sounds, note the code in the LED display and turn the refrigerator off to silence the alarm.

INFORMATION


Refer to the OEM manual for the list of codes and their meanings.

Cooling Unit Fans

The cooling unit is equipped with a pair of cooling fans that pass air across the cooling unit. These fans start automatically and are audible when in operation.

Doors

The refrigerator doors use a positive latch that secures the door with a “click” to prevent the door from opening during travel. The doors use a heating element located in the flapper on the left door. The heating element activates when operating the refrigerator in any mode to help prevent moisture accumulation in high humidity conditions.

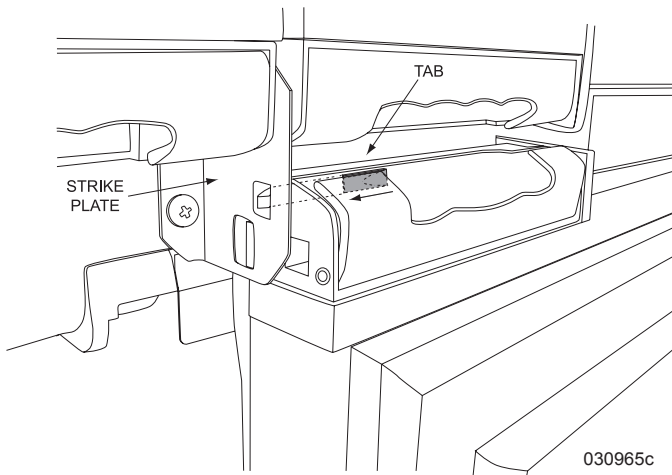

Mold and mildew may contaminate a completely sealed refrigerator in storage. The motorhome refrigerator has a storage position to lock the doors partially open and promote airflow that will help prevent mold build up. To use the refrigerator storage position:

1. Completely empty the refrigerator.
2. Disconnect power to the refrigerator.
3. Thoroughly clean the interior box using a soft cloth to remove all stains and spills.
4. Partially open the doors and slide tab into the cut-out of the striker plate.

Storage Procedures

Storage Feature:


- ◆ Turn the refrigerator **OFF** and remove all items. Leave the drip tray under the cooling fins.
- ◆ **DO NOT** use a heating gun, hair dryer or sharp objects to remove frost as these can damage the interior or cooling unit.
- ◆ Wash the interior using mild spray cleaners or a solution of liquid dish detergent and warm water. **DO NOT** use scouring pads or abrasive cleaners that can damage the interior finish.
- ◆ Rinse with a solution of baking soda and water. Dry with a clean cloth.
- ◆ Lock the doors open.

CAUTION

DO NOT use a hot air blower to defrost. Permanent damage could result to plastic parts. **DO NOT** use a knife, ice pick or any other sharp instrument to remove ice from the freezer as they can puncture the system.

Interior Light

The interior light is located at the top of the fresh food compartment. When the door is open the light will illuminate.

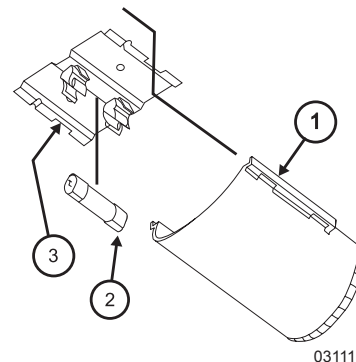

Bulb Replacement:

1. Remove the light cover by pulling it toward the front of the refrigerator.
2. Remove the light bulb from the holder.
3. Install a **GE#214-2** replacement bulb and replace the cover.


Service

The LP-Gas function of the refrigerator and LP-Gas pressure will require annual service. Over time, the BTU rating of the flame can change, affecting the refrigerator’s performance. Ambient temperature, high humidity and altitude above 5,500 ft. can affect performance and function. If possible, switch mode operation to AC while at a higher altitude.

Exterior Refrigerator Access Panel

NOTE

Ensure the exterior refrigerator access panel is properly replaced after removal.

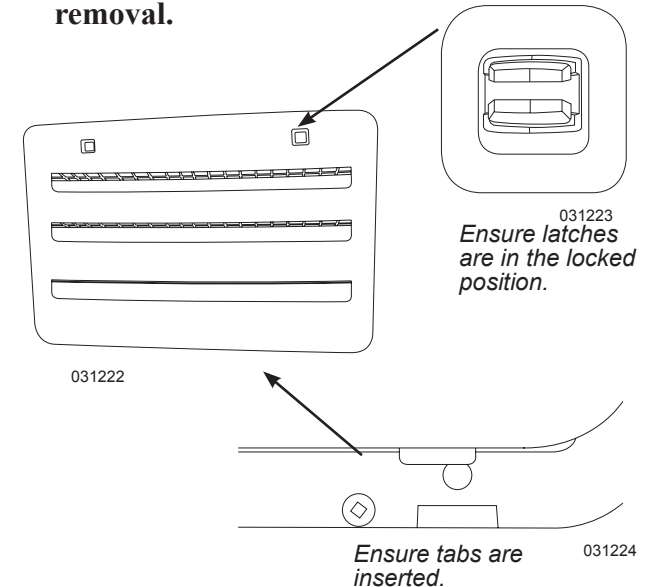


Air in LP-Gas Supply Lines

For safety reasons, the refrigerator will attempt to ignite on propane gas within a specified amount of time. When starting the refrigerator for the first time after storage, or after servicing the gas supply system, propane gas supply lines may contain air. Due to the air in the gas supply lines, the refrigerator may not ignite on propane gas within the specified amount of time. Follow the procedure on how to remove air from the LP-Gas supply lines.

To remove the air from the LP-Gas supply lines:

- ◆ Ensure the primary LP-Gas valve and any other necessary valves are open.
- ◆ Try lighting the cooktop burners first to quickly purge air from the main distribution line.
- ◆ Push the **ON/OFF** button to turn the refrigerator on.
- ◆ Press the **MODE** button until the refrigerator indicates LP. The refrigerator will start a 30 second trial for ignition during which the gas safety valve opens and the igniter sparks.
- ◆ If the refrigerator fails to light, indicated by **F** or **NO FL (No Flame)**, turn the refrigerator **OFF** then back **ON** and set to **LP mode**. If after the third attempt the refrigerator fails to light, stop and consult your local dealer or an authorized Norcold Service Center.

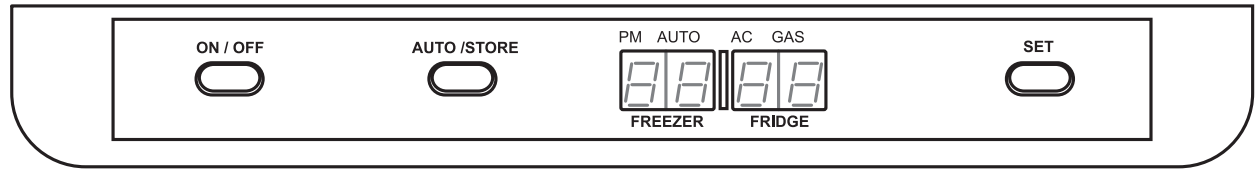

031217

Control Panel – Two Door (Optional)

- ◆ **ON/OFF Button** – Turns the refrigerator on or off.
- ◆ **AUTO/STORE Button** – Used to select energy mode between AUTO AC, AUTO Gas, or LP-Gas. The AUTO/STORE button is also used to save settings.
- ◆ **LED Display** – The screen displays temperature, different modes of operation, and status messages:
 - ◆ - Temperature in frozen food compartment.
 - ◆ - Temperature in fresh food compartment.
 - ◆ - AUTO AC mode.
 - ◆ - AUTO Gas mode.
 - ◆ - LP-Gas mode.
 - ◆ - Temperature setting.
 - ◆ - Clock.
 - ◆ - Status and error messages.
- ◆ **SET Button** – Used to adjust the temperature range and to set the clock.

Starting Up:

Press the main power ON/OFF button. If the clock has to be set the LED display will show flashing horizontal bars “-- --”.

WARNING

Before starting the refrigerator, check that all gas valves are in the ON position. This includes the shut off valve in the rear of the refrigerator.

Setting the Clock:

1. Press the SET button until figures flash on the LED display. Hours are on the left and minutes to the right.
2. Press the SET button to adjust time. PM is indicated by a dot under PM on the LED display.
3. Save settings by either pressing the AUTO/STORE button, or waiting 5 seconds (the settings will automatically save).

Setting the Temperature:

1. Press the SET button to the desired temperature setting - 1 to 5. Number 5 is the coldest temperature.
2. Save settings by either pressing the AUTO/STORE button, or waiting 5 seconds (the settings will automatically store).

Selecting Mode of Operation:

The mode of operation ranges between AUTO AC, AUTO Gas, or LP-Gas.

1. To select automatic operation press the AUTO/STORE button until AUTO is displayed. In this mode the system will automatically select the most suitable energy source available - AC or LP-Gas operation.
2. To select LP-Gas operation only, press the AUTO/STORE button until a dot is indicated above LP.

NOTE

Current mode of operation and the energy source, AC or Gas, will be indicated by a dot on the LED display.

Automatic Defrost:

The refrigerator will automatically defrost the frozen and fresh food compartments every 24 hours.

Manual Defrost:

If desired, the refrigerator may manually defrost. A defrost cycle takes about 1 hour, depending upon the amount of frost in the refrigerator.

1. Before defrosting, press the ON/OFF button to turn off the refrigerator.
2. Press and hold the AUTO/STORE button, then press the ON/OFF button. “dE Fr” will show in the LED display.

Status Message:

At times the LED display may show either a status message or error message. Refer to the manufacturer’s manual for the list of codes and

their meanings.

WARNING

Never use strong chemicals or abrasives to clean the refrigerator. Damage to the protective surfaces will occur.


NOTE

If the refrigerator will not be in operation for a period of weeks, it should be emptied, defrosted, cleaned and the doors left ajar. The ice trays should be dried and kept outside the refrigerator.

Automatic Ice Dispenser: The ice dispenser on the freezer door conveniently dispenses ice.

To Operate:

1. Press either the Cube or Crush button. Place a glass against the dispensing arm.
2. To stop dispensing ice, pull the glass away from the dispensing arm.

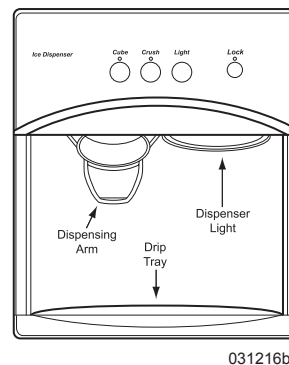**Drip Tray Feature:**

A drip tray is located beneath the dispenser to catch small spills. The tray is removable and dishwasher safe.

NOTE

The drip tray is not a drain. DO NOT pour water into the drip tray.

Lock Out Feature:

The ice dispensing system can be “locked out” to prevent unwanted use.

1. To Lock Out press lock button for 3 to 5 seconds until the red light comes on.
2. To Unlock press the lock button for 3 to 5 seconds until the red light goes out.

Dispenser Light:

The light illuminates the dispenser area and can be turned on and off by pressing the light button. The dispenser light will also turn on automatically when ice is dispensed.


NOTE

If the bulb needs to be replaced use an E14, 120V, 6-watt appliance bulb.

INFORMATION

For safety reasons, when opening the freezer door the ice dispensing and ice making system will automatically shut off. Closing the freezer door automatically resumes operation of ice dispensing and ice making operation.

Ice Maker: The ice maker works from 120 Volts AC only. The water valve supplying the refrigerator must be turned on, and the ice level bail arm must be in the down position.

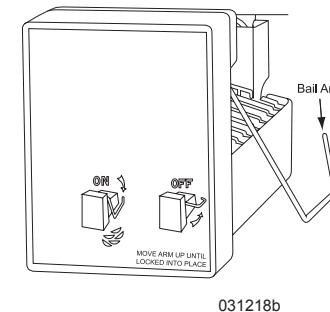

NOTE

If the ice maker is in operation while the motorhome is in motion, water may spill out of the ice tray. Raise the bail arm to the full UP/OFF position about 1 ½ hours before departing. This will allow water in the ice tray to freeze. Do not use the first 1 or 2 trays of ice if the refrigerator has been in storage. Ice cubes may have contaminants. Do not operate the icemaker without water pressure supplied to the refrigerator as this can damage the ice maker assembly.

MICROWAVE/CONVECTION OVEN

The microwave/convection oven operates from 120 Volt AC supplied by shore power, the generator or inverter.

Operation Tips:

- ◆ Ensure cookware being used is microwave safe. Gold paint or glaze may contain a trace amount of gold which is electrically conductive and not compatible for microwave. Use hand painted china commonly contains traces of metal.
- ◆ The glass tray and roller guide must always be in place during cooking.
- ◆ Ensure the door is firmly closed before use.
- ◆ If the control pad is not lit, plug another electrical appliance into the same outlet to verify 120 Volt AC power is present. If the test item works, contact an appliance repair facility to have the microwave/convection oven checked.

- ◆ Steam accumulating inside or around the outside of the oven door may occur when the microwave/convection oven is operated under high humidity conditions and in no way indicates a malfunction of the unit. Wipe away steam using a soft cloth.

Microwave/Convection Oven Facts:

One of the most useful documents for the microwave/convection oven is the operations manual, located in the owner's information file box. Read it carefully and keep it for reference.

A properly functioning microwave/convection oven presents no hazard with ordinary use. Safety features should be kept in good condition. Never attempt to bypass safety interlocks or allow debris or residue to accumulate on the door or oven face. If the oven is damaged, discontinue use.

Oven adjustments or repairs should be made by qualified service personnel. Check the microwave/convection oven owner's manual for maintenance tips and other information. Remember to register the microwave/convection oven with the manufacturer.

CAUTION

The ventilation fan cannot be manually turned off if it has automatically started from a heated cooktop. Turn off the microwave AC breaker to prevent the flames from spreading into the microwave.

NOTE

When dry camping, minimize using the inverter to operate the microwave/convection oven due to the high rate of battery consumption.

NOTE

The microwave/convection oven is for food preparation only. DO NOT use the microwave/convection oven to dry clothes, newspapers, shoes or other items.

NOTE

For more detailed information and operating instructions, refer to manufacturer's manual.

CAUTION

Long-term use of the inverter to operate the microwave while in transit will damage the alternator. Use the generator to operate the microwave while in transit.


Care & Cleaning

The exterior of the microwave/convection oven is plastic and metal. The interior is metal. DO NOT clean with scouring pads, harsh or abrasive cleaners, chemical cleaners or petroleum based thinners that can damage the finish. Use mild soap and water with a damp cloth or paper towel to remove stains or spills. When cleaning the touch pad, open the door to prevent accidental operation. Use mild soap and water with a soft cloth. Avoid using excess amounts of water on the touch pad. The turntable plate and oven racks are dishwasher safe.

Charcoal Filter:

Depending on use, the charcoal filter should be replaced every 6 to 12 months. Use the following procedure to remove the louvers to replace the charcoal filter and oven light:

1. Remove power to the microwave/convection oven.
2. Remove the screws (A) securing the louver.
3. Insert a flat edge screwdriver over each tab pressing downward and move the louver away from the microwave.
4. Remove and replace the charcoal filter. Ensure the filter is positioned on the supporting tabs.
5. Replace louver and mounting screws.

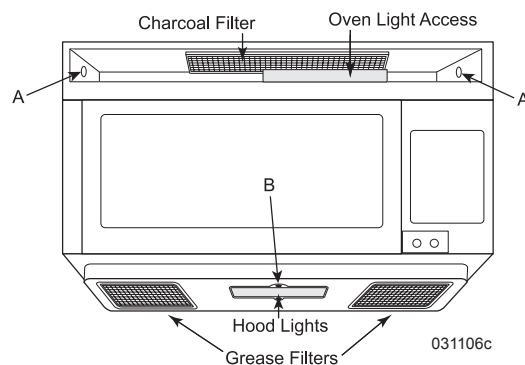**Oven Light:**

1. Remove the louver as previously indicated.
2. Slide the metal light cover forward and lift upwards.
3. Remove the light bulb and replace only with an equivalent watt bulb. **DO NOT EXCEED 30 WATTS.**
4. Replace light cover, louver and mounting screws.

Hood Light:

1. Remove power to the microwave/convection oven.
2. Remove the screw (B) securing the light cover.
3. Remove the light bulb and replace only with an equivalent watt bulb. **DO NOT EXCEED 30 WATTS.**
4. Close the cover and re-secure with screw.

CAUTION

Light cover may be hot. DO NOT touch glass with lamp ON. Never use the light for prolonged periods, such as a night light.

Grease Filters:

Operating the microwave/convection oven without the grease filters in place can damage the unit. Grease filters should be cleaned at least once a month. To remove the filters, use the pull-tab to slide the filter to the end of the opening and tip down. Soak the filters in the sink or in a dishpan filled with hot water and detergent.


- ◆ **DO NOT** use ammonia or other alkali-based products that may darken the filter material.
- ◆ Agitate the filter. Use a scrub brush to remove caked on grease.
- ◆ Rinse the filter thoroughly and shake dry. Place the filter back into the opening, tip upward and slide filter to the end of the opening. Lock in place. Be careful not to kink or warp the filter upon installation.

Cleaning Tips:

- ◆ Turn the oven **OFF** before cleaning.
- ◆ Cover food while cooking to keep food spattering to a minimum.
- ◆ Clean up all spills or spatters before they dry. Wipe up food spatters or spilled liquids with a damp cloth. Mild detergent may be used for stubborn spills. **DO NOT** use harsh detergent or abrasive cleaner.
- ◆ It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm, sudsy water or in a dishwasher.
- ◆ The roller guide and oven cavity floor should be regularly cleaned to avoid excessive noise. Wipe the bottom surface of the oven with mild detergent water or window cleaner and then dry. The roller guide may be washed in mild sudsy water.
- ◆ Food odors may linger inside oven. To help eliminate odors, combine the juice and the peel from one lemon, several whole cloves and 8 oz. of water into a two cup bowl. Place in oven on high power; bring to a boil for several minutes. Let cool in the oven for several minutes.
- ◆ Clean the outside oven surface with soap and water. Wipe away any residue using a damp cloth. Dry with a soft cloth. To prevent damage to the operating parts inside the oven, do not allow water to seep into the ventilation openings.
- ◆ If the control panel becomes wet, clean with a soft, dry cloth. **DO NOT** use harsh detergents or abrasive when cleaning the control panel.

COOKTOP

The cooktop uses LP-Gas only as a fuel source. The burners use a piezo type igniter. The cooktop should be used for cooking purposes only and not as a heating

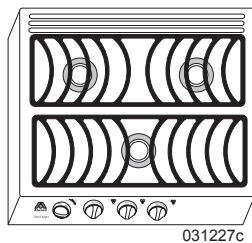

source. When the burner valve is opened the fuel source flows through the valve into the mixture tube. The fuel passes by a hole or venturi in the mixture tube, which draws air in with the fuel for a proper fuel/air ratio. The flame should have a blue appearance with a lighter blue defined flame at the burner head.

A yellow flame or yellow tips indicate a rich fuel mixture, which can leave a black color or carbon on the bottom of a pot or pan.


◆ **The cooktop operates under the following conditions:**

- ◆ The primary LP-Gas valve on the LP tank is open.
- ◆ The battery cut-off switch is on.

Cooktop Covers

Before using the cooktop the covers must be removed.

- ◆ Never place the covers on the cooktop while the burners are in use.
- ◆ Do not use the covers as a griddle.
- ◆ When the motorhome is in transit, the covers must be in place.

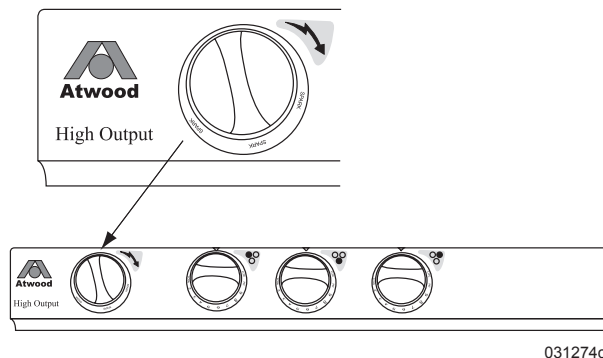

Using the Cooktop:

1. Place the cookware on the burner grate over the desired surface burner.
2. Open the burner valve by applying a downward pressure to the knob and rotating clockwise.
3. When the burner lights, rotate knob to the desired flame setting. In the event of a power outage or igniter failure, the cooktop can be manually lit.

Control Knobs:

- ◆ Turn appropriate burner knob counterclockwise to **LITE**. Do not attempt to light more than one burner at a time.
- ◆ Turn the **SPARK** knob clockwise one click. If the burner fails to light, continue turning the **SPARK** knob clockwise until the burner lights.
- ◆ Move the burner knob clockwise to **OFF**, to turn the burner off.

WARNING

Do not leave burners unattended during cooking. Do not leave burner valve(s) open while burner(s) are not lit. LP-Gas is heavier than air and will settle on the floor and “hide” in

corners. If you smell gas, extinguish all open flames. Open all windows and doors. Do not touch any electrical switches. They may cause a spark that can ignite. Evacuate the motorhome and shut off the primary LP-Gas valve. Liquid propane is highly volatile, highly explosive and extremely dangerous. Explosion, fire, property damage, injury or death can result. Contact a qualified service center to have the problem correctly diagnosed and repaired before resuming operation.

Operation Tips:

- ◆ A yellow flame is an indication of incorrect fuel/air ratio. Lowered BTU output and carbon build up can occur.
- ◆ When cooking at an altitude above 5,000 feet, the flame may change appearance and the flame BTU output will be lowered. Allow extra time cooking time.
- ◆ Do not allow the tips of the flame to extend beyond pan or pot edge. When this occurs heat is wasted and possibility of injury increases.
- ◆ Cooking time can be reduced if the least amount of liquid is used. The choice of cookware selected can make a big difference.
- ◆ Additional information can be located in the manufacturer’s operation manual located in the Information File Box.

Burner Grate

The two burner grates attached to the cooktop cover by four insertion tabs can be removed for cleaning purposes. Place a cloth down to protect the countertop. To remove a burner grate, pull up on the grate. To re-install a burner grate align the two insertion tabs with the two grommets and push down.

Care & Cleaning

Regularly wipe down the cooktop with a soft cloth and a warm detergent solution to keep it clean. Do not clean the cooktop with abrasive or harsh cleaners such as steel wool, bleach, ammonia or oven cleaner.

Use a dry paper towel or cloth to wipe up spatters or spills when the cooktop surface is still slightly warm. To avoid accidental burns, do not clean the cooktop when it is hot to touch. Do not allow food to bake on. Clean the surface burner grate and caps using the same guidelines as the cooktop surface.

Porcelain Enamel:

Sharp blows, radical surface temperature changes, etc., will cause enamel to chip or crack. Some foods, such as vinegar, lemon juice, tomatoes and milk, contain acids that can dull the finish of the enamel. To avoid dulling the finish, wipe up the spill before it is baked on. Steel wool and coarse, gritty cleanser will scratch or mar the surface. Use gentle kitchen cleanser powder or grease cleaner. For further information on care and maintenance of the


porcelain, call *Hopes Cultured Marble Polish* at 800-325-4026.

COOKTOP WITH OVEN (OPTIONAL)

The cooktop range/oven uses only LP-Gas as a fuel source. The burners use a piezo type igniter. The cooktop should be used for cooking purposes only and not as a heating source. When the burner valve is opened the fuel source flows through the valve into the mixture tube. The fuel passes by a hole or venturi in the mixture tube, which draws air in with the fuel for a proper fuel/air ratio. The flame should be blue with a lighter blue defined flame at the burner head. A yellow flame or tips indicate a rich fuel mixture, which can leave a black color or carbon on the bottom of a pot or pan.

The cooktop operates under the following conditions:

1. The primary LP-Gas valve on the LP tank is open.
2. The battery cut-out switch is on.

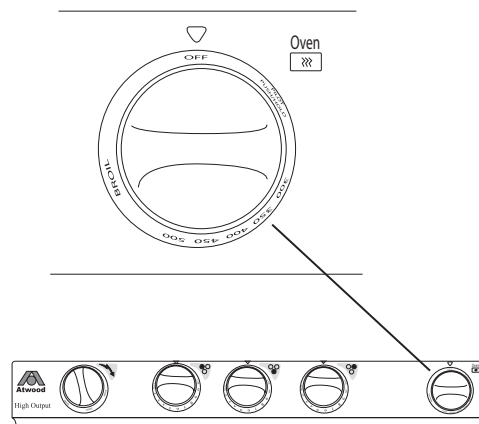

- ◆ The oven may be used with the cooktop covers in place.
- ◆ Push in the oven control knob and rotate counterclockwise to **PILOT ON**.
- ◆ Light the oven pilot located near the back of the oven, under the broiler shelf and to the right of the oven burner.
- ◆ Set the oven control knob to **PILOT ON** to maintain the pilot flame. The oven and broiler are now ready for operation. The oven pilot has been factory set and requires no further adjustment.
- ◆ To extinguish the oven pilot push in the oven control knob and rotate clockwise to **OFF**.

WARNING


Extinguish pilots when refueling or traveling. Do not block vents in oven with any objects.

Cooktop Covers

Before cooking on the rangetop, the cover must be removed.

- ◆ Never close the cover while the burners are in use.
- ◆ Do not use the cover as a griddle.
- ◆ The cover must always be in place when the motorhome is in transit.

Lighting the Burners

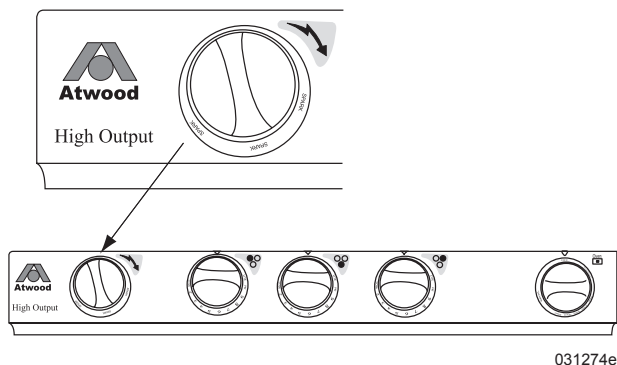

- ◆ Turn the appropriate burner knob counterclockwise to **LITE**. Do not attempt to light more than one burner at a time.
- ◆ Turn the **SPARK** knob clockwise one click. If the burner fails to light, continue turning the **SPARK** knob clockwise until the burner lights.
- ◆ Turn the burner knob clockwise to **OFF**, to turn the burner off.

WARNING

Top covers must be removed when the cooking surface is in operation.

Burner Grate

The two burner grates attached to the cooktop cover by four insertion tabs can be removed for cleaning purposes. Place a cloth down to protect the countertop. To remove a burner grate, pull up on the grate. To re-install a burner grate align the two insertion tabs with the two grommets and push down.

WARNING

If you smell gas, extinguish all open flames and turn off the main gas supply. Liquid propane is highly volatile, highly explosive and extremely dangerous. Explosion, fire, property damage, injury or death can result. Propane is a “heavy” gas and will lay on the floor and “hide” in corners. Open all windows and doors. Do not touch any electrical switches. They may cause a spark which can ignite. Contact a qualified service center to have the problem correctly diagnosed and repaired before resuming operation.

Operation Tips:

- ◆ A yellow flame is an indication of incorrect fuel/air ratio. Lowered BTU output and carbon build up can occur.
- ◆ Flame appearance may change and BTU output will lower when operating the cooktop at an altitude above 5,000'. Allow extra cooking time.
- ◆ Do not allow the tips of the flame to extend beyond pan or pot edge. When this occurs heat is wasted and possibility of injury increases.
- ◆ Remove cooktop covers to help keep the underside of the cooktop clean. Place strips of aluminum foil on the cooktop floor pan and under burners. Do not restrict air flow of mixture tubes.
- ◆ Pre-heat the oven for 10 minutes prior to use.

Cleaning Tips:

- ◆ Clean all surfaces as soon as possible after boil overs or spillovers.
- ◆ Use warm soapy water to clean the burner grates, cooktops, painted surfaces, porcelain surfaces, stainless steel surfaces and plastic items on the range or cooktop. Grit or acid-type cleaners may ruin the surface.
- ◆ Use only non-abrasive plastic scrubbing pads.
- ◆ Do not allow foods containing acids (such as lemon or tomato juice, or vinegar) to remain on porcelain or painted surfaces. Acids may remove the glossy finish. Wipe up egg spills when cooktop is cool.
- ◆ Allow porcelain surfaces to cool before cleaning. Burns from the heated surface may occur or the cooktop porcelain can crack.



Glass cleaner should be applied to the cooktop surface using a paper towel. Do not spray directly on the surface.

Regular cleaning with a soft cloth and a warm detergent solution is generally enough to keep the cooktop clean. Wash, rinse and dry with a soft cloth. Thoroughly clean the cooktop when it is cool. Use a dry cloth or paper towel while the surface is warm to the touch to clean splatters or spills. Cleaning will be more difficult if spills bake on to the surface. Glass cleaner sprayed on a paper towel should be used for the cooktop surface. Do not spray glass cleaner directly on the surface. **DO NOT** use abrasive cleaners or steel wool. Harsh cleansers like bleach, ammonia and oven cleaner should **NEVER** be used.

The surface burner grate and caps should be cleaned using the same guidelines as the cooktop surface.

Porcelain Enamel:

Porcelain enamel, a type of glass fused on steel at a very high temperature, is not extremely delicate but must be treated as glass. Sharp blows, radical surface temperature changes, etc., will cause enamel to chip or crack. Some foods, such as vinegar, lemon juice, tomatoes and milk, contain acids which can dull the finish of the enamel. To avoid dulling the finish, wipe up the spill before it is baked on. The surface is glass and must be given consideration when cleaning. Steel wool and coarse, gritty cleanser will scratch or mar the surface. Any gentle kitchen cleanser powder or grease cleaner will be suitable. For further information on care of the porcelain, call “*Hopes Cultured Marble Polish*” at 1-800-325-4026.

WALL THERMOSTAT

Comfort Control to operate the HVAC (Heating, Ventilation and Air Conditioning systems) is located in the hallway area.

There are five different functions of the HVAC system: OFF, FAN, COOL, HEAT PUMP and FURNACE. These are selected by repeat pressing of the MODE button. The FAN button controls the blower speed of the roof air conditioner. Two speeds are available: Low and High. Selecting the fan speed Auto adjusts the fan speed automatically, based on temperature set point and actual temperature in a selected zone.

The motor home is divided into two operating Zones: Living Room and Bedroom/Bathroom. The comfort control must be in Zone 1 for the furnace to operate. Press the Zone button to change zones. The selected zone will flash. The line under the zone indicates that a selected function is operating in that zone. The UP or DOWN buttons control the temperature in any mode.

Living Room = Zone 1
Bedroom/Bathroom = Zone 2

NOTE

The Comfort Control must be ON to operate any HVAC function. Do not select conflicting modes of operation. One zone cannot be on COOL while another zone is set to FURNACE.

NOTE

The motorhome will not heat or cool faster by selecting a very high or very low temperature setting.

AIR CONDITIONING - ROOF

The roof air conditioners operate from 120 Volts AC supplied by shore power or the generator. The wall thermostat requires 12 Volt DC to operate.

NOTE

The air conditioning system freezes moisture in the air. It is recommended to set the blower fan speed to high when operating in high humidity.

NOTE

There are ambient air temperature

limitations in Heat Pump mode. The roof air conditioner will not operate in Heat Pump mode with ambient temperatures of 30° F and below.


Operation

The roof air conditioner will operate only when the following needs are met:


- ◆ 120 Volts AC, from either shore power or the generator, is supplied.
- ◆ The battery cut-out switch is ON and the house batteries are charged.

Fan Operation:

Circulates interior air by using the roof air conditioner blower. The fan speed controls the roof air conditioner blower speed in the following modes: **Fan, Cool or Heat Pump.**

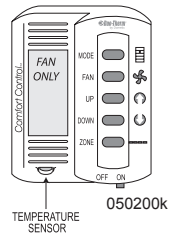


- ◆ Press the **MODE** button repeatedly until **Fan** is displayed.
- ◆ Press the **FAN** button to select the desired fan speed.

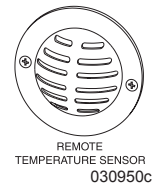

Air Conditioner Operation:

- ◆ Press the **ZONE** button to select Zone 1 (front roof A/C) or Zone 2 (rear roof A/C).
- ◆ Press the **MODE** button repeatedly until **COOL** is displayed.
- ◆ Set desired fan speed by pressing the **FAN** button.
- ◆ Set desired cooling temperature by pressing the **UP** or **DOWN** buttons.

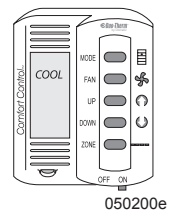

NOTE

The compressor will engage approximately two minutes after blower motor activation to prevent accidental compressor operation against high pressure.

Heat Pump Operation

Heat Pump mode offers heat by using the air conditioner as a heat source. The air conditioning principle is reversed, supplying heated air to the ceiling registers instead of refrigerated air. There are ambient temperature limitations in Heat Pump mode.

NOTE

The roof air conditioner will not operate in Heat Pump mode with ambient temperatures at or below 30° F.


Aux Heat Mode:

If the Heat Pump mode is selected at or below 30° F, or if operating in Heat Pump mode and temperature drops to 30° F, the air conditioner will stop Heat Pump operation and **Aux Heat** will display. The furnace will be selected as the auxiliary heat source and will remain the primary heat source until ambient temperature rises above 42° F.


When ambient temperature is between 30 and 42° F, a defrost cycle is initiated approximately every 40 minutes of compressor operation. The blower motor will stop for five minutes and Defrost will be displayed. After the defrost cycle the heat pump operation will resume.

Heat Pump Operation:

- ◆ Turn **ON** the battery cut-out switch.
- ◆ Slide the **ON/OFF** switch to the **ON** position.
- ◆ Press the **MODE** button repeatedly until **Heat Pump** is displayed.
- ◆ Set desired fan speed by pressing the **FAN** button.
- ◆ Press the **UP** or **DOWN** buttons to set desired heating temperature.
- ◆ Select Zone 1 or Zone 2, using the **MODE** button.

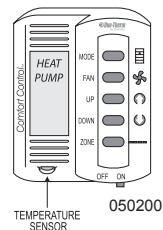**AC Service****AC Cover:**


Ensure that the AC cover screws are tight whenever the roof is accessed.

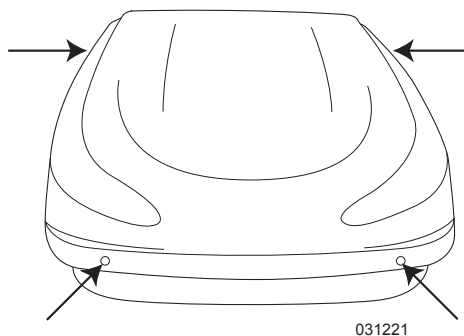

Ensure the A/C cover screws (location as illustrated by arrows) are tight when the roof is accessed.

Return Air Filters**To Clean the Return Air Filters:**

- ◆ Wash filters in warm soapy water. Do not use solvents.
- ◆ Rinse filters thoroughly with fresh water. Allow them to dry.
- ◆ Install filters and secure the intake vent covers.

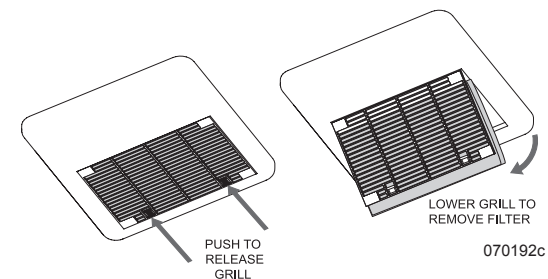**FURNACE**

The furnace and its related components are 12 Volt DC operated, using LP-Gas as the fuel source. Electronic circuitry (automatic ignition) is used to ignite the burner. The furnace uses outside air for the burner combustion and exhaust is expelled through the outside vent. Inside air is drawn into the furnace and blown across the internal heat exchanger. Heated air is then discharged through ducted hoses which run throughout the motorhome.

CAUTION

Do not store any items/materials in furnace area. Restricted air flow may hamper furnace operation leading to failure and/or fire hazard.

WARNING

IF YOU SMELL GAS extinguish all open flames and turn off the LP-Gas primary valve. Liquid propane is a highly volatile, extremely dangerous gas. It can explode or ignite, which may result in property damage, injury or death. Propane is “heavy” and can “float” on the floor or “hide” in corners. Open all windows and doors. Do not touch electrical switches. They may spark, which can ignite. Keep all open flames, spark producing devices and smoking material out of the area. Contact a qualified service center to have the problem correctly diagnosed and repaired before resuming operation.

Operation

The furnace operates in the following manner: The wall thermostat sends a signal to the front roof air conditioner circuit board, which closes a relay. Closing a relay sends an electrical signal to the furnace to begin the ignition cycle. There is a small time delay before the blower motor begins. Once the blower motor attains a predetermined speed it will close the sail switch. The sail switch, which is now closed, sends the electrical signal through a high temperature protection switch, then to the automatic ignition circuit board. After the thermostat is satisfied, the gas valve closes and extinguishes the burner. The blower motor stops approximately two or three minutes after cool down.

The furnace will operate when the following conditions have been met:

1. LP-Gas primary valve on the LP-Gas tank is open and the LP-Gas valve at furnace is on.
2. House batteries in the motorhome are fully charged.
3. Battery cut-out switch is on.

NOTE


The automatic ignition circuit board will attempt to light the burner three times before the ignition board will go into “lock-out.” If the burner does not light, the furnace blower motor will continue to run and the wall thermostat will have to be cycled off.

Using the Furnace

- ◆ Slide the ON/OFF switch to the ON position.
- ◆ Press the **ZONE** button to select Zone 1 or Zone 2.
- ◆ Select the Furnace mode on the Comfort Control using the **MODE** button.
- ◆ Select the desired temperature using the **UP** and **DOWN** arrow buttons.

Tips:

- ◆ After storage the furnace may produce a musty smell during the first couple of cycles.
- ◆ Operating the furnace at an altitude above 5,000 feet reduces the BTU output due to air/fuel ratio.

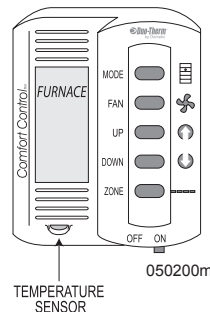

- ◆ The furnace will periodically need serviced by a qualified technician. If the furnace exhibits unusual symptoms or noises, or has an unusual odor when operating, have the furnace checked or serviced.

NOTE


When washing the exterior of the motorhome, avoid a direct stream of water into the outside furnace vents. This can cause damage to the furnace.

If the Furnace Fails to Light

If the furnace fails to light make sure the LP-Gas primary supply valve is open. The furnace will not light if the blower motor is not spinning to its specified speed. This may be due to a low house battery charge condition.

To Charge the House Batteries:

- ◆ Hook-up to shore power.
- ◆ Start the generator.
- ◆ Start the main engine to charge the batteries.

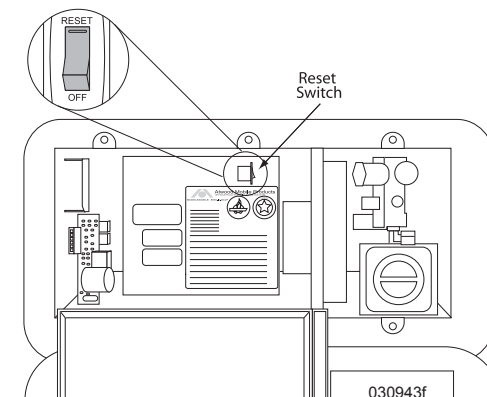

If the blower fails to operate after verifying the batteries are charged and the fuses are good, use a screwdriver to open the outside access door. Push the reset switch to off then to reset.

WARNING

If you smell gas and the blower motor is spinning, do not attempt additional furnace operation as this may result in an explosion, fire or personal injury. Contact a qualified technician.

WATER HEATER

The water heater uses two different methods to heat water: (1) 120 Volt AC, supplied either by shore power or the on board generator (2) LP-Gas. The 120 Volt AC function is most energy efficient when operated from shore power. The burner for LP-Gas operation is controlled by an automatic ignition circuit board powered by 12 Volt DC. Two thermostats control water temperature, one for 120 Volt AC and the other for LP-Gas. Thermostat temperature is preset by the water heater manufacturer and not adjustable. For ease of winterization, the water heater is equipped with a tank drain plug and bypass valve.

NOTE


Refer to the Water Heater OEM manual for detailed instructions.

Before Using the Water Heater:

Use water to purge air from the water system and water heater and if necessary, purge FDA approved RV antifreeze from the system.

To Purge Air and Pressurize the System:

- ◆ Turn the water heater bypass valve (located at the back of the water heater) to Normal Flow. If necessary install drain plug. Depending on floor plan, the water heater can be located in one of several areas. One location is in the bedroom closet. Once inside closet, open access door for access. Another location is in a curbside compartment. Open the compartment door then open the small access door to access the back of the water heater and bypass valve.
- ◆ Fill the fresh water tank or hook to city water.
- ◆ Turn on the water pump or city water.

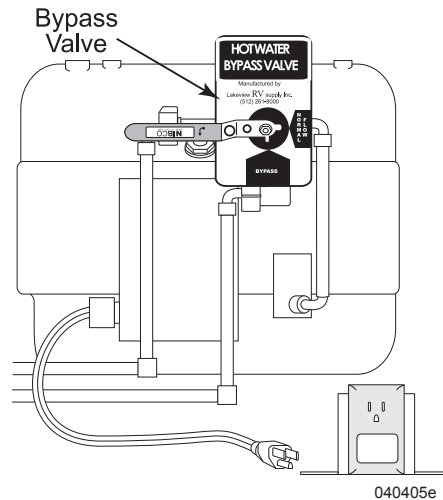

- ◆ One at a time, open the hot and cold valves of all faucets until a steady stream of clear water flows with no bubbles or pockets of air. Do not operate the water heater until the system is purged of air.

- ◆ Inspect the water heater and water system for leaks after the water system is purged of air.

CAUTION

After purging the water lines and water heater, small air pockets or hydrogen gas may be present. After the first heat cycle of the water heater, initially open hot water faucets slowly to minimize potential spattering of hot water.

WARNING

IF YOU SMELL GAS extinguish all open flame and turn off the primary LP-Gas valve. Do not touch any electrical switches. They may cause a spark that can ignite. Open all windows and doors. Evacuate the motorhome. Propane is a “heavy” gas and will lie on the floor and “hide” in corners. Liquid propane is highly volatile, explosive and extremely dangerous. Explosion, fire, property damage, injury or death can result. Contact a qualified service center to repair LP-Gas leaks before resuming operation.

Water Heater Operation:

- ◆ Turn on the battery cut-out switch.
- ◆ 120 Volt AC is supplied from shore power (preferred) or the generator.
- ◆ The house batteries are charged.
- ◆ Open the primary LP-Gas valve on the LP-Gas tank.

NOTE

Do not operate the water heater without water. Damage to the thermostats and electric heating element can occur.

Heating Water with 120 Volt AC:


- ◆ Have either shore power (preferred) or the generator supplying AC voltage.
- ◆ Press the water heater 120 Volt switch. The indicator lamp will glow steady.

NOTE

It is not fuel efficient to use the generator to operate the water heater on 120 Volt AC.

Heating Water with LP-Gas:

- ◆ Turn on the LP-Gas.
- ◆ Press the water heater 12 Volt switch. The indicator lamp will glow steady. A flashing lamp will indicate lockout. Press the switch twice to reset the ignition cycle.

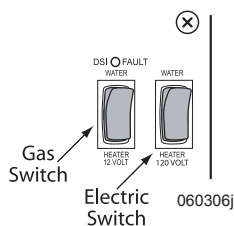

NOTE

LP-Gas and 120 Volt AC functions can be on at the same time. This will speed up the process of heating water for large volume use.

CAUTION

It is recommended not to operate the water heater on LP-Gas while the motorhome is in transit. Be sure the water heater is off before refueling.

NOTE

Due to potential air in the LP-Gas lines, the water heater will attempt three ignition cycles. If the burner does not light after the third attempt, the LP-Gas function will “lock-out.” Reasons for lockout may be air in the gas system or burner tube obstructions caused by an insect or spider web.

WARNING

Before beginning any service or work on the water heater make sure the LP-gas is turned off, the 120 Volt AC source has been disconnected and the 12 Volt DC source has been disconnected. Failure to do so can result in explosion, fire or injury.

High Temperature Thermostat:


Separate thermostats are used for LP-Gas and AC electric. If a thermostat fails, a high-temperature safety limit switch will open.

CAUTION

If the high-temperature safety limit should open, discontinue using the water heater. Have the water heater inspected by a qualified technician to determine the cause of the over temperature condition.

Water Heater Bypass Valve:

The bypass valve is located at the back of the water heater. Depending on the floor plan, the water heater can be located in one of several areas. One location is in the bedroom closet. Once inside the closet, open access door. Another location is in a curbside compartment. Open the compartment door then open the small

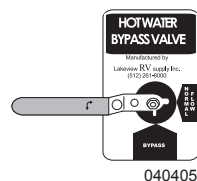


access door to access the back of the water heater and bypass valve. Turning the valve to the bypass position prevents water from entering the water heater. Turn the valve to the bypass position when winterizing. For normal operation, turn bypass valve to normal flow.

Pressure & Temperature Relief Valve:

The water heater is equipped with a Pressure & Temperature (P & T) relief safety valve.

The P & T valve is designed to open if water temperature in the tank exceeds 210° F (98.8° C) or internal pressure exceeds 150 psi. If water begins to weep from the valve, it may be due to a loss of the air pocket in the tank and not a defective valve. See re-establishing the air pocket.

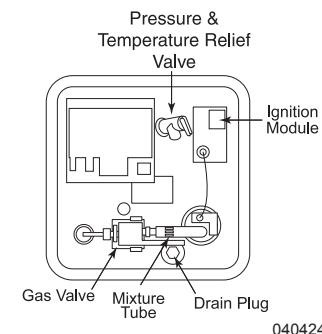

Re-establishing the Air Pocket:

Water may weep from the P & T valve under normal operation. This is not necessarily a faulty valve but more likely caused by lack of an air pocket and water expansion. The water heater tank is designed with an internal air pocket. Eventually, the cyclic expansion of water will absorb the air pocket. When weeping from the valve occurs, the air pocket will need to be re-established utilizing the following procedure. If the valve continues to weep after establishing the air pocket, contact a qualified service center to evaluate the valve.


CAUTION

Ensure the water heater is cool prior to establishing the air pocket.

1. Turn Off the water heater.
2. Turn Off the incoming water supply.
3. Open the hot water faucet closest to the water heater.
4. Open the handle of the P & T valve.
5. Allow excess water to drain from the water heater through the P & T valve. When draining is complete, close the P & T valve by allowing it to snap shut. Close the faucet and turn on the water supply.
6. Turn on the water heater.

Water Heater Compartment:

Periodically inspect the water heater compartment and door screen for foreign material that can prevent the flow of combustion and ventilating air. The water heater drain plug and pressure relief valve are located inside.

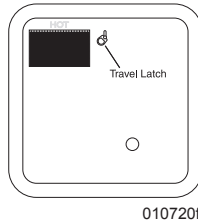**CAUTION**

Do not block any opening.

Tips:

- ◆ Turn off the water heater when not in use to conserve energy.
- ◆ Shut the water off when not rinsing.
- ◆ Operate the water heater using LP-Gas when hooked to 30 Amp shore power. This will reduce the likelihood of tripping the shore power breaker. When the water heater element is in operation,

it will use approximately 12 Amps at 120 Volts AC. Appliances that operate from 120 Volts AC may need to be operated in sequence to avoid tripping a breaker.

Draining & Storage:

Drain the water heater to prevent freeze damage if the motorhome is to be stored during the winter months.

1. Turn off electrical power to the water heater.
2. Shut off the primary LP-Gas valve.
3. Open low point drains.
4. Open both Hot and Cold on all faucets.
5. Remove water heater drain plug.
6. Turn the bypass valve to the bypass position.

NOTE

Be sure to refill the water heater with water before resuming operation.

Troubleshooting:

- ◆ Check the burner tube for obstructions if the water heater fails to light. Insects may make nests in the burner tube. It is recommended to clean the burner tube with a brush and not compressed air. Compressed air may not fully remove the obstruction.
- ◆ If the indicator light on the switch does not light and the water heater does not light, ensure interior house power is on or check for a blown fuse in the house distribution panel.
- ◆ If the water heater fails to operate after checking the fuses, the high-temperature safety limit switch may be tripped. Have a qualified technician inspect the water heater.

WASHER/DRYER PREPARED

If the motorhome was not ordered with an optional washer/dryer, it will have a washer/dryer preparation package installed from the factory. The washer/dryer “prep” package includes the following items:

- ◆ Two color coded water supply lines. A red line for hot; a blue line for cold.
- ◆ A 1½” water drain line with threaded cap, P-trap and an automatic vent cap.
- ◆ A 120 Volt receptacle located in the compartment.

NOTE


Sidewall dryer vents are not part of the prep package. If a sidewall vent is to be installed, properly seal vent to sidewall.

If a washer/dryer is to be installed at a later date, follow all the manufacturer’s installation instructions.

Listed here are further instructions which should be adhered to for safe and reliable operation:

- ◆ Do not connect the clothes dryer exhaust duct to any other duct, vent or chimney.
- ◆ Do not terminate the exhaust duct beneath the motorhome.
- ◆ Use proper length fastener when attaching exhaust vent to exterior sidewall. Stainless steel fasteners are best suited for this as they will not rust.


- ◆ If the cabinet or closet in which a washer/dryer is installed does not have vented louvered doors, the manufacturer's installation instructions may require installation of vented doors or vents to be installed for sufficient circulation of air.

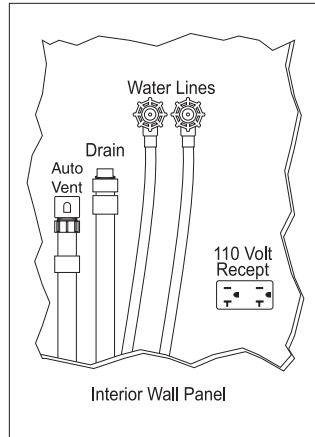

Location of specified parts may vary within wall panel depending on floor plan and model. 040495

WASHER/DRYER (OPTIONAL)

The automatic washer/dryer is front loading with an extra large door opening for easier access. Several wash and dry programs are available along with variable water temperature settings.

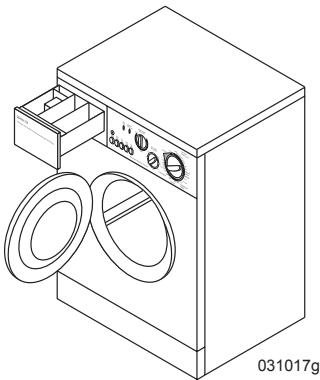

- ◆ The washer/dryer operates on 120 Volt AC from shore power or the generator.
- ◆ The washer/dryer uses about 12 to 20 gallons of water per wash cycle. The washer drain line is generally connected to the grey or black holding tank.

When the black (solid waste water) holding tank is used, open the drain valve to drain the washer water into the drain service. The black tank drain valve must be closed when not in use to prevent clogging.

When the grey (waste water) holding tank is used, open the drain valve to drain the washer water into the drain service. The grey tank drain valve can be left open when the washer is not being used.

CAUTION

It is highly recommended that the motorhome is hooked to shore services when using the washing machine due to limited fresh water supply and limited grey tank capacity. On certain model floor plans, the washer may drain into the black tank.

INFORMATION

Refer to the manufacturer's manual for detailed operating instructions.

WARNING

Open a window or vent while operating the dryer. The washer/dryer can create negative air pressure inside the motorhome that can accumulate Carbon Monoxide or LP-Gas while operating fuel-burning appliances.

CAUTION

Do not use the washer/dryer while traveling. Suspension movement, combined with the weight of the drum while in the wash cycle, can damage the internal components of the washer/dryer.

Before using the washer, after winter storage or a long period of non-use, it is a good idea to conduct this simple test procedure prior to loading the machine for use. This procedure will verify all the hardware and electronic components are functioning properly. Wipe the inside and outside with a damp cloth to remove any travel dust that has accumulated.

NOTE

Perform this test before putting the washer/dryer in use or after the winter months. This will clear the water lines and drum of winterization antifreeze.

Operation

Test Procedure Requirements:

- ◆ Make sure water supply lines are secure and fresh water valves are open.
- ◆ Hook to city water or turn on the water pump.
- ◆ Hook to shore power or start the generator.

To Conduct the Test Procedure:

1. Set the selector knob to Reset.
2. Set the Dry Timer knob to 30 minutes. Push the On/Off button to **ON**. Wait 5 seconds. The Auto Dry light should be on and the Status light flashes fast then slow.
3. Set the selector knob to a wash cycle. Set Wash Temp knob to Warm. Water should be flowing into washer and drum should rotate both directions.
4. Set the selector knob to Reset. Wait 5 seconds.
5. Set the selector knob to Spin. Water should drain and drum rotation should speed up.
6. Set the selector knob to Reset. Wait 5 seconds.
7. Set the selector knob to Dry. Dryer fan should begin and drum should rotate both directions.
8. Set the selector knob to Reset. Wait 5 seconds.
9. Set the Dry Time knob to zero. The Auto Dry light should go off.
10. The door will unlock in 2 minutes or less. The Status light flashes fast then slow. The door should now open.

11. Push the On/Off button to Out (**OFF**) position. The Status light should be off.
12. If applicable, close the holding tank drain valve.

WARNING


Do not wash or dry articles that have been cleaned, washed, soaked or spotted with gasoline, dry cleaning solvents or other flammable or explosive substances.

CAUTION

Do not use washer/dryer to dry articles containing rubber-like materials

To begin a wash load:

- ◆ Sort and pre-treat clothes.
 - ◆ Add the measured amount of detergent suggested by the package directions (maximum 2 tablespoons).
 - ◆ Load the clothes loosely into the washer. Close the washer door.
 - ◆ Turn the Wash Temperature knob to the desired temperature setting.
 - ◆ Choose the desired washing cycle option using the Selector knob.
 - ◆ Load wash tray with detergent.
 - ◆ Turn the power **ON**.
- ◆ After the cycle is complete, wait 2 minutes for the door lock to release before attempting to open the door.
 - ◆ If applicable, turn the power **OFF** and close the holding tank drain valve.

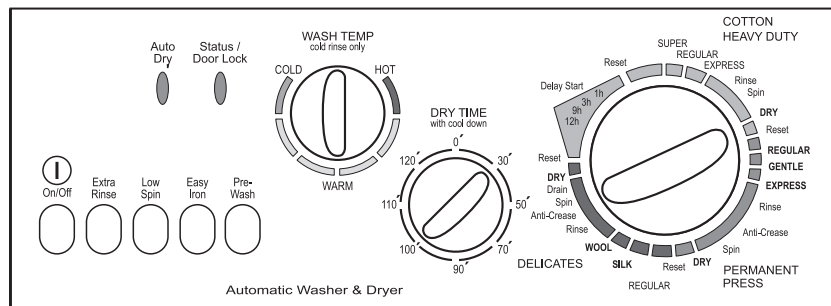


031017e

Washer/Dryer Maintenance

Occasionally wipe the exterior cabinet of the washer/dryer with a damp cloth or sponge. Wipe dry with a soft cloth. Do not use polish on plastic trim. In areas of hard water, detergent can accumulate in the drum. Obtain a packaged water softener. Add quantity as specified by the manufacturer directly to the drum. Run the washer through a complete cycle using hot water. Repeat the process if necessary. Remove hard water deposits using only cleaners labeled as washer safe. Wipe the inside of the washer/dryer door with a soft cloth to remove moisture. Periodically apply a thin coat of paste wax to the inner door, especially to the area immediately next to the door window, to protect the door finish from laundry spills and discoloration.

Reduced water flow to the washer/dryer may indicate the Hot and Cold water inlet screens are clogged. Remove water pressure and undo water lines at the back of the washer/dryer. Use tweezers or pliers to remove screens from fittings. Clean and install screens and water lines. Hook to city water or turn on the water pump. Check for water leaks before using the washer/dryer.

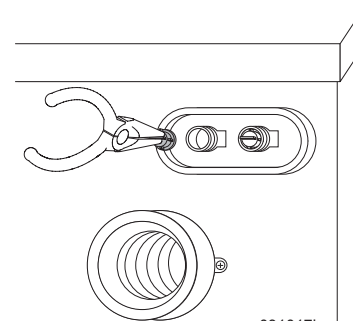

031017b

NOTE

Should the washer/dryer need removal for service, care should be taken as the washer/dryer weighs about 170 lbs. Use proper accommodations to avoid injury or damage to the cabinetry.

Winterizing the Washer/Dryer

Winterize Using Air Pressure:

1. Refer to Section 6 “Winterizing” and prepare water system for air pressure.
2. Rotate Selector knob to a wash position with the Wash Temp setting on Warm. Press the power button to **ON**. Air pressure clears the Hot and Cold water lines.
3. After water lines are clear, rotate Selector knob to Spin. Allow the pump to drain the drum.
4. Set Selector knob to Reset and Timer to zero. The door unlocks in 2 minutes or less. Open door and pour in ¼ gallon of non-toxic antifreeze.
5. Set selector knob to Spin. The pump primes with antifreeze. Set selector knob to Reset and turn the power **OFF**.

Winterize Using Non-Toxic Antifreeze:

1. Refer to Section 6 “Winterizing” and prepare water system to use non-toxic antifreeze.
2. Turn on water pump. Rotate selector knob to a wash position with the Wash Temp setting on Warm. Turn power button **ON**. Allow antifreeze to enter the drum.
3. After water lines are filled with anti-freeze, rotate selector knob to **SPIN**. Allow pump to drain the drum.
4. Set selector knob to **RESET** and timer to zero. The door unlocks in 2 minutes or less. Turn power **OFF**.


5. Any remaining liquid should contain a sufficient amount of antifreeze to be protected from freezing.

NOTE

After winter storage, perform a test procedure before washing or drying any laundry to ensure all antifreeze has purged.

CENTRAL VACUUM (OPTIONAL) Operation

- ◆ Start generator or plug into shore power.
- ◆ Lift lid on wall receptacle to start vacuum. Insert the hose in the receptacle and release lid.
- ◆ Connect desired attachment on hose and start vacuuming.

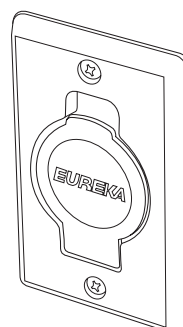

031264f

Inlet located in living room area.

NOTE

Consult OEM manual for detailed operation and maintenance.

Maintenance



Vacuum has a thermal protector built into the motor to prevent overheating. If motor will not operate, it will automatically reset in about ½ hour. If motor brushes or bearings are worn out, the circuit protector will trip off again after a short period of time. If this happens, contact a qualified service representative. Depending on floor plan, the vacuum is located in either a

roadside or curbside compartment or under the bed.


Changing the Bag:

To keep your vacuum at top efficiency, change the filter bag at regular intervals. To maintain cleanability, replace filter bag when it is about ¾ full.

1. Unplug the power unit from grounded outlet.
2. Rotate the bag cover counterclockwise and remove cover.
3. With a finger on each side of the inlet, slide the bag off the inlet tube.

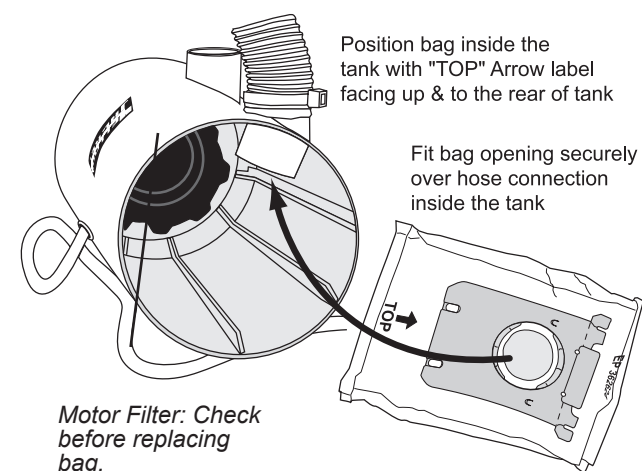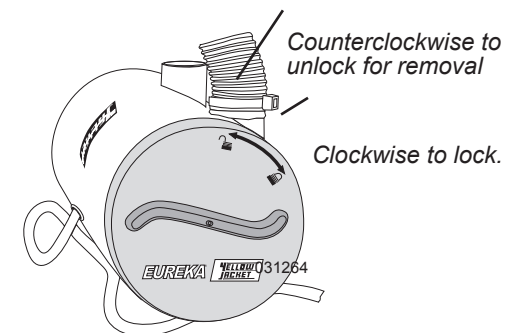

031264c

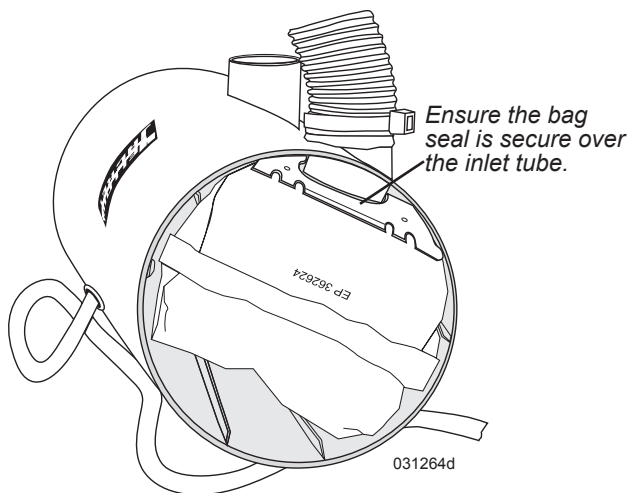

4. Pull the center cardboard tab to automatically seal the bag and prevent dust leakage.
5. Remove the bag from the vacuum and discard. **DO NOT** reuse.
6. Check support (motor) filter.
7. Unfold the new “OX” bag and insert into the vacuum so the center cardboard seal tab is toward bag cover. The top arrow should point to the bag cover.
8. With a finger on each of the cardboard tabs, slide the bag on the inlet tube.
9. Line up the mark on the bag cover with the unlock symbol and rotate clockwise to lock symbol.

Replacing & Cleaning the Support (Motor) Filter:


1. Inspect during each bag change. The filter should be cleaned every fifth bag replacement or when excessively dry.
2. Remove dust bag as previously instructed.

3. Locate the support (motor) filter in the bottom of the bag compartment and lift out.
4. Clean by rinsing under warm water and let air dry if heavily soiled. Replace torn or obstructed filters.
5. Reinstall dry motor filter before use. Be sure filter is tucked under retaining tabs.
6. Reinstall bag as previously instructed.

WARNING

To reduce the risk of fire, electric shock or injury:

- ◆ **Unplug and disconnect power before servicing.**
- ◆ **Avoid wet surfaces.**
- ◆ **Use only manufacturer’s recommended attachments.**
- ◆ **DO NOT use without dustbag and/or filters in place.**
- ◆ **DO NOT pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.**
- ◆ **Use extra care when cleaning on stairs.**
- ◆ **DO NOT use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.**

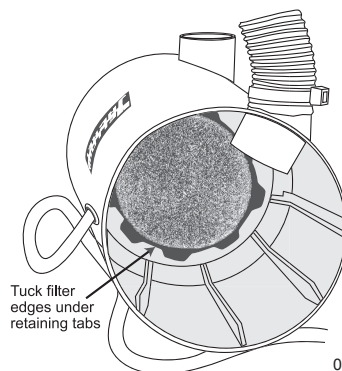

Diplomat 2007

Equipment — Section 5

EQUIPMENT - INTRODUCTION	96	SWIVEL SEATS	106	TV ENTERTAINMENT COMPONENTS	114
ENTRY STEP	96	SOFA	106	Television (Front) Lockout Feature	114
Operation	96	Easy Bed Sofa.....	106	Connections - Cable TV, Computer	
Step Cover	96	Hide-A-Bed (Optional)	107	& Phone.....	114
Stepwell Storage Compartment	97	Magic Bed Conversion (Optional)	107	TV Antenna	114
GRAB HANDLE	97	J-Lounge (Optional)	107	Video Selector Box.....	115
ENTRY DOOR	97	AIR MATTRESS (OPTIONAL)	108	Satellite System - DSS Prewire	116
KEYLESS ENTRY (OPTIONAL)	98	Select Comfort Air Mattress (Optional)	108	DASH RADIO	117
Operation	98	FREE STANDING DINETTE	109	Operation	117
MAIN SLIDE-OUT OPERATION	98	LEGLESS BOOTH DINETTE		DISC CD CHANGER (OPTIONAL)	117
Extending & Retracting Slide Rooms.....	98	(NOT ON ALL UNITS)	109	BEDROOM CLOCK RADIO WITH	
Troubleshooting	99	Bed Conversion.....	109	CD/DVD (OPTIONAL)	117
Manual Override	99	STORAGE UNDER BED	110	HOME THEATRE SURROUND SOUND	118
Bedroom Slide-Out	100	LADDER - REAR	110	Surround Sound Speaker Switch	118
Troubleshooting	101	STORAGE BAY SLIDE-OUT TRAY	110	Surround Sound Entertainment Systems	118
Manual Override.....	101	CITIZEN BAND (CB) RADIO - PREP	110	Surround Sound Entertainment Systems	
AWNINGS	102	GPS NAVIGATION (OPTIONAL)	110	(For Motorhomes That Do Not Have	
Slide-out Cover	102	SATELLITE RADIO (OPTIONAL)	111	Bedroom On/Off Switch)	119
Front Door - Mirage.....	102	ALADDIN™ SYSTEM (OPTIONAL)	111	SATELLITE	119
Window Awning	102	Aladdin™ Operations.....	112	Stationary System (Optional).....	119
Patio Awning - Eclipse.....	103	Aladdin™ Main Menu	112	In-Motion System (Optional).....	121
Awning Care & Cleaning.....	103	Voyager Select Button	112	EXTERIOR ENTERTAINMENT CENTER	
Storm Precautions	103	Coach Info	112	(SHARP TV OPTIONAL)	121
FANS	104	Trip Meter Selection.....	113	SYSTEMS CONTROL CENTER	123
Automatic	104	Select Video Source	113	WIRING DIAGRAM -	124
Rain Sensor Fan (Optional).....	104	Time and Alarm Functions.....	113	HOME THEATRE SYSTEM	124
BEDROOM CEILING FAN (OPTIONAL)	105	System Options	113		
SUNVISORS	105	Power Down Aladdin	113		
DOOR - SLIDING	105				
SEAT CONTROLS	106				

EQUIPMENT - INTRODUCTION

This section covers the basic operation and care of equipment found in the motorhome, most of which are provided for entertainment and comfort. More detailed information about specific equipment may be found in that particular manufacturer's manual. Optional equipment will also be discussed in this section which may not apply to all motorhomes.

INFORMATION

Detailed information with CAUTION or WARNING instructions for the various electronics, other than what is provided in this section, can be found in that specific manufacturer's manual.

ENTRY STEP *Operation*

The exterior electric entry step features retractable steps, automatic retraction with the ignition key in the **RUN** position and a last out feature.



Located on ^{080498z}
passenger side.

NOTE

Turn off the power switch to the step when dry camping to avoid draining the chassis battery.

Operating the Entry Step:

1. With the entry door open, turn the step switch on.
2. Close the door. The step should retract and lock in the **IN** position.

3. Open the door. The step should extend and lock in the **OUT** position. The step will retract when the door is closed.
4. When the switch is turned off, the step should remain in the extended position. Close the door and turn on the ignition switch. The step will retract for travel.
5. With the power switch off, the step extended, the entry door closed and the ignition turned on, the ignition override system will engage to automatically retract the step.
6. Turn the ignition off and open the door. The step will extend and lock in the **OUT** position. This is the "last out" feature. When the ignition is on the step will always activate with door movement, regardless of the power switch position.

CAUTION

High curbs can impede step operation. Use care when parked on side streets.

If the entry step fails to operate:


- ◆ Verify that the entry step switch is **ON**.
- ◆ Check the main power supply for the step: a 25 Amp fuse located in the roadside front distribution panel.
- ◆ A magnetic door jam switch is used to control step operation. Use a separate magnet to apply a "trigger" to the door jam switch. Rotate test magnet to align polarity field.

WARNING

If the motorhome is driven with the step in the extended position there is the possibility of causing major damage to both the step and the motorhome.

Lubrication:

Keeping the step clean is essential for smooth and reliable operation. Before applying a quality silicone based grease on the moving parts, thoroughly clean the step using a pressure washer or a stiff nylon bristle-brush and automotive detergent. Allow the step to thoroughly dry. Lubricate approximately every thirty days.

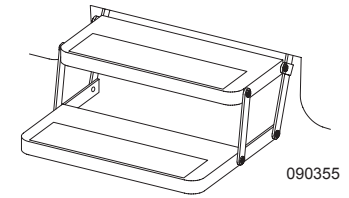

CAUTION

Keep fingers, clothing and other hardware away from moving components.

NOTE

Clean and lubricate step more frequently in adverse weather conditions. Mud, snow, road salts and sand quickly break down lubricant and corrode painted surfaces.

NOTE

WD-40 is not recommended, as it has a tendency to evaporate and dry the mating surfaces, which leaves them vulnerable to the elements.

Step Cover

An electrically operated stepwell cover will extend and retract using the switch on the center console. Power is supplied by a 15 Amp fuse in the roadside front electrical bay.

To operate the Stepwell Cover:


- ◆ 1. Chassis Battery Disconnect must be on.
- ◆ 2. Press and hold the Step Cover switch to the desired direction. Release the switch to stop movement.

CAUTION

When operating the stepwell cover, make sure there are no pets, shoes or other obstructions in the stepwell area. DO NOT operate the stepwell cover while standing in the stepwell area.

Stepwell Storage Compartment

The interior stepwell features a storage compartment in the upper step. This compartment is ideal for storing such items such as gloves (for refueling), tire pressure gauge, flashlights or outside slippers.

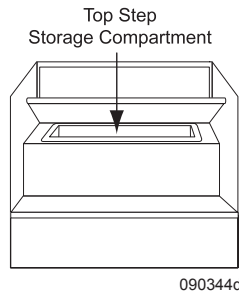**GRAB HANDLE**


The grab handle is used to aid in entering and exiting the motorhome.

WARNING

Clean the acrylic grab handle using mild Soap and Water only! Do Not use alcohol based glass cleaners as these solutions adversely affect acrylic material causing stress cracks leading to eventual failure of the grab handle. Use of alcohol based cleaners combined with heat and light will expedite deterioration of the acrylic material.

ENTRY DOOR

The entry door is adjusted at the factory and tested for all operations. The door uses two separate locks for safety and security. One locking system is the door lock and the other is a dead bolt. The door handle incorporates a primary and secondary latching system. This is used to ensure secure and safe latching. There are adjustments which can be made to help maintain entry door performance.

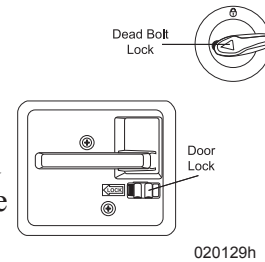**Adjusting the Entry Door Latch:**

- ◆ Determine which bolt needs adjustment.
- ◆ Slowly close the entry door observing the latch and strike bolt alignment. Do not attempt to latch if the alignment is off. If the alignment is correct, allow the latch to catch in the first (primary) position only.
- ◆ The latch should move to the second position with only slight pressure applied to the entry door. Upper and lower latches should be evenly timed. Press on the entry door to check for further movement.
- ◆ The entry handle should operate with little effort to open the entry door. Excess pressure indicates the bolts are set too far back.
- ◆ With a box wrench or socket, loosen the movable strike bolt. Make all adjustments in small increments. Tighten the bolt firmly after making adjustments.

The bolts should have slight up and down movement for vibration control in travel.

- ◆ Test the operation of the dead bolt lock to ensure proper functions.
- ◆ Apply silicone weekly to the entry door rubber gaskets to prevent squeaking while the motorhome is in use. Use a 1” sponge paint brush, sprayed with silicone for easy application.

CAUTION

When operating the entry door, ensure the dead bolt latch is fully unlocked prior to closing. Failure to do so can result in damage to the dead bolt and/or entry door.

Changing Screen Door Glass:

- ◆ The screen slider is Tuffak; the slider can be bowed for removal and replacement.
- ◆ Replace with new Tuffak and reverse the procedure.

Adjusting the Screen Door:

- ◆ Loosen the bolts on the hinge side of the screen door; two on the top and two on the bottom.
- ◆ The steel hinge has slots to allow movement.
- ◆ Four Phillips type screws are on the top hinge, and four on the bottom hinge, to adjust the screen door to properly fit to the entry door. The hinge should fit tightly to the trim of the door when the screen door is latched to the door and the door is open.


Removable Screen:

- ◆ The top half of the screen door is removable, allowing a clear view through the entry door glass while in operation.
- ◆ To remove the top half of the screen door for travel, rotate clips and remove the screen.
- ◆ To store the screen for travel, use the clips provided on the bottom half of the screen door.

KEYLESS ENTRY (OPTIONAL) Operation

Key Fob:

1. Locks entry door.
2. Unlocks entry door.
3. Locks and Unlocks all compartment doors.
4. Horn.

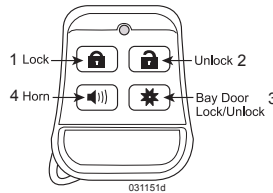**NOTE**


Key fob operation distance is approximately within 50 feet of the motorhome. If the door locking mechanism is not audible, marker lights will flash when the doors are unlocked or locked.

MAIN SLIDE-OUT OPERATION

Slide room operation uses safety features to prevent mechanical damage or physical harm. Slide room(s) will not operate until all safety requirements are met.

Safety Requirements:

- ◆ Ensure the ignition key is in the **OFF** position when extending to the **OUT** position.
- ◆ The park brake must be applied.

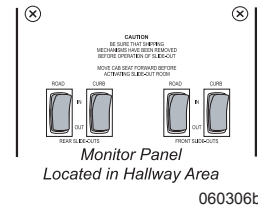**CAUTION**

DO NOT leave the slide room extended during severe weather. Conditions such as high winds or heavy rain may cause damage. Rain water can pool on the slide room awning, adding weight and causing the awning to sag. Retract the room in small increments to allow water run off.

CAUTION

Never move the motorhome with any slide room extended.

NOTE

Perform the slide-out room operation with the air suspension system full. Extensive damage could occur to the slide-out room and awning when extending the slide-out room in snow, sleet, ice or freezing rain conditions. In such conditions, if the slide-out room is extended, clear the awning and ensure free movement prior to operating the slide-out room.

Guidelines to ensure long life of slide system:

- ◆ **Inspect** roof of the slide for debris such as pine needles, dirt, leaves, sticks, etc. Debris left on the top may cause damage to the seals during retraction. If debris is present, wash with soap and water, then

rinse.

- ◆ When the room is out, visually **inspect** the wipe seal for dirt or other foreign material and for tears.
- ◆ If the slide room leaks, fully retract the room. If necessary, tape exterior opening closed with duct tape until repairs to the motorhome can be completed.
- ◆ Open a window or vent to equalize pressure during slide operation.

CAUTION

Firmly latch all cabinet doors adjacent to the slide before extending or retracting the rooms. Damage to doors or the fascia may occur.

NOTE

Dirt and grit trapped under the slide room could result in damage to the floor. Clean the floor before retracting the slide room.


NOTE

DO NOT use petroleum based products on the slide seal. Petroleum based products can damage the paint and will cause premature aging of the rubber seal.

Extending & Retracting Slide Rooms**To Extend or Retract Slide Rooms:**

- ◆ Move the driver seat forward. Clean the floor of dirt or grit that could result in damage during operation.
- ◆ Confirm there is enough clearance inside/outside the motorhome for the room to extend/retract.

- ◆ If equipped, retract hydraulic jacks.
- ◆ Apply park brake.
- ◆ Confirm the house batteries are fully charged and operating.
- ◆ People, pets and objects must be clear of the slide room path.
- ◆ Remove the lock bars if extending.
- ◆ Locate the slide-out room control switch. Press and hold the slide room switch to the desired (IN or OUT) position.
- ◆ Release the switch anytime to stop room movement. The drive motor will not automatically stop; the switch must be released. A change in motor sound indicates full extension/retraction.
- ◆ If applicable, install any lock bars for travel.

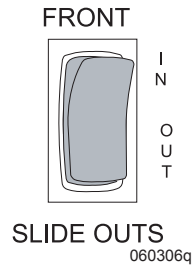

room, ensure there is sufficient clearance inside the motorhome. Move the driver seat forward before activating the slide room.

CAUTION
If a problem with the slide-out occurs, contact a qualified technician.

Troubleshooting


If the slide room does not operate, a safety feature may be engaged to prevent room operation.

If the slide room does not respond from the switch:

- ◆ Is the ignition key OFF when extending room to the OUT position?
- ◆ Is the park brake applied?

If the slide room does not operate after checking the safety requirements:

- ◆ Examine all electrical connections at the slide-out switch.
- ◆ Check the fuse and auto-reset circuit breaker on the slide-out relay module located in the curbside battery compartment. Once inside the compartment open the black box to access fuse and circuit breaker.
- ◆ Check the slide-out relay fuse found in the roadside front distribution panel.
- ◆ House batteries are fully charged.
- ◆ For hydraulic pump system (40' SFT

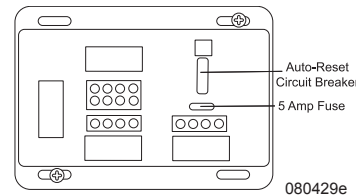

model only) check fluid level in reservoir. Maintain fluid within 1/2" from top of reservoir when slide-outs are completely retracted. Use automatic transmission fluid (ATF) such as Dexron 5 or Mercon 3. The hydraulic pump is located in a rear roadside compartment with vents. Use a barrel key to unlock the compartment, then use the barrel key to unlock the air conditioner condenser compartment. Hydraulic pump is located inside the compartment.

- ◆ It may be necessary to contact a repair facility to have the problem diagnosed and repaired.

WARNING
DO NOT work on slide-out system unless the battery is disconnected. Make sure floor is clean before retracting slide-out room.


Manual Override

Depending on floorplan the main slide-out (living room) may have either an electric motor system or a hydraulic pump system (40' SFT model only).

To Move the Main Slide Room (Electric Motor System) Manually:

1. Access the slide room electric motor. Depending on floorplan, the motor is located in either a curbside or roadside compartment. The motor is at the top of the compartment.


CAUTION
Remove lock bar prior to extending slide-out.

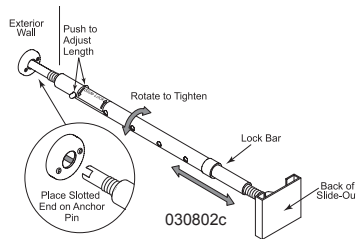

CAUTION
Continuous operation of the slide room can drain the batteries and overheat the motor.

WARNING
The outside area must be clear of obstructions that can restrict slide room operation. Ensure there is five or more feet of clear space outside the slide room prior to extending the room or damage to the slide, the motorhome or property can occur. When retracting the slide


- Remove 12 Volt DC power from the slide-out motor by disconnecting the electrical plug. The plug can be located by following wires that run from the motor to the plug.

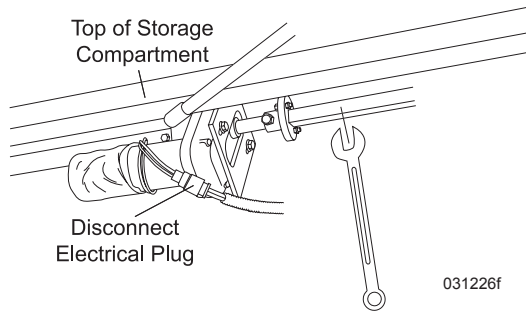

- Attach a crescent wrench to the electric motor drive shaft. Turn counterclockwise to bring slide room in, turn clockwise to move slide room out.
- Take motorhome to an authorized repair center.

To Move the Slide Room (Hydraulic Pump System) Manually:

- Access the slide room hydraulic pump.
- Remove the protective label.
- Attach a standard 1/4" hex bit into a cordless drill, screwdriver, or ratchet wrench.

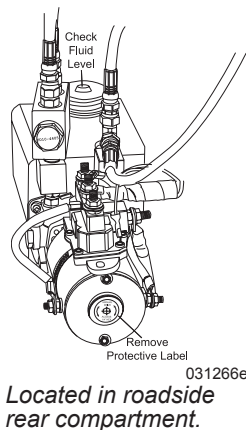

- Insert the 1/4" hex bit into the coupler found under the protective label.
- Run drill forward or clockwise to extend slideout room and in reverse or counterclockwise to retract slideout room.
- Take motorhome to an authorized repair center.

Bedroom Slide-Out

The bedroom slide-out operates electrically using safety features to prevent mechanical damage or physical harm. Prior to moving the slide-out, firmly latch cabinet doors located adjacent to the slide-out. Damage to the door or fascia can occur.

To Extend the Bedroom Slide-out:

- ◆ Confirm that there is at least five feet of clearance outside the motorhome for the slide-out room to extend.
- ◆ Turn the ignition key to the **OFF** position.
- ◆ Confirm the house batteries are fully charged.
- ◆ Locate the control switch for the slide-out.
- ◆ People, pets and objects must be clear of the slide-out room path.
- ◆ Press and hold the slide-out room switch in the **OUT** position.
- ◆ Release the slide-out switch when the room is fully extended (a change in motor sound indicates full extension). The slide-out drive motor will not stop automatically; the switch must be released.

WARNING

Firmly latch all cabinet doors adjacent to the bedroom slide-out before extending or retracting the room. Damage to doors or fascia can occur

CAUTION

Dirt and grit trapped under the slide could result in damage to the floor. Continuous operation of the slide-out could cause a drain on the house batteries and damage to the motor from overheating.

NOTE

DO NOT leave the slide-out room extended during severe weather. Conditions such as high winds or heavy rain may cause damage.

To Retract the Bedroom Slide-out:

- ◆ Check for sufficient clearance inside the motorhome before retracting the slide-out room.
- ◆ Clear the floor to ensure there are no objects that could result in floor or slide-out damage during retraction.
- ◆ Remove any debris from the top of the slide-out room.
- ◆ Prior to retracting the slide-out room, start the motorhome. Allow the air bags to fully inflate to normal travel height.
- ◆ Retract the leveling system.
- ◆ Confirm the house batteries are fully charged.
- ◆ Locate the control switch for the slide-out.
- ◆ People, pets and objects must be clear of the slide-out room path.

- ◆ Press and hold the switch in the **IN** position. The slide-out room will move slowly in. The motor will change tone when the slide-out is fully retracted.
- ◆ Release the switch.

CAUTION

Continuous operation of the slide-out can drain the battery and damage the slide-out motor by overheating. Never move the motorhome without having the slide-out retracted.

Troubleshooting

If the slide room does not operate, a safety feature may be engaged to prevent room operation.

If the slide room does not respond from the switch:

- ◆ Is the ignition key OFF when extending room to the OUT position?
- ◆ Is the park brake applied?

If the slide room does not operate after checking the safety requirements:

- ◆ Examine all electrical connections at the slide-out switch are good.
- ◆ Check the fuse and auto-reset circuit breaker on the slide-out relay module located in the curbside battery compartment.
- ◆ Check the slide-out relay fuse found in the roadside front distribution panel.
- ◆ House batteries are fully charged.

- ◆ It may be necessary to contact a repair facility to have the problem diagnosed and repaired.

WARNING


DO NOT work on slide-out system unless the battery is disconnected. Make sure floor is clean before retracting slide-out room.

Manual Override

Depending on floorplan, the bedroom may have either a cable or an above floor slide-out system. The above floor slide-out is used when the bed moves with the slide out. If the closet moves with the slide-out, the system is cable. Another method of checking for the cable system is with bedroom slide-out extended a cable is visible under the slide-out.

To Move the Bedroom Slide Room (Above Floor System) Manually:


1. Turn off both the battery and house disconnect switches.
2. The above floor slide-out motor is located under the bed. Lift the bed and remove the access panel.
3. Disconnect the slide-out motor electrical plug to remove 12 Volt DC power from the slide-out motor. The plug can be located by following wires that run from the motor to the plug.

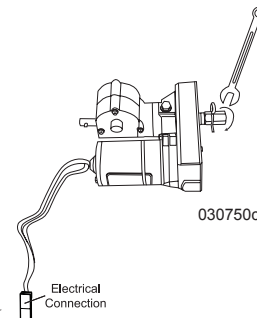

4. Use a wrench to turn driveshaft and retract room.
5. Once the slide room is manually retracted, reconnect power supply.
6. Take the motorhome to an authorized repair center.

To Move the Bedroom Slide Room (Cable System) Manually:

1. Turn off both the battery and house disconnect switches.
2. Locate the bedroom slide-out motor. The motor is located near the ceiling of the slide-out. Remove the trim.
3. Disconnect the slide-out motor electrical plug to remove 12 Volt DC power from the slide-out motor. The plug can be located by following wires that run from the motor to the plug.
4. Attach the flexible shaft to the 1/4" fitting on the end of the slide-out motor.
5. Attach a 1/4" socket and ratchet or drill to the other end of the flexible shaft. reverse the direction. **Over-torquing can cause severe damage.**
6. Turn in proper direction to move the room. If the cables tighten and the motor is difficult to turn Reverse the direction. Over-torquing can cause severe damage.
7. Take motorhome to an authorized repair center

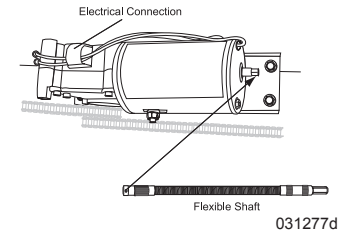


AWNINGS

Slide-out Cover

The slide-out cover automatically reacts to slide-out direction. A fixed edge of the slide-out cover is installed into an awning rail, mounted just above the slide-out. A spring-loaded roller with special brackets mounts to the slide-out. In a hard rain the cover helps prevent water from penetrating the seal of the slide-out. The slide-out cover will automatically reach full extension when the slide-out room is fully extended.

The slide-out cover automatically rolls up into the travel position when the slide-out room is completely retracted.

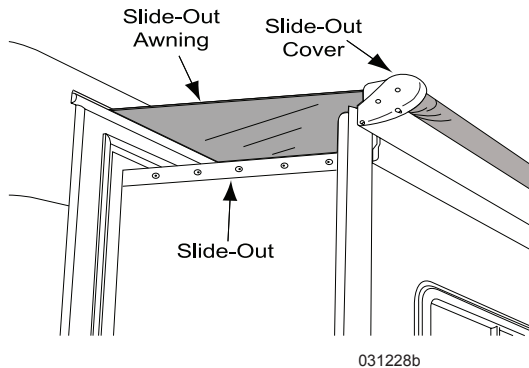

NOTE

When retracting the slide-out, stop the room approximately halfway. Confirm that the fabric is properly rolling before fully retracting the slide-out.

CAUTION

The slide room and slide-out awning should be retracted before heavy wind, rain or snow to prevent damage to the awning or motorhome. Wind can drive rain under the slide-out awning and into the motorhome.

CAUTION


At least five feet of clearance is needed between the side of the motorhome and any objects, such as trees or fences, to allow the slide room and slide-out awning to fully extend.

CAUTION

Rain water can pool on the slide-out awning. The added weight will cause the awning to sag. Upon retracting the room, material can become caught in between the top of slide room and the opening in the motorhome. It will be necessary to retract the room in small increments and allow the water time to run off.

Front Door - Mirage

The Mirage lateral arm is a box awning that operates on 12 Volt DC by the push of a button to extend the awning to its full extension.

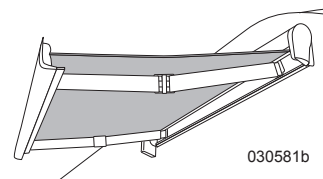

To Operate:

- ◆ Check for sufficient clearance before extending the awning.
- ◆ Chassis battery disconnect switch must be on.
- ◆ Turn the ignition switch OFF.
- ◆ Push the Door Awning Extend/Retract button and hold. When desired extension is reached, release the button.




- ◆ To close, push the Door Awning Extend/Retract button and hold to retract the awning to its travel position.

Window Awning

To Extend the Window Awning:

- ◆ Hook loop of pull strap with catch rod and pull awning, reel assembly and side arms to extend fully away from motorhome.
- ◆ Hook pull strap on side strap hook, remove catch rod from pull strap and store.

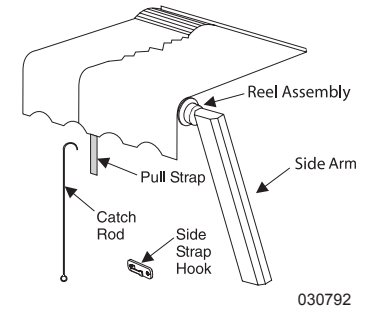

To Retract the Window Awning:


- ◆ Hook catch rod on pull strap, remove pull strap from side strap hook and slowly allow awning to retract.
- ◆ Remove catch rod from pull strap and store for future use.

Patio Awning - Eclipse

The Eclipse is a box awning that operates on 12 Volt DC by the push of a button. The awning requires 10' of lateral side clearance.

To Operate:

- ◆ Turn the ignition switch OFF.
- ◆ Check for sufficient clearance before extending the awning.
- ◆ Chassis battery disconnect must be ON.
- ◆ Turn the Awning Power On/Off button to ON.
- ◆ Push and hold the Extend/Retract button to extend the awning. Release the button at any time for partial extension.
- ◆ Push the Extend/Retract button and hold to retract awning.

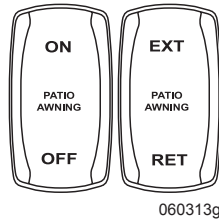

To Operate:

- ◆ Turn the ignition switch OFF.
- ◆ Check for sufficient clearance before extending the awning.
- ◆ Chassis battery disconnect must be ON.
- ◆ Turn the Awning Power On/Off button to ON.
- ◆ Push and hold the external control switch to extend and retract the awning. Release the button at any time for partial extension.

Awning Care & Cleaning

On a monthly basis, loosen hardened dirt and remove dust from the awning with a dry, medium bristle brush. Thoroughly rinse both the top and bottom with a garden hose.

A high-quality acrylic fabric cleaner may be used to help maintain appearance. Carefully follow the instructions on cleaning products. Metal surfaces should be cleaned with soapy water and thoroughly rinsed. Allow the awning to thoroughly air dry while extended. Awning maintenance products can be found at RV supply stores.

Carefree Awnings:

Acrylic Awnings - Wash both sides of the awning with a mild soap (i.e., dish soap) and lukewarm water. **DO NOT** use detergents. If necessary, reapply the solution to keep fabric saturated. Rinse the awning thoroughly. Repeat, if necessary, until most of the stains disappear. Contact *Carefree of Colorado* for removal of stubborn stains.

Polyweave and Vinyl Awnings - Mildew will not form on the awning material itself, but may form on the dust accumulated on the canopy. A quality vinyl cleaner, such as *Carefree Awning Magic*, will help keep the awning looking new. A mild soap (i.e. dish soap) and lukewarm water solution can be used. **DO NOT** use detergents. Be sure to follow the instructions on the container.


Leaks:

It is normal for slight leakage to occur through the fabric where water is allowed to accumulate. If water drips through the needle holes in the stitching use a commercial seam sealer that is available in canvas and trailer supply stores. Paraffin wax may also be applied to the top of the seams. As the awning “weathers” these holes will normally seal themselves.

Soap or chemical residue can “wet” the fabric so that it appears unable to repel water. Rinse the fabric thoroughly and test to see if it is water repellent after it dries. If leakage continues after washing and thoroughly rinsing, please contact *Carefree of Colorado*.

Storm Precautions

The warranty does not cover damage caused by acts of nature; therefore, steps should be taken to prevent damage from occurring due to wind, rain or storms. Retract the awning in inclement weather conditions or when leaving the motorhome unattended. Should the awning need to be retracted while the fabric is wet, extended it as soon as possible to allow it to completely dry.

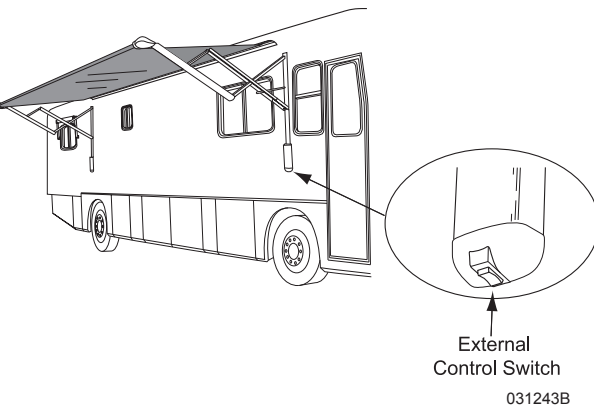

NOTE


Water weighs 8.33 pounds per gallon. The awning was not designed to withstand the 500 to 700 pounds of water that could accumulate on the canvas.

FANS**Automatic**


A wall rheostat controls the automatic vent and power of the fan. The system operates from 12 Volt DC power.

Fan Operation:

- ◆ Turn on the battery cut-out switch.
- ◆ Press the vent cover knob **IN** to the **Automatic** position.
- ◆ Use the wall switch to raise the vent cover. The vent cover must be open at least 2" before the fan will run.
- ◆ Turn power knob clockwise to turn fan on. The power knob also adjusts fan speed.

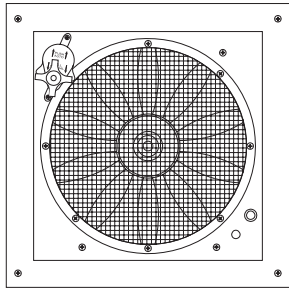

030832k

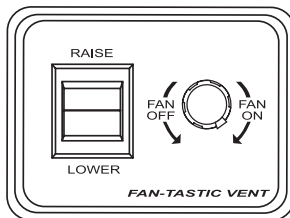

031205d

NOTE

To override the automatic setting, pull the vent cover knob out to the manual position and close vent. The fan blade will stop spinning when the vent is closed.

WARNING

Do not hold switch after the motor has stopped. This may cause damage to the automatic lift system resulting in a stuck vent.

NOTE

The safety switch built into the fan will not allow the fan blade motor to operate unless the vent is open 2" or more.

Tips for Fan Operation:


- ◆ To keep condensation from accumulating, operate the fans. Condensation occurs naturally from fluctuations in interior and exterior temperatures, humidity and dew point changes, steam from cooking or boiling large amounts of water on the cooktop. Shower use is another source of condensation.
- ◆ If the fan fails to operate, check for a blown fuse either in the domestic fuse panel or the 4 Amp fuse on the fan.
- ◆ To remove the screen, loosen the screws holding the screen in place. Use a non-abrasive soap and water to clean and reinstall.
- ◆ Slightly open windows on the shaded side of the motorhome to create the most airflow, especially on hot, sunny days. Direct airflow by slightly opening selected windows. Maximum airflow is achieved between an open window and the Fantastic Vent.

NOTE

DO NOT leave the fan switch in the active mode while the motorhome is stored or unattended for extended periods. High winds, unusual conditions or obstructions may prevent the fan cover from fully closing, resulting in leakage and serious damage.


Rain Sensor Fan (Optional)**Fan Operation:**

- ◆ Turn on the battery cut-out switch.
- ◆ Press the vent cover knob, located on the fan, **IN** to the **Automatic** position.
- ◆ Press the **Auto/Manual/Off** button on the wall switch once. The vent cover will automatically open.
- ◆ Use the **up** or **down** arrows to set the thermostat temperature. The fan speed will automatically adjust according to the disparity between ambient and selected temperatures.
- ◆ Press the **Auto/Manual/Off** button once more to manually control fan speed. Fan speed is displayed on the wall control in 10% increments. The thermostat is no longer operational in this mode.
- ◆ Press the **Auto/Manual/Off** button until all wall control lights are off. The fan blade will stop spinning and the vent dome will automatically close.

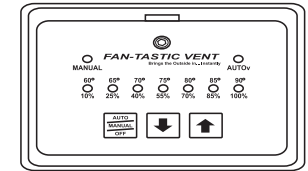

031205c

- ◆ To use the fan as a vent only: Leave the wall control switch off. Pull the vent cover knob down to the manual position and turn the knob to open the vent.

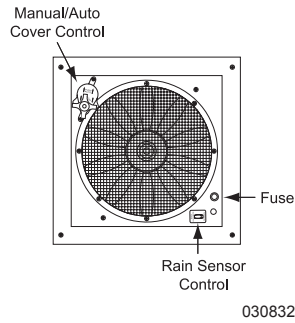

NOTE

To override the automatic setting, pull the vent cover knob out to the manual position and close vent. The fan blade will stop spinning when the vent cover is closed.

Rain Sensor Operation:

- ◆ If the built in rain sensor gets wet the dome will automatically close and the fan will shut off.
- ◆ After the sensor dries, the dome will reopen and the fan will start.
- ◆ To avoid automatic restart, turn the fan off at the wall control.

Tips for using the fan:

- ◆ Operate the fan to keep condensation from accumulating. Condensation occurs naturally from fluctuations in interior and exterior temperatures, humidity, dew point changes, steam from cooking or boiling water and shower usage.
- ◆ If the fan fails to operate, check the 4 Amp fuse on the fan and the fuse in the domestic fuse panel.
- ◆ To clean the screen remove the eight screws holding it in place. Wash the screen using dish soap and water.

- ◆ On hot, sunny days direct airflow by slightly opening the window(s) on the shaded side of the motorhome. The area between the open window(s) and the fan will have maximum air flow.

WARNING


Do not leave the vent cover open while the motorhome is driven, stored, or unattended for extended periods of time. High winds or other unusual conditions or obstructions may prevent the vent cover from closing. Leakage could result and cause serious damage.

BEDROOM CEILING FAN (OPTIONAL)

A bi-directional 12 Volt DC powered fan ceiling fan is located in the bedroom. Place the switch in the up position to move the blades counterclockwise and push air down (for cooling in summer). Place the switch in the down position to move the blades clockwise and pull air up (for warming in winter). Turn the fan off before reversing fan blade direction.

Fan operation is controlled by a switch next to the bed and has three positions: Off, High Speed, and Low Speed. The battery cut-out switch must be on for the ceiling fan to operate.

Periodic maintenance consists of cleaning the blades with a soft cloth towel or a vacuum to remove dust build up.


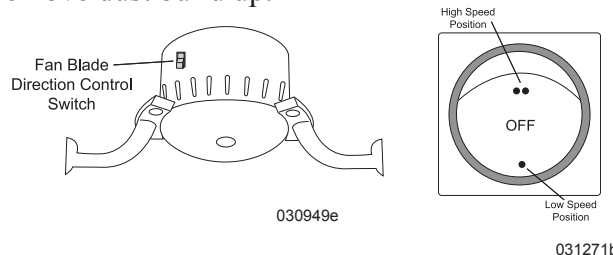


CAUTION

Use caution not to enter into fan path when on. Serious injury can occur.

SUNVISORS

To extend the sunvisor press and hold the lower portion of the control switch until the desired location is obtained. To retract the sunvisor press and hold the upper portion of the control switch. Clean the sunvisor using a soft clean brush to remove dust. The chassis batteries must be on and charged for sunvisors to operate.

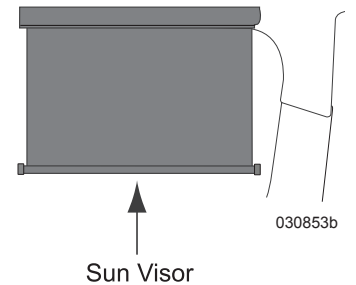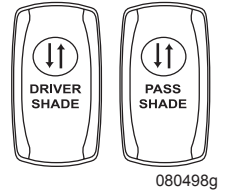


DOOR - SLIDING

The sliding pocket door uses two rollers at the top of each door. During the life of the motorhome, the sliding door may require adjustment. Locate the small wrench and turn the adjusting screw upward or downward.

If the pocket door needs to be removed, locate the portion that is secured to the top of the pocket door and rotate the small lever outward to release the latches.

LUBE


The pocket door rollers should be lubed with just a small drop of oil once a year to help increase the life of the rollers and improve sliding.

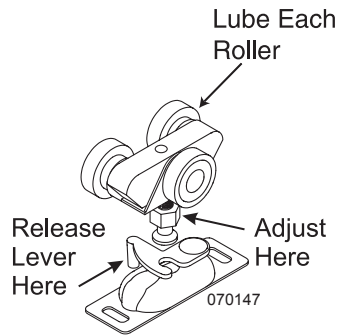**SEAT CONTROLS**

The Pilot and Co-Pilot seats are adjustable to provide maximum comfort. Seats must be locked in the forward facing direction while traveling.

NOTE

The seats operate from 12 Volt DC house power. The house battery and battery cut out switch must be on to operate the power controls.

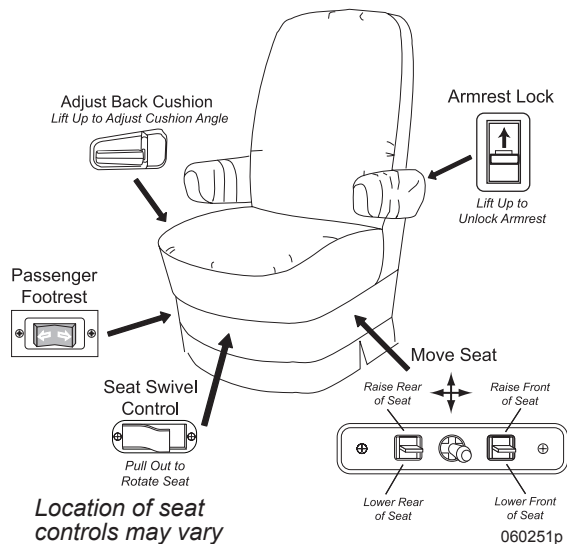**SWIVEL SEATS****Swivel Seat Operation:**


- ◆ To swivel, pull out on the swivel control lever.
- ◆ When rotating the driver seat, put the steering wheel in the upright position.
- ◆ Move the seat forward, then pull the swivel lever out and rotate to the desired position.

WARNING

Seats must be locked in the forward facing position while the motorhome in transit.

NOTE

If the either seat is rotated 180°, it must be rotated back in the opposite direction.

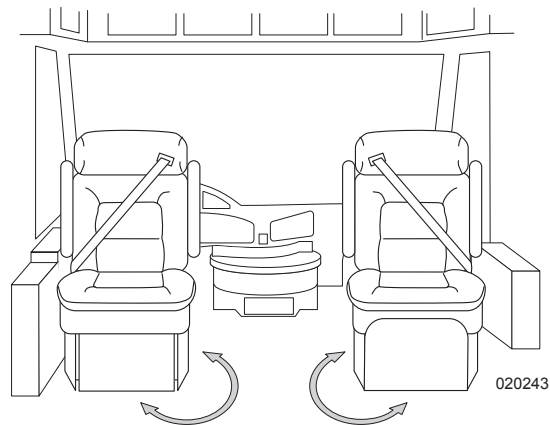


The 12 Volt wiring in the seat may disconnect if seat is rotated 360 degrees.

SOFA**Easy Bed Sofa**

The sofa converts easily into a bed. Clear the area of obstruction.

Sofa to Sleeper:

- ◆ If applicable, slide the lever forward to release the locking mechanism.
- ◆ Raise the sofa seat base until seat base and backrest form a “V” shape by lifting up from the center of sofa just below the seat cushions.
- ◆ Push down on seat base until the seat base and backrest are flat.

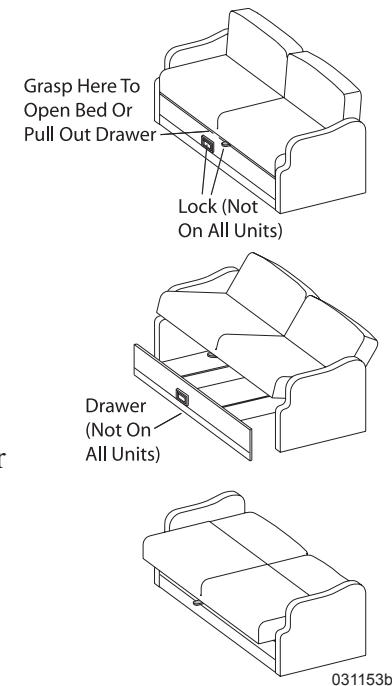**Sleeper to Sofa:**

- ◆ Lift the seat base up until seat and backrest are in a “V” shape.
- ◆ Push down on seat base.

WARNING


Do not use the sofa for transporting infants or children that require safety seats.

Hide-A-Bed (Optional)

The sofa hide-a-bed will convert easily into a bed. Clear the area of obstruction and debris.

Sofa to Sleeper:

- ◆ Remove the three seat cushions to access the hide-a-bed. The seat cushions should be stored safely until the bed is converted back to a sofa.
- ◆ If applicable, release the lock on the right side of metal bar, grasp the front metal bar and lift up pulling out on the bar slightly until the leg of the bed is firmly resting on the floor.
- ◆ When the legs of the bed are firmly on the floor there will be another lifting bar exposed to complete the conversion process.
- ◆ Grasping and opening the lifting bar will open the bed fully. The bed is now ready for linen.

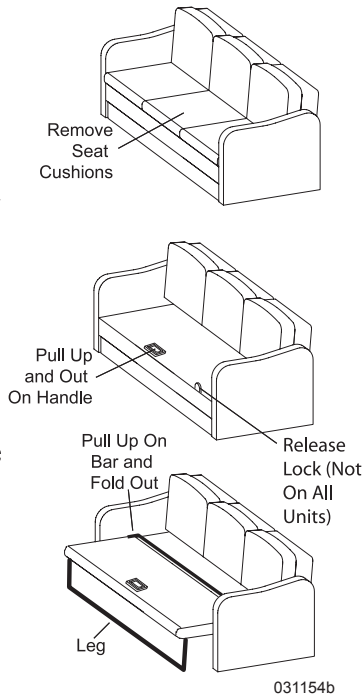


- ◆ Fold over the bottom portion of the bed that will form the seat.
- ◆ Lift the front portion of the lifting bar to raise and lower the hide-a-bed back into the sofa base.
- ◆ Replace the seat cushions.

Magic Bed Conversion (Optional)

The sofa will convert easily into a bed. A drawer is provided for your convenience.

Sofa to Sleeper:

- ◆ Remove back rest cushions.
- ◆ If applicable, release the lock lever.
- ◆ Raise the sofa seat base until seat base and backrest form a “V” shape by lifting up from the center of sofa just below the seat cushions.
- ◆ Pull out and push down on seat base until the seat base is flat.
- ◆ Flip seat cushions back to form mattress.

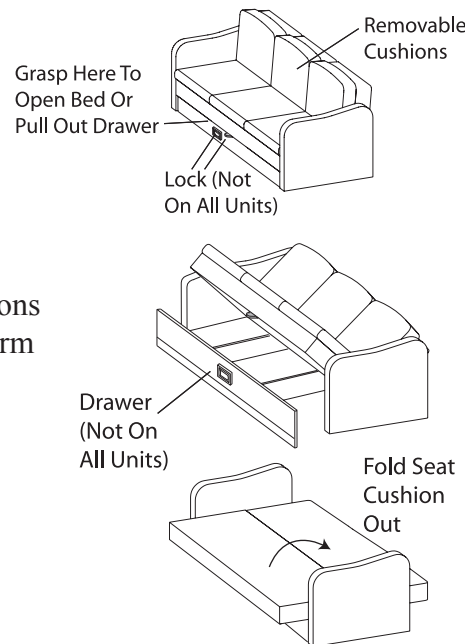

Sleeper to Sofa:


- ◆ Fold mattress in to form the seat cushions.
- ◆ Lift the seat base up until seat and back rest are in a “V” shape.
- ◆ Push back and down on seat base.
- ◆ Replace back cushions.

J-Lounge (Optional)

The J-Lounge provides comfortable seating with extra storage space for small items.

Storage Compartment:

- ◆ To open the storage compartment, lift the handle latch up, releasing the lock mechanism, and pull the storage drawer forward.
- ◆ To close the storage compartment, push the storage drawer until the lock mechanism catches the latch.

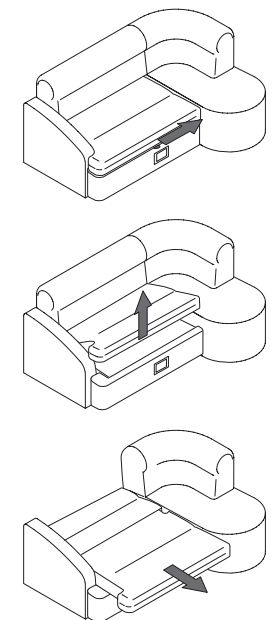

J-Lounge to Sleeper:

- ◆ Slide the lever to the right to release the locking mechanism.

Sleeper to Sofa:

- ◆ Remove all bedding from the hide-a-bed.
- ◆ Grasp the foot of the hide-a-bed in the center using the metal lifting bar.

- ◆ While holding the lever in the unlock position, lift up the J-Lounge seat base until the seat base and backrest form a “V” shape.
- ◆ Pull the seat cushion forward until the seat base and backrest are flat.

Sleeper to J-Lounge:

- ◆ Slide the lever to the right to release the locking mechanism.
- ◆ While holding the lever in the unlock position, raise the seat base.
- ◆ Push the seat base towards the backrest.
- ◆ Push the seat base down to latch the locking mechanism.


AIR MATTRESS (OPTIONAL)

The air mattress inflates and deflates in a matter of seconds. Inflating the mattress is accomplished by using an electric inflation pump that operates from any 120 Volt AC outlet. For ease of operation, position the sofa so that accessing an electrical outlet is convenient.

To Inflate Mattress:

- ◆ Open sofa and allow the mattress to lie flat.
- ◆ Unzip the corner of the mattress labeled “Air Pump Access”
- ◆ Remove valve cap by turning cap counterclockwise.

- ◆ After cap is removed, insert pump motor and turn clockwise until pump is engaged.
- ◆ Plug in pump motor and inflate to full, approximately 60 seconds. A motor pitch change occurs when mattress is full.

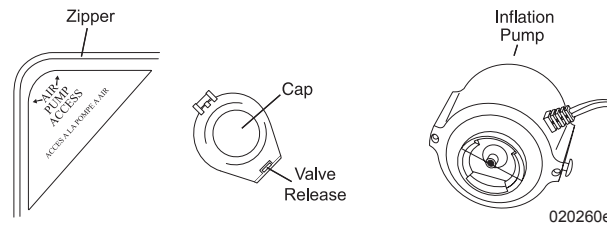

- ◆ Remove pump and reseal valve cap by turning clockwise.
- ◆ Zip the “Air Pump Access” cover closed. The bed is now ready for linen.

To Deflate Mattress:

- ◆ Remove bed linen
- ◆ Unzip the corner cover of the mattress labeled “Air Pump Access.”
- ◆ Open deflation valve by lifting valve latch. Allow mattress to deflate.
- ◆ Once mattress is deflated swing valve to closed position. **DO NOT LOCK VALVE CLOSED** by locking the valve. Air trapped in the mattress could cause damage.
- ◆ Zip the “Air Pump Access” cover closed and close the sofa.

NOTE

Do not close deflation valve when closing the sleeper mechanism.

WARNING

The electric inflation pump is for indoor use only. Do not use near or place in water. Keep infants and small children away from pump and product when not fully inflated. Partially inflated product can cause suffocation.

Removing the Mattress Valve:

 
- ◆ Open deflation valve by lifting up on valve tab.
- ◆ Remove old valve by lifting the black plastic on the outer edge of the valve toward the center. The valve will then lift out.

Installing New Mattress Valve:

- ◆ To install the new valve, first open the replacement.
- ◆ Once open, seat the hinge area on to the hinge support, then squeeze the vinyl towards the center of the mattress opening.
- ◆ Feed the vinyl through the opening of the new valve.
- ◆ Once accomplished make sure there are no bulges in the vinyl. Use thumb to make sure that it is smooth.
- ◆ Next, lock the replacement shut.

Select Comfort Air Mattress (Optional)

The Air Mattress uses uniquely designed air chambers to provide a gentle cushion of support which can be adjusted for comfort and firmness. The mattress can be personalized to an owner’s ideal comfort level.



031117c
Select Comfort
Remote

To Operate Air Mattress:

The air mattress requires 120 Volt AC power from shore power or the generator to operate. The inverter can be used but battery power may be depleted by continued use.

Ensure the battery-cut out switch is on and the house batteries are charged.

What is a Sleep Number:

- ◆ It is a setting between 0 and 100 that represents the ideal combination of mattress comfort, firmness, and support for each person's body.
- ◆ Use the initial Sleep Number on the remote as a starting point.

Setting the Sleep Number:

1. Lie on the bed in a normal sleep position.
2. Press and release any remote button to display the current Sleep Number setting.
3. To change setting, press the firmer or softer buttons until desired comfort setting is achieved.
4. Remain still until the number change is complete.
5. When adjustment is complete, the Sleep Number will stay lit for five seconds and then the display will turn off.

NOTE

Finding the ideal Sleep Number may require experimenting with different settings.

Mattress Care:

The cover may be spot cleaned with carbonated water or mild detergent. Do not dry clean the mattress cover or put it in a washing machine. Do not apply a stain-guard, as this may cause yellowing of the fabric.

In rare instances, under the right conditions, mold or mildew may form inside mattress or bedding. If this occurs call the manufacturer's customer service department at 800-318-2231.

Mountain Traveling:

If traveling into a mountainous region, either (1) temporarily disconnect the mattress from the pump hose to allow air escape or (2) partially deflate the mattress chamber to a Sleep Number of 20.

WARNING

Rapid changes in altitude will effect the air pressure inside the mattress. The chamber may be damaged if the pressure becomes too great.

NOTE


For more detailed information consult the manufacturer's owner's manual or call 800-318-2231.

FREE STANDING DINETTE


The free standing dinette comes with two standing chairs and two folding chairs.

To Extend/Retract Table:

- ◆ To extend, pull out on table until it locks completely out.
- ◆ To retract, push in on table until it locks completely in.

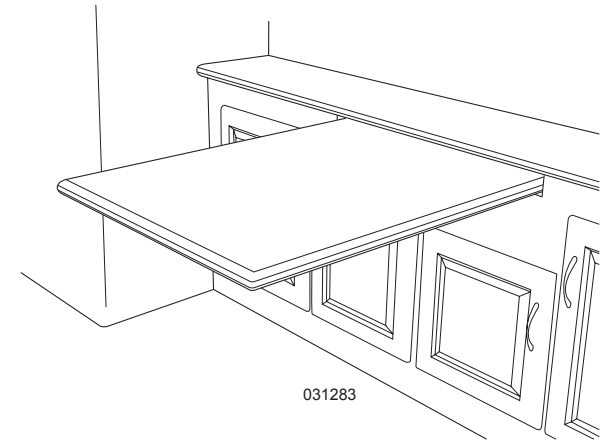**LEGLESS BOOTH DINETTE (NOT ON ALL UNITS)****Bed Conversion**

- ◆ Remove the seat cushions. This allows the table to move down into the bed position.
- ◆ Locate locking bar under the table. Swing locking bar out to unlock.
- ◆ Push down on table and lower it until the table fits between the two seats.
- ◆ Use the seat cushions and back cushions for a mattress.

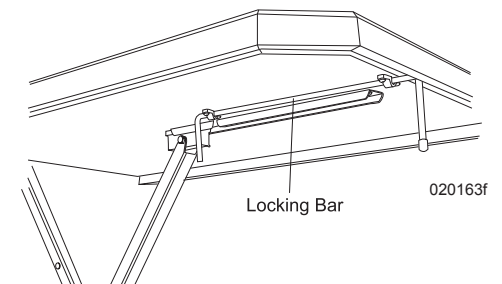

- ◆ Reverse process to raise table. Once table is raised move locking bar up into locking position. A notch is provided to secure the locking bar.

Storage


- ◆ Storage is provided under both seats.
- ◆ Remove cushions and lift lid to access storage compartments.

WARNING

Only forward facing booth dinette seats equipped with seat belts are designed for occupancy while the motorhome is in motion. Do not occupy booth dinette (if not equipped with safety belts) or the dining chairs, while the motorhome is in motion. To avoid injury in case of a crash or sudden stop, chairs must be stored in an enclosed area or secured with tie down straps while the motorhome is in motion.

STORAGE UNDER BED

To use the storage compartment located under the bed, lift up the bed by the front edge of the mattress platform. Gas struts hold the mattress and platform open.

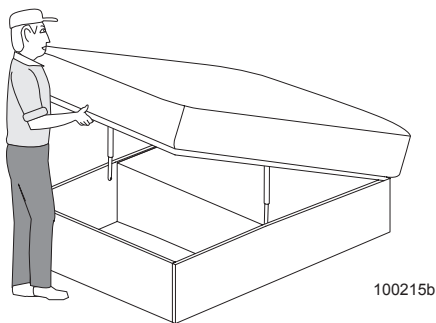

NOTE

Overstressing gas struts by rapidly opening or closing the bed access cover can damage the struts or mounts. In extreme cold, struts may not hold the mattress platform open.

LADDER - REAR

The rear ladder allows access to the roof. Care should be used when climbing the ladder. Access to the roof should be limited to cleaning and sealing purposes only. Stow the lower portion of the ladder in the cargo bay during travel.


NOTE

Maximum weight capacity for the ladder is 300 lbs.

STORAGE BAY SLIDE-OUT TRAY

The storage bay slide-out tray is available for use in the storage compartment bays of the motorhome. This allows for the pay-load to slide outward for easier access.

- ◆ The motorhome must be level before opening.
- ◆ To open, press down on the latch and hold to unlock. The tray can then be pulled out.

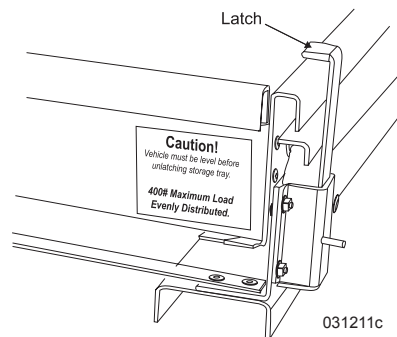

- ◆ To close, slide the tray in and the latch will catch and lock.
- ◆ Never exceed maximum weight capacity (400 lbs).

WARNING


The motorhome must be level when sliding the drawer out of the bay compartment. The drawer can slide out abruptly and cause bodily harm if the motorhome is not level.

CITIZEN BAND (CB) RADIO - PREP

A two pin connector labeled Citizens Band Radio is located behind the dash panel, along with the CB Antenna coax, which is routed to the roof mounted base. The red wire is + 12 Volt DC (positive) and has a two amp fuse in the front distribution panel. The white wire is connected to the frame (ground).

GPS NAVIGATION (OPTIONAL)

The GPS Mobile Navigation system provides 2-D and 3-D map views, instant re-routing and voice prompted turn-by-turn instructions. The system includes a GPS antenna, a DVD ROM player and a single DVD to provide maps for the entire continental US and Canada.

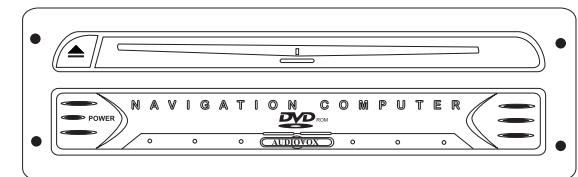

Located in driver overhead compartment


031219c

INFORMATION

Complete information and instruction are found in the OEM instruction manual.

Perform the following instruction only when the motorhome is parked:

- ◆ Turn ignition to ACC or ON position.
- ◆ Insert the DVD map disk into the navigation unit.
- ◆ Using the Aladdin™ controller go to the Main Aladdin™ Menu on the Voyager monitor. Choose **Coach Info**.
- ◆ Move the Aladdin™ controller two times to the right. This will bring up the navigation screen.
- ◆ Point the navigation remote at the Voyager monitor and press the OK button.
- ◆ Perform desired functions.
- ◆ To exit, move Aladdin™ controller to the left until navigation program is exited.

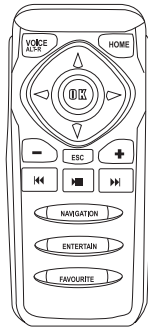

031219b

An alternative method can also be used to display GPS navigation information.

- ◆ **Perform the following instruction only when the motorhome is parked:**
- ◆ Turn ignition to ACC or ON position.
- ◆ Insert the DVD map disk into the navigation unit.
- ◆ Using the Aladdin™ controller go to the Main Aladdin™ Menu on the Voyager monitor. Choose **Select Video Source**.

- ◆ Move the Aladdin™ controller one time to the right. This will bring up the navigation screen.
- ◆ Point the navigation remote at the Voyager monitor and press the OK button.
- ◆ Perform desired functions.
- ◆ To exit, move Aladdin™ controller to the left until navigation program is exited.

SATELLITE RADIO (OPTIONAL)

The satellite radio is a digital signal decoder and tuner. Signals are transmitted from a ground station to satellites orbiting over the continental United States. The satellite then transmits the signal to an antenna in the motorhome. The radio receiver decodes the transmission and plays the selected channel within that transmission. Signals are also transmitted to ground repeaters for listeners in urban areas where the satellite signal can be interrupted.

NOTE

Depending upon selected options, **Sirius® or XM Radio may be the satellite provider. For information regarding subscriptions and service coverage areas, contact the appropriate provider for your system.**

Sirius® Radio
1-888-539-7474
www.siriusradio.com

XM Radio
1-800-XMRADIO (1-800-967-2346)
www.xmradio.com

INFORMATION

For detailed information and operating instructions on the satellite radio, refer to the manufacturer's manual located in the Owner's Information File box.

ALADDIN™ SYSTEM (OPTIONAL)


The Aladdin™ gathers and displays information from the chassis. This allows the operator to make informed decisions regarding motorhome operation. Other Aladdin™ features include trip logs, compass heading, basement and outside temperature.

The Aladdin™ system also displays the rear camera and optional side cameras. When the system is turned ON, placing the transmission in reverse will cause the backup camera to be selected. For motorhomes equipped with the optional side cameras, activating a turn signal will select the corresponding side camera. Turning the hazard lights on will activate the left camera.

Aladdin™ Controller:

The controller allows the operator to control cursor movements.

- ◆ Press the select or right button to enter a screen.
- ◆ Press the left button to return to the previous screen.
- ◆ Press the up or down buttons to scroll through or change information.

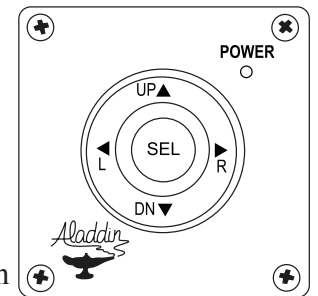

080377f

Aladdin™ LED Indicator:

An LED provides system-on power indication. The LED blinks whenever the controller is used. The LED will blink every few seconds when the Aladdin™ system is powered on. Pressing the select or left button on the Aladdin™ controller will activate the system and the LED will turn on.

Select Buttons:

Two select buttons are used for operation. One is found on the Aladdin™ controller, the other on the Voyager monitor. To avoid confusion they will be referred to as (Aladdin™) select button and (Voyager) select button.

Aladdin™ Operations

For the Aladdin™ to operate the chassis battery disconnect switch must be on. The Aladdin™ functions with the ignition switch in the ACC, On or Ignition position.

INFORMATION

If the ignition is in the ACC or On position Aladdin™ gives only limited information with some screens appearing with no information (“xxx”). For Aladdin™ to give complete information the engine MUST be running.

To view Aladdin™ information screens or the camera(s) the Voyager monitor must be turned on. Once the Voyager monitor is operating press the (Voyager) select button to scroll camera(s) or to view the Aladdin™ main menu.

Turning off the ignition will cause both the Aladdin™ and the Voyager monitor to turn off.

Aladdin™ Main Menu

When the Aladdin™ first powers up, Aladdin™ will display the information screen or camera that was last used when the system was turned off. To access the main menu press the Voyager select button and scroll to the main menu screen.


When the main menu is accessed, press the Aladdin™ up or down buttons to scroll through the main menu. An arrow indicates the current menu item. Press the select or right button to enter that menu item. Press the left button to return to the previous screen.

Voyager Select Button

Use the select button on the Voyager monitor to scroll through the various screens. The screens include: rear camera, left and right camera (if equipped), 2-split, 3-split, quad, and an Aladdin™ main menu screen.

NOTE

Sometimes the main menu screen becomes a “No Signal” screen. If this happens scroll to the “No Signal” screen then press the (Aladdin™) select or right button. This will bring up the main menu screen.

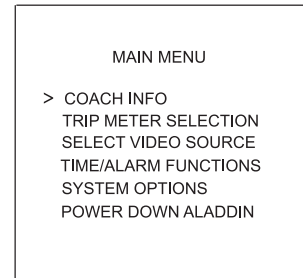**Viewing Camera(s):**

The rear camera or optional side cameras can be viewed in any main menu heading. Simply press the Voyager select button to scroll the various camera screens.

Coach Info

Coach Info displays current available engine and transmission data. Compass heading, time, and temperature are displayed on each screen.

NW 320	75.3 F	08:05 AM
ENGINE	TRANS	
XX.X MPH	X GEAR SEL	
XXXX RPM	XX GEAR ATT	
XXX F TEMP	XXX F TEMP	
XXX PCT LOAD		
XX PSI OIL	BATTERY	
XX PSI BOOST	XX.X VDC	
XX.X CRUISE OFF		
XX.X MPG	CAMERA →	

020195p

By pressing the select or right button an engine information screen appears, press the select or right button again and “No Signal” screen will display, press select or right again to access the engine/transmission screens.

There are five engine/transmission screens each displaying four parameters of data. A sixth screen displays outside and basement temperature. The screens automatically scan, approximately every six seconds, or press the select or right button to activate scanning.

Press the up or down buttons to move through the screens and disable automatic scanning. Press the select or right button to resume automatic scanning. Press the left button to return to the previous screen. Continue pressing the left button to return to the Main Menu.

Trip Meter Selection

Trip Meter Selection provides trip information for up to 10 different trips, plus dedicated trip leg status and fuel status screens. Trip screens selected are independent of each other and can be started, paused, resumed, cleared, and provide time and distance information as well as average speed and fuel mileage.


Trip Leg Statistics gives trip information, plus distance-to-go and time-to-go based on trip leg averages.

The Fuel Tank Statistics provides such information as estimated fuel remaining and range based on current averages.

Changes made to any of the Trip Meter selections, with the exception of clearing a numbered trip, should be done while the ignition is on to enable Aladdin™ to collect necessary information from the engine. The last available information will be used if the ignition is off when changes are made.

The status screen display may take several minutes after a change is made before it starts updating values. In the case of Duration, the display will not update for approximately six minutes because Duration is displayed to the tenth of an hour (six minutes).

The Aladdin™ requests engine statistics periodically from the engine for use with trip calculations. After such a change the next valid engine data will not be available for

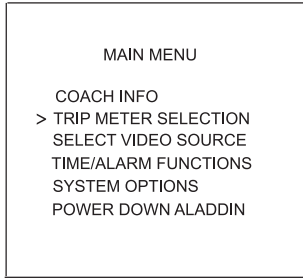


020195r

approximately one minute. The rate of data change is also influenced by motorhome speed, fuel rate, and time.

Select Video Source


Use this screen to access the optional Navigation screens.

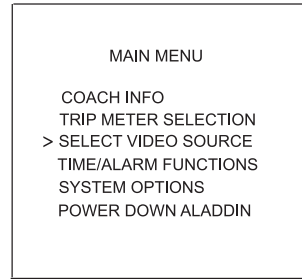

020195s

Time and Alarm Functions


Time and Alarm Functions allow the operator to view the current time, set the date and time, set alarms, and change the sound of the alarm.

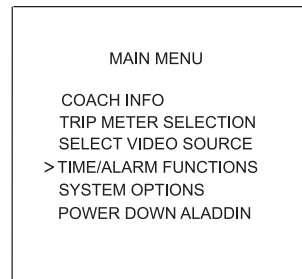

020195t

System Options

System Options provides a submenu for Aladdin™ functions that are less frequently used and includes screen appearance adjustments. Only service personnel should access System Setup.

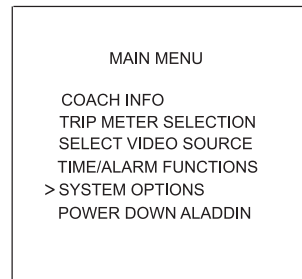

020195u

Compass Calibration: Compass Calibration allows the operator to either calibrate the compass or enter declination. Calibration will compensate for metal construction within the motorhome and increase accuracy. Entering a declination will allow for true North or magnetic North compass headings.


Calibration is accomplished by selecting Start Calibration, then driving in a full 360° circle. At the end of driving this loop, select Stop Calibration. A successful calibration will cause a “Calibration Successful” message to display. A calibration that fails will display “Calibration Fail” along with a failure code.

Power Down Aladdin


Turning off the ignition will cause both the Aladdin™ and the Voyager monitor to turn off.

Aladdin™ can also be manually powered down by selecting Power Down and then pressing the select or right button. When powered down a “No Signal” screen will appear.

During power down Aladdin™ can be turned back on by pressing the select or left button.

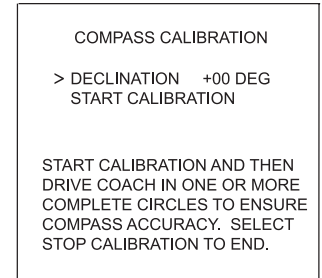

020195m

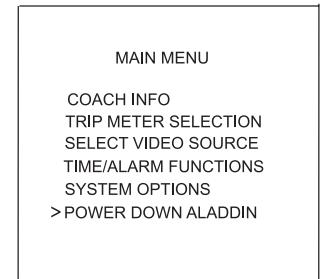

020195q

TV ENTERTAINMENT COMPONENTS

The following paragraphs will discuss the operations and various components that make up the entertainment center.

INFORMATION

It is recommended to become familiar with individual components. Refer to the respective manual for detailed instructions on operating individual components.

NOTE


All components of the entertainment system require 120 Volts AC to operate. Hook to shore power, start the generator or turn on the inverter. The satellite system requires 12 Volts DC to operate. Turn on the interior house power using the battery cut-out switch.

Television (Front) Lockout Feature


The ignition switch controls the outlet for the front TV, allowing the front TV to operate only while the vehicle is at rest. Viewing time of the front TV from the inverter depends on state of charge of the house batteries and any additional 12 Volt DC lighting used.

Connections - Cable TV, Computer & Phone

The motorhome is equipped with cable TV, satellite and phone hook-up, located in the roadside rear compartment. For convenience, the inside auxiliary outlets are located throughout the motorhome.

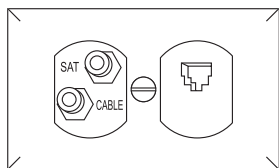


Located in roadside rear compartment 060192e

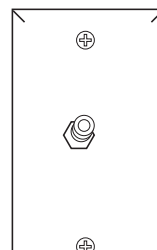

Cable out connection
Located curbside compartment 060192bf

NOTE

The cable connection in the roadside rear compartment is a CABLE IN that connects, for example, to a campground cable hook-up. A second cable connection is located in a curbside compartment. This is a CABLE OUT that is used to connect to an independent television monitor, for example, a monitor sitting on a picnic table.

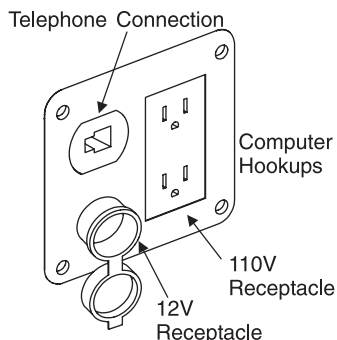

Located on passenger side of lower dash

TV Antenna


The television antenna is a manual crank style antenna with built in electronics that use 12 Volts DC to “boost” signal strength. Signals that are weak or fuzzy can be amplified by turning on the television antenna power button on the video selector box. The antenna and booster work together to provide the best possible picture for most situations.

WARNING

Do not raise the TV antenna near overhead electrical wires. Contact may cause serious injury or death. Do not move the motorhome when the TV antenna is up.

To Raise the Antenna:


- ◆ Rotate the crank handle clockwise to raise the antenna (about 14 ½ turns).
- ◆ Pull down on the outside directional wheel and rotate the antenna until the best picture is obtained. The directional wheel is spring loaded.

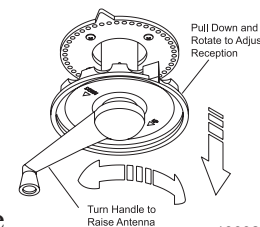

130024

To Lower The Antenna:

- ◆ Pull down on the directional wheel and align arrows together.
- ◆ Rotate the crank handle counterclockwise to lower the antenna fully into the cradle. Make an outside visual inspection to ensure the antenna is properly stowed.

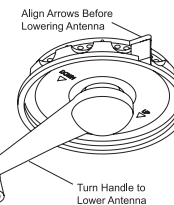

130024

CAUTION


DO NOT move motorhome with antenna in the raised or partially raised position and risk damage by tree limbs or wires. Worm gear damage or breakage may result.

WARNING

Before raising antenna, make an outside visual inspection for any obstructions or overhead electrical wires. Damage to the antenna, severe shock, personal injury or death can occur from inadequate clearance.

Video Selector Box

The motorhome is equipped with a video selector box which has five inputs and three outputs.

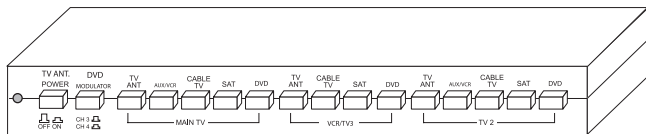**Features Include:**

- ◆ Push button controls allow sending signals from any one of five different inputs to two televisions and VCR or 3 televisions.
- ◆ Five inputs are Satellite Receiver, TV Antenna, AUX/VCR, Cable TV & DVD.
- ◆ Three Outputs: Main TV, TV2, and AUX/VCR or third TV.
- ◆ Built-in +12 VDC television antenna power supply eliminates need for separate wall mounted television antenna power supply.

- ◆ Self-resetting fuses used in antenna power supply prevent failure caused by shorted connections.
- ◆ Video switch allows independent viewing of signals on different televisions with a record option from VCR.

NOTE

Two areas will be mainly used on the video selector box. For functions regarding the front television, make selections (TV Ant, Cable, etc.) in the area marked “Main TV.” For the bedroom television, use the area marked “TV 2.”

To Operate Any Entertainment Component:

All the entertainment components require 120 Volt AC to operate. Hook to shore power, start the generator or turn on the inverter. Ensure the battery cut out switch is on and the house batteries are charged. The ignition key must be in the OFF position.

NOTE

Reading the individual components owner’s manual is strongly recommended. These manuals will contain detailed information on features and operating procedures.

To Watch Television from the Antenna:

- ◆ On the video selector box press the television antenna POWER button ON to provide +12 Volt power to the television antenna amplifier located inside the antenna housing.
- ◆ Press the TV ANT button located in the area marked “MAIN TV.”

- ◆ Turn on TV.
- ◆ Depending on the television or manufacturer, press either the input button to TV (also called Air) or the TV/Video button to TV.
- ◆ Access the television main menu and select the Set Up menu. Within the set up menu select Channel Set Up. Depending on the television model or manufacturer, select either Air or TV (both mean the same).
- ◆ Initiate a channel Auto Search to scan available channels (also called Auto Channel Memory). Exit menu.
- ◆ Select desired channel for viewing.

For the bedroom television follow the same procedures but utilize the area marked “TV2” on the video selector box.

NOTE

Refer to television owner’s manual on how to receive all available channels in the area.

NOTE

The picture quality from the outdoor television antenna varies by location of the station in relationship to the antenna. If picture quality is poor and there is no external power supply, try turning the television Antenna Power button located on the control box OFF and ON.

To Watch Television from a Cable Signal:

- ◆ On the video selector box press the CABLE TV button above the area marked “Main TV.”
- ◆ Turn on TV.

- ◆ Depending on the television or manufacturer, press either the input button to TV (also called Air) or the TV/Video button to TV.
- ◆ Access the television main menu and select the Set Up menu. Within the set up menu select Channel Set Up and select Cable.
- ◆ Initiate a channel Auto Search to scan available channels (also called Auto Channel Memory). Exit menu.
- ◆ Select desired channel for viewing.

For the bedroom television follow the same procedures but utilize the area marked “TV2” on the video selector box.

NOTE

To view Cable TV signals you must be connected to a Cable TV input on the outside of the motorhome. Cable TV inputs are available at many of today’s campgrounds.

NOTE

Refer to television owner’s manual on how to receive all available channels in the area.

To Watch Television from a Satellite Signal:

- ◆ On the video selector box press the SAT button located in the area marked “Main TV.”
- ◆ Turn television ON and using the remote select channel 3.
- ◆ Turn ON satellite receiver, then use satellite tracking system to acquire satellite.
- ◆ Use satellite remote control to select

desired channel.

For the bedroom television follow the same procedures using “TV2” on the video selector box.

To Watch Front Television from a DVD:

- ◆ Turn on the video selector box.
- ◆ Turn on the TV.
- ◆ Depending on the television manufacturer press the Input button to Input 1 (some models require Input 2) or for other models to VID 1. For televisions with a TV/VIDEO button press the button to video.
- ◆ Insert DVD into player. DVD loads and plays automatically.


To Watch Bedroom Television from a DVD:

- ◆ Turn ON the video selector box.
- ◆ On the video selector box push the DVD modulator button to either Channel 3 (out position) or Channel 4 (in position). Then press the DVD button located in the area marked “TV2.”
- ◆ Turn bedroom television on.
- ◆ Using the remote control select Channel 3 or Channel 4 to correspond with the channel selected by pushing the DVD modulator.
- ◆ Insert DVD into player. DVD loads and plays automatically.
- ◆ To obtain sound turn the volume on the dash radio to desired level (20 is a good starting point). Bedroom ceiling speakers are controlled by the volume on dash radio.

Satellite System - DSS Prewire

The motorhome is prewired for a roof mount Satellite System. The prewire consists of a ¾” flexible conduit, which runs from the back of the Satellite Receiver Connection (“Roof Input”) to a spot marked on the roof. A telephone hook-up is provided for Pay-Per-View access.

The following corresponds to the three connections on the front of the Satellite Receiver Connection.

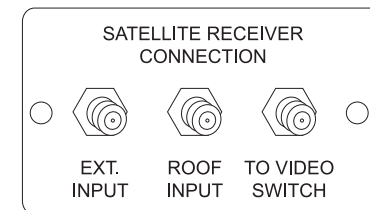

031070

- ◆ **EXT. INPUT:** This connection is used to hook-up to a portable satellite dish. Run a coaxial cable from this connection to “Satellite In.”
- ◆ **ROOF INPUT:** This connection is used to hook-up to the roof satellite dish. Run a coaxial cable from this connection to “Satellite In.”
- ◆ **TO VIDEO SWITCH:** This connection is used to hook-up to the video selector box. Run a coaxial cable from this connection to “From Satellite.”


DASH RADIO

The dash radio is an AM/FM/Weather Band, DVD/CD and Sirius ready stereo receiver. It holds fifteen FM and ten AM preset stations.

The dash radio is played using speakers throughout the motorhome and is part of the Home Theatre Surround Sound System.

NOTE


Additional and detailed information for the dash radio functions and operations can be found in the Owner's Information File Box.

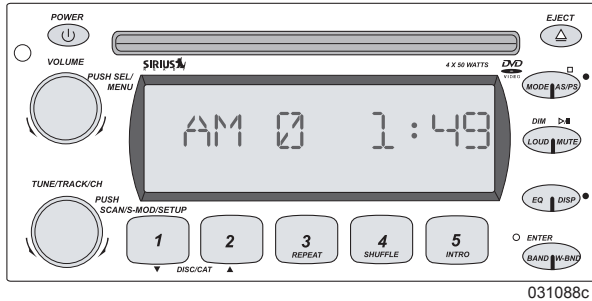

Operation

To Play Radio:

- ◆ House battery disconnect switch must be On.
- ◆ Ensure that the battery cut-out switch is On.
- ◆ Turn on surround sound speaker switch.
- ◆ Turn on the dash radio.
- ◆ Press the radio switch, located on dash console, to On.
- ◆ Select station.
- ◆ Adjust volume on dash radio.
- ◆ Turn radio off by pressing the radio switch, located on dash console, to Off.

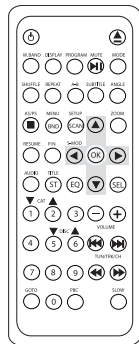

Dash Radio Remote

NOTE

Radio switch on dash console is an easy access control to turn radio On and Off. However, the dash radio must be on for this to be accomplished. If dash radio is turned off then the radio switch on dash console will not turn radio on.

To Play CD:


- ◆ Turn on surround sound speaker switch.
- ◆ Turn on the dash radio.
- ◆ Press the radio switch, located on dash console, to On.
- ◆ Insert CD. CD plays automatically
- ◆ Adjust volume on dash radio.

DISC CD CHANGER (OPTIONAL)

The 10 disc changer is operated by the dash radio. Consult the radio and CD changer owner's manual for procedure to operate the changer.

BEDROOM CLOCK RADIO WITH CD/DVD (OPTIONAL)

The bedroom clock radio is an AM/FM stereo receiver with 30 station presets, 18 FM and 12 AM. It plays music CDs, CD-Rs and CD-RWs. The DVD movie player features play/pause control, four levels of fast forward and fast reverse, slow motion playback, repeat, and parental control with programmable password.

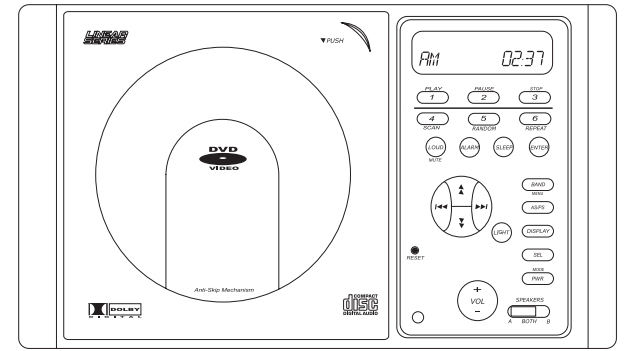

Requirements:

- ◆ House battery disconnect switch must be On.
- ◆ Battery cut out switch must be On.

To Play Radio:

- ◆ Turn Clock Radio on by pressing the Power button.
- ◆ Press the Band button to select the AM/FM band desired.
- ◆ Select station.
- ◆ Adjust volume to desired level.

To Play CD:

- ◆ Turn Clock Radio on by pressing the Power button.
- ◆ Press Power button until "DVD" is indicated in window.
- ◆ Open CD door by pushing the area marked "push."
- ◆ Insert CD with label facing toward the operator.
- ◆ CD loads and plays automatically.
- ◆ Adjust volume to desired level.

To Play DVD:

- ◆ Turn TV on.
- ◆ Depending on television manufacturer use the Input button and select either “Input 3” or “Video.”
- ◆ Turn Clock Radio on by pushing Power button.
- ◆ Press Power button until “DVD” is indicated in window.
- ◆ Open DVD door by pushing the area marked “push.”
- ◆ Insert DVD with label facing toward operator.
- ◆ DVD loads and plays automatically.
- ◆ Adjust volume to desired level.

INFORMATION

Additional information for the bedroom radio functions and operations can be found in the Owner’s Information File Box.

HOME THEATRE SURROUND SOUND


The Home Theatre Surround Sound System has several speakers located throughout the living room area. The system operates from 12 Volt DC powered from the coach batteries or the inverter.

Surround Sound Speaker Switch

A Home Theatre speaker switch is located in the overhead compartment above the driver’s seat. Pressing the switch turns the surround sound speakers On and Off.

When the Home Theater speakers are activated sound plays in both the front (living room) and bedroom speakers.

If sound is not desired through the bedroom speakers, press the bedroom speakers by utilizing the Bedroom On/Off switch located in the overhead compartment above the driver’s seat.

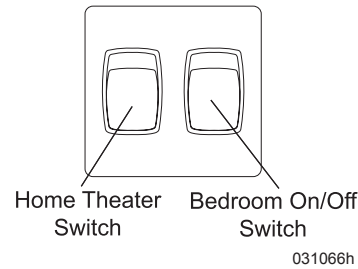**Surround Sound Entertainment Systems**

To obtain Surround Sound for the various front entertainment systems use the following.

Surround Sound For Television:

- ◆ Turn on surround sound speaker switch.
- ◆ Turn on the dash radio.
- ◆ Press the radio switch located on dash console to On.
- ◆ On the dash radio push the mode button until AV IN 1 is displayed. If AV IN 1 does not appear in the window, press the “Disp” (Display) button once, then press the mode button until AV IN 1 appears.

- ◆ Adjust the volume control on the dash radio to a sound level of at least 20 or higher if needed.

Surround Sound For Cable:

- ◆ Turn on surround sound speaker switch.
- ◆ Turn on the dash radio.
- ◆ Press the radio switch located on dash console to On.
- ◆ On the dash radio push the mode button until AV IN 1 is displayed. If AV IN 1 does not appear in the window, press the “Disp” (Display) button once, then press the mode button until AV IN 1 appears.
- ◆ Adjust the volume control on the dash radio to a sound level of at least 20 or higher if needed.

Surround Sound For Satellite:

- ◆ Turn on surround sound speaker switch.
- ◆ Turn on the dash radio.
- ◆ Press the radio switch located on dash console to On.
- ◆ On the dash radio push the mode button until AV IN 2 is displayed.
- ◆ Adjust the volume control on the dash radio to a sound level of at least 20 or higher if needed.

Surround Sound For CD:

- ◆ Turn on surround sound speaker switch.
- ◆ Adjust volume control on the dash radio to a sound level of at least 20 or higher if needed.

Surround Sound For DVD:

- ◆ Turn on surround sound speaker switch.
- ◆ Adjust volume control on the dash radio to a sound level of at least 20 or higher if needed.

To Play Front TV (Living Room) Without Surround Sound:

- ◆ Turn off the Surround Sound Speaker Switch.
- ◆ Adjust volume control on front TV to desired level. Sound will come through the front TV speakers only.

Sound For Bedroom TV Playing DVD In Dash Radio:

- ◆ Turn on dash radio volume to desired level (20 is a good starting point). The dash radio volume controls the sound for the bedroom ceiling speakers.

NOTE


Any entertainment component (radio, TV, satellite, cable, DVD, CD) that plays through the dash radio will be heard over both the front speakers and the bedroom speakers. Turning off the Surround Sound Speaker switch disables the front speakers, but **DOES NOT** disable the bedroom speakers.

NOTE

Anytime the Surround Sound Speaker Switch is turned on sound will play through all the speakers, both front and bedroom, in the motorhome.

Surround Sound Entertainment Systems (For Motorhomes That Do Not Have Bedroom On/Off Switch)

A Home Theatre speaker switch is located in the overhead compartment above the driver's seat. Pressing the switch turns the surround sound speakers On and Off. When the Home Theater speakers are activated sound plays in both the front (living room) and bedroom speakers.

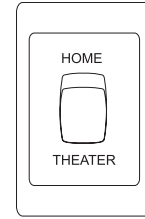

To obtain Surround Sound the above instructions in the "Home Theater Surround Sound" section apply with the following exception. There may be times when Surround Sound is not desired in both the front speakers and in the bedroom speakers.

To Turn Off Surround Sound In Bedroom Speakers:

- ◆ On the dash radio push the volume control five times until FAD appears in the window (the sequence is VOL, BAS, TRE, BAL, FAD). The letters "F" (front) and "R" (rear) will appear.
- ◆ Turn volume control until "12 F" is reached. No sound will now come out of bedroom speakers.
- ◆ Any number value in-between "0F" and "11F" will only fade the level of sound coming out of the bedroom speakers. For example, if "9F" is selected then the front speakers play louder than the bedroom speakers.

SATELLITE Stationary System (Optional)

The self-contained stationary, automatic satellite TV system automatically acquires and tracks DirecTV®, DISH Network™ and Bell ExpressVu satellite signals throughout the continental United States when the motorhome is in a stationary position.

 
NOTE

The satellite is a self-acquiring satellite TV antenna for use when the motorhome is stationary. The system is not designed to track the TV satellite when the motorhome is in motion. For specific satellite coverage areas and providers see the OEM manual.

NOTE

A HD (high definition) ready receiver is optional (N/A for bedroom). Channel availability will vary with satellite system and providers. Consult the OEM manual for providers, coverage areas and channel availability.

The **Internal Receiver Descrambler (IRD)** (Not on all Models) receives satellite signals from the antenna for decoding, processing, and channel selection, and then sends those signals to the TV for viewing. The IRD also provides the interface for the user to activate authorization for reception.

INFORMATION

Satellite Receiver

031196b

Refer to the IRD User's Manual for complete operating instructions.

The satellite system requires a clear view of the southern sky to receive signal. Ideal antenna site has an unobstructed view of 15° to 75° in the Southern horizon.

If the satellite antenna receives intermittent signals or cannot locate the satellite, check around outside of motorhome for blockage such as trees, building, etc. The satellite antenna must be located in the selected satellite's coverage area in order to receive a signal.

NOTE


The satellite receiver must be turned on for the system to function.

NOTE

As part of the startup process, the System will default to channel 200, a program directory. This is the system's means of verifying that it has identified and is tracking the correct satellite. Once channel 200 appears, wait at least another 30 seconds before changing the channel to ensure that the system has completed the startup routine.

For Dish 500 subscribers:

After being locked onto a

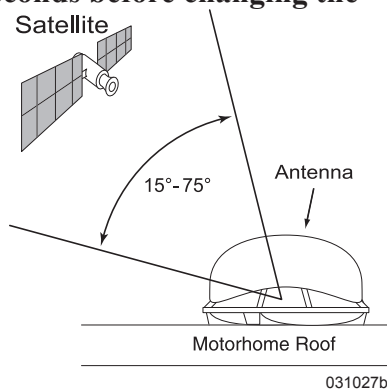

satellite Dish 500 subscribers can switch back and forth between the 110 and 119 satellites.

To switch satellites:

Press and hold the 3 position switch for 1 second. Up will switch to 119 while down will switch to 110.

System Start-up:

- ◆ Upon power-up, the system performs a set of start-up routines.
- ◆ Antenna then searches for a TV satellite.
- ◆ After locating a satellite, the IRD data connection determines whether the satellite signal can be decoded. If so, the antenna locks onto and tracks the satellite.

NOTE

Once the startup procedure is complete and the antenna is locked onto the correct satellite, the power switch may be turned off to avoid unnecessary discharge of house battery power. Because the antenna LNB receives its power from the IRD, the antenna will continue to receive the satellite TV signals and relay them to the IRD.

NOTE

If the antenna is unable to locate the desired satellite, refer to the OEM Manual for possible causes and corrective actions.

“Instant On” Operation:

As part of operation, the satellite routinely saves its position to memory. When turned on, the system looks at the last saved position and if the motorhome has not changed location, the

antenna will immediately acquire the signal.

If the motorhome moves after the system is turned off, the antenna will quickly carry out normal initialization routine to re-acquire the satellite. To turn the system off, press the **Power** button.

NOTE

It is highly recommended that the system be turned OFF prior to moving the motorhome. The system will not track a satellite while the motorhome is in motion.

The system requires the following preventive maintenance for optimum performance.

Monthly:

- ◆ Wash the exterior of the radome and base plate assembly with fresh water; a mild detergent may be added to remove grime. **DO NOT** spray the radome directly with high-pressure water.
- ◆ **DO NOT** apply abrasive cleaners or volatile solvents, such as acetone, to the ABS dome.

Annually:

- ◆ Have the satellite system inspected by a professional RV Technician or satellite installer.
- ◆ Apply full strength liquid dish detergent to the dome surface and allow it to dry. This treatment provides a film on the dome surface that will allow moisture to bead up and roll off.

NOTE

If a need arises to paint the radome, **ONLY** use non-metallic automotive paint to avoid degrading the RF signal strength and the reception quality.


INFORMATION

For information on warranty, repair, and liability policies, refer to the complete warranty statement provided with the OEM Manual.

NOTE

For optimum signal strength, keep the dome clean from dirt, bugs and other debris. Periodic washing of the dome with mild soap and water is recommended. If the motorhome is to be stored for long periods of time it is recommended that the system be put through a search procedure on a quarterly basis to keep all moving parts in good working order.

- ◆ Ensure the access card is inserted and press the **Power** button on the satellite receiver. The green LED on the receiver will illuminate.

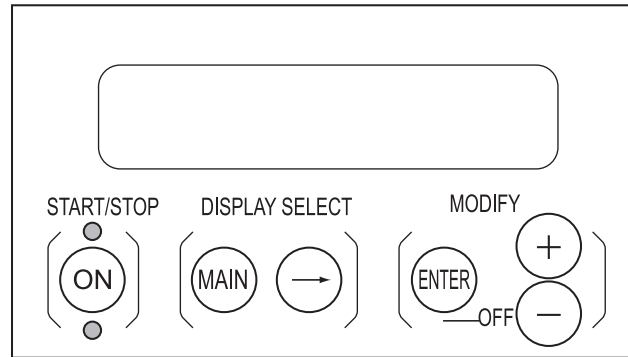**NOTE**


Inclement weather conditions may adversely affect the satellite signal acquisition. Degraded audio and video signals through the receiver will result.

NOTE

A HD (high definition) ready receiver is optional (N/A for bedroom). Channel availability will vary with satellite system and providers. Consult the OEM manual for providers, coverage areas and channel availability.

EXTERIOR ENTERTAINMENT CENTER (SHARP TV OPTIONAL)

The exterior entertainment has a LCD television, AM/FM radio, CD/DVD player and two speakers.

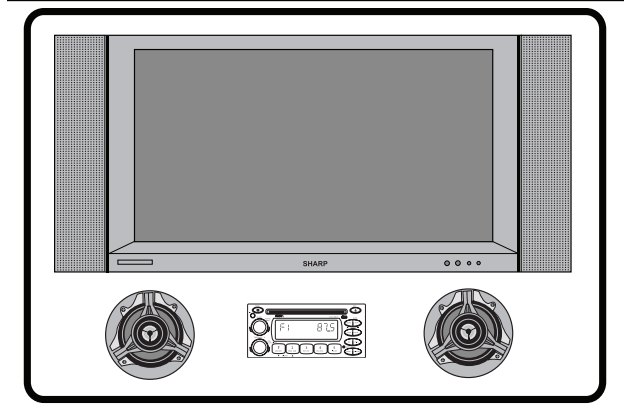**To Operate Any Component:**

All the entertainment components require 120 Volt AC from shore power, generator, or the inverter. Ensure the battery cut out switch is on and the house batteries are charged.

NOTE

For detailed information on features and operating procedures refer to the OEM manual.

To Watch TV from the Antenna:

- ◆ On the Video Selector Box press the television antenna Power button on. This provides +12 Volt power to the television antenna amplifier located inside the antenna housing. Press the TV ANT button located above the area marked "VCR/TV3."
- ◆ Turn on the TV. Press Input button until TV is displayed on the input menu in the upper right hand corner.
- ◆ From the Set-Up menu select Air. Initiate a Channel Search.
- ◆ Select desired channel on TV.
- ◆ Adjust sound to desired level.

NOTE**In-Motion System (Optional)****In-Motion Satellite System:**

The In-motion system will automatically track the satellite during travel. If the motorhome is parked the control panel can be turned off to conserve battery power after the system has obtained the signal. To turn the control panel off simultaneously press the **Enter** and – buttons.

To Use the In-Motion System:

- ◆ Press the **On** button on the satellite control panel. The dish will automatically acquire the signal from the satellite.

Refer to television manual on how to receive all available channels in the area.

NOTE

The picture quality from the outdoor TV antenna varies depending on the location of the TV station in relationship to the location of the TV antenna. If picture quality is degraded and you are not using an external power supply, try turning the TV Antenna Power button on the control box OFF and ON.

To Watch a DVD (Using Exterior Entertainment DVD):

- ◆ Turn on TV. Press Input button until Input 2 is displayed on the input menu in the upper right hand corner.
- ◆ Turn on exterior DVD player.
- ◆ Insert DVD. DVD will load and play automatically.
- ◆ Adjust volume at exterior DVD player.

To Watch a DVD (Using Interior Dash Radio DVD):

- ◆ Turn on interior dash radio.
- ◆ Turn on the Video Selector Box. Press the DVD button located above the area marked “VCR/TV3.”
- ◆ Insert DVD into interior dash radio. DVD will load and play automatically.
- ◆ Select Channel 3 on the exterior TV.
- ◆ Two steps must be performed for sound. Turn the volume on the interior dash radio to approximately level 20. Then turn volume on exterior TV to desired level.

To Watch TV from Shore Cable:

- ◆ On the video selector box press the CABLE TV button located above the area marked “VCR/TV3.”
- ◆ Turn on the exterior TV.
- ◆ Select Channel 3.
- ◆ From the Set-Up menu select Cable. Initiate a Channel Search.
- ◆ Select desired channel on exterior TV.
- ◆ Sound level is controlled by the sound controls on exterior TV.

NOTE

Refer to manufacturer’s television manual on how to receive all available cable channels in the area.

NOTE

To view Cable TV signals, you must be connected to a Cable TV input on the outside of the motorhome. Cable TV inputs are available at many of today’s campgrounds.

To Watch Satellite:

- ◆ On the video selector box press the SAT button located above the area marked “VCR/TV3.”
- ◆ Turn on exterior TV. Select Channel 3.
- ◆ Turn ON satellite receiver, located inside the motorhome, then use satellite tracking system to acquire satellite.
- ◆ Use satellite remote control to select desired channel. Satellite remote MUST be pointed at the satellite receiver, located inside the motorhome, to change channels. The door to the compartment that houses the satellite receive MUST also be open.

- ◆ Sound level is controlled by the sound controls on exterior TV.

NOTE

Subscription to a Satellite provider is necessary to receive channels for viewing.

NOTE

Inclement weather conditions may adversely affect the acquisition of a satellite signal. Degraded audio and video signals through the receiver will result.


To Play Exterior Radio:

- ◆ Turn radio ON.
- ◆ Select AM/FM or other.
- ◆ Select station.
- ◆ Set volume to desired level.

To Play Exterior CD Player:

- ◆ Turn CD player ON.
- ◆ Insert CD. CD will load and play automatically.
- ◆ Adjust volume.

SYSTEMS CONTROL CENTER

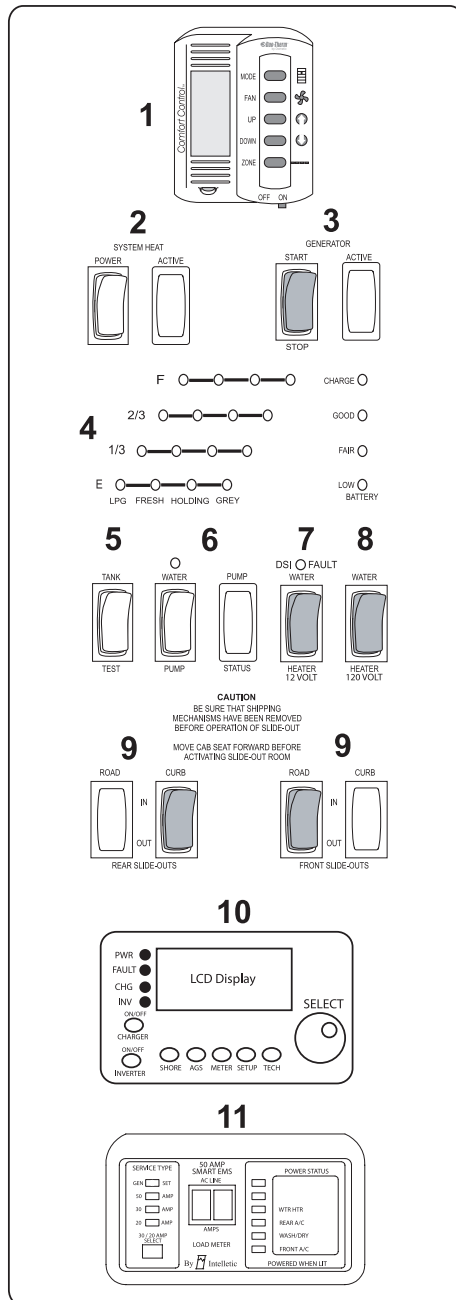


The System Control Center enables a central location for many of the switches and control monitors used to operate the motorhome. This panel is a flush wall-mounted unit.

1. **Comfort Control** - Controls furnace and roof A/C functions.
2. **System Heat** - Applies power to the Bay Heater in the Water Service Center.
3. **Generator** - Starts and stops the generator.
4. **Tank Monitor Panel** - Displays the status of the black and grey holding tanks, fresh water tank and LP-Gas tank. Also displays status of house battery.
5. **Tank Test Switch** – Spring loaded switch used to display tank status on the monitoring panel.
6. **Water Pump Switch** - Applies 12 Volt DC power to operate the Water Pump if operating from the on-board fresh water supply.
7. **Water Heater Switch** - Applies 12 Volt DC power to ignite the Water Heater, if preferring to operate the Water Heater with LP Gas. If the Water Heater fails to ignite, the DS1 FAULT lamp will illuminate.


8. **Water Heater Switch** - Applies 120 Volt AC power to the Water Heater, if preferring to operate the Water Heater with 120 Volts.
9. **Slide-Out Room Controls** - Provides power to operate the slide rooms.
10. **Inverter Remote Panel** – This panel controls the functions of the Inverter.
11. **50 Amp Energy Management System** – Provides circuit protection for all 120 Volt AC loads and manages 120 Volt AC distribution.

060306v








WIRING DIAGRAM - HOME THEATRE SYSTEM

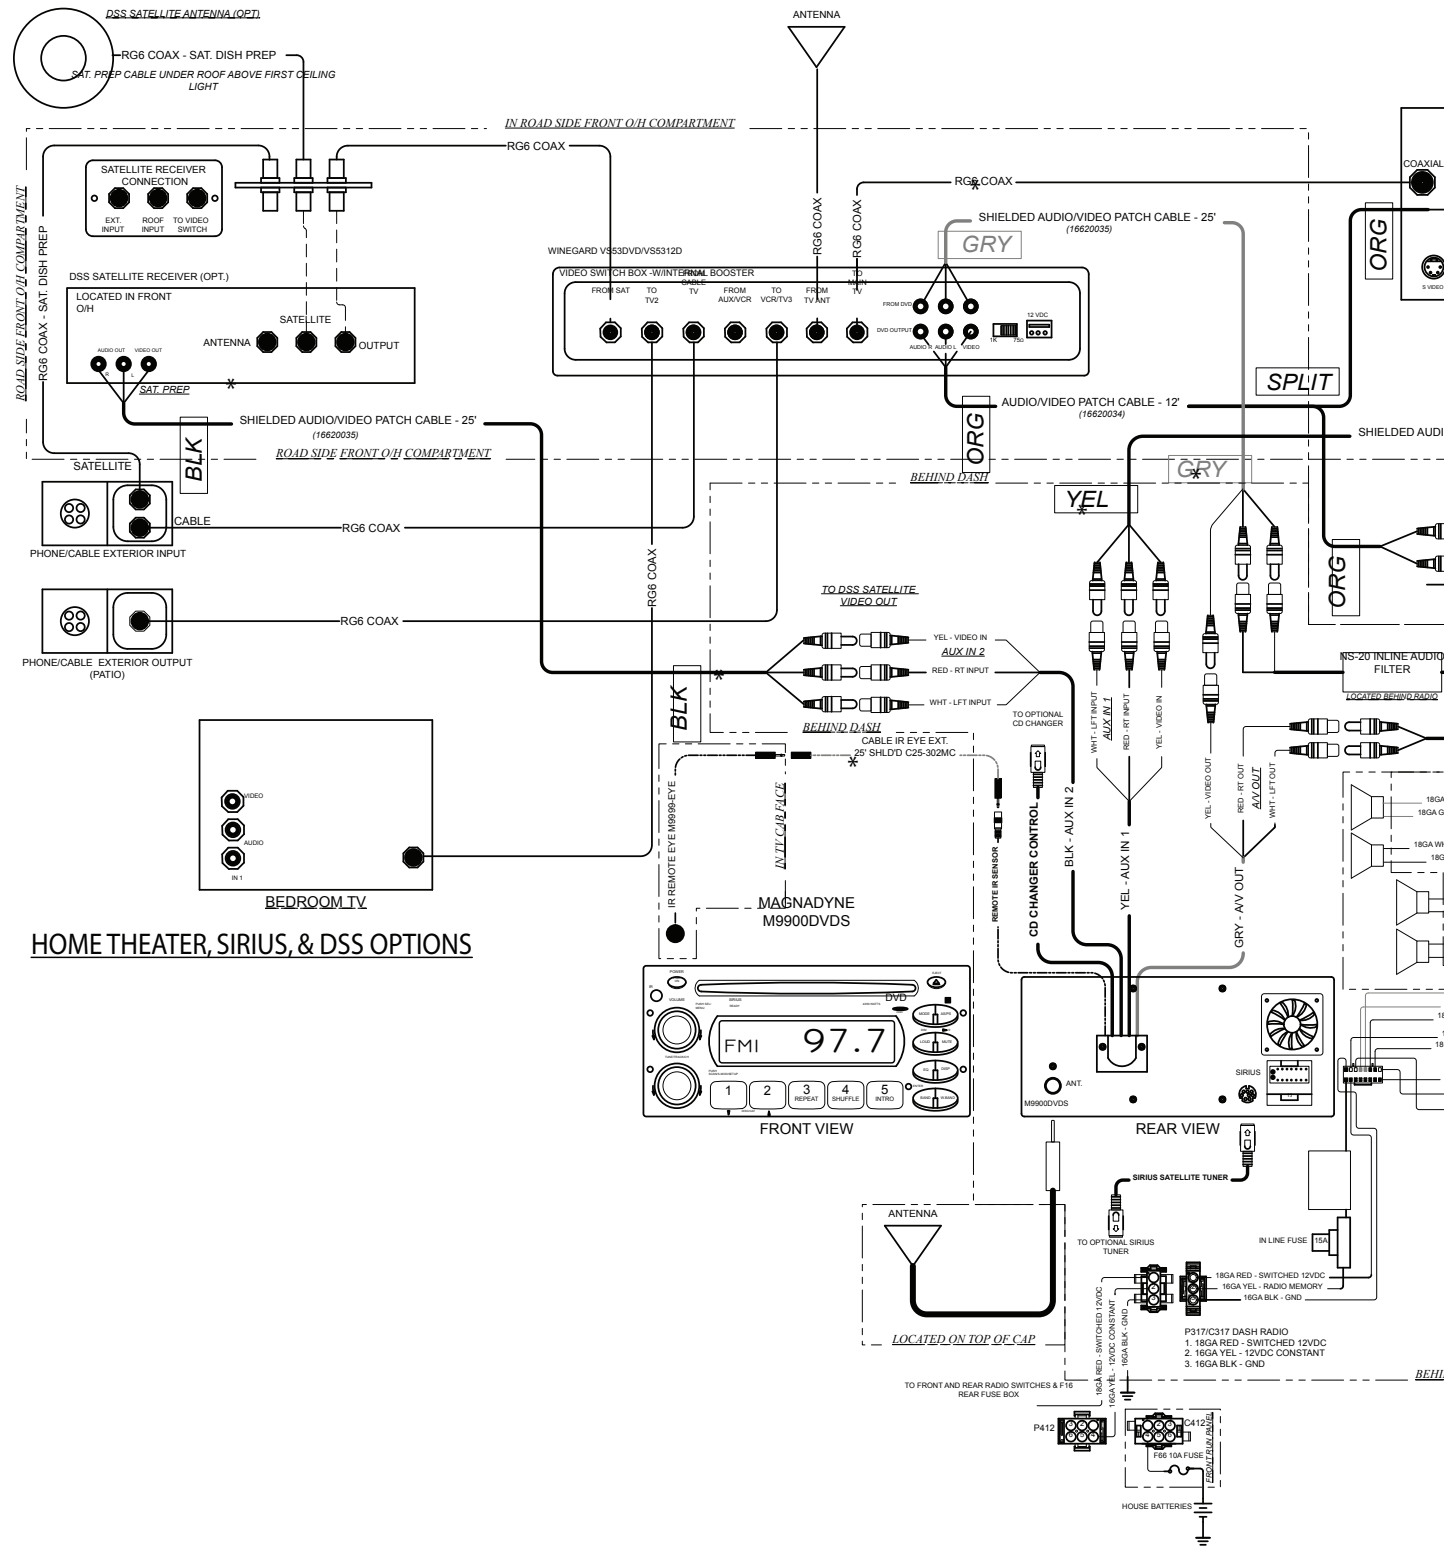

HOME THEATER, SIRIUS, & DSS OPTIONS

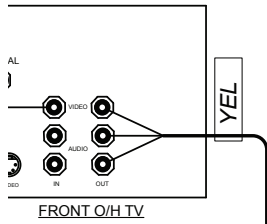

DIO/VIDEO PATCH CABLE - 25'

 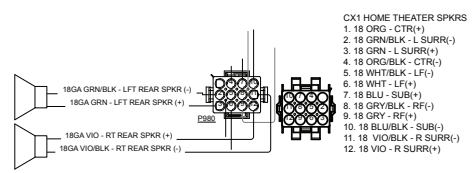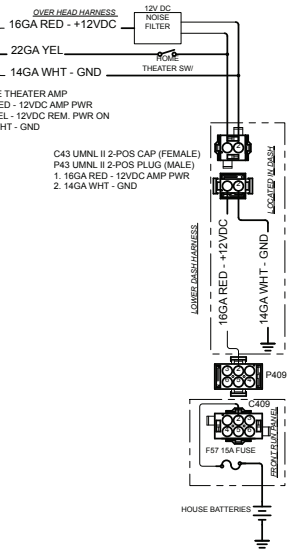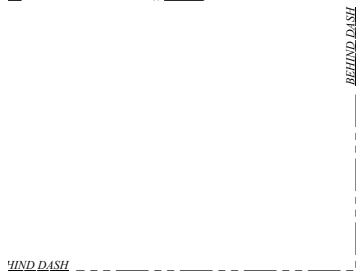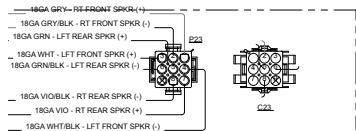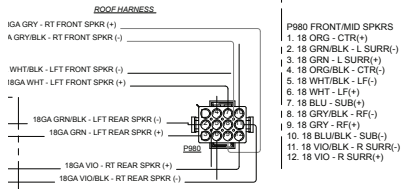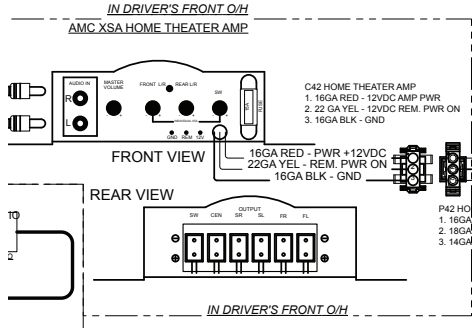


Diplomat 2007

Water Systems — Section 6

WATER SYSTEMS - INTRODUCTION	128	ELECTRIC TOILET (40 SKT & 40 DFT MODELS ONLY).....	137
WATER TANKS	128	Operation	137
Measurements & Calibration	128	Programming the Water Level.....	137
Fresh Water Fill	128	Holding Tank Level Sensors.....	137
WATER TANK - FRESH GRAVITY FILL	129	Cleaning	138
City Water Hook-up	129	Maintenance	138
WATER PUMP	129	Winterization	138
Water Pump Troubleshooting.....	130	Drain Traps & Auto Vents.....	138
WATER FILTER - FAUCET	130	COLD WEATHER CONDITIONS.....	139
WATER SYSTEMS	131	Cold Weather Storage.....	139
Troubleshooting	131	WINTERIZATION.....	139
Disinfecting Fresh Water	131	Using Air Pressure	139
FAUCET SCREENS.....	132	Using Non-Toxic Antifreeze and Gravity Fill.....	140
WASTE WATER SYSTEMS	132	Dewinterization	141
Proper Waste Disposal	132	WATER SERVICE CENTER	142
What Not to Put in Waste Holding Tanks	132		
What to Put in Holding Tanks	133		
Waste Drain Hose	133		
Tank Flush.....	134		
WASTE PUMP (OPTIONAL)	134		
TOILET (NOT ON ALL UNITS)	136		
Cleaning & Maintenance.....	136		

WATER SYSTEMS - INTRODUCTION

This section contains information about the operation and care of various water system equipment found in the motorhome. Optional water equipment will also be discussed, so not all information may be applicable to each motorhome. More detailed information with **CAUTION** or **WARNING** instructions for various equipment, other than what is found in this section, can be found in the OEM manuals in the owner information box.

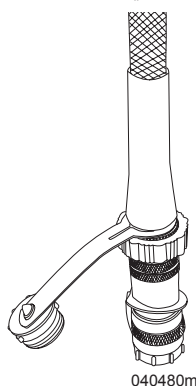

It is hard to imagine how much water is used by the average person. Newcomers to a self-contained motorhome soon discover water does not last long unless consumption is drastically reduced. For example, less water can be used for showering if the shower is turned off while soaping down, then turned back on to rinse. This way a good shower uses a couple gallons of water or less. There is plenty of water to meet personal needs once habits are adjusted.

Fresh Water System:

The fresh water system consists of a fresh water tank, water pump, gravity fill connection, water filter and a city/fresh water connection. Use a water hose that is marked for potable water use only. Proper care of the hose is necessary. After each use, drain the water hose and coil the hose neatly. Attach the ends together to keep dirt, debris and insects out of the hose. If the



motorhome has the optional electric hose reel, the hose will be included. Coiled the hose on the reel after each use.

Waste Water System:


The waste water system consists of a waste holding tank (grey water), sewage holding tank (black water), flush system, toilet and drains.

WARNING


Water is electrically conductive. DO NOT use any electrically powered item or electrical outlet that may be exposed to a water source. Such use can result in a serious shock, causing injury or death.

WATER TANKS Measurements & Calibration

The motorhome is equipped with a monitor panel to aid in managing the storage tanks. The monitor panel is located on the Systems Control Center in the hallway area. A second optional monitor panel is located in the roadside water service center. The switch marked Test is a momentary switch which requires being held down while testing the level of the storage tanks. Read the scale for the desired storage tank that is being monitored. Each scale uses colored lights along with a corresponding scale reading. The lights and scale are as follows:

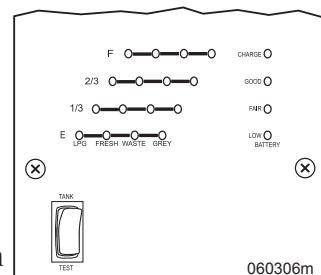

Monitor Panel
Located In Hallway Area

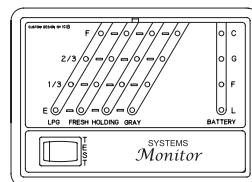


Monitor Panel (Optional)
Located in Service Center
03U446g

LP Tank and Fresh Tank	Holding and Grey Tanks
Red = Empty	Green = Empty
Orange = 1/3 Full	Yellow = 1/3 Full
Yellow = 2/3 Full	Orange = 2/3 Full
Green = Full	Red = Full


Fresh Water Fill

When connecting the motorhome to fresh water, use a hose manufactured and labeled “for potable water.” This ensures that the hose will not flavor the water. It is recommended to install a pressure regulator on the water line. On hot days the hose may expand and burst from excessive pressure within the hose.

1. If the motorhome has the optional Power Hose Reel, pull hose out. Connect one end of the pressure regulator to the water source and the other end to the hose and go to step #4. If motorhome does not have the optional power hose reel, proceed with step #2.
2. Connect one end of the pressure regulator to the water source and the other end to the hose.

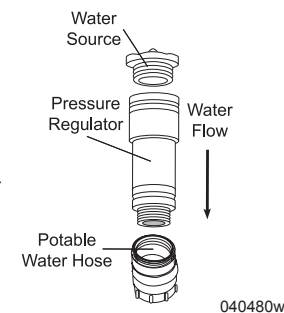


CITY WATER

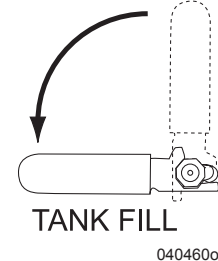

3. Connect hose to the City/Fresh Water Fill valve located in the roadside water service center.
4. Make sure the fresh water tank drain valve, located in the roadside water service center, is in the closed position.
5. Turn the water control valve to the “Tank Fill” position.
6. Turn on water at the water source. The water should be audible as the fresh water tank fills. Monitor the tank filling by using monitor panel located inside the motorhome, or the (optional) monitor located in the roadside water service center.
7. Frequently press the “Test” switch and read the scale as the fresh water tank fills. Do not leave the motorhome unattended while filling the fresh water tank.
8. The tank is nearing full when the light marked “F” illuminates. When the tank is completely full, water will flow out an overflow tube under the motorhome.
9. Turn off water supply and return the water control valve to “City Water” position.
10. Disconnect the potable hose. Remove pressure regulator. Store the hose with both ends connected to prevent debris from entering the hose.
11. If applicable, activate the (optional) power hose reel switch to coil the hose on the reel.

WATER TANK - FRESH GRAVITY FILL

The gravity fill inlet allows fluids to be introduced directly into the fresh water tank. Water can be poured directly from a container into the fresh water tank. The gravity fill inlet can be used to pour disinfecting solution into the fresh water tank or when using potable RV antifreeze to winterize the fresh water system. Use only potable water sources, solutions and delivery systems when using the gravity fill inlet.

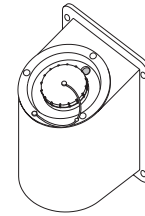

040406
Located in the roadside water service center

Filling the Tank:

1. Unscrew fill cap taking care to keep cap and inlet clean.
2. Insert potable water hose into inlet.
3. Fill tank until water overflows from inlet.


NOTE

When filling tank do not leave hose unattended.

City Water Hook-up

When connecting the motorhome to fresh water, use a hose manufactured and labeled for potable water to ensure the hose will not flavor the water.

1. If the motorhome has an optional hose reel, pull hose out. Connect the pressure regulator to the water

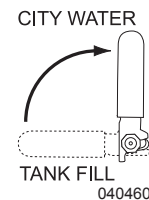

040460p


- source and the other end to the hose and proceed to #4. If motorhome does not have reel, proceed to #2.
2. Install one end of the pressure regulator to the water source and the other end to a potable hose.
3. Connect the other end of the potable hose to the City/Fresh Water Fill inlet.
4. Water control valve should be in the “City Water” position.
5. Turn on the water at the water source.
6. The water pump can either be OFF or ON. It will not affect the water pump to leave it on.
7. Open each faucet, one at a time, to rid any trapped air inside the pipes.

CAUTION

Some water sources develop high water pressure, particularly in mountainous regions. High water pressure is anything over 55 psi (pounds per square inch). Excessive water pressure may cause leaks in water lines and/or damage the water heater.

WATER PUMP

The water pump pressurizes the fresh water system when not connected to city water. The water pump is self-priming, operating on demand as water is used. The water pump is located in the water service center.

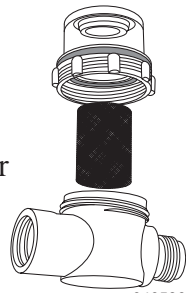

040586
Water pump inlet screen: Located on water pump in water service center. Clean every two months.

To operate the water pump the house battery disconnect switch and battery cut-out switch must be on.

WARNING


Before leaving the motorhome for extended periods of time (i.e. overnight or longer) be sure that the city water supply and water pump have been turned off. Damage from neglect will be the responsibility of the owner, not the manufacturer.

The water pump can be operated from these following locations:

- ◆ Hallway Systems Control Panel
- ◆ Water Service Center
- ◆ Kitchen Area

To turn the water pump ON or OFF:

- ◆ Momentarily press the water pump switch. The indicator lamp illuminates when the water pump is turned on.

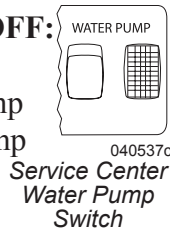

CAUTION

DO NOT continue water pump operation if the fresh water holding tank is empty. Damage to the water pump or electrical supply system may result.

To operate the water pump after unhooking from a city water supply or after storage:

- ◆ Close all drain valves and low point drains.
- ◆ Fill the fresh water tank.
- ◆ Open the hot and cold water valves of each faucet.
- ◆ Turn the water pump **ON**. Wait for the water lines and the hot water tank to fill.

- ◆ Close each faucet when it delivers a steady stream of water (cold water faucets first).

Water Pump Troubleshooting

Vibration induced by road conditions can cause the plumbing or pump hardware to loosen. Check the water pump system for components that are loose. Many symptoms can be resolved by tightening the hardware. Check the following items:

Water pump will not start or blows the fuse:

- ◆ Check the electrical connections, fuse or breaker, main switch and ground connection.
- ◆ Is voltage present at the pressure switch on the pump? If voltage is present, the pressure switch may be faulty. As a test, temporarily bypass the pressure switch.
- ◆ Check the charging system for correct voltage and good ground.
- ◆ Check for an open or grounded circuit or motor.
- ◆ Check for a seized or locked diaphragm assembly (water frozen).

Water pump will not prime or sputters (No discharge/motor runs):

- ◆ Is the pump inlet strainer clogged with debris?
- ◆ Is there water in the tank or has air collected in the water heater?
- ◆ Is the inlet tubing and plumbing sucking in air at plumbing connections (vacuum leak)?

- ◆ Check for proper voltage with the pump operating.
- ◆ Check the pump housing for cracks or loose drive assembly screws.

Water pump will not shut-off or continues to run when the faucet is closed:

- ◆ Check to see if the fresh water/tank fill valve is completely closed.
- ◆ Check the output (pressure) side plumbing for leaks and inspect for a leaky toilet or valves.
- ◆ Look for a loose drive assembly or pump head screws.

Water pump is noisy or rough in operation:

- ◆ Check for plumbing that may have vibrated loose.
- ◆ Does the mounting surface multiply noise (flexible)?
- ◆ Check for mounting feet that are loose or compressed too tight.
- ◆ Look for loose pump head to motor screws.


Water pump is rapid cycling:

- ◆ Look for restrictive water flow in the faucets or shower heads.

WATER FILTER - FAUCET

The motorhome is shipped with a diverter hose in place of the in-line faucet water filter. For winterization purposes the diverter hose will have to be installed in place of the filter. To initially install a water filter or to replace a water filter, use the procedure as follows:


- Locate the water filter diverter hose under the galley sink area.
- Remove the top and bottom fittings from either the hose or filter.
- Connect top and bottom fittings to the filter to purify the system.
- Store diverter hose for use when winterizing the water system.

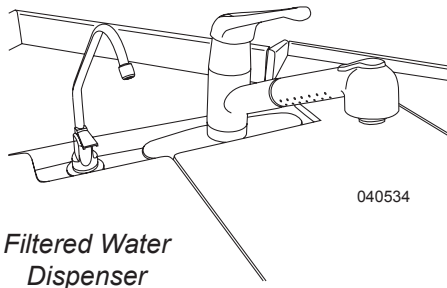

CAUTION

When flushing the water lines and after all the antifreeze has been flushed from the water system REMOVE the diverter. The diverter IS NOT intended for sustained use in normal water system operation.

A fresh replacement cartridge is needed when the flow of water from the faucet becomes slow. The life of the filter depends upon incoming water conditions and water consumption. As water passes through the water filter, dirt particles are trapped in the tiny pores of the micro-pure coating on the filtering element inside the cartridge. As the cartridge removes impurities from the water, microscopic pores slowly permeate and the amount of water flowing from the cartridge gradually decreases.

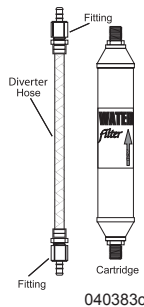

When the flow of water becomes too slow for convenience the filter requires servicing. If the cartridge is not changed the flow will eventually stop. It is recommended the filter be replaced at least once a year for continued reliable performance from the purification system.

NOTE

Change the filter every six months. Replace with Flow-Pur Filter Cartridge FP 10GT.

**WATER SYSTEMS
Troubleshooting**

Water pump cycling after closing the faucets, drain valves and inlet valves, may indicate a leak. Check for leaks around fittings, valves, filters, and connections of the hot and cold water system. If problems continue take the motorhome to an authorized dealer for repair.

Disinfecting Fresh Water

Disinfecting the water system with household bleach (superchlorination) protects against bacteriological or viral contamination from common water sources.

Disinfect the fresh water system:

- ◆ If the motorhome is new.
- ◆ If the motorhome has been in storage.
- ◆ Every three months during use.

NOTE

Use the gravity fill to perform this task. Remove cap from the gravity fill. Add the solution. When finished, secure the gravity fill cap.

Use following procedure to disinfect water system:

- ◆ Replace the faucet water filter with the diverter hose (see “Faucet Water Filter”).
- ◆ Prepare a household chlorine bleach solution of 1 gallon water and ¼ cup of chlorine bleach. Use 1 gallon of solution for every 15 gallons of tank capacity. E.g.: Add 2-2/3 gallons solution to a 40 gallon tank. This mixture puts a 50 ppm (parts per million) residual in the water system, and acts as a quick-kill dosage for harmful bacteria, viruses and slime-forming organisms. Concentrations higher than 50 ppm may damage the water lines and/or tanks.
- ◆ Turn the water pump **OFF**.
- ◆ Drain the fresh water tank. Water tank drain is located in the roadside water service center. Close the drain and pour the solution into the fresh water tank using the gravity fill and a funnel.
- ◆ Turn the water pump **ON**. Open each faucet, in turn, and run the water until you smell a distinct chlorine bleach odor. Do not forget the hot water, tub and shower faucets.
- ◆ Allow the system to stand for 4 hours.

- ◆ Drain the system and flush with fresh water. The water tank and low point drains are located in the roadside water service center. Flush with fresh water repeatedly, until the water system no longer smells or tastes like chlorine bleach.
- ◆ Install new faucet water filter.

TIP

Use the same hose labeled for potable water to introduce the chlorine solution into the system. This will disinfect the potable water hose at the same time. Several flushes will be required to remove chlorine residue from the potable hose.

INFORMATION



Household bleach is 5.25% Sodium Hypochlorite. Higher concentration will increase PPM ratio.

FAUCET SCREENS

Fresh water sources will vary by location. Build up of lime deposits, or debris on the faucet screen, will restrict or plug the flow of water coming from the faucets. Should the flow of water reduce, the filter screen in the faucet head may be clogged. All faucet screens should be checked and cleaned every two weeks of use.

- ◆ Faucet screens are normally located on the outlet side of the faucet and held in place with a threaded collar.
- ◆ Remove screen from faucet.

- ◆ Clean screen using a small soft brush and de-liming solution.
- ◆ Reinstall screen and check water flow.

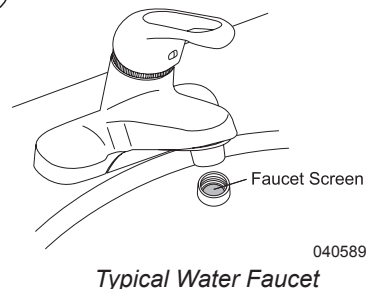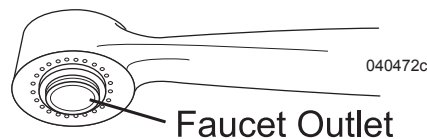**WASTE WATER SYSTEMS**
Proper Waste Disposal

Dumping raw sewage from toilet holding tanks, except at authorized dumping stations, is universally prohibited. Most National, State and private parks have either a central dump facility or campsite hook-up for sewage. Many modern rest areas along the interstate now have dump stations available. Woodall's Campground Directory, Trailer Life's RV Campgrounds and Services Directory, Rand McNally's Campground and Trailer Park Guide, Good Sam Park Director (Good Sam Club) and other similar publications list dumping stations. Some major oil companies offer dump facilities at selected stations also.

What Not to Put in Waste Holding Tanks

- ◆ **DO NOT** use strong or full strength detergents to deodorize and disinfect. Use odor control chemicals made especially for holding tanks.
- ◆ Automotive antifreeze, ammonia, alcohol or acetone in holding tanks will dissolve plastic.
- ◆ **DO NOT** dispose of table scraps or cooking grease into the tanks. They can clog pipes or damage the valve seals.
- ◆ Facial tissue is thicker, softer and stronger than a rapidly dissolving tissue. White toilet paper dissolves faster than colored. To test tissue dissolving ability, immerse one tissue square into a jar of water. Shake the jar five times to determine how the tissue disintegrates. **DO NOT** use any type of tissue that remains in one piece. Paper designed specifically for holding tanks is available at most RV supply stores.

NOTE

Never dispose of sanitary supplies or other non-dissolving items into the system. Facial tissue, wet strength tissue, paper towels or an excessive amount of toilet tissue can create clogging in the holding tank system.

CAUTION

DO NOT use any products that contain petroleum distillate or ammonia in place of RV odor controlling chemicals. Petroleum distillate or ammonia will damage the ABS plastic holding tanks and seals.

What to Put in Holding Tanks

Grey Water Tank:

The grey water waste tank stores the sink, shower and clothes washer (if equipped) drain water. A reduced mixture of chemicals may help to control odor in the grey tank.

Ensure that there is enough liquid in the holding tanks prior to dumping the waste holding tanks to provide a smooth flow through the valve, drain pipe and drain hose. Empty the waste holding tanks weekly to prevent stagnation and overfilling.

Black Water Tank:

Before initially operating the toilet, treat the sewage holding tank with a pre-charge of water and an odor-control chemical (available at most RV supply stores). First, add approximately three gallons of water to the holding tank. Next, mix the chemicals, in accordance with the manufacturer instructions, with approximately one gallon of water. Pour mixture through toilet to the holding tank. Be careful not to spill the chemical on hands, clothing, toilet bowl or carpet. Hot weather conditions may require adjusting the amount of chemical used to control odor. Repeat the chemical pre-charge to the holding tank each time the tank is cycled.

WARNING

Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using holding tank additive. DO NOT use any products that contain petroleum distillate or ammonia in place of RV odor controlling chemical. Petroleum distillate or

ammonia will damage the ABS plastic holding tanks and seals.

Waste Drain Hose



A flexible three-inch sewer hose attaches between the termination drain and the shore facility. Sewer hoses usually come in 10 or 20 foot lengths.

The shore fitting for the sewer hose may be a three or four-inch, male or female thread pipe; or a four-inch pipe with no threads, covered by a metal plate. Different style of adapters are available to fit most configurations. Hose ladders may also be purchased to support the hose.

It is important that the hose remains secure. **Always tighten clamps and restraining devices before use.** Lay the hose inline between the termination outlet and the shore fitting. Restrain the hose to prevent movement during use. Wear protective and/or disposable gloves when handling the sewer hose.

To Attach the Hose:

- ◆ Remove termination cap. Align coupler tangs with termination tabs. Twist coupler clockwise 90° locking coupler to termination outlet.
- ◆ Attach other end of hose to drain service. Restrain hose to prevent movement during use.
- ◆ Open the (small) grey water valve.

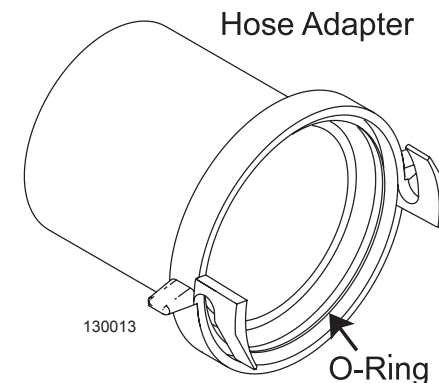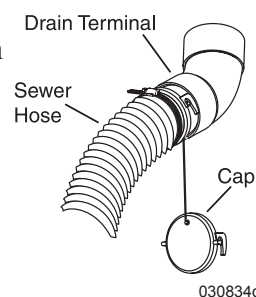

The large black water valve remains closed until the tank is full or until time of departure to help prevent clogging. Use the outside faucet or shower attachment for washing or rinsing the sewer hose after dumping the black tank.

NOTE

Use care when connecting the sewer hose adapter to the termination outlet in cold weather.

NOTE


Close the grey water valve 24 hours prior to departing to allow the tank to fill with liquid to help in the dumping process.

LUBE

Periodically lubricate the O-ring on the sewer hose adapter with silicone spray.


Tank Flush

The motorhome comes equipped with a power flush nozzle, located in the black tank to help reduce solids build-up. Flush the black tank each drain cycle. Failure to thoroughly rinse the black tank may result in accumulated solids and a clogged spray nozzle.

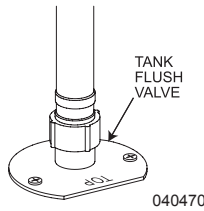

Gravity Drain Hose Dumping:

1. Attach sewer hose to terminal drain and shore facility.
2. When preparing to dump the black tank, first close the grey water valve.
3. Fill the grey tank to at least 50% by running water in the shower or sinks.
4. Use the monitor panel to observe tank fluid levels. When the grey tank is 50% full, stop filling.
5. Open the black water valve. Allow the black tank to drain.

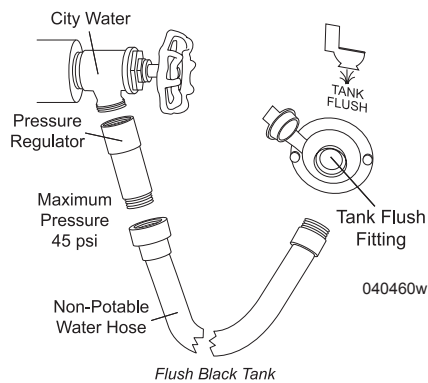

6. Connect a non-potable water hose, with pressure regulator, to the tank flush fitting located in the water service center.
7. Turn on the faucet and allow water to rinse the black tank at least three minutes. Never operate the system unattended. Ensure the water flows freely through the drain hose.
8. When completed, turn off the faucet and close the black water valve.
9. Open the grey water valve. The water in the grey tank will flush remaining solids from the hose. With the grey water valve open, run two gallons of water down any drain to flush grey tank. The grey valve remains open until the next drain cycle, or time of departure.

WARNING

Never operate the flush system unattended. Flooding may occur. Use the tank flush system each time the holding tanks are cycled. Failure to routinely use the flush system will result in a clogged spray nozzle. Turn off the water supply when finished flushing the tank.

10. When preparing for travel, close both dump valves. Undo restraining devices from the hose. Disconnect the hose from the termination outlet by rotating the fitting counterclockwise 90°.
11. Raise the hose and drain using hand over hand method working the hose towards shore fitting. Rinse the hose with outside facility and repeat the hose drain process.

12. Remove the hose from shore fitting. Install hose in carrier and lock door. Secure the termination cap (required by law in some states).
13. If desired, add chemicals to the tanks to control odor. Follow the directions given by the manufacturer of the chemical.

NOTE


Dump the black tank before driving.

WASTE PUMP (OPTIONAL)


The Sani-Con waste pump is a self-priming impeller pump designed to minimize clogging when draining the tanks. The Sani-Con system comes with a 1 1/2" outlet hose with sewer pipe adapter and a 13 gallon per minute macerator pump. The house battery disconnect switch must be on for the Sani-Con system to operate.

Prepare the Sani-Con Pump for Use:

- ◆ Make sure the black tank (solid waste water) and grey tank (liquid waste water) valves are closed.
- ◆ Remove the terminal drain outlet cap. Secure the 3" flexible sewer hose from the Sani-Con macerator pump to the termination drain outlet by aligning the sewer hose coupler tangs with the terminal tabs. Twist the coupler clockwise to lock it to the terminal outlet.
- ◆ Remove the drip cap from the Sani-Con discharge nozzle.

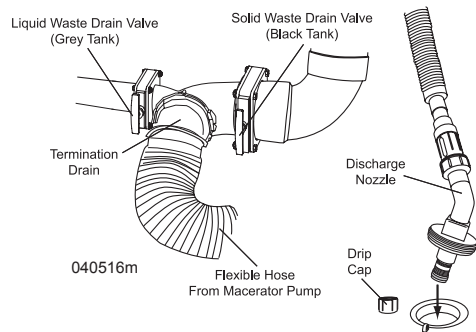

- ◆ Install discharge nozzle to the shore drain. Adapters allow the discharge nozzle to be adapted from 3" to 3½" and 4" threaded sewer connections. Thread the red adapter into the sewer connection, and press the threaded end of the sewer hose into the adapter. Ensure the hose end is installed correctly prior to operation.
- ◆ Turn on the chassis battery disconnect. The Sani-Con pump operates on 12 Volts from the chassis battery.
- ◆ If desired, the grey tank (liquid waste water) valve can be opened while the discharge nozzle is attached to the shore drain. Water used from the sinks, shower and clothes washer will drain through the bypass hose into the shore drain.

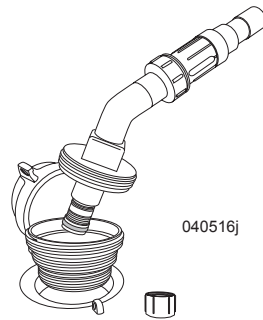

To Empty the Grey Tank (Liquid Waste Water):

- ◆ Secure the 3" flexible hose from the Sani-Con pump to the termination drain on the dump connection.

- ◆ If applicable, close the black tank (solid waste water) valve.
- ◆ Open the grey tank valve (liquid waste water).
- ◆ Turn on the Sani-Con pump using the Sani-Con switch on the water service center panel. Allow the grey tank to empty.
- ◆ Push the test switch on the monitor panel to read tank levels.
- ◆ If applicable, the black tank (solid waste water) can be emptied at this time.
- ◆ Turn the Sani-Con pump off.
- ◆ Close the grey tank drain valve and, if applicable, the black tank valve.
- ◆ Prepare the Sani-Con pump for travel as desired.

To Empty the Black Tank (Solid Waste Water):

- ◆ Make sure the black tank (solid waste water) and grey tank (liquid waste water) valves are closed.
- ◆ Secure the 3" flexible hose from the Sani-Con pump to the termination drain on the dump connection.
- ◆ If applicable, close the grey tank (liquid waste water) valve.
- ◆ Open the black tank valve.
- ◆ Turn on the Sani-Con pump using the Sani-Con switch on the water service center panel. Allow the black tank to empty.
- ◆ Push the test switch on the monitor panel to read tank levels.
- ◆ When black tank is empty turn off the Sani-Con pump.


- ◆ Use the black tank flush system. Connect a non-potable water hose, with pressure regulator, to the water source. Connect the other end of the water hose to the Tank Flush fitting.
- ◆ Turn on the water source and allow the water to rinse the black tank at least three minutes.
- ◆ Turn the water off, disconnect the hose and pressure regulator. Store the hose and regulator for future use.
- ◆ Turn the Sani-Con pump ON and allow black tank to empty. Turn the Sani-Con pump OFF and close black tank drain valve.
- ◆ If applicable, the grey tank (liquid waste water) can be emptied at this time.
- ◆ Prepare the pump for travel as desired.

Prepare the Sani-Con Pump for Travel:

- ◆ Make sure the black and grey tank valves are closed.
- ◆ Turn the Sani-Con pump ON for a few seconds to clear any water from the pump inlet hose. Turn the Sani-Con pump OFF.
- ◆ Remove Sani-Con discharge nozzle from the shore drain. Install the drip cap on the Sani-Con nozzle (required by law in some states).
- ◆ Store Sani-Con nozzle and pump discharge hose.
- ◆ If desired, add chemicals to the holding tanks to control odor. Follow the chemical manufacturer's directions.

Troubleshooting:

- ◆ The house battery disconnect switch must be on.
- ◆ 12 Volt DC power for the macerator pump comes from the house batteries and is protected with a 20 Amp mini-breaker. The breaker is located in the curbside electrical battery compartment. Open the black box above the batteries to access the mini-breaker. To identify the breaker locate the purple wire or the label.

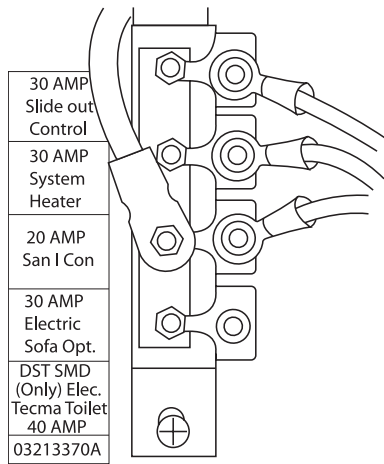


060162b


Located in curbside
battery compartment

TOILET (NOT ON ALL UNITS)

The toilet uses water from either the fresh water tank or a city water supply. The water pump must be turned **ON** or connect the motorhome to city water. The toilet flushes directly into the sewage holding tank (black water).

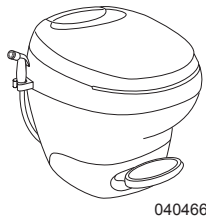

040466

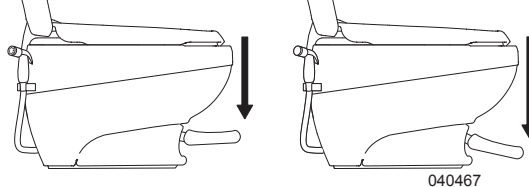

040467

CAUTION

To prevent accumulation of solids below toilet, add several gallons of water to the holding tank before use. Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using any holding tank additive.


NOTE

Never dispose of sanitary supplies or other non-dissolving items into the toilet. Facial tissue, wet strength tissue, paper towels or an excess toilet tissue can clog the tank or termination valve.

- ◆ To add water to the toilet before using, press and hold the pedal halfway until the desired water level is reached. Generally, more water is required only when flushing solids.
- ◆ To flush the toilet, push the lever all the way down until the sewage leaves the toilet.

Water flow pressures vary. Therefore, holding the flush lever down for several seconds may be required. Release the flush lever, allowing it to snap back, permitting positive sealing around the flush ball. A small amount of water should remain in bowl.

- ◆ To operate the hand sprayer, depress the thumb lever. Step on foot pedal. Direct water into the bowl.

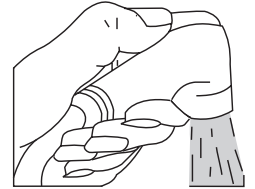

040397

Cleaning & Maintenance

The toilet should be cleaned regularly for maximum sanitation and operational efficiency. Clean the toilet bowl with a mild bathroom cleaner. **DO NOT** use chlorine or caustic chemicals, such as drain opening types, as they will damage the seals.

Clean the toilet system using the tank flush. If additional flushing is desired, flush with several gallons of fresh water and one cup of dry laundry detergent. Add odor control deodorant, in the amount specified for the holding tank capacity, every few days during use.

Maintenance - Checking for Leaks:

- ◆ **Back of toilet:** Check water supply line connection for tightness. Toilet tissue works well to find leaks. The tissue changes texture when contacting moisture.

◆ **Between closet flange and toilet:**

Confirm that flange screws are snug. **DO NOT** over tighten screws. If leak continues, remove toilet and check flange height. Adjust the flange height to 7/16" above floor, if necessary. Replace flange seal if damaged.

Maintenance - Bowl Problems:

◆ **Poor flush:** Flush should be obtained within two to three seconds. If a problem persists, adjust the water level. If problems continue, the water pressure or flow rate may be low. Remove the water supply line and check flow rate. Flow rate should be at least ten quarts (9.5 liters) per minute. Water pressure should not be below 25 psi.

◆ **Bowl will not hold water:** Check for and remove any foreign material from blade seal track. Check blade seal compression with mechanism. If blade seal is worn, replace.



NOTE

If the motorhome is in storage for six months, spray silicone on the toilet valve and work it back and forth. Perform this maintenance monthly during use (silicone will evaporate in about 30 days). DO NOT use a petroleum-based lubricant, damage to the seals will occur.

ELECTRIC TOILET (40 SKT & 40 DFT MODELS ONLY)

The toilet is an electric macerating toilet. To avoid damage only flush organic material and toilet paper. To operate the toilet the house battery disconnect switch must be on.

The toilet uses a 40 Amp mini-breaker located in the curbside battery compartment. Open the black box above the batteries to access the mini-breaker.

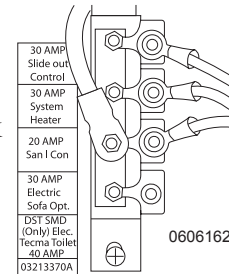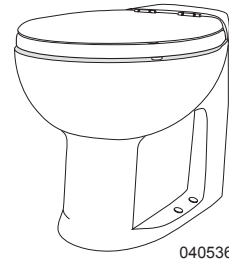

Mini Breaker

Operation

To operate the Tecma toilet the house batteries must be on and charged.

Water Saver Flush:

◆ Press and release left button. This mode is recommended for flushing liquids and small amounts of toilet paper only.

Normal Flush:

◆ Press and release right button. This mode is recommended for flushing solids and toilet paper.


Empty Bowl:

◆ Press both buttons simultaneously and release. This empties the bowl and leaves it dry for travel.

◆ Press either button once to add water, run motor, and return to normal use.

Programming the Water Level

The water level in the bowl can be programmed. The minimum recommended refill level is 1/2" above the bowl outfall hole. To locate the outfall hole look down into the bowl and the "opening" is the bowl outfall hole.

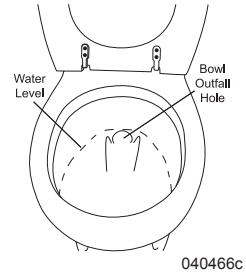

After changing water source from municipal to pump, resetting water may be necessary. To program the water level perform the following steps.

- ◆ Press both buttons and hold.
- ◆ LEDs will flash indicating the toilet is in program mode.
- ◆ As water enters the bowl, release fingers from buttons to set the level of standing water in the bowl. The level set remains constant after each flush until it is changed.

Holding Tank Level Sensors

The Tecma toilet system has tank level sensors mounted on the outside of the black tank. On the bathroom control panel is a small water icon located in the bottom right corner. The following information pertains to that water icon.

Water Icon Not Lighted:


◆ Toilet system is Off, in sleep mode or not receiving power.

Water Icon Lighted Green:

- ◆ Toilet system is On and the holding tank is between empty and half full.

Water Icon Lighted Yellow:

- ◆ Toilet system is On and the holding tank is at least half full.

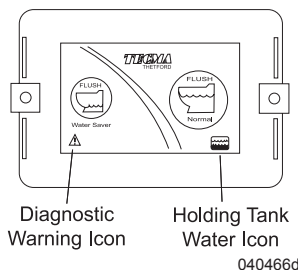**Water Icon Lighted Red:**

- ◆ Toilet system is On and the holding tank is full.

Full Tank Lockout

For the safety of the system, the toilet will not flush when the when the system senses a full tank. This occurs when the Water Icon is red.

Emergency Override

If the tank is full (Water Icon is red) and an emergency flush is needed do the following.

- ◆ Press and hold either flush button for 6 seconds to flush toilet.

WARNING

This may cause overflowing of the waste tank and system back up. The Diagnostic LED Warning Icon, located on the bottom left corner, will flash.

LED Sleep Mode

To save power consumption when not in use, an automatic LED sleep mode is programmed on this control panel. If the toilet is not used for 8 hours, the keypad's LED lights will go out. The press of any button will start a flush and

reactivate backlighting.

Cleaning

The toilet should be cleaned regularly for maximum sanitation and operational efficiency. Clean the toilet bowl with a mild bathroom cleaner. Do not use chlorine or caustic chemicals, such as drain opening types, as they will damage the seals.

Clean out the system by flushing several gallons of fresh water through with one cup of dry laundry detergent. Add odor control deodorant, in the amount specified for your holding tank capacity, after cleaning and every few days during use.

NOTE

Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using any holding tank additive.

Maintenance

To find leaks, check behind or under toilet. Take four or five sheets of toilet tissue and wipe all the water line connections. Start at the top of the unit and work downward. When the tissue comes in contact with leaking water it immediately changes texture.

NOTE

Before storing the motorhome, the toilet must be flushed repeatedly to remove any solids that may have built up.

NOTE

If the motorhome is in storage for six months it is a good idea to spray silicone on the toilet valve and work it back and forth. Perform this maintenance monthly (silicone will evaporate in about 30 days).

Winterization


The toilet must be winterized to avoid freeze damage. Follow the winterization in Section 6. With the Tecma toilet it is recommended to flush toilet until antifreeze is seen in the bowl. Flush an additional 5 times with the antifreeze mixture to ensure discharge line is winterized.

Drain Traps & Auto Vents

Sinks, shower and clothes washer (if equipped) drains incorporate a water trap (P-Trap) and auto vents to prevent waste water holding tank odor from entering the motorhome.

Drain Traps:

P-Traps are usually within 54" of a vent tee and must contain water to block odors. During storage water can evaporate and allow odor into motorhome. If odor is detected, run water into sinks, shower and clothes washer to fill P-traps.

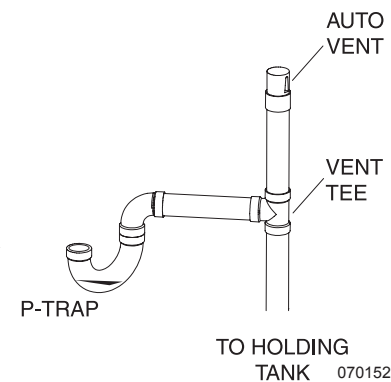

AutoVents:


The auto vent is designed to assist in the smooth flow of water in the drain without creating a vacuum. If stuck in the open position the auto vent can allow grey odors to enter the motorhome. Some auto vents can double as “clean outs” in the event the line needs to be snaked out.

COLD WEATHER CONDITIONS

Extended use in below freezing (32° F/0° C) weather will require operation of the furnace to protect interior water lines, fixtures, water storage tanks and pumps. Exposed drains may freeze quickly. If in doubt about what temperature the motorhome will tolerate, winterize with potable antifreeze. Cold temperature can adversely affect water systems below the floor level because the furnace does not provide heat to these components. A 12 Volt bay heater and thermal snap disc are located in the water service bay. The System Heat switch on the monitor panel operates the bay heater and should be turned on when ambient temperatures approach 44° F (+/-6° F) and freezing temperatures occur.

System Heat Operation:


1. Systems heat switch is turned **ON** to apply power to the snap disc thermostat.
2. When the bay temperature reaches 40° F (+/-6° F) the snap disc thermostat closes. The bay heater and systems heat Active light turns on. The heater continues to operate until

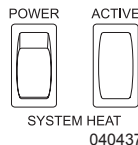

bay temperature reaches 55° F (=/-6° F). The bay heater and Active indicator light will turn **OFF**.

NOTE

The bay heater consumes about 20 Amps when operating. House batter power can be quickly consumed. It is recommended to hook shore power when using Systems Heat.

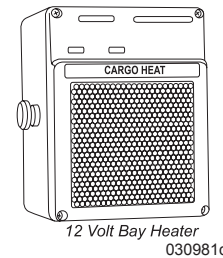**Cold Weather Storage**

If the motorhome is stored where freezing temperatures may occur, drain the domestic fresh water loop. Begin draining the fresh water tank by opening the low point drain for the fresh tank and allowing the water to drain.

NOTE

Icemakers, water filters, water purifiers and water heaters all use domestic water and should be drained and stored in accordance with the manufacturer's recommendation for winterization.

WINTERIZATION

Water, plumbing and sewer systems require winterization when the motorhome is placed in storage. The recommended method of winterizing the motorhome is using air pressure to remove liquids that may freeze and cause damage to the various systems and appliances. The lines can then be left empty or filled with an FDA approved RV antifreeze. When plumbing

lines are drained, antifreeze is not necessary, and the decision to use antifreeze is left to the motorhome operator.

NOTE


ONLY FDA approved RV antifreeze should be used to winterize the water systems in the motorhome.

Using Air Pressure


Access to an air compressor and an adapter to connect the air line regulator to the water system is necessary. Air adapters used for winterizing are available at RV supply locations. Air pressure should not exceed 40 psi. Higher pressure can damage the lines.

1. Empty and flush the holding tanks.
2. Remove water faucet filter cartridge and replace filter with diverter (See “Faucet Water Filter”). With diverter installed it creates a bypass in the water lines.
3. Drain the fresh water tank by opening the fresh water tank drain valve and the fresh water tank low point drain. Both are located in the roadside water service center.
4. Open hot and cold water low-point drains. The low point drains are located in the water service center. Leave low point drains open until the motorhome is used again.
5. Turn the water pump on and allow it to run so that all the water is cleared out of the water pump and water tank.
6. Turn the pump off and close fresh water tank drain valve.


7. Open the water heater exterior access door. Open the high temperature/pressure relief valve to vent water heater. Remove water heater drain plug to allow water heater to drain.

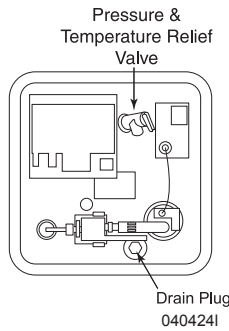

8. After the water is drained connect an air hose to the City/Fresh Water Fill connection. Position the City/Fresh Water Control handle to the “City Water” position. Turn on air compressor. Do not exceed 40 psi in the water lines and faucets.

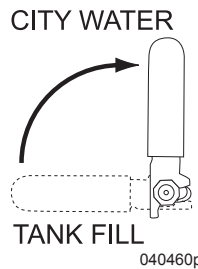

9. When no further water can be seen coming out of the drains, move water heater bypass valve to BYPASS position. Bypass valve is located on the back of the water heater.

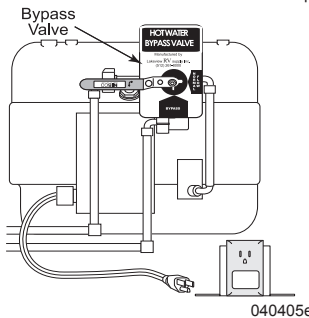

Depending on floor plan the back of the water heater can be located in one of several areas. One location is in the bedroom closet. Once inside closet, open door for access to the bypass valve. Another location is in an a curbside compartment. Open the bay door then open the small door to access the bypass valve.

10. Replace the water heater drain plug and close the pressure relief valve.
11. Open all faucets, including outside faucet and shower, one at a time, to clear water from the water supply lines. Do not forget to drain the shower.
12. Flush toilet until the water has stopped running.
13. If applicable, winterize the washer-dryer. (See “Winterizing the Washer-Dryer” in Section 4).
14. If applicable remove ice maker valve outlet line located in the outside refrigerator access compartment. Cycle ice maker several times to clear water from inlet line and valve. Reconnect ice maker valve outer line.
15. Shut off the air compressor and disconnect the air hose.
16. One gallon of FDA approved RV antifreeze is needed to protect various water drain lines in the motorhome. Pour 1 pint into both the kitchen and bath shower drains. Pour 2 pints into the bath sink drain, with some of the antifreeze going into grey tank to protect the drain valve. Open the toilet bowl valve, pour another 3½ pints into the toilet, letting the antifreeze run into the black tank to protect the valve located there. Pour the last pint of antifreeze into the toilet after the toilet bowl valve has been closed.
17. Use a soft cloth to wipe out the sinks and shower (after the antifreeze is poured in) to protect the surfaces from stains.

18. Leave the low-point drains open until the motorhome is used again.

WARNING


When draining the low water drain lines and the water heater be sure the water is not hot. Hot water from the lines can burn or injure skin.

Using Non-Toxic Antifreeze and Gravity Fill

Approximately five gallons of FDA approved antifreeze will be required to winterize the motorhome.

1. Empty and flush the holding tanks.
2. Remove water faucet filter cartridge and replace filter with diverter hose. (See “Faucet Water Filter.”) Diverter hose installed creates a bypass in the water lines.
3. Drain the fresh water tank by opening the fresh water tank drain valve, water pump shut-off valve, and water tank low point drain and allow water to drain.
4. Open low-point drain valves and allow water to drain.
5. Position the City/Fresh Water Control Handle to the “Tank Fill” position.
6. Turn the water pump on and allow it to run so that all the water is cleared out of the water pump and fresh water tank. Turn the pump off.
7. Open the water heater exterior access panel. Open the high temperature/pressure relief valve to vent water heater. Remove water heater drain plug to allow water heater to drain.

8. After the water is drained place water heater bypass valve to BYPASS position.
9. Replace the water heater drain plug and close the pressure relief valve.
10. Close the fresh water tank drain valve, water tank low point drain valve, and water pump shut-off valve.
11. Close the low point drain valves.
12. Connect a hose to the Winterization connection and place the other end into the container of antifreeze.
13. Open the winterization valve.
14. Turn ON the water pump.
15. Open all faucets, one at a time, until a small amount of antifreeze appears.
16. Close the faucets.
17. Open the shower faucets and flush toilet to allow a small amount of antifreeze to run into the holding tanks. Close shower faucets.
18. Use a soft cloth to wipe out the sinks and shower to protect surface from antifreeze stains.
19. Exterior faucet and shower should be opened and closed using the same procedures as the interior faucets.
20. If the motorhome is equipped with an ice maker, remove the valve outlet line located in the outside refrigerator access compartment. Cycle ice maker several times until antifreeze is present.
21. Turn water pump off.

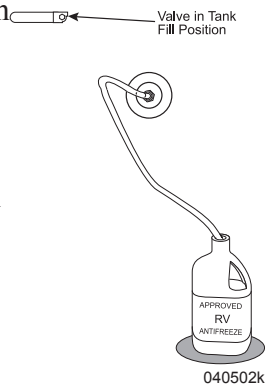

22. Disconnect the power supply line affecting water pump operation.

Dewinterization

1. Open the fresh water tank drain valve, water tank low point drain valve, and water pump shut off valve.
2. Close fresh water tank drain valve, water tank low point drain valve, and low point drains.
3. Fill the fresh water tank with water.
4. Reconnect the power supply line for the water pump.
5. Turn water pump on and operate all faucets, one at a time, until clear water is present.
6. If applicable, cycle icemaker several times until fresh water is present and reconnect valve outlet line.
7. Install new water faucet filter.
8. Fill water heater with water.

WARNING

Use only designed non-toxic RV antifreeze for potable water systems. Automotive antifreeze, if ingested, can cause blindness, deafness or death.


CAUTION

Discard the first two trays of ice from the icemaker. They may contain contaminants.

WARNING

It is recommended that a qualified RV service technician familiar with motorhomes, such as an authorized dealer, do this procedure.

WATER SERVICE CENTER

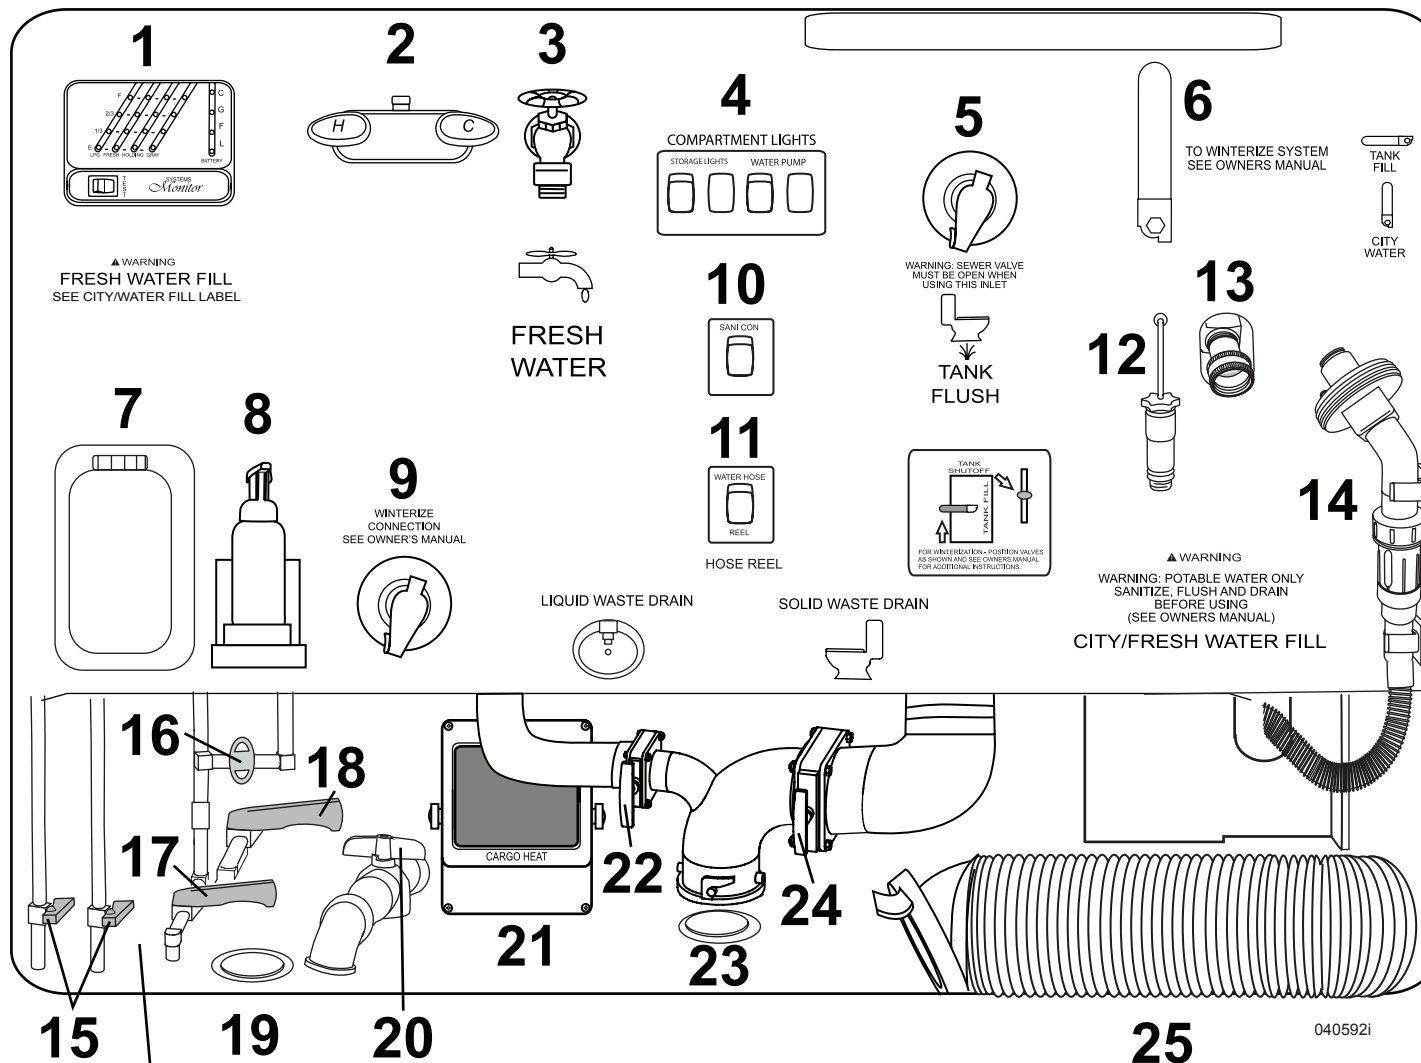

1. Tank Monitor Gauge (Optional)
2. Shower
3. Hose faucet
4. Storage Light/Water Pump Switches
5. Sewage Tank Flush Fitting
6. City/Fresh Water Fill Handle
7. Gravity Tank Fill
8. Soap Dispenser
9. Winterize Connection
10. Sani-Con Switch (Optional)
11. Water Hose Reel Switch (Optional)
12. Water Pressure Regulator
13. City/Fresh Water Fill Connection
14. Sani-Con Tank Flush System (Optional)
15. Low Point Drain Valves
16. Winterization Valve
17. Fresh Water Tank Low Point Drain Valve
18. Water Pump Shut-Off Valve
19. Access Port
20. Fresh Water Tank Drain Valve
21. 12 Volt Bay Heater
22. Grey Tank Dump Valve
23. Access Port
24. Black Tank Dump Valve
25. Sewer Hose
26. Water Pump

Typical Water System

NOTE
 Layout of water service center and location of components may vary with floor plans.

Diplomat 2007

LP-Gas Systems — Section 7

LP-GAS SYSTEMS	144
LP-GAS DETECTOR	144
Testing.....	145
Alarm.....	145
Maintenance	146
LP-GAS EMERGENCY	
PROCEDURES CHECKLIST	146
LP-GAS TANK	146
Measurement.....	146
Tank Capacity	147
Tank Filling	147
Tank Operation	147
Accessory Hookup.....	148
LP-GAS FUNDAMENTALS	148
LP-GAS REGULATOR	149
LP-GAS HOSE INSPECTION	150
LP-GAS DISTRIBUTION LINES	150
LP-GAS CONSUMPTION	151
LP-GAS SAFETY TIPS	151

LP-GAS SYSTEMS

This section contains safety information and operating instructions of the Liquefied Petroleum Gas (LP-Gas) system and related equipment in the motorhome. Some items discussed may not be applicable to all motorhomes. More detailed information with **CAUTION** or **WARNING** instructions for various equipment other than items within this section, can be found in the equipment manufacturer's manual in the owner's information box.

The LP-Gas tank mounted in the motorhome contains LP-Gas that is under high pressure. As fuel is used, the liquid vaporizes and passes through the primary tank valve to a regulator that reduces pressure. Low-pressure gas is then distributed to components through a pipe manifold system.

Component ignition problems are commonly caused by air in the manifold system or incorrect gas pressure. **DO NOT** attempt to adjust the regulator. Adjustments must be made by a dealer or an authorized service personnel with the proper equipment. In higher elevations or extreme cold weather (10° F/-12° C or lower) a shortage of LP-Gas may be experienced. If LP-Gas is going to be used in higher elevations or cold climates for a long period of time, have authorized service personnel adjust the LP-Gas regulator for these conditions.

Have the LP-Gas system tested by an authorized dealer or service center at least once a year and before every extended trip. The test will include having the system checked for leaks and the regulator pressure checked and tested for functionality. Although the manufacturer and the dealer test the system carefully for leakage, travel vibrations can loosen fittings.

WARNING

When storing portable LP-Gas tanks that are not connected to an LP-Gas system, install an approved plug in the tank outlet hole to prevent leaks. DO NOT store or transport empty LP-Gas tanks, portable tanks, gasoline or other flammable liquids in the interior area of the motorhome. Keep open flame and spark producing materials away from the LP-Gas area. Shut off all appliances and the primary LP-Gas tank valve when the motorhome is in storage. If this warning is ignored, a fire or explosion could result.

Leaks (identified by the odor of rotten eggs or sulfur) can be easily found by applying a leak detector solution on all connections. Never light a match, have an open flame or use any spark producing equipment or appliance to test for leaks. Leaks can usually be repaired by tightening the fittings. If not, shut off the primary gas valve at the tank. Hand-tighten the primary valve only. **DO NOT** use a wrench or pliers as over tightening may damage valve seats and cause leaks. If a leak is suspected, immediately see an authorized dealer or service center for repairs.

WARNING

LP-Gas is highly volatile and extremely explosive. DO NOT use matches or a flame to test for leaks. Only approved LP-Gas leak testing solution for leak detection should be used. Unapproved solutions can damage copper tubing and brass fittings. A liquid dish soap solution of 10 parts water may be used. Shake the solution until bubbles form and then apply the mixed solution to fittings and

accessory control valves. All fittings tested should be thoroughly rinsed and dried after testing. Never attempt to adjust LP-Gas regulators. Only qualified service personnel should perform maintenance or repairs to the LP-Gas system.

NOTE

It may be illegal to travel in some states and Canadian provinces with the primary LP-Gas valve open. Failure to comply with these State and Canadian province requirements may result in fines and/or pose a safety hazard.

LP-GAS DETECTOR

The LP-Gas detector is required safety equipment in RVs. **American National Standards Institute (ANSI) A119.2 - Fire & Life Safety 3-4.8 LP Gas Detectors** states “*A LP-Gas detector must be installed in any RV that contains an LP-Gas appliance and an electrical system. The LP-Gas detector must be listed as suitable for use in recreational vehicles under the requirement of UL 1484 Residential Gas Detectors, and installed according to the terms of its listing.*”



030646

LP-Gas is heavier than air and will settle to the lowest point in the motorhome. The LP-Gas detector is also sensitive to other fumes such as hair spray, of which most contain butane as the propellant. Butane, like propane, is heavier than air and will settle to the floor level. Sulfated batteries (rotten egg odor) will also sound the alarm. When this occurs, reset the detector to stop the alert sound.

About the LP-Gas Detector:

Be aware of the difference between a leak versus LP-Gas escaping from an unlit, open burner. Pure LP-Gas vapors from a leaking pipe or fitting are heavier than air and will build up heaviest concentration at the leak and float down to mix with air. LP-Gas from open burners is intentionally mixed with air to induce burning and dissipate into the air. When mixed with air, LP-Gas becomes only marginally heavier and expands outward. If a burner is left on, the area around the burner, range and adjoining counter space is combustible and can cause injury and damage when ignited. This condition will exist for an extended time period. Eventually, the LP-Gas will reach the detector's location and cause the alarm to sound.

NOTE

The LP-Gas detector indicates the presence of LP-Gas only at its sensor. Combustible levels of LP-Gas may be present in other areas. The detector is intended for detection of LP-Gas only.

The LP-Gas detector is not designed to detect other types of gas. However, some products may cause the detector to alarm, such as alcohol, liquor, kerosene, gasoline, deodorants, colognes,

propellant used in spray cans and cleaning solvents. In some cases, vapors from glue and adhesive used in the manufacturing of the motorhome may also cause the detector to alarm for several months after the date of manufacture. If it is determined that the detector has false alarmed because of the above mentioned nuisance gases, reset the detector and ventilate the motorhome with fresh outside air. Take precautions to ensure one of these cases has not masked an actual LP-Gas alarm condition.

The LP-Gas detector draws less current than one instrument panel lamp and will detect gas until the battery is drained down to 7.0 Volts. A voltage higher than 7.0 Volts is needed for the detector to operate properly. If the power source is disconnected, or if the power is otherwise interrupted, the detector will not operate.

The LP-Gas detector has a self-check circuit running at all times while the detector is powered. In the event that the circuitry fails, a failure alarm will sound and the operating indicator will cease to light.

LP-Gas Detector Operation:


Upon first application of power the LED will flash yellow for three minutes while the detector is stabilizing. At the end of the start cycle the LED will turn Green indicating full operation. If the detector senses unsafe levels of LP-Gas it will immediately sound an alarm. The LP-Gas detector operates on 12 Volt DC, with a current draw of less than 1/10th of one amp.

CAUTION

The detector will not alarm during the three minute warm up cycle.

Testing

Press the TEST switch any time during the warm up cycle or while in normal operation. The LED will turn red and an alarm will sound. Release the switch. This is the only way to test full operation of the detector.

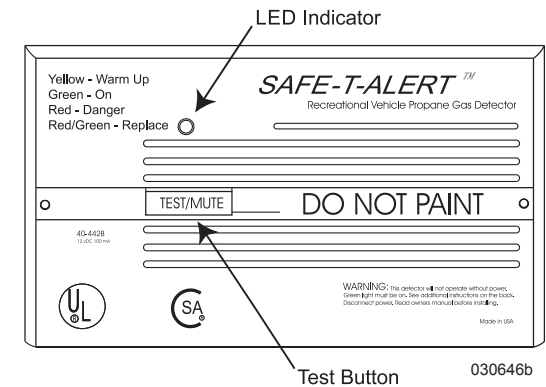

WARNING

Test the operation of this detector after the motorhome has been in storage, before each trip and at least once per week during use.


Alarm

The red LED will flash and the alarm will sound whenever dangerous levels of LP-Gas or natural gas are detected. The detector will continue to alarm until the gas clears or the **Test/Mute switch** is pressed.

Alarm Procedures:

1. Turn off all LP-Gas appliances (stove, water heater, furnace, refrigerator), extinguish all flames and smoking material. Evacuate immediately. Leave doors and windows open.

- Turn off primary valve on the LP-Gas tank.
- Determine and repair the source of the leak. If necessary, contact a qualified professional for service.

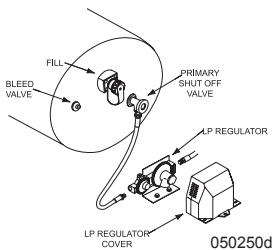

- After two minutes the detector will return to normal operation (solid green) or resound the alarm if dangerous levels of gas remain in the area.

Fault Alarm:

Should the microprocessor sense a fault in the gas detector, a fault alarm will sound twice every 15 seconds. The LED will alternately flash red to green and the **MUTE** switch will not respond to any command. The gas detector must be repaired or replaced.


Maintenance

- Vacuum the dust off the detector cover weekly (more frequently in dusty locations) using the soft brush attachment of a vacuum.
- DO NOT** spray cleaning agents or waxes directly onto the front panel. This action may damage the sensor, cause an alarm or cause a detector malfunction.

LP-GAS EMERGENCY PROCEDURES CHECKLIST

If you smell gas (a rotten egg or sulfur smell) at any time, perform the following steps immediately:

- ◆ Shut off LP-Gas appliances.
- ◆ Manually turn off the primary shut-off valve at the LP-Gas tank.

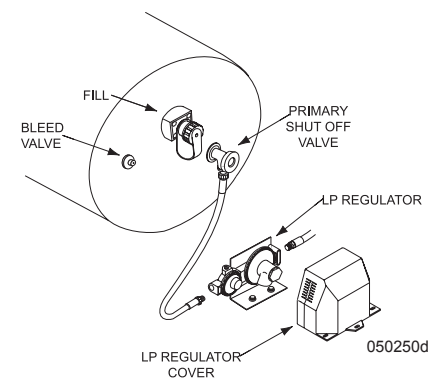

- ◆ **DO NOT** operate any electric switch. This can produce a spark and ignite the gas.
- ◆ Open windows and doors.
- ◆ Evacuate the motorhome. Stay clear of the surrounding area.
- ◆ Keep all ignition sources out of the area.
- ◆ Contact a qualified service technician to find the source and repair the gas leak.

WARNING

A fire or explosion from ignited gas or gas fumes can cause serious injury or death.

LP-GAS TANK Measurement

The motorhome is equipped with a monitor panel to aid in managing the LP-Gas tank. The monitor panel will be located in a Main Status Monitor Panel in the hallway area. A second optional monitor panel can be found in the roadside water service center. The switch marked **TEST** is a momentary switch which requires being held down along with a corresponding scale reading.

POTENTIAL SOURCES OF LP-GAS LEAKS WHEN OPERATING THE MOTORHOME

- | | |
|-------------------|---|
| ◆ Cooktop burners | ◆ Defective LP-Gas Connection |
| ◆ Oven | ◆ Defective Regulator |
| ◆ Refrigerator | ◆ Portable Propane Powered Appliances/Accessories |
| ◆ Water Heater | ◆ Furnace |

WARNING

DO NOT operate any electric switch. This can produce a spark and ignite the gas.



CAUTION

DO NOT re-enter until the problem is corrected.

Alarm Mute:

Press the **Test/Mute switch** when the detector is in alarm.

- The red LED will continue to flash and the alarm will beep every 30 seconds until the gas level has dropped to a safe level.
- The LED will flash green until the end of the Mute cycle.
- If dangerous gas levels return before the end of the Mute cycle, the alarm will beep four times and return to phase 1.

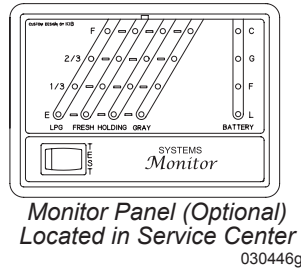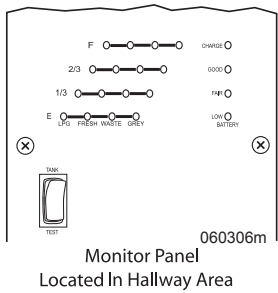

Tank Capacity

NOTE

LP-Gas Tank Capacity
*39 Gallons
<small>*Actual filled LP-Gas capacity is 80% of listing due to safety shut-off required on tank.</small>

This chart reflects product specifications available at the time of printing.

NOTE

LP-Gas tank capacity is estimated based upon calculations provided by the tank manufacturer and represents approximate capacity. The actual “usable capacity” may be greater or less than the estimated capacity. Actual full liquid capacity is 80% of full tank capacity.

Tank Filling

Woodall’s Campground and Trailer Guide, and other similar publications, list refueling stations. Many travel parks sell LP-Gas. Before filling the

LP-Gas tank, shut off pilot lights, appliances and igniters to prevent a fire or explosion. Have a trained service person fill the LP-Gas tank.

WARNING

Before entering a refueling station, turn off all pilot lights and LP-Gas operated appliances. Most LP-Gas appliances used in recreational vehicles are vented to the outside. Fuel vapors can enter an appliance vent on a motorhome that is parked close to a gasoline pump, resulting in an explosion or fire.

WARNING

Extinguish all sources of heat, sparks, flames and smoking materials within a 50’ radius during the fueling process.

The LP-Gas tank fill is located in a roadside compartment. The tank must be filled to the proper level to allow for expansion. A tank overfilled may cause the safety valve to release pressure emitting a strong rotten egg odor near the tank and/or a hissing noise may be detected.

WARNING

It is common for small amounts of LP-Gas to escape and evaporate during the fueling process. Protect bare skin. Instant freezing will occur if exposed to LP-Gas.


LP-Gas exists in both liquid and vapor form within the tank. A full tank is approximately 80% liquid. The pressure inside the tank varies with the temperature of the liquid. All tanks are required to have a safety pressure relief device to release excess pressure. When the tank is full, the gauge on the tank will only read ¾. The monitor panel is adjusted to indicate “full” at this point.

NOTE

If the tank is new and being filled for the first time, inform the service technician to purge any air from the tank prior to filling.

Tank Operation

- ◆ Manually open the primary shut-off valve located on the LP-Gas tank.
- ◆ Turn off the primary valve on the LP-Gas tank when the tank is being filled, when driving, in between trips and when in storage.
- ◆ Hand-tighten the primary valve only. **DO NOT** use a wrench or pliers. This will over-tighten the valve. The primary valve is designed to be closed by hand. Over-tightening may permanently damage the valve seat.

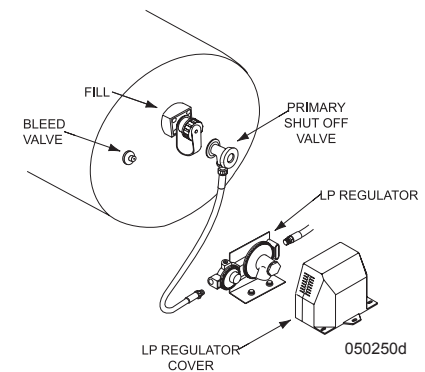

NOTE

In some States and Canadian provinces, it may be illegal to drive the motorhome while primary valve on the LP-Gas tank is open.

Accessory Hookup

Exterior Gas Line Hookup Prep:


An auxiliary remote LP-Gas hookup is for external LP-Gas accessories and is to be used for external components only. For safety, only approved LP-Gas quick disconnect fittings and flexible hose should be used to connect external accessories to the remote hookup. A LP-Gas Quick Disconnect fitting should be installed by a qualified agency as defined in the National Fire Protection Association NFPA (Fire) 54-02 code.

Depending on floor plan, the exterior gas line hookup prep can be found in various locations.

A “rule of thumb” is if the water heater is in the bedroom the exterior gas line prep is found in a curbside compartment. If the water heater is located in a curbside compartment then the exterior gas line prep is found behind the water heater. An access door needs to be opened to locate it.

NOTE

Check for leaks on all connections each time the remote hook-up is used. If a leak is detected, turn off the primary valve at the main LP-Gas tank. Contact a qualified service center for the necessary repairs.

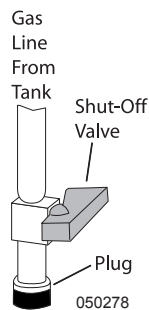


Located in the curbside compartment.

! **WARNING**

Hazardous vapors, explosive and flammable gas.
Can cause suffocation severe injury or death.

 QUICK DISCONNECT FITTING



NOTE:
COUPLING TO BE INSTALLED BY A QUALIFIED AGENCY AS DEFINED IN THE NATIONAL FUEL GAS CODE (NFPA 54)

INSTALLATION INSTRUCTIONS

- 1) INSTALL SOCKET WITH SHUT-OFF V VALVE ON THE GAS SUPPLY SIDE
- 2) INSTALL PLUG ON THE ACCESSORY SIDE
- 3) LEAK TEST USING SOAPY WATER SOLUTION

OPERATING INSTRUCTIONS

TO CONNECT:

- 1) CLOSE SHUT-OFF VALVE
- 2) PULL SOCKET SLEEVE BACK
- 3) INSERT PLUG; RELEASE SLEEVE
- 4) PUSH PLUG INTO SOCKET UNTIL SLEEVE SNAPS FORWARD
- 5) OPEN SHUT-OFF
- 6) LEAK TEST USING SOAPY WATER SOLUTION

TO DISCONNECT:

- 1) CLOSE SHUT-OFF VALVE
- 2) TO RELEASE PLUG, PULL SLEEVE BACK AWAY FROM PLUG; PULL OUT PLUG
- 3) INSERT PLUG; RELEASE SLEEVE
- 4) LEAK TEST USING SOAPY WATER SOLUTION

LP-GAS FUNDAMENTALS

# Capacity	Gallon Capacity	BTU Capacity
5	1.18	107,909
10	2.36	215,807
11	2.59	237,387
20	4.72	431,613
30	7.08	647,420
40	9.43	863,226

The above capacities allow for 20% vapor space on each cylinder.

Data taken from the National Fire Prevention Association (NFPA). Pamphlet #58-1998.

CONVERSIONS

Gallons to Liters (1 Gallon = 3.785 Liters)
 Fahrenheit to Celsius ($F^{\circ} - 32 \div 1.8 = C^{\circ}$)
 11 in. Water Column = 6 1/4 ozs. per sq. in. pressure.
 27.7 in. Water Column = 1 lb. per sq. in. pressure.

LP-Gas Statistics:

Pounds Per Gallon	4.24
Specific Gravity of Gas	1.50
Specific Gravity of Liquid	.504
Cubic Feet Gas Per Gallon of Liquid	36.38
Cubic Feet Gas Per Pound	8.66
BTUs Per Gallon	91,502
BTUs Per Pound	21,548
Dew Point in Degrees Fahrenheit	-44° F
Vapor Pressure at 0° F	31
Vapor Pressure at 70° F	127
Vapor Pressure at 100° F	196
Vapor Pressure at 110° F	230
Flash Point	842° F

Basic Facts About LP-Gas:

- LP-Gas detectors are a federal requirement on all LP-Gas equipped recreation vehicles.
- LP-Gas is a by-product produced by refining oil.
- Odor is added to LP-Gas after the refining process.
- Each liquid gallon of LP-Gas produces 91,502 BTUs (British Thermal Units).
- Temperature affects pressure of LP-Gas. Internal tank pressure can exceed 200 psi.
- Tanks or valves contain pressure relief valves. The relief valve opens at 125% above tank rating.
- LP-Gas stops vaporizing at -44° F.
- Standard LP-Gas operating pressure is 11" of Water Column or approximately 6 1/4 ounces per square inch.
- An inch of Water Column is a measurement of applied pressure to one side of a U-Tube 1/2 filled with water at sea level. The amount of pressure required to raise the water level 11", represents 11" of Water Column.

NOTE

The above information is not a complete guide for the use of LP-Gas tanks or appliances. In cold climates keep LP-Gas level above 50% to keep vaporization of LP-Gas at the highest level.

LP-GAS REGULATOR

LP-Gas is compressed into liquid form in the tank. Only the vapor is used during combustion by an appliance. As vapor is removed from the tank, the remaining liquid will vaporize to maintain pressure that is removed during consumption. This process will continue until there is no liquid remaining in the tank.

Temperature affects the vaporizing action of the liquid. If temperature of the liquid is - 44° F, the liquid remains stable with tank pressure, about 0 psi. If liquid temperature is 100° F, the liquid quickly vaporizes with tank pressure, about 200 psi. Vapor pressure must remain relatively consistent, regardless of temperature, for the appliance heat output to remain stable. Vapor pressure regulation is performed by the regulator.

The two-stage regulator reduces vapor pressure so that it is safe for use. The first stage of the regulator reduces tank pressure to a range of 10 to 13 psig (pounds per square inch gauge). The second stage further reduces pressure to a working pressure of 0.4 psig (11 Inches of Water Column or about 6¼ ounces psi.). A vent is installed to allow the internal diaphragm to move with atmospheric pressure change. It is important to keep the vent clean and clear of obstruction or corrosion. If the vent becomes clogged, pressure from LP tank may cause erratic pressure regulation. If there is any corrosion, contact a qualified LP-Gas service technician. The regulator is mounted so that the vent faces downward. If the vent becomes clogged, clean it with a toothbrush.


Under normal atmospheric conditions an LP-Gas regulator will not freeze, nor will the LP-Gas. Vapor passing through the regulator will expand and cool, condensing moisture in the gas. The moisture will freeze, build up and block the vent. The possibility of freeze up is greatly reduced with the two-stage regulator.

To Prevent Freeze Up:

- ◆ Ensure the LP-Gas tank is totally free of moisture prior to filling.
- ◆ Ensure the tank is not overfilled.
- ◆ Keep the valve closed when the tank is empty.

If A Freeze Up Occurs:

- ◆ Have an LP-Gas distributor purge the tank.
- ◆ Have the LP-Gas distributor inject methyl alcohol in the tank.

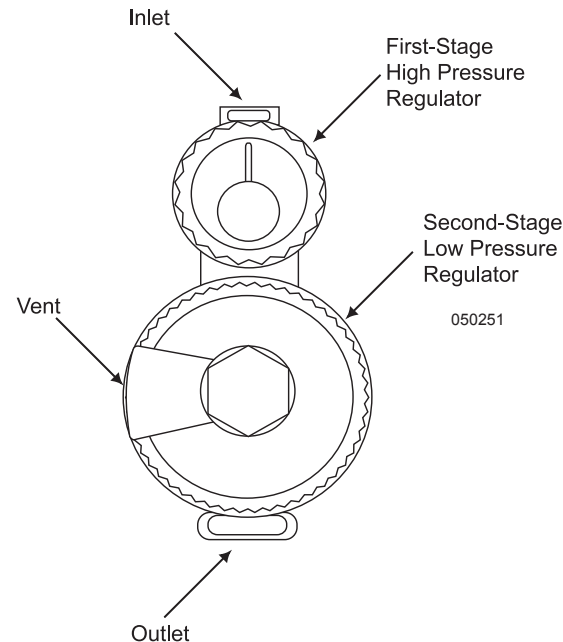

Damage to the regulator can occur when the tank is overfilled. The regulator is designed to work with vapor only. This is why the tank is filled to only 80% of its liquid capacity. The other 20% allows for vaporization of the liquid. The primary vapor valve is located in the vapor section of the tank. In an overfilled tank, liquefied petroleum can fill the regulator. Vaporizing liquid can freeze the diaphragm. High tank pressure on a frozen diaphragm can cause a rupture and result in erratic pressure regulation. This is why it is important to have the LP-Gas pressure checked for proper pressure and accurate regulation during appliance operation. Erratic pressure regulation dramatically affects refrigerator operation on LP-Gas.

WARNING


DO NOT attempt to adjust the regulator. Adjustments require special equipment. Failure to follow these instructions may result in a fire or explosion, and can cause severe personal injury or death. DO NOT operate LP-Gas appliances until the LP-Gas pressure is checked and a leak down test is performed!

Manometers:

The manometer is the best way to accurately determine LP-Gas pressure. There are two different styles of manometers: Gauge and U-tube. Gas pressure is measured in Inches of Water Column. This is the amount of pressure applied to one side of a U-shaped tube half filled with water. The amount of pressure needed to raise the column of water 11" represents 11 Inches of Water Column.

TIP

Attach the manometer gauge to the accessory hookup line to avoid loosening any interior LP-Gas line connections.

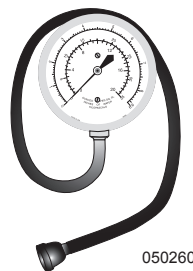

Manometer Gauge

LP-GAS HOSE INSPECTION

It is suggested by the hose manufacturer that a flexible LP-Gas supply hose undergo regular inspection. As a guideline, it is recommended that all flexible LP-Gas lines connecting the slide-out, appliances and tanks be inspected in the spring and fall of each year by a qualified RV technician.

Inspection tips:

Hose strength is controlled by the plies of reinforcement. Damage in this area cannot be tolerated. It is important that if a damaged LP-Gas hose is found, the source of the damage be determined and corrected prior to the replacement. Small cuts, nicks, or gouges that do not go completely through the cover are not cause for replacement of the hose. Inspection should be performed when the hose is not under pressure.

NOTE

Pricking of the cover in the manufacture of this type of hose is common and necessary for satisfactory hose performance. Consequently, the uniformly pricked cover should not be viewed with alarm.

Cause for hose replacement:

- ◆ Damage to the textile reinforcement or wire braid; wire braid reinforced hose, which has been kinked or flattened so as to permanently deform the wire braid in the un-pressurized state.
- ◆ Blistering or loose outer cover.

- ◆ Slippage; evidenced by the misalignment of the hose and coupling and/or the scored or exposed area where slippage has occurred.

NOTE

Only a qualified RV service technician should complete replacement of LP-Gas components.

Additional suggested maintenance:

After performing extensive testing the manufacturer of the flexible LP-Gas supply hoses has determined that the hoses be replaced every ten (10) years as the failure rate may increase after this period of time. The motorhome manufacturer recommends following this guideline to assure continued safety and dependable use.



LP-GAS DISTRIBUTION LINES

A primary manifold black steel pipe running throughout the motorhome distributes LP-Gas to secondary lines. All secondary lines leading to gas appliances are made of copper tubing with flared fittings. It is recommended that gas distribution work be performed by an authorized dealer or an authorized service technician.


INSPECTION

Inspect the rubber flexible lines twice a year for abrasions, tears, kinks or other signs of damage.

If a gas leak is suspected, have the system inspected and repaired by a qualified service technician as soon as possible.

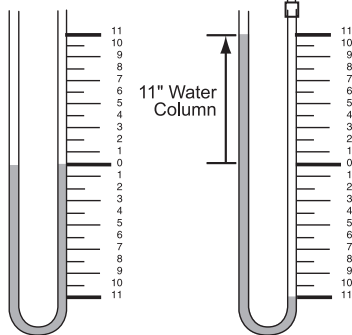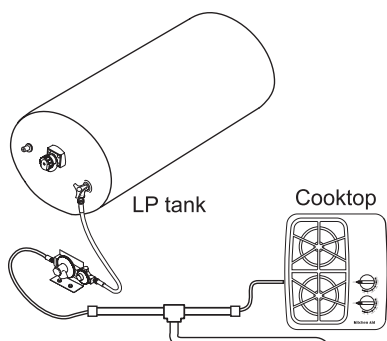

U-Tube Testing Layout

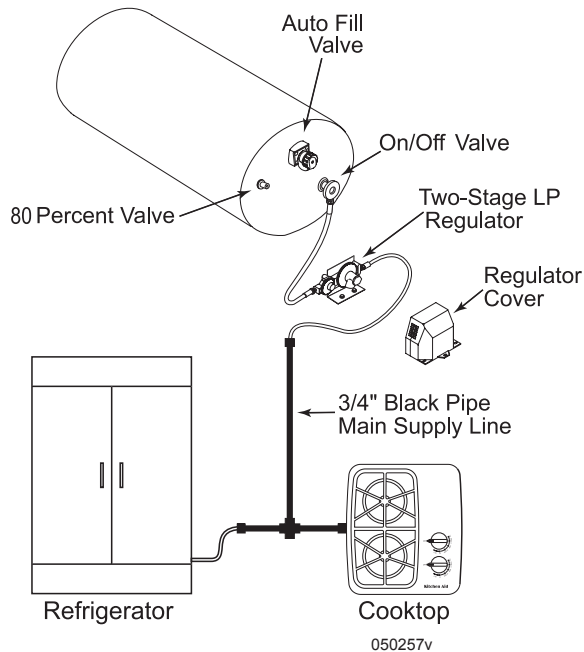

- ◆ LP-Gas appliances are rated in Input BTU (British Thermal Units). The rating is usually stamped or printed on a tag affixed to the appliance. For example: the Input rating of the appliance is 10,000 BTUs.
- ◆ One gallon of LP-Gas produces 91,502 BTUs.
- ◆ Divide the amount of BTUs of one gallon of LP-Gas (91,502) by the rating on the appliance in this example 10,000. Net continuous operation time for one gallon of LP-Gas for this appliance would be approximately 9.2 hours.

The above formula can be useful when trying to determine the approximate length of time a tank of LP-Gas will last. Generally, LP-Gas appliances do not continuously operate. An example would be the typical cycling of the refrigerator.

- ◆ Divide the total of BTUs of the LP-Gas tank by the total number of BTUs the appliances consume, equals the approximate number of hours of operation before refueling.

WARNING

LP-Gas is highly volatile and extremely explosive. Never use matches or open flame to test for leaks. Use only approved LP-Gas leak testing solution to test for leaks. Unapproved solutions can damage copper tubing and brass fittings. Never attempt to adjust the LP-Gas regulator without the use of proper equipment. Improper LP-Gas regulator adjustment will affect the performance of LP-Gas operated appliances. Incorrect flame or explosion can occur. Only qualified personnel should perform any maintenance or repair to the LP-Gas system.

LP-GAS CONSUMPTION

Each gallon of LP-Gas produces 91,502 BTUs of heat. One 27 gallon tank produces two million BTU's. Total consumption depends on the rate of usage by each appliance and the operating time. The stove typically uses the most LP-Gas.

Determine Fuel Consumption:

To determine approximately how many hours an LP-Gas appliance will operate on one gallon of LP-Gas, use the following formula:

Determining how long a tank of LP-Gas will last:

- ◆ Combine the BTU input totals of all appliances, and the approximate length of time these appliances operate per day.
- ◆ Multiply the number of liquid gallons in the LP-Gas tank by 91,502.

Typical Appliance BTU Ratings

Cooktop

Large - 9,500 BTU
Small - 6,500 BTU

Refrigerator (Norcold)

4-door - 2,200 BTU

LP-GAS SAFETY TIPS

LP-Gas is one of the safest and most reliable fuels available on the market when handled properly. LP-Gas, however, does have a great explosive "potential" if handled improperly. Danger is minimized by becoming familiar with and following a few safety precautions, and by learning how to properly operate LP-Gas appliances. Use of LP-Gas requires the responsibility to enforce extra safety measures.

The motorhome is equipped with many LP-Gas operated appliances because it is a convenient and efficient source of fuel. LP-Gas appliances must be operated and maintained in accordance with the product manufacturer's instructions.

The National Propane Gas Association (NPGA) has a special service program offered called GAS® (Gas Appliance System) Check. The GAS® Check program is aimed at educating users about the convenience of propane with safety and peace of mind. For information on the **NPGA Gas® Check program**, call **(202) 466-7200** or visit **www.npga.org**.

Maintenance and Safety Tips for the LP-Gas Refrigerator:

- ◆ Have the refrigerator venting inspected annually by an authorized service center.
- ◆ Before firing up the refrigerator for the first time each season, have the venting system checked for blockage. Insects may have built nests that will obstruct flow.
- ◆ At the first indication of incomplete combustion (yellow flame instead of a blue flame or soot is present) contact a service technician immediately. Improper combustion can cause carbon monoxide buildup, which is potentially fatal!

Maintenance and Safety Tips for the LP-Gas Range:

- ◆ Burner flame should be a blue color, indicating complete combustion. If not, have the unit serviced by a qualified technician.

- ◆ **DO NOT** cover the oven bottom with foil. Air circulation will be restricted.
- ◆ Never use LP-Gas ranges or ovens for heating purposes.
- ◆ Always have pot handles turned inward.
- ◆ Ensure children understand never to turn or play with the knobs on the front of the LP-Gas range.

Diplomat 2007

Electrical Systems - House — Section 8

HOUSE ELECTRICAL - INTRODUCTION	154	DISTRIBUTION PANEL (50 AMP)	161
BATTERY DISCONNECT	155	House 120/240 Volt AC Panel	161
House.....	155	Energy Management System	162
BATTERY CUT-OUT SWITCH	155	Circuit Breaker	163
SHORE POWER HOOK-UP	155	GFCI Breakers & Outlets	164
Manual Cord Reel.....	157	DISTRIBUTION PANEL	164
Power Cord Reel (Optional)	157	House 12 Volt DC.....	164
TRANSFER SWITCH	157	FUSES	165
GENERATOR - 120 AC DIESEL	157	BATTERIES - HOUSE	165
Pre-Start Checks.....	158	Battery Maintenance	165
Starting the Generator	158	Testing the Battery	166
Stopping the Generator.....	159	Battery Charge Time & Consumption Rate	167
Powering the Equipment.....	159	SOLAR PANEL (OPTIONAL)	168
Generator Fuel.....	159	Solar Panel.....	168
Resetting the Circuit Breaker.....	159	Charge Controller	168
Generator Exercise	160	Inspection and Maintenance	169
INVERTER	160	Solar Panel Care.....	169
Providing AC Power with Inverter.....	160	LIGHTS	169
Battery Charging with the Inverter.....	160	Interior Halogen.....	169
Auto Generator Start (Optional)	161	Directional Map Lights (Not on All Units).....	170
Factory Default Settings	161		
Battery Temperature Sensor	161		

HOUSE ELECTRICAL - INTRODUCTION

This section contains guidelines, procedures and information that assist in understanding the electrical system and the operation of various components. Refer to the OEM manuals included in the Owner's Information File box for their respective, in-depth, individual component operating instructions.

General Overview:

The motorhome can utilize various sources of electrical power: shore power connection, generator, inverter, chassis batteries and house batteries. All of these electrical power sources, while independent of each other, can be combined in a variety of ways to provide a highly efficient electrical operating system. Two types of electrical systems are used: 120/240 Volt AC and 12 Volt DC.

The motorhome 120/240 Volt AC system can be operated from three different power sources: shore power, on-board generator or inverter/charger. Shore power is the most efficient and should be used whenever possible. The generator can be used when shore power is unavailable. The inverter/charger supplies silent AC power using the house batteries of the motorhome; this power output is limited and should be used sparingly. Two different sources supply the main AC circuit breaker panel with power: the shore power cord or the on-board generator. The power source used is automatically selected by a switching device known as a transfer switch. The inverter supplies AC power to the sub-panel.

WARNING

The electrical system is engineered

and tested for safety. Circuit breakers and fuses protect the electrical circuits from overloading. When planning modifications or additions to the electrical system, ensure safety of the electrical system. Please note that any modifications may void the warranty.

WARNING

Water is electrically conductive. Do not use any electrically powered item or outlet that may be exposed to a water source. Such use can result in a serious shock causing injury or death.

The motorhome has two 12 Volt DC systems: chassis and house. These two systems, for the most part, are separate from one another. The house system does not operate engine functions; the engine system does not operate house functions. However, within the two systems there are some inner connections. **For example:** While the motorhome is driven the alternator on the engine will charge the house batteries. Likewise, while the motorhome is plugged into shore power, or the generator is running, the engine batteries are being charged. Each system will supply 12 Volt DC power to the 12 Volt DC distribution panels.

The chassis and house systems have their own sets of batteries. The chassis batteries supply 12 Volt DC power to the front distribution panel located outside in the front roadside bay. This panel contains mostly engine system circuits and wiring such as headlights, taillight, dashboard functions, gauges, etc. The house batteries supply 12 Volt DC power to the distribution panel located in the bedroom. This panel contains fuses for the house, interior lighting and appliances. Become familiar with these panels

and the items they operate.

With all the technological advancements taking place in the past several years manufacturers have now incorporated electronics into these systems. It is important to keep the 12 Volt DC systems in good working order. These systems, with their incorporated electronics, are voltage sensitive. Some items can be damaged if the DC voltage is not maintained within the designed specifications.

A majority of the lighting and appliances are designed to operate from 12 Volt DC (direct current) power. This is why the batteries play such an important role in the function of the motorhome. There are exceptions with appliances such as the microwave or television; however, indirectly they still operate from 12 Volt DC power, as they can be operated from the inverter. The chassis functions (engine, transmission, dash air, etc.) are also 12 Volt DC.

Shore Power:

The motorhome is equipped with a shore power cord to connect the motorhome to outside electrical services. Shore power service is the most efficient source of electrical power. The plug end of the shore power cord is 50 Amp 240 Volt AC. When the power cord being used is not available, electrical adapters will be required to allow a proper and safe connection to the electrical service supply.

NOTE

When using adapters, care will have to be used when operating the appliances and using the outlets to avoid overloading the shore power service.

Generator:


The generator can be selected for use when shore power is unavailable. The maximum amount of generator output power, measured in watts, is calculated at an elevation of 500' above sea level. This figure decreases slightly at higher altitude. Ambient temperature also effects total maximum output. The amount of AC electrical load applied to the generator determines fuel consumption.

Inverter/Charger:

The Inverter/Charger is an auxiliary 120 Volt AC power source that inverts 12 Volt DC house battery power to 120 Volts AC. This device has limited AC power output, measured in watts, and operates only selected appliances and outlets. The Inverter/Charger also converts 120 Volts AC power, supplied from either shore power or the generator, to 12 Volts DC power, to recharge the batteries. When dry camping, the Inverter/Charger may be used to supply power to selected outlets.

BATTERY DISCONNECT
House

Turn off the batteries any time the motorhome is going to be stored and not in use. If possible, leave the motorhome plugged into an AC source with the battery disconnect on. This helps prevent the batteries from going dead.

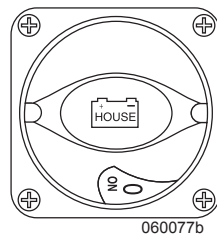


Located in curbside battery compartment.

There are small “parasitic” loads that are present. Some are federal mandate items, such as the LP detector. If the motorhome is not used, or is stored for more then 48 hours, it is recommended to turn the batteries off.

BATTERY CUT-OUT SWITCH

 The battery cut-out switch is located inside and next to the entry door. This switch controls the 12 Volt DC power to the domestic fuse panels. When the switch is activated, power is supplied to all the interior DC lighting and DC operated appliances. Some appliances require both DC and AC power to operate, such as the roof air conditioner. This switch is helpful when dry camping and can be used to conserve house battery power. Refrigerator and inverter operation are unaffected by the operation of this switch. When turned off, this switch will not stop all parasitic loads and therefore is not a substitute for the main battery disconnect switch.




CAUTION

To avoid flash damage to electrical contacts, turn off the interior lighting before activating the battery cut-off switch.

SHORE POWER HOOK-UP

The power requirement for the motorhome is 50 Amp 240 Volt AC single phase. The motorhome can be operated from 30 Amp 120 Volt AC but with limited capacity. If 50

Amp shore power service is available, connect the supplied shore power cord. If less than 50 Amp service is available, electrical adapters will be required and power consumption must be reduced to avoid tripping the shore power breaker. The shore cord is stored in the roadside compartment.

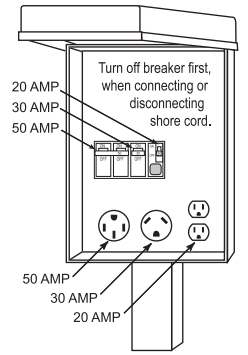

020125

CAUTION

Avoid flash damage to the electrical system contacts. Before hooking up to shore power, starting the generator or using the inverter turn off all of the appliances.

WARNING


Keep fingers away from metal contacts of the shore plug end. Avoid standing in water when making electrical connections. Serious electrical shock and personal injury can occur. To avoid the risk of an electrical shock, turn the circuit breaker off for the power supply outlet before making the shore power connection.

CAUTION


Do not remove cover from shore power supply to troubleshoot electricity to the motorhome. Serious personal injury or death may occur. If there is no power to the motorhome, inform the park manager. It is the park manager’s responsibility to fix problems with the park’s shore hook-up.

Plugging in the Shore Cord:


- ◆ Located in the roadside compartment is the shore power cord. Manually extend a sufficient amount of cable to reach the power supply.
- ◆ Check the shore power source amperage. When the shore power amperage does not match the shore cord (50 Amp), install the proper adapter on the shore cord.
- ◆ Always turn **OFF** the shore power breaker at the power supply before connecting or disconnecting the shore cord to avoid an accidental shock or flashing of electrical contacts.
- ◆ Align cord end with socket terminals. Push cord all the way into socket so the cord blades do not show.
- ◆ Turn the shore power breaker on. The transfer switch should make an audible click.

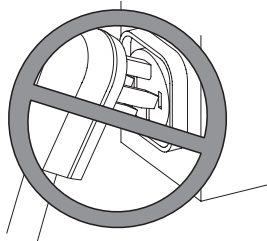

Incorrect Method

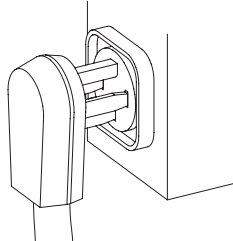Correct Method
060212

Go inside the motorhome to verify AC power is available. The AC IN light on the inverter remote panel should be lit and the microwave display should be lit.

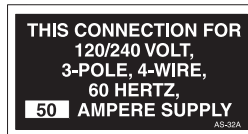

060203

Disconnecting the Shore Cord:

- ◆ Turn off all AC appliances. This will prevent accidental shock and flashing of electrical contacts when disconnecting.
- ◆ Turn off the shore power breaker.
- ◆ Grasp housing of electrical cord. Without touching electrical contacts, work cord out and away from socket.
- ◆ Straighten, clean and manually rewind the cord.
- ◆ If applicable, press the power cord switch to retract cord. Assist and guide cord during retraction.
- ◆ Stow in compartment.

When Hooked to 50 Amps:

After verifying proper voltage, wait approximately one minute for the inverter/charger to stabilize charging of the batteries before starting air conditioners or other large AC loads.

When Hooked to 30 Amps:

If 50 Amp service is not available, wait approximately one hour before operating electric appliances. Use caution when operating appliances to avoid overloading the supplied shore service breaker. Operate appliances and outlets in sequence rather than all at the same time.

Power Supply:


Different amperage supplies vary greatly in the amount of available current.

- ◆ The continuous amount of current through a breaker or fuse is only 80% of its rated capacity.

- ◆ 50 Amp 240 Volt AC shore power service consists of two power supply conductors (120 Volts AC each), a neutral and a safety ground. The 50 Amp breaker simultaneously limits each power supply conductor to no more than a short-term maximum of 50 Amps for each conductor. The 50 Amp 240 Volt service actually provides 80 continuous amps.
- ◆ Use care when hooked to anything less than 50 Amp shore services. Shore power service less than 50 Amps consists of one power supply conductor, a neutral and a safety ground; 30 Amp shore service is limited to 24 continuous Amps; 20 Amp shore service is limited to 16 continuous Amps.


Electrical Adapters:

Only UL approved adapters should be used. The most common adapter is a 50-30 Amp adapter. The type of connector adapts the 50 Amp shore cord to a 30 Amp shore power outlet. Always install the adapter to the cord prior to making the connection to the outlet.

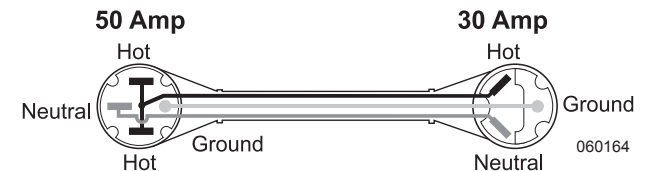

Typical 50 - 30 Amp Adapter

 Another common adapter is a 30 to 20 Amp adapter. This type of connector adapts the 30 Amp shore cord to a 20 Amp shore power outlet.



060174
Typical 30 - 20 Amp Adapter: Adapts 30 Amp Shore Cord to 20 Amp Shore Power Outlet

CAUTION


If shore power service is limited to 15 or 20 Amps, use of light duty extension cords and electrical adapters will create a voltage loss through the cord and at each electrical connection. Line voltage loss and the resistance at each electrical connection can be a hazardous combination. Damage to sensitive electronic equipment may result!

CAUTION

Avoid the risk of electrical shock or component damage by disconnecting from shore power during electrical storm activity. Use the inverter or start the generator if AC power is needed.

NOTE


Three types of shore power outlets most commonly used are shown in the illustration.

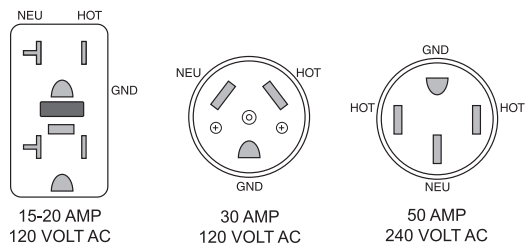

060121c

Manual Cord Reel


The cord reel will coil and stow the shore cord. Use the hand crank to retract the power cord. To extend power cord, pull out. Extend only as much power cord as required to reach the outlet. The cord should not be taut, but slightly slack.

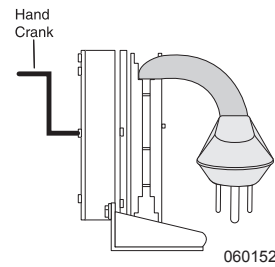

060152d
Located in rear roadside compartment

Power Cord Reel (Optional)

The Power Cord reel is a 12 Volt DC motorized assembly designed to mechanically coil and stow the shore cord. The Power Cord reel is located in the rear roadside compartment of the motorhome. The power cord reel switch is found above the power cord reel. The switch operates the 12 Volt DC motor to retract the cable.

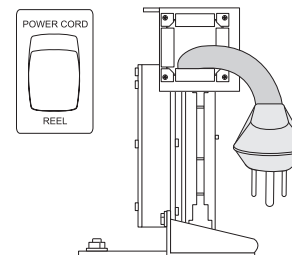


060152e

When retracting the power cord, press the switch to down position. Assist the cord, following the direction of travel. When the cord is connected to shore power, the cord should be slightly slack.

TRANSFER SWITCH

The transfer switch automatically transfers AC power from the shore power cord or generator through the transfer switch to the 120/240 Volt AC breaker panel. When using the generator as the power source, the transfer switch has a time delay built into it before transferring power to the AC breaker panel. This allows the generator time to warm up before applying an AC load. When operating the generator while hooked to shore power, the transfer switch automatically selects generator power as priority over shore power.

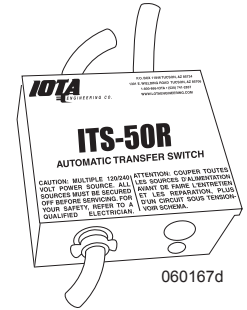


060167d
Located in rear roadside compartment

NOTE

The shore cord is NOT electrically connected to the generator. When the generator is operating, the electrical contacts of the shore cord are not electrically energized.

GENERATOR - 120 AC DIESEL

The generator is located in the front compartment of the motorhome. To open the compartment, pull and release the manual locking mechanism handle located within the license plate access. To close the generator compartment, push the door closed until the slide mechanism latches.

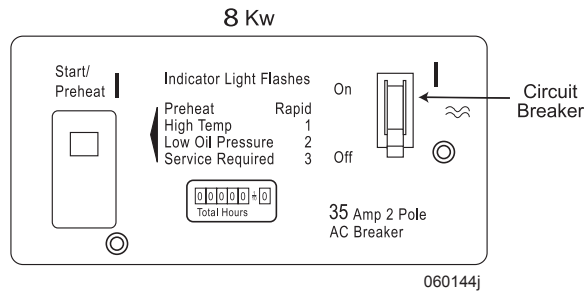

Generator can be started from these locations:


- ◆ The generator remote switch on the dash.
- ◆ The generator switch located on the generator.
- ◆ The generator switch on the hallway systems control panel.
- ◆ If applicable, the inverter control Auto Gen start feature

Pre-Start Checks

Prior to the first start of the day, perform a general inspection including oil and coolant levels. Keep a maintenance log on number of hours in operation since the last service. Perform any service or maintenance that may be due.

Before Starting the Generator:

- ◆ People and animals must be clear of hazards of electrical shock and moving parts.
- ◆ All appliances and other large AC electrical loads must be off.

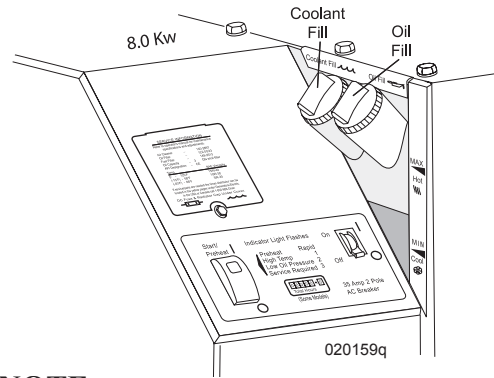

NOTE

The generator may require priming. To prime, hold control switch in the OFF position. Repeat if necessary. The diesel generator fuel pick-up tube is cut to approximately 1/4 tank so as not to run the main engine out of fuel.


8.0 Kw

SERVICE INFORMATION	
Refer to operator's manual for maintenance specifications and adjustments.	
Air Cleaner	140-2897
Oil Filter	122-0833
Fuel Filter	149-2513
Oil Capacity	3 Qts w/oil filter
API Designation	CE
Temp SAE Viscosity	
5 - 120 F	15W-40
(-13 F) - 68 F	10W-30
(-40 F) - 68 F	5W-30
If service/parts are needed the Onan distributor can be located in the yellow pages under Generators-Electric. In the USA or Canada call 1-800-888-Onan DC Fuss & Radiator Cap Under Cover.	

020159o

Starting the Generator

Push and hold the control switch in **START** position until the generator starts. Release switch. On diesel models the control switch may flash up to 15 seconds, indicating engine preheat.

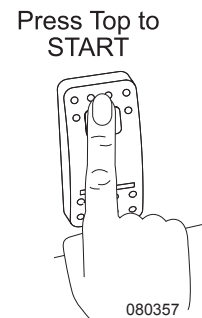

WARNING

Excessive cranking can overheat and damage the starter motor. **DO NOT** crank the engine more than 30 seconds at any one time. Wait at least two minutes before resuming. If the generator fails to start refer to the manufacturer's manual.

WARNING

When the motorhome is parked, position the dash air conditioner vent control **OFF** to prevent exhaust gases from entering the motorhome. The engine exhaust contains carbon monoxide, which is poisonous and can cause unconsciousness and/or death. Inspect the exhaust system before starting the generator. Do not block the exhaust pipe or put the motorhome where the exhaust may accumulate outside, underneath, or inside the motorhome or nearby vehicles. Operate the generator only when there is a safe dispersion of exhaust. Monitor outside conditions to ensure the exhaust continues to disperse safely.

WARNING


When parking near high grass, be sure the hot exhaust does not come into contact with the grass, it could be a fire hazard. Hot exhaust pipe or hot exhaust gases can ignite the grass.

CAUTION

Exhaust extensions add weight to the generator exhaust system. Exhaust piping or manifold damage can result, allowing carbon monoxide to accumulate or leak into the motorhome.

Stopping the Generator

Turn off the appliances and disconnect other AC loads being used. Allow the generator to run unloaded for at least one minute before shutdown to allow the engine to cool. Momentarily push the control switch to the **STOP** position. Release the switch.

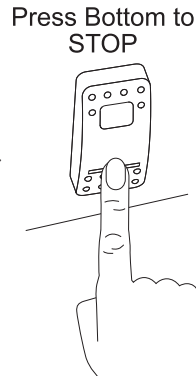

NOTE

The generator requires only a momentary stop signal.

Powering the Equipment

The AC output of the generator powers the motorhome air conditioners, the AC Inverter/Charger and all appliances and items plugged into the electrical outlets of the motorhome. The number of electrical appliances that can be operated at any given time depends upon how much power is available from the generator. If the generator is “overloaded” or a short circuit causes “over current,” either the generator will shut down or the circuit breaker will trip. If power consumption, in total, exceeds the generator power output, compensation for temperature and elevation may be necessary. Operate appliances in sequence, rather than all at the same time.

NOTE

The generator may shut down when loaded nearly to full power and an air conditioner (or other large motor load) cycles on. For a brief moment during start up an electric motor can draw up to three times the rated power. For this reason it may be necessary to operate some appliances in sequence when air conditioners or other large motor loads are on.

Compensation for temperature and elevation may also be necessary. The generator’s maximum output is rated at 500 feet above sea level. Beyond this point, the generator will lose approximately 3.5% of its rated power for every 1000 feet gained in elevation. High and low temperatures can also affect generator output. Power decreases 1% for every 10°F above 85°F. Counteract these effects by operating appliances in sequence rather than at the same time.

INFORMATION

The generator may shut down for reasons other than an overload. If a blink code appears on the control switch, refer to the manufacturer’s manual to obtain an explanation for the code.

Generator Fuel

There is always a possibility fuel may be contaminated. Diesel fuel may contain water or a microbe growth (black slime). Any contamination of fuel will greatly reduce the total output of the generator, and may cause erratic AC output.

NOTE

The motorhome manufacturer does not cover damage to the generator caused by fuel contamination, or to appliances due to erratic AC voltage.


Resetting the Circuit Breaker

If a circuit breaker trips in the main AC breaker panel, or on the generator control panel, there may be a short circuit or too much load.

NOTE

The generator will continue to run after a circuit breaker trips.

If a circuit breaker trips, disconnect or turn off as many loads as possible. To reset the circuit breaker, switch the circuit breaker to **OFF**, then switch back to **ON** to reconnect the circuit.

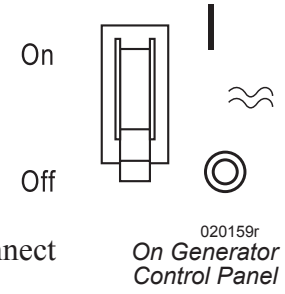

Average Fuel Consumption	Diesel 8,000 Watts (gal./hrs.)
No Load	0.13
Half Load	0.49
Full Load	1.02

If the circuit breaker immediately trips, the electrical distribution system has a short or the circuit breaker is faulty. Call a qualified electrician. If the circuit breaker does not trip, reconnect a combination of loads that will not overload the generator or cause the circuit breaker to trip again. Remember to compensate for elevation and temperature changes when reconnecting loads.

NOTE

An appliance or load may have a short if it causes a circuit breaker to trip after reconnection. DO NOT continue to reset breaker. Have the problem corrected before resuming operation.

Generator Exercise

If use of the generator is infrequent, “exercise” the generator once a month by operating it at approximately half the maximum rated output for two hours. This “exercise” will help promote better starting, more reliable operation and longer engine life. This procedure drives off moisture, lubricates the internal engine parts, replaces the old stale fuel with a fresh supply, and also promotes removing oxides from the electrical switches and contacts.

NOTE

Avoid short run periods of the generator. Run the generator set under a load for a minimum of one-half hour.


INVERTER

The inverter changes DC battery power to AC electrical power, and it also charges the batteries when hooked to shore power or operating from the generator. Use the inverter to supply AC power when shore power is not available and the generator is not going to be used as a secondary AC power source. The inverter supplies AC power to most outlets and appliances. Remember that using the inverter quickly consumes house battery power. Turn off the inverter when not in use to conserve house battery power. The remote panel is used to change the variable settings.

Providing AC Power with Inverter

To turn the inverter on:

Press the **INVERTER ON/OFF** switch at the remote panel. If the inverter doesn’t sense AC power from the generator or shore power, it will provide AC power from the motorhome batteries to most outlets and appliances. If the generator is started or the motorhome is connected to shore power, the inverter will automatically begin charging.

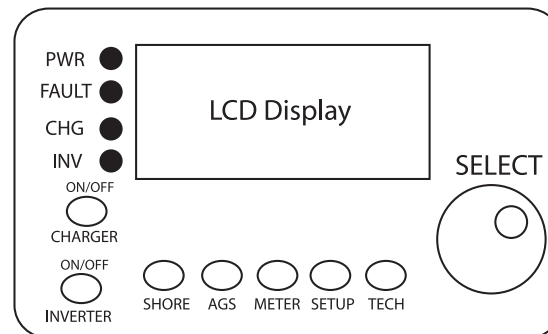

Remote Panel

Battery Charging with the Inverter

The inverter will automatically begin charging when AC power is supplied from shore service or the generator. The inverter uses a three-stage charge cycle to charge the batteries. If desired, the charger may be turned off.

To turn the charger on and off:



- ◆ Press the switch marked **CHARGER ON/OFF** on the remote panel.

Inverter three-stage charging cycle:

- ◆ **Bulk Charge Cycle:** Brings the DC voltage up high, initially between 14.2 - 14.6 Volts DC. The length of time the inverter is in Bulk Charge depends the state of charge of the batteries.
- ◆ **Absorb Cycle:** Absorb Cycle battery voltage is the same as the Bulk Charge Cycle, between 14.2 - 14.6 Volts DC. Length of the Absorb Cycle is a timed event determined by the inverter.
- ◆ **Float Charge Cycle:** Charge voltage is generally around 13.3 - 13.7 Volts DC. Approximately 80% of the charging cycle has been completed by this time.

NOTE

Refer to the OEM manual located in the Owner’s Information File Box for detailed instructions.

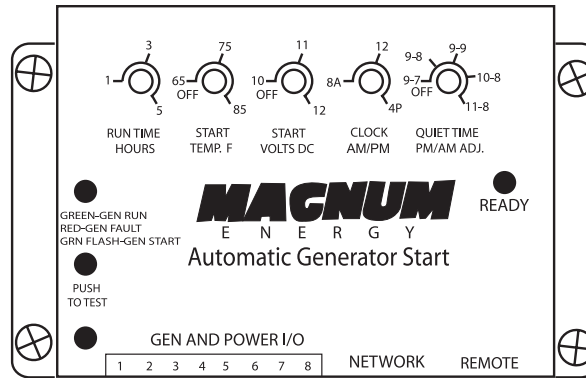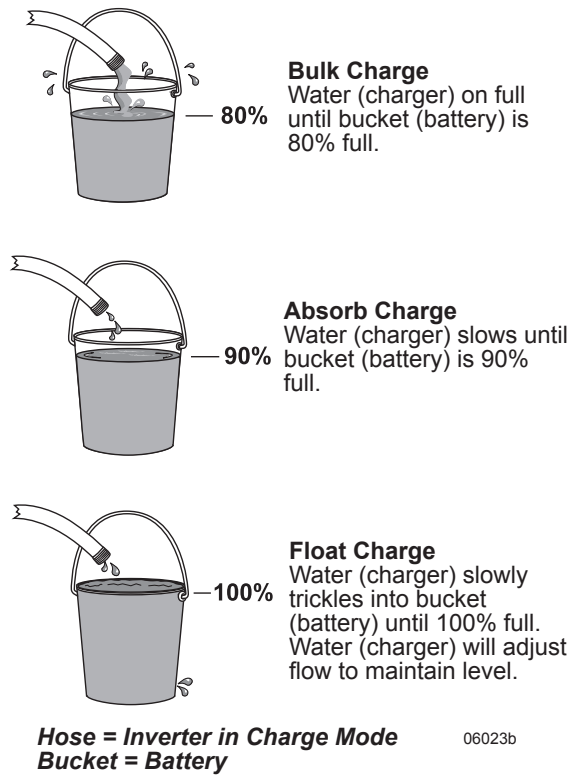

AGS Controller: Located in curbside rear compartment near inverter. 060299

To Enable AGS:

- ◆ Press the AGS button on the inverter remote panel. Use the select knob to scroll through the AGS menu options until “AutoGenSt Enabl” appears. Press the select knob to activate the AGS.

To Disable AGS:

- ◆ Press the AGS button on the inverter remote panel. Use the select knob to scroll through the AGS menu options until “AutoGenSt OFF” appears. Press the select knob to deactivate the AGS.

Factory Default Settings

NOTE

The Inverter/Charger will charge the batteries with AC power applied regardless of remote status.

Function	Default
Search	5 Watts
Low Battery Cutoff	11 Volts DC
Battery Bank	400 AH
Battery Type	Liquid Lead Acid
Charge Rate	80 %
Contrast	75 %

Battery Temperature Sensor

A **Battery Temperature Sensor (BTS)** is affixed to one of the house battery terminals to measure battery temperature and send that information to the inverter. When battery temperature rises, the inverter will decrease charge voltage to prevent boiling the batteries. When battery temperature cools, the inverter will raise charge voltage. Voltage compensation with temperature variation is necessary to keep charge voltage at optimum values. If the BTS cord is unplugged from the inverter, the inverter will use a temperature default setting of 77° F/25° C as a reference point.

**DISTRIBUTION PANEL (50 AMP)
House 120/240 Volt AC Panel**


The AC distribution panel is located in a bedroom overhead cabinet. The main AC 120/240 Volt panel received power from the transfer switch, which is powered by either shore power or the generator. The AC power is introduced into the panel by the 50 Amp MAIN breaker first, followed by power being fed into the individual branch circuit breakers. The panel label describes the breaker layout and the item, outlet or appliance to which they pertain.

Auto Generator Start (Optional)

The **Auto Gen Start (AGS)** allows the inverter remote control to start the generator when battery voltage or interior motorhome temperature reaches a preset point.

NOTE

Generator run time, battery voltage and interior temperature settings for the AGS function are selected with the AGS controller located in a cargo bay next to the inverter. Refer to the OEM manual located in the Owner’s Information File Box for detailed instructions.

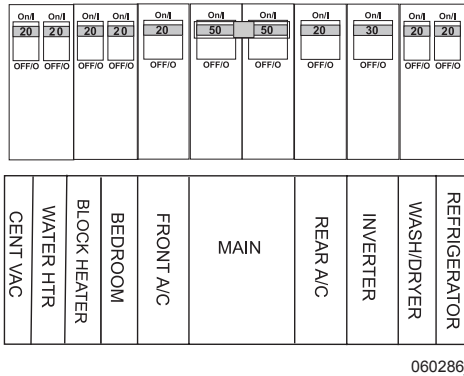**NOTE**

This panel will change with options.

WARNING

This panel contains high voltage which can cause serious injury or death. Before beginning any work or testing procedures involving the electric panels, or any of the branch circuits, be sure the motorhome is unplugged from shore power and the generator is not running. Certain testing procedures can require the AC power to be on. Only qualified personnel or personnel with electrical backgrounds should attempt any testing procedures.

Energy Management System

The Energy Management System is easily identified by the remote display panel located inside motorhome.

The 50 Amp Smart EMS consists of two elements: the display panel and the bedroom distribution panel. The distribution panel, located in the bedroom, is a completely self-contained 120/240 Volt power distribution and energy management system intended to be used

in recreational vehicles. It is housed in a sheet metal enclosure with removable front panel. It provides circuit protection for all the 120 Volt AC loads in the motorhome and a system of energy management to minimize the overloading and tripping of circuit breakers.

Circuit Breakers:

The distribution panel offers slots for eight single or dual, standard 120 Volt circuit breakers. Two of these breakers, located in the two center positions, must be a 50 Amp unit that act as a main input protection for each of the lines supplying the remainder of the branch breakers (up to 12).

Energy Management:

The 50 Amp Smart EMS automatically senses the available power to the motorhome, determining whether it is connected to a 120 Volt AC - 30 Amp shore power source, 50 Amp shore power source or generator source. Depending upon available power, the EMS controls the operation of 6 possible loads as indicated on the distribution panel. These may be any type load, but are typically heavier loads; those whose use can be “postponed until a time when current is available for use. If the available power source is 120 Volt AC - 30 Amp shore power, the EMS attempts to keep the total 120 Volt current draw to less than 30 Amps.

Operation:

If 120 Volt AC is not available at the distribution panel, L1 or L2 outputs, the system shuts itself off. This feature is intended to prevent the system from drawing current from the +12 Volt DC battery supply when

not in operation. When 120 Volt AC power is applied, the system automatically powers up and determines the nature of the power source.

If the generator is running, 120 Volt AC will be present at the distribution panel L1 and L2 inputs. In this mode the energy management feature is disabled and all control relay contacts are closed, energizing all of the controlled loads. The control module sends a signal to the display panel causing the load meter to display actual load current, the GEN SET service indicator to light and all power status indicators to light.

If 120 Volt AC is present at the distribution panel L1 and L2 inputs the system will assume that 120 Volt AC, 30 Amp shore power is available and the energy management feature will be enabled. If only 20 Amp service is available the user must select the 20 AMP service mode by momentarily pressing the 20/30 Amp select switch on the Control Panel. Initially, all relay contacts are closed and the total current is monitored. If the total current should exceed the service limit the system will turn off the first load in the shedding table, turning the loads off and calculating the amount of current that was removed, which is the value for that load. This value is placed in memory. If the current remains above the service limit, the system will turn off the next load in shedding table, again calculating the amount of current that was removed and placing this value, which is the value of that load, in memory. The system continues to turn off loads until the total current falls below the service limit or all of the six controlled loads have been shed. Through this process the system has “learned” the amount of current that each particular load draws.

This feature compensates for the differences in current draw over a range of line voltage and ambient temperature, by re-learning the load each time it is turned off or “shed.”

The 50 Amp Smart EMS now waits until the total current is lower than the service limit and enough current is available (as compared with the amount in memory for the last load shed) before turning that load back on. This assures that there is sufficient current to operate the load.

NOTE

There is a two minute minimum delay period after a load is shed before the load will be turned on again to prevent air conditioners from turning on with a head pressure.


Three Hour Averaging:

The RVIA (Recreational Vehicle Industry Association) in conjunction with the NEC (National Electrical Council) have established rules regarding the rating of electrical systems and the use of energy management systems. One of these rules requires that, if any energy management system is used, the average total load current for the system over a three hour period be limited to 80% of the service rating. For that reason the 50 Amp EMS calculates the average running current for the system and, if it exceeds 80% of the service rating, the EMS sheds loads to reduce the average current below that limit.

For example, if a system operating under 120 Volt AC, 30 Amp service has been running at the 30 Amp limit for three hours, the EMS will change its shedding threshold to 24 Amps and turn off loads until the 24 Amp limit is attained. If the user selects the 20 Amp service mode

this limit translates to 16 Amps. Because the EMS calculates a running three hour average, if the average load current drops below the limit the system restores power to loads based on their impact on the limit. If the system is in the averaging mode the decimal point at the lower right corner of the load meter display on the display panel illuminates.

Display Panel: The display panel connects to the distribution panel located in the bedroom. Six power status LED's indicate power is applied to those loads. These LED's are on when the power is applied. The load meter has a two digit display to indicate the amount of current actually being drawn by all the appliances in the motorhome.

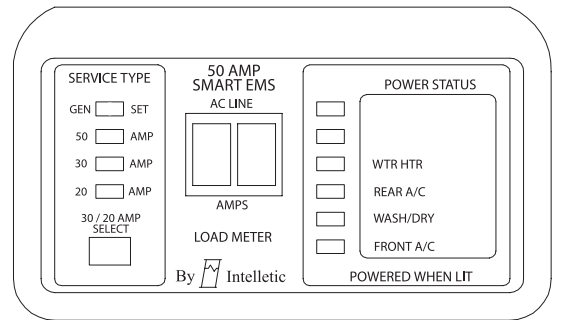

Four service type LED's indicate the source for 120/240 Volt AC power. Three of these sources are automatically detected and indicated by the EMS, namely: Gen Set Service, 50 Amp Service and 30 Amp Service.

The 20 Amp service mode is not automatically detected and the operator must manually select the 20 Amp mode when 20 Amp service is available. The service select button allows the current threshold to be set to either 30 Amps or 20 Amps, to match the incoming service.

Circuit Breaker

The internal configuration of the circuit breaker is designed to trip when excess current causes the breaker to heat up. The trip action of the circuit breaker can occur within milliseconds due to the speed at which electricity can travel. Breakers are designed to operate at a continuous load of 80% of the breaker's rated capacity.

 
For example: A breaker with a 20 Amp rating will operate a continuous 16 Amp load. This design leaves a small amount of working capacity within the breaker. When an inductive load is applied, such as when an electric motor turns on, the motor starts to spin and current consumption may momentarily exceed the rated capacity of the breaker. As the electric motor comes up to operating speed, the electric motor's current consumption will decrease. The AC current load then falls back into the breaker's rated 80% set point. This electric principle should be kept in mind when using anything other than 50 Amp shore service and using appliances with electric motors, such as air conditioners. When using outlets, care should be considered when applying loads such as electric motors, heaters, coffee makers, toasters, hair dryers or other large current consuming loads. The current rating is usually stated on most electrical items. The current rating will either be rated in amps or watts. Current ratings stated on electrical items will change slightly with voltage fluctuations. As voltage increases, current consumption decreases. As voltage decreases, current consumption increases. This may explain why in some instances items operated at borderline voltage to current tolerances may seem fine in one location but problematic in another.

NOTE

To calculate watts to amps simply divide the watt figure by the voltage of which the item operates. For example: The electrical item is rated at 1370 watts. Divide that by the operating voltage of 115 Volts AC which equals 11.913 Amps. Use this formula to calculate the amount of load and compare to the available power supply.

GFCI Breakers & Outlets

A ground fault circuit interrupter “GFCI” can be found in two different types of applications. One type is incorporated in a breaker used in 120 Volt AC breaker panels, the other is incorporated in an outlet. The GFCI, whether it is a breaker or an outlet, offer two types of protection. One type of protection is from over-current or shorts. It also provides protection for persons against hazardous ground fault currents which can result in injury or death.



Ground fault currents are currents that flow from the “HOT” or power terminal through a person to the ground. For example, touching a faulty appliance while standing on or making contact with an electrical ground such as a water fixture, bath tub or the earth. If the device has been properly installed it will offer protection against the type of shock that can result from faulty insulation, wet wiring from inside an appliance, or any device or equipment plugged in or wired to that circuit. The “ground fault” portion of the outlet or breaker uses sensitive electronics inside the outlet or breaker to detect a ground fault problem. The electronics monitor

the normal current of power, flowing to the “hot” or black wire through the load (e.g., a light bulb or appliance) and coming back on the “neutral” or white wire. If just a small amount of the current comes back on the safety ground wire the electronics will “trip” the breaker or outlet, stopping the flow of electricity. The amount of current it takes to trip the device from a ground fault varies slightly from the different outlet or breaker manufacturers (about 30 mils or less). Electrical shocks resulting from ground faults can be felt, but such a shock is considerably less than one without ground fault protection. People with heart conditions, or other conditions that make them susceptible to shock, can still be seriously injured. A GFCI outlet or breaker will not protect against shock from a normal current flow. For example, a shock from touching both metal prongs of an electrical cord or appliance while plugging it in.

WARNING

If a breaker or outlet trips continually DO NOT continue to reset breaker or outlet until the problem has been identified and corrected.

NOTE


The ground fault outlet or breaker should be tested once a month to insure it is working properly. Use the “TEST” button on the outlet or breaker. It should trip with an audible “click.” The breaker or outlet will not trip if no AC power is present to the device. If power is present and the device will not “trip,” replace it before using that circuit.

NOTE

One mil is 1/1000 of one amp.

DISTRIBUTION PANEL**House 12 Volt DC**

The 12 Volt house contains fuses (located in a bedroom overhead cabinet) that protect the electrical circuits. These fuses are the standard automotive type.

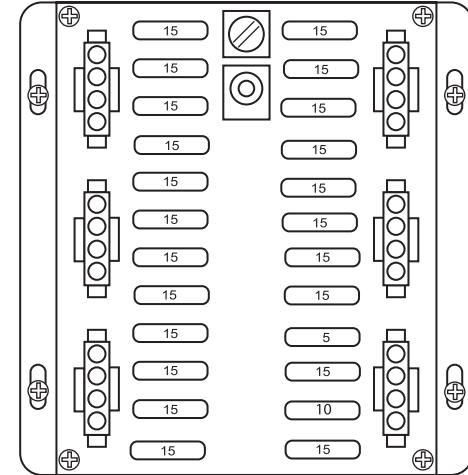

Typical arrangement of fuses.

FUSE	CIRCUIT	AMP	COLOR	GA
F1	BATH ROOM-PASS SIDE	15	BLU	14
F2	PORCH, PASS SIDE NON SLIDE	15	YEL	14
F3	BEDROOM	15	GRN	14
F4	FRONT VENTS	15	VIO	14
F5	CEILING LTS. FRONT	15	RED	14
F6	REAR CEILING FANS	15	VIO/BLK	14
F7	OPEN	15		
F8	REAR RADIO (OPT.)	15	GRY/BLK	14
F9	CENTER LTS OR DR BATH	15	ORG	14
F10	GALLEY LIGHTS	15	RED/BLK	14
F11	CENTER LTS OR REAR BATH	15	BLU/BLK	14
F12	REAR OVERHEAD (PLQ)	15	GRN/BLK	14
F13	FURNACE/ROOF A/C	15	GRY	14
F14	MONITOR PANEL/WATER PUMP	10	RED	12
F15	OPEN	15		14
F16	DASH RADIO SWITCH (OPT.)	5	GRY	16
F17	AUTO GEN START (OPT.)	15	ORG	14
F18	OPEN	15		
F19	REAR DRIVER S/O (OPT.)	15	GRN	14
F20	REAR PASS S/O PDQ.	15	BLK	14
F21	EXT RADIO (OPT.)	15	VIO/BLK	14
F22	110V WTR HTR SYSTEMS PANEL	15	BLK	14
F23	KITCHEN FURNACE (OPT.)	15	GRY/BLK	14
F24	OPEN			

#03213969

Note: Fuses may change with options.

060286k

FUSES


The 12 Volt DC fuses, located in the distribution panel, service the interior house functions. Should a fuse blow it will be evident by the broken metal strip located in the center of the fuse. Replacement fuses should be of the same amperage. If a higher rated fuse is installed it can damage the wiring. Fuse current set points follow much of the same electrical principle as the 120 Volt AC breakers. Using 12 Volt DC as the electromotive force can make it more susceptible to outside influences, such as corrosion from weathering or oxidation.

The danger from shocks with this voltage is minimized, but can still occur. A good example is when a magnetic field is generated, then collapses when the power supply is cut. The result is a discharge that can reach tens of thousands of volts for a short time period. Care should be used when working with this voltage as current values can be quite high, as in the case of battery cables.

Shorting a battery cable to ground with a battery at a reasonable state of charge can result

AMPERAGE	COLOR
1	BLACK
2	GRAY
3	VIOLET
4	PINK
5	GOLD
7.5	BROWN
10	RED
15	BLUE
20	YELLOW
25	CLEAR
30	GREEN

in a fire or serious personal injury from a burn.

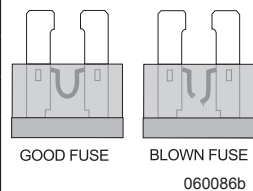

BATTERIES - HOUSE

House batteries are designed for use with 12 Volt DC operated lights, appliances and inverters.

Types of House Batteries:

- ◆ Liquid Lead Acid (LLA)

Deep Cycle Batteries:


Deep cycle batteries are a type of Liquid Lead Acid (LLA) battery. Deep cycle batteries are best suited for use with 12 Volt operated lights, appliances and inverter/converters. Deep cycle batteries are designed to have a majority of their capacity used before being recharged.

NOTE

Tap water contains minerals which can alter battery chemistry and ruin the battery. Use only distilled water when refilling the LLA battery.

Battery Slide-Out Tray (Optional):

The slide-out battery tray is secured in place by a locking mechanism at the front of the tray. To slide the tray out, push in on the two handles and pull until the tray stops. To secure the battery tray, push it back in until the tray latches.

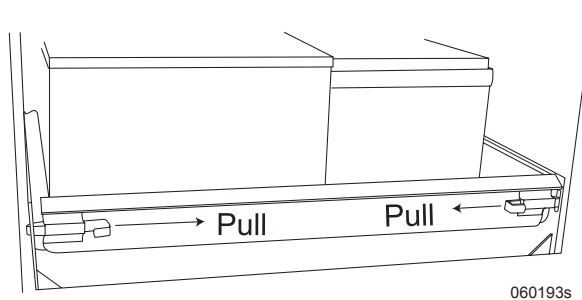

Maintenance:

The battery tray slide will occasionally require lubrication. When performing maintenance to the batteries, remove old lubricant and dirt from the battery tray slide with solvent, brake cleaner or equivalent. DO NOT allow any cleaning solution or battery acid by-products to splatter onto and damage the painted surfaces. Lubricate all moving parts of the battery tray slide with white lithium grease or a spray lubricant recommended by the manufacturer.

NOTE

Driving without the tray secured can result in damage.


CAUTION

Many types of petroleum based products or battery by-products can damage the paint finish. DO NOT allow these types of chemicals to get on the paint finish. If the chemicals splatter on to the painted surfaces, immediately rinse the surface using plenty of water and a mild automotive detergent.

Battery Maintenance

Liquid Lead Acid (LLA) battery cells should be checked at least once a month. The level should be above the top of the plates, but not overfull. The electrolyte level should be approximately 3/8" below the well to allow room for expansion while the battery is being charged. Over-filling the battery will allow the electrolyte solution to boil or gas out of the battery cap. Remember to use only distilled water to refill the battery. A battery with a low electrolyte level will rapidly boil out the water once the plates have been exposed to air.

Periodically check the batteries for corrosion and cracks. Replace vent plugs that are cracked or missing. Keep the top of the batteries clean. The accumulation of electrolyte and dirt may permit small amounts of current to flow between the terminals, which can drain the battery.

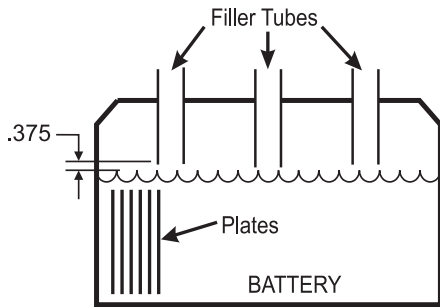

Battery State of Charge	Spec. Gravity	Voltage
100%	1.265	12.7
75%	1.225	12.4
50%	1.190	12.2
25%	1.155	12.0
Discharged	1.120	11.9 or Less

NOTE: The distilled water level in battery should be 3/8" below the filler tube. 020034

Check the battery connections for tightness and corrosion. If corrosion is found, disconnect the cables (mark cable locations) and carefully clean them with a mild solution of baking soda and water, or an aerosol product specifically designed for battery maintenance. **DO NOT** allow cleaning solution to seep into the battery and damage the electrolyte balance. Use water to rinse the top of the battery and surrounding area when done. Carefully hook the cables back to the battery. The battery cable to battery terminal connections should be metal to metal. Coat the terminals with petroleum jelly or an anti-corrosion grease.




WARNING

Liquid lead acid batteries produce hydrogen gas while being charged. This is highly explosive. DO NOT smoke around batteries and keep all sources of ignition or flames away from batteries. The hydrogen gas may explode resulting in fire, personal injury, property damage or death.

Testing the Battery

A battery can be tested and monitored several ways. The monitor panel on the hallway Systems Control Center and the optional monitor in water service center show voltage of the house batteries. Press the Test switch to check battery status.

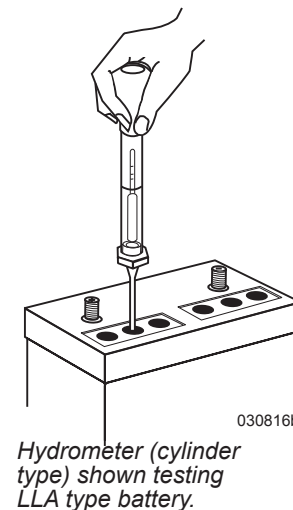

Hydrometer (cylinder type) shown testing LLA type battery.

Checking the Electrolyte Solution

The most efficient way of testing the batteries is to check the electrolyte solution. The only way to test a battery's electrolyte solution is with a hydrometer. Many styles are available, from types with cylinder graduation (shown here) to types with floating balls. Hydrometers can be purchased from most auto parts stores. The hydrometer tests the battery's electrolyte solution which is measured in specific gravity. Distilled water has a specific assigned gravity of 1,000. The hydrometer is calibrated to this mark. Pure sulfuric acid has a specific gravity reading of 1,840. The acid is 1.84 times heavier than water. The electrolyte solution is about 64% water to 36% acid (fully charged battery). Hydrometers with cylinder graduation are graphed and the exact state of specific gravity can be determined.

Temperature and recent battery activity (charging or discharging) affect the hydrometer readings. It is best to check the battery when it has been "at rest" for at least three hours, although readings taken at other times will give a "ballpark" figure. When using the hydrometer, draw the electrolyte solution up into the tube. Allow the hydrometer to attain the same temperature as the electrolyte solution. Note the reading for that cell. Complete the same test for the rest of the cells on that battery bank.

The hydrometer is calibrated at 80° F. Temperature affects the hydrometer readings. The higher the electrolyte temperature, the higher the specific gravity reading. The lower the temperature, the lower the specific gravity reading. Add or subtract four points for each 10° variance from the 80° F chart. Readings between cells should not vary more than 50 points.

If one cell in a particular battery bank being tested is at a 50% state of charge while the others are indicating a full charge, charge only that battery to see if the low cell will come up. At the same time, do not over charge the “healthy” cells.


If the low cell does not come up after charging, this battery can damage the rest of the battery bank and should be replaced. An accurate digital Volt meter + - .5% will also give an indicator of the battery’s state of charge.

Placing a load on the Battery:

Another test that can be performed is to place a specific load on the battery for a predetermined length of time equal to that particular battery’s rating. This machine is usually an adjustable carbon pile that can vary the load being applied to the batteries while monitoring voltage to see if they will perform to their specific rated capacities.

NOTE

See the chart for temperature compensation. Liquid levels should be even between the cells of the battery being tested as it will affect the accuracy of the test.

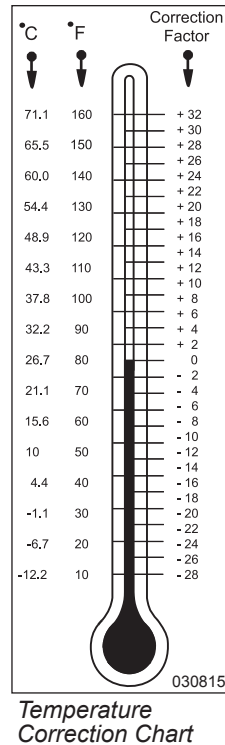

Temperature Correction Chart

WARNING

Sulfuric acid in the batteries can cause severe injury or death. Sulfuric acid can cause permanent damage to eyes, burn skin and eat holes in clothing. Always wear splash-proof safety goggles when working around the battery. If the battery electrolyte is splashed in the eyes, or on skin, immediately flush the affected area for 15 minutes with large quantities of clean water. In case of eye contact, seek immediate medical aid. Never add acid to a battery once the battery has been placed in service. Doing so may result in hazardous splattering of electrolyte.

Battery Charge Time & Consumption Rate

Calculating Run Times:

Calculating run time figures when operating 120 Volt AC electrical items with an inverter can be exponential due to battery characteristics. Flow characteristics of electrons vary with different battery types and chemical compositions. Deep cycle batteries are generally designed to slowly release a majority of their charge capacity. Deep cycle batteries are rated in amp hours (Ahrs) with the discharge occurring over an extended period of time before the battery is charged. Engine starting batteries are designed to quickly release large amounts of current for short durations, without depleting battery reserves. Commercial type batteries bridge the gap of deep cycle and engine batteries. Commercial batteries release medium amounts of current over a longer period of time but they are not designed to cycle their charge capacity.

The working range of a deep cycle battery is between 50 and 100% state of charge (SOC). Deep cycle batteries should not be cycled below 50% state of charge. Discharging a deep cycle battery below 50% state of charge shortens the life of the battery. Deep cycle batteries use an amp hour rating which is usually calculated over a 20 hour discharge interval. **For example:** A deep cycle battery with a rated capacity of 100 Ahrs. is designed to release current at the rate of 5 Amps per hour. Multiply a 5 Amp load over a 20 hour discharge period equals the rated 100 Ahr. capacity. These discharge figures are calculated with the battery starting at 100% state of charge with the battery at 80° F when the discharge cycle begins. However, increasing the discharge load applied to the battery from 5 Amps to 10 Amps on a 100 Ahr battery does not yield ten hours of discharge time. This is due to the internal reactions which occur when a battery is discharging. Actual discharge time for a 10 Amp load may be closer to eight hours of discharge time. Increasing the load applied to the battery to 20 Amps will not yield five hours discharge time but may be less than three hours. It might be understood as a point of diminishing return.

Calculating applied loads to an inverter to approximate run time from the battery amp hours available is not an equal trade up when voltage is inverted and amperage is calculated. When the inverter is used to operate an AC load it uses approximately ten times the DC current needed from the battery when inverting 12 Volts DC to operate the 120 Volt AC item. There is also a small efficiency loss of about 10% when inverting.

For example: When using the inverter to operate an AC electrical item, which has a current draw rating of 2 Amps, the inverter will use over 20 Amps DC power from the batteries.


Determining Current Consumption:

First determine the amount of current used by an AC item. **For example:** The television is rated at 200 watts at 120 Volts AC. Calculate watts to amps. Divide 200 watts by the operating voltage of 120, this equals 1.6 Amps. Multiply 1.6 Amps AC current by a factor of ten the inverter will use, this equals 16 Amps DC battery current. Add the revised 10% efficiency loss figure, this calculates to a total of 17.6 Amps DC. If the battery bank capacity is rated at 500 Ahrs., actual elapsed time to the suggested 50% state of charge would net viewing time for the television at approximately 13 hours in ideal conditions.

The run time figure will vary greatly with the actual state of charge of the battery bank when the discharge process begins. Ambient temperature, combined with other working loads, such as lights and parasitic loads applied to batteries, affect run times. Calculating the exact run time is not precise due to all the variables and equations involved; however, an approximate time figure can be obtained. Proper battery maintenance and charge cycles affect battery performance. Observe the battery condition with hydrometer and voltage readings. Use only distilled water when filling batteries. To achieve the highest quality of battery performance and longevity maintain the batteries in their proper operating range.

SOLAR PANEL (OPTIONAL)

The motorhome is equipped with a fully automatic solar-powered battery charging system. The system consists of one roof-mounted solar panel and a charge controller that is capable of charging the house batteries.

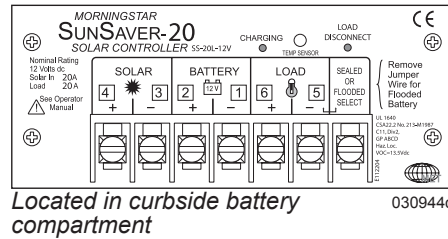

Solar Panel

The solar panel is a laser-grooved, buried-grid panel that is capable of delivering about 2-3 amps of charge per hour in full sunlight (usually between 9:30 a.m. and 2:30 p.m.).

Extensive testing has shown that the solar panel delivers enough power to offset the normal day-to-day drain on batteries caused by various parasitic electrical loads such as transmission memories, alarm systems, natural self-discharge of batteries and other like items. This means that the solar panel is only intended to cover these parasitic loads while dry camping.

WARNING

The solar panel needs to be cleaned monthly. The solar panel may need to be cleaned more frequently depending on weather conditions.

Charge Controller

The Charge Controller was built to accommodate either Flooded Lead-Acid batteries or (sealed) Absorbed Glass Matte (AGM) batteries. The Charge Controller is limited to a maximum of three-amp charge.

The faceplate of the controller is used as a heat sink for the electronics. Therefore, it will become warm to the touch especially when processing higher amperage. Automatic thermal shutdown (indicated by the Load Disconnect red LED light) will activate if the charge controller gets too warm.

The jumper wire is removed from the two right hand terminals. This sets the float voltage for the controller to Flooded Wet Cell batteries. Installing the jumper lowers float voltage for Absorbed Glass Matte batteries. This feature resets the charge parameters to work with either flooded wet cell batteries or AGM batteries. Float voltage changes from 14.2 to 13.4 Volts, which is what the AGM battery manufacturer recommends.

CAUTION

The Charge Controller panel may be warm to the touch. This is a normal function of the Charge Controller.

Green LED:

The Green LED (Charging) indicator illuminates whenever sunlight is available for battery charging. The green LED will turn off at night.

Red LED:

If the controller includes an automatic load disconnect feature, the red LED (Load Disconnect) illuminates whenever the battery charge state falls below the load disconnect setpoint. This indicates low voltage and that the charge controller has disconnected the load to protect the battery from further discharge and possible damage.

After a period of recharging the battery such that it recovers approximately 40% to 50% of its rated capacity, the load will automatically be reconnected and the red LED will turn off.

Inspection and Maintenance

The following inspections and maintenance tasks are recommended at least once per year for best charge controller performance.

1. Confirm that the correct battery type has been selected (sealed or flooded with jumper).
2. Confirm that the current levels of the PV (Photovoltaic) array and load do not exceed the ratings.
3. Tighten all terminals, inspect for loose, broken, or burnt wire connections. Be certain no loose strands of wire are touching other terminals.
4. Check that the charge controller is securely mounted in a clean environment. Inspect for dirt, insects, and corrosion.
5. Check that the air flow around the charge controller is not blocked.

6. Protect from direct sun and rain.
Confirm that water is not collecting under the cover.
7. Check that the charge controller functions and LED indicators are correct for the system conditions at that time.

NOTE

Further information and instruction can be found by contacting Morningstar Corporation at (215) 321-4457, or at www.Morningstarcorp.com

Solar Panel Care

A critical part of maintaining the solar powered battery charging system is keeping the panels clean.

The amount of power that a panel will produce is directly related to the intensity of sunlight that reaches the internal crystals. A dirty panel will allow less light to reach the crystals resulting in reduced power output. A layer of dust or road grime can reduce power output by 15 to 25%. Combining dust with leaves and debris that cover two or three of the individual cells can reduce output power by 50 to 75%.

Use of the basic maintenance tips, regular inspections and regular cleaning will assure maximum performance from the solar charging system.

To clean the panels use non-abrasive cleanser and paper towels. The surrounding environment and the amount of road dust encountered determines how frequently the panels should be cleaned. One to two times a month is preferred.

Tips to Follow:

1. The panels should be cleaned if a film or a layer of dust is on the windshield.
2. On a bright sunny day, charging current of 2 or 3 amps can be obtained during the peak charge cycle.
3. High winds blow dust and debris causing dirt build up on the panel. Frequently inspect the panel and clean as necessary.

CAUTION


To avoid arcing at battery connections when replacing batteries or performing battery cable maintenance, be sure to remove the fuse for the solar panel charge controller, or cover the solar panel, for example with a blanket, to stop the production of electricity at the source.

LIGHTS**Interior Halogen**

The bulbs inside the halogen lighting are replaceable.

To Replace a Bulb:

1. Rotate the outer trim ring counterclockwise and remove.

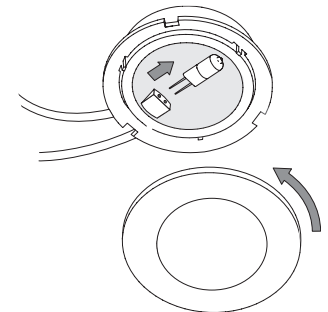

2. Carefully grasp bulb and pull from socket.
 3. Use a clean cloth or piece of tissue to grasp new bulb. **DO NOT** touch bulb directly as this can cause a “hot spot” and result in immediate bulb failure.
 4. Align contacts of bulb with terminals in fixture base. Insert bulb until contacts are firmly seated.
 5. Align tabs in trim ring with slots in fixture base. Rotate lens clockwise until trim ring locks into place.
3. Replace with a 12 Volt 12 Watt, #11391P bulb. To re-install align the two pins on the bulb with the two channels on the socket. Insert the bulb and turn clockwise.

If Map Lights Fail to Operate:

- ◆ Ensure Battery Cut-Out switch is turned on.
- ◆ Check fuse in roadside front electrical bay.

CAUTION

DO NOT touch halogen lighting while on. They can cause a burn. DO NOT touch replacement bulbs. Oil in the hands can cause a “hot-spot” to occur. If the bulb is touched, allow it to cool and clean the bulb with alcohol.


Directional Map Lights (Not on All Units)

Operation:

Turn the map light on by pressing the On/Off switch on the map light. The map light pivots left and right to allow illumination of different areas.

To Replace a Bulb:

1. Carefully push in on the bulb and turn counterclockwise.
2. Pull bulb from the socket.

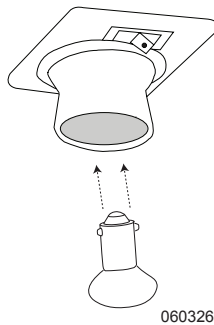

060326

Diplomat 2007

Electrical Systems - Chassis — Section 9

CHASSIS ELECTRICAL - INTRODUCTION	172
BATTERY DISCONNECT	172
Chassis	172
BATTERY - CHASSIS	172
FUSE & CIRCUITS	172
Front Distribution Panel	172
Relays	173
ALTERNATOR.....	174
Alternator Testing Procedure.....	175
STEERING COLUMN	175
Smart Wheel Operation	175
Wiper Function	176
Tilt & Telescope	176
DASH	177
Instrument Panel	177
Indicator Lights	178
CONSOLE	179
Shift Selector	179
Parking Brake.....	180
Switches.....	180
AIR CONDITIONER & HEATER CONTROLS.....	182
System Components.....	184
Troubleshooting	185
DIAGNOSTIC PLUG LOCATION.....	185
ALADDIN™ ENGINE DISPLAY.....	186
ENGINE “NO START” FLOW CHART	187

CHASSIS ELECTRICAL - INTRODUCTION


This section contains guidelines, procedures and information that will assist in understanding the chassis electrical system and the operation of various components. Refer to the OEM manuals included in the Owner's Information File box for their respective, in-depth, individual component operating instructions.

BATTERY DISCONNECT Chassis

The chassis battery disconnect is located in the curbside battery compartment. The switch controls the DC power to the front electrical bay. Most chassis and engine functions are interrupted when the battery disconnect is turned off. Some electronic components of the engine and transmission require a constant power source and will continue to draw power when the disconnect is engaged.

Turn the main battery disconnect switch off when the motorhome is going to be stored or when performing electrical maintenance. If possible, leave the motorhome plugged into an AC source with the battery disconnect switch on to help prevent the possibility of dead batteries.

If an AC source is not available, and the motorhome is going to be stored more than 48 hours, it is recommended to turn the battery disconnect switch off.

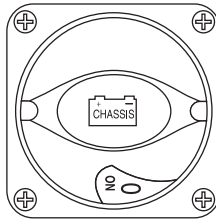

060077c

WARNING

When welding is involved for motorhome repair or modification, only qualified, experienced technicians should weld on the chassis. Improper welding procedures and materials may weaken the assembly or result in damage that is not obvious and may not cause an immediate problem or failure. Unauthorized modifications or repairs to the chassis could result in a forfeiture of warranty coverage.

DANGER

Due to the sensitive nature of the electronics on the chassis, the following precautions are required to protect electrical components in the motorhome chassis:

1. Disconnect the (+) positive and (-) negative battery connection.
2. Cover electronic control components and wiring to protect from hot sparks.
3. Disconnect the terminal plugs from the engine Electronic Control Unit, located on the curbside of the engine block.
4. Disconnect all the plugs from the transmission Electronic Control Unit located in the roadside front distribution panel.
5. **DO NOT** connect welding cables to electronic control components.
6. Attach the welding ground cable no more than two feet from the part to be welded.


BATTERY - CHASSIS

The chassis battery is designed to produce high amperage necessary to start the engine. Maintain

the chassis battery through regular electrolyte level inspections and hydrometer readings. High electrolyte consumption, or inconsistent hydrometer cell readings, may indicate a charging system problem. Perform a charging system and current draw check if the battery is exhibiting abnormal hydrometer readings.

NOTE

Replacement batteries should have the same cold cranking amp (CCA) rating.

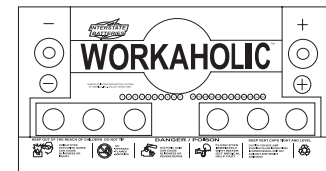

080460b

Battery with cover removed. Cut plastic to remove cover.



FUSE & CIRCUITS

Front Distribution Panel

The front electrical panel is located in the outside roadside front compartment and contains the fuses, self resetting manual reset supply circuit breakers, solenoid and relays.


The automotive fuses are located in the front electrical panel. The fuses are the standard plug-in type (ATM). When a fuse "BLOWS," the wire in middle of the plastic case will be broken. A bad or blown fuse must be replaced with a fuse of the same rating and type.

Using a fuse of a different rating will defeat the circuit protection provided by the fuse, which could result in damage to the motorhome electrical system. If a fuse has been replaced and it “BLOWS” repeatedly, that may be an indication that a fault exists or an electronic component has failed. It is recommended that the motorhome be taken to a qualified RV technician before any future use to diagnose and repair the problem. Circuits are identified on the fuse label located on the inside of the electrical door. Remove 3 wing nuts, turn cover over to view.

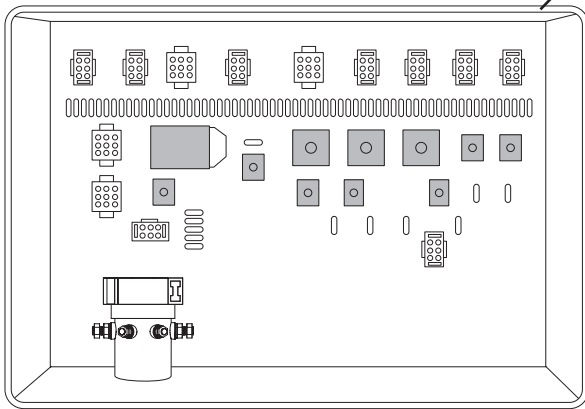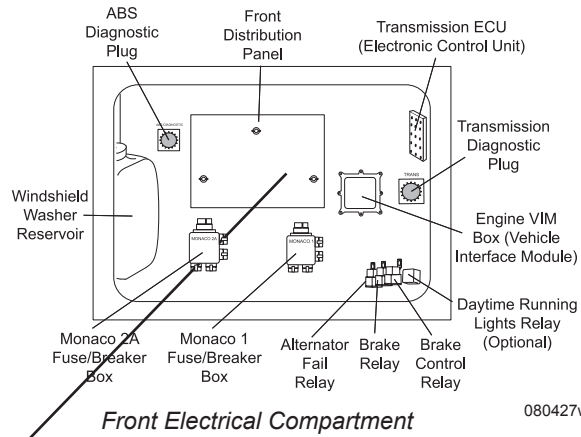


FUSE NO.	DESCRIPTION	MAX FUSE SIZE	FUSE NO.	DESCRIPTION	MAX FUSE SIZE	FUSE NO.	DESCRIPTION	MAX FUSE SIZE
C401(F) CHASSIS			C404(F) IGN#2			C406(F) SWITCHED HOUSE 12V		
4-1	STEP MOTOR	25	4-19	STEP/ISO SENSE	7.5	4-33	DRV POWER SEAT	CB-15
5-2	STEP SWITCH	7.5	5-20	LEVELING JACKS	15	5-34	PASS POWER SEAT	CB-15
6-3	SPARE	15	6-21	SPARE	3	6-35	STORAGE LIGHTS	15
3-4	SPARE	3	3-22	SLIDE-OUT RELAY	15	3-36	SERVICE LIGHT	7.5
2-5	LEVELING AIR/HYD.	15	2-23	SPARE	15	2-37	POWER CORD REEL CB-15	15
1-6	AIR LEV COMPRESSOR	15	1-24	SPARE	15	1-38	POWER HOSE REEL CB-15	15
C402(D)			C405(D) ACC#1			C407(F)		
4-7	NAVIGATION	15	2-25	REAR VISION	5	2-39	SPARE PASS OVERHEAD	20
5-8	STEP COVER	CB-15	1-26	ALADDIN ING FEED	5	1-40	BAY 12V/CPTR RECP.	15
6-9	SUNVISOR	5	4-27	ADJUSTABLE PEDALS	10	4-41	SPARE	5
3-10	CB RADIO PREP	5	7-28	OVER HEAD DEFROST	15	7-42	SPARE	15
2-11	KEYLESS	15	8-29	ACCESSORY	15	8-43	SPARE	3
1-12	ALADDIN MAIN PWR	15	9-30	AIR DUMP	15	9-44	SPARE	15
C403(D) IGN#1			C214(F) NON SWITCHED HOUSE 12V			C408(F)		
4-13	DASH A/C	20	4-66	RADIO MEMORY	10	4-47	SPARE	10
5-14	JACK/ANT WARNING	5	5-67	REFER	5	5-48	SPARE	15
6-15	TV/LEVEL LOCKOUT	7.5	6-68	AIR LEVELING	15	6-49	DRVRS S/O PWR #1	15
3-16	MIRROR HEAT	15	3-69	LP/CO DETECTOR	10	3-50	PASS S/O PWR	15
2-17	MIRROR MOTORS	2	2-70	SYST. HEAT/SNAP DISC	5	2-51	DRVRS S/O PWR #2	15
1-18	SIDE DOCKING LIGHTS	15	1-71	HOUSE READ OUT	3	1-52	PASS S/O PWR BED/LAV	15
C415(F) RELAY FUSE			C409(D)			C409(D)		
1-59	PATIO AWNING	CB-15	CIRCUIT BREAKERS			4-53		
2-60	ENTRY DOOR AWNING	CB-15	INTERIOR FUSE PANEL 80			5-54		
3-61	SIDE DOCK LT REALAY	15				6-55		
6-62	N/A	15				3-56		
5-63	N/A	15				2-57		
4-64	N/A	15				1-58		
65	MARKER LIGHTS	10				03213970 rev. B		

Front Distribution Fuse Panel 100216

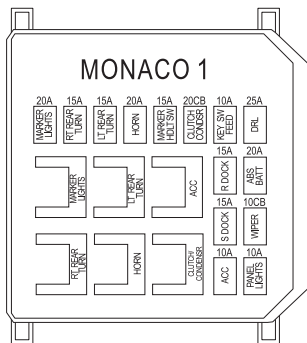


Located in Front Roadside Compartment

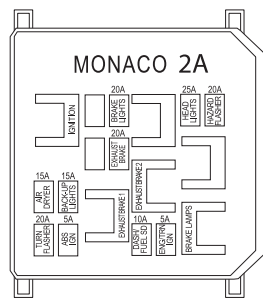

Located in Front Roadside Compartment

Relays

The motorhome uses various relays to operate electrical equipment, such as lights and motors. If a relay needs to be replaced, carefully record the location of each wire and all markings or labels.

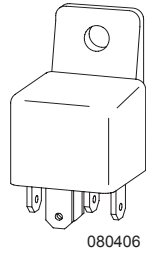


Relays can look the same in appearance, but differ in function. Note that on the side of the relay is a schematic drawing identifying if the relay is 87 or 87a relay. These current ratings differ, and if mixed, will create problems. Ensure the replacement relay is of the current rating to assure proper operation.

Another indicator to the type of relay is the post or legs. Turn the relay over and look at the post.


Note the differences between the numbered posts:

1. The 30 post is the incoming fuse and/or breaker power. Some relay applications supply power to the 30 post. Some use it for ground. The 30 post can be used many different ways.
2. The 85 post is one side of the coil, tripped different ways.
3. The 86 post is the opposite side of the coil, tripped different ways.
4. The 87 posts are not common to the 30 post until the relay is tripped. When the relay trips, both 87 posts are common to the 30 post.

5. Using an 87a relay, the 30 post and the 87a post are common. When the coil is tripped, the 87a post becomes inactive and the 30 post becomes common to the 87 post located on the outside of the relay.

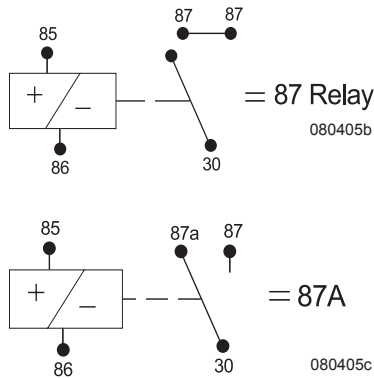

A Single Pole Single Throw relay (SPST) is an electro-magnetic switch consisting of a coil (terminals 85 & 86), one common terminal (30), one normally closed terminal (87a), and one normally open terminal (87).

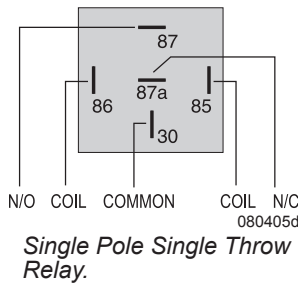


When the coil of the relay is at rest (not energized) the common terminal (30) and the normally closed terminal (87a) have continuity. When the coil is energized, the common terminal (30) and the normally open terminal (87) have continuity.

NOTE

When there is power applied to the coil, the coil sets up a magnetic field in the windings. When the power is removed, the field collapses. A momentary high


voltage discharge will occur. This is how an ignition coil works.

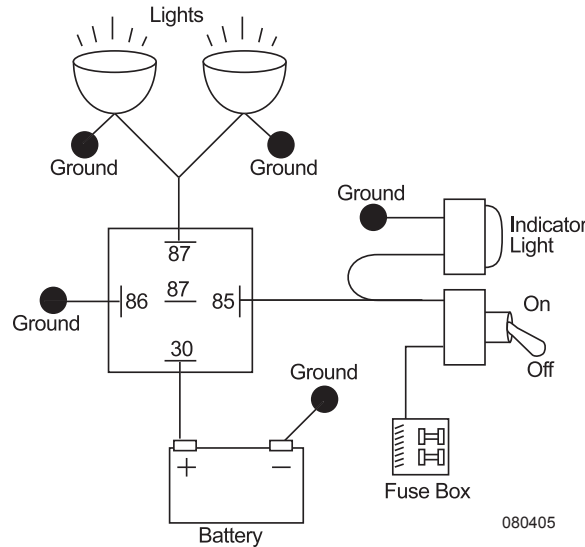

ALTERNATOR

The alternator is designed for output through the engine operating range. When traveling, keep an eye on the voltmeter in the dash area. Normal readings should be between 13 to 14.5 Volts DC. Voltage indications higher or lower indicate a potential problem with the charging system. If the alternator output drops below an acceptable level, a charge indication warning lamp will illuminate.

The alternator replaces amp hours the chassis battery used to start the engine. The amount of charge the alternator sends to the chassis battery

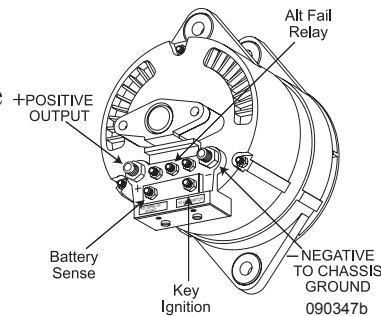

is dependent on the amount of time the engine is operated. Repeatedly starting the engine for short periods may not be enough operating time to adequately replace the amp hours the chassis battery uses to start the engine.

The function of the alternator is an electrical system voltage maintainer, not a battery charger. When the engine is operating, the alternator maintains electrical system voltage relative to a load, such as headlights and windshield wipers. When a heavy load is placed on the alternator, the operating temperature of the alternator will increase. Excess operating temperature of the alternator for extended periods of operation can lead to premature failure of the alternator.

NOTE

The alternator is not designed to charge the house batteries from a complete discharge to a full state of charge. The alternator will maintain the battery charge during travel, supplying the DC current necessary to operate running lights or other DC loads.

If the house batteries are in a low state of charge, it is recommended to charge the house batteries with the converter/inverter or an auxiliary battery charger before driving the motorhome.

CAUTION

Long-term use of the inverter to operate the microwave while in transit will damage the alternator. Use the generator to operate the microwave while in transit.

Alternator Testing Procedure

Alternator Testing:

- ◆ Check all wiring for burnt or loose electrical connections. Repair as needed.
- ◆ Check all grounds and electrical connections to confirm they are clean and tight.
 - A. Alternator ground to chassis frame.
 - B. Motor block ground to chassis frame.
 - C. Chassis battery ground to chassis frame.
 - D. Alternator positive output to isolator relay terminal.
- ◆ **Inspect** the alternator for damage.
- ◆ Check belt, pulley and fan for wear. Replace as needed.
- ◆ **DO NOT** disconnect the battery, or battery wire from the alternator with the engine running as this can damage the alternator or regulator.
- ◆ The pulley for the alternator should be torqued to 80 ft. lbs.
- ◆ Chassis battery voltage with the engine **OFF** should range from 12.2 to 12.7 Volt DC.
- ◆ Chassis battery voltage with the engine at idle should range 13.5 to 14.2 Volts DC.
- ◆ The output of the alternator range is 13.6 to 15.4 Volts DC. Connect a volt meter to the (B+) terminal of the alternator and chassis ground. Idle the engine up to 1200 RPM.
- ◆ Connect a clamp-on amp-meter, if available, to the positive battery cable to verify the battery state/rate of charge.

CAUTION

The alternator is not a battery charger. The alternator is designed to maintain proper electrical system voltage. A battery with a low state of charge, or a dead battery, may overheat and damage the alternator.

STEERING COLUMN Smart Wheel Operation

HORN:


When pressed the horn bar on the steering wheel activates the roof mounted air horn.

HEADLAMP FLASH:

When headlights are **ON**, press and hold the switch to turn them off. When the headlamps are **OFF**, press and hold the switch to turn them on.

Cruise Function:

- ◆ **CANCEL** - Signals cruise system to disengage without losing the current speed memory setting.
- ◆ **ON/OFF** - Cycles cruise system **ON** and **OFF**.
- ◆ **RES (RESUME)** - Actuates cruise resume function of engine controller.
- ◆ **SET** - Actuates cruise set function of the engine controller.

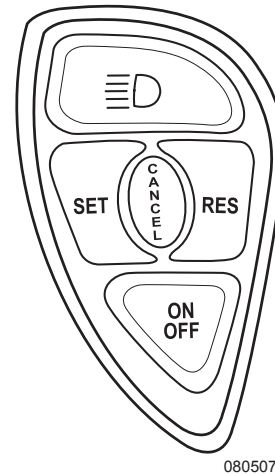

WARNING

DO NOT use cruise control in heavy traffic or on roads that are winding, slippery or unpaved. **DO NOT** shift the transmission into “N” (Neutral) with the cruise control on. High engine RPM run up will occur until the cruise control is turned off.

To use the Cummins High Idle Feature:


- ◆ With the cruise control **OFF** (see dash light), press and release the **RES** button. Each time the switch is pressed and released, the idle will rise 25 RPMs, from 500-800 RPM. To lower the idle, press and release the **SET** button. Engine idle speed will decrease in 25 RPM increments.
- ◆ With the Cruise Control **ON**, press and release the **RES** button once. Engine speed will increase to 1000 RPM. Push and hold the **RES** button, engine speed will increase to 1500 RPM. Use **CANCEL** or turn the cruise control **OFF** to return the engine to an idle.
- ◆ With the Cruise Control **ON**, press the **SET** button once. Engine will increase to 1200 RPM. Press and hold the **SET** button, engine speed will decrease to 800 RPM. Use **CANCEL** or turn the cruise control **OFF** to return the engine to idle.

NOTE

The transmission will not shift into gear if the engine RPM is at or above 900. The display will flash “6” indicating the engine RPM is excessive. Select “N” and lower the engine RPM. The brake also deactivates high idle.

Wiper Function

The windshield wipers are driven by a single motor. Any wiper function generates a Headlamp On signal from the Master Controller. To disengage automatic headlight illumination, turn off the ignition, or activate and then deactivate the dashboard headlamp switch.

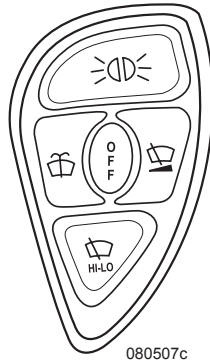

Marker Flashlamp:

Pressing Marker Flash lamp causes the taillights and all marker lights to momentarily flash.



 
OFF:

Cancels all wiper operations. Wiper function is also cancelled when the ignition is turned off.



HI-LO:

When the button is pressed, wipers activate on low speed. If the button is pressed again, the high wiper speed setting is activated. Subsequently pressing the **HI-LO** button will alternate wiper operation between low and high speed mode.



Wiper Wash:

Activates the wash pump relay while the button is pressed. If no wiper function has been selected, the low wiper will activate for a period of approximately three wiper cycles, after the switch is released. If any wiper functions have been selected, the wipers will continue to run in the selected mode after the wash button is released.



Wiper Variable:

Operation of the Wiper Variable button causes the low speed wiper function to activate for one wipe. If the button is pressed again within approximately 30 seconds, the low speed wiper function activates and repeats at an interval determined by the time between the last two operations of the button. Additional button operations will shorten the cycle. Activating other wiper modes cancels the variable mode.


Example: In light rain or misting conditions press the button once to initially clear the windshield. If the windshield requires a second clearing, press the button again, setting the timed interval between subsequent wipes required by the current conditions. To extend the wipe interval, press the intermittent button twice more, or switch the wipers off and use the same method to set the desired interval.

Tilt & Telescope

Tilt and Telescope Steering Wheel Control Lever: Located on the Steering Column.

- ◆ To tilt the steering wheel pull the lever up. Tilt the steering wheel where desired. Releasing the lever will lock the steering wheel in the new position.
- ◆ To telescope the steering wheel push and hold the lever down. Push down or pull up on the steering wheel until the wheel is in place. Release the lever and the steering wheel will lock in the new position.

For Turn Signals
Move Stick Right or Left
For Bright or Dim
Headlights Pull Up and
Release

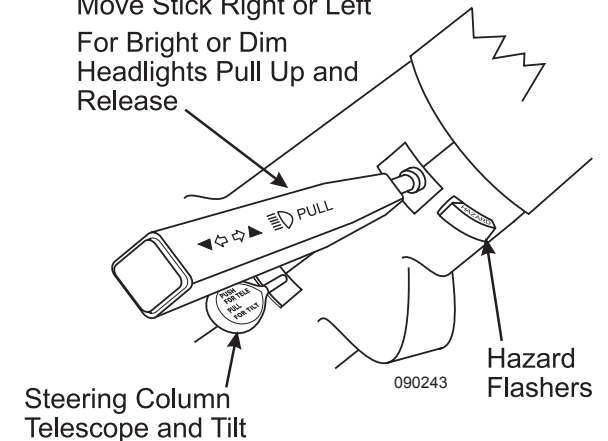

Turn Indicator and Headlight High/Low Dimmer Control Lever: Located on the Steering Column.

- ◆ Pushing the lever forward will activate the right turn indicator circuits when the ignition is on.
- ◆ Pulling the lever down will activate the left turn indicator circuits when the ignition is on.

- ◆ Pulling the lever up will select high/low beam circuits when the headlights are **ON**.

NOTE

An audible sound is heard when turn signals are activated. Applying the foot brake cancels the turn signal sound, releasing the foot brake activates the audible turn signal sound.


Hazard Flasher Button: Located on the Steering Column.

- ◆ Pull out on flasher button to turn four way flasher on.
- ◆ Push button inward to shut off flasher.

DASH

Instrument Panel

- 1. TURBO BOOST:** Boost pressure produced by engine turbocharger.
- 2. WATER TEMP:** Monitor this gauge frequently when CLIMBING HILLS, TOWING or in HIGH AMBIENT TEMPERATURES. Refer to the Aladdin™ system if the needle indicates an out of range condition. IMMEDIATE ACTION should be taken to avoid engine damage. Refer to the OEM instructions for specific temperature recommendations.
- 3. TACHOMETER:** Displays engine speed in revolutions per minute (RPM).

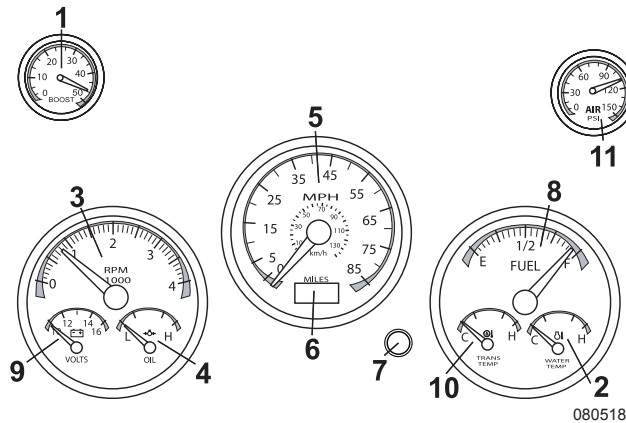

- 4. OIL PRESSURE:** Indicates oil pressure not the amount of oil in the engine. Please refer to manufacturer's instructions for specific pressure recommendations.

WARNING

If oil pressure drops and the WARNING lamp illuminates, stop the engine and check oil level.

- 5. SPEEDOMETER:** Indicates the speed of the motorhome. The gauge indicates MPH and KPH.
- 6. ODOMETER/TRIP METER:** Records the mileage driven as well as total mileage on a trip.
- 7. MILEAGE/TRIP RESET BUTTON:** Used to toggle between the odometer and trip meter. Holding the button down for two seconds resets the trip meter.

- 8. FUEL:** Fuel gauge registers approximate fuel tank level when ignition switch is in the run position.

NOTE

Fuel mileage varies with driving style and road conditions. Always average more than one tankful to obtain a more accurate figure. The diesel Generator uses fuel from main tank and will affect fuel mileage figures. Diesel generators will not operate below 1/4 tank to ensure there is enough fuel to run main engine.

- 9. VOLTMETER:** Shows the charge condition in the chassis battery. The normal voltage with the ignition switch **ON** and the engine **OFF** varies between 12.0 and 13 Volts. Battery charging voltage is about 14.0 Volts when the engine is operating under a normal load. Battery readings of less than 10.5, or more than 15 Volts, usually indicate a battery or electrical system problem.
- 10. TRANS TEMP:** Shows approximate normal operating temperature of the transmission fluid. Do not let the transmission cooler oil temperature exceed OEM specifications. If excess temperature is indicated, stop the motorhome and shift to neutral. Accelerate the engine at 1200 to 1500 RPM and allow temperature to return to normal. Refer to the Aladdin™ system when the needle indicates an out of range condition.


11. AIR PRESSURE GAUGE: Uses two needles to indicate air system pressures. One needle indicates air pressure of the front air tank. The other needle indicates air pressure of the rear air tank. The normal air system operating pressures are 105 to 120 psi. These air pressures are preset at the factory. If a problem occurs with either air system not maintaining normal operating pressure, it is an indication of a malfunction in the air system. Use caution and stop the motorhome in a safe area. Contact a qualified technician immediately.

NOTE

Layouts may vary with difference in models or options.

Indicator Lights

1. **CHECK ENGINE:** Problem with the engine.
2. **PARK BRAKE:** Parking/emergency brake is applied.
3. **ABS:** Possible fault in the ABS Brake system. Also indicates fault codes for service technicians.
4. **LEFT TURN:** Audible Turn Indicators: Left Turn indicator circuits active. Audible indicator cancels when the brake is applied.

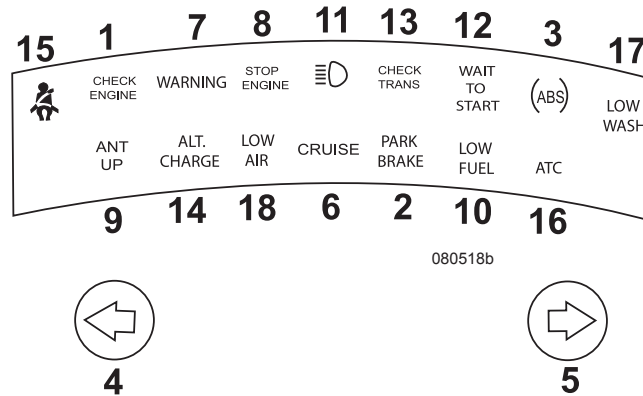

5. **RIGHT TURN:** Audible Turn Indicators: Right Turn indicator circuits active. Audible indicator cancels when the brake is applied.
6. **CRUISE:** Indicates when cruise control is activated.
7. **WARNING:** Out of range conditions exist within the engine protection circuits. Stop coach; check all fluid levels. Do not check the coolant level until it has had sufficient time to cool. The warning light may also signify that there is water in the fuel. Water is heavier than fuel and will collect in the primary filter bowl. Drain primary filter bowl using the valve on the bottom of the filter bowl.
8. **STOP ENGINE:** Alerts driver of severe out of range condition within the engine protection circuits. Pull over and stop as soon as possible. Shut-off engine to avoid engine damage.

9. **ANT UP:** TV antenna is raised. Lower antenna before moving coach.
10. **LOW FUEL:** Fuel level is becoming low.
11. **HEADLIGHT BEAM:** High beams when illuminated.
12. **WAIT TO START:** Monitors the air intake heater at engine start up. Wait for lamp to cycle off before cranking engine.
13. **CHECK TRANS:** Alerts driver of problems related to the Allison Transmission. The light should momentarily illuminate when the ignition is switched ON and extinguish to indicate the circuits are working properly. If the lamp fails to illuminate, or remains on, the transmission needs to be checked immediately. Contact the nearest Allison dealer.
14. **ALT CHARGE:** Failure within the alternator charging system.
15. **SEAT BELT WARNING:** A warning light that indicates seat belts are not fastened.

16. ATC (Automatic Traction Control):


The ATC indicator light will illuminate steady when the ignition key is turned ON. The light remains illuminated until the first brake application. The indicator flashes slowly when the ATC switch is pressed. The indicator light will flash quickly when an ATC event occurs.

17. LOW WASH: Windshield washer fluid is becoming low.**18. LOW AIR:** Air tank pressures are out of range. Check air pressure.**CONSOLE****NOTE**

Switch and component placement on panels may vary.

Shift Selector

The keypads on the shift control are **R** (Reverse), **N** (Neutral), **D** (Drive), Arrow up, Arrow down, Mode button. A digital display window shows gear selection, various transmission modes, oil level and transmission fault codes. Generation 4 keypads have a split screen displaying two number sets while in drive. The left number displays the highest forward range available. The right number is

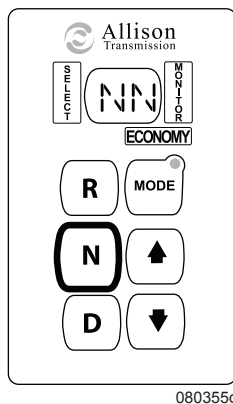

the range that the transmission is currently in. **NN** (Neutral) will appear in the display window when the ignition is turned On. This indicates the transmission is in neutral and it is safe to start. If the **NN** does not display when the ignition is turned on, there is no power to the shift selector and the transmission will not allow the engine to start. No display is an indicator of electrical problems with the engine batteries, ECU or the shift selector.

Keypad Functions:

- ◆ Select the Reverse gear by pressing **R**. **RR** will display.
- ◆ Select Neutral by pressing **N**. The area around the **N** button has a raised ridge so the driver can orient his hand to the push buttons by touch without looking at the display.
- ◆ Select Drive range by pressing **D**. The highest forward gear (6th gear) appears in the display and the transmission will shift to first gear indicated as 6 1.
- ◆ The **Up** and **Down** arrow buttons are used to select a higher (if not in “6”) or lower (if not in “1”) forward range. These buttons are not functional in Neutral or Reverse. When in Drive, one press changes the gear range selected by one. If the button is held continuously, the selected range will continue to change up or down until the button is released or until the highest/lowest possible range of gears is selected.
- ◆ The Mode button enables a secondary shift point to be selected. This is commonly referred to as Economy mode. Economy mode affects the upshift

schedule 3-4, 4-5, 5-6 and downshift schedule 6-5, 5-4, 4-3. During highway driving, with the cruise control set between 55 and 65 m.p.h., setting the transmission to economy mode will eliminate about 99% of transmission downshifts from sixth to fifth when incurring a slight incline or overpass.

DO NOT use economy mode while traveling in mountain terrain. The lower RPM shift schedule will reduce the flow of antifreeze, lubricating oil and air flow through the radiator, resulting in increased transmission and engine temperature.

CAUTION


DO NOT use the economy mode in heavy stop and go traffic or mountainous terrain. Frequent shifting will occur and increase transmission fluid temperature. Exit economy mode until road conditions improve.

NOTE

When the Auxiliary Braking device is used, the display will change to a default reading of 6-2. This setting is pre-selected at the factory and can only be altered by an authorized Allison Service center. The transmission is not actually in second gear. This is only a reference point indicating the transmission will automatically downshift to second gear when auxiliary braking device is engaged.


Power Gear Control - Hydraulic Systems:

The three-point hydraulic leveling system is operated from the control module to manually or automatically level the motorhome. The control features a multiple warning system with flashing lights and an alarm to alert of a jack down.

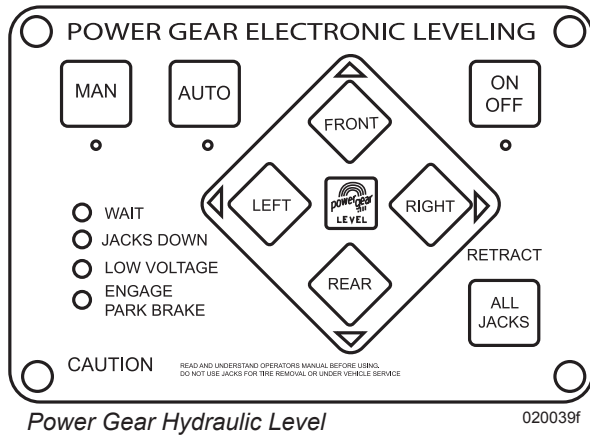

Parking Brake

The parking brake system is activated by pulling the push-pull control knob located on the driver's left console panel. When the knob is pushed, the brake is released. Prior to driving, allow time for the air compressor to build up sufficient air to shut off the air warning lamp.

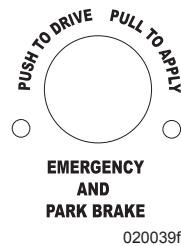


WARNING

It is possible for the parking brake to be accidentally released if the air system is charged. It is advised to fabricate a device to be placed under the parking

brake handle to prevent children or pets from releasing the brake when parked. A wooden clothespin clamped to the shaft is suitable.

Switches

There are two types of switches used, one is lighted and the other type is non-lighted. Each switch has the function it controls printed on the switch. Press the top of the switch to start the function and press the bottom to stop the function. Following is a list of switches used and their functions.

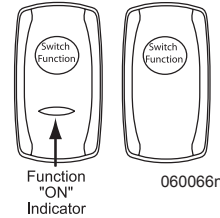

Driver's Console

ATC: The ATC system improves traction on slippery or unstable surfaces by preventing excessive wheel slip. (See Section 10 for detailed information.)

EXH BRAKE: The exhaust brake is an auxiliary braking device for slowing down the motorhome. The exhaust brake is an effective device for speed control in town and on local routes. The exhaust brake is not a substitute for service brakes. Do not neglect service brake maintenance.

BATT BOOST: The Battery Boost switch is used if the motorhome chassis battery is too low to start the engine. Use Battery Boost to momentarily "jump" the house batteries for extra battery charge.

PEDAL IN/OUT: Use the Pedal In/Out switch to adjust the brake and throttle pedal to be either closer or farther away. The switch moves the pedals inward or outward approximately three inches. If it is necessary to move the pedals inward, push the same switch in the opposite direction. When the pedal comes to the end of the traveling distance there will be a different sound in the noise of the motor. Stop by releasing the switch. Do not continue moving the pedals. Damage to the motor and/or fuse may result if operation of the switch continues after reaching the fullest extend or retract position.


AIR DUMP: Manually dumps all air out of air bags. May aid in leveling the motorhome. Releasing the air from air bags gives more range of travel for leveling. Ignition must be in accessory or run position.

NOTE

Never drive the motorhome with the air bags deflated. This may damage the motorhome.

MIRROR HEAT: Turns on the heaters in outside rear view mirrors. The mirror heaters should be used when defogging or deicing is needed. Mirror heat should not be left in the **ON** position unless continuous fogging conditions occur.

MIRROR ADJUST: To adjust the rear view mirror the small selector in the middle of the switch must be placed in the desired side. The middle position is to prevent accidental bumping of the switch and changing of the mirror position. The outside mirrors have been placed so that they can be easily adjusted with the Allen wrench. After taking delivery of the new motorhome it will be necessary to adjust both the driver and the passenger mirrors.

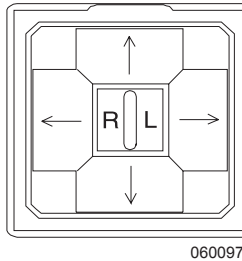

060097

Driver's Dash

ALADDIN™ CONTROLLER: The controller allows the operator to control cursor movements and select different menus and screens.

HEADLIGHT: Pull one click to operate the parking lights. Pull two clicks to operate the headlights. Rotating the headlight switch counterclockwise illuminates and dims-up the dash lights. Rotating the switch clockwise dims the dash lights.



080332

Driver Map Light:

Rotating the headlight switch counterclockwise turns on the halogen map light above the driver. Rotate clockwise to turn off. The map light is not dimmable.

Dash Switches:

Dash switches can be illuminated, and dimmed if desired, by turning the headlight switch counterclockwise. Rotating clockwise dims and turns off the switch light.

NOTE

If the headlights are left ON and the ignition turned OFF a warning bell sounds alerting the driver that headlights are still ON. ENG DIAG: Checks engine functions.

DRIVER SHADE: Operates the power sun visor located on driver's side.

PASS SHADE: Operates the power sun visor located on the passenger side.

AUX LIGHTS: Operates the fog lights with the ignition key on and the headlights in the low beam position. The fog lights will go off when the headlights are switched to high beam.

SIDE DOCK: Operates the side docking lights to increase visibility when parking.


ENG DIAG: Checks engine functions.

O'HD DEF (Optional): The Overhead Defrost switch operates a two speed fan which assists in windshield defrosting, cooling and recirculation. Middle position is off, up position is high fan and down is low fan.

GEN SET: The generator automatically initiates a preheat cycle when the switch is pressed to START. The preheat cycle is indicated by the light on the switch flashing

rapidly. Depending on ambient temperature when preheat cycle may last up to fifteen seconds.

To Start the Generator: Press and hold the switch to START. The light flashes rapidly indicating the preheat cycle. At the end of the preheat cycle the engine will crank and start. Release the switch after the generator has started and is operating smoothly.

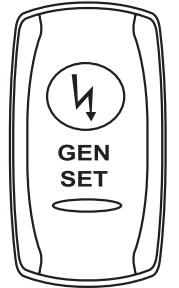

080498w

To Stop the Generator: Momentarily press the switch to STOP. It is not necessary to hold the switch until the generator has stopped.


STEP COVER: Extends and retracts the step cover.

WARNING

Stepwell cover is under air pressure. When operating the stepwell cover be sure there are not pets, shoes or other obstructions in the stepwell area. Do not operate the stepwell cover while standing in the stepwell area.

RADIO: Turns on the radio. The dash radio ON/OFF switch must be on in order for this switch to operate.

BACKUP MONITOR: Used with the back up camera and will display the rear view of the motorhome.

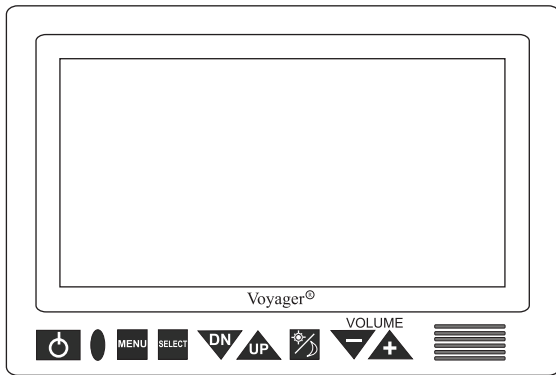

Back Up Monitor

031276b

STOR LIGHTS: Turns the bay lights ON and OFF.

DOOR AWNING: Extends and retracts door awning.

PATIO AWNING ON-OFF: Turns power on and off to the patio awning.

PATIO AWNING EXT-RET: Extends and retracts patio awning.

Passenger Console

STEP COVER: Extends and retracts the step cover.

MAP LIGHT: Turns ON and OFF map light.

PASS SHADE: Operates the power sun visor located on passenger side.

STEP LIGHT: Operates step light.

Entry Door

BATT CUT-OUT: Turns house battery power on to 12 Volt domestic fuse panels.

ENTRY STEP: Provides power to operate the entry step through magnetic switches.

PORCH LIGHT: Turns ON and OFF the outside porch light.

CEILING LIGHT: Illuminates the front ceiling light from the entry area.

AIR CONDITIONER & HEATER CONTROLS

The system is designed to only provide heating, cooling and defrost for the pilot and co-pilot area. The system is not capable of heating or cooling the entire motorhome.

Blower Control Switch:


This switch controls the four speeds of the blower motor. This is one of the most effective ways of controlling temperature. The blower will not activate until the Mode Control Switch is set to any position other than Off.

Temperature Control Switch:

Setting the switch to the red zone controls an electric water valve regulating the amount of engine coolant passing through the heating coils in the system. Rotating to the blue zone sets the cut-in/cut-out temperature of the air conditioning compressor on the engine.

Mode Control Switch:

This switch directs air flow by opening or closing damper doors. Use the Mode Control Switch to direct airflow where it is needed to maximize comfort in the cockpit area.

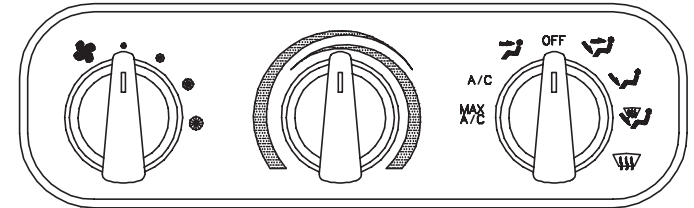

Blower Speed Control Temperature Control Mode Control Switch

080221

MAX A/C - Recirculated air is drawn from the passenger area and discharged through the dash louvers.



A/C - Fresh Air is drawn from outside into the system and discharged through the dash louvers.



VENT - Fresh air is drawn in and discharged throughout the dash louvers.



OFF - The blower motor does not operate. The fresh air inlet door will close, minimizing outside air infiltration into the motorhome.




BI-LEVEL - Fresh air is drawn in and discharged through the dash and the floor louvers.




FLOOR - Fresh air is drawn in and discharged through the floor louvers.



MIX - Fresh air is drawn in and discharged through the floor and defrost louvers. The A/C system operates to dehumidify the discharged air.

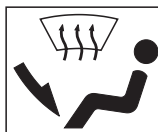

DEFROST - Fresh air is drawn in and discharged through the defrost louvers. The A/C compressor operates to dehumidify the discharged air.

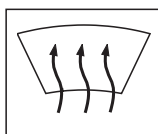

Heat and Defrost Operation:

The air conditioning compressor operates in all modes except VENT, FLOOR and OFF to dehumidify the air. Rotate the temperature control switch to set discharge air temperature.

- ◆ Set the Mode Control Switch to the desired position.
- ◆ Set the Temperature Control Switch to the red zone.

A/C Operation: The air conditioning compressor operates in all modes, except vent, floor and off, to dehumidify the air. Rotate the temperature control switch to set discharge air temperature.

- ◆ Setting the Mode Control Switch to A/C allows outside air into the system.

- ◆ Setting the Mode Control Switch to MAX A/C recirculates inside air. When maximum cold air is desired, select this position.
- ◆ Set the Temperature Control Switch to the blue zone.

NOTE

The temperature control switch must be set to the blue zone for cool air.

NOTE

Activate the A/C system monthly to keep internal components of the compressor lubricated.

Winter Use:

- ◆ De-ice the windshield using the **DEFROST** mode.
- ◆ The system will heat up faster with a slower blower speed until normal engine operating temperature is obtained.

Summer Use:

- ◆ Close all windows and vents preventing hot and humid outside air from entering the motorhome.
- ◆ **MAX A/C** and **HI** blower provides quick cool down.
- ◆ Using a lower blower speed produces cooler air.

Heater:

The heater warms the air in the dash area. Engine coolant is passed from the radiator to an electric water valve. The water valve, when open, will allow the coolant to flow through the heater core. The heater core is tubing and fins. Air is drawn into the system by a blower motor

through the outside recirculation door opening. Air is blown through the A/C evaporator core and then through the heater core. Coolant flows through the heater core when the temperature control is in the WARM position. Coolant flow bypasses the heater core when the temperature is in the COOL position. In either position air flow is felt at the discharge vents.

Operating Tips and Hints:

- ◆ Air intake and discharge temperatures are greatly effected by ambient temperature and relative humidity.
- ◆ A large amount of cooling capacity is used to dehumidify air as well as cool it. After three to five minutes of A/C compressor operation, the discharged air temperature should be about 30° F cooler than the fresh or recirculated air entering the A/C system.
- ◆ The air system on the motorhome must have adequate pressure to operate the vacuum generator or damper doors will not function.
- ◆ At the beginning of the day, activate the compressor with the engine at idle. This will avoid sudden high speed activation resulting in damage from lack of internal compressor lubrication.
- ◆ The dash A/C and heater system should be used monthly to keep the compressor lubricated.

Electric Water Valve:

The water valve controls the water flow to the heater core. A control module compares the output voltage from the thermostat to the feedback for the stepper motor of the water valve. The control module then drives the motor to within one-half volt of the control thermostat voltage.

Functional Test:

- ◆ Start and operate the engine until the water reaches normal operating temperature.
- ◆ Set the HVAC temperature control to the full hot position.
- ◆ The discharge air outlets should have hot air.
- ◆ Rotate the temperature control to full cold position.
- ◆ Allow 10 minutes for the temperature to stabilize.
- ◆ The discharge air outlets should have cold air.

System Components

Compressor - The compressor is belt driven from the engine through the compressor and electronic clutch pulley. The compressor will pump freon from a low-pressure gas into a high-pressure, high-temperature gas. This is the start of the refrigeration process.

Condenser - The condenser is made of coils and fins which provide rapid transfer of heat from the refrigerant as external air passes over the coils. The high-pressure gas is changed to a high-pressure liquid.

Condenser Fan - A steady flow of cooling air is maintained across the condenser during system operations.

Receiver-Drier - Freon leaves the condenser, enters the receiver-drier and is stored until needed. The drier filters out moisture in the system. It only takes one drop of moisture to cause a malfunction in the cooling unit.


Expansion Valve - The expansion valve suppresses the refrigerant into the evaporator according to the cooling requirements. The pressure is reduced in the restrictive effort of the expansion valve. A part of the valve is the capillary tube assembly. The capillary tube is the sensing bulb at the outlet of the evaporator.

Evaporator - A tube core and fins are used in the evaporator similar to the condenser. Air is blown through the fins to allow the evaporator to cool and reduce pressure.

Blower and Motor - The evaporator has a fan called the blower. The blower will draw air from the cab area and force the air over the evaporator coils and fins. This forced air will ensure continuous vaporizing of the R134a.

Relays and Switches - Both electronic and vacuum switches are used in the control and operations of the system.

Vacuum Generator - The vacuum generator is important to the operation of the dash heating and A/C systems. This provides the vacuum to open and close the vacuum switches. The vacuum generator creates 15 inches of vacuum that is passed to a reservoir ball. Most dash heater and A/C systems will only require 10 inches of vacuum to operate the switches. The output from the reservoir is sent to the vent control knob. The control knob will then direct the vacuum operation to the appropriate vacuum switch to open or close vents and switches. When the ignition is on and the A/C is operating, the vacuum generator will operate.

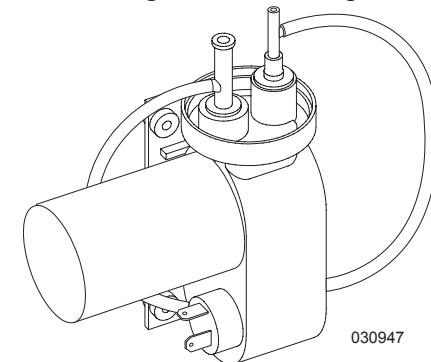

Vacuum Generator: Located at front firewall.

Troubleshooting

The dash A/C and Heat system uses a combination of compressed air (developed by the chassis system), vacuum air (developed by the vacuum generator) and electric relays and vacuum switches. Therefore, any repair can be classified in one of five categories:

- ◆ Electrical Vacuum
- ◆ Air Conditioner
- ◆ Heater
- ◆ Defroster

No Cooling:

1. Check that the blower is operating, A/C switch is in A/C or **MAX A/C** position, temperature control is turned to **MAX** cooling (blue area).
2. System fuses are not blown.
3. Condenser fan is operating.
4. Check power supply to unit and grounding of system.
5. Check wiring.
6. Coolant valve is leaking.
7. Drive belt is loose or broken.
8. Compressor Clutch is inoperative, will not engage.
9. Expansion Valve is faulty or frozen.
10. Thermostat control is faulty.
11. Mode control switch is faulty.
12. Compressor is faulty.
13. Loss of refrigerant.

NOTE:

An ultraviolet or UV Blue Light cube is used for leak detection when dye is introduced to the A/C System.

Reduced Cooling:

1. Coolant valve not operating correctly.
2. Air passages are obstructed.
3. Loose or worn drive belt.
4. Check blower and select switch.
5. Thermostat control valve is faulty.
6. Expansion valve is faulty.
7. Compressor is faulty.
8. Low refrigerant charge.

No Heating:

1. A/C switch is turned off.
2. Blower switch is turned off.
3. Verify the proper engine coolant level.
4. Verify that the engine is reaching operating temperature.
5. Verify engine coolant is reaching water valve attached to unit.
6. Verify operation of water valve to permit engine coolant to pass through valve to heater core.
7. Check unit fuses.
8. Check power supply to water valve and grounding.
9. Check wiring.
10. Engine thermostat faulty.

Blower Does Not Operate or Runs Slow:

1. Check fuses.
2. Check for loose or corroded connection.
3. Check wiring.
4. Check to ensure ignition switch is on.
5. Check blower and select switch.
6. Motor shaft has seized.
7. Blower wheel is out of alignment.

Damper Doors DO NOT Operate:


1. Does the motorhome air tank have pressure?

2. Is the vacuum generator being powered and producing a vacuum?
3. Check the vacuum line entering the unit for vacuum.
4. Check that the vacuum solenoid mounted on unit is receiving power from the mode switch. If operating properly, the vacuum solenoid will feel hot if current is engaging the solenoid.
5. Check the mode switch.
6. Check wiring.
7. Check for a pinch in the vacuum line leading to the vacuum motor that operates the damper door in question.

DIAGNOSTIC PLUG LOCATION

An ABS diagnostic plug is located in the roadside front distribution box. There is also an engine diagnostic plug (J1587) located under the dash on the left side of the steering column. Another engine diagnostic plug (J1939) is found on the top of the engine next to the transmission check/fill. A Cummins diagnostic plug (J1939) is a 3-pin connector found on the engine curbside.

A transmission diagnostic plug is located in the roadside front distribution box.

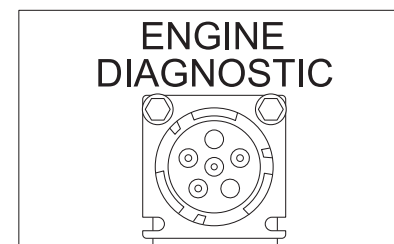


090280e

Engine Diagnostics:

The engine diagnostics will notify the operator of deviations from the programmed limits of the engine through the “Check Engine” lamp in the dashboard. Should a system component with the engine develop a deviation, the “Check Engine” lamp will illuminate and a diagnostic code will be logged and stored in the system memory. These codes are accessed by a service technician using special equipment.

ALADDIN™ ENGINE DISPLAY


The optional Aladdin System will display engine and transmission statistics at a quick glance.

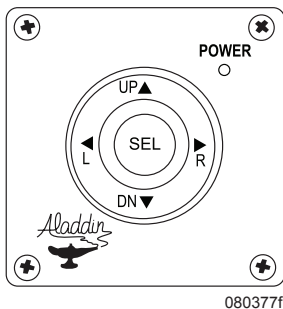


NOTE

The backup camera and engine/transmission screens cannot simultaneously display.

To display engine and transmission information, use the controller to enter Coach Info from the Main Menu.

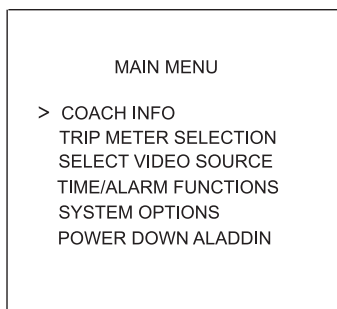


020195o

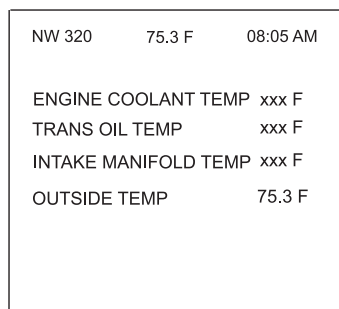

020195v

ENGINE "NO START" FLOW CHART

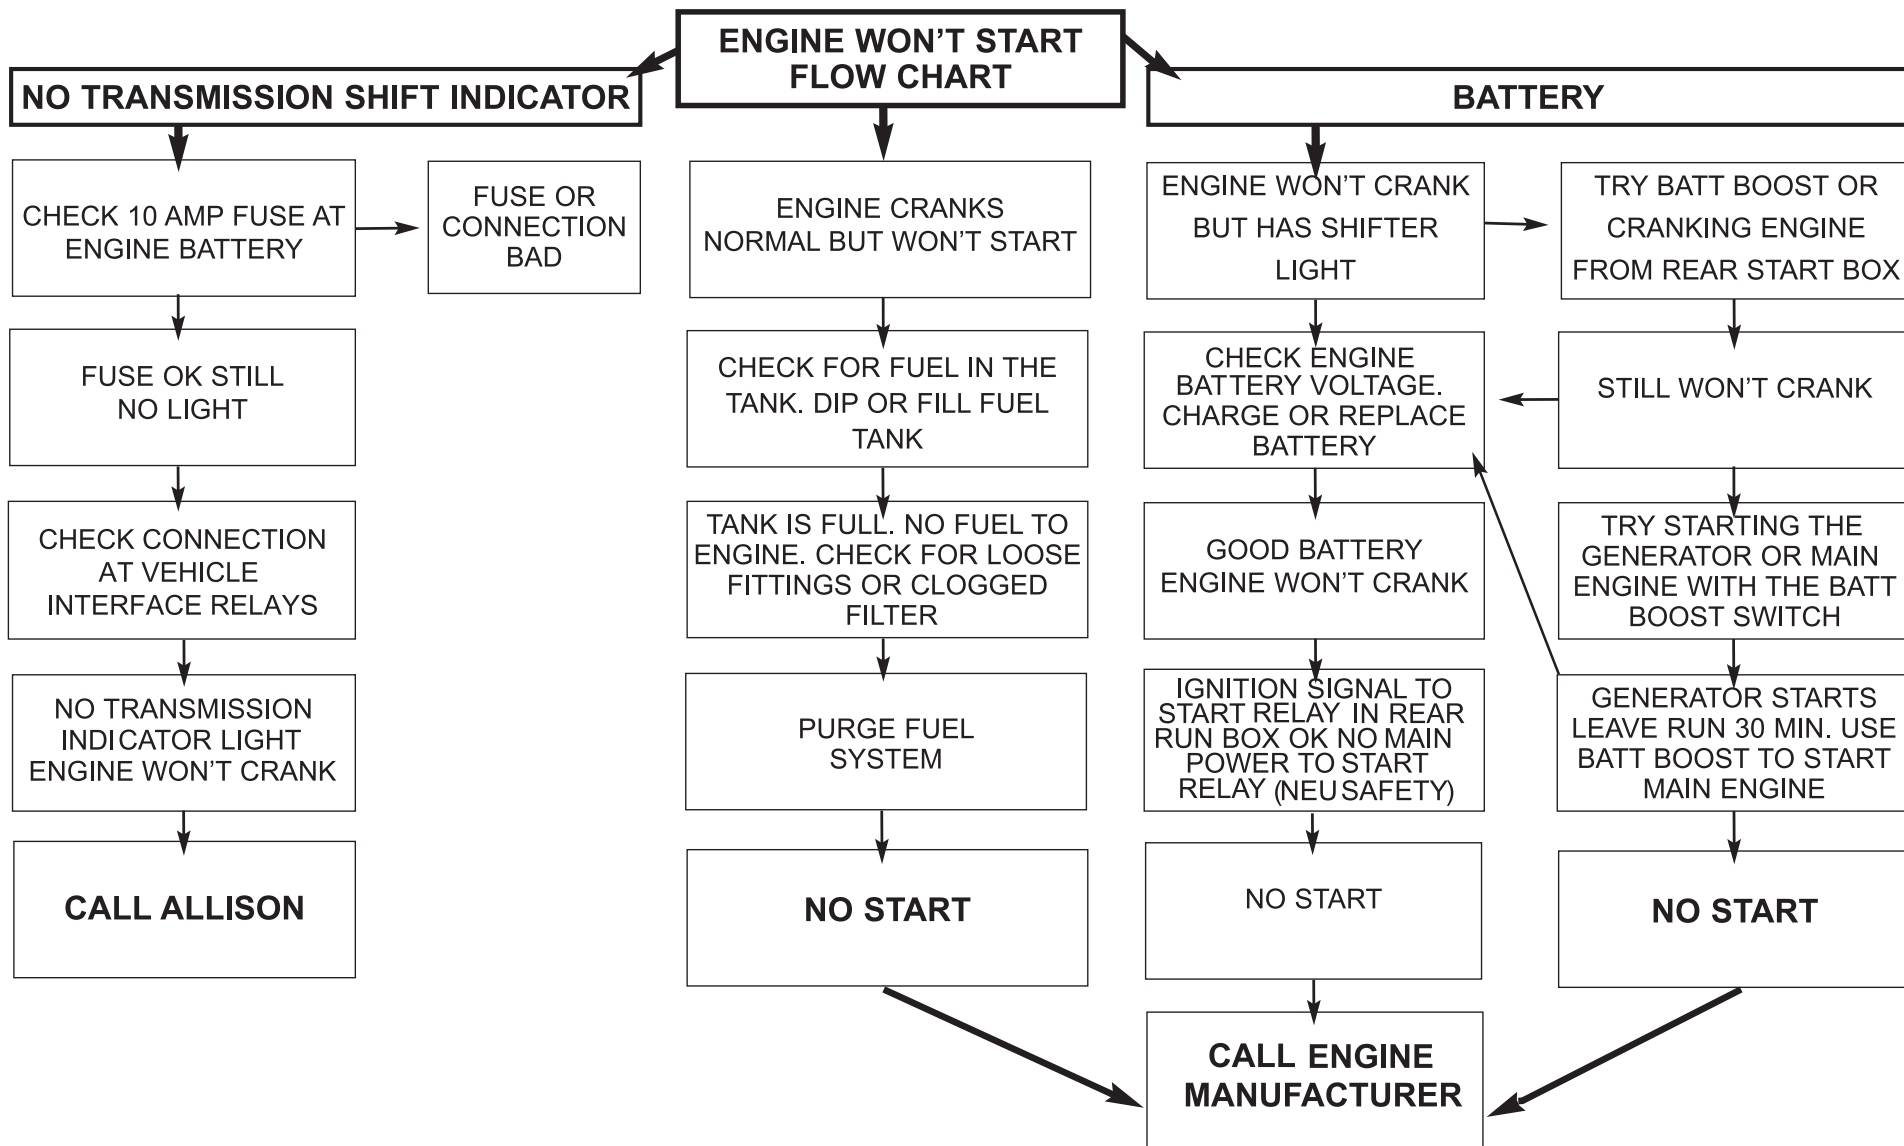

Diplomat 2007

Chassis Information — Section 10

CHASSIS - INTRODUCTION	190	STEERING GEAR	202	HYDRAULIC SYSTEM	220
AIR SUPPLY SYSTEM	190	DRIVE AXLE & DRIVE SHAFT	202	Hydraulic Reservoir	220
Air Governor	191	U-Joint Angles Phasing & Driveline Balance	204	Hydraulic Filter	220
Air Storage Tanks	191	SHOCK ABSORBER	205	Air Intake & Charge Air System.....	220
AIR SYSTEM CHARGING (EXTERNAL)	192	LEVELING - HYDRAULIC	205	Air Filter Minder.....	221
Air Coupler.....	192	Prior to Leveling	206	Changing Air Filter	221
AIR DRYER	192	Manual Leveling	206	LUBRICATION MAINTENANCE	221
Desiccant Cartridge.....	193	Automatic Leveling.....	207	LUBRICATION CHARTS	225
Desiccant-Type Air Dryer	194	Retracting Leveling Jacks	207	SPECIFICATIONS CHARTS	227
Air Dryer Cycle.....	194	ENGINE - GENERAL INFORMATION	208	Tank Capacities	227
AIR SPRING INSPECTIONS	194	STARTING PROCEDURE	209	Engine Specifications	227
HEIGHT CONTROL VALVES	195	Normal Starting.....	209	Chassis Fluid Capacities.....	227
BRAKE SYSTEMS	195	Cold Weather	209	Generator Specifications	227
Air Brakes	195	ENGINE OIL	210	Belts & Filters.....	227
Park & Emergency Brake System	195	ENGINE SHUTDOWN	210	BATTERY SPECIFICATION CHARTS	228
Automatic Slack Adjuster	196	Extended Engine Shutdown	211	Maintenance Records	229
Brake Systems - Backup	196	COOLANT SYSTEM	211		
ABS/ATC SYSTEM (ANTI-LOCK BRAKES)	197	Charge Air Cooler	212		
ABS Diagnostic	197	EXHAUST BRAKE	213		
FRONT AXLE	199	TRANSMISSION	213		
Alignment	199	Check Tans Indicator	214		
Lubrication Maintenance Safety	200	Periodic Inspections	215		
Steering Components	200	TRANSMISSION FLUID & FILTERS	216		
Steering Column	201	FUEL SYSTEM	217		
Drag Link	201	Fuel Requirements.....	217		
Center Link	201	Fuel Tank.....	218		
Steering Spindles	201	Fuel Sender.....	218		
Control Arm Bushings	202	Fuel Lines & Hoses	219		
Front Brakes.....	202	Fuel Filters	219		

CHASSIS - INTRODUCTION

This section contains information and instruction regarding various components of the motorhome chassis. Follow the guidelines and procedures to help understand and operate the motorhome. Complete instructions for engine and transmission are located in their respective operators manual included in the Owner's Information File Box.

WARNING

When welding is involved for motorhome repair or modification, only qualified, experienced technicians should weld on the chassis. Improper welding procedures and materials may weaken the assembly or result in damage that is not obvious and may not cause an immediate problem or failure. Unauthorized modifications or repairs to the chassis could result in a forfeiture of warranty coverage.

DANGER

Due to the sensitive nature of the electronics on the chassis, the following precautions are required to protect electrical components in the motorhome chassis.

- 1. Disconnect the (+) positive and (-) negative battery connection.**
- 2. Cover electronic control components and wiring to protect from hot sparks.**
- 3. Disconnect the terminal plugs from the engine Electronic Control Unit located on the curb side of the engine block.**

- 4. Disconnect all the plugs from the transmission Electronic Control Module located in the roadside front distribution panel.**
- 5. Disconnect the wiring from the alternator.**
- 6. Do not connect welding cables to electronic control components.**
- 7. Attach the welding ground cable no more than two feet from the part to be welded.**

The Roadmaster chassis design provides exceptional balance, handling and braking characteristics. The Roadmaster chassis is an engine and frame unit featuring an all steel frame design, providing greater structural integrity and uniform stress distribution. Incorporated in the Roadmaster chassis is the air suspension system using eight air bags and gas shock absorbers. This design provides the smoothest ride, best handling and trouble free service while delivering excellent drive ability. The chassis also has a three-point hydraulic leveling system. The Roadmaster chassis design offers unsurpassed ease of maintenance and service.

The towing system rating incorporated in the construction of the frame is 10,000 lbs. towing and 1,000 lbs. tongue weight.




The Roadmaster's exclusive stacked-rail chassis with air suspension consists of front and rear axles, with trailing links. A panhard bar on each axle controls side motion. Each axle mounts to the trailing links that are connected to the chassis. The stacked rail design of main chassis offers increased bay storage space. The suspension control arms attach to the frame through bushings, which require no lubrication. The preset suspension ride height automatically maintains proper suspension height throughout the load range.

AIR SUPPLY SYSTEM


The air compressing system on the motorhome is comprised of several items: air compressor, air governor, air dryer, a front air tank and a rear air tank. The compressed air system operates several items, some of which include brakes, suspension, air horns, air gauge. The air system is charged by a gear driven air compressor mounted on the engine. As engine speed increases, compressed air output increases. When air is compressed, heat is generated. Heat dissipates as air is discharged from the compressor. Moisture condenses in the compressed air as it cools. The moisture laden air then enters an air dryer where the air is filtered. The filtered air charges the front air tank. The front air tank is divided in two halves: a wet side and a dry side. The compressed air enters the wet side before entering the dry side. A discharge line from the dry side of the front air tank charges the rear air tank. Discharge lines use inline check valves to prevent back flow of compressed air.

The pneumatically operated items are divided into two categories: brakes and accessory air. Brakes have full use of supplied air pressure. Accessory air items, such as air horns, receive air through pressure protection valves (PPV). The PPV will not allow compressed air flow until about 60 psi. In the event of an air system problem, the pressure protection valve will leave a reserve air charge for braking. Pressure protection valves are installed for safety.

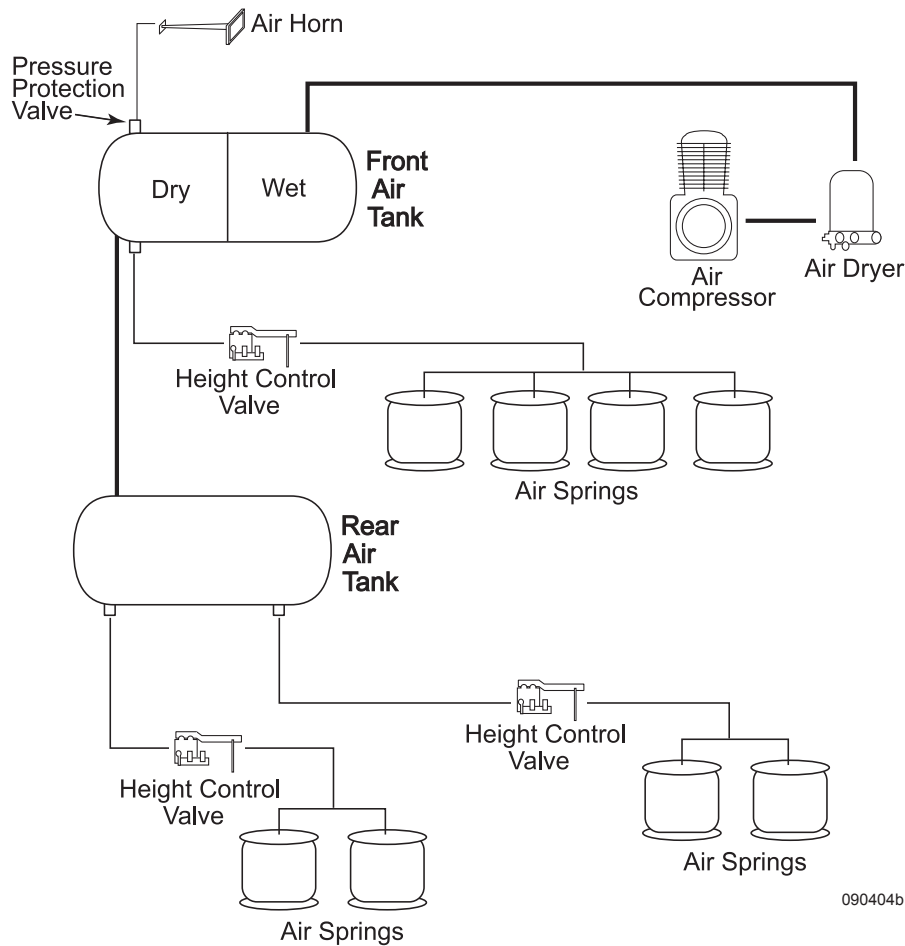

Air Governor

The air governor, located in the engine compartment, regulates the air compressor to cut-in and cut-out, keeping the air system in the specified operating range of 105 to 120 psi, then sends an air “purge” signal to the Air Dryer.

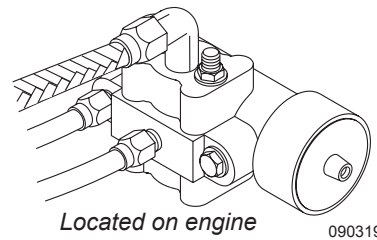



Located on engine 090319

Cut-in pressure of about 105 psi is factory preset from the governor manufacturer and is not adjustable. Cut-out pressure is calibrated to 120 psi. When cut-out pressure is reached, the governor will send an air purge signal to the Air Dryer. This opens the purge port of the Air Dryer, expelling moisture. The purge action of the Air Dryer is identified by the short release of air at the rear of the motorhome.

Air Storage Tanks

The front and rear air tanks should be manually drained once a month, or more, depending on operating conditions where humidity is high.

Rear Tank Drain located next to rear hitch

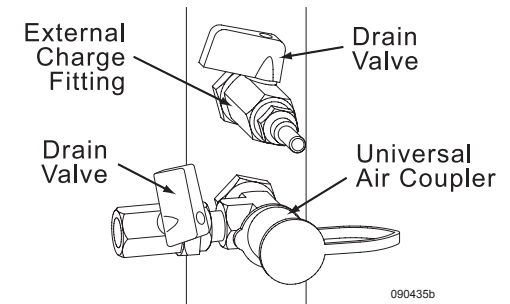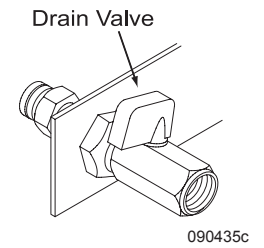

Front Tank Drain located in generator compartment

Air Drains:

Air system tank drains are located in the generator compartment and in the rear engine compartment. The air tanks should be drained at least once a month or more often in areas of high humidity and where temperature fluctuates 40° F or more daily.

To Drain the Tanks:

- Slowly open the drain valves as moisture will be expelled under pressure. After all moisture and air is purged from the tanks, the valves should remain open an additional five minutes to allow any moisture remaining a chance to drain.
- Close valves and start engine. Check valves for leaks.

WARNING


Wear safety glasses to prevent eye injury from expelled moisture. Open drain valves slowly as moisture will be expelled under high-pressure.

NOTE

Both air tanks have a pressure relief valve which is set to release at about 130 psi.

AIR SYSTEM CHARGING (EXTERNAL)

The air system on the motorhome can be charged from an external air supply source. Located in the front generator compartment is a type C automotive male fitting. Caution should be used when charging the air system from this fitting. The air supplied from an external source may contain moisture. Compressed air introduced into the air system from this fitting is not filtered by the air dryer. The auxiliary air charge fitting will charge the front and rear air tanks. A shut-off valve is installed to prevent air from escaping.

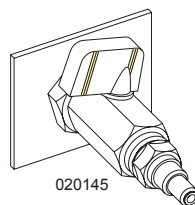


Located in generator compartment

CAUTION

The external air supply source should be regulated to charge the air system on the motorhome no higher than 120 psi. Damage to the air system or pneumatically operated items may occur.

Air Coupler

Provided for convenience is a remote air supply coupler located in the generator compartment. This female fitting will accept type C automotive connectors. This auxiliary air fitting may be used to inflate tires, air mattresses or other pneumatic items. This fitting is not designed to charge the air system on the motorhome. The air supply for the auxiliary air fitting is charged from the front air tank through a pressure protection valve.

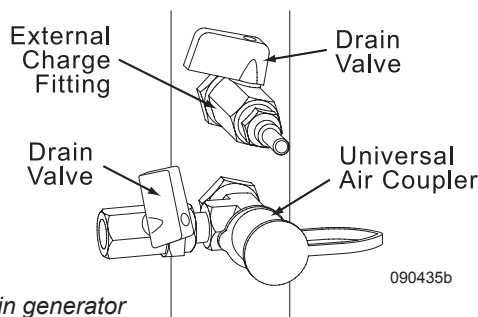

Located in generator compartment

To use this feature:

- Slide the locking collar back. Using a firm grip, fully insert the air fitting into the auxiliary air supply. Release the locking collar to retain the air fitting after the fitting is properly inserted.

To remove fitting:

- Firmly grip the air hose near the fitting to prevent recoil.
- Slide the locking collar back to release fitting.

NOTE

There are small air pressure restrictions in the pressure protection valve and

tire stem valve. Due to this restriction, the maximum amount of tire pressure achieved when the system is used to fill a tire is about 95 to 105 psi with air system on the motorhome charged to 120 psi. Maximum outlet air pressure is achieved when the air system completes the fill cycle indicated by the purge cycle of the air dryer.

AIR DRYER


The air dryer, located between the frame rails next to the transmission, removes moisture from the compressed air system to prevent freezing of brakes or other pneumatically operated items. The three functions of the air dryer are cooling, filtering and drying the system air. This prevents valve and seal damage or wash away of lubricants as well as freeze damage to the system components.

Air Dryer Cycle:

The governor turns the compressor on when the supply tank pressure drops below cut-in pressure. Compressed air then passes into the air dryer at the inlet port. Moisture-laden air and contaminants pass through the desiccant. Moisture is retained by the desiccant and collects in the base of the dryer. When the compressor reaches cut-out pressure (approximately 130 psi) the purge valve opens and the dryer purges and expels water collected in the dryer base. The regeneration valve opens sending a small charge of dry system air from the front air tank back through the dryer. The backflow dries the desiccant, preparing it for the next cycle.

Air Dryer Components:

1. **Purge Valve:** A valve located on the bottom of the air dryer base that remains open during a compressor unload cycle to allow collected moisture, condensation and contamination to expel from the air dryer during the purge cycle.
2. **Pressure Relief Valve:** Protects the air dryer from over-pressurization.
3. **Regeneration Valve:** Controls regeneration of the desiccant by allowing air from the supply and secondary tanks to bypass the outlet check valve.
4. **Heater Power Connection:** Provides 12 Volt DC power to the heating element.

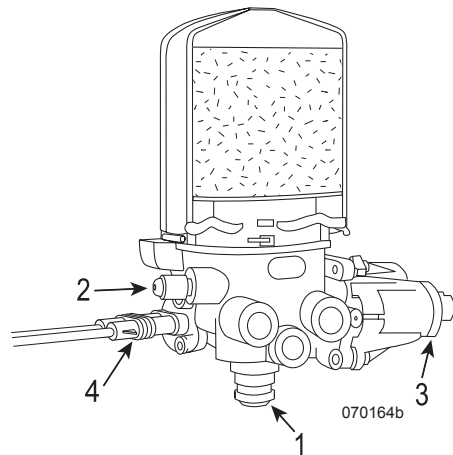

In extreme cold, verify that the air dryer heater is in good working order. The 100-watt heater in the air dryer is controlled by ignition power. The heater turns on below 45° F and off when the air dryer temperature is above 86° F. The 15 amp fuse for the heater is located in the front electrical compartment, Monaco Box 2A.

WARNING

Remove all pressure from the air system before disconnecting any component, including the desiccant cartridge. Pressurized air can cause serious personal injury.

Desiccant Cartridge

Warm, humid air from the compressor condenses into either water or water vapor. A desiccant-type air dryer protects the air brake system by drying moisture-laden air before it passes through the air reservoirs and into the brake system. The replacement kit contains one cartridge and one O-ring.



To Replace the Cartridge:

1. Loosen and remove the old cartridge. Use a strap wrench, if necessary.
2. Remove and discard the O-ring from the dryer base.
3. **Inspect** and clean the seal seat. Repair any minor damage.

NOTE


If the seats are damaged so badly that a tight seal cannot be maintained, replace the air dryer.

4. Install a new O-ring.
5. Lubricate the O-Ring on the stem with a thin layer of grease.
6. Lubricate the cartridge seal with a thin layer of grease.

7. Thread the replacement cartridge onto the base until the seal touches the base. Tighten the cartridge **ONE** additional turn. **DO NOT OVERTIGHTEN.**

NOTE

If an excess amount of water is present when performing the monthly air tank drain service, the filter for the air dryer may need to be changed.

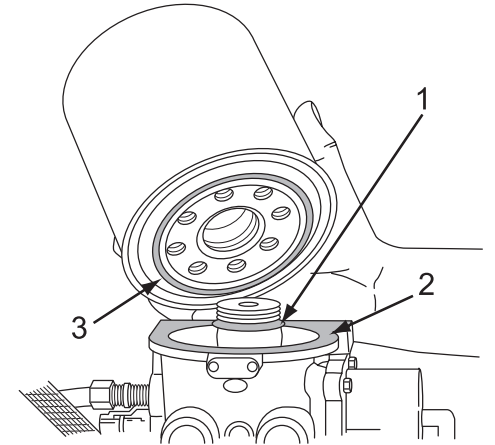

- 1. O-Ring
- 2. Seal Seat
- 3. Cartridge Seal

REPLACEMENT REQUIREMENTS

Components	When to replace?	Why?
Desiccant Cartridge	<ul style="list-style-type: none"> • Every two to three years. • When compressor is replaced. • Water in supply tank. 	<ul style="list-style-type: none"> • Preventive maintenance. • Contaminated cartridge. • Saturated or contaminated cartridge, high duty cycle (wrong application of air dryer).

Desiccant-Type Air Dryer

1. Warm, humid air from the compressor condenses into either water or water vapor before entering the air dryer.
2. A desiccant-type air dryer protects the motorhome air brake system by drying moisture-laden air before it passes through the air reservoirs and into the brake system.
3. Water collects in the base of the dryer when warm air condenses the water before it enters the dryer, or inside of the dryer before the water reaches the desiccant.
4. The desiccant material then removes additional water vapor, further drying the air.
5. During regeneration phase, the regeneration valve and pressure-controlled check valve remove water from the desiccant bed with a backflow of dried, expanded system air.

Air Dryer Cycle

The governor turns the compressor on when the supply tank pressure drops below cut-in pressure. Compressed air passes into the air dryer at the inlet port:

1. Moisture-laden air and contaminants pass through the desiccant.
2. Moisture is retained by the desiccant. Moisture also collects in the base of the dryer.

3. The governor turns the compressor off when the system reaches cutout pressure (approximately 135 psi).
4. The dryer purges and expels water collected in the dryer base.
5. When the regeneration valve opens, the dry system air flows back through the dryer. A small charge of air from the front air tank backflows through the filter. The backflow dries the desiccant, preparing it for the next cycle.

AIR SPRING INSPECTIONS

Items listed below should be checked when the motorhome is in for periodic maintenance.

NOTE

Never attempt to service the air suspension on a motorhome with the air spring inflated.

- ◆ **Inspect the Outer Diameter (OD)** of the air springs. Check for irregular wear or heat cracking.
- ◆ **Inspect** air lines to ensure contact does not exist between air line and OD of the air springs. Air lines can rub a hole in an air spring very quickly.
- ◆ Ensure there is sufficient clearance around the complete circumference of the air spring while at maximum diameter.
- ◆ **Inspect** the OD of piston for buildup of foreign materials. On a reversible sleeve style air spring, the piston is the bottom component of the air spring.

- ◆ The correct ride height should be maintained. All motorhomes with air springs have a specified ride height established by the manufacturer. This height should be maintained within ¼ inch. This dimension can be checked with the motorhome loaded or empty.
- ◆ The leveling valves (or height control valves) assist in ensuring the total air spring system works as required. Clean, **inspect** and replace if necessary.
- ◆ Make sure to check shock absorbers for leaking hydraulic oil and worn or broken end connectors. If a broken shock is found, replace it immediately. The shock absorber will normally limit the rebound of an air spring and keep it from over extending.
- ◆ Check the tightness of all mounting hardware (nuts and bolts). If loose, tighten. **DO NOT** over-tighten.

Cleaning:

The approved cleaning method is to use soap and water, methyl alcohol, ethyl alcohol or isopropyl alcohol. Unapproved cleaning methods include all organic solvents, open flames, abrasive and direct pressurized steam cleaning.

HEIGHT CONTROL VALVES

Height Control Valves (HCV) inflate or deflate air springs to maintain proper suspension height throughout the load range. Two Height Control Valves are installed at the rear drive axle to control rear suspension height and left or right tilt of the motorhome. A separate HCV is installed to control front suspension height. The three HCVs mount to the main frame of the motorhome, above the axles, with a linkage rod connecting the valve to the axle.

Actuating components inside of the valves are oil dampened to reduce valve reaction to momentary suspension bounce and rebound. When a constant suspension change occurs, such as a load change or weight transfer through a sustained corner, the valve reacts by adding or purging air from the air springs as needed.

The air springs mount between the axle H-frame assembly and the two main frame rails. Air spring support plates mount to the main frame and the H-frame. There is a specified distance the air spring must maintain between the mounting plates. Other than specified distance between the plates will compromise ride quality and handling, and affect shock absorber travel, drive shaft angle, as well as various other running gear components.

BRAKE SYSTEMS

Air Brakes

The air brake system on the motorhome differs from a conventional automotive hydraulic braking system and should be treated differently. Proper maintenance and lubrication are the keys to keeping the air brake system in proper working order.

The air system supplies air to the foot brake, or treadle valve. Pushing down on the treadle valve supplies an air charge signal to a sealed brake chamber that consists of a spring and air bladder. The air charge signal pushes on the bladder and extends a threaded rod connected to the automatic slack adjuster. The slack adjuster rotates the S-cam expanding the shoes against the drum. Air disc brakes follow much the same principle, with the exception of the threaded rod directly activating calipers.

Consideration needs to be given to stopping distances and air system pressures. The motorhome requires longer stopping distances. Each brake application uses air from the air system, and engine speed is directly proportional to how fast that air system is replenished. Prepare for downhill grades. It may be necessary to select a lower gear and/or use the exhaust brake. Use individual short brake applications down long hills, rather than “riding” the brakes, to extend the life of the brake lining. Avoid overheating the brakes. Hot brakes have less stopping power. When maneuvering the motorhome around small areas, or backing into spaces, several individual brake applications might be made. Watch the air gauge. When preparing to back into a space swing the motorhome so it is aligned with the parking slot before backing up.

The air braking system on the motorhome is equipped with a low air pressure warning system safety feature. Should a low air condition arise while the vehicle is in operation, a warning buzzer will sound and a dash warning light will illuminate at approximately 60 to 65 psi (pounds per square inch) to alert the operator.

Park & Emergency Brake System

The Park and Emergency Brake System (Spring Brakes) applies to the rear drive axle only. When the park brake is applied, air is released from the rear brake chambers, allowing the large spring in each rear brake chamber to manually push the brake pads against the rotor. The air system must be charged above 35 psi to allow the park brake to release. Pushing down on the park brake handle charges the rear brake chambers with air pressure, overriding the emergency brake springs and releasing the brakes. In the event of air loss while the vehicle is under operation, the park brake will automatically apply (this occurs at approximately 30 psi), acting as an automatic emergency brake system.

When preparing to depart, allow the air system to achieve full air pressure as indicated by the air gauge needles. Listen for the air dryer to purge, indicating that the air dryer is functioning. Look and listen for abnormalities. Abnormal air pressure readings by either needle of the air gauge alerts the operator to have the air system checked to avoid an untimely failure.

Should a failure occur in the air system, preventing the air pressure from building, it may become necessary to “cage” the spring brakes (*“cage” procedure in Section 2 Towing Procedures - Disabling Parking Brake*). This is an emergency procedure only. Caging the rear air brake chambers manually overrides the spring brakes and allows the vehicle to move. This procedure does not affect normal service braking.

NOTE

When the park brake is released, the Park illumination lamp will remain lit until air system pressure is above 65 psi.

WARNING

When parked with the air tank not depleted, there is possibility of an accidental release of the parking brake. Traveling with small children and/or pets may require a small block to be fabricated to prevent accidental release. The block should be placed under the knob on the dash panel. A wooden clothes pin, clasped at the base of the shaft, will work.

Automatic Slack Adjuster

The braking system is equipped with automatic slack adjusters. As brake lining wears, the slack adjusters will automatically ratchet on the return stroke as needed. This ratchet action will keep the brake lining at proper adjustment. Automatic slack adjusters and the connecting S-cam shaft require periodic lubrication and inspection.

NOTE

Replacement parts should be of the

same original equipment size and type. Mixing brake components may result in unequal braking action. Brake maintenance is not covered by the manufacturer.

WARNING

Brake lining may contain asbestos material and should only be serviced by qualified service technicians who are trained in the appropriate precautionary procedures. If any loss of braking effectiveness or abnormal braking indications are noticed, the brakes and slack adjusters should be inspected by a qualified brake technician.

WARNING

Automatic slack adjusters are not designed to be manually adjusted. DO NOT manually adjust the slack adjusters. If any loss of braking effectiveness or abnormal braking indications are noticed, the brakes and slack adjusters should be inspected by a qualified brake technician.

Brake Systems - Backup

The motorhome air braking system is equipped with backup safety systems and warning alarms in the event of air system failure. For example: should the air compressor fail to charge the air system and low air gauge readings go undetected, a low air pressure warning buzzer will sound and a low air pressure dash warning indicator light will flash. These warning indicators occur at approximately 65 psi. This will alert the operator of an impending situation. If the motorhome is allowed continued operation, the pneumatic emergency spring

brake relay valve, installed in the air system, senses the low air pressure condition and will release the air charge from the spring brake air chambers on the rear drive axle. In this case, the park brakes will automatically apply at approximately 30 psi. This safety backup system acts as an automatic emergency brake system.

Another backup safety is the air system separation of the front and rear brakes, implemented by using two air tanks. One tank is located in the front and the other is located in the rear. This separation allows the front air tank to operate the front brakes; the rear tank operates the rear drive axle brakes. This tank division gives reassurance in case one tank experiences a failure of an accessory air item allowing the compressed air to escape.

Accessory air items are other pneumatically operated items such as the air horn, vacuum generator, etc. The accessory air items operate only when air tank pressures exceed 65 psi. This is done with pressure protection valves. Should an accessory air item fail, the pressure protection valve (PPV) reserves the remaining air pressure of 65 psi for braking. This will leave the motorhome with one air tank fully charged for safety backup.

The rear air tank also has a safety backup - the safety inversion valve. The inversion valve senses the absence of rear air tank pressure. In this case the inversion valve will allow the operator to make a modulated spring brake application, made in conjunction with the emergency spring brake relay valve. The inversion valve allows the front air tank pressure to recharge the rear brake chambers after the modulated spring brake application has been made.

This backup system implements use of all the brakes, allowing the operator to bring the motorhome a safe stop. In case of all compressed air charge escaping from the front air tank, the operator will still have full use of the rear brakes.

ABS/ATC SYSTEM (ANTI-LOCK BRAKES)

The motorhome is equipped with an anti-lock braking system (ABS) and automatic traction control system (ATC). The ABS system monitors wheel rotation speeds by using a 100-tooth magnetic tone ring mounted to the hub. Revolving with the wheel, the magnetic tone ring is polarized giving positive and negative pulsations. A stationary sensor is mounted adjacent to the tone ring to monitor magnetic pulses. The pulses are monitored by the ABS electronic control unit (ECU).

The ECU monitors all wheel sensors at the rate of 100 times per second. The ECU controls Pressure Modulator Valves. Pressure Modulator Valves have two electric-over-air solenoids, a hold solenoid and a release solenoid. The modulator valves are open under normal braking, allowing a straight through air signal from the treadle valve to the brake chamber. Should a wheel lose traction under a braking application, the ECU will energize the hold solenoid of the Pressure Modulator Valve to interrupt the air signal from the treadle valve to the brake chamber. The release solenoid vents the existing air signal, at the brake chamber to the atmosphere, allowing the skidding tire to regain traction. Skidding tires have less tractive efficiency. It is possible, under certain conditions, to have the wheel(s) skid with a normal functioning ABS system.


The ABS itself does not apply additional braking power. The purpose of the ABS is to limit wheel lock and decrease stopping distance. Cautious driving practices and maintaining adequate safe distance when following vehicles is the key to safe vehicle operation.

WARNING

The ABS/ATC system is designed to increase tire to road surface traction but cannot overcome naturally occurring laws of physics. The ABS/ATC system, combined with safe driving practices, will reduce the possibility of wheel skid and loss of lateral stability.

ABS Component Function:

- ◆ Speed sensors and tone rings on each wheel monitor wheel rotation.
- ◆ Each speed sensor communicates wheel rotation pulses to the Electronic Control Unit.
- ◆ The ECU receives the speed sensor signal pulses to calculate speed and acceleration rates of each wheel.
- ◆ Based on the speed sensor input, the ECU detects impending wheel lock and operates the ABS Modulator Valves required for proper control. The Modulator Valves are operated in the Air, Release or Hold modes to regulate air pressure to the brake chambers.

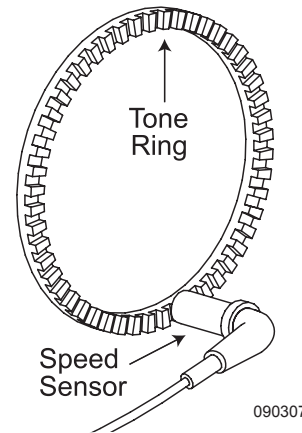

- ◆ Braking force is applied at a level which minimizes the stopping distance while maintaining as much lateral stability as possible.

ABS Warning Light:

The ABS will perform a dash indicator lamp check and self-diagnostic test each time the ignition is switched to the on position.

- ◆ When the ignition is turned on, the ABS indicator illuminates momentarily (3 seconds) verifying the self-diagnostic test. If the ABS indicator light remains on, or illuminates while the motorhome is being operated, this indicates a fault in the anti-lock brake system. This fault will not affect normal service braking. The motorhome will need to go to a service center to repair the problem.

INFORMATION


If a fault code occurs, call a Bendix service locator at 1-800-247-2725 and take the motorhome to the nearest repair facility.

ABS Diagnostic

If the ABS light on the dash comes on it indicates that a fault has occurred with the Anti-lock Brake System only. Normal braking is not affected but the motorhome will need to go to a service center. The service center can use one of two methods to retrieve ABS diagnostic fault codes.

Retrieving Codes Using Diagnostic Tool:

The ignition must be On to retrieve the codes. To retrieve codes locate the ABS diagnostic plug in the roadside front run box. Unscrew the cap and insert the ABS diagnostic tool into the plug. The other end of the tool will display fault codes in the form of a light flashing in a series of numeric sequences.

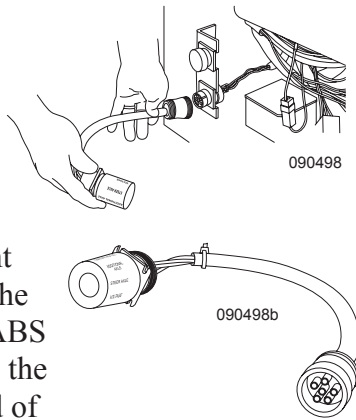

Retrieving Codes Using ECU:

If the diagnostic tool is not available, an alternative method can be used to retrieve system configuration codes and fault codes displayed through the dash ABS warning light as a series of blinked sequences. The fault codes can be accessed by properly grounding Terminal 18 in the X1 connector found on the ABS ECU module. The Bendix ABS ECU module is located under the shift selector panel. On the back of the ECU locate the black X1 connector, pin 18. Ground pin 18 as described by inserting a wire at the rear of the connector. Pin 18 is located in the bottom right corner (labeled ABS Warning).

NOTE

System configuration codes are sequences of six blinked digits while fault codes are sequences of two blinked

digits. Refer to an authorized Bendix service center for a list of blink code sequences. If grounding out is not done correctly for a specific readout, stop then start the procedure again.

NOTE

All blink codes are displayed by the ABS warning light only.

The system is capable of performing several diagnostic mode functions. After ignition on, a two second delay must be observed prior to grounding.

Active code retrieval: ground 1 time.

Inactive code retrieval: ground 2 times.

Clearing active codes: ground 3 times.

System configuration check: ground 4 times.

Dynamometer test mode: ground 5 times.

Reconfigure ECU: ground 7 times.

NOTE

Reconfigure Mode is entered by grounding prior to “ignition on.” Once ignition is on, stop grounding, then ground 7 times.

ATC System:

The ATC system improves traction on slippery or unstable road surfaces by limiting excessive drive wheel slip. This is accomplished two ways, limiting engine torque to the drive wheel or engaging a brake to the spinning drive wheel. During normal operation engine

torque is unaffected. The ATC system works in conjunction with the ABS Electronic Control Unit. The ECU monitors tone ring speed of the drive wheel in relation to the other wheels. If a speed differential occurs in the drive wheel, the ECU enters Automatic Traction Control mode.

During an ATC event, the ECU will automatically react to optimize traction and safety if the motorhome encounters a slippery road surface. Engine torque is normally reduced to limit drive wheel slip.

NOTE

The ATC system is always active.


ATC reacts to drive wheel slip by:

- ◆ Reducing engine torque to the drive wheel if road speed is above 25 mph.
- ◆ Reducing engine torque and activating drive axle brake controls if road speed is below 25 mph. If the brake control activates, it remains active regardless of road speed.

How Automatic Traction Control (ATC) Works

If this wheel is spinning due to a slippery surface or because the wheel is off the ground, the ABS system with ATC applies the brake to this wheel.

This wheel then delivers torque to the ground.

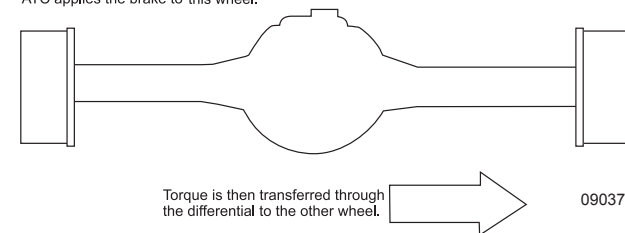


Torque is then transferred through the differential to the other wheel.

090372

ATC Switch:

Activating the ATC switch reduces ECU control over engine torque. Momentarily pressing the ATC switch allows the ECU to increase the amount of engine torque applied to the drive wheel in an ATC event. The amount of engine torque applied to the drive wheel will vary with the amount of drive wheel slip versus road speed. In an ATC event, the ECU remains active regardless of road speed or switch position. The light flashes slowly when the ATC switch is activated.

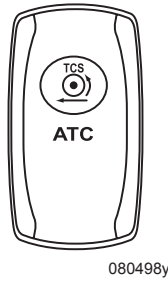**ATC Indicator Light:**

During normal operation, the ATC indicator light on the dash will illuminate steady when the ignition key is turned **ON**. If an ATC event occurs, the indicator light will flash quickly. The indicator light will flash slowly if the ATC switch is activated.

CAUTION

Normally the switch should remain inactive. During an ATC event (drive wheel slip) the ECU will automatically optimize drive wheel traction in most situations. Activating the switch during periods of wheel slip can increase torque to the spinning drive wheel. Drive train damage can occur if the spinning drive wheel should suddenly regain traction. If the motorhome is stuck it is advised to call a professional towing company to limit the possibility of body and drive train damage.

FRONT AXLE

While driving the motorhome, be aware of any changes in the feel of steering and have the system checked when noting apparent differences. It is normal to hear some hydraulic noise from the steering, especially when the steering is at maximum, or while turning the wheel when the motorhome is parked. Investigate any unusual or loud noises that occur. Begin by checking the level of the hydraulic fluid. Traveling at slow speeds over rough surfaces may cause a “clunking” noise to emanate from the steering column, but if noise is heard on smooth surfaces while sharply turning back and forth, the noise should be inspected and repaired as necessary.

Shimmy and looseness should be checked and corrected as soon as possible. If looseness is felt in the steering, the steering linkages can be observed while someone turns the steering wheel left and right. Watch the linkages for evident play or uneven interaction between components to help pinpoint a problem. Wheel bearings should be cleaned and repacked with high temperature disc brake grease every 30,000 miles. Have the steering system checked for damage after a severe impact, such as striking large potholes or curbs, and front-end collisions. Observe the alignment of the steering wheel; a change in the alignment may indicate damage to the steering components or suspension.

Maintenance for the system entails adequate lubrication. Use only a hand operated grease gun on the fittings. Grease fittings for the steering system are found on the both ends of the drag link (the bar connecting the steering gear to the axle), and on the intermediate steering shaft


located between the steering wheel and steering gear. The correct wheel alignment promotes longer tire wear and ease of handling while minimizing the strain on the steering system and the axle components. Use NLGI #2 Lithium soap base lubricant for all steering linkage and brake components.

Alignment**Camber:**

Camber, as shown, is vertical tilt of wheel as viewed from the front of the motorhome. This is machined into the axle when manufactured and is not adjustable.


090267

- “**Positive**” camber is an outward tilt of the wheel at the top.
- “**Negative**” camber is an inward tilt of the wheel at the top.

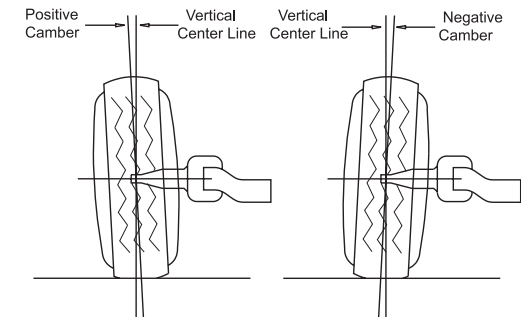**Toe Setting:**

The toe setting represents different distances between the front and rear of the tires (measured at the vertical center line of the tires).

Toe-in: Occurs when the tire front distance is less than the tire rear distance.

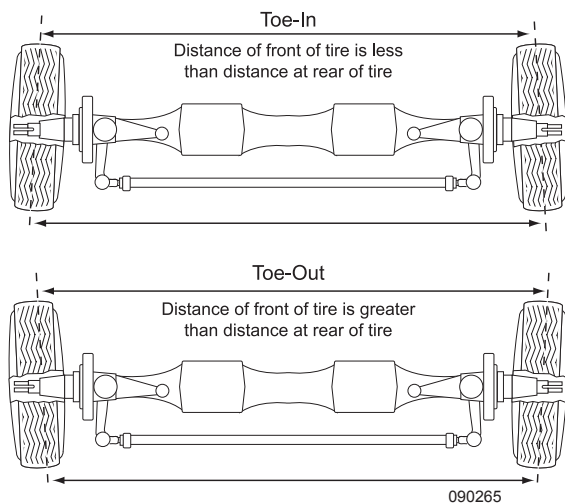FRONT OF MOTORHOME
(Top View of Axle)

Toe-out: Occurs when the tire front distance is greater than the tire rear distance.


Wheels are generally set with initial toe-in. As the motorhome operates tires tend toward a toe-out condition. By starting with an initial toe-in setting, a desirable “near zero toe-in” can be achieved when the motorhome is in motion.

Incorrect toe settings, where toed-in or toed-out, can have a significant affect on tire wear. The toe setting is adjusted by lengthening or shortening the cross tube.

Caster Adjustments:

Caster is the fore and aft tilt (toward the front or rear of the motorhome) of the steering kingpin as viewed from the side of the motorhome.

“**Positive**” caster is the tilt of the top end of the kingpin toward the rear of the motorhome.

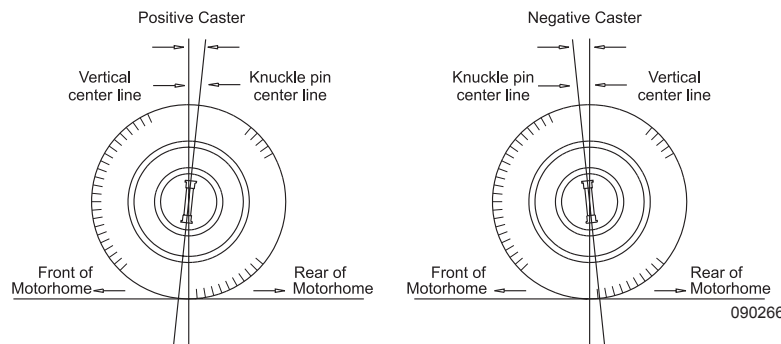

	Left	Right
Camber	Not Adjustable	Not Adjustable
Caster*	3.5° +/- .5°	4.0° +/- .5°
Total Toe	1/16" (+/- 1/32")	

* Right must exceed Left at least 1.5°, but less than 2.5°.

NOTE: Motorhome must be at ride height for proper alignment.

“**Negative**” caster is the tilt of the top end of the kingpin toward the front of the motorhome.

Setting the caster angle more positive than specified may result in excess steering effort and/or shimmy. Decreasing the angle may result in the motorhome wandering or poor steering return to center. The caster angle is determined by the installed position of the steer axle.

Lubrication Maintenance Safety

The front axle components require periodic lubrication maintenance. Chock wheels for safety prior to accessing components underneath the motorhome.


WARNING

Never place yourself under motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

NOTE

Suspension and steering components are lubricated at factory using **Texaco Starplex NLGI 2 Lithium Soap based grease.**

Steering Components

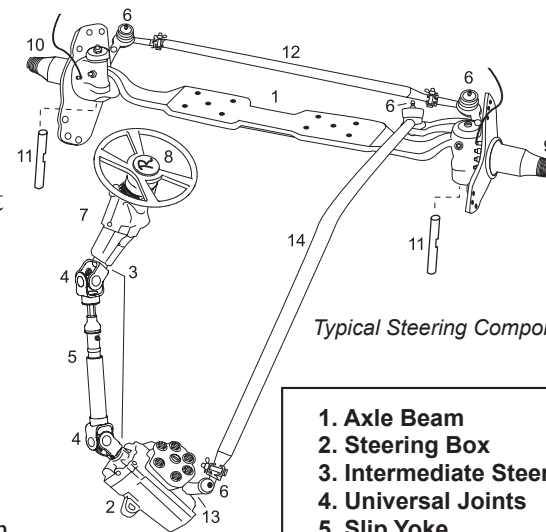

1. Axle Beam
2. Steering Box
3. Intermediate Steering Shaft
4. Universal Joints
5. Slip Yoke
6. Ball Joint
7. Steering Column
8. Steering Wheel
9. Right Knuckle Assembly
10. Spindle
11. Kingpin
12. Centerlink
13. Pitman Arm
14. Drag Link

Steering Column


The intermediate steering shaft connects the steering wheel to the steering box. Service the intermediate steering shaft universal joints and slip yoke every 30,000 miles or annually. Remove the steering column cover to access the upper universal joint and slip yoke lubrication points. The lower universal joint is accessed from underneath in the generator compartment behind the front electrical box.

WARNING

Never place yourself under motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Greasing the Intermediate Steering Shaft Universal Joints:

1. Check the shaft for looseness. Repair if loose or worn.
2. Apply the specified grease at the grease fitting on the universal joint. Apply until the new grease purges from all the seals.
3. If the new grease does not purge from the seals, disassemble and clean the joint or replace the universal joint. **DO NOT** lose the needle bearings.

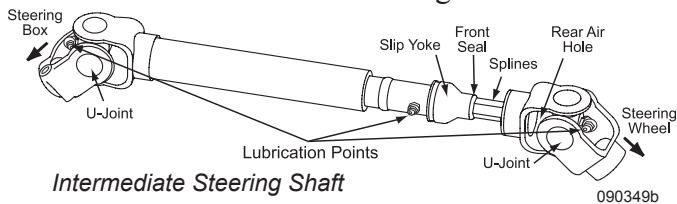

Greasing the Intermediate Steering Shaft Slip Yoke and Splines:

1. Check the shaft for looseness. Repair if loose or worn.
2. With finger, cover the rear air hole so grease flows to the front seal. Apply the specified grease at the grease fitting on the slip yoke. Apply until new grease purges and forces finger away from the air hole in the end of the slip yoke. Greasing interval is yearly or every 30,000 miles.

NOTE


Depending upon application universal joints may have two grease fittings each. It is necessary to apply grease to each fitting to properly lube the universal joint.

Drag Link

The drag link connects the steering box pitman arm to the steer axle. The movable joint (ball joint) uses sealed boots to prevent water intrusion. **DO NOT** rupture the boot when applying grease. Grease interval is six months or every 5,000 miles.


NOTE

It will be necessary to start the motorhome and turn the steering wheel to access fitting(s).

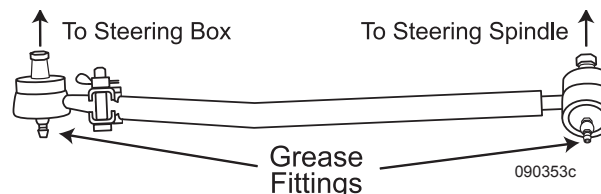


Center Link

The center link is located on the backside of the steer axle. The center link attaches the two wheels together causing the right front to track with the left front. Greasing interval is every six months or 5,000 miles.

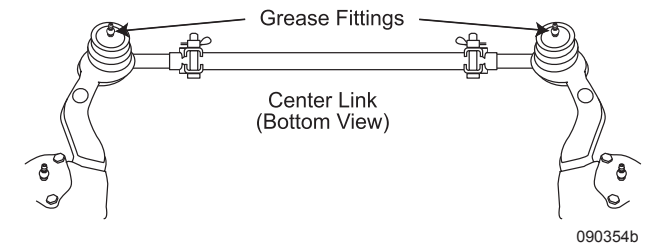

Steering Spindles

The steering spindles attach to the front axle and pivot on the kingpin. The wheel end assembly and brake system attach to the spindle. There

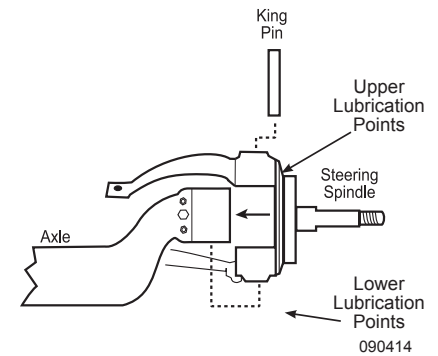

are upper and lower lubrication points for the kingpin. The drag link attaches to the roadside spindle. After initially lubricating the roadside and curbside kingpins, rotate the steering assembly lock to lock (full left to right) then move assembly back to center. This purges any remaining air pockets. Continue lubricating the kingpins until new grease purges with no air pockets. Greasing interval is every six months or 5,000 miles.


Control Arm Bushings

Control arms align the axles perpendicular with the frame. The panhard bar controls side to side motion of the axles in the frame. Control arm bushings and panhard bar bushings do not require lubrication.

Front Brakes


The slack adjuster and camshaft need to be lubed periodically to ensure proper brake operation. Lubricate every 10,000 miles or annually.

Typical Air Drum Brakes
- Lubricate until new grease appears at exit points.

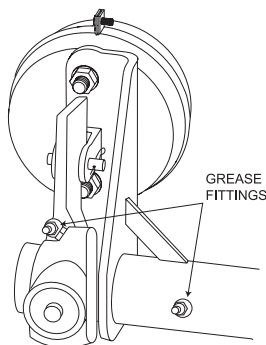

STEERING GEAR

The steering gear has been designed to provide long service life and simple service repair. The rack and sector shaft does not require center point adjustment. The clearance between the cylinder bore and the piston is closely controlled and a piston ring was added to better use the hydraulic oil supplied. With reasonable care and limited maintenance the steering gear will provide many miles of reliable performance. The bleeder valve is used on initial installation and replacement.

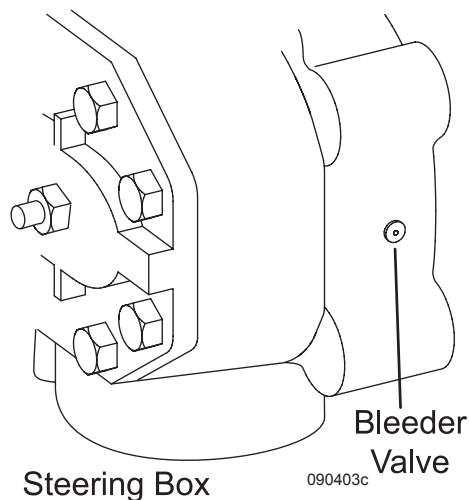

Power steering is provided by using hydraulic pressure to assist rotating the output shaft of the steering gear. Located at the end of the input shaft of the steering gear is poppet valve and worm drive. The poppet valve directs the hydraulic fluid pressure to a type of spool. The worm drive threads in the center of the spool. When in the center position, pressurized hydraulic fluid bypasses the spool. When a turn is made, the poppet valve shifts to one direction or the other, directing the hydraulic pressure to one side of the spool depending on turning direction. The hydraulic fluid is then cooled before returning to the reservoir.

NOTE


Inspect for signs of leakage when performing fluid level checks.

Changing the hydraulic filter in the engine compartment at regular intervals will help ensure trouble-free operation.

DRIVE AXLE & DRIVE SHAFT

Drive Axle:

The chassis drive axle is a single reduction axle. The differential gears consist of a hypoid pinion and ring gear set and bevel differential gears. The differential carrier can be removed from the axle housing as a unit in order to perform repairs.

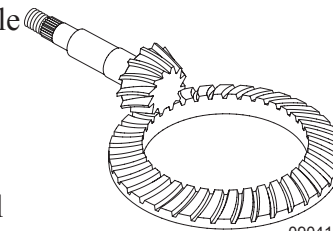

Ring and Pinion Gears

All power from the engine to the rear tires is transferred through the rear axle. For this reason, it is important that maintenance be performed on the axle as required to avoid premature wear of the gears and bearings in the axle.

Drive Axle Lubricant:

The rear axle is filled with synthetic gear oil meeting MIL-L-2105D specifications. Change interval is every 250,000 miles or 36 months, whichever occurs first.

During lubricant change, fine metal particles will be observed clinging to the magnetic fill and drain plugs of the axle. These particles are normal wear particles from the axle components, but will cause faster than normal wear of the axle components if allowed to circulate through the lubricant. It is recommended that the magnetic plugs be tested, if not replaced, at each lubricant change. These plugs should have sufficient magnetic strength to pick up a 1.5 pound weight of low carbon steel. Never replace a magnetic plug with a non-magnetic "pipe plug" as they will not keep the lubricant clear of metal particles or seal properly.


The level of lubricant in the rear axle should be checked every 30,000 miles or annually, whichever occurs first. This will ensure adequate lubricant in the axle for proper operation. Regular inspection of the drive axle lube levels is an essential maintenance procedure.

WARNING


Never place yourself under motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Proper Drive Axle Lubricant Level:

- ◆ With the motorhome parked on a level surface and rear axle warm, place a large container under axle.
- ◆ Clean the area around the fill plug, which is located approximately halfway up the axle housing bowl.
- ◆ Remove the fill plug and observe the lubricant level.
- ◆ The lubricant should be level with bottom of the hole.
- ◆ Important: The lube level close enough to the hole to be seen or touched is not sufficient. The lube must be level with the hole.
- ◆ Correct the level as necessary.
- ◆ Re-install the fill plug and tighten to 35 to 50 ft. lbs.

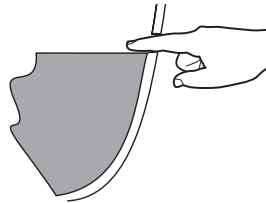

Correct Oil Level

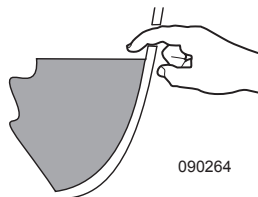

Incorrect Oil Level

To Drain and Replace Lubricant:

1. Place a large container under the axle.
2. Remove drain plug and allow axle to completely drain.
3. Properly dispose of oil.
4. Clean the drain plug and test (replace the drain plug if needed).
5. Install and tighten drain plug to 35 to 50 ft. lbs.
6. Clean the area around the fill plug from the axle-housing bowl.
7. Fill the axle with approved lubricant until the level is even with the bottom of the fill plug hole.



Fill Plug 090467b

WARNING

When checking or changing the lubricant, always ensure that the axle is not hot. Oil temperature 90° F or hotter can easily cause severe burns.

NOTE

When checking the lube level also check the housing breathers on top of axle housing. Clean the breathers if dirty or replace them if damaged.

Drive Shaft:

The drive shaft transfers the power produced by the engine to the drive axle. A worn or out of balance drive shaft causes chassis vibration that generally increases in intensity with road speed.

Lubrication Maintenance:

The drive shaft requires periodic lubrication maintenance. Lubricate the slip joint and universal joints every 5,000 miles or 6 months, whichever occurs first. Use NLGI #2 chassis lubricant.

NOTE

It will be necessary to move the motorhome forward or backward to access all fittings on the drive shaft.

Greasing the Drive Shaft Universal Joints:


1. Check the drive shaft for looseness. Repair if loose or worn.
2. Apply the specified grease at the grease fitting on the universal joint. Apply until new grease purges from all the seals.
3. If new grease does not purge at the seals, loosen the bearing cap bolts and re-grease until all four caps purge. If new grease still does not purge, disassemble and clean or replace the universal joint.

NOTE


Depending upon application universal joints may have two grease fittings each. It is necessary to apply grease to each fitting to properly lube the universal joint.

Greasing the Drive Shaft Slip Yoke and Splines:

1. Check the drive shaft for looseness. Repair if loose or worn.
2. With finger, cover the rear air hole so grease flows to the front seal. Apply the specified grease at the grease fitting on the slip yoke. Apply until new grease purges and forces finger away from the air hole in the end of the slip yoke.

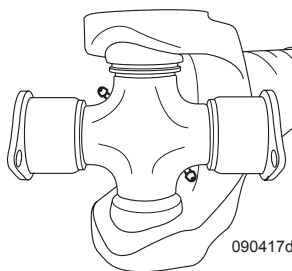

Dual Zerk U-Joint

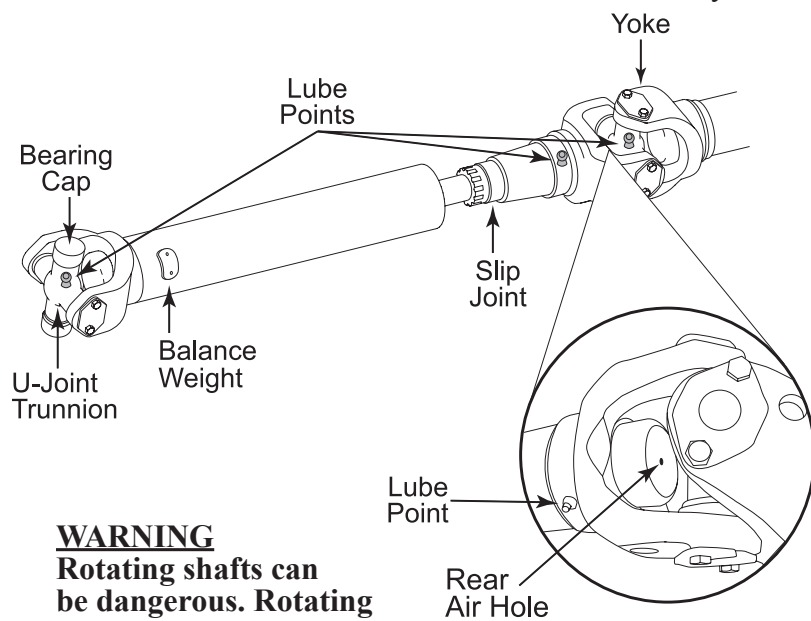

WARNING

Rotating shafts can be dangerous. Rotating shafts can snag clothes, skin, hair, hands, etc. causing serious injury or death. DO NOT work on or near a shaft with or without a guard when the engine is running.



U-Joint Angles Phasing & Driveline Balance

Correct U-joint working angles, U-joint phasing, and driveline balance is vital to maintaining a quiet-running drivetrain and long life of drivetrain components (including driveline components).

When in phase, the slip yoke lugs (ears) and tube yoke lugs (ears) are in line. Normally this is the ideal condition and gives the smoothest running shaft. There may be an alignment arrow stamped on the slip yoke and on the tube shaft to assure proper phasing when assembling these components. If there are no alignment marks, they should be added before disassembly of the shaft to assure proper reassembly.


Phasing is relatively simple on a two-joint set, be sure that the slip yoke lugs and the tube yoke lugs are in line.

The U-Joint working angle is the angle formed by the intersection of the driveshaft centerline and the extended centerline of the shaft of any component to which the U-joint connects. Because the double oscillating motion of a U-joint that connects angled shafts causes a fluctuating speed difference between the shafts, the effect created by the U-joint at one end of the shaft must cancel the effect created by the U-joint at the other end. This is done by making U-joint working angles at both ends of the driveshaft about equal, with the U-joints in phase.

If the yoke lugs at both ends of the shaft are lying in the same plane (a plane which bisects the shaft lengthwise), the U-joints will be in phase.


Any condition which allows excessive movement of a driveshaft will cause driveline imbalance: loose end yoke nuts, loose U-joint bearing cap retaining capscrews, worn U-joint trunnions, bearings and worn slip-joint splines.

Among the most common causes of U-joint and slip joint damage is lack of lubrication. To keep the motorhome operating smoothly and economically, the driveline must be carefully checked and lubricated at regular intervals.

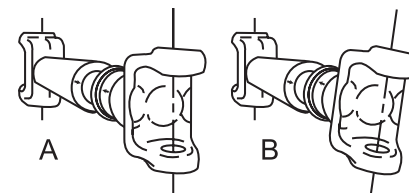

A. In Phase

B. Out of Phase

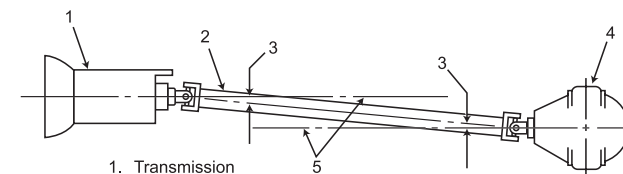

1. Transmission
2. No. 2 Drive Shaft
3. U-Joint Working Angles

4. Rear Axle
5. Extended Centerlines

090336

SHOCK ABSORBER

The shock absorber is a hydraulic device used to dampen suspension/ body movement. Road surface irregularities are compensated for by the shock absorber. The Roadmaster chassis incorporates the shock in the design of the exclusive air glide suspension system. This shock absorber is a telescopic, mono tube unit filled with nitrogen gas and hydraulic oil. The result of the mixture is uninterrupted damping for the smallest of wheel deflection.

By design, a self lubricating seal is used which will allow approximately 10% of the total oil capacity to pass onto the piston rod. The gradual process of oil loss does not affect the performance of the shock absorber during the service life. This process will be evident after a long period of service by an oil film on the body of the shock absorber. The appearance of a coating or film on the body or rod is completely normal, it is an indication the shock is functioning normally.

Road holding, handling, balance and braking characteristics all can be contributed to the shock absorber. The operating conditions for which the shock absorber must endure will determine the life span. However, since the only moving part is the piston rod, there are no springs, hinges or pins to wear out, get weak or deteriorate.



LEVELING - HYDRAULIC

The leveling system is designed to reduce sight selection problems and stabilize the motorhome when parked. The leveling system features a remote control panel (located near the pilot seat). The multiple warning system that consists of a Jacks Down

LED and warning alarm if a jack is down and the transmission is placed in gear or the park brake is released. The leveling system can be operated in manual or automatic modes.


Safety Features:

The leveling system has safety features to prevent a jack from extending during travel. The control panel will not activate until the following safety features are in place.

- ◆ The transmission is in Neutral.
- ◆ The parking brake is applied.
- ◆ The ignition switch is in the or On position.

Remote:

The remote control panel includes four switches that can extend the three jacks, an Auto switch, a MAN (manual) switch, a retract All Jacks switch and a power ON/OFF switch. A LED light next to a directional button indicates that position is low.

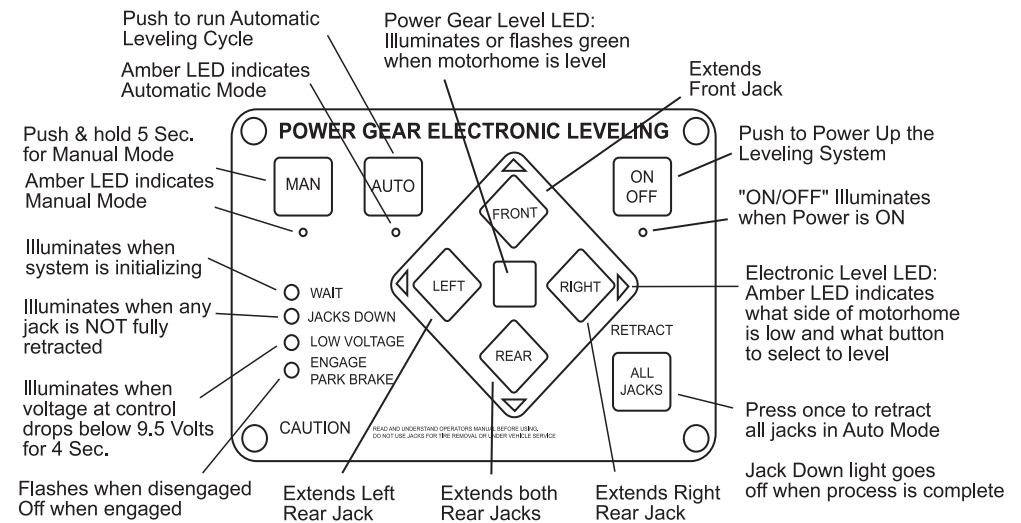

Indicator Lamps:

- ◆ **MAN** – Indicates system is in manual level mode.
- ◆ **AUTO** – Initiates Automatic level mode.
- ◆ **ON/OFF** – Turns the leveling system on or off.
- ◆ **WAIT** - Indicates system is initializing
- ◆ **JACKS DOWN** – Indicates one or more jack is extended.
- ◆ **LOW VOLTAGE** – Indicates chassis voltage is low.
- ◆ **ENGAGE PARK BRAKE** – Indicates the Park Brake is disengaged.
- ◆ The LED adjacent to any extend switch indicates that position is low.

CAUTION

The leveling jacks are not designed for changing tires. This can cause problems with the suspension system, frame alignment and damage to the windshield(s). Never use the jacks to elevate any wheel position off the ground.

CAUTION

DO NOT move the motorhome while the jacks are still in contact with the ground or extended. Damage to the jacks can occur.

Prior to Leveling

- ◆ Chassis battery voltage must be at least 12 Volts DC.
- ◆ Select a level site if possible, or park the motorhome with the front facing downhill.
- ◆ Apply the parking brake. Place the transmission in Neutral.
- ◆ Lower the air suspension (if applicable) by stepping on the brake several times until system air pressure is below 60 psi. With the ignition on, push and hold the Air Dump switch to lower the suspension. This reduces the amount the jack will need to extend before making contact with the surface.

CAUTION

Survey the area around and under the motorhome for obstructions that can damage the motorhome or undercarriage components before lowering the air suspension. Damage to the mud flap may occur if it is located over a raised area.

CAUTION

Ensure potential jack contact points are clear of obstruction or depression before operation. Keep all people clear of the motorhome during the leveling system operations. Never expose hands or other parts of the body near hydraulic leaks. Hydraulic lines are under high pressure. Oil leaks may cut and penetrate the skin causing serious injury.

CAUTION

Hot asphalt, gravel or dirt may not support the weight that is placed on the hydraulic jack pads. Place thick plywood under the jack pads to help disperse the weight. If blocking up a rear jack pad to gain added clearance when the motorhome is on a slope, place a wheel chock at the opposite set of rear wheels to prevent the motorhome from rolling.

NOTE

If additional height or surface support is needed, construct a 1' x 1' wooden block made from two pieces of $\frac{3}{4}$ " plywood for a total thickness of 1 $\frac{1}{2}$ ". Drill hole in corner and use awning wand to slide wooden block under jack pad.

Manual Leveling


The manual leveling mode can be used for leveling or stabilization preference. An indicator lamp adjacent to an extend switch indicates that jack position(s) is low.

Manual Leveling Operation:

- ◆ Follow the instructions in *Prior to Leveling*.
- ◆ Turn the ignition switch to On position.
- ◆ Press the ON/OFF button to turn the system on.
- ◆ Press and hold the MAN (manual) button for five seconds. Once the indicator lamp below the MAN button illuminates, the system is ready.

CAUTION

Prior to leveling the motorhome it is important that all jacks be in contact with the ground to stabilize and support the frame. No single jack should be solely used to level the motorhome. Applying an improper leveling process can cause excess torsion stress and/or twisting of the chassis, frame and body, resulting in damage to the windshield or an entry door malfunction.

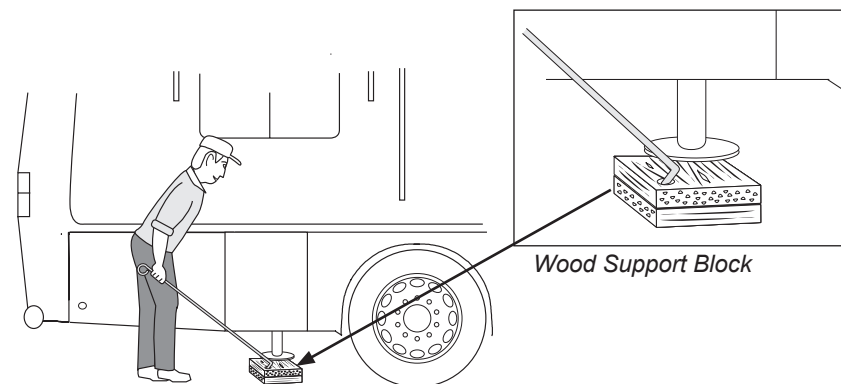

- ◆ Extend the front jack until contact with the surface is made. Extend an additional ½". This allows the front jack to act as a pivot point.
- ◆ Extend the jack position according to the indicator lamp. Example: If the indicator lamp is lit under Jack Extend Switch - Rear, the rear of the motorhome is low. Press and hold the Rear button. Both rear jacks will extend. Once level, the system will automatically stop. The Power Gear Level Light will illuminate. Release the switch. Pressing Right or Left will extend a single rear jack accordingly.
- ◆ Turn off the remote panel.
- ◆ Turn off the Ignition switch.

Automatic Leveling

The automatic function of the leveling system should only engage when the site is relatively level and solid to prevent excessive twist/stress to the frame. It is essential that there is no movement in the motorhome prior to and during the automatic leveling process.

Automatic Leveling Operation:

- ◆ Follow the instructions in *Prior to Leveling*.
- ◆ Turn the ignition switch to the On position.
- ◆ Press the **ON/OFF** button to turn the system on.
- ◆ Press the Auto switch. The pump motor activates and the appropriate jacks automatically extend and level the motorhome.


NOTE

A Jacks Down warning light will illuminate when the jacks are extended. The alarm will sound if the jacks are down and the park brake is released or transmission placed in gear.

- ◆ The motorhome is level when the LED's next to Jack Extend switches are off and the green Power Gear Level light is illuminated.
- ◆ Turn off the remote panel.
- ◆ Turn off the ignition switch.

NOTE

If additional height or surface support is needed, construct a 1' x 1' wooden block made from two pieces of ¾" plywood for a total thickness of 1½". Drill a hole in one corner and use the awning wand to slide the wooden block under the jack pad.

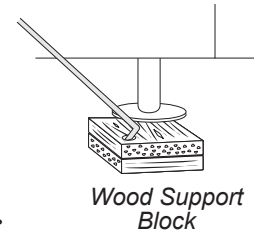

Retracting Leveling Jacks

- ◆ Turn the ignition switch to the On position.
- ◆ Confirm that the parking brake is applied.
- ◆ Turn On the remote panel.
- ◆ Momentarily press the All Jacks Retract button. If retracting in manual mode, the All Jacks button must be held until the Jacks Down LED goes out.


- ◆ Once the Jacks Down LED goes out, the jacks should be fully retracted. Make a visual inspection to ensure that all jacks have fully retracted before moving the motorhome.

INSPECTION

Before moving the motorhome always perform a visual inspection to be sure that all jacks have fully retracted. Remove any debris that may be on the jack pad.

If the jacks fail to extend or retract:

- ◆ Apply the park brake, turn the ignition to the On position and place the transmission in Park.
- ◆ If jacks still do not operate, check the leveling system fuse in the front distribution box.

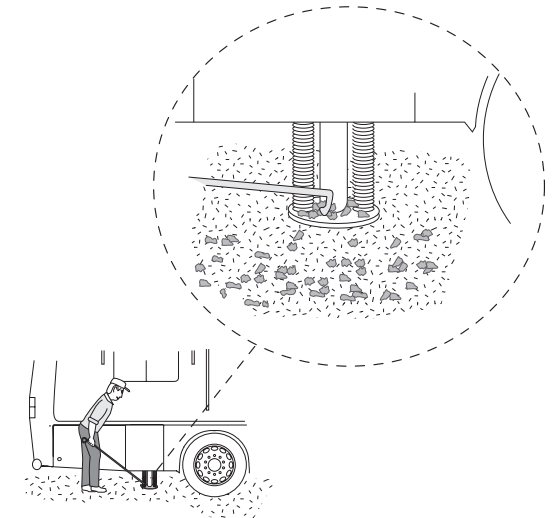

020185b

NOTE

The hydraulic pump is equipped with an internal thermal breaker for protection against overheating. If the pump is used repeatedly in a short period of time the breaker will trip. It resets automatically in 5 to 30 minutes.

Drive-away Protection:


With the jacks extended and the park brake is released or transmission placed in gear, a warning alarm will sound and all LEDs will illuminate. The jacks will automatically retract. A full visual inspection is required to confirm full retraction of jacks before moving motorhome.

Maintenance:

At weekly intervals, use 100% silicone spray on the jack rod. This will help prevent moisture damage to surface of the jack rod. If parked near coastal areas, apply more frequently. Occasional oil or grease on the extended jack rod is normal.


- ◆ Remove dirt and road debris from the jacks as needed.
- ◆ Check the fluid level every month. The fluid level should be within 1/4" of fill port lip and checked with all jacks retracted.
- ◆ Inspect and clean all hydraulic pump electrical connections every 12 months.

- ◆ For jacks equipped with a grease fitting at the bottom of the cylinder, two pumps of grease should be sufficient for 20 to 30 uses. **DO NOT** over grease. Damage to the rod seal will occur.
- ◆ Fluid change interval is 36 months.

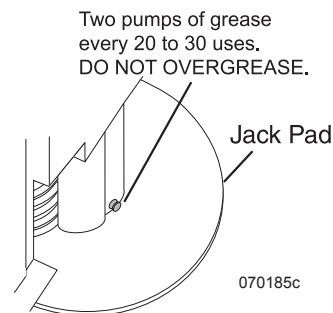**Adding Fluid:**

If the leveling system makes unusual noise or the alarm sounds when driving around corners or over bumpy roads, this indicates a low fluid level.

1. Chock all wheels for safety.
2. Ensure all jacks are retracted.
3. Unscrew the reservoir cap from the top of the pump. Slowly fill the reservoir with *Dexron 3 Mercon ATF* hydraulic fluid until 1/4" from the fill plug.
4. Replace the reservoir cap. The reservoir is now at the proper level.

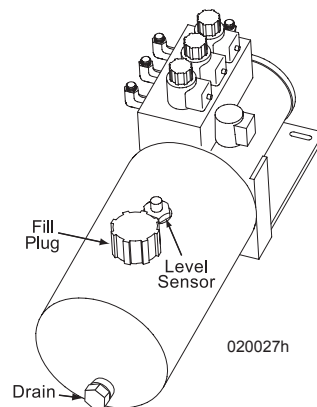**ENGINE - GENERAL INFORMATION**

The diesel engine operates differently from the conventional gasoline engine. Gasoline engines control engine speed using a butterfly throttle plate controlling air/fuel mixture inlet flow. As the throttle plate opens, vacuum created by the piston velocity draws the metered fuel/air charge into the combustion chamber, then ignites from a controlled electric ignition source. Closing the throttle plate limits the fuel/air supply, slowing engine speed, increasing intake manifold vacuum.

The diesel engine in the motorhome controls engine speed by varying fuel supply only. No throttle plates are used. An exhaust driven turbine system (turbocharger) compresses the fresh air supply into the engine. The fuel is injected under pressure into the combustion chamber. Ignition of fuel/air charge occurs from heat generated by rapid high compression. The turbo boost gauge registers amount of intake manifold pressure measured in lbs./in². Therefore, no intake manifold vacuum exists.

Diesel engine RPM (revolutions per minute) operating speeds are generally much lower than that of the gasoline engine. Peak torque and horsepower output values occur at much lower engine speeds. Idle speeds between the two engine types are similar, however maximum engine speeds are quite different. The gasoline engine generally is not regulated to a maximum engine speed. The maximum engine speed on a diesel engine is controlled by an engine speed governor set by the engine manufacturer.

STARTING PROCEDURE

Normal Starting

The engine is equipped with an intake manifold grid heater. The grid heater helps engine starting in cold weather. Intake manifold air temperature is monitored by the Electronic Control Module on the engine. If intake manifold temperature is below specified level (approximately 40° F.), the manifold grid heater will activate. Grid heater activation is indicated by the **WAIT TO START** indicator lamp.

WARNING

Use of ether starting fluids may cause an explosion upon grid heater activation.

To Start the Engine:

With the throttle in idle position, turn ignition to ON. Allow the WAIT TO START lamp to extinguish. Turn key to the start position. When the engine starts the grid heater will again energize for a time period determined by the Electronic Control Module. Allow the engine to idle with no load for three to five minutes. The engine coolant temperature should be up to normal operating range (140° F/60 ° C to 212° F/100° C) before operating the engine under full throttle.


NOTE

It is recommended to not idle the engine for long periods of time. Consistent periods of long idle wastes fuel and may cause engine damage.

Cold Weather

In sub-freezing or extreme cold, engine oil becomes thick and battery output is reduced. Thick oil, combined with less amperage available from the battery, increases difficulty in starting the engine.

Depending on ambient temperature it may be necessary to pre-heat the engine. Located in the coolant passage in the engine is a heating unit that operates from 120 Volt AC. If it is necessary to pre-heat the engine due to ambient temperature, it is recommended to activate the block heater the night before, allowing several hours for the block heater to warm the engine.

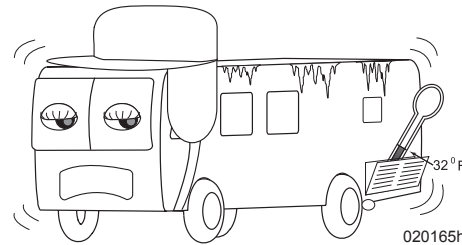

It is possible to operate diesel engines in extremely cold environments when the engine is properly equipped with the correct lubricants, fuels and coolant. Cold weather operation can be defined in two categories: Winter and Arctic.

WINTER (32° to -25° F) (0° to -32°

C): Use a 50% antifreeze to 50% water coolant mixture, use multi-viscosity oil meeting manufacturers specifications and fuel to have maximum cloud pour points 10° F (6° C) lower than the ambient temperature in which the motorhome operates.

ARCTIC (-25° to -65° F) (-32° to -52° C): Use a 60% antifreeze to 40% water coolant mixture. Use oil meeting manufacturers specifications and fuel to have maximum cloud pour points 10° F (6° C) lower than the ambient temperature in which the motorhome operates.

INFORMATION

Refer to the engine manufacturers Owner's Manual for more detailed information.

NOTE


The engine is filled with Citgo SAE 15-40w multi-viscosity oil from the factory. Generally this will start the engine in temperature down to 15° F. If the engine has normalized to a temperature below 15° F it will be necessary to pre-heat the engine before starting.

CAUTION

Upon cranking an engine in cold temperature, the starter may rapidly engage and disengage. If this occurs STOP attempting to crank the engine to prevent starter damage. Pre-heat the engine before making further attempts to start.

Block Heat:

The block heater is rated between 850 and 1500 watts, depending on engine size. For efficiency, hook to shore power or plug the block heater cord to a separate power cord rated for 15 Amps and a GFCI protected outlet rated at 20 Amps. The engine may require several hours of pre-heating before starting. It is recommended to start preheating the engine the night before departure.

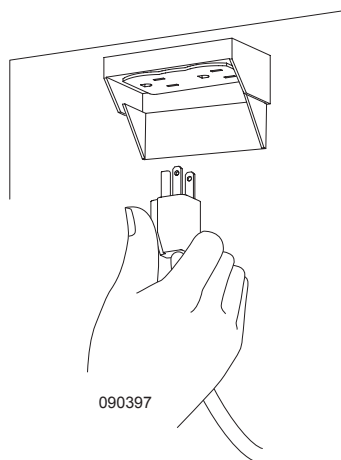

Located roadside rear compartment

To Use the Block Heater:

- ◆ Hook to shore power and plug the block heater cord into the block heater receptacle (both located in roadside rear compartment).

ENGINE OIL**Cummins Engine Requirements:**

The maintenance guidelines in the Cummins Operation & Maintenance Manual are the recommendations for the engine to extend the engine life and improve performance, resulting in cost efficient operations. A good maintenance schedule begins with a daily awareness of the engine and its various systems.

A high grade 15W-40 multi-viscosity heavy duty lubricating oil meeting Cummins Engineering Specification CES 20071 or CES 20076, American Petroleum Institute (API) specification CH-4 which can be used as an alternative to CES 20071 is recommended. Lubricating oils meeting API CG-4 specifications may be used at a reduced drain interval. The engine uses Citgo 15W-40 heavy duty engine lubricating oil that meets Cummins specifications. A critical factor in maintaining engine performance and durability is the use of high grade multigrade lubricating oil and strict adherence to the maintenance service intervals.

A straight weight or monograde lubricating oil is not recommended. Shortened drain intervals may be required as determined by a close monitoring of the lubricating oil condition by means of an oil sampling program. The use of oil analysis to extend drain interval is not recommended. There are numerous variables which is the basis of the recommendation.

Synthetic oils API category III specifications are recommended for extreme cold temperatures only. Low viscosity oils used for winter operations will aid in starting. Synthetic oils, or oil with adequate low temperature properties used for Arctic operations where the engine cannot be kept warm when shut down, will aid in starting. The use of synthetic oils should not be used to extend drain intervals. Extended oil change intervals can decrease engine life and possibly affect the engine warranty.

Oil additives should not be used unless the oil supplier or oil manufacturer has been consulted and provided positive evidence or data establishing satisfactory performance in the engine.

NOTE


The engine does not require a “break-in” procedure.

INFORMATION

Refer to the Engine Manufacturers Owners Manual for details on the oil maintenance schedule.

NOTE

The Engine is filled with Citgo SAE 15W-40 multi-viscosity oil from the factory.

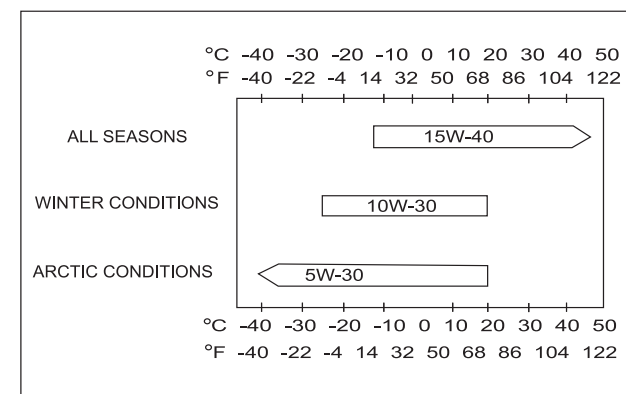

Lubricating oil recommendations and specifications. 070201

ENGINE SHUTDOWN


Allow the engine to idle three to five minutes after a full load operation. This allows adequate cool down of pistons, cylinders, bearings and turbocharger components. Under normal driving conditions, exiting the highway is generally lighter engine operation and the need for the three to five minutes is not necessary.

Extended Engine Shutdown

When the motorhome has been sitting for 30 days or more, verify all the fluid levels are correct. Follow the normal starting procedures. If the oil pressure gauge does not register within 15 seconds, shut off the engine immediately to avoid damage. Consult the engine manufacturer's owner's manual for guidelines on troubleshooting low oil pressure, or contact a qualified service technician. Allow the engine to idle for five minutes before operating under a load.

COOLANT SYSTEM

A fully formulated antifreeze or coolant containing a pre-charge of Supplemental Coolant Additives (SCA) is recommended to significantly simplify coolant system maintenance. The difference between fully formatted antifreeze and fully formatted coolant is the percentage of water. Both contain balanced amounts of antifreeze, SCA, buffering compounds and a percentage of good clean quality water. The antifreeze of coolant must meet ethylene glycol or propylene glycol recommendations.

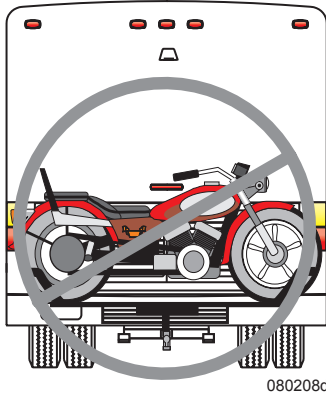

080208d


Clean, quality water in a 50/50 ratio (40 to 60% working range) mixed with fully formatted antifreeze will provide protection from -34° F to 228° F. The 50/50 mix ratio must be premixed prior to being put in the system. Placing antifreeze and water in the cooling system is not recommended. Consult the manufacturer's OEM for more details.

Coolant System Overheated:

If the engine is overheated do not pour cold coolant into the hot engine. Sudden change in temperature may crack the cylinder head or block. If the engine is hot, fill slowly to prevent rapid cooling and distortion of engine castings.

Coolant System Frozen:

If the coolant system freezes, the motorhome must be towed to a warm area until completely thawed.

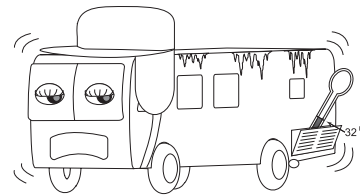

020165h

If the engine is operated when the cooling system is frozen it can result in engine overheating due to insufficient coolant circulation. Once thawed, check engine, radiator and related components for damage caused by expansion of frozen coolant.

NOTE

An over concentration of antifreeze, or the use of high silicate antifreeze, can cause damage to the coolant system and engine. Antifreeze is essential in every climate.

WARNING

Do not continue engine operation when


engine warning light illuminates and the engine begins to de-rate in power output. Continued operation will result in engine damage.

NOTE

Consult the engine manufacturer owners guide for more detailed information.

Engine Coolant Reservoir:

The engine coolant reservoir is connected to the radiator by a hose. When the motorhome is driven, coolant heats and expands. A portion of fluid, displaced by expansion, flows from the radiator into the reservoir. When the engine is stopped the coolant cools and contracts. Coolant is drawn back in the radiator by a vacuum. Thus, the radiator is kept filled with coolant to the desired level at all times resulting in increased cooling efficiency. The coolant level should be at, or slightly above, the appropriate mark on the reservoir tank when the system is cold.

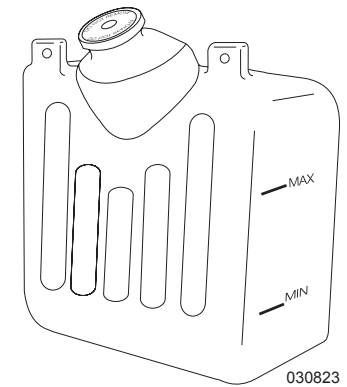

030823

Coolant Reservoir

CAUTION

To avoid scalding hot steam or coolant from being released from the engine cooling system, never remove the reservoir cap while the engine is running or hot. Failure to follow this warning may result in damage to the engine cooling system and possibly cause severe personal injury.

Coolant Levels:

- ◆ Check the coolant level daily or when refueling.
- ◆ If the coolant is below the minimum level, the low coolant alarm will sound and the low coolant light will appear on the dash.

INSPECTION

Stop the motorhome and inspect the coolant level before continued operation.

INFORMATION

Refer to the Engine Manufacturer Owner's Manual for details on engine coolant maintenance.

NOTE

Have an inspection performed of the surge tank cap seal and have the cap pressure tested at each oil change.

Coolant Types:

- ◆ Cummins- BTE CS5011 + SCA.
- ◆ Texaco 50/50 with bitterant + 2qts SCA (factory).


INFORMATION

Refer to OEM manual for detailed antifreeze information.

Charge Air Cooler

The diesel engine uses compression to ignite the fuel/air charge. To increase compression inside the combustion chamber (resulting in increased power output) a turbocharger is added to the engine. The turbocharger is a paired housing assembly with impellers inside each

housing connected by a common shaft. One impeller is propelled by the engine exhaust, which drives the other impeller. The function of the other impeller is to increase compression inside the combustion chamber by forcing air into the intake manifold.

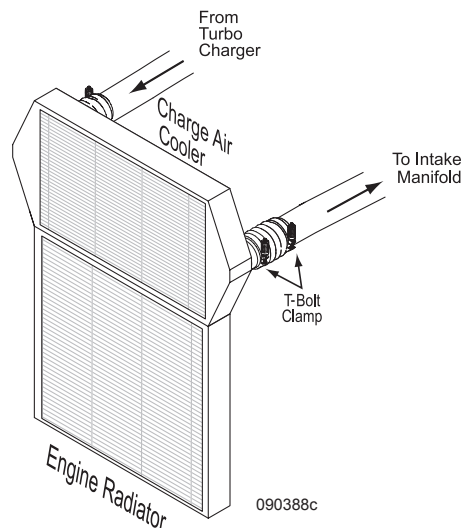

This process works well, however, the intake air charge is heated two different ways: through convection by the exhaust gases driving the turbocharger and when air is compressed. This negative effect inside the combustion chamber results in lost power potential. Therefore, a Charge Air Cooler (CAC) is installed to cool the intake air before it enters the engine. The CAC performs the same function as a radiator, cooling air instead of liquid. Ambient air passing through the CAC will cool the engine intake air charge.

After leaving the turbocharger, intake air is compressed and heated to approximately 300° to 375° F., depending on the engine load and throttle position. Before air enters the intake manifold, the CAC cools the intake air

temperature to the engine manufacturer specifications. Lowered intake air temperatures reduce exhaust emissions, improve fuel economy and increase horsepower. The CAC will continually expand and contract up to ¼” as throttle increases and decreases.

Cleaning and Maintenance:

- ◆ Regular maintenance includes draining the engine coolant, flushing/cleaning the cooling system, **inspecting** the water pump standpipe, replacing the thermostat, gasket and seal, and replacing the coolant and SCA element.
- ◆ **Inspect** the charge air cooler every six months and remove dirt and debris that may block the fins. If the motorhome develops an oil leak, there is a possibility that the oil will coat the fins of the CAC. Dust will adhere to the oil film, clog the fins and reduce cooling efficiency. When the oil leak is repaired, the CAC must be thoroughly cleaned.
- ◆ During each oil change **inspect** the engine side of the radiator/CAC assembly for foreign objects that may cause restriction.
- ◆ Spraying degreaser on the charge air cooler, as well as using a steam cleaner, will not damage the CAC. **However, pressure washer and steam cleaner nozzles placed too close to the CAC can bend the fins.** The recommended cleaning procedure for the CAC and the radiator is to use a bucket of mild soap and water. Carefully wash with a bristle brush then rinse using a garden hose, with minimum water pressure, standing back a distance to avoid bending the fins.

- ◆ When performing maintenance, it is also necessary to **inspect** other components of the cooling system. The charge air cooler and radiator also requires an **inspection** for cracks, broken welds, secure mounting, and general cleanliness.

Coolant Hoses:

Rotten, swollen and worn hoses, as well as loose connections, are frequent causes of coolant system problems. Overheating can be caused by a collapsed hose or a clog caused by rubber shedding from a rotten hose. Replace any hose found to be cracked, swollen or damaged. Connections should be **inspected** periodically and hose clamps tightened.


Every 12 months:

Inspect all hoses, clamps, and fittings for leaks due to cracking, softness, and loose clamps/fittings. Look for signs of fluid leaks, damaged end fittings, ballooning, chafed, kinked, or crushed hoses, and loose clamps and fittings. Correct any deficiencies found.

EXHAUST BRAKE

The exhaust brake system is an auxiliary braking device attached directly to the engine turbocharger. A switch on the driver's console operates the exhaust brake. The exhaust brake will operate when the switch is on and the throttle is released.

When the exhaust brake is activated, a flapper inside the

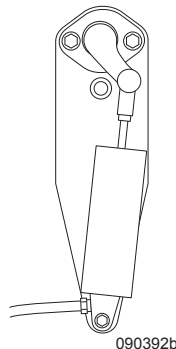

exhaust brake moves and restricts the flow of exhaust gases. This causes an increase of exhaust pressure within the engine. Increased exhaust pressure slows engine speed. The amount of engine braking power developed is related to engine speed (RPM), so the engine braking effect increases with higher engine RPM.

The exhaust brake is wired to the electronically controlled transmission. When the exhaust brake is activated going down a hill, it will help control road speed or sufficiently slow the road speed until the Allison Transmission can automatically downshift to the next lower gear. Downshifting automatically occurs from high gear down through second gear. Certain road conditions and engine speeds may require manually shifting the transmission in order to generate adequate engine RPM and increase the engine brake effect.

NOTE

The brake lights will illuminate while the Exhaust Brake is applied.

NOTE

Activating the Exhaust Brake switch will cancel the cruise control.


TRANSMISSION

The Allison World transmission incorporates the **World Transmission Electronic Control (WTEC)** system. The system is comprised of five major components connected by a wiring harness: the Electronic Control Unit (ECU), engine throttle position sensor, three speed sensors, remote shift selector (keypad) and the control module. The ECU processes

information received from the throttle position sensor, speed sensor, pressure switch and shift selector to provide optimum shift quality. This is accomplished by matching transmission and engine RPM during a shift to establish a desired shift profile within the ECU. Another feature of the transmission is the ability to “learn” or “adapt.” The electronic control system optimizes shift quality by using “Adaptive Shifting.” A wide variety of varied shift conditions is required before optimizing shift quality. Generally, five typical shifts of a consistent shift type are needed to optimize shift quality.

Shift Selector

The keypads on the shift control are **R** (Reverse), **N** (Neutral), **D** (Drive), Arrow up, Arrow down, Mode button. A digital display window shows gear selection, various transmission modes, oil level and transmission fault codes. Generation 4 keypads have a split screen displaying

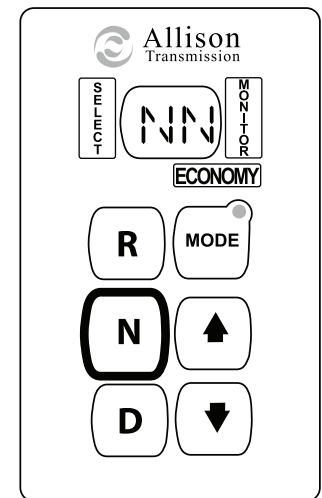

080355g

two number sets while in drive. The left number displays the highest forward range available. The right number is the range that the transmission is currently in. NN (Neutral) will appear in the display window when the ignition is turned On. This indicates the transmission is in neutral and it is safe to start the crank.

If the NN does not display when the ignition is turned on, there is no power to the shift selector and the transmission will not allow the engine to start. No display is an indicator of electrical problems with the engine batteries, ECU or the shift selector.

Keypad Functions:

- ◆ Select the Reverse gear by pressing **R**. RR will display.
- ◆ Select Neutral by pressing **N**. The area around the **N** button has a raised ridge so the driver can orient his hand to the push buttons by touch without looking at the display.
- ◆ Select Drive range by pressing **D**. The highest forward gear (6th gear) appears in the display and the transmission will shift to first gear indicated as 6 1.
- ◆ The Up and Down arrow buttons are used to select a higher (if not in “6”) or lower (if not in “1”) forward range. These buttons are not functional in Neutral or Reverse.
- ◆ When in Drive, one press changes the gear range selected by one. If the button is held continuously, the selected range will continue to change up or down until the button is released or until the highest/lowest possible range of gears is selected.
- ◆ The Mode button enables a secondary shift point to be selected. This is commonly referred to as Economy mode. Economy mode affects the upshift schedule 3-4, 4-5, 5-6 and downshift schedule 6-5, 5-4, 4-3. During highway driving, with the cruise control set

between 55 and 65 m.p.h., setting the transmission to economy mode will eliminate about 99% of transmission downshifts from sixth to fifth when incurring a slight incline or overpass.

CAUTION

Do not use Economy Mode in heavy stop and go traffic or mountainous terrains. Frequent shifting while using heavy throttle occurs in Economy Mode and increases transmission fluid temperature. Exit Economy Mode until road conditions improve.

NOTE

The Mode button is used by the service technician to access diagnostic codes when troubleshooting. The diagnostic circuitry must be enabled to display.

CAUTION

Engine temperature may rise when ascending long grades using full throttle. Towing a load will increase the demand on the engine. If this occurs, manually shift the transmission to the next lower gear and use less throttle. The engine will use less fuel and RPM should increase.

NOTE

The transmission will not accept a manually selected gear change to occur if the gear selected is out of the specified operating range.

NOTE

The transmission will not shift into gear from Neutral if the engine RPM is at or above 900. The display will flash “66” indicating the engine RPM is excessive. Select “N” and lower engine RPM.

Check Tans Indicator

The electronic control system of the transmission is programmed to inform the operator of a problem with the transmission system and reacts automatically to protect the operator, motorhome and transmission. When the Electronic Control Unit (ECU) detects a DO NOT SHIFT (DNS) condition the ECU restricts shifting, turns on the CHECK TRANS light in the instrument panel and registers a fault code.

NOTE

For some problems, fault codes may be registered without the ECU activating the CHECK TRANS light. An Allison Transmission authorized service outlet should be consulted whenever there is a transmission related concern. They have the equipment to check diagnostic codes and correct problems which may arise.

Each time the engine is started the CHECK TRANS icon will light, then turn off after a few seconds. This momentary lighting is to indicate that the status light circuit is working properly. If the CHECK TRANS light does not illuminate during start up, or if the light remains on after start up, the transmission system should be checked immediately.

Continued illumination of the CHECK TRANS light during vehicle operation (other than start up) indicates that the ECU has signaled a diagnostic code. Illumination of the CHECK TRANS light is accompanied by a flashing display from the shift selector. The shift selector display will show actual range attained and the transmission will not respond to shift selector requests.

Indications from the shift selector are provided to inform the operator that the transmission is not performing as designed and is operating at reduced capabilities. Before turning the ignition off, the transmission may be operated for a short time in the selected range in order to “limp home” for service assistance. Service should be performed immediately in order to minimize potential damage to the transmission.

When the Check Trans icon illuminates the keypad will not respond to command and the transmission generally will downshift to 4th gear. The torque converter will not “lock-up” and engine speed is automatically reduced. Direction changes (i.e. forward to reverse) will not be allowed. Locate a safe secure place to park the motorhome. If the engine is shut off, then engaged after a Check Trans indication, the transmission remains in Neutral until the fault causing the Check Trans light has been corrected.

Diagnostic Codes:

The shift selector can be used to display transmission malfunctions as numerical codes. Each code is a two-digit main code and a two-digit sub code. These codes will fall in two classes: active and inactive. Active codes are codes currently affecting the ECU process and transmission operation. Inactive codes are retained in memory but may not affect the ECU process or transmission operation. A service technician will activate Diagnostic mode or hook an electronic display (Pro-Link) to the data plug to retrieve diagnostic codes. A maximum of five codes, D1 to D5, may be listed at one time. The highest priority code will be listed in D1. The Mode button will enable selection of sequential

codes. Allison 4th Generation controls list each code consisting of five characters. The first being a letter followed by a four digit number string. The most severe or recent code is listed in the ECU memory first with a maximum of five codes being d1 to d5 possibly listed at the same time. When new codes are added, the oldest inactive codes will be dropped.

To Display Diagnostic Codes:

- ◆ Stop the motorhome at a safe location.
- ◆ Apply the parking brake.
- ◆ Simultaneously press the up and down arrows once to enter oil level display mode. Then press the up and down arrows again to enter diagnostic mode.
- ◆ The codes will display one digit at a time or two characters at a time on 4th Generation controls.
- ◆ Press the mode button to scroll through the codes.
- ◆ Record all diagnostic codes that are displayed. The codes then can be used by an Allison Service Center for evaluation and repair.
- ◆ Inactive codes can be cleared by holding the Mode button for approximately three seconds. 4th Generation controls require holding the Mode button for ten seconds to clear both inactive and active codes.

Some codes are self-clearing while others will require service or ignition on/off cycles to clear.

Periodic Inspections

The Allison MH Series requires very little maintenance. Careful attention to the fluid level, electrical connections and hydraulic hoses is very important.

The transmission should be kept clean for easy inspection. Make periodic checks for loose bolts and leaking fluid. Check the condition of the electrical harnesses regularly. Check the engine cooling system occasionally for evidence of transmission fluid that would indicate a faulty oil cooler. Report any abnormal condition to an Allison Service Center.

Prevent Major Problems:

Help the control system oversee the operation of the transmission. Minor problems can be kept from becoming major problems if an Allison Transmission Service center is notified when one of these conditions occur:

1. Shifting feels odd.
2. Transmission leaks fluid.
3. Unusual transmission-related sounds (sound made by normal engine thermostatic fan cycling when climbing a long grade with a heavy load are often mistaken for transmission-related sounds).
4. The Check Trans indicator comes on frequently.

TRANSMISSION FLUID & FILTERS

A small tag has been attached to the dipstick identifying that the transmission is filled with TranSynd™ synthetic transmission fluid. A remote fill is located at the back of the engine and a transmission check/fill is located on the engine.


Fluid and Filter Change Interval:

The transmission has two filters: a main filter and a lube filter. Change the main filter at the first 5,000 miles.

Thereafter follow

the service intervals listed in the transmission **OEM**

(Original Equipment Manufacturers) manual. Fluid and filters may require changing earlier than recommended in the transmission OEM manual, depending on the severity of operating conditions. Fluid must also be changed whenever there is evidence of dirt or high temperature operation as indicated by discoloration, strong odor or fluid analysis. Local conditions, severity of operation or duty cycle will dictate more or less frequent service intervals.

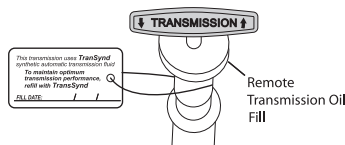

Located inside rear engine access

CAUTION

DO NOT mix Dexron III® transmission fluid with TranSynd™ Synthetic transmission fluid.

NOTE

Be sure to retain the receipt for proof of the initial Main filter change. Refer to the Allison transmission owner's manual or contact an authorized Allison service center for service intervals.

Proper Fluid Levels:

Transmission fluid cools, lubricates and transmits hydraulic power. Proper fluid levels must be maintained at all times. If fluid level is too low, the converter and clutches do not receive an adequate supply of fluid. If fluid level is too high, the fluid can aerate. Aerated fluid can cause the transmission to shift erratically or overheat.

An **Oil Level Sensor (OLS)** is built into the transmission. The fluid level can be checked easily and cleanly using the shift selector. Check the transmission fluid level before each trip and after removing the motorhome from storage.

Fluid Level Check from the Shift Selector:

To Enter Oil Level Sense Mode:

- ◆ Park the motorhome on a level surface. Place the transmission in “N” and set parking brake.
- ◆ The transmission temperature must be at least at operating temperature or an error code will appear.
- ◆ The motorhome must be stationary and in Neutral for approximately two minutes to allow the fluid to settle in the sump.
- ◆ The engine must be idling lower than 800 RPM.
- ◆ Simultaneously press the Up and Down buttons once.

The transmission is now in Oil Level Sense mode. The display will indicate one character at a time. An “o” followed by “L” represents oil level check mode. One of the following will be indicated:

Common Oil Level Fault Codes

Display	Cause of Code
o,L - O,X	Setting time too short
o,L - 5,0	Engine speed (RPM) too low
o,L - 5,9	Engine speed (RPM) too high
o,L - 6,5	Neutral must be selected
o,L - 7,0	Sump fluid temperature too low
o,L - 7,9	Sump fluid temperature too high
o,L - 8,9	Output shaft rotation
o,L - 9,5	Sensor failure

- ◆ “o K” represents the level is okay.
- ◆ “Lo” represents a low fluid level followed by a numeric indication of the number of quarts needed fill the sump.
- ◆ “HI” represents an overfull condition followed by a numeric indication of the number of quarts the sump is overfull.
- ◆ A countdown of flashing numbers indicates the fluid is still settling. When the fluid has stabilized in the sump, the true level will be indicated.
- ◆ If an “o” “L” “-” followed by a number displays, the oil level sensor could not read the level due to one of conditions listed in the “Common Oil Level Fault Codes” chart.
- ◆ Exit by pressing “N.”

Cold Check - Manual Check Procedures:

The concept of a cold check is to determine adequate fluid level for safe operating such as after a fluid and filter change. A cold check should be performed after transmission maintenance or service until a hot fluid level check or fluid level check from the shift selector can be performed.

To Check the Fluid When Cold:

- ◆ Park the motorhome on a level surface. Set the parking brake.
- ◆ Chock the wheels to prevent the motorhome from moving.
- ◆ Start the engine.
- ◆ Allow the engine to run at idle (500 to 800 RPM) for one minute.
- ◆ Apply the service brakes and shift to **D (Drive)**, then to **N (Neutral)** and next to **R (Reverse)** to fill the system. Shift the transmission to **N (Neutral)** and release the service brakes. Allow the engine to idle at 500 to 800 RPM.
- ◆ Remove the dipstick and wipe clean. Reinsert the dipstick fully into the tube, then remove to check fluid level. Repeat to verify reading, if needed.
- ◆ Safe operating level is anywhere within the Cold Check band on the dipstick. This allows safe operation of the transmission until a Hot Check or fluid level check from the shift selector can be performed.
- ◆ If the level is not within this band, add or drain the fluid as necessary to put the level to the middle of the Cold Check band.
- ◆ Perform a fluid level check from the

shift selector or a Hot Check at the first opportunity when normal operating temperatures are reached.

CAUTION

Low or high fluid level can cause overheating and irregular shift patterns. These conditions can damage the transmission if not corrected.

Fluid Levels - Hot Check

Fluid level rises as temperature increases. Fluid must be hot to ensure an accurate check. Be sure fluid has reached normal operating temperature. If a transmission temperature gauge is not present, check the fluid level when the engine water temperature gauge has stabilized and the motorhome has been driven for at least one hour.

- ◆ Park the motorhome on a level surface and shift to **N (Neutral)**. Apply the parking brake and allow the engine to idle (500 to 800 RPM).
- ◆ After wiping the dipstick clean, check the fluid level. Safe operating level is anywhere within the Hot Run band on the dipstick.
- ◆ The width of the Hot Run band is approximately one quart of fluid at normal temperature range.
- ◆ If the level is not within this band, add or drain the fluid as necessary to put the level within the Hot Run band.
- ◆ Ensure that fluid level checks are consistent. Check the level more than once. If readings are not consistent, ensure the transmission breather is clean and not clogged. If readings are still not

consistent, contact the nearest Allison Service Center.

FUEL SYSTEM
Fuel Requirements

Low sulfur #2 diesel fuel or #1 and #2 commercial winter blend diesel fuels are the most common commercially available and recommended for use.

The use of #2 diesel fuel will result in optimum engine performance. Try to obtain fuel from sources that are serviced often such as large truck service facilities. The fuel supply is fresh and the possibility of introducing contaminants or water into the fuel system is reduced. It is important to not empty the engine of fuel. The fuel system on the engine is sensitive to air. If the engine is allowed to run out of fuel, the fuel system will need to be thoroughly primed before the engine will start. Refer to the Fuel Filters article for priming instructions.

WARNING

DO NOT mix gasohol with diesel fuel. This mixture can cause an explosion.

NOTE


If the engine has run out of fuel it will need to be primed. Refer to Fuel Filters for instructions on priming the fuel system.

NOTE

Due to the precise tolerances of diesel injection systems, it is extremely important that fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors. Fuel additives for lubricity are not recommended. There are numerous diesel fuel additives to help remove moisture from fuel, prevent microbe growth and to prevent gelling during cold weather. Before adding any type of fuel additive or extender, consult the Manufacturer's Owner's Manual.

Fuel Tank

The diesel fuel tank is made of aluminum. Pick-up and return lines are placed at opposite ends of the tank to inhibit fuel aeration. The engine pickup tube is cut at a 45° angle to allow optimum flow to the engine. The generator and optional Aqua-Hot intake tubes are set to approximately ¼ of a tank. This will prevent depleting the fuel supply while dry camping.

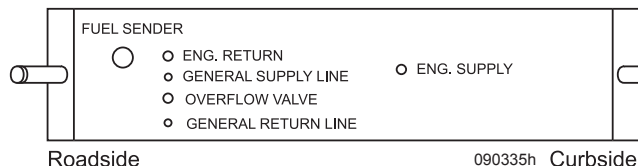


The bottom of the tank is made in a “V” configuration allowing the engine pick-up tube access to almost all available fuel in the tank. Internal baffles slow fuel slosh. A check valve placed at the bottom of the baffle, at the end of the tank with the pick-up tube, prevents fuel starvation through long corners when fuel supply is low.

NOTE

Fill the fuel tank if the motorhome is going to be stored for any length of time to reduce the amount of potential condensation. After storage, check the vent tube for blockage. It is not uncommon for insects to plug the vent tube. If pressure or vacuum exists when the fuel cap is removed, the vent tube may be blocked. The end of the vent tube is located on the curbside of the fuel tank, near the bottom.

Fuel Sender

The Centroid fuel sender has no moving parts and works by measuring electrical property between inner and outer tubes in the tank. The more fuel between the tubes the higher the reading. Electronics in the head of the sender convert the capacitance to current to drive the fuel gauge.

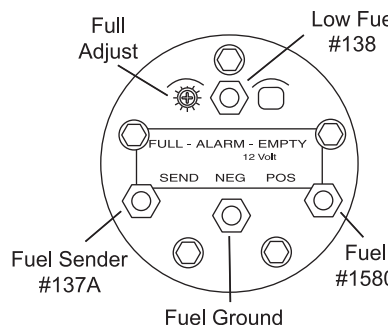**Connections:**

The Centroid sender has four connections:

1 and 2 - Positive (POS) and Negative (NEG): Battery voltage to run the electronics in the sender head.

3 - SEND: Connects to the SEND terminal of the gauge on the dash.

4 - ALARM: Makes a connection internally to the negative (NEG) terminal when the low fuel alarm level is reached (when the fuel gauge is reading about 1/8 tank). This turns on the fuel indicator on the liquid crystal display on the speedometer and is not adjustable.

Adjustments:

The Centroid sender has two adjustments:

1 - EMPTY: Adjusts for length of sender. It is set at the factory, covered with a sealant and should not be changed.

2 - FULL (Full Adjustment): The full adjustment can be used to correct for slight differences between fuel meters. During installation it was factory calibrated and does not need re-adjustment.

The correct adjustment technique, with a full tank of fuel, is to start with the full adjustment screw completely clockwise. This should cause the reading to be above full. Adjust slowly, rotate counterclockwise, until the full mark on the gauge is reached. The intent is to always adjust downscale rather than upscale.

Troubleshooting:

A. Electronic Output: The sender has a transistorized output to prevent an ohmmeter from getting a correct reading of output resistance.

B. Fuel Only: The sender will not work correctly in conducting fluids such as water (it will read above full all the time in water). One possibility is that when there is a constant above-full reading there may be water in the bottom of the fuel tank.

C. Contact Centroid: Probably 90% of the return Centroid tests work okay on the bench. If you have incorrect readings contact Centroid (telephone: 800-423-3574, or preferably, fax: 386-423-3709) with the symptoms. A short, “fill in the blanks” troubleshooting test is provided to test the sender. It is easier to find the problem that way than after the sender has been removed from the system, since the problem is not necessarily with the sender.

Fuel Lines & Hoses


Make a visual check for fuel leaks at all engine-mounted fuel lines, connections and at the fuel tank pick-up and return lines. Leaks in this area may best be detected by checking for accumulation of fuel under the tank. Engine performance and auxiliary equipment is dependent upon the ability of flexible hoses to transfer lubricating oil, air, coolant and fuel. Maintenance of hoses is an important step in ensuring efficient, economical and safe operation of the engine and related equipment.

INSPECTION

Check hoses for leaks daily as part of the pre-start inspection. Check all fittings, clamps and ties. Ensure the hoses are not touching shafts, couplings or heated surfaces, including exhaust manifolds, sharp edges or other obvious hazardous areas. Vibration from the engine and road can move or fatigue clamps and ties. To ensure continued proper support, inspect fasteners frequently and tighten or replace them as necessary.

Fuel Filters

Two filters are used for the engine: a primary and secondary filter. The primary filter is located roadside behind the air conditioner condenser; the secondary filter is found in the rear engine compartment. Prime the fuel system when filters are changed or if the engine has run out of fuel.

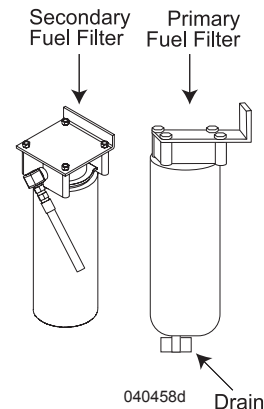

NOTE

It is recommended to wear gloves and old clothing when working with diesel fuel. Avoid getting fuel in the interior of the motorhome.

Filter Maintenance Intervals:

- ◆ Change the primary fuel/water separator filter every six months or every 15,000 miles or at the first indication of power loss.

- ◆ Refer to the engine OEM manual for service intervals of the secondary fuel filter.

Water in Fuel:

If water in fuel is found in the primary filter, **DO NOT** continue engine operation. Fuel contaminated with water can damage fuel injectors. Water is heavier than fuel and will collect in the primary filter bowl. Drain primary filter bowl using the valve on the bottom of the filter bowl.

NOTE

Always carry an extra filter as one tank full of excessively contaminated diesel fuel can plug a filter.

To Drain the Filter:

- ◆ Wear safety goggles.
- ◆ Shut off the engine.
- ◆ Open the drain valve, by hand, counterclockwise approximately 1 1/2 to 2 turns until draining occurs. Drain water/fuel into a container and dispose of in accordance with local environmental regulations.
- ◆ Close the drain valve by turning clockwise when clear fuel is visible.

Priming the Engine:

- ◆ Fill tank with 30 gallons of fuel or more if parked on a slant.
- ◆ Turn key to on for approximately 30 seconds and then off again. This may need to be repeated several times before the system is purged of air.


- ◆ If unable to start, contact nearest Cummins Center or phone 1-800-343-7357 for Cummins Customer Assistance Center.

HYDRAULIC SYSTEM

On a walk around and pre-check of the motorhome, look for oil leaks under the coach and around hose fittings. If a hose connection appears to be leaking, clean the filter and the surrounding area. If seepage continues, have the problem corrected to prevent an untimely failure.

Hydraulic Reservoir

The power steering reservoir with internal filter is located in the rear compartment. The hydraulic filter assembly, located inside the reservoir, is rated at ten micron*. The reservoir is filled with 15W-40 motor oil from the factory.

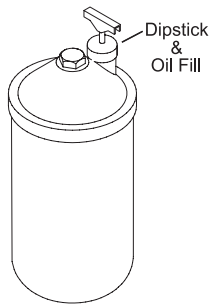


Filter assembly: Nelson 91085G
Element number: 84365A (ten micron*)

The primary function of the power steering reservoir is to keep the steering system free of contamination and to dissipate excessive heat that builds during extreme operating conditions. Check the oil level in the reservoir every 6,000 miles or three months. The oil dipstick fill

is located on top of the reservoir in the rear compartment. The oil level should be kept between the full and add marks on the dipstick. If adding of fluid is required, use only Dexron-III® Automatic Transmission Fluid.

Checking the Fluid Level:

 1. Start the engine and allow it to reach normal operating temperature.
2. While the engine is at idle, turn the steering wheel left and right several times.
3. Shut the engine off.
4. The easy grip handle is rotated counterclockwise to remove the dipstick.
5. Check the fluid level on the "HOT" side of the dipstick. It should be in the area of "HOT" on the dipstick. This is the normal range for the dipstick. Do not exceed the full mark.
6. If the fluid level is low, add fluid in small amounts, continuously checking the level until the "FULL" mark is reached.
7. Insert the easy grip handle back in the reservoir and rotate clockwise until securely fastened.




Hydraulic Filter

Change the hydraulic oil filter every 15,000 miles, or once a year, for cellulose element.


Changing the hydraulic oil filter:

1. Using a 15/16" wrench, loosen the center cover bolt.
2. Remove the bolt and cover plate to access the spring and filter.
3. Remove the spring and washer to remove the filter assembly.
4. After replacing the filter assembly, reverse the process to re-assemble the reservoir.
5. When attaching the cover plate in the rubber cover seal, check for any damage.

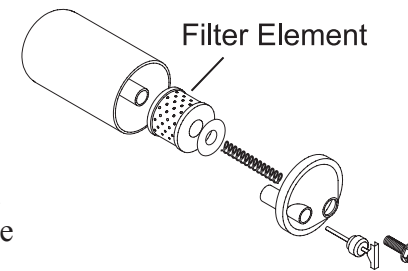

Air Intake & Charge Air System

The air intake and charge air system supply the engine with clean air for proper combustion and performance. Air entering the system is cleaned through a replaceable filter element and monitored with an air filter restriction indicator.

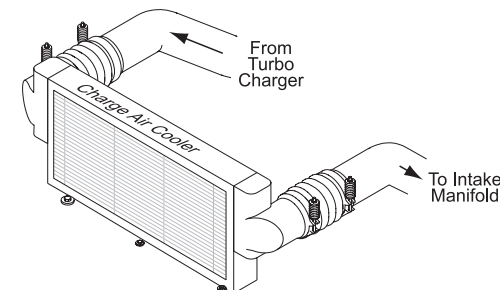

The airflow through the air filter is passed through the engine turbocharger, which pressurizes and heats the air. The heated pressurized air then passes through the charge air cooler, where the air is cooled before entering the engine intake manifold.

The air entering the engine must be clean as possible, as contaminated air can cause destruction of major engine components. Even small amounts of contaminants can do major damage to an engine.

INSPECT


The air intake system on a weekly basis, looking for damage, clogged fins, loose connections, and wear to the air ducting, clamps, and filter housing. Check to ensure that the ducting is not rubbing or wearing on other components and that all components are securely in place. Have any problems investigated and corrected as soon as possible in order to prevent engine damage.

Air Filter Minder

The air filter restriction indicator relays the amount of restriction present in the air intake system and should be inspected before each trip. If the yellow indicator approaches the red (top) area of the air restriction indicator, the air filter is becoming excessively dirty.

Changing Air Filter

To replace air cleaner remove screws and cover from air cleaner body. Remove air cleaner cartridge and discard. Install new air cleaner cartridge and secure with cover and screws.

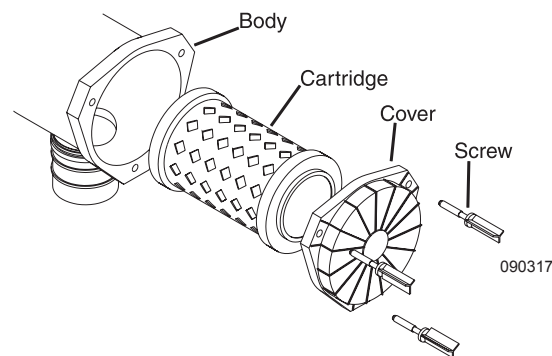

WARNING

Do not start the engine with the air cleaner removed and do not remove it while the engine is running.

LUBRICATION MAINTENANCE

Performing regular scheduled maintenance ensures reliable operation and optimum service life of the various chassis components. Completed maintenance brings peace of mind knowing the various components have received proper service. Failure to follow maintenance guidelines, or perform scheduled maintenance, results in inefficient operation, premature component wear or component failure resulting in breakdown.

Maintenance schedules are usually performed at certain mile or time intervals. When performing high level procedures, lower level service should also be performed.

NOTE

Maintenance schedules are based on normal operating conditions and use. Operating under unusual or adverse condition shortens service intervals.

NOTE

Engine and transmission service intervals are listed in their respective manuals.

Proper Lubricant Waste Disposal:

When performing service maintenance on the engine, transmission or rear axle, waste fluids and filters should be properly disposed of or recycled. Package used oils, antifreeze and other fluids in sealed containers. In many cases used oil is accepted free of charge at county disposal sites. Waste fluids are toxic to pets and other animals. Waste fluids should not be left in open containers. The sweet odor of antifreeze is attractive to pets, but highly toxic.

CAUTION

Properly dispose of used antifreeze and waste oil. Animals like the sweet odor of antifreeze and may ingest it if left in open containers. Wipe up any fluid spills. Pets may lie in puddles of fluid, many of which are irritants and can cause severe chemical burns if not properly washed.

Lubricant Classification:

Lubricants are manufactured in many forms for a variety of applications. There are many different oil and grease consistencies each with a designed application. To properly select a particular type of lubricant for a specific application, the component must be evaluated. Component stress loads, ambient temperature, working temperature and environmental exposure are just a few of the variables to consider. Select the proper lubricant for its intended application. As an example: selecting high viscosity grease to lubricate a lock cylinder results in sluggish lock cylinder operation especially in a cool environment.

Conversely, using graphite to lubricate a component that is under extreme temperature and load will result in component failure.

Grease ratings and their base compounds are especially important when selecting a lubricant type for an intended application. Some grease compounds are manufactured for multi-use application. These are acceptable if the grease rating is in accordance with the manufacturer's recommended lubricant type and rating.

Lubricants:

Many chassis components require lubrication. The types of lubricants used will vary with the application of the component. A component may fail prematurely due to lack of lubrication or from using an incorrect lubricant type. The component manufacturer usually recommends a particular type of lubricant with a minimum approval rating. Most lubricants are tested under strict guidelines set by the **ASTM (American Society for Testing and Materials)**. The **NLGI (National Lubricating Grease Institute)** helps

disperse information to the grease production industry. Grease containers usually have an approval rating by the **SAE (Society of Automotive Engineers)**, **Mil Spec (Military Specification)**, **API (American Petroleum Institute)** or by other recognized and accepted organizations. The correct lubricant type with an approved specific rating must be used whenever applying, changing or adding any lubricant. When purchasing lubricants for a specific application be sure the label affirms the type of lubricant required with the tested rating by the term "meets or exceeds" in accordance with the manufacturer specifications.

Lubricating greases are made from different base compounds giving the grease different lubricating consistencies, properties and maximum operating temperatures. Most containers list the base compound and maximum operating temperature usually listed as melting point or drip point. Lubricating components, such as brake component for example, require a high temperature special base compound grease. Lubricating this type of component with other than specified grease type will result in inadequate lubricating qualities resulting in component malfunction or failure.

INSPECTION

When performing any scheduled maintenance, inspect the area around where you are working. For example, changing the oil, look at the rear differential. Inspect for visual signs of fluid leaks.

Most fluids and lubricants have a distinct odor, which can be used to detect early signs of trouble. Generally, odors are most detectable

soon after parking. Unusual sounds are another method of detecting a problem early. There are many types of sounds that are normal, such as the cyclic purging of the air dryer. Become familiar with the different sounds. If something sounds odd, smells peculiar or looks unusual investigate the situation.

Greasing:

Thoroughly clean all Zerk grease fittings before applying new lubricant. Keep paper towels or disposable rags handy when greasing. When lubricating items such as drive shafts and steer axle components, continued grease application is generally required until new grease appears at exit points.

Some items use sealed boots around the component to prevent moisture intrusion. When greasing these types of components, care must be given to prevent excess lubricant pressure from rupturing the seal.

WARNING

Always chock wheels before going underneath the motorhome.

WARNING

Never place yourself under motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Brake actuating components require lubrication to keep the actuating components freely operating. Avoid contaminating brake linings with lubricant. Particular care and attention to details should be taken when lubricating brake actuating components. Wheel removal may be necessary to gain access the grease fittings.

NOTE

Suspension, steering, brake and drivetrain components are lubricated at factory using NLGI 2 Lithium Soap based grease.

 
To apply grease:

- ◆ Clean the grease fitting. Initially operate grease gun until new lubricant discharges from nozzle, then wipe nozzle clean to avoid introducing contaminants into the component.
- ◆ Snap nozzle onto grease fitting. Nozzle must remain in line with the grease fitting during the application process. If the nozzle is not in line, lubricant will collect around nozzle and grease fitting, failing to lubricate the component.
- ◆ Wrap the nozzle with a paper towel or rag to prevent contamination and accidental soiling of other areas.



If the component does not accept grease the Zerk fitting may be plugged or damaged. Zerk fittings are replaceable and generally available at most auto supply stores. Zerk fittings come in a variety of angles depending on the application. Every effort should be made to lubricate the component, as neglect will only result in premature component failure.

NOTE

Some grease fittings may not be accessible until the steering wheel is turned or the motorhome is moved slightly.




Typical Zerk Fitting

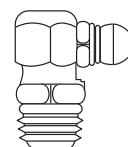 

090368

LUBRICATION CHARTS


Front of Chassis

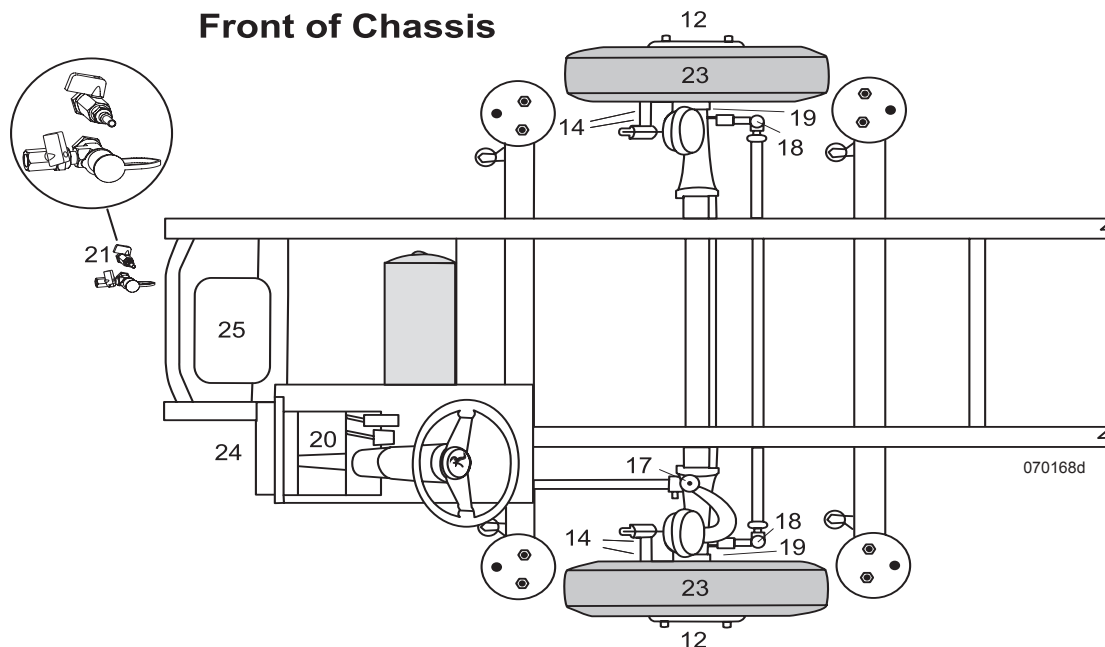

070168d

NOTE
 Service must be performed every twelve (12) months, regardless of actual mileage, to protect seals, bearings and gaskets from drying out and failing. The motorhome must be started and driven for at least 20 miles every two weeks. It is important to remember the generator maintenance interval is based on hours of usage. Consult the OEM Owner's Manual for the generator service interval.

Rear of Chassis

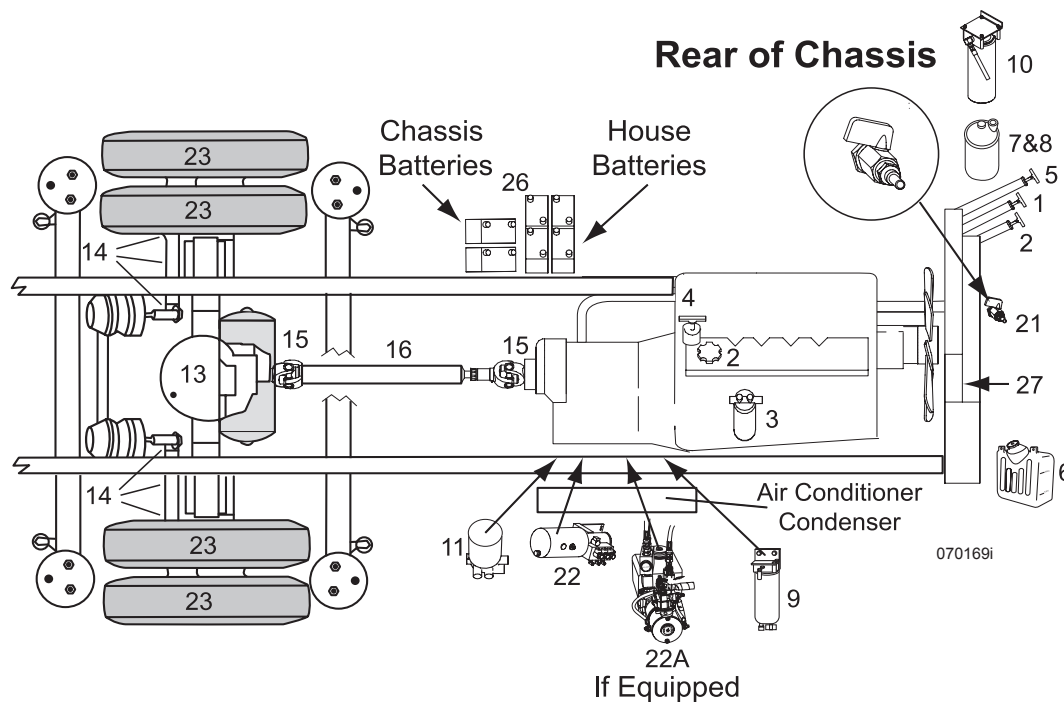

070169i

	Component	Action	When	Code-Refer to chart
1	Engine Oil Dipstick	Keep to Full Mark	Before each trip + daily en route	EO
2	Engine Oil Fill	Keep to Full Mark	Before each trip + daily en route	EO
3	Engine Oil Filter	Replace	At Oil Change	OEM
4	Transmission Check/Fill	Keep to Full Mark	Refer to OEM Manual	TS
5	Transmission Remote Fill	Keep to Full Mark	Refer to OEM Manual	TS
6	Engine Coolant	Replace	Refer to OEM Manual	AF
7	Hydraulic Fluid Reservoir	Keep to Full Mark	Monthly	E02
8	Hydraulic Filter	Replace	15,000 miles or Annually	E02
9	Filter Fuel/Water Separator (Primary)	Replace	15,000 or 6 Months	FF
10	Filter Fuel (Secondary)	Replace	Refer to OEM Manual	OEM
11	Air Dryer Filter	Replace	2 to 3 Years	-
12	Wheel Bearings	Re-pack	30,000 miles or Annually	HT
13	Rear Differential	To Filler Plug	250,000 Miles or 3 Years	MP
14	Slack Adjusters/S-Cams	Grease-3 Fittings	10,000 Miles or 6 Months	CL
15	Drive Shaft Universal Joints	Grease-2 Fittings	5,000 miles or 6 Months	CL
16	Drive Shaft Slip Yoke	Grease-1 Fitting	5,000 miles or 6 Months	CL
17	Drag Link	Grease - 2 Fittings	5,000 miles or 6 Months	CL
18	Tie Rod End	Grease-2 Fittings	5,000 miles or 6 Months	CL
19	Spindles/Kingpins	Grease-2 Fittings ea.	5,000 miles or 6 Months	CL
20	Steering Shaft	Grease-3 Fittings	30,000 miles or Annually	CL-4
21	Air Tank Drains	Drains	Monthly	-
22	Power Gear Hydraulic Reservoir	Keep to Full Mark	6,000 miles or 3 Months	TF
22A	Lippert Hydraulic Slide-out Reservoir	Keep to Full Mark	6,000 miles or 3 Months	TD
23	Tire Pressure	Check	Before each trip + daily en route	-
24	Steering Box	Grease-1 Fitting	Twice a Year	CL
25	Generator	Refer to Service Manual	Refer to OEM Manual	OEM
26	Batteries	Inspect	Bi-Monthly	DW
	Batteries	Apply	10,000 miles or Quarterly	P
27	Radiator/Charge Air Cooler	Inspect	Weekly	OEM

Lubrication Code Chart	
CL-4	U-Joints located inside the motorhome under the steering cover use chassis lubricant
EO	Engine oil as recommended by engine manufacturer
OEM	Refer to Equipment Manufacturer's Manual
E02	15W-40 Engine Oil
MP	API GL-5 or MT-1 type gear lubricant - Penzoil Gear Plus SUPER-ew 75w-90, Synthetic
GO	EP-SAE 90 Gear oil
CL	Chassis lubricant should be high quality non-corrosive multi-purpose lithium soap pressure gun lubricant that is water resistant and designed to withstand extremely high operating temperature
P	Petroleum jelly or commercial battery terminal corrosion inhibitor
AF	Antifreeze as recommended by the engine manufacture
TF	Dexron 3 Mercon ATF hydraulic fluid
FF	Fuel filter
BF	Dot-3 Brake Fluid
TS	TranSynd™ synthetic transmission fluid (identified by tag on dipstick)
CBL	Clay-based lubricant
DW	Distilled water
HT	High temperature bearing grease
TD	Transmission Fluid. Use Dexron 5 or Mercon 3

SPECIFICATIONS CHARTS

Tank Capacities

Tank Capacities (Approx. Gallons) All Models	
Water Heater	10 gallons
Grey Water	62 gallons
Black Water	40 gallons
Fresh Water	100 gallons
Diesel Fuel	100 gallons
LP-Gas*	39 gallons

*Actual filled LP-Gas Tank Capacity is 80% of listing due to safety shutoff required on tank.

NOTE

All tank capacities are estimated based upon calculations provided by the tank manufacturers and represent approximate capacities. The actual “usable capacity” may be greater or less than the estimated capacities based upon fabrication and installation of the tanks.

NOTE

This chart reflects product specifications available at the time of printing. Therefore any floor plans introduced thereafter may not be reflected in the chart. All other information contained throughout the manual will still apply.

Engine Specifications

ENGINE SPECIFICATIONS	ISL 400 HP
Cubic Inch Displacement	8.8 L/540 CI
Engine HP	400 HP @ 2000 RPM
Engine Torque	1200 lbs./ft. @ 1300 RPM
Governed Speed	2200 RPM
Firing Order	153624
Rear Axle Ratio	4:30:1
Alternator Amp Size	160 Amp

Chassis Fluid Capacities

CHASSIS LIQUID CAPACITIES	ISL 400 HP
Engine Oil	24 Qts.
Transmission Oil (initial amount)	22 Qts.
Transmission Oil (with service)	19 Qts. w/filter
Radiator Coolant (initial amount)	39 Qts.
A/C Refrigerant (initial amount)	4 lbs. 134 A
Hydraulic Oil	3.5 Qts.
Rear End	16 Qts. Approx.

Generator Specifications

8 Kw


SERVICE INFORMATION

Refer to operator's manual for maintenance specifications and adjustments.

Air Cleaner	-	140-2897
Oil Filter	-	122-0833
Fuel Filter	-	149-2513
Oil Capacity	-	3 Qts w/oil filter
API Designation	-	CE

Temp		SAE Viscosity
5° - 120°F		15W-40
(-13°F) - 68°F		10W-30
(-40°F) - 68°F		5W-30

If service/parts are needed the Onan distributor can be located in the yellow pages under Generators-Electric. In the USA or Canada call 1-800-888-Onan DC Fuss & Radiator Cap Under Cover.



Generator Specifications Label. 0201590

Belts & Filters

CUMMINS ENGINE		
Filter & Belt	Manufacturer	ISL 400 HP Part #
Oil Filter	Fleetguard	LF 9009
Fuel Filter (Primary)	Fleetguard	FS 1003
Fuel Filter (Secondary)	Fleetguard	FF 5488
Alternator Belt	Cummins	3972263
Air Filter	Donaldson	P533930
Air Dryer Filter	Meritor Wabco	R950011
Transmission Filter	Allison	2952688

BATTERY SPECIFICATION CHARTS

Application	AH (20 HR)	CCA†	RC (25A @ 80° F) Minutes
12 Volt Chassis* - MHD (2 each)	Group 31p	750	180 x 2 = 360
6 Volt Domestic** (each)	U2200 (4 each)	450	75 Amp @ 80° F = 230 Min.

*Batteries connected in parallel. **Four batteries connected in a Series/Parallel configuration. †CCA Ratings are 0° F. These are the minimum requirements.

Approximate Hours of Ampere Load					
**U2200	5 AMPS	10 AMPS	15 AMPS	20 AMPS	25 AMPS
	110	44	25	18	14

**Four batteries connected in a Series/Parallel configuration.

Battery State of Charge vs Voltage/Specific Gravity			
Voltage	Specific Gravity	State of Charge	Depth of Charge
12.65	1.265	100%	0%
12.45	1.225	75%	25%
12.25	1.190	60%	50%
12.05	1.145	25%	75%
11.90	1.100	0%	100%

Voltage Reading: Battery fully charged at rest for one hour.

Engine Cold Cranking Amp Requirements			
Cummins ISL	1500	CCA	12 VOLTS

CCA Ratings are at 0° F. These are the minimum requirements.

MAINTENANCE RECORDS

After scheduled services are performed, record the date, odometer reading and who performed the service in the boxes provided after the maintenance interval. Any additional information from “Owner Checks and Services” or “Periodic Maintenance” can be added on the following record pages. **In addition, retain all maintenance receipts.** The owner information portfolio is a convenient place to store them.

LUBRICATION SERVICE RECORD

KEY TO SERVICES

- A – Lubrication & Inspection
- A1 – Motor Oil & Filter Change
- A2 – Transmission Oil Change

- A3 – Drive Axle Oil Change
- A4 – Wheel Bearing Service
- B – Prescribed Service

- C – Prescribed Service
- D – Prescribed Service
- E – Prescribed Service

MILEAGE	SERVICES										JOB PERFORMED	
	A	A1	A2	A3	A4	B	C	D	E	DATE	BY	
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												
16												
17												
18												
19												
20												
21												
22												
23												
24												
25												
26												

BATTERY RECORD						
MAKE	TYPE	DATE INSTALLED	REPAIRS	DATE REPLACED	SERVICE	
					MONTHS	MILES

TIRE RECORD							
MAKE	TYPE	PLY	DATE INSTALLED	REPAIRS	DATE REPLACED	SERVICE	
						MONTHS	MILES

TECHNICAL PUBLICATIONS

Manager:

Vance Buell

OPERATIONS

Technical Writers

William Birch - OR

Nate Bondurant - OR

Tony Isom - OR

Thomas Joachim - IN

Creative Designers

Aaron Graham - OR

Kelly Stroble - OR

Julie Slagle - IN

ILLUSTRATIONS:

Kelly Stroble, Aaron Graham, Dustin Hutchcraft

PRINTING

Techna Print - OR

ONLINE

Corporate Site: www.monaco-online.com

ONLINE TOURS

www.monaco-online.com/tours/

Diplomat 2007 ~ Technical Writer Thomas Joachim

Diplomat 2007 ~ Layout Design & Cover Julie Slagle

Diplomat 2007

Index

A,B

ABS/ATC System (Anti-lock Brakes).....	197
ABS Diagnostic	197
Air Conditioner & Heater Controls	182
System Components.....	184
Troubleshooting	185
Air Mattress (Optional).....	108
Select Comfort Air Mattress (Optional).....	108
Air Conditioning - Roof.....	85
AC Service	86
Heat Pump Operation.....	86
Operation.....	85
Return Air Filters	86
Air Dryer.....	192
Air Dryer Cycle.....	194
Desiccant-Type Air Dryer	194
Desiccant Cartridge.....	193
Air Spring Inspections	194
Air Supply System.....	190
Air Governor	191
Air Storage Tanks.....	191
Air System Charging (External).....	192
Air Coupler	192
Aladdin™ Engine Display	186
Aladdin™ System (Optional).....	111
Aladdin™ Main Menu	112
Aladdin™ Operations	112
Coach Info.....	112
Power Down Aladdin.....	113
Select Video Source	113
System Options	113

Time and Alarm Functions.....	113
Trip Meter Selection	113
Voyager Select Button.....	112
Alternator	174
Alternator Testing Procedure	175
Appliances - Introduction.....	74
Awnings.....	102
Awning Care & Cleaning.....	103
Front Door - Mirage.....	102
Patio Awning - Eclipse.....	103
Slide-out Cover	102
Storm Precautions	103
Window Awning.....	102
Backing Up A Motorhome.....	25
Batteries - House	165
Battery Charge Time & Consumption Rate.....	167
Battery Maintenance	165
Testing the Battery	166
Battery - Chassis	172
Battery Cut-out Switch.....	155
Battery Disconnect.....	172
Chassis	172
Battery Disconnect.....	155
House	155
Battery Specification Charts	228
Maintenance Records.....	229
Bedroom Ceiling Fan (Optional)	105
Bedroom Clock Radio With	
CD/DVD (Optional)	117
Brake Systems	195
Air Brakes	195

Automatic Slack Adjuster	196
Brake Systems - Backup	196
Park & Emergency Brake System.....	195
Breaking Camp	28

C,D,E

Carbon Monoxide Detector.....	46
Alarm	48
Cleaning & Maintenance	48
Operation.....	47
Testing.....	48
Ceiling	61
Central Vacuum (Optional).....	93
Maintenance	93
Operation.....	93
Chassis - Introduction.....	190
Chassis Electrical - Introduction	172
Citizen Band (CB) Radio - Prep	110
Cold Weather Conditions	139
Cold Weather Storage	139
Console	179
Parking Brake.....	180
Shift Selector.....	179
Switches	180
Cooktop.....	82
Burner Grate.....	83
Care & Cleaning	83
Cooktop Covers	82

Cooktop With Oven (Optional)	83
Burner Grate.....	84
Cooktop Covers	83
Lighting the Burners	84
Coolant System	211
Charge Air Cooler	212
Countertops	64
Laminate	64
Solid Surface.....	64
Dash	177
Indicator Lights.....	178
Instrument Panel	177
Dash Radio	117
Operation.....	117
Diagnostic Plug Location	185
Disc CD Changer (Optional)	117
Distribution Panel	164
House 12 Volt DC	164
Distribution Panel (50 Amp)	161
Circuit Breaker.....	163
Energy Management System	162
GFCI Breakers & Outlets.....	164
House 120/240 Volt AC Panel	161
Door - Sliding	105
Drive Axle & Drive Shaft	202
U-Joint Angles Phasing & Driveline Balance.....	204
Driving & Safety	16
Familiarize Yourself.....	16
Inspections	16
Mirror Adjust	16
Safety Seat Belts	16
Driving Tips	18
Dry Camping	27
Electric Toilet (40 SKT & 40 DFT Models Only)	137
Cleaning	138
Drain Traps & Auto Vents.....	138

Holding Tank Level Sensors	137
Maintenance.....	138
Operation.....	137
Programming the Water Level	137
Winterization.....	138
Emergency Roadside Procedures	29
Dead Chassis Battery	30
In Case of Flat Tire	30
Engine - General Information	208
Engine “No Start” Flow Chart	187
Engine Oil	210
Engine Shutdown	210
Extended Engine Shutdown.....	211
Entry Door	97
Entry Step	96
Operation.....	96
Step Cover.....	96
Stepwell Storage Compartment	97
Equipment - Introduction	96
Escape (Egress) Window	49
Exhaust Brake	213
Exterior Care	52
Bright Metal	54
Corrosion.....	52
Drying	52
Paint Codes	53
Tire Care	53
Washing.....	52
Waxing	52
Wheels - Coated Aluminum.....	53
Exterior Entertainment Center (Sharp TV Optional)	121
Exterior Maintenance	54
Fiberglass	54
Roof Care & Seal Inspections.....	55
Sealant Types	55

F.G

Fabrics	57
General Care & Cleaning.....	57
Leather	59
Ultra-Leather.....	59
Vinyl.....	57
Fans	104
Automatic.....	104
Rain Sensor Fan (Optional)	104
Faucet Screens	132
Fire Extinguisher	48
Floors	60
Carpet Cleaning	60
Laminate Floor	61
Tile Floor.....	61
Free Standing Dinette	109
Front Axle	199
Alignment	199
Center Link	201
Control Arm Bushings	202
Drag Link.....	201
Front Brakes.....	202
Lubrication Maintenance Safety	200
Steering Column	201
Steering Components	200
Steering Spindles	201
Fuel System	217
Fuel Filters	219
Fuel Lines & Hoses.....	219
Fuel Requirements	217
Fuel Sender	218
Fuel Tank.....	218
Furnace	86
If the Furnace Fails to Light.....	87
Operation.....	87
Using the Furnace	87

Fuse & Circuits 172
 Front Distribution Panel..... 172
 Relays..... 173
Fuses 165
Generator - 120 AC Diesel..... 157
 Generator Exercise..... 160
 Generator Fuel 159
 Powering the Equipment..... 159
 Pre-Start Checks..... 158
 Resetting the Circuit Breaker..... 159
 Starting the Generator 158
 Stopping the Generator 159
Glossary of Terms 5
GPS Navigation (Optional) 110
Grab Handle 97

H,I,J

Height Control Valves 195
Hitch 22
 Tow Plug Connection..... 24
 Using the Rear Receiver 22
Home Theatre Surround Sound 118
 Surround Sound Entertainment
 Systems 118
 Surround Sound Entertainment
 Systems (For Motorhomes That Do
 Not Have Bedroom On/Off Switch)..... 119
 Surround Sound Speaker Switch 118
Home Theatre System..... 124
House Electrical - Introduction 154
Hydraulic System 220
 Air Filter Minder..... 221
 Air Intake & Charge Air System..... 220
 Changing Air Filter 221
 Hydraulic Filter..... 220
 Hydraulic Reservoir 220

Interior Care..... 57
 Cockpit..... 57
Inverter 160
 Auto Generator Start (Optional) 161
 Battery Charging with the Inverter 160
 Battery Temperature Sensor..... 161
 Factory Default Settings 161
 Providing AC Power with Inverter 160

K,L

Keyless Entry (Optional)..... 98
 Operation..... 98
Ladder - Rear 110
**Legless Booth Dinette
 (Not On All Units)** 109
 Bed Conversion..... 109
Leveling - Hydraulic 205
 Automatic Leveling 207
 Manual Leveling 206
 Prior to Leveling 206
 Retracting Leveling Jacks 207
Lights..... 169
 Directional Map Lights
 (Not on All Units) 170
 Interior Halogen 169
**Limited Warranty Transfer Application/
 Change of Owner Information** 13
LP-Gas Consumption 151
LP-Gas Detector..... 144
 Alarm 145
 Maintenance..... 146
 Testing..... 145
LP-Gas Distribution Lines 150

**LP-Gas Emergency Procedures
 Checklist**..... 146
LP-Gas Fundamentals 148
LP-Gas Hose Inspection 150
LP-Gas Regulator 149
LP-Gas Safety Tips 151
LP-Gas Systems..... 144
LP-Gas Tank..... 146
 Accessory Hookup 148
 Measurement..... 146
 Tank Capacity 147
 Tank Filling 147
 Tank Operation..... 147
Lubrication Charts 225
Lubrication Maintenance..... 221

M,N,O

Main Slide-out Operation..... 98
 Bedroom Slide-Out 100
 Extending & Retracting Slide Rooms..... 98
 Manual Override 99
 Manual Override 101
 Troubleshooting 99
 Troubleshooting 101
Microwave/Convection Oven 80
 Care & Cleaning 80
Mold & Mildew 66
Owner's Manual Survey: Diplomat 2007 ... 11

P,Q,R

Pest Control 67
Rear Vision System 24

Refrigerator 74
 Air in LP-Gas Supply Lines..... 78
 Control Panel - Four Door 75
 Control Panel – Two Door (Optional)..... 78
 Cooling Unit Fans 76
 Doors..... 77
 Exterior Refrigerator Access Panel 77
 Icemaker..... 76
 Interior Light..... 77
 Operation Specifics 74
 Refrigerator Alarm..... 76
 Service..... 77
 Storage Procedures..... 77
Reporting Safety Defects 4

S,T

Safety Terms 4
Satellite..... 119
 In-Motion System (Optional)..... 121
 Stationary System (Optional)..... 119
Satellite Radio (Optional)..... 111
Seat Controls 106
Set-Up Procedures..... 26
Shock Absorber 205
Shore power Hook-up..... 155
 Manual Cord Reel 157
 Power Cord Reel (Optional) 157
Shower..... 61
Smoke Detector 46
 Maintenance..... 46
 Operation..... 46
 Testing..... 46
 Troubleshooting 46
Sofa 106
 Easy Bed Sofa 106
 Hide-A-Bed (Optional) 107

J-Lounge (Optional)..... 107
 Magic Bed Conversion (Optional)..... 107
Solar Panel (Optional)..... 168
 Charge Controller..... 168
 Inspection and Maintenance 169
 Solar Panel 168
 Solar Panel Care..... 169
Specifications Charts 227
 Belts & Filters 227
 Chassis Fluid Capacities 227
 Engine Specifications..... 227
 Generator Specifications 227
 Tank Capacities..... 227
Stainless Steel Surfaces..... 64
Starting Procedure..... 209
 Cold Weather..... 209
 Normal Starting..... 209
Steering Column..... 175
 Smart Wheel Operation..... 175
 Tilt & Telescope 176
 Wiper Function 176
Steering Gear..... 202
Storage 69
 Long Term..... 69
 Removal from Storage 71
 Short Term..... 69
 Winter Storage Checklist 71
Storage Bay Slide-out Tray 110
Storage Under Bed..... 110
Sunvisors 105
Swivel Seats..... 106
Systems Control Center..... 123
Tires..... 32
 Air Pressure Checklist..... 36
 Importance of Air Pressure 33
 Inspecting & Pressure 35
 Storage of Tires - Long Term..... 37
 Supporting When Leveling 36

Tire Chart - Goodyear 34
 Tire Pressure Inflation Guideline 33
 Tire Rotation 37
 Tire Vibration 36
 Tread 37
Toilet (Not on All Units)..... 136
 Cleaning & Maintenance 136
Towing Procedures..... 31
 Disabling Parking Brake 32
Transfer Switch 157
Transmission..... 213
 Check Tans Indicator 214
 Periodic Inspections 215
Transmission Fluid & Filters 216
Trip Preparation 21
TV Entertainment Components 114
 Connections - Cable TV, Computer
 & Phone 114
 Satellite System - DSS Prewire..... 116
 Television (Front) Lockout Feature 114
 TV Antenna 114
 Video Selector Box 115

U,V

Vendor List 7

W,X,Y,Z

Wall Coverings 62
Wall Thermostat..... 85
Warranty Information File 4
Warranty Limited: 2007 Monaco i
Warranty Limited: 2007 Roadmaster iii

Washer/Dryer (Optional)	91	Window Treatments.....	65
Operation.....	91	Day/Night Shades	65
Washer/Dryer Maintenance.....	92	Mini-Blinds.....	65
Winterizing the Washer/Dryer	93	Winterization.....	139
Washer/Dryer Prepared	90	Dewinterization.....	141
Waste Pump (Optional).....	134	Using Air Pressure	139
Waste Water Systems	132	Using Non-Toxic Antifreeze and	
Proper Waste Disposal	132	Gravity Fill.....	140
Tank Flush.....	134	Wiring Diagram -	124
Waste Drain Hose.....	133	Wood Care	62
What Not to Put in Waste			
Holding Tanks	132		
What to Put in Holding Tanks.....	133		
Water Filter - Faucet.....	130		
Water Heater	88		
Water Pump.....	129		
Water Pump Troubleshooting.....	130		
Water Service Center.....	142		
Water Systems	131		
Disinfecting Fresh Water	131		
Troubleshooting	131		
Water Systems - Introduction	128		
Water Tank - Fresh Gravity Fill	129		
City Water Hook-up	129		
Water Tanks.....	128		
Fresh Water Fill.....	128		
Measurements & Calibration	128		
Weighing the Motorhome.....	38		
Cargo Carrying Capacity Flowchart	43		
Four Corner Weighing (Example).....	41		
Weighing Procedure Worksheet.....	44		
Weight Label	40		
Weight Record Sheet.....	45		
Weight Terms	38		
Wheel Mounting.....	37		
Windows.....	64		
Condensation.....	65		

