

MONACO® MOTORHOME LIMITED WARRANTY – 2011

WHAT THE PERIOD OF COVERAGE IS:

This Limited Warranty provided by Monaco RV, LLC (“Warrantor”) for your Monaco® covers those components, assemblies and systems of your new motorhome not excluded under the section “What is Not Covered” and when sold by an authorized dealer, for twelve (12) months from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. However, this Limited Warranty covers the internal steel or aluminum structural support frames inside the walls and roof (excluding slide-outs) for sixty (60) months from the original retail purchase date or the first 50,000 miles of use, whichever occurs first. If you use your motorhome for any rental, commercial or business purposes whatsoever, the Limited Warranty provided by Warrantor covers your new motorhome when sold by an authorized dealer for ninety (90) days from the original retail purchase date or the first 24,000 miles of use, whichever occurs first, and it covers the internal steel or aluminum structural support frames inside the walls and roof (excluding slide-outs) for twelve (12) months from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. A conclusive presumption that your motorhome has been used for commercial and/or business purposes arises if you have filed a federal or state tax form claiming any business tax benefit related to your ownership of the motorhome. The above Limited Warranty coverage applies to all owners, including subsequent owners, of the motorhome. However, a subsequent owner must submit a warranty transfer form by filing the form and paying the transfer fee. A subsequent owner’s warranty coverage period is the remaining balance of the warranty coverage period the prior owner was entitled to under this Limited Warranty. Warranty transfer forms can be obtained by contacting the Customer Relations Department. There is a one time, \$500 processing fee for the transfer.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES:

IMPLIED WARRANTIES, IF ANY, ARISING BY WAY OF STATE LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE TERM OF THIS LIMITED WARRANTY AND ARE LIMITED IN SCOPE OF COVERAGE TO THOSE PORTIONS OF THE MOTORHOME COVERED BY THIS LIMITED WARRANTY. WARRANTOR DISCLAIMS ALL IMPLIED AND EXPRESS WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ON COMPONENTS AND APPLIANCES EXCLUDED FROM COVERAGE AS SET FORTH BELOW. There is no warranty of any nature made by Warrantor beyond that contained in this Limited Warranty. No person has authority to enlarge, amend or modify this Limited Warranty. The dealer is not the Warrantor’s agent but is an independent entity. Warrantor is not responsible for any undertaking, representation or warranty made by any dealer or other person beyond those expressly set forth in this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

WHAT THE WARRANTY COVERS:

Warrantor’s Limited Warranty covers defects in the manufacture of your motorhome and defects in materials used to manufacture your motorhome. “Defect” means the failure of the motorhome and/or the materials used to assemble the motorhome to conform to Warrantor’s design and manufacturing specification and tolerances. Also see the section “What the Warranty Does Not Cover” set out below.

WHAT WE WILL DO TO CORRECT PROBLEMS:

Warrantor’s sole and exclusive obligation is to repair and/or replace, at its option, any covered defect if: (1) you notify Warrantor or one of its authorized servicing dealers of the defect within the warranty coverage period and within five (5) days of discovering the defect; and (2) you deliver your Motorhome to Warrantor or Warrantor’s authorized servicing dealer at your cost and expense. It is reasonable to expect some service items to occur during the warranty period. The performance of warranty repairs shall not extend the original warranty coverage period. Further, any performance of repairs after the warranty coverage period has expired or any performance of repairs to component parts and appliances that are excluded from coverage shall be considered “good will” repairs, which shall not alter the express terms of this Limited Warranty. If the repair or replacement remedy fails to successfully cure a defect after Warrantor received a reasonable opportunity to cure the defect(s), your sole and exclusive remedy shall be limited to Warrantor paying you the cost of having an independent third party perform repair(s) to the defect(s). Warrantor may use new and/or remanufactured parts and/or components of substantially equal quality to complete any repair.

Imperfections and/or damage to interior and exterior surfaces, trim, upholstery and other appearance items may occur at the factory during manufacture, during delivery of the motorhome to the selling dealer or on the selling dealer’s lot. Normally, any such imperfections are detected and corrected at the factory or by the selling dealer during the inspection process performed by the Warrantor and the selling dealer. If, however, you discover any such imperfection or damage when you take delivery of the motorhome, you must notify your dealer or Warrantor within thirty (30) days of the date of purchase to have repairs performed at no cost to you in accordance with this Limited Warranty. If not reported within this time, such imperfections are conclusively presumed to be the result of normal wear and tear.

If a servicing dealer is unable or unwilling to solve a problem you are convinced is covered by the Limited Warranty, or that concerns the safety of your motorhome, or that may involve local consumer protection or “lemon” laws, then you **must**, to the extent permitted by law, **notify Warrantor directly in writing** of the failure to successfully repair the defect(s) so that Warrantor can become directly involved in performing a successful repair.

HOW TO GET SERVICE:

The “Acknowledgement of Receipt of Warranty/Production Information” form must be returned to Warrantor promptly upon purchase to assure proper part replacement and repair of your motorhome. Failure to return the “Acknowledgement of Receipt of Warranty/Production Information” form will not affect your rights under the Limited Warranty so long as you can furnish proof of purchase. For warranty service simply contact

one of Warrantor's authorized service centers for an appointment, then deliver your motorhome (at your expense) to the service center. If you need assistance in locating an authorized warranty service facility, contact Warrantor's Warranty Department (1-877-466-6226). The mailing address is:

**91320 Coburg Industrial Way
Coburg, Oregon 97408**

In the event the motorhome is inoperative due to malfunction of a warranted part, Warrantor will pay the cost of having the motorhome towed to the nearest authorized repair facility provided you notify Warrantor prior to incurring the towing charges. Because Warrantor does not control the scheduling of service work by authorized servicing dealers, you may encounter some delay in scheduling and/or in the completion of the repairs.

WHAT THE WARRANTY DOES NOT COVER:

This Limited Warranty does not cover: any motorhome sold or registered outside of the United States or Canada; exterior fiberglass and gel coat; items which are added or changed after the motorhome leaves Warrantor's possession; items that are working as designed but which you are unhappy with because of the design; normal wear and usage, such as fading or discoloration of fabrics, or the effects of moisture inside the motorhome; defacing, scratching, dents and chips on any surface or fabric of the motorhome; owner maintenance, including by way of example wheel alignments and resealing exterior sealant areas; the automotive chassis and power train, including, by way of example the engine, drivetrain, steering and handling, braking, wheel balance, muffler, tires, tubes, batteries and gauges; appliances and components covered by their own manufacturer's warranty including, by way of example the microwave, refrigerator, ice maker, stove, oven, generator, roof air conditioners, hydraulic jacks, VCR, television(s), water heater, furnace, stereo, radio, compact disc player, washer, dryer, inverter and cellular phone; or flaking, peeling and chips or other defects or damage in or to the exterior or finish caused by road hazards, airborne pollutants, salt, tree sap, hail, or any other cause. Component part and appliance manufacturers issue limited warranties covering portions of the motorhome not covered by the Limited Warranty issued by Warrantor. To learn more on what specific component parts and appliances are excluded from the Limited Warranty issued by Warrantor please contact your selling dealership or Warrantor directly or review the warranty packet inside the motorhome.

EVENTS DISCHARGING WARRANTOR FROM OBLIGATION UNDER WARRANTY:

Misuse or neglect, accidents, unauthorized alteration, failure to provide reasonable and necessary maintenance (see Owner's Manual), damage caused by off road use, collision, fire, theft, vandalism, explosions, overloading in excess of rated capacities or other utilization of the product contrary to its design instructions or intended uses, and odometer tampering shall discharge Warrantor from any express or implied warranty obligation to repair any resulting defect.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:

THE ORIGINAL PURCHASER OF THE MOTORHOME AND ANY PERSON TO WHOM THE MOTORHOME IS TRANSFERRED, AND ANY PERSON WHO IS AN INTENDED OR UNINTENDED USER OR BENEFICIARY OF THE MOTORHOME, SHALL NOT BE ENTITLED TO RECOVER FROM WARRANTOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE MOTORHOME, INCLUDING BY WAY OF EXAMPLE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE PRODUCT TO THE SERVICING DEALER, HOTEL ROOMS, LOST WAGES AND MOISTURE DAMAGE SUCH AS MOLD AND MILDEW. THE EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES SHALL BE DEEMED INDEPENDENT OF, AND SHALL SURVIVE, ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusions may not apply to you.

LEGAL REMEDIES:

THESE LIMITED WARRANTIES ARE NOT INTENDED TO, AND DO NOT "EXTEND TO FUTURE PERFORMANCE." ANY ACTION SEEKING REMEDIES FOR BREACH OF WARRANTY OR SEEKING TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE EARLIER OF: (i) THE EXPIRATION OF THE WARRANTY COVERAGE PERIOD DESIGNATED ABOVE; (ii) THE FAILURE OF THE WARRANTOR TO REPAIR THE DEFECT AT ISSUE; OR, (iii) THE DATE ON WHICH THE BUYER'S ACTION ACCRUED UNDER APPLICABLE LAW. UNLESS PROHIBITED BY LAW, THE PERFORMANCE OF REPAIRS SHALL NOT SUSPEND THIS LIMITATIONS PERIOD FROM EXPIRING. THESE TERMS AND ALL WRITTEN AND IMPLIED WARRANTY DISPUTES BETWEEN WARRANTOR AND PURCHASER SHALL BE GOVERNED BY THE SUBSTANTIVE LAWS OF THE STATE OF OREGON, WITHOUT REGARD TO CONFLICTS OF LAW RULES. Some states do not allow the reduction in the statute of limitations, so the above reduction in the statute of limitations may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

LARGER PRINT VERSION AVAILABLE WITHIN THE OWNERS MANUAL AND UPON REQUEST ADDRESSED TO YOUR SELLING DEALER OR WARRANTOR'S WARRANTY DEPARTMENT.

ROADMASTER® CHASSIS LIMITED WARRANTY – 2011

WHAT THE PERIOD OF COVERAGE IS:

This Limited Warranty provided by Monaco RV, LLC (“Warrantor”) covers your Roadmaster® Chassis for thirty-six (36) months from the original retail purchase date or the first 50,000 miles of use, whichever occurs first. If you use the Roadmaster Chassis that your motorhome is mounted upon for any rental, commercial or business purposes whatsoever, this Limited Warranty covers your new Roadmaster Chassis for ninety (90) days from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. A conclusive presumption that the Roadmaster Chassis has been used for commercial and/or business purposes arises if you have filed a federal or state tax form claiming any business tax benefit related to your ownership of the motorhome. This Limited Warranty applies to all owners, including subsequent owners, of the Roadmaster Chassis. However, a subsequent owner must submit a warranty transfer form by filing the form and paying the transfer fee. A subsequent owner’s warranty coverage period is the remaining balance of the warranty coverage period the prior owner was entitled to under this Limited Warranty. Warranty transfer forms can be obtained by contacting the Customer Relations Department. There is a one time, \$500 processing fee for the transfer.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES:

IMPLIED WARRANTIES, IF ANY, ARISING BY WAY OF STATE LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE TERM OF THIS LIMITED WARRANTY AND ARE LIMITED IN SCOPE OF COVERAGE TO THOSE PORTIONS OF THE CHASSIS COVERED BY THIS LIMITED WARRANTY. WARRANTOR DISCLAIMS ALL IMPLIED AND EXPRESS WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ON COMPONENTS AND APPLIANCES EXCLUDED FROM COVERAGE AS SET FORTH BELOW. There is no warranty of any nature made by Warrantor beyond that contained in this Limited Warranty. No person has authority to enlarge, amend or modify this Limited Warranty. The dealer is not the Warrantor’s agent but is an independent entity. Warrantor is not responsible for any undertaking, representation or warranty made by any dealer or other person beyond those expressly set forth in this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

WHAT THE WARRANTY COVERS:

Warrantor’s Limited Warranty covers defects in the manufacture of the Roadmaster Chassis and defects in materials used to manufacture the Roadmaster Chassis. “Defect” means the failure of the Roadmaster Chassis and/or the materials used to assemble the Roadmaster Chassis to conform to Warrantor’s design and manufacturing specification and tolerances. Also see the section “What the Warranty Does Not Cover” set out below.

WHAT WE WILL DO TO CORRECT PROBLEMS:

Warrantor’s sole and exclusive obligation is to repair and/or replace, at its option, any covered defect if: (1) you notify Warrantor or one of its authorized servicing dealers of the defect within the warranty coverage period and within five (5) days of discovering the defect; and (2) you deliver your Roadmaster Chassis to Warrantor or Warrantor’s authorized servicing dealer at your cost and expense. It is reasonable to expect some service items to occur during the warranty period. The performance of warranty repairs shall not extend the original warranty coverage period. Further, any performance of repairs after the warranty coverage period has expired or any performance of repairs to component parts and appliances that are excluded from coverage shall be considered “good will” repairs, which shall not alter the express terms of this Limited Warranty. If the repair or replacement remedy fails to successfully cure a defect after Warrantor received a reasonable opportunity to cure the defect(s), your sole and exclusive remedy shall be limited to Warrantor paying you the cost of having an independent third party perform repair(s) to the defect(s). Warrantor may use new and/or remanufactured parts and/or components of substantially equal quality to complete any repairs.

Imperfections and/or damage to surfaces, trim, and other appearance items may occur at the factory during manufacture, during delivery of the motorhome to the selling dealer or on the selling dealer’s lot. Normally, any such damage is detected and corrected at the factory or by the selling dealer during the inspection process performed by the Warrantor and the selling dealer. If, however, you discover any such imperfection or damage when you take delivery of the motorhome, you must notify your dealer or Warrantor within five days of the date of purchase to have repairs performed at no cost to you in accordance with this Limited Warranty. If not reported within this time, such imperfections are conclusively presumed to be the result of normal wear and tear.

If a servicing dealer is unable or unwilling to solve a problem you are convinced is covered by the Limited Warranty, or that concerns the safety of your Roadmaster Chassis, or that may involve local consumer protection or “lemon” laws, then you **must**, to the extent permitted by law, **notify Warrantor directly in writing** of the failure to successfully repair the defect(s) so that Warrantor can become directly involved in performing a successful repair.

HOW TO GET SERVICE:

For warranty service simply contact one of Warrantor’s authorized service centers for an appointment, then deliver your Roadmaster Chassis (at your expense) to the service center. If you need assistance in locating an authorized warranty service facility, contact Warrantor’s Warranty Department (1-877-466-6226). The mailing address is:

**91320 Coburg Industrial Way
Coburg, Oregon 97408**

In the event the Roadmaster Chassis is inoperative due to malfunction of a warranted part, Warrantor will pay the cost of having the motorhome towed to the nearest authorized repair facility provided you notify Warrantor prior to incurring the towing charges. Because Warrantor does not control the scheduling of service work by

authorized servicing dealers, you may encounter some delay in scheduling and/or in the completion of the repairs.

WHAT THE WARRANTY DOES NOT COVER:

This Limited Warranty does not cover: modifications and alterations to the Roadmaster Chassis by others; the motorhome that is mounted upon the Roadmaster Chassis, including by way of example the motorhome manufacturer's design, manufacture, assembly and/or installation of the side walls, roof, windows, flooring, electrical system, plumbing system, LP-Gas system, , appliances and slide outs; items that are working as designed but which you are unhappy with because of the design; normal wear and usage; routine maintenance including by way of example wheel alignments; component parts covered by their own manufacturer's warranty, including by way of example the engine, radiator, transmission, tires, tubes, batteries, alternators, exhaust system and the emission control systems, leveling systems and their components, shocks, and HVAC systems and their components; and, flaking, peeling, rusting and chips or other defects or damage in or to the frame and frame cross members, whether caused by rocks or other road hazards, the environment, airborne pollutants, salt, or any other source. Component part manufacturers issue limited warranties covering portions of the Roadmaster Chassis not covered by the Limited Warranty issued by Warrantor. To learn more on what specific component parts are excluded from the Limited Warranty issued by Warrantor please contact your selling dealership or Warrantor directly or review the warranty packet inside the Motorhome.

EVENTS DISCHARGING WARRANTOR FROM OBLIGATION UNDER WARRANTY:

Misuse or neglect, accidents, unauthorized alteration, failure to provide reasonable and necessary maintenance (see Owner's Manual), damage caused by off road use, collision, fire, theft, vandalism, explosions, overloading in excess of rated capacities or other utilization of the product contrary to Its design instructions or intended uses, and odometer tampering shall discharge Warrantor from any express or implied warranty obligation to repair any resulting defect.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:

THE ORIGINAL PURCHASER OF THE ROADMASTER CHASSIS AND ANY PERSON TO WHOM THE ROADMASTER CHASSIS IS TRANSFERRED, AND ANY PERSON WHO IS AN INTENDED OR UNINTENDED USER OR BENEFICIARY OF THE ROADMASTER CHASSIS, SHALL NOT BE ENTITLED TO RECOVER FROM WARRANTOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE ROADMASTER CHASSIS, INCLUDING BY WAY OF EXAMPLE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE PRODUCT TO THE SERVICING DEALER, HOTEL ROOMS, LOST WAGES AND WATER DAMAGE. THE EXCLUSION OF CONSEQUENTIAL AND

INCIDENTAL DAMAGES SHALL BE DEEMED INDEPENDENT OF, AND SHALL SURVIVE, ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusions may not apply to you.

LEGAL REMEDIES:

THESE LIMITED WARRANTIES ARE NOT INTENDED TO, AND DO NOT "EXTEND TO FUTURE PERFORMANCE." ANY ACTION SEEKING REMEDIES FOR BREACH OF WARRANTY OR SEEKING TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN (1) ONE YEAR AFTER THE EARLIER OF: (i) THE WARRANTY COVERAGE PERIOD DESIGNATED ABOVE; (ii) THE FAILURE OF THE WARRANTOR TO REPAIR THE DEFECT AT ISSUE; OR, (iii) THE DATE ON WHICH THE BUYER'S ACTION ACCRUED UNDER APPLICABLE LAW. UNLESS PROHIBITED BY LAW, THE PERFORMANCE OF REPAIRS SHALL NOT SUSPEND THIS LIMITATIONS PERIOD FROM EXPIRING. THESE TERMS AND ALL WRITTEN AND IMPLIED WARRANTY DISPUTES BETWEEN WARRANTOR AND PURCHASER SHALL BE GOVERNED BY THE SUBSTANTIVE LAWS OF THE STATE OF OREGON, WITHOUT REGARD TO CONFLICTS OF LAW RULES. Some states do not allow the reduction in the statute of limitations, so the above reduction in the statute of limitations may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

LARGER PRINT VERSION AVAILABLE WITHIN THE OWNERS MANUAL AND UPON REQUEST ADDRESSED TO YOUR SELLING DEALER OR WARRANTOR'S WARRANTY DEPARTMENT.

Camelot

Section 1 - General Information	3
Section 2 - Driving & Safety	9
Section 3 - Exterior & Interior Care.....	51
Section 4 - Appliances	77
Section 5 - Equipment	103
Section 6 - Water Systems	127
Section 7 - Propane Systems.....	143
Section 8 - Electrical Systems – House	153
Section 9 - Electrical Systems – Chassis	177
Section 10 - Chassis Information	197
Index	255



The information contained in this document is intended to reflect standard and optional equipment included in a typically equipped model at the time of delivery to the initial retail owner. Your actual unit may vary from this document as a result of optional equipment that is not generally offered on this model. In the case that you are not the initial retail owner of the unit, this document will not reflect modifications that may have been performed by previous owners.

Product information and specifications are shown herein as of the time of printing. The motorhome manufacturer reserves the right to change product specifications, designs and standard equipment without notice and without incurring obligation.

©Copyright Monaco RV, LCC. All rights reserved. All other trademarks or registered trademarks are property of their respective holders. Brand name products of other companies mentioned in this manual are not endorsed by the manufacturer of the motorhome.

Check online for Addendums or Tech Tips
that may apply to your motorhome.

MANUAL ADDENDUMS & TECH TIPS

www.monaco-online.com

Click on the **brand** logo, then click
on **SERVICE** link and choose either
MANUAL ADDENDUMS or **TECH TIPS**
from the menu.

General Information - Section 1

WARRANTY INFORMATION FILE	4
REPORTING SAFETY DEFECTS.....	4
SAFETY TERMS.....	4
GLOSSARY OF TERMS	5
LIMITED WARRANTY TRANSFER APPLICATION	8

WARRANTY INFORMATION FILE

In addition to this Owner's Manual, a Warranty Information File can be found in the motorhome that contains valuable documents about your motorhome systems and equipment. Many of the component manufacturer warranty registration cards can be found in the box. They will need to be filled out and mailed. Be sure you read and understand all the information in this file to help you safely operate, maintain and troubleshoot those items.

Additional Information:

Changes, additions and supplemental information in the form of Manual Addendums and "Tech Tips" can be obtained by visiting our Web Site at www.monaco-online.com. Select one of the products from the product lineup. Go to the Service menu. A submenu will appear.

It may also be helpful to browse the "Tech Tips" menu for the other product lines. The tips may not completely apply to your particular model, but information contained therein can be useful.

REPORTING SAFETY DEFECTS

If you believe that your motorhome has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Monaco RV LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of motorhomes, it may order a recall or remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer or Monaco RV LLC.

To contact NHTSA, you may call the Vehicle Safety Hot line toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE, Washington, DC, 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

SAFETY TERMS

Many of the safety terms are personal safety instructions. Definitions for the terms are listed below. It is important to thoroughly read and understand the safety instructions displayed throughout the manual. Failure to comply with specific instructions may result in personal injury or death. Many instructions are required by National Safety Associations.

WARNING:

Warnings contain information regarding personal safety and/or pertaining to potential extensive or permanent damage to the motorhome or its components by means of hazards or improper use.

CAUTION:

Cautions pertain to potential damage to the motorhome and/or its components.

POISON:

A warning or caution pertaining to safety and/or use of a poisonous substance or harmful chemical.

NOTE:

Information and reminders concerning proper operation of the motorhome and/or its components.

INSPECTION:

Inspection of the motorhome and/or its components is required. Additional instruction may follow.

LUBE:

Lubrication, or addition of a lubricant product, to the motorhome and/or a specified component or part is required. Additional instruction may follow.

ASSEMBLE or REPAIR:

Assembly, disassembly or installation of a component or part, and/or repair to the motorhome may be required. Assistance of Technical Support or Technician may be necessary.

INFORMATION:

References to additional information regarding operation of the motorhome and/or its components found in additional sources, other than the Owner's Manual. Also refers to the WARRANTY INFORMATION FILE, found within the Warranty Information Box in the motorhome.

TIP:

Tips contain information, helpful hints and/or suggestion for ease of operation of the motorhome or its components.

GLOSSARY OF TERMS

Air Compressor - Pumps air to and builds pressure in an air system.

Air Dryer - Cools, filters and dries the air delivered by an air compressor.

Air Governor - Controls the operation of the air compressor by constantly monitoring pressure in the supply tank of the air system. The air governor initiates the unload cycle when the cut-out pressure is reached.

Alternating Current (AC) - A current that varies periodically in magnitude and direction. A battery does not deliver alternating current. Also referred to as shore power, utility power, inverter power, generator power, etc.

Ampere (Amp) - The unit of measure of electron flow rate of current through a circuit.

Ampere-hour (Amp-hr. AH) - A unit of measure for a battery electrical storage capacity, obtained by multiplying the current in amperes by the time in hours of discharge. *Example:* A battery which delivers 5 amperes for 20 hours, delivers 5 amperes times 20 hours, or 100 Amp-Hr. of capacity.

ANSI - American National Standards Institute.

ASTM - American Society for Testing and Materials.

Black Water - Term associated with the sewage holding tank. The toilet drains directly into this tank.

CCA - Cold Cranking Amperage is the amount of current a battery can deliver for 30 seconds at 0° F without dropping below a specified voltage, usually 10.5 Volts DC.

Chassis Battery - Powers chassis 12 Volt accessories and starts engine.

Circuit - An electric circuit is the path of an electric current. A closed circuit has a complete path. An open circuit has a broken or disconnected path.

City Water - A term associated with the water supply that you hook-up to at campgrounds. It is called city water because water is pulled from a central source (like in a city) and not the fresh water tank.

Compressor Load Cycle - The time during which the air compressor is building pressure.

Compressor Unload Cycle - The time during which the air compressor is idling and is not building air pressure.

Curbside - This refers to the side of the motorhome which faces the curb when it is parked. Often called the door side or the passenger side.

Current - The rate of flow of electricity or the movement rate of electrons along a conductor. It is comparable to the flow of a stream of water. The unit of measure for current is the ampere.

Cut-In Pressure - The pressure level in the air system supply tank which triggers the compressor load cycle. May apply to some water systems, such as water pump, accumulator tank, etc.

Cut-Out Pressure - The pressure level in the air system supply tank which triggers the compressor unload cycle. May apply to some water systems, such as water pump, accumulator tank, etc.

Cycle - In a battery, one discharge plus one recharge equals one cycle.

Desiccant - A granular substance with a high affinity for water used to retain moisture from the air stream flowing through the air dryer cartridge.

Direct Current (DC) - Power that is stored in a battery bank or supplied by photovoltaics, alternator, chargers and DC generators. Direct current is also known as battery power. Current only flows one way.

Drain Trap - This is a curve that is in all drains. Water is trapped in the curve and this creates a barrier so tank odors cannot escape through the drain.

Dry Camping - Camping in the motorhome when there is no city water hook-up or shore power. In other words, using only the water and power that is in the motorhome and not from another source.

Drying Cycle - The time during which the air dryer cools, filters and removes moisture from the air delivered by the air compressor. The drying cycle begins and ends the same as the compressor load cycle.

Dump Station - A site where the waste (grey) and sewage (black) tanks can be drained. In most states it is illegal to drain waste tanks anywhere other than at a dump station.

Dump Valve - Another name for the T-handle valve used to drain the sewage (black) and waste (grey) tanks.

Escape (Egress) Window - The formal name for the emergency window located in the rear of the motorhome. Egress windows can be easily identified by their red handles.

Full Hook-Up Site - A campground that has city water, shore power and sewer hook-ups or connections available.

Grey Water - Term associated with the waste water holding tank. Water from the sink drains, the shower and the washer-dryer (if equipped) go into this tank.

House Battery - Powers 12 Volt DC lights and accessories inside motorhome.

LED (Light Emitting Diode) - Indicator light.

Liquid Lead Acid Battery - A type of battery that uses liquid as an electrolyte. This type of battery requires periodic maintenance such as cleaning the connections and checking the electrolyte level.

Low Point Drain - The lowest point in the plumbing. Drains are placed here so water will drain out of the lower end of the motorhome. These drains must be closed when you fill the water tank.

OEM - Term for Original Equipment Manufacturer.

OHM - A unit for measuring electrical resistances.

Ohm's Law - Expresses the relationship between Volt (E), amperes (I) in an electrical circuit with resistance (R). It can be expressed as follows: $E = IR$. If any two of the three values are known, the third value can be calculated by using the above formula.

Potentiometer - A device for measuring an unknown potential difference or electromotive force.

Pounds Per Square Inch Gauge (psig) - Pressure measured with respect to that of the atmosphere. This is a pressure gauge reading in which the gauge is adjusted to read zero at the surrounding atmospheric pressure. It is commonly called gauge pressure.

Purge - The initial blast of air (decompression) from the air dryer purge valve at the beginning of the air compressor.

Purge Cycle - The time during which the air dryer is undergoing purge and regeneration. This cycle starts at the beginning of the compressor unload cycle and normally ends well before the beginning of the compressor load cycle.

Regeneration - The mild backflow of air through the air dryer and out the purge valve that begins immediately after the purge and lasts normally 10 to 15 seconds. This backflow of air, from the air system and through the air dryer, removes moisture from the desiccant cartridge and prepares the air dryer for the next compressor load cycle.

Roadside - This refers to the side of the motorhome which faces the road when it is parked. Often called the off-door side or the driver side.

SCA - Term for Supplemental Coolant Additive. Chemical added to coolant for diesel engines to help prevent cylinder liner pitting and internal corrosion.

Shore Line - This is the electrical cord which runs from the motorhome to the campground 120 Volt AC electrical supply.

Shore Line Plug - The 120/240 Volt AC outlet allows the motorhome to be hooked up to a campground facility.

Stinger - An arm attachment on a tow truck that is used to lift the motorhome for towing purposes.

Volt - The unit of measure for electric potential.

Watt - The unit for measuring electrical power, i.e. the rate of doing work, in moving electrons by or against an electric potential.

LIMITED WARRANTY TRANSFER APPLICATION/CHANGE OF OWNER INFORMATION

Mail to:
Monaco RV LLC
Warranty Transfer
91320 Coburg Industrial Way
Coburg, OR 97408

Please read terms and representations below before signing.

Submitted By:
 Name: _____
 Address: _____
 City: _____ State: _____ Zip: _____
 Phone: (_____) _____

- Limited Warranty Transfer
- Address Change

A. Current Owner Information:

 First Name Initial Last Name

 Vehicle Identification Number Unit # (15 digits) (6 digits) Model/Year

B. New Owner Information, Transfer Coverage To:

 First Name Initial Last Name

(_____)
 Phone Number Street Address City State Zip

 Date of Transfer (If Applicable) Odometer Reading at Transfer (If Applicable)

C. Signatures:

 (New) Owner's Signature Date Selling Dealer's Signature (If Applicable) Date

Terms & Representations

By your signature(s) on face side of this form, and in order to induce Monaco RV, LLC to transfer its Limited Warranty, you represent the following:

1. That you have received and read a copy of the Limited Warranty.
2. You understand that the unit is to be used only for family camping and cross country travel on improved roads.
3. All information provided by you on face side of this form is true and correct.

4. You understand that you are purchasing a pre-owned recreational vehicle and Monaco RV, LLC does not make any representation as to its present condition.
5. Submit a one time \$500.xx (U.S. Dollars) warranty transfer fee made payable to: **Monaco RV, LLC.**

TEAR OFF PAGE. MAIL WARRANTY TRANSFER FORM AND PAYMENT TO:

WARRANTY TRANSFER, MONACO RV, LLC.
 91320 COBURG INDUSTRIAL WAY
 COBURG, OR 97408

Driving & Safety - Section 2



DRIVING & SAFETY	10	TIRES	28	WEIGHING THE MOTORHOME	34
Inspections.....	10	Importance of Air Pressure.....	29	Weight Terms.....	35
Familiarize Yourself.....	10	Tire Pressure Inflation Guideline.....	29	Tag Axle Regulator.....	36
Mirror Adjust.....	10	Load Inflation Table.....	29	Tag Axle Adjustment.....	37
Safety Seat Belts.....	11	Inspecting & Pressure.....	30	Tire Pressure.....	38
DRIVING TIPS	12	Air Pressure Checklist.....	31	Scales.....	38
TRIP PREPARATION	15	Tire Support When Leveling.....	31	Six-Point Weighing.....	39
HITCH	16	Tire Vibration.....	32	Weight Record Sheet Tag Axle.....	41
Using the Rear Receiver.....	16	Tire Rotation.....	32	SAFETY CRUISE SYSTEM (OPTIONAL)	42
REAR VISION SYSTEM	19	Tire Replacement Information.....	32	Driver Display.....	42
BACKING UP A MOTORHOME	20	Storage of Tires - Long Term.....	33	Remote Warning Indicators.....	42
SET-UP PROCEDURES	22	WHEEL MOUNTING	33	SmartCruise® Operation.....	43
DRY CAMPING	23			Special Situations.....	43
BREAKING CAMP	23			SECURITY SYSTEM (OPTIONAL)	44
EMERGENCY ROADSIDE PROCEDURES	24			Arming & Disarming.....	44
In Case of Flat Tire.....	25			Alarm.....	44
Dead Chassis Battery.....	25			SAFE (OPTIONAL)	45
TOWING PROCEDURES	27			SMOKE DETECTOR	45
Disabling Parking Brake.....	28			Operation.....	45
				Testing.....	46
				Maintenance.....	46
				Troubleshooting.....	46
				CARBON MONOXIDE DETECTOR	46
				Operation.....	47
				Alarm.....	47
				Testing.....	48
				Cleaning & Maintenance.....	48
				FIRE EXTINGUISHER	48
				ESCAPE (EGRESS) WINDOW	49

DRIVING & SAFETY

Section Two contains information on driving tips, emergency situations, towing, safety devices, weighing the motorhome and tires.

NOTE:

The motorhome has electronic data recording devices that may record information about direction, road speed, engine speed, brake application, steering attitude or other vehicle operating data. Data recording devices can be present in engines, transmissions, ABS (Antilock Brake Systems) or other systems affiliated with operation of the vehicle. Information from data recording devices can be examined in case of an accident. Contact the component manufacturer to learn more about these devices.

Inspections

Differences between a passenger automobile and a motorhome are significant. Always be aware of these differences when traveling. The key to safely operating a motorhome is inspection. Undetected problems could cause problems on the road and may result in lost time and increased repair costs. Several states require a special license endorsement and motorhome inspection prior to registration. Know and observe the laws of the states in which you are traveling. Laws may vary from state to state.

A systematic inspection conducted prior to moving the motorhome can help ensure nothing is overlooked and will assist in familiarizing the owner with the motorhome.

Prior to moving the motorhome perform a general inspection. Examine the condition and surrounding area. Look high and low when walking around the motorhome.

Familiarize Yourself


Because the driver's seat location in the motorhome is higher and farther to the left than most vehicles, a different perspective of the roadway is created. Rely on the outside mirrors to line up with the center of the road and to check conditions behind the motorhome. The dashboard may include more gauges and controls than are normally found in passenger automobiles. Become familiar with these gauges and their indications before starting out.

Mirror Adjust


Adjust the mirrors prior to starting out. Have an assistant help to simplify the mirror adjustment process.

Mirror Adjust:

- Adjust the driver seat to travel position.
- Use a flat tip screwdriver to remove the plug at the mirror arm base (See A on illustration).
- Use a ½" socket to loosen the bolt (see A on illustration).
- Tighten the bolt when properly adjusted.
- Use a 3/16" allen wrench to loosen the set screws at point B.
- Adjust the mirror. Tighten set screws.
- Manually adjust the bottom section of the mirror.
- Fine tune upper mirror placement with the mirror adjust switch on the driver's console.

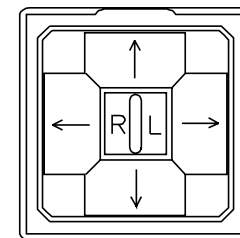

080378

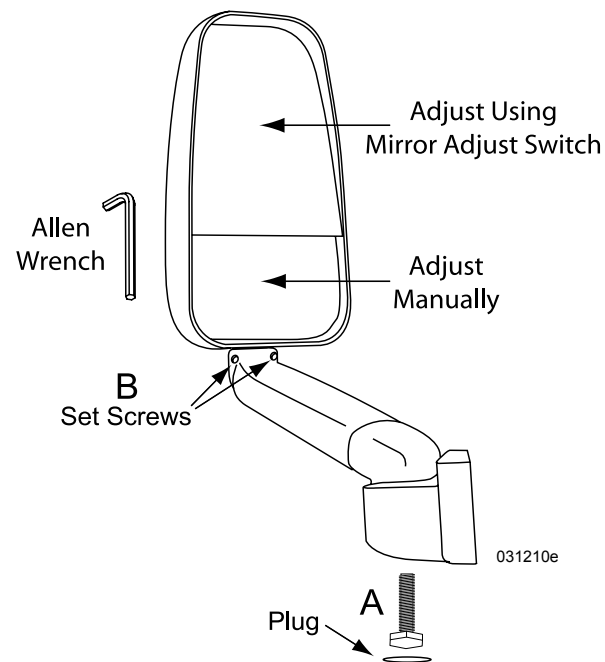

031210e

Safety Seat Belts

All occupants must be furnished with and use seat belts while the motorhome is moving. The driver's seat, and all other seats designed to carry passengers while the motorhome is in motion, are equipped with safety seat belts. **Do not** occupy beds or seats that are not equipped with a safety belt while the motorhome is in motion. The driver's seat must be locked in the forward facing position while motorhome is in motion. **Do not** use a seat belt on more than one person.

To fasten the seat belt, pull the belt out of the retractors and insert the tab into the buckle; a click will sound when the tab locks into the buckle. Seat belt lengths automatically adjust to your size and sitting position. **Do not** route belts over armrest or under the arm.

WARNING:

Safety belts are supplied at affixed seating positions. Do not occupy seats not equipped with safety belts while the motorhome is in motion. Seat belts must only be used on permanently mounted seats. Do not use a single seat belt on more than one person. Pilot and Co-pilot seats must be locked in a forward facing position with seat belts fastened while the motorhome is in motion. Do not rotate the seat while in transit.

WARNING:

Only seats equipped with seat belts are designed for occupancy while the motorhome is in motion.

Child Passenger Safety:

Child restraint requirements are determined by age *and* weight. According to NHTSA (National Highway Traffic Safety Administration), there are four stages to child restraint safety.

CAUTION:

Always refer to the child seat manufacturer's instructions for recommended use and installation.



020355

Step 1:


For the best possible protection place infants in a back seat, in a rear-facing child safety seat, as long as possible up to the height or weight limit of the particular seat. At a minimum, keep infants rear-facing until a minimum of age 1 and at least 20 pounds.



020356


Step 2:

When children outgrow their rear-facing seats (at a minimum age 1 and at least 20 pounds) they should ride in forward-facing child safety seats, in the back seat, until they reach the upper weight or height limit of the particular seat (usually around age 4 and 40 pounds).

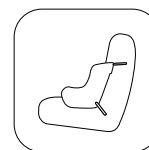


Step 3:

Once children outgrow their forward-facing seats (usually around age 4 and 40 pounds), they should ride in booster seats, in a back seat, until the vehicle seat belts properly fit. Seat belts properly fit when the lap belt lays across the upper thighs and the shoulder belt fits across the chest (usually at age 8 or when they are 4' 9" tall).

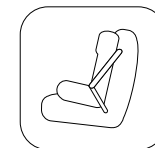

Step 4:

When children outgrow their booster seats, (usually at age 8 or when they are 4' 9" tall) they can use the adult seat belt in the back seat, if it fits properly (lap belt lays across the upper thighs and the shoulder belt fits across the chest). All children under age 13 should ride in the back seat.

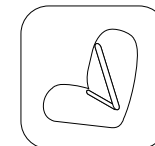

NOTE:

The motorhome manufacturer is not the author of the above information. The information in this chart is reprinted from the National Highway Traffic Safety Administration website. Visit NHTSA's website at www.nhtsa.gov for the most recent and up to date information.

Tips:

- Go to www.nhtsa.gov and choose “Child Safety Seat Information” from the menu or click on the child passenger safety icon. The site includes child safety seat installation tips, product ratings, recalls and other useful information.
- For more information about child safety seats, booster seats, inspection/fitting stations in your area, seat belts, air bags, and other highway safety issues, call the DOT Vehicle Safety Hotline at: **1-888-327-4236**.
- A certified child passenger safety technician can check your installation and answer questions. To find a technician or an inspection station near you, go to www.nhtsa.gov, click on the child passenger safety icon, and then click on the Fitting/Inspection Station link, or go to www.seatcheck.org.

The child safety seat can be positioned in two places in the motorhome: the front passenger (co-pilot) seat and forward facing permanently mounted booth dinette seat.

NOTE:

Individual states and Canadian provinces may have laws that can exceed the requirements as described in this section. It is your responsibility to know and comply with the laws in the state or province in which you travel.

NOTE:

Use of a safety or booster seat in the front seat may be prohibited in some states and Canadian provinces.

WARNING:

Do not transport children unrestrained. Infants must be placed in approved safety seats - small children must be restrained in child safety seats. Do not use a single seat belt on more than one child. Failure to comply with these rules can lead to injury or death.

WARNING:

Because many styles of safety and booster seats are available, refer to the safety seat manufacturer’s manual for proper installation and how to properly install and secure the safety or booster seat.

Seat Belt Care:

Keep the belt clean and dry. Clean with mild soap and lukewarm water. Do not use bleach, dye or abrasive cleansers that may weaken the belt material. Periodically **inspect** belts for cuts, frays or loose parts, and replace damaged parts. **Do not** disassemble or modify the system. Replace the seat belt assembly after a severe impact, even when damage is not obvious.

DRIVING TIPS

The motorhome is a complex vehicle that requires increased driving awareness because of its size and various components. Due to the motorhome length the turning radius will be much wider than that of a standard automobile. Always pay close attention to the perimeter of the motorhome including front, sides, rear, roof and undercarriage. Ensure the surrounding area is clear of obstacles. Utilize the driving mirrors to observe traffic conditions as well as the motorhome exterior including tires, bay doors, blind spots, etc.

Use a push-pull method of steering, with both hands parallel on the steering wheel.

The motorhome is heavier than an automobile and has a higher center of gravity, which affects reaction time of the motorhome. Swerving and sharp turning, especially performed at high speeds, could result in loss of control. Keep the size of the motorhome in mind and drive with extra caution to avoid situations that might require quick momentum changes. Increase reaction time by paying attention to traffic and road conditions 12 to 15 seconds ahead of the motorhome’s position.

The motorhome will travel safely and comfortably at highway speed limits. However, it takes more time to reach highway speed. When passing another vehicle, allow extra time and space to complete the pass due to the added length of the motorhome.

The transmission and engine will help control downhill speed and can extend the service life of the brake lining. When descending a long hill, manually shift to a lower gear and begin the descent at a slow speed. **DO NOT** allow the motorhome to gain momentum before trying to slow down. Use the engine brake in conjunction with the service brakes to help maintain a slow, safe descent. Distance required to stop the motorhome is greater than an automobile. Practice stopping away from traffic to get the feel of distance required to stop the motorhome.



Adjusting to road, weather and terrain conditions is necessary to keep the motorhome under control. Pay attention to road signs that advise of local road hazards and driving conditions. **DO NOT** operate the motorhome when road, weather and terrain conditions seem unsafe.


Keep the windshield clear of humidity in the form of water or ice. Start the motorhome and turn on the dash defrost and the overhead blowers to help remove moisture from inside the windshield. It may also be necessary to use a clean cloth to wipe away moisture. Keep windshield wipers in good working order at all times. **DO NOT** operate the motorhome if the windshield is not clear.

Check bridge weight limits before crossing to ensure they can support the weight of the motorhome. Signs should be posted at bridge entrances. Check the posted height of all overpasses or situations where overhead clearance is limited. Keep in mind that road surfaces may be repaved or packed with snow; therefore, the actual posted clearance height would not apply in such conditions.

Driving Cautions:

- Do not get too close to the shoulder of the road. It may be too soft to support the weight of the motorhome.
- Maintain side spacing by centering the motorhome in the driving lane.
- Driving lanes in work zones can be uneven, congested and more narrow than usual.
- Watch for uneven ground surfaces and low road clearance.

- Avoid lifting the tag axle on uneven surfaces. Chassis ground clearance is reduced.

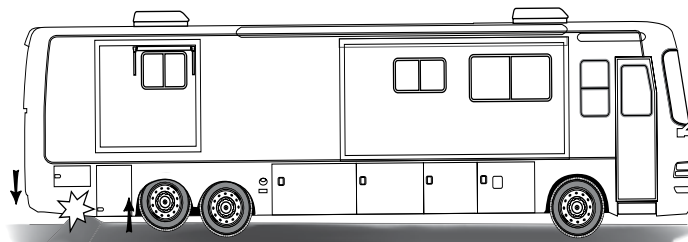


090507

- Be cautious of road debris that can damage the undercarriage of the motorhome or become lodged in the dual tires and cause damage to the tires, wheel rims or tow vehicle.
- Watch for low hanging branches on back roads and single divided roads. Tree branches and shrubbery can protrude into the roadway, especially during inclement weather when rain and snow can cause branches to hang lower than usual.
- Posted speed signs are usually passenger automobile rated. Be extra aware of driving conditions and use the appropriate speed for a motorhome, especially on corners and mountain roads.
- Downgrade speed should be at least 5 mph less than upgrade speed, or downgrade speed should be attainable within three seconds of a brake application.
- Use a four second rule when following other vehicles at speeds under 40 mph. Use a five second rule when following at speeds over 40 mph.

Right Turns:

Negotiating a right hand turn in a motorhome can be difficult. Many drivers fear they cannot make the turn without entering into the other lane or jumping the curb. Here are a few tips to make a right hand turn easier:

- As the turn approaches, look into the mirror to ensure the lane to the left is clear, then move wide over to the left.
- When making the right turn, the left rear wheel should touch the center line of the road and the driver's hips should be parallel to the roadside curb of the corner being turned to aid in avoiding a premature turn.
- Make the turn slowly.
- Check mirrors frequently. Stay aware of necessary clearance and space management of the motorhome while negotiating the turn.

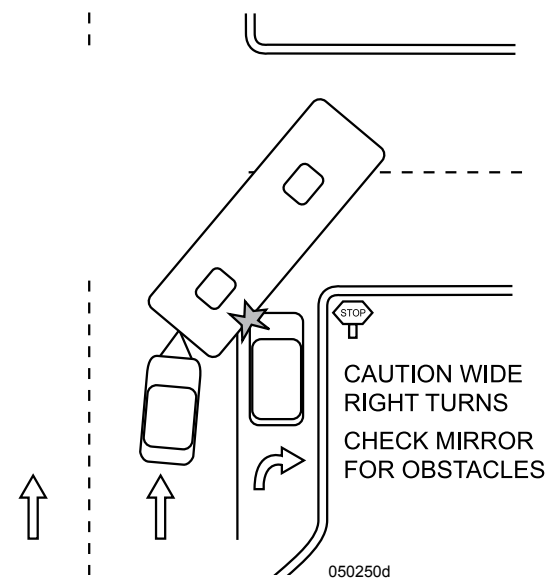

050250d

Left Turns:

- **DO NOT** proceed with the turn until the driver's seat is aligned with the middle of the intersection. If two lanes are available, take the right hand lane. A vehicle or object located on the left-hand side is easier seen.

Ascending a Grade:

When approaching an uphill grade, assess the grade and length before beginning the climb. Prepare early for long climbs. Unlike gasoline engines, diesels do not necessarily produce more power by pressing further on the accelerator. A gasoline engine will operate at full throttle (at least for a short period of time), but a diesel usually just wastes fuel at full throttle. The power output from a diesel engine is dependent upon the following:

- **RPM** - Every engine has a range of RPM that produces power most efficiently.
- **Fuel/Air mixture** - At a given RPM, the engine, even with the help of a turbo-charger, can only introduce a given volume of air into the combustion chamber. This volume of air can efficiently combine with only so much fuel; so adding more fuel to the engine only wastes it.

Determine ranges where the motorhome works best by driving long grades when temperatures remain stable for the duration of the climb.

IMPORTANT SAFETY TIP:

Turn on the four way flashers if road speed degrades to the point where the motorhome is moving significantly under the posted speed. Use pullouts if traffic is building. Once in a pullout, if there is sufficient clearance for safety, idle the engine for a while to allow the exhaust and the turbo to cool. While these are cooling, the transmission will also cool. Monitor the gauges while waiting.

Descending a Grade:

Prepare to descend a grade at the crest of the hill. Observe signs indicating grade angle and duration. The sign may suggest maximum downhill speed according to Gross Combined Weight (the combined weight of the motorhome and a trailer/tow car). At the crest of the hill, manually shift the transmission into a lower gear. **DO NOT** allow the motorhome to gain momentum before slowing down.

The exhaust brake switch is located on the driver's console. Use the exhaust brake to help maintain a slow, safe downhill speed. When the brake switch is on, the brake will activate when the throttle is released.

With exhaust brake applied, road speed may increase until the transmission automatically shifts to the next highest gear. Apply the brakes using moderately heavy pressure on the brake pedal to reduce speed. Manually downshift to maintain a safe, slow speed. **DO NOT** pump the brakes. This can result in a loss of air pressure. Avoid riding the brakes as this can cause the brakes to overheat. Either method can also result in loss of brake effectiveness or brake failure.

Night Driving:

- Be well rested and alert while driving. If necessary, find a safe stopping place to rest until ready to continue.
- Avoid using interior lights while driving that create a glare on the windshield and decrease visibility.
- Dim dash lights to a comfortable level to reduce glare.

Extreme Heat/Hot Weather Conditions:

- Frequently observe all gauges. Variations from normal conditions should be promptly evaluated.
- Check tire pressure before traveling in hot conditions. Tire air pressure increases with heat. **DO NOT** let air out of a hot tire. When the tires cool down they will return to the correct/previous tire pressure.
- Pay extra attention to hoses and belts that are more susceptible to fatigue in extreme heat.

Winter and Cold Climate Conditions:

- The motorhome should be prepared for cold weather use.
- Keep speeds slow and steady. Make moves gradually and increase visual distance for a gain in reaction time.
- If road or weather conditions are treacherous, find a safe stopping place and wait for conditions to improve.
- Avoid using an engine braking device on wet or slippery surfaces, which can cause the drive wheels to skid.

- Wiper blades should be in good condition. Fill the washer reservoir with antifreeze formula window washer fluid.
- Use mirror heat to keep mirrors clear.
- Remove any ice build-up from the entry step to avoid accidental slipping.

Wet Conditions:

- Worn or improperly inflated tires can increase the risk of hydroplaning.
- Heavy rain or deep standing water can cause brakes to apply unevenly or grab.

Refueling:

- Truck stops are good refueling points for motorhomes.
- Check overhead clearance heights and locate barrier posts installed around fuel islands before pulling through the fuel island.
- Avoid running over the fuel hose as it can get hung up on the motorhome and cause body damage.
- Use of gloves is recommended for refueling. Store gloves in the outside compartment.
- To prevent grease and fuel deposits from being tracked into the motorhome when refueling, change shoes before entering. Store the extra pair of shoes near the entry door.

WARNING:

Propane and gasoline are highly flammable and can ignite, resulting in explosion, fire or death. Ensure all flames are extinguished, all propane appliances are turned off and the primary propane valve is off prior to refueling.

Fuel Economy:

Driving style, wind resistance, terrain, vehicle weight, and engine-driven accessories are some of the factors that affect fuel economy.


Guidelines to Help Increase Fuel Efficiency:

- When starting out, apply throttle lightly and accelerate gradually. Avoid using excessive throttle and accelerating quickly.
- Check the tire pressure. A low tire is not only a safety hazard, but also increases rolling resistance and fuel consumption.
- Keep the engine at a low to mid operating range of 1100 to 1500 RPM, which requires less fuel than a higher RPM.
- Avoid using full throttle when ascending a long hill. This wastes fuel and increases engine operating temperature from incomplete combustion. Manually shift to a lower gear and use less throttle. Fuel will burn more efficiently.
- Avoid extended idling to warm-up the engine. Start the engine and wait for normal oil pressure to register. Engage the high idle feature until the engine coolant temperature gauge raises. The engine is now ready for travel. Whenever coolant temperature is below 160° F. (idling engine) incomplete combustion occurs, causing carbon build-up and raw fuel to wash lubricating oil from the cylinder walls and dilute the crankcase oil. Excessive idling (more than 10 or 15 minutes) can clog fuel injectors, damage the emission system, and eventually cause piston rings and valves to stick.

- Operate the transmission with the **MODE** function set to Economy whenever possible; this allows for earlier shifts and enhanced fuel economy.
- Follow the maintenance schedule for the engine.

TRIP PREPARATION


The following suggestions are general guidelines to follow when preparing for a trip:

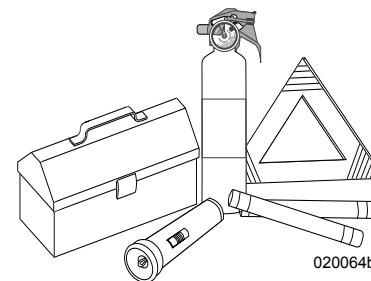

Tool Box & Emergency Road Supplies

Items to Carry:

- An emergency road kit containing a flashlight, road flares, warning signs and a fire extinguisher.
- Local, State and National Maps, as well as a “Motor Carrier” road atlas (for refueling station and truck repair facility locations).
- Hand tools, a 12 Volt DC test light, a 120 Volt AC polarity tester, battery hydrometer, an assortment of blade fuses, mini fuses, and alternator belt.

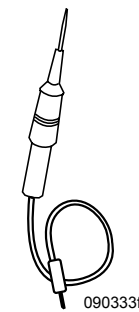

Test Light



120 Volt AC Polarity Tester

- Potable and non-potable water hoses, a water pressure regulator and various termination connectors for sewage.

Inspection:

- Ensure all exterior items are stowed or secured (i.e. TV antenna, ceiling vents and windows).
- Check belts, hoses, battery and engine fluid levels. **Inspect** the engine, transmission and generator per the OEM manuals.
- Evenly distribute and secure cargo. Store heavy items near the rear axle and lighter items toward the front to prevent uneven stress and handling problems.
- Check all tires outside the motorhome for accurate pressure and physical condition. Look around, above and under the motorhome for obstruction or leaks. Test all exterior lighting: headlamps, taillights, brake and clearance lights.
- Inside the motorhome store and secure heavier objects in the lower cabinets to maintain a low center of gravity for sway reduction. Secure loose items to prevent weight shifts. Store lighter items in the overhead cabinets. Close and secure all cabinet doors and drawers, shower and pocket doors. Turn off interior lighting. Adjust exterior mirrors and check dash gauges for proper operation.

CAUTION:

Open the bay doors slowly after a trip as cargo may shift during travel.

WARNING:


To avoid injury, never place hands or fingers near the edges of the bay door when opening or closing. Always use the latch handle. Apply pressure with the other hand just above the latch handle.

TIPS:

Multi-purpose items, versatile clothing and periodic removal of unused cargo will streamline cargo storage.


Weight pushing down on the rear receiver (tongue weight) must not exceed 10% of maximum tow capacity. The motorhome must be weighed fully loaded ready for travel including passengers, cargo, water and propane to ensure it is under the GVWR (Gross Vehicle Weight Rating). The motorhome fully loaded for travel including any towed vehicle or trailer must not exceed the GCWR (Gross Combination Weight Rating). See **“Weighing the Motorhome”** in this section for further instructions.

HITCH

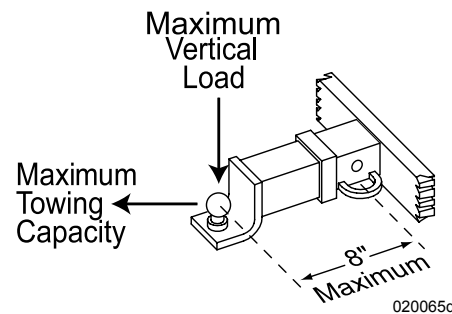

Using the Rear Receiver

When using the rear hitch receiver, remember that the motorhome is intended for towing light loads and is primarily designed as a recreational vehicle. Safety and durability of the hitch receiver requires proper use. Avoid excessive towing loads or other misuse of the receiver. Towing will affect fuel economy.

	Do Not Cut, Weld or Modify	03213019
	Do Not Exceed Vehicle Ratings	
	Maximum Towing Capacity 10,000 Lbs. (4,536 Kg.)	
	Maximum Vertical Load 1,000 Lbs. (454 Kg.)	
Coburg, Oregon Wakarusa, Indiana Elkhart, Indiana Nappanee, Indiana	Any Towed Vehicle or Trailer Over 1000 lbs (454 kg) Should Have Separate Functioning Brake System. Refer To Owner's Manual For Additional Towing Guidelines	

100200rv

WARNING:


Most states and Canadian provinces require trailers and/or towed vehicles to have adequate auxiliary brakes. Failure to comply with these State and Canadian province requirements may result in fines and/or pose a safety hazard, which may result in an accident.

WARNING:


DO NOT tow a trailer or vehicle that exceeds the rated capacity of the hitch receiver. Overloading the hitch receiver can cause unusual handling characteristics and overstress the hitch receiver and chassis. It could also void the warranty. If there are any questions, call customer support.

Ball Mount:


Ball mounts come in various configurations and weight limitations. Three things must be considered when selecting a ball mount: weight rating, pin to ball center length and rise/drop. The weight rating of the ball mount, tongue weight and tow weight must meet or exceed the total load weight. Pin to ball center should not exceed 8". Ball mounts of longer length will significantly reduce the weight rating of the hitch receiver. Observe weight reduction percentages that may be listed on ball mounts longer than 8". Selecting how much rise or drop a ball mount will need is relative to hitch receiver height and height of the towed load with respect to the type of towing equipment between the motorhome and towed load.

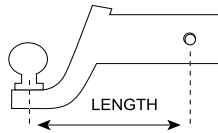

 Distance from the center of the hitch ball hole to the center of the pin hole.



Distance from the shank to the top of the hitch ball platform.

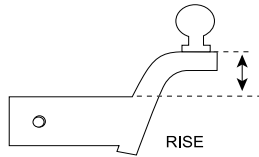

Distance from the top of the shank to the top of the hitch ball platform.

020314

Weight Distributing Hitches:

A weight distributing hitch uses spring bars of spring steel to compensate for lack of adequate rear suspension of the tow vehicle. This type of hitch is generally used for towing heavier loads as tongue weight and gross tow weight increases. The spring bars attach to the hitch head assembly and the trailer frame.

Hitch Ball:

Hitch balls are available in three common diameters: 1-7/8", 2" and 2-5/16". The larger the diameter of the hitch ball, the higher the weight rating. The diameter of the hitch ball shank also factors into weight rating. Match shank diameter with the hole in the ball mount or weight distributing head. Shank clearance should not exceed 1/16". There should be at least two additional threads extending past the nut when the hitch ball is secure.

Safety Chains:

Safety chains are required by law when towing any load. The chains and any fasteners used to attach the chains to the hitch receiver must be rated for the load being towed. Attach chains so they crisscross under the towing equipment. Allow just enough slack in the chains to make sharp corners. Too much slack will allow the chains to drag on the road surface. If the towed load should become uncoupled from the hitch ball, the towing equipment will be cradled by the safety chains.

If the towed load does uncouple, do not attempt to make a sudden stop and exacerbate the situation. Apply the brakes with gentle, steady pressure. Pull over to the side of road at a safe location.

Tow Capacity and Class Ratings:

Several components comprise a tow hitch system. The weight rating of individual components that are part of the towing system must be greater than the gross weight of the load being towed. To help define weight capacity of towing equipment, components are classified into weight groups. Maximum tow capacity is limited to the component with the lowest weight rating in the tow hitch system. Example: a ball mount may have a weight rating of 5,000 lbs. but the hitch ball is rated 3,500 lbs. Maximum tow capacity is reduced to 3,500 lbs. Many times a component will have a Class weight rating. These groups are shown in the class weight rating chart.

Class Weight Rating Chart	CLASS I	CLASS II	CLASS III	CLASS IV	CLASS V
Weight Carrying Hitch	TW - Up to 200 lbs.	WC TW - Up to 350 lbs.	TW - Up to 500 lbs.	TW - Up to 750 lbs.	TW - Up to 1,200 lbs.
	GTW - Up to 2,000 lbs.	WC GTW - Up to 3,500 lbs.	GTW - Up to 5,000 lbs.	GTW - Up to 7,500 lbs.	GTW - Up to 12,000 lbs.
Weight Distributing Hitch	---	---	---	TW - Up to 1,200 lbs.	TW - Up to 1,400 lbs.
	---	---	---	GTW - Up to 12,000 lbs.	GTW - Up to 14,000 lbs.

- **GTW** = Gross Trailer Weight. Weight of trailer fully loaded.
- **TW** = Tongue Weight. Weight pushing down on Tow Ball.
- **WC** = Weight Carrying. Weight carrying capacity of the Ball Mount.
- **WD** = Weight Distributing. Weight carrying capacity of a weight distributing hitch.

WARNING:


Be sure the weight ratings of the ball mount, tow ball and safety chains are equal to or greater than the load. The use of an extension to the receiver or extended ball mount will significantly reduce hitch receiver weight ratings. Modifications to the hitch receiver, or use of the hitch receiver other than intended, can void the warranty of the hitch receiver, chassis or both.

Calculating Tow Capacity:



Several variables must be reviewed and calculated to properly determine towing capacity. Limiting factors include GCWR (Gross Combination Weight Rating), GAWR (Gross Axle Weight Rating), hitch receiver weight rating and the weight rating of each piece of towing equipment. One or some of these variables will limit tow capacity.

Example: The tow vehicle has a GCWR of 35,000 lbs. The tow vehicle in a fully loaded, ready for travel condition, weighs 29,500 lbs. The hitch receiver is rated at 700 lbs. tongue, 7000 lbs. tow. The load being towed weighs 4,200 lbs. with a tongue weight of 400 lbs. However, the hitch ball is rated at 3,500 lbs. In this case tow capacity is limited to 3,500 lbs. due to the rating of the hitch ball, even though the rest of the towing equipment, hitch receiver and vehicle GCWR are within specifications.

Hitch Ball Weight Rating

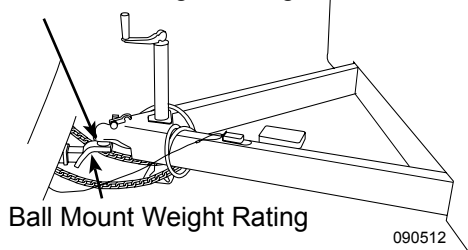

It is possible to be within the GCWR but exceed the GAWR. When tongue weight is applied, mechanical advantage increases with distance (lever) from the hitch ball to the drive or tag axle. The drive or tag axle now becomes a pivot point (fulcrum). As tongue weight increases (effort), weight on the drive or tag axle also increases (fulcrum) while weight on the front axle decreases (load). It may be necessary to weigh both the tow vehicle and towed load as an assembly to ensure the GAWR is not exceeded. It is also possible to be within the rating of the hitch receiver and yet exceed the GCWR.

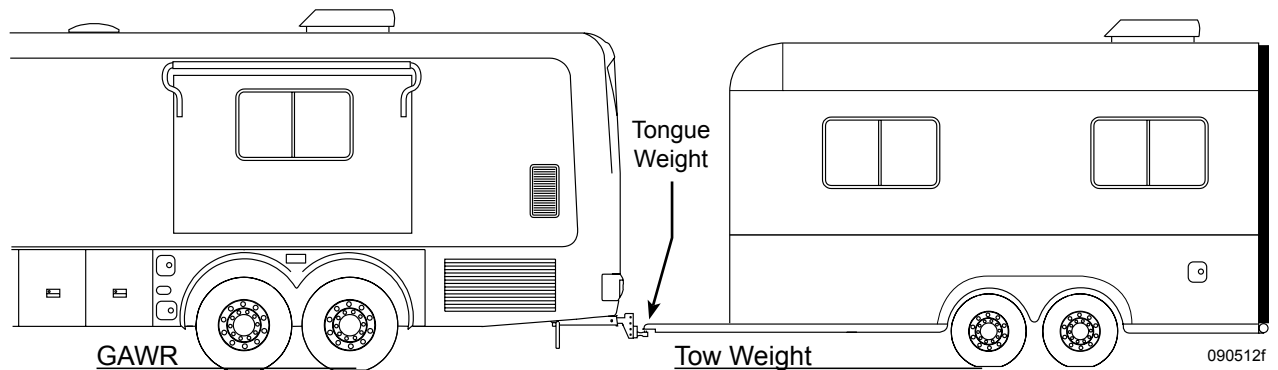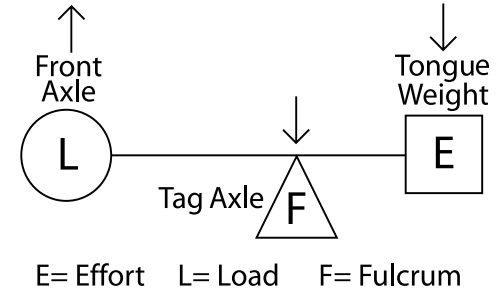

Towing Weight Checklist				
Towed Load	(Tongue Weight) _____	(Overall) _____	Yes	No
Towing Equipment	(Ball Mount) _____	(Hitch Ball) _____	Yes	No
Hitch Receiver	(Tongue) _____	(Tow) _____	Yes	No
GAWR	(Rated) _____	(After Hitching) _____	Yes	No
GCWR	(Rated) _____	(After Hitching) _____	Yes	No

Insert Weight Ratings: Check Yes or No if within specifications.

Due to changes in weight, the motorhome must be weighed in a loaded, ready for travel condition that includes passengers, cargo and liquids. Subtract the weight of the motorhome in a loaded, ready to travel condition from the GCWR to determine tow capacity. Whether towing a vehicle or trailer, the load being towed must be weighed to ensure the towed weight, when added to the tow vehicle, will not exceed the GCWR and the weight ratings of each tow system component are equal to or greater than the load being towed.

WARNING:

The motorhome and towed load must be weighed after they are loaded for travel to determine if actual weights are within towing specification. Each component of the towing system must be rated equal to or greater than the load being towed. Do not exceed the Gross Combination Weight Rating.


Taillight Configuration:

Taillights come in different configurations referred to as a 2-wire or 3-wire configuration. A 2-wire configuration has all red lenses. A 3-wire configuration usually has red and amber lenses. Amber is used for turn signals only. Red is for taillight and brake light.

These systems are electrically different. Whenever hooking a 2-wire system to a 3-wire system, or vice versa, a converter box must be installed for correct taillight function. A taillight converter is available from auto and RV supply stores. **DO NOT** attempt to wire a tow plug connector if unfamiliar with these systems. A trained technician will install the proper converter so the taillights and turn signals work correctly on the motorhome and towed vehicle or trailer when the tow plug connection is made.

Tow Plug Connection:

The motorhome is pre-wired from the factory with an electrical connection (located on the hitch receiver) for towing. Convoluted tubing protects the tow harness wires. Current draw should not exceed 7.5 Amps for each designated light circuit. Within the electrical connection is a positive terminal for use when towing a trailer equipped with a battery. The positive terminal maintains the charge of the trailer battery while the motorhome ignition is on. When preparing a tow plug connection, strip the wires 3/8". Twist the wire strands and place under the clip and secure the screw. Make sure there are no loose strands of wire that could short against the case or other terminals. **DO NOT** accidentally mirror image the trailer connection.

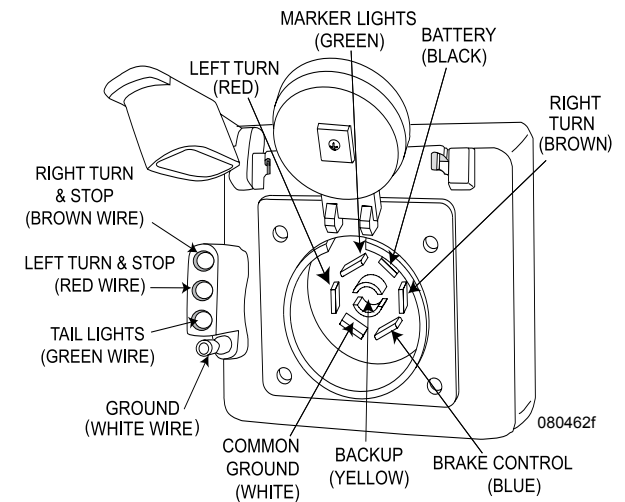



To Tow Car or Trailer:

1. Connect a tow car or trailer to the motorhome with safety chains rated for the weight being towed.
2. Make the electrical connection and perform a light check before starting a trip and at each rest stop.
3. Check the tires frequently. Flat tires on a towed vehicle cannot be detected from the motorhome while driving. A flat tire is a safety hazard and will cause extensive damage.

REAR VISION SYSTEM

The motorhome is equipped with a rear vision camera and two side vision cameras located in the side mirrors. The system may be used while driving in forward, reverse or when parked. The rear vision camera is designed to provide the driver with a view of the rear when backing up.

The monitor will display the corresponding side camera automatically when the turn signal is activated. The monitor will default to the rear vision camera when the turn signal is cancelled. The system must be powered on for use.

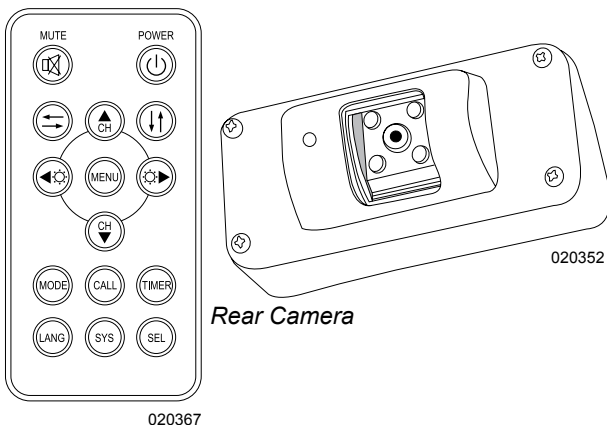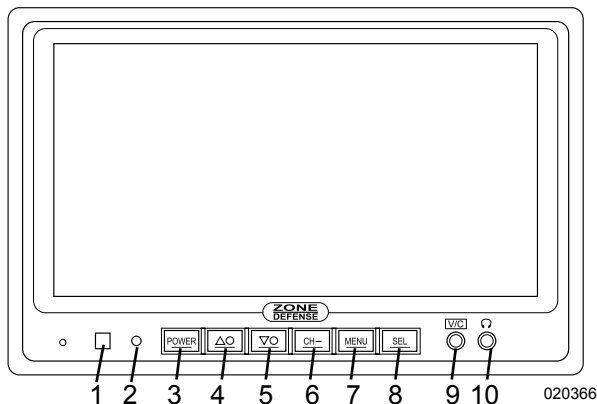

Rear Camera

INFORMATION:
Refer to the OEM for detailed operating instructions.

Precautions:

- Do not expose the monitor to excessive heat or cold.
- Do not use the monitor near water. The monitor is not waterproof.
- Do not use the monitor where excessive dust or smoke exist.
- Do not puncture, scratch or use abrasive cleaning materials on monitor.
- Do not strike or drop objects on the monitor.

Features:

1. **Remote Control Sensor:** The remote control must be pointed at the infrared sensor for the system to operate.
2. **Power Indicator:** Green light indicates the system is on. Red light indicates there is power to the system.
3. **Power Switch:** Press to turn system On/Off. Turning the system on will allow continuous operation of the rear vision system when ignition key is on.
4. **Brightness Increase:** Press to increase screen brightness and use to change a value in a menu item selected.
5. **Brightness Decrease:** Press to decrease screen brightness and use to change a value in a menu item selected.
6. **Channel Selection:** Turns grid On/Off. Grid will aid in judging how close objects are when utilizing the rear camera. Use button to scroll through a menu.

7. **Menu:** Press to display menu items.
8. **Selector:** Press to change views between side and rear cameras or optional navigation system. The monitor will display each camera separately.
9. **Audio/Video:** Can be utilized with an external video source such as a DVD.
10. **Earphone Jack:** Used for rear camera sound and can be utilized with an external video source such as a DVD.

NOTE:
The rear vision system will automatically turn on when the gear selector is placed in reverse.

NOTE:
The side cameras will display either the left or right view when a corresponding turn signal is activated.

INFORMATION:
For more detailed information visit the manufacturer's web site at www.zonedefensetruck.com or call 1-866-672-1212.

BACKING UP A MOTORHOME

Whether a long time owner of recreational vehicles or just starting out, backing up can be a challenge. Follow some simple guidelines to help reduce the challenge. When backing up, the driver (pilot) should be comfortable using the mirrors, the back-up camera and the co-pilot's directions (ground guide) for assistance.

Practice backing up with the co-pilot's guidance in a large, unobstructed parking lot. Backing up is a team effort. The backing process should begin while the motorhome is in forward motion. Maneuver the motorhome to align with the chosen site. Aligning the motorhome with the site after the backing process begins may require more than one attempt. When the motorhome is properly aligned with the site, the parking area will be visible in both mirrors. Use road markings as reference points when possible.

When pull-through sites are not available, pick a solid, level site on the left side for a better field of vision using the roadside mirror. If the site is on the right, use the curbside mirror for backing up, but stay aware of blind spots. Get out and walk the area prior to backing in. Look for potential hazards or obstacles that may damage the motorhome. If the site is satisfactory, prepare to back in carefully. Have the co-pilot provide guidance using the five hand signals. Use of walkie-talkies will also aid in guidance.


The co-pilot will perform just as important a job as the driver. When guiding the driver, the co-pilot should be located safely at the left rear corner of the motorhome, facing forward, while remaining visible in the roadside mirror at all times. The co-pilot should make a conscious effort to maintain sight of the driver through the roadside mirror as the motorhome maneuvers. If the driver loses sight of the co-pilot, stop the backing up process until the co-pilot returns to view. To avoid mishaps, the co-pilot should be focused only on what the driver is doing, with brief observation moments. If necessary, stop the backing up process to have co-pilot **inspect** other areas or angles of concern.

The driver should receive directions only from the co-pilot. When the co-pilot is guiding the driver, only five clearly defined signals should be used, with only one signal given at a time. Flailing arms with indecisive signals only confuse the driver. Signals should be given with purpose and confidence. Directional signals are directing travel of the rear of the motorhome.

If the desired direction is left, the co-pilot points left. **For example:** The co-pilot will use his/her right arm and forefinger pointing distinctly left with arm and finger held on a horizontal plane, indicating desired direction of travel of the rear of the motorhome. The directional signal given should remain steady until the desired movement is complete.

Five Directional Signals:

1. Co-pilot uses left hand and arm held horizontal, with forefinger pointing right, to direct rear of motorhome to the right.
2. Co-pilot uses right hand and arm held horizontal, with forefinger pointing left, to direct rear of motorhome to the left.
3. Co-pilot uses both arms and hands parallel with thumbs pointing up and to rear in a waving vertical motion. This signals driver to maintain a straight back direction.
4. Co-pilot holds arms horizontally, hands open with palms facing one another. Start with a wide separation, gradually closing distance of hands in a rate appropriate to vehicle speed to indicate amount of distance to the stop point.
5. Closed fists and crossed arms indicate **STOP**.

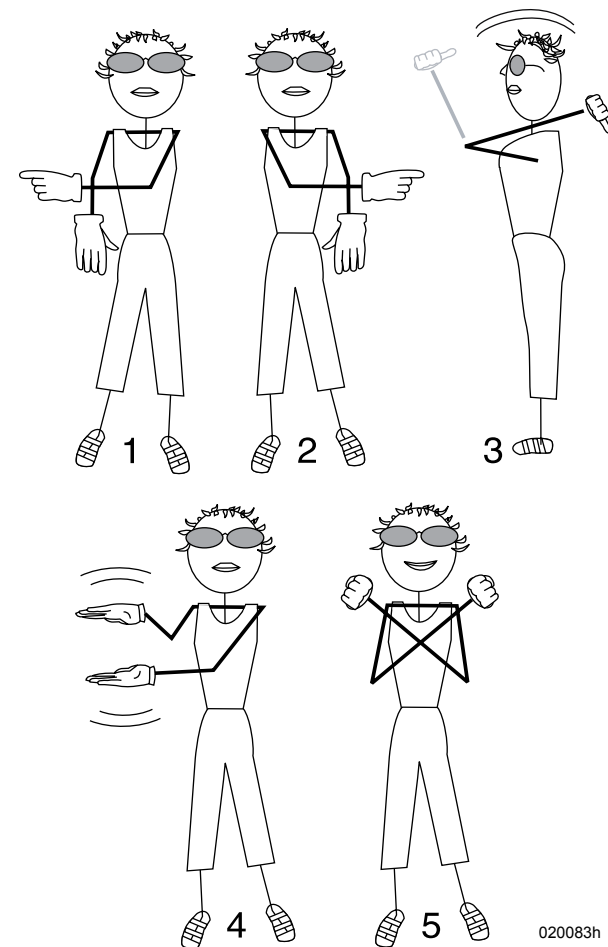

020083h

Backing Up Trailers:

Towed vehicles using a tow bar or tow dolly have more than one pivot point and are not suitable for backing. Attempting to back up the motorhome while connected to a tow bar or tow dolly can jack-knife the tow device causing the wheels of the towed vehicle to move in a forward "sideways" motion that will cause irreparable and expensive damage. If necessary, disconnect the tow vehicle to avoid a backing up situation.

Trailers have one pivot point and may be backed up. The same rules for backing a motorhome can be applied to backing a trailer. When preparing to back the trailer into a space, maneuver the motorhome sweeping wide. Turn back to the opposite direction to maneuver the trailer into the space. Keep the bottom of the steering wheel in the desired direction of travel for the trailer. **For example:** If the desired direction of the trailer is left, rotate the bottom of the steering wheel left.

If the trailer moves in an undesired direction, pull forward just far enough to align the trailer with the space. The co-pilot should stand safely at the left rear corner of the trailer within view of the driver in the roadside mirror, using the five hand signals for guidance.

CAUTION:

Tow bars or car dollies are generally made to travel in a forward direction only. Most towing equipment of this type is not designed for backing. Never attempt short back up distances with a tow bar or tow dolly. Damage to the motorhome, vehicle or towing device will result.

SET-UP PROCEDURES


If the site for the motorhome provides full hook-ups, use this quick reference as a guide only. This information is an overview on hooking up the utilities and preparing appliances for use. Specific information on slide room, awning and leveling system operations is discussed in detail in other sections.

1. Level the motorhome:

- Follow the procedures and guidelines for “*Leveling the Motorhome*” in Section 10. If the motorhome is equipped with hydraulic jacks, confirm that the parking surface will accommodate the weight placed on the jacks.

2. Hook up utilities and prepare appliances for use:

- Open the propane tank primary valve.
- Prepare the shore cord for connection. Uncoil and **inspect** the cord. Perform necessary cord maintenance. Install proper electrical adapters if anything other than 50 Amp service is provided. Operate electrical appliances in sequence when hooked to limited shore power service. Turn shore power circuit breaker **OFF** prior to plugging in the shore cord.
- If hooked to less than 50 Amp service, begin refrigerator operation on propane for the first 60 minutes. This allows time for the inverter to stabilize battery charging.

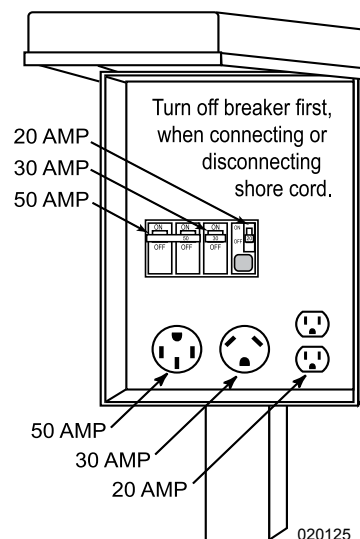

Typical Power Pedestal

CAUTION:

If shore power service is limited to 15 or 20 Amps, use of light duty extension cords and electrical adapters will create a voltage loss through the cord and at each electrical connection. Line voltage loss and the resistance at each electrical connection can be a hazardous combination. Damage to sensitive electronic equipment may result.

CAUTION:

DO NOT remove cover from the shore power supply to troubleshoot electricity to the motorhome. Serious personal injury or death may occur. If there is no power to the motorhome, inform the park manager. It is the park manager's responsibility to fix any problems with the shore hook-up at the site.

NOTE:

To avoid shore power overload when hooked to 30 Amp service, determine appliances current load prior to turning on appliances or using interior outlets.

- If cable service is provided, hook-up a 75 Ohm RG59 or RG6 cable to the cable connection in the service center.
- A phone connection port is provided in the service center. Phone utility outlets are placed throughout the motorhome, including a phone line for Pay-Per-View movies and events.
- Attach a potable water hose to the city water connection in the service center.

- Hook-up the sewer hose. Sewer drain pipe diameters are generally either three or four inches. Proper sewer hose adapters will ensure against leaks or spillage. With the sewer hose properly connected open the grey water valve (small valve). The black water valve (large valve) remains closed until the tank is full or until time of departure.

DRY CAMPING

Below are suggestions to follow when staying at a location that does not have electrical, water or sewage hook ups. Plan ahead and conserve resources.

Before arriving at the site, ensure batteries are fully charged and properly maintained (see **Section 8, Batteries - House, under “Battery Maintenance”**), the fresh water tank and water heater are full and waste holding tanks are empty.

To conserve water and fuel:

- Operate the refrigerator on propane. Plan what is needed from the refrigerator prior to opening. Conserve propane by cooking over a campfire.
- Operate the water heater on propane when hot water is needed. Turn the system on about twenty minutes prior to use. Once heated, water will remain hot for several hours. Turn the system off when not in use.
- Set the thermostat temperature slightly lower than desired to prevent frequent cycling of the heating system.

- Know tank capacities and routinely check fuel levels, especially during cold weather.
- Use ventilation fans to reduce roof AC use.
- Frequently monitor water consumption. Limit shower usage; turn water off when soaping down and back on to rinse. When water conservation is critical, take a sponge bath or use campground shower facilities if available. Do not fill the sink with water to wash only a few dishes. Use disposable dishes when possible.
- Evacuate waste holding tanks prior to filling fresh water tank.

To conserve battery power:

- **Do not** allow batteries to fully discharge before operating the generator. If possible, run the generator twice a day (morning and afternoon) to charge the batteries.
- Turn off the inverter when not using it for 120 Volts AC.
- Turn off interior 12 Volt DC power whenever possible. Refrigerator, battery charging and inverter operation is not affected. Turn off small battery operated items i.e., porch, bay exterior step, generator and engine compartment lights, etc. Turn off the antenna boost when not watching TV. One light left on can quickly reduce battery reserves.
- Keep a working flashlight handy for night trips through the campsite and inside motorhome. When interior lighting is desired, use one light in a central location, such as the vanity. Unscrew all but one or two bulbs.

- Keep the solar panel (if equipped) clean for optimum performance.
- Turn on the water pump only when using water.
- If weather does not permit or an outdoor table is not available, eat at the dinette table by candlelight.
- Operate the generator when using microwave/convection oven.

Typical Current Draw	
Battery Cut-off	1.5 Amps
13" TV	1.7 Amps
Rope Light (10 ft.)	1.3 Amps
Porch Light	2.0 Amps
Fluorescent Bulb (1)	2.1 Amps
Halogen Ceiling Light (1)	.09 Amps

BREAKING CAMP

Preparing the motorhome for travel will require several small tasks. Properly securing and storing items will help to prevent them from getting lost or damaged. Below is a checklist guide to reference when preparing to break camp.

Outside Checklist:

- Disconnect the cable TV and lower the TV antenna.
- Disconnect and stow the telephone line.
- Retract awnings and secure them for travel.
- Close the primary propane tank valve.
- Connect the sewer hose.

- Drain and flush holding tanks. Start by closing the grey water valve. Run enough cold water down sink and shower drains to fill the grey tank at least 50%. Use caution to avoid overfilling or flooding the grey tank. Connect a non-potable water hose to the “Waste Tank Flush” fitting in the lower left corner of the service center. Open the black tank drain valve and allow adequate time for black tank to drain. Close black tank valve and open grey water valve. Water from the grey tank will help to flush the drain hose. Once evacuated, close grey water valve. Disconnect the sewer hose and flush that hose with clean water from a non-potable hose. Store the hose. Replace the sewer cap.
- Fill fresh water tank, then disconnect fresh water hose from the source. Store hose with end cap in place. If applicable, remove the water pressure regulator that is protecting the potable hose from the city water faucet.
- Turn shore power breaker off and disconnect shore line. Wind up and store shore cord. Secure door.
- **Inspect** fluid level in oil bath hubs (if applicable) and check all tire pressures.
- Secure all compartment doors.
- **Inspect** tires and wheels.
- Check for fluid leaks under and around the motorhome.

Engine Checklist:

- **Inspect** the engine, transmission and the engine compartment for fluid leaks.
- **Inspect** the area under the motorhome for fluid leaks or puddles.

- **Check all fluid levels:** antifreeze, oil, transmission, hydraulic and washer fluid.
- **Inspect** belts and hoses for wear.
- **Inspect** wiring for loose, frayed or corroded connections.
- Start engine and listen for unusual noise.
- **Inspect** gauges and controls for proper operation.

Interior Checklist:

- If applicable, retract leveling jacks and allow the air suspension to obtain proper ride height.
- Clear the slide room path and clean the floor. Move the driver seat forward. After confirming bay doors are closed, retract the slide room.

NOTE:

Ignition must be Off and the park brake set to extend the slide-out room. The jacks must be retracted and the motorhome supported by the air suspension before operating the slide-out.

- Secure and fasten all interior doors. Lock the shower door.
- Close roof vents and windows.
- Secure all loose, heavy or sharp objects in case of a sudden stop.
- Close all cabinet doors and drawers.
- Turn off interior lights.
- Turn off the water pump.
- Check the fuel level gauge and all other dash gauges for operation and correct level indications.

Departure Checklist:

- Check items in storage bays to ensure shifting or damage of items will not occur.
- Look around, above and under the motorhome for obstructions. Check for debris stuck between the rear dual tires.
- Close and lock outside compartment doors.
- Check operation of all exterior lights, headlamp, taillamp, brake and clearance lights.
- Secure all awning travel locks.
- Ensure jack pad is clear of debris when retracting hydraulic jacks. Loose rocks, gravel and debris can be thrown from the jack pad and can possibly damage the tow car.
- Secure and lock the entry door for travel.
- Pull forward out of the campsite. Ensure the site is clean and no items are forgotten.

EMERGENCY ROADSIDE PROCEDURES

If an emergency situation occurs, use the appropriate braking technique and pull off the roadway a safe distance from traffic (if possible). Set the parking brake and turn on the hazard warning flashers, especially when parked alongside traffic lanes. In the event of an emergency stop due to a mechanical breakdown or other motorhome related problems, contact the manufacturer’s customer support or an emergency service provider. Road flares or reflective warning signs should be displayed if the motorhome is on the side of the road for any length of time.

EMERGENCY SERVICE PROVIDER		
EQUIPMENT	PROVIDER	EMERGENCY #
Motorhome	Monaco Customer Support	1-877-466-6226
Engine	Cummins Assistance Center	1-800-343-7357
Transmission	Allison Transmission	1-800-524-2303
Tires	Goodyear	1-877-484-7376
Towing	Owners Advantage Program	1-877-211-8135

Guidelines for placing warning triangles depend upon the road characteristics and visibility. **For example:** The standard placement is 10, 100 and 200 ft. from the rear of the motorhome when on a divided highway or one-way road. On a two-way road, with traffic traveling both directions, the same placement would also be required at the front of the motorhome. Roads with curves and hills may require the placement of the last/furthest triangle to be 500 ft. behind the motorhome in order to safely warn approaching traffic.

In Case of Flat Tire

In the event of a flat tire, it is recommended to call for roadside assistance. The size and weight of the motorhome and its tires require proper equipment to change the tire. A professional service technician will have the equipment and training needed to repair or replace the tire. In the case of sudden tire failure, avoid heavy braking. Hold the steering wheel firmly and gradually decrease speed. Slowly move to a safe off-road place, which should be a firm level spot. Turn the ignition **OFF** and turn the hazard flasher system **ON**. Save the old tire for possible warranty coverage.



WARNING:
Do not crawl under the motorhome for any reason if a wheel has been removed. Any number of circumstances could cause the motorhome to suddenly fall, resulting in severe injury or death.


WARNING:
If a flat tire cannot be repaired, the replacement tire must be of the same size, weight rating and load range as the original tire.

Dead Chassis Battery

A weak or discharged battery will not supply the amount of **CCA (Cold Cranking Amps)** necessary to initiate the required voltage to start the engine. If the engine fails to crank, or cranks slowly due to a weak chassis battery, there are electrical back-up systems in place that may increase chassis battery voltage.

Battery Boost Switch:

The Battery Boost switch (located on the driver's console) engages a heavy-duty solenoid to electrically connect the house batteries to the chassis batteries in the event the engine will not crank or cranks slowly. The solenoid is designed for short-term high current intermittent use. Engaging the boost solenoid for an extended period will damage the solenoid.

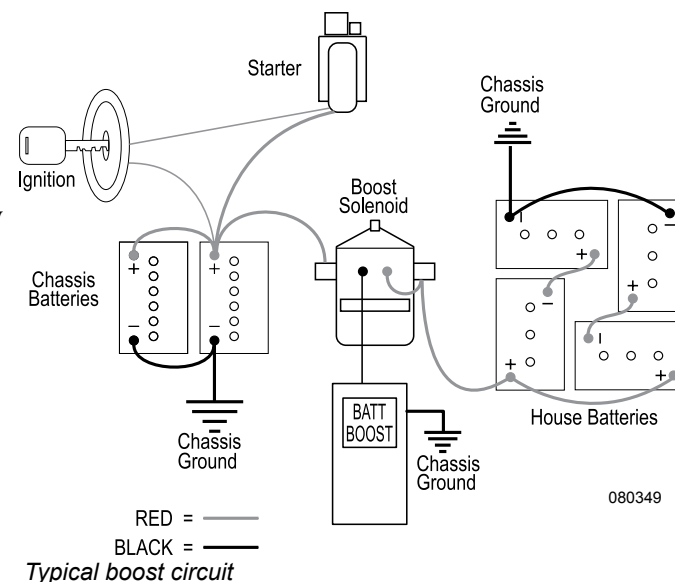

Jump Starting Using Battery Boost Switch:

- With the ignition key **OFF**, press and hold the Battery Boost switch for ten seconds. After ten seconds, continue to hold the switch down and turn on the ignition. If voltage is sufficient, try to start the engine.
- If the engine fails to crank or does not crank fast enough, discontinue the attempt. Continued attempts will only diminish any remaining surface charge in the chassis battery and end future alternative attempts.
- Next, start the generator. This may require using the Battery Boost switch for the generator to start from the engine battery. Once the generator is operating, the electrical combination of the generator and the inverter will charge the batteries.


- Allow the generator to run approximately ½ hour before attempting to start the engine.
- After ½ hour of generator operation, leave the generator on and hold down the Battery Boost switch for one minute. Release the switch for one minute, then press the switch again for one minute. Alternate this cycle three to five times.
- Next, hold the switch down and turn the ignition **ON**. If voltage is sufficient with the Boost switch held down, try to start the engine. If the engine fails to crank, or fails to crank quickly, the chassis battery may be depleted and the motorhome will require jump-starting or an external charger hooked to the chassis battery.

Jump-Starting Using an External Source:

When using jumper cables to start the engine, the cables must connect in a parallel configuration. That is, positive (+) to positive and negative battery (-) to negative chassis (-). Always connect the positive (+) before connecting the negative (-). To prevent arcing when disconnecting the cables; disconnect the negative (-) before disconnecting the positive (+).

CAUTION:

DO NOT use the towed vehicle for jump-starting. The charging system of the towed vehicle does not supply the amperage necessary to jump-start the motorhome. Voltage sensitive equipment on the towed vehicle can be damaged and render the towed vehicle disabled.

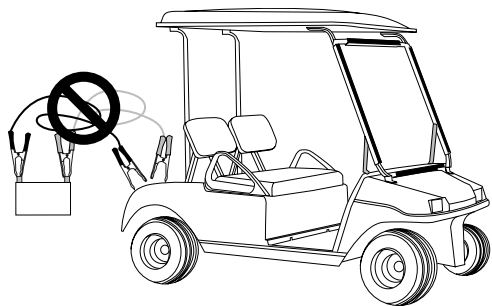

Do not use incompatible voltage sources for jump starting 020364

WARNING:


Always ventilate the battery compartment prior to any work or service to the batteries. Gas emitted by the batteries can explode when exposed to smoking material, flames, sparks or other sources of ignition, resulting in injury or vehicle damage. Batteries contain sulfuric acid that can burn skin, eyes and clothing. DO NOT connect the end of the second cable to the negative (-) terminal of the battery to be jumped. Connect only to the chassis, away from the battery.

1. When using an external electrical source to connect to the chassis battery, turn the main battery disconnect switches OFF prior to hooking up the jumper cables.
2. Hook up the cables then wait several minutes to allow a surface charge to build in the chassis battery before attempting to start the engine.
3. Turn ON the battery disconnect switches and attempt to start the engine. DO NOT crank the engine more than a few seconds.

4. After the engine has started, disconnect the cables. Disconnect the negative (-) cables before disconnecting the positive (+) cables to prevent arcing.
5. If the engine does not crank, or cranks slowly, DO NOT CONTINUE. Extensive damage, fire or injury can occur. Obtain help from a qualified technician.


CAUTION:

A large amount of electrical current is required to jump-start an engine. The sizes of the battery, alternator and jumper cables supplying the “jump” are current limiting factors. Wait a sufficient amount of time for a surface charge to build before attempting to start the engine. Voltage fluctuations that occur during a jump-start procedure can damage sensitive electronic equipment and charging systems. If a jump-start is necessary, it is recommended to call Roadside Assistance. They will have the equipment necessary to jump-start the motorhome.

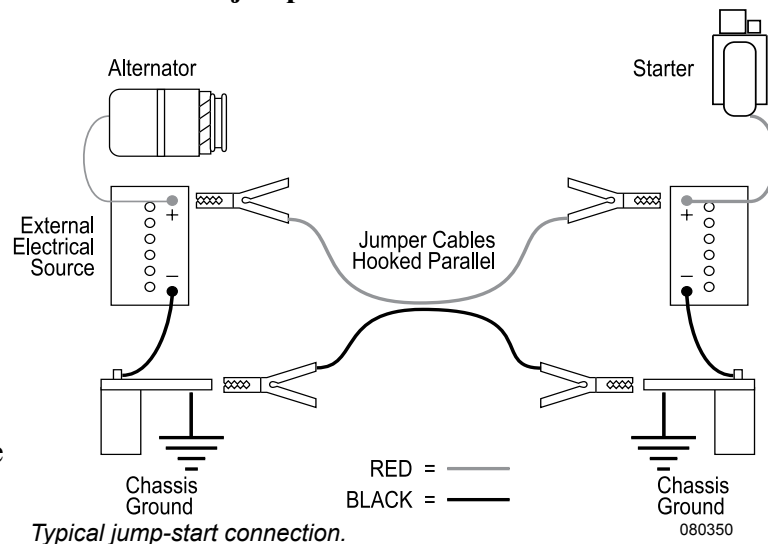


TOWING PROCEDURES

If calling a towing company for service, it is recommended to use a lowboy/landall type of trailer. If a tow truck is used it needs to have a support arm that goes under the motorhome and secures to the front axle. Inform the tow company of the axle weights and total weight of the motorhome.

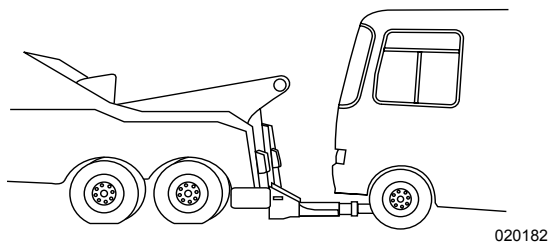


020182

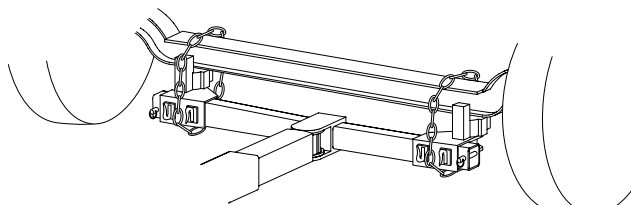

020183

Other important information is the length of the motorhome, number of passengers and milepost location. Two tow trucks may be necessary to tow the motorhome and a trailer or tow vehicle if it is not operational.

The towing company may need to locate the air nipple to release the air brakes (air brakes only). The air nipple is located in the generator compartment and should be used by towing personnel only.

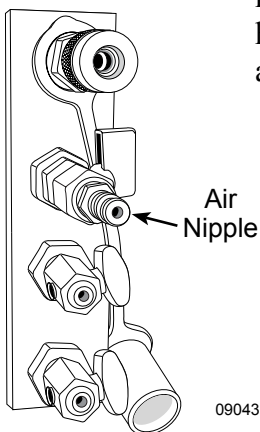

090435f

Air Nipple: Located roadside in generator compartment


Generally, if the motorhome ever needs to be towed, use the following instructions:

- Secure any loose or protruding parts if the motorhome is damaged.
- **Inspect** the points of attachment on a disabled motorhome. If attachment points are damaged, select other attachment points at a substantial frame structural member.
- Never allow anyone to go under a motorhome while it is being lifted by towing equipment unless the disabled motorhome is adequately supported by safety stands.
- **Do not** tow the motorhome from the rear. Towing from the rear will severely overload the front tires and suspension, possibly resulting in tire and/or front suspension failure. Rear frame extensions are not designed to support weight loads imposed by lifting the motorhome from the rear.
- If the rear wheels are disabled, place the motorhome on a flat bed trailer, or use a heavy duty dolly under the rear wheels and tow the motorhome from the front.

- The drive shaft must be removed to prevent damage to the transmission. Secure end caps to prevent losing or contaminating the needle bearings.
- The mud flap may need to be removed to prevent damage due to limited ground clearance.
- When towing a motorhome equipped with the Air-Leveling System, the ignition **MUST** be left in the **ON** position. The **Travel** indicator lamp on the panel must be illuminated for the air suspension to operate. If the ignition system is not functioning, or if chassis voltage is below specification, the motorhome must be placed on a lowboy/landall trailer to prevent suspension damage.

WARNING:

In case the motorhome requires towing, ensure all precautions are followed. The drive shaft must be disconnected and the mud flap may need to be removed. The manufacturer Will Not cover damage to the motorhome caused by a towing company.

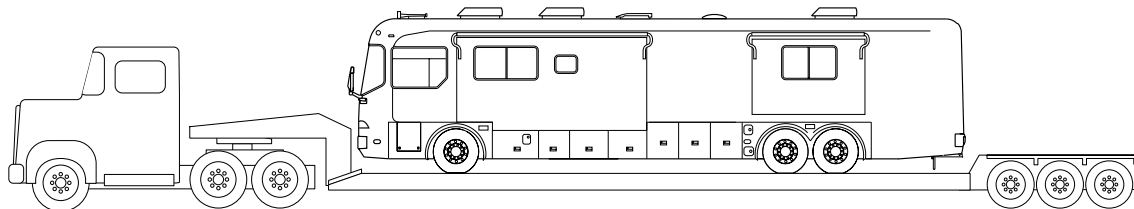

020228

Disabling Parking Brake



The park/emergency brakes apply to the drive axle only. The brakes can be manually released if the air system will not build sufficient air pressure to release them. This emergency procedure is to be used by trained technicians or towing personnel to move the motorhome to a safe location or repair facility.

WARNING:

Only trained personnel should perform this procedure. Brake chamber spring is under high tension. Removal of retaining band could result in serious injury or death.

Disabling Brakes:


- Place wheel chocks firmly against the wheel before performing this procedure.
- Remove the plug from the center of rear brake chamber on the drive axle.
- Remove the caging tool from its holder on the brake chamber and insert the tool into hole. Turn clockwise to engage.
- Screw the nut and washer onto the caging tool. Use a wrench to tighten the nut, compressing the internal spring to release the brake.
- Repeat procedure for the other side.

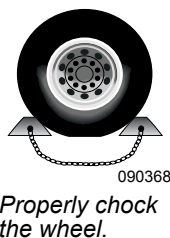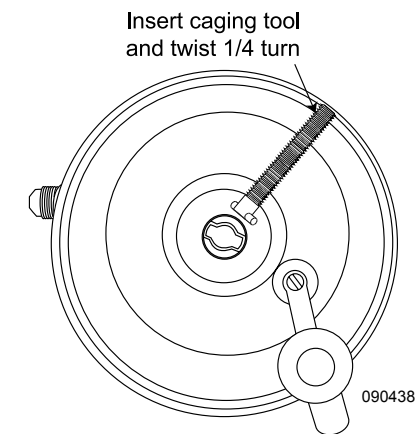

Enabling Brakes:

- After towing, or when air pressure is again available, loosen the nut and remove the tool. Return the caging tool to its original location and replace the plug.
- Repeat for the other side.

Insert Caging tool here. Twist 1/4 turn clockwise. Install nut & washer. Tighten to release spring brake.

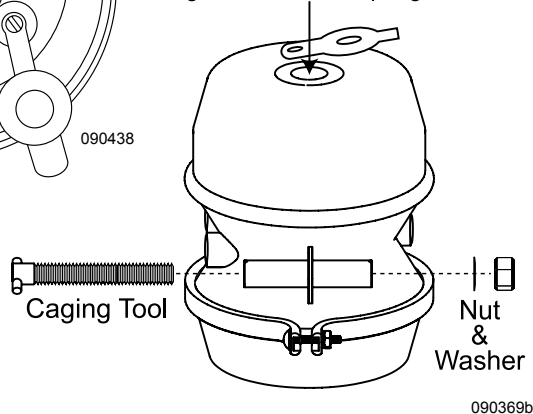

WARNING:

Failure to securely chock the wheels can result in the motorhome rolling when the spring brakes are released. Severe injury or death can occur.

TIRES

Maintaining proper tire inflation pressure is one of the most critical aspects of travel. Improper pressure will lead to abnormal wear and/or sudden tire failure.

All tire positions must be weighed separately with the motorhome fully loaded to determine proper tire inflation pressure. If one tire position on the axle is heavier than the other side, inflate both sides according to the heaviest side. This will provide correct air pressure across the axle while cornering. To obtain the maximum wear and best service from tires, it is helpful to understand their components and functions.

Tire Components:

Tread: Provides traction and cornering grip.


Belts: Stabilize and strengthen the tread.

Sidewall: Protects the side of the tire from road and curb damage.

Body Ply: Gives the tire strength and flexibility.

Bead: Assures an air-tight fit with the wheel.

Inner Liner: Keeps air inside the tire.

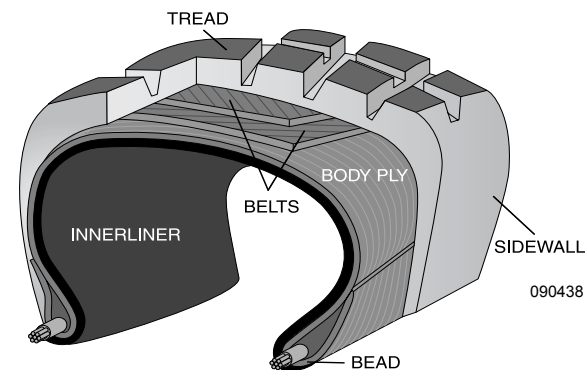

Importance of Air Pressure

The most important factor in maximizing the life of the tires is maintaining proper inflation. Driving on any tire that does not have the correct inflation pressure for the load of the motorhome is dangerous and may cause premature wear, tire damage and/or loss of control of the motorhome.

An under-inflated tire will build up excess heat that may go beyond the design limits of the rubber and radial cords and could result in sudden failure. An under-inflated tire will also cause poor motorhome handling, rapid and/or irregular tire wear and increase rolling resistance that results in decreased fuel economy.

An over-inflated tire will reduce the tire footprint/contact patch with the road, thus reducing traction, braking capacity and handling of the motorhome. Over-inflation of a tire for the load will result in a harsh ride, uneven tire wear and is susceptible to impact damage. Maintaining correct tire inflation pressure for each loaded wheel position on the motorhome is of the utmost importance and must be a part of regular motorhome maintenance.

WARNING:

Driving on a tire that is under-inflated can exceed the design limits of the tire and may damage the sidewall and can result in sudden tire failure. A damaged sidewall can burst upon inflation resulting in serious damage, injury or death. Aged tires are also susceptible to sidewall damage.

Tire Pressure Inflation Guideline

Federal law requires that the specifications for the tire's maximum load rating be molded into the sidewall of the tire. The amount of air pressure to use is dependent on the weight of the motorhome when fully loaded. The tire chart indicates the weights that can be properly supported by varying air pressures. Decreasing air pressure decreases load carrying capacity.

Always comply with the tire manufacturer's recommended pressure inflation guideline. The actual weight of the motorhome can vary significantly depending on how it is loaded. For optimum tire wear, ride and handling always comply with the manufacturer's guideline. A tire inflation chart listing proper inflation pressure for different loads can be found in this section.

The tires of the motorhome are inflated to pressure(s) appropriate for the actual weight on each axle in the unloaded, shipped condition. When the motorhome is loaded, check and adjust the inflation pressure on each tire as needed.

Always inflate tires to the pressure indicated in the tire chart for the load carried by the tire.

WARNING:

Do not overinflate or underinflate the tires.

The **Gross Axle Weight Rating (GAWR)** of the axles listed on the federal certification label attached to the motorhome is the maximum allowable loaded weight on an axle.

When the actual loaded weight of the motorhome and the weight on each axle is unknown, follow the recommended tire inflation pressure(s) listed on the federal certification label. When loading a motorhome never exceed the motorhome's **Gross Vehicle Weight Rating (GVWR)** or the **GAWR** for each axle.

Contact the tire manufacturer for further information concerning proper tire pressure inflation and other tire issues.

Load Inflation Table

Understanding the Load Inflation Table:

The tire size on the left margin of the table determines single inflation reading or dual inflation reading denoted with a D or S. Single is for the front axle and tag axle (if equipped). Dual is for the drive axle. On the following chart, find the corresponding psi at the top columns to see the corresponding maximum weight capacity for that psi.

Rated load capacities are listed for individual tires in a Dual or Single position.

NOTE:

Every load range has a maximum rating as well as a minimum rating. Do not exceed those ratings.

WARNING:

Do Not exceed the tire manufacturer's maximum speed rating.

Goodyear Load Inflation Table

Tire Size	Max Speed Rating (MPH)	Single (S) Dual (D)	INFLATION PRESSURE PSI												
			65	70	75	80	85	90	95	100	105	110	115	120	125
295/80R22.5	75	S D				5480	5750	6020	6285	6550	6810	7070	7320	7580	7830(H)
						4855	5100	5335	5570	5805	6035	6265	6490	6720	6940(H)

The motorhome manufacturer is not the author of this chart and makes no representation or warranty concerning the accuracy of the information disclosed by the chart. Monaco is not responsible for the accuracy of the information disclosed or for any errors within the Tire Inflation Chart. **WARNING: Do not exceed the tire manufacturer's maximum speed rating.**

Inspecting & Pressure

Weigh all tire positions separately and use the tire charts to determine correct tire inflation pressure. All pressures are rated at a cold psi. Cold psi is defined as early in the morning before the day's ambient temperature, heat of the sun or heat generated while driving have caused the tire pressure to temporarily increase. Check tire inflation pressure every morning before driving. Use a quality truck tire gauge with an angled head to ensure access to the dual wheel positions of the drive axle.


Ensure the valve cap is replaced on the stem after the inflation pressure is checked. Use valve stem caps with a positive seal to prevent air escaping from the valve stem. If extension hoses are on the valve stem, make sure they are good quality reinforced stainless steel braid. Attach hoses securely to the outer wheel. The valve stem cap guarantees the valve core will remain free of dirt and foreign material. Material lodged between the valve core and internal stem can cause slow leaks resulting in tire failure.

Optimum tire performance is achieved at proper inflation pressure for the load carried. **Do not** mix tires of different tread patterns, size or construction. The difference in traction could cause abnormal handling, rear end gear bind and mechanical damage to the drive train.


CAUTION:
Never let air out of a hot tire.

Over-inflation can cause:

- Hard ride.
- Tire bruising or carcass damage.
- Rapid tread wear in the center of the tire.

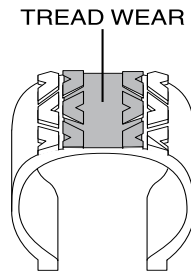

Over-inflation wears in center of tire.

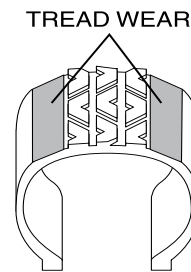

Under-inflation wears on edges of tire.

090440b

Under-inflation can cause:

- Tire squeal on turns
- Separations
- Rapid and uneven wear on the edges of the tread
- Circumferential breaks
- Tire container may bruise or rupture
- Higher risk of road hazard
- Tire cord breakage
- Loss of casing durability
- Excessive tire temperature
- High fuel consumption
- Reduced handling quality
- Sudden tire failure

WARNING:


A slow leak may go unnoticed on one of the dual tires. This can cause the good tire to fail by exceeding the load limit. Tires with damaged sidewalls can burst upon inflation. A flat or nearly flat tire can also generate enough heat from friction to ignite.

Unequal tire pressures on same axle can cause:

- Uneven braking
- Swerve upon acceleration
- Steering lead
- Torque steer
- Reduced handling quality

WARNING:

For safety purposes, clear the area of people and pets during tire inflation. Inflate tires using a remote inflation device.

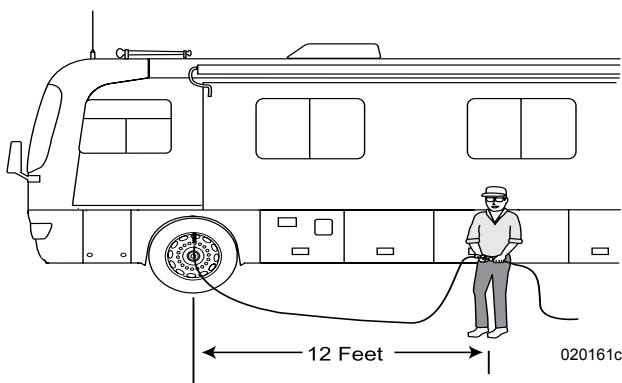

Air Pressure Checklist

1. When inspecting the tires, confirm the tires are cool before increasing or reducing air pressure. Driving a short distance can heat up tires.

NOTE:

If the motorhome must be driven a distance to get air, check and record the tire pressure first and add the recorded calculation when reaching the pump. It is normal for tires to heat up and the air pressure to increase as driven. Never reduce air pressure when tires are hot.

NOTE:

Air pressure in a tire goes up (in warm weather) or down (in cold weather) one to two pounds for every 10° F. of temperature change.


2. Remove cap from the valve on one tire.
3. Firmly press a tire gauge onto the valve and record reading.
4. Add air to achieve recommended air pressure.
5. If the tire is overfilled, release air by pushing on the metal stem in the center of the valve. Recheck the pressure with the tire gauge.
6. Replace the valve cap.
7. Repeat with each tire.
8. Visually inspect all the tires for nails or other objects that could be embedded or puncture the tire and cause an air leak.
9. Check the sidewalls for gouges, cuts, bulges or other irregularities.

Tire Support When Leveling


Extreme caution must be taken to ensure the tires are fully supported when placing blocks under the tires. The load on the tire should be evenly distributed on the support block. In the case of dual tires, distribute the load evenly on blocks for both tires.

Tire "Support" Methods


INCORRECT
Singles
Only a portion of the tire is supporting the full load.

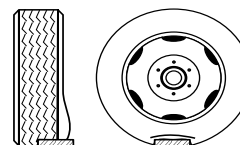


Duals
One tire or a portion of one tire is supporting the full load.

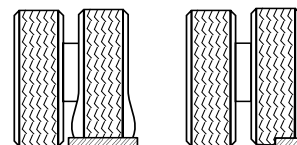

One tire or a portion of the two tires supporting the full load.

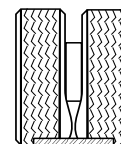


CORRECT
Singles

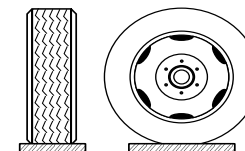


Tire Footprints



Duals

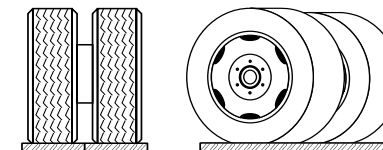

Dual Tire Footprints

 

020063 mod

If not properly supported, the steel cables in the sidewall of the tires may be damaged and could lead to premature fatigue of the sidewall.

CAUTION:

Supporting the tires prevents damage to the sidewall of the tires but does not prevent tire roll.

Tire Vibration

Sudden tire failure is often preceded by tire vibration. Symptoms that can cause tire failure are a bulge in the sidewall or swelling in the tire carcass. Striking an object or large hole in the road surface can damage a tire. Inspect the tires periodically thereafter as rotational forces can continue to stress damaged areas and later manifest in tire failure. If an unusual vibration begins, or a bulge is noticed in the sidewall, have the tires evaluated by a qualified professional as soon as possible.

Tire Rotation

Tire rotation can increase the useful life of the tires by achieving uniform wear on all of the tires. Have the tire manufacturer determine the rotation pattern. The first tire rotation is the most important in determining which rotation pattern to use. Any unusual or unique wear patterns, or indications of uneven wear that may have developed, should be evaluated for possible tire rotation. Misalignment, imbalance or other mechanical problems may exist and will need to be corrected prior to rotation.

Tire Replacement Information

As represented within the tire manufacturer's published tire data guide, the size and rated load carrying capacity of the original equipment tires on your motorhome meet or exceed the motorhome's maximum axle weight/load ratings.

Criteria used to determine when tire replacement is necessary are road hazard damage, wear, and age. Tire replacement based on wear is determined by either measuring the tire groove depth or a visual inspection of wear bars. Replace tires when the groove depth is 2/32" or less on rear tires and 4/32" or less on front tires. Wear bars are raised areas cast into the groove of the tire. Replace the tire when the wear bar in the groove is even (preferably before) with the road surface contact patch. A worn out tire cannot adequately channel water through the groove, which will result in hydroplaning.

The tire manufacturer determines tire replacement based on age. While ozone inhibitors in the rubber help extend the life expectancy of a tire, exposure to the elements slowly breaks down the rubber, which can then suddenly fail when put to use. Tires that are five to seven years old (depending upon environment) are considered age worn and need to be replaced for safety even though the tire may not outwardly show age weathering and still has considerable tread.

Replacement tires must be of the same manufacturer brand, model, size, and load range at each wheel position (matched set) and must have a load rated carrying capacity equal to or greater than the original equipment tires. Mixing tires of a different brand, model, size, load rating and load range can cause unusual handling and uneven braking due to different traction coefficient and could result in sudden tire failure or loss of control due to non-symmetrical handling.

WARNING:

Do not mix tires of different sizes, load ranges or manufacturer brand types or models. Any and all replacement tires must have a rated load carrying capacity equal to or greater than the gross axle weight/load ratings as identified by the federal placard.

WARNING:

In many instances tire life is not determined by mileage or wear but by age. Tires are subject to weathering. Weathering cracks can appear in the sidewall and also run along the edge of the tire. Though the sidewall of the tire may look structurally sound, weathering can occur inside the groove of the tread. If any tire exhibits age weathering, replace all tires.

CAUTION:

Signs of irregular tread wear, exhibited by scalloping or unusually smooth areas on the tire surface, are cause for concern. Immediately have the tire manufacturer inspect the tires.

Storage of Tires - Long Term

A cool, dry garage with a sealed cement floor is the preferred method of storage. Tires stored outside may prematurely age.

Prior to Storage:

- Thoroughly clean the tires.
- Unload the motorhome to reduce weight on the tires.
- Ensure the surface is reasonably level, firm, clean and has adequate drainage.
- Inflate the tires to the maximum inflation pressure as indicated on the Federal Identification Tag.

During Storage:

- Cover the tires to block direct sunlight.
- Periodically check tires for proper pressure.
- Move the motorhome every three months to prevent cracking in bulge areas, as well as flat spotting from prolonged sidewall strain and tread deflection.

Removal from Storage:

Before removing the motorhome from long-term storage, thoroughly **inspect** each tire tread area and air pressure. If tires have lost air during storage, inflate them to the correct pressure.

WHEEL MOUNTING

Hub Piloted Mounting:



- Flange nuts generate higher clamping force. Always use grade eight studs with hub mount wheels.
- Before installing the wheels, lubricate the hub pilot pads with a drop of oil to prevent galling. **Do not** lubricate any other wheel or hub surface.
- For a hub with intermittent pilot pads, position a pad at the twelve o'clock position to center the wheel and reduce runout.

NOTE:


Loosen and tighten lug nuts in sequence (as in illustration). Sequence tighten to 50 ft. lbs. first, then sequence tighten to 500 ft. lbs. Over-tightening can cause distortion.

WARNING:

Do not use wheels or lug nuts different than the original equipment as this could damage the wheel or the mounting system. Damage to the wheel or mounting system could cause a wheel to come off while the motorhome is in motion.

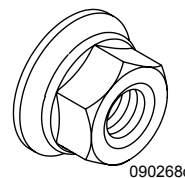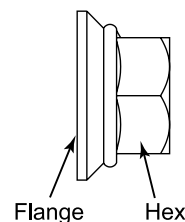

Flange Nut:
Front & Side
View.

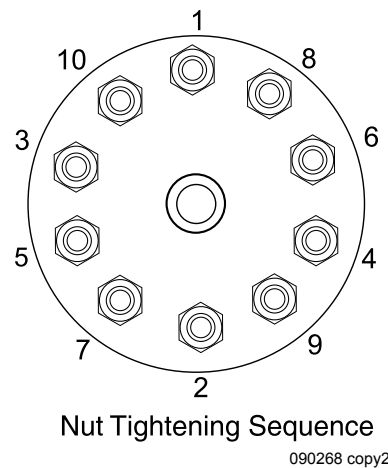

Front Wheels:

Slide the front wheel over the studs. Use caution to avoid damaging stud threads. Snug the nuts in sequence. When all nuts have been seated, tighten the nuts to 500 ft. lbs. in sequence (as shown in illustration).

Dual Rear Wheels:

Slide the inner dual wheel over the studs. Use caution to avoid damaging threads. Align the handholds for valve access and slide the outer dual wheel over the studs, again using caution to avoid damaging the stud threads. When all nuts are seated, tighten the nuts to 500 ft. lbs. in sequence (as in illustration).


The hub mount wheels use two-piece flange cap nuts for both front and rear applications. No inner cap nuts are required.

Torque the Nuts Properly:

- Tighten the wheel nuts to the recommended lug nut torque. **Do not** over-tighten.
- Maintain the nut torque at the recommended level through planned periodic checks or at 10,000 mile intervals, whichever comes first.
- If air wrenches are used, they must be periodically calibrated for the proper torque output. Use a torque wrench to check air wrench output and adjust line pressure for the correct torque.

WEIGHING THE MOTORHOME

Proper weight distribution, load management and operating within established limitations will aid in safe and enjoyable travel. The information in this section outlines guidelines and provides information on the proper techniques for weighing to accurately determine total weight, axle weights, balance and tire inflation pressure. According to the National Highway Traffic Safety Administration, most tire failures are a result of under-inflated tires. Load management, weight distribution and properly inflated tires are the responsibility of the operator. The motorhome must be weighed in a loaded, ready to travel condition to correctly determine how much weight is placed on each wheel position, then added to determine the overall weight upon a single axle. This may require one or more adjustments and the motorhome subsequently weighed again to verify proper and adequate adjustments. The first thing to determine is the maximum allowable weight of the motorhome. This information is found on the Federal Certification Label located adjacent to the driver seat under Gross Vehicle Weight Rating. This is the maximum allowable gross weight and cannot be exceeded.

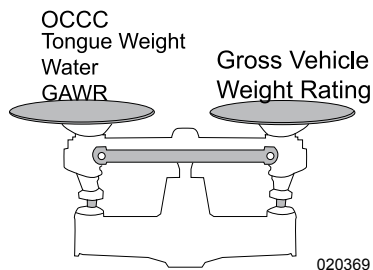

Incomplete Vehicle Manufactured By –

This certification label lists the name of the chassis manufacturer, date of completion and location of construction. The gross vehicle weight rating and gross axle weight ratings. The tire size, load range and appropriate tire inflation pressure based on gross axle weight ratings when compared to the tire manufacturer load inflation table. Confirms the chassis conforms to U.S. Federal Motor Vehicle Safety Standards (FMVSS) under their respective guidelines. The Vehicle Identification Number (VIN) is located at the lower right.

Manufactured By –

This certification label lists the body builder company and designate name, date of completion and location of construction and the name of the incomplete vehicle manufacturer. The gross vehicle weight rating and gross axle weight ratings. The tire size, load range and appropriate tire inflation pressure based on gross axle weight ratings when compared to the tire manufacturer's load inflation table.

INC VEH MFD BY:	MONACO RV LLC COBURG, OREGON	XXXXXX	ROADMASTER DIV.	
			Date of Manufacture: XX/XXXX	
kg(lbs)	GVWR XXXXX(XXXXX)	GAWR/FRT XXXX(XXXXX)	GAWR/REAR XXXXX(XXXXX)	GAWR/TAG XXXX(XXXXX)
AXLE	TIRE SIZE - LR	RIM	kPa(psi)	COLD
FRT	XXX/XXRxx.XH	XX.XHxx.XX	XXX(XXX)	SINGLE
REAR	XXX/XXRxx.XH	XX.XHxx.XX	XXX(XXX)	DOUBLE
TAG	XXX/XXRxx.XH	XX.XHxx.XX	XXX(XX)	SINGLE

THIS INCOMPLETE VEHICLE CONFORMS TO U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS 102, 106, 119, 120, 121, 124 AND MAY BE MANUFACTURED AS A MULTIPURPOSE PASSENGER VEHICLE (MPV). THE COMPLETED VEHICLE WILL CONFORM TO THE AFORMENTIONED STANDARDS IF NO ALTERATIONS ARE MADE TO IDENTIFIED COMPONENTS.

VEHICLE IDENTIFICATION NO: XXXXXXXXXXXXXXXXXXXX

Incomplete Vehicle Manufactured by Certification Label.

100230c

MFD BY:	MONACO RV LLC COBURG, OREGON	XX/XXXX		
INC VEH MFD BY:	ROADMASTER	XX/XXXX		
kg(lbs)	GVWR XXXXX(XXXXX)	GAWR/FRT XXXX(XXXXX)	GAWR/REAR XXXXX(XXXXX)	GAWR/TAG XXXX(XXXXX)
AXLE	TIRE SIZE - LR	RIM	kPa(psi)	COLD
FRT	XXX/XXRxx.XH	XX.XHxx.XX	XXX(XXX)	SINGLE
REAR	XXX/XXRxx.XH	XX.XHxx.XX	XXX(XXX)	DOUBLE
TAG	XXX/XXRxx.XH	XX.XHxx.XX	XXX(XX)	SINGLE

THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON DATE OF MANUFACTURE SHOWN ABOVE.
VEHICLE IDENTIFICATION NO.: XXXXXXXXXXXXXXXXXXXX
TYPE: MPV/MHA (MH/AC) UNIT SERIAL #: XXXXXXXXXXXXXXXXXXXX



Manufactured by Certification Label.

100230c

Federal Certification and Weight Labels:

There will be two Federal Certification build labels and as many as three Federal Weight label(s) affixed to the motorhome.

Confirms the completed vehicle conforms to all applicable U.S. Federal Motor Vehicle Safety Standards in effect as of the date of completion of manufacture. The vehicle identification number and the body builder Unit Serial number are located at the bottom of the label.

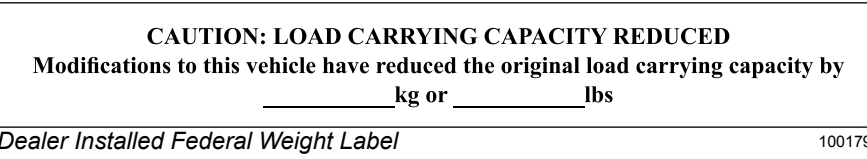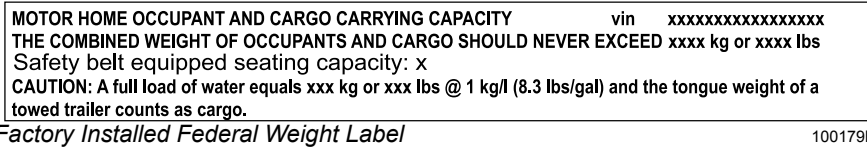

Factory Installed Federal Weight Label –
 This factory installed certification label attached on the screen door lists the vehicle identification number. The maximum allowable combined weight in Occupants and Cargo Carrying Capacity (OCCC). The designated number of seating positions equipped with safety belts for travel and the total amount of weight of fresh water based on the capacity of the fresh water tank and water heater tank. A duplicate weight label is installed next to the Federal Certification labels adjacent to the driver seat.

Dealer Installed Federal Weight Label –
 If this certification label is attached next to the factory installed weight label on the screen door, the dealer has installed equipment and/or accessories after the motorhome left the factory and prior to retail sale. This dealer installed label will list the amount of weight in equipment and/or accessories installed by the dealer. The amount of weight listed on the dealer installed label will reduce the amount Occupant and Cargo Carrying Capacity as stated on the factory installed label by the amount stated on the dealer installed weight label.

NOTE:
 Do not remove these Federal Certification labels. These certificates confirm the chassis and body conform to guidelines and build practices as specified by the respective governmental agencies. The information on these certificates is used by the vehicle owner and the Department of Motor Vehicles (DMV) to register ownership and license the vehicle for travel.

CAUTION:
 Most States limit the amount of weight carried by any single axle position. It is the responsibility of the operator to know the legal weight limit of the State in which they travel. Side roads, surface streets and bridges may further impose weight restrictions.

Weight Terms

The following are definitions of terms used when weighing. It is important each weight term is understood.

- **Gross Vehicle Weight Rating (GVWR):** Maximum permissible weight of this motorhome. GVWR is equal to or greater than the sum of UVW plus OCCC.
- **Gross Combination Weight Rating (GCWR):** The sum of the maximum allowable loaded weight of this motorhome and any towed trailer or towed vehicle.
- **Gross Axle Weight Rating (GAWR):** Load-carrying capacity specified by manufacturer of a single axle system, as measured at tire ground interfaces.
- **Occupant and Cargo Carrying Capacity (OCCC):** Is the weight comprised of occupants, cargo, full fresh potable water weight including water heater and tongue weight of a towed load. Dealer installed equipment and/or accessories reduce OCCC.
- **Unloaded Vehicle Weight (UVW):** Is the weight of this vehicle as built at the factory with full fuel, engine oil, coolants, propane. Factory UVW may be increased by the addition of dealer installed equipment and/or accessories. UVW does not include occupants, cargo, full fresh potable water weight, including water heater, and the tongue weight of a towed load.

Weight Limits:

Numerous Federal, State and local governments mandate weight limits. Understanding the terminology and performing proper weighing procedures will help eliminate confusion. It is important to weigh the motorhome in a loaded, ready to travel condition to ensure the Occupant and Cargo Carrying Capacity (OCCC), GVWR or GAWR are not exceeded.



The total weight of the motorhome in a loaded, ready to travel condition must not exceed the Gross Vehicle Weight Rating (GVWR) or the GAWR for a single axle. The GVWR is the maximum total weight for which the motorhome is rated including occupants, fluids and cargo and any dealer installed equipment or accessories. The GAWR is the maximum weight for which a single axle is rated. The GCWR is the combined total of the GVWR and any towed load. The tires, wheels, chassis frame and/or drive train component(s) may limit the GVWR, GAWR or GCWR or any combination thereof.

Every recreational vehicle, even of the same make and model, will vary in actual loaded axle weight due to different options, floor plans, occupants and cargo. The motorhome must be weighed in a loaded, ready to travel condition to determine actual weight carried by each wheel position and axle.

Each wheel position must be weighed to determine no wheel position is overloaded and to confirm no single axle is overloaded. It is possible be within the GVWR yet overloaded on one wheel position or axle. For this reason it is necessary to weigh each wheel position to determine the actual gross vehicle weight in a loaded, ready to travel condition and how that weight is distributed.

There are two important factors to consider when loading the motorhome: total weight and balance. When loading for travel, place heavy objects as low as possible, preferably on the floor or below in storage compartments. Load weight must be distributed as evenly as possible. Instructions and diagrams to properly weigh the motorhome are presented on the following pages. The heaviest wheel position on an axle will determine the tire inflation pressure for all tires on that axle. Reference the tire manufacturer load inflation table to determine the correct cold inflation pressure.

CAUTION:


State and Local authorities may impose weight restrictions to surface streets, bridges and parkways. These reductions can include maximum single axle weights or an overall maximum weight limitation based on the number of axles per vehicle.

Tag Axle Regulator

The motorhome tag axle is equipped with an air pressure regulator. The tag axle regulator requires adjustment for the tag axle to maintain proper weight distribution. The adjustable regulator and gauge are located in the engine compartment.

The regulator controls the amount of air pressure in the tag axle air bags. Increasing air pressure in the tag axle air bags will increase weight carried by the tag axle and decrease weight carried by the drive axle. Decreasing air pressure in the tag axle air bags will decrease weight carried by the tag axle and increase weight carried by the drive axle.

The regulator adjustment knob has a positive lock. Pull up on the knob to unlock; push down on the knob to lock. Turn the knob clockwise to increase air pressure; turn the knob counterclockwise to decrease air pressure. A stabilization procedure must be performed every time the regulator is adjusted to enable a constant air pressure setting.

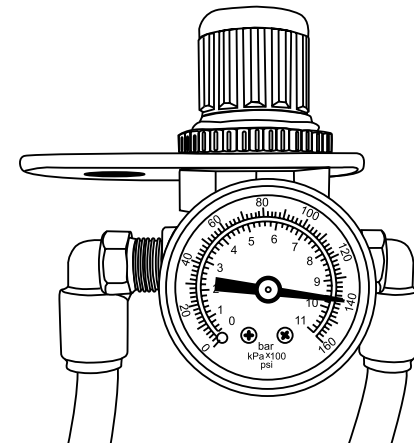

Tag axle regulator located in engine compartment.

090507c



Tag Axle Adjustment

- Start the motorhome and allow the air system to reach a full charge, indicated by release of air from the air dryer.
- Pull the knob to unlock the regulator. Turn the knob clockwise to increase pressure and counterclockwise to decrease.
- Ensure the air system is still at full charge.



- Raise the tag axle using the tag axle switch on the driver console or air leveling control panel. Allow approximately 20 seconds for the system to discharge air from the tag axle air bags.
- Lower the tag axle. The regulator will hold the new air pressure setting.
- Push down on the regulator adjustment knob to lock the setting.

When increasing the air pressure setting, allow approximately a 2 lbs. pressure increase before the stabilization process.


Example: If the desired setting is 30 psi, slowly rotate the regulator adjustment knob clockwise to 28 psi. Perform the stabilization procedure. Regulator setting will stabilize to approximately 30 psi.

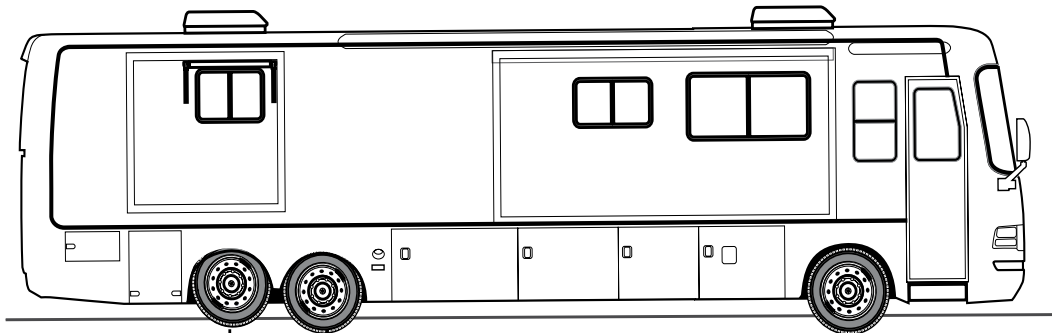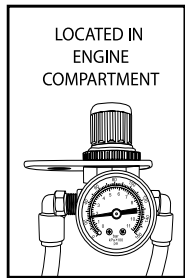

LESS AIR = MORE WEIGHT

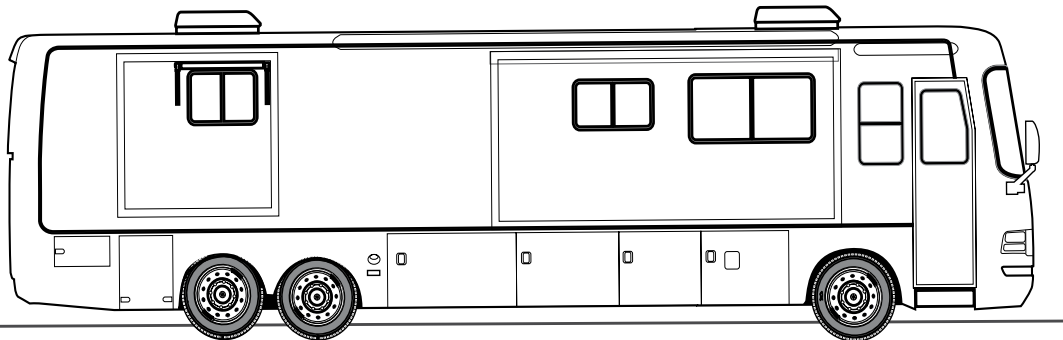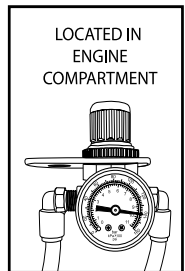

MORE AIR = LESS WEIGHT

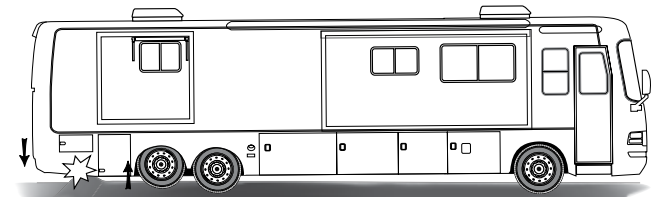

090507

CAUTION:
Raising the tag axle reduces ground clearance.

Tag Axle Regulator Adjustment

090507c

Tire Pressure

The motorhome may weigh slightly heavier on one side. The heaviest wheel position (if applicable) on a single axle will determine the inflation pressure for all tires on that axle due to weight transfer that occurs when cornering. Improperly inflated tires can result in sudden tire failure (blowout). Cargo not properly balanced on the suspension, can result in poor handling, over-stressed chassis components, overloaded wheel positions and/or tires.

How the motorhome is loaded will influence tire inflation pressure and load carried by each axle. This is why each wheel position must be weighed. When the actual loaded weight of the motorhome and the weight on each axle are unknown, follow the recommended tire inflation pressure(s) listed on the federal certification label.

NOTE:

When adjusting tire inflation pressure, each tire on any axle must be inflated to the same pressure. The wheel position carrying the most weight will determine the tire inflation pressure for each tire of that particular axle.

WARNING:

Improperly inflated or overloaded tires can cause a blowout. An overloaded axle can cause a component failure of the suspension system. Tire blowouts or broken suspension components can lead to loss of vehicle control resulting in property damage, personal injury or death.


NOTE:

Contact the tire manufacturer for further information concerning tire inflation pressure and other tire concerns.

Occupant & Cargo Carrying Capacity:

Each motorhome, even of the same model year, floor plan and length, will weigh different due to options and accessories. The GVWR limits the weight of the entire load combination, regardless of the amount of weight of occupants, cargo, water, propane and tongue weight. Weighing will determine the GVWR is not exceeded as this is maximum allowable weight. However, Occupant & Cargo Carrying Capacity (OCCC) weight is comprised of variables in occupants, cargo, fresh water and tongue weight.

While the OCCC is a guide to the maximum allowable weight in combinations of occupants, cargo, water and tongue weight, the amount of weight in each of the categories (occupants, cargo, and water and tongue weight) can be adjusted so one can offset another or reduced entirely to gain advantage in GCWR. While maximum allowable weights are not to be exceeded, if one chooses to carry less water or no water, that can allow an increase in payload of cargo or tongue weight, offsetting one for another and still under maximum allowable weight of GVWR, GAWR, GCWR or OCCC.

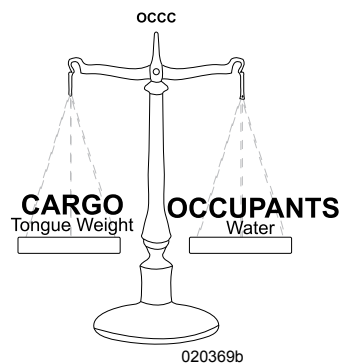


Scales


Certified public scales are located in moving and storage lots, farm supplies with grain elevators, gravel pits, recycling companies and large commercial truck stops. To locate a nearby public scale, check the yellow pages under Scales-Public or Weighers. Expect to pay a small fee.

Three basic types of scales:


- A large platform scale will allow the entire motorhome to fit on the scale to read the gross vehicle weight in one scale recording.
- A segmented platform scale is designed to weigh one axle at a time.
- A segmented platform scale per wheel position reads each wheel position at a time.

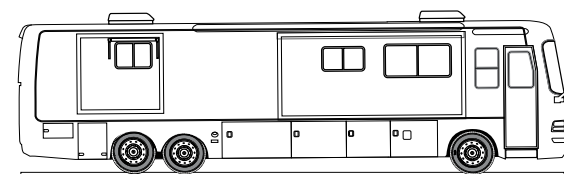

Single Platform

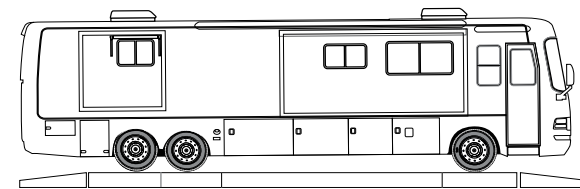

Segmented Platform per axle.

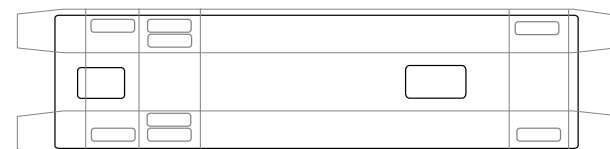

Segmented Platform (Top View) per wheel position. 100233

Each wheel position requires weighing to accurately determine the correct tire inflation pressure. When weighing, the scales and the motorhome must be level to obtain accurate scale readings. A definite lean in the motorhome will produce inaccurate scale readings.

INFORMATION:

The most accurate weighing method is to weigh each wheel position independently. Weighing the entire motorhome or a single axle will not reflect the actual weight carried by each wheel position. A segmented platform scale that reads a single axle may be used if a platform scale that will weigh each wheel position is unavailable. Divide the total axle reading by two for an approximation of what each wheel position may average. When weighing the dual wheel position on the drive axle, dividing that wheel position scale reading by two will determine the weight carried by each tire.

Six-Point Weighing


The motorhome must be weighed in a loaded, ready to travel condition to obtain accurate scale readings and to determine the proper tire pressure. All slide rooms must be retracted when weighing. The purpose for weighing the motorhome is to ensure the GVWR, GAWR and GCWR are not exceeded and that the tires are inflated to the correct pressure as recommended by the tire manufacturer. The exemplar worksheet is a guide.

- Record the GAWR of the front (steer) axle. Example: GAWR of the front axle listed on the Federal Certification label is 13,000 lbs.

	Gross Axle Weight Rating (GAWR)	Roadside	Curbside	Total Axle Weight	Sum Difference
Front Axle	13,000	A. 6150	D. 6200	12,350	650
Rear Axle	20,000	B. 9350	E. 9500	18,850	1,150
Tag Axle	10,000	C. 4400	F. 4250	8,650 @ 75 PSI	1,350
Total	43,000	19,900	19,950	39,850	3,150

Exemplar Worksheet

100235b

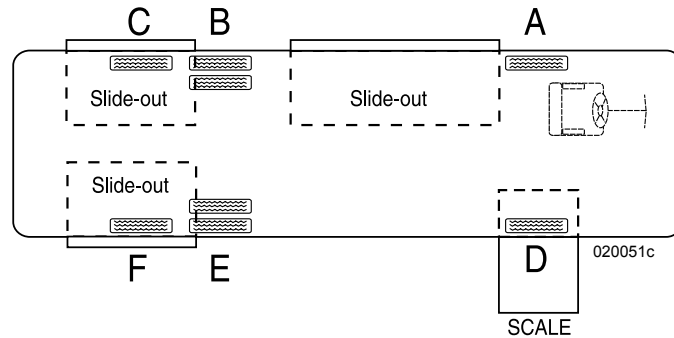

Using the chart, record 13,000 lbs. under front axle GAWR.

Weigh roadside side front axle (Scale A) and record weight on chart Roadside front axle. Example: 6150 lbs.

Weigh curbside side front steer axle (Scale D) and record weight on chart Curbside front axle. Example: 6,200 lbs.

- Record the GAWR of the rear (drive) axle. Example: GAWR of the rear axle listed on the Federal Certification label is 20,000 lbs. Using the chart, record 20,000 lbs. under rear axle GAWR.

Weigh roadside drive axle (Scale B) and record weight on chart Roadside rear axle. Example: 9,350 lbs.

Weigh curbside drive axle (Scale E) and record weight on chart Curbside rear axle. Example: 9,500 lbs.

- Record the GAWR of the tag axle. Example: GAWR of the tag axle listed on the Federal Certification label is 10,000 lbs. Using the chart, record 10,000 lbs. under Tag axle GAWR.

Weigh roadside tag axle (Scale C) and record weight on chart Roadside tag axle. Example: 4,400 lbs.

Weigh curbside tag axle (Scale F) and record weight on chart Curbside tag axle. Example: 4,250 lbs.

- Add scale readings from Roadside and Curbside front axle. Example: 12,350 lbs.
- Add scale readings from Roadside and Curbside rear axle. Example: 18,850 lbs.
- Add scale readings from Roadside and Curbside tag axle. Example: 8,650 lbs.

- If necessary, adjust tag axle regulator to compensate for payload carried by the tag axle and drive axle then record the new pressure setting. Perform the regulator stabilization procedure to ensure proper adjustment.

NOTE:
Adjustments made to the Tag Axle Regulator will require repeated weighing procedures.

If necessary, adjust payload so that no single GAWR is exceeded. Total weight must not exceed the GVWR. Once weights are verified, the next step is to determine tire size. This information is stamped into the sidewall of the tire. Example: The tire size reads as follows: 295/80r 22.5 with a load range H. Cross reference the tire size and load range to the Load Inflation Table. The heaviest wheel position of an axle will determine tire pressure for all tires on that axle due to weight transfer that occurs when cornering.

- Example: The curbside tire is the heavier wheel position on the front axle weighing 6,200 lbs. Tire pressure for a 295/80r 22.5 @ 6200 lbs. according to the Load Inflation Table with load range H will be 95 PSI.

- Drive axle uses two tires at one wheel position. Dividing the weight by two for that wheel position will determine how much weight each tire is supporting. The curbside drive axle wheel position weighs 9500 lbs. Each tire is supporting 4750 lbs. This falls below the minimum weight listed. The minimum inflation pressure would be 80 PSI for the drive axle tires.
- The roadside is the heavier wheel position on the Tag axle @ 4400 lbs. This falls below the minimum weight listed. The minimum inflation pressure would be 80 PSI for the tag axle tires.


	Gross Axle Weight Rating (GAWR)	Roadside	Curbside	Total Axle Weight	Sum Difference
Front Axle		A.	D.		
Rear Axle		B.	E.		
Tag Axle		C.	F.		
Total					

Actual Worksheet

100236b

WARNING:
Improperly inflated or overloaded tires can cause a blowout. An overloaded axle can cause a component failure of the suspension system. Tire blowout or broken suspension components can lead to loss of vehicle control resulting in property damage, personal injury or death.

CAUTION:
If actual weight carried by any tire is below the tire chart weight specification minimum tire pressure the minimum inflation pressure must be maintained. Tire pressure below the minimum inflation pressure can overheat and damage the tire casing leading to premature tire failure or blowout.

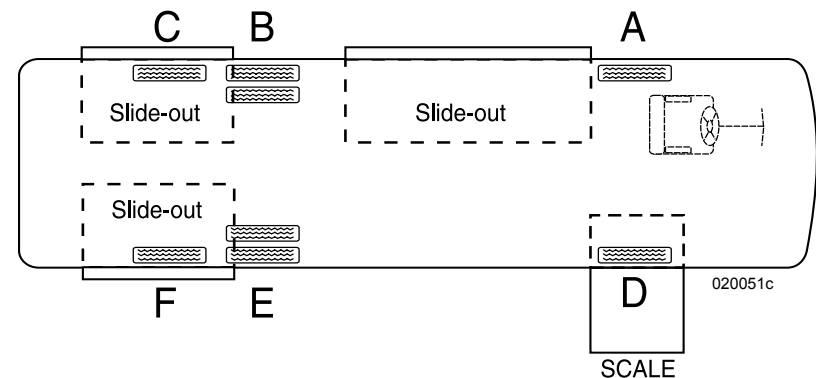

Weight Record Sheet Tag Axle

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS
 VEHICLE WEIGHT

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS
 VEHICLE WEIGHT

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GRC
 VEHICLE WE

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS
 VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS
 VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GRC
 VEHICLE WE

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS
 VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS
 VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

TAG: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GRC
 VEHICLE WE

SAFETY CRUISE SYSTEM (OPTIONAL)

The following information and instructions will briefly cover features and operations of the Safety Cruise system. Safety Cruise provides a series of audible and visual alerts to assist the driver in avoiding collisions. This system is designed as a driving aid and is not a substitute for safe driving practices. The driver is ultimately responsible for safe operation of the motorhome.

INFORMATION:

Refer to the manufacturer's manual for more detail on the VORAD Safety System.

Always Alert:

The antenna (located in the front of the motorhome) transmits and receives low power, high-frequency radar signals to continuously monitor the road ahead. The radar can detect moving objects up to 500 ft. and stationary objects up to 220 ft. The Driver Display indicates a yellow light at 3 seconds of distance, an orange light at 2 seconds of distance and a red light at or below 1 second of distance. Audible warnings are issued when immediate action is required to avoid an accident.

SmartCruise:

The smart cruise feature uses a radar signal to maintain a safe cruise control distance by automatically adjusting engine speed to match following speed with traffic flow. If necessary, the auxiliary brake may engage and transmission downshift one gear to maintain the preset following distance.

Following distance is preset by the operator between 2.0 and 3.5 seconds. When either overtaking a slower vehicle in the lane ahead or going down hill, engine speed will reduce to maintain the specified following distance while in Smartcruise.

WARNING:


The Safety Cruise system cannot provide additional warning for situations including, but not limited to, pedestrians or animals darting into the path of the motorhome, head-on collisions involving oncoming vehicles and intersection cross-traffic. This system is not a substitute for safe driving practices.

Driver Display

The driver display contains all the indicators related to the operation of the front "Always Alert" sensor system. The display is mounted in the dashboard. A rocker switch located on the driver side console is used to control system functions. All indicators light up when the ignition is turned ON. The green "SmartCruise®" light remains ON following the internal diagnostic check. The "SmartCruise" light will remain ON until the first brake application. The display operates in two modes: **Normal** or **Menu**.

Remote Warning Indicators

The side sensor display includes two lights (top and bottom) and a light sensor (middle) located on the windshield A-Pillars.

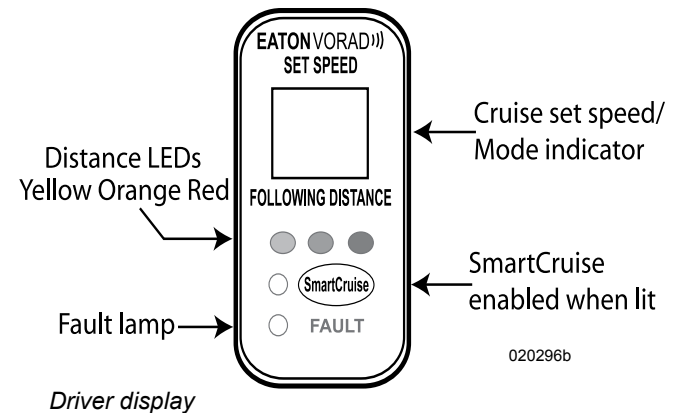

- **Yellow (top)** light indicates no obstacle detected by the side sensor.
- **Ambient light sensor (middle)** measures surrounding light to adjust brightness of the indicators for maximum visibility.
- **Red (bottom)** light illuminates when the side sensor detects an obstacle within 12 ft. of the motorhome. When the red light is on and the turn signal is activated, a single audible warning is issued when an object is detected.


Normal Mode:

Press up or down on the rocker switch to adjust the SmartCruise following distance from d1 to d8. The d1 setting represents a following distance of approximately 2 seconds behind a lead vehicle and d8 represents a following distance of 3.5 seconds. The driver should adjust the following distance to match traffic conditions and driver preference.

The driver can also use the d1 to d8 settings to provide additional time for the “AlwaysAlert” warnings. Earliest warnings are provided at the d8 setting and minimum warnings are provided at the d1 setting; adjust settings to fit driver preference. Select d8 “AlwaysAlert” to enter Fog mode and track vehicles using the yellow light at distances out to 500 ft. The Fog mode can be very helpful when driving in poor visibility situations. SmartCruise is not recommended in poor visibility conditions. Fog mode is not available when SmartCruise is active.

Menu Mode:

Enter Menu mode by holding the rocker switch in the **UP** position until the menu appears (approximately five seconds). Press the **Down** arrow to scroll through the following menu selections.

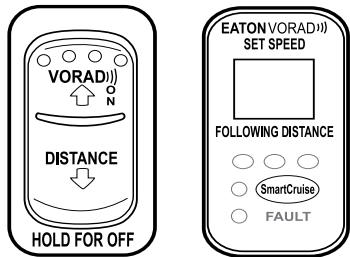

020296

- **VL (Volume)** - Adjustments are from V0 (no sound) to V7 (maximum volume).
- **dE (Demonstration)** - Displays warning lights and tones for each of the collision warnings.
- **AR (Accident Recorder)** - Data storage last 10 minutes of vehicle operation.
- **FC (Fault Codes)** - Displays active and inactive fault codes for the service technician.

Press the **UP** arrow to select the desired function. When adjusting the volume, the **up** and **down** arrow is used after selecting the **VL** function. The display will automatically return to the **Normal** mode after five seconds of inactivity. The system can be turned **off** by holding the **down** arrow (five seconds) until the Driver Display is blank. Press the **up** arrow to turn the system back **on**.

SmartCruise® Operation

SmartCruise® activates when the motorhome cruise control system is engaged and the Safety Cruise system is on. When SmartCruise is active, the SmartCruise label on the Driver Display will illuminate. The desired following distance can be adjusted using the rocker switch. The system maintains the selected following distance between the motorhome and the vehicle ahead of the motorhome, or in the case of no vehicle ahead, the preset cruise control speed. Following distance takes priority over the preset cruise control speed. The cruise control set speed is indicated on the driver display.

WARNING:

The Safety Cruise system is not a substitute for an alert, safe driver. Safety Cruise will not react to stationary objects and cannot apply the service brakes to bring the motorhome to a complete stop. The driver is ultimately responsible for the safe operation of the motorhome. The driver must fully understand the operating characteristics and limitations of Safety Cruise and take all necessary actions to operate the motorhome in a safe manner.

WARNING:

If the motorhome speed and speed of the vehicles ahead significantly differ, apply the service brakes to maintain a safe distance. After a service brake application, the cruise control and SmartCruise must be Resumed.

Proximity Alert:

The proximity alert is activated when the motorhome is moving up to two miles per hour and an object is detected less than 10 ft. in front of the motorhome. In this case, a light comes on, accompanied by a low pitch tone.

Special Situations

To use the Safety Cruise system safely and effectively, it helps to understand a number of special road situations and how the system reacts to them. The way the system interprets curves, dips, and hills can sometimes influence the system alerts. Consult the OEM driver’s instruction manual for a description of these situations.

Data Recorder:

The computer is also capable of storing digital information similar to the black box used on aircraft. In the unlikely event an accident occurs, the data can be retrieved to understand what may have caused the accident. The computer must be returned to the manufacturer to retrieve stored data.

SECURITY SYSTEM (OPTIONAL)

The security system includes a key fob, dash-mounted LED and a push button switch located under the dash to the left of the steering wheel. The following information includes instructions for arming and disarming the security system. See the OEM manual for more information.

NOTE:

Monaco RV LLC does not warrant or guarantee against break-in or damage caused by break-in or theft of the motorhome, in part or in whole, or against the loss or damage to the contents thereof in which a security system is installed. The security system is only a deterrent against possible break in or theft.


Arming & Disarming

The system can be armed and disarmed with the key fob or the key pad on the entry door grab handle. Main battery disconnect switches must be on for locks to function.

- Exit the motorhome and close all protected entrances. This includes the entry door, bedroom windows and all bay doors with pin switches.

Arming With Key Fob:


- Press the “Lock” button on the key fob twice. This requires two hard pushes with a distinct pause in between. The system will beep one time and the dash-mounted LED will flash every two seconds when the system is armed.

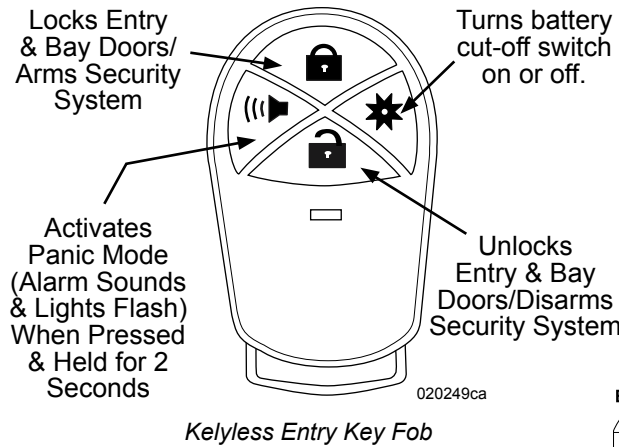

Keyless Entry Key Fob

Arming With Key Pad:

- Press and hold the “Lock” button on the key pad (button #1 with lock symbol) for approximately two seconds until the entry door and bay doors lock. Release the Lock button. Within five seconds, press and hold the Lock button again for approximately two seconds. The system will beep one time and the dash-mounted LED will flash every two seconds when the system is armed.

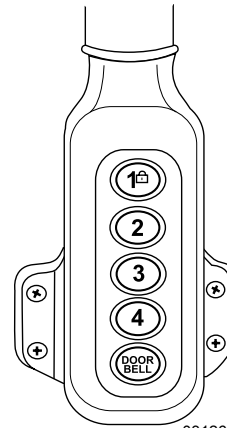


Key pad located on entry door grab handle.

To Disarm the System:

- Press the “Unlock” button on the key fob, or enter the unlock code on the key pad, to disarm the security system. The dash-mounted LED will turn off and the system will beep twice when disarmed.

Alarm

- Starting the engine, breaking bedroom glass and/or opening the entry door, bay doors with pin switches or a bedroom window will sound alarm. The siren will sound and the parking lights and headlights will flash for 30 seconds. The LED on the dash will flash continuously.

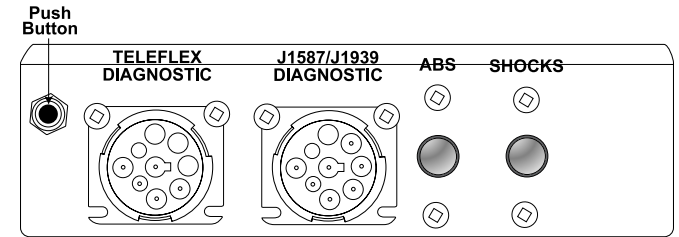

Push button located under dash to left of steering wheel.

To Turn Off Alarm:

- Press the Lock or Unlock button on the key fob, or turn the ignition on and hold the push button (located under dash to the left of the steering wheel) in for five seconds.

Sound and Window Sensors:

Two sound sensors are used to detect impact noise (repetitive or single heavy impact) and glass breakage. Sound sensors are located in the galley and in the bedroom. Window sensors are located on the bedroom windows only. These sensors detect window screen movement. If the screen is opened more than 1/2", the alarm will sound when the security system is activated.


Each sensor is equipped with a pair of replaceable batteries. Test the sound and window sensors monthly.

Testing Sound Sensor:

- Clap hands loudly next to sensor. LED should briefly illuminate twice.


Testing Window Sensor:

- Momentarily press on housing next to LED to briefly illuminate.

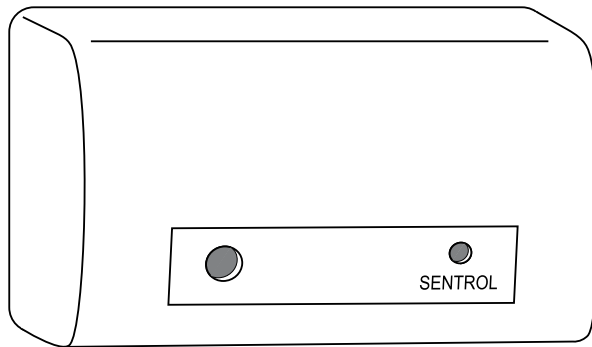

Sound Sensor

020248

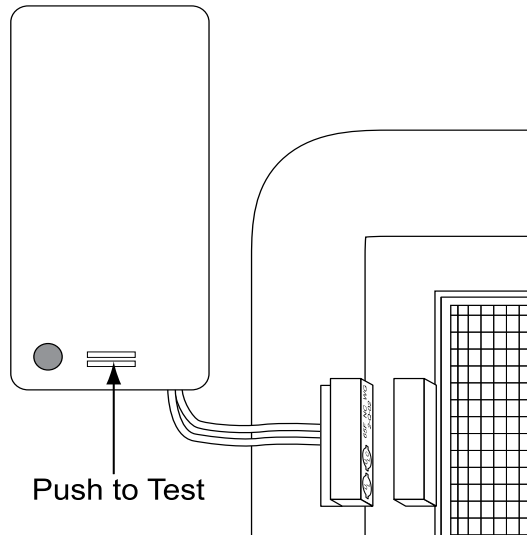

Window Sensor

020247

SAFE (OPTIONAL)

The motorhome uses a small, sturdy floor safe for protection of important documents, semi-precious valuables and petty cash. The safe location will vary with the different floor plans. Consult with the dealership about the safe location.

CAUTION:

The safe is designed only for temporary storage of minor personal effects. It is not a suitable replacement for an insured financial institution.

SMOKE DETECTOR

Statistics show that most fire casualties are not caused by direct flame, but by less visible smoke (products of combustion). The smoke detector will automatically return from alarm to normal state when the reason for activation, the presence of smoke, is completely removed.

Fires are commonly caused by smoking in bed, leaving children unattended or using flammable cleaning fluids. Please be safety conscious and avoid unnecessary risk.

WARNING:


There is no way to ensure against injury or loss of life in a fire; however, the smoke detector is intended to help reduce the risk of tragedy. Additional smoke detectors may help reduce the risk. Proper use and care of the smoke detector could save lives.

Operation

When a 9 Volt DC battery is correctly connected, the LED will flash every minute and a loud alarm will sound when a product of combustion is sensed.

NOTE:

The unit will not operate without a battery. A battery flag will pop up preventing the unit from being installed to the mounting bracket without a battery. Carbon zinc batteries average a service life of one year. Alkaline batteries average a service life of one to two years.

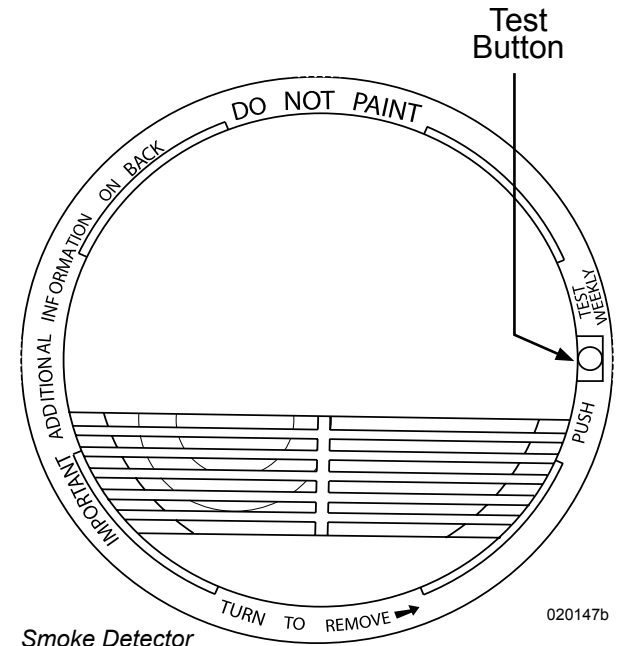

Smoke Detector

020147b

Testing

Simply press the test button on the smoke alarm cover for approximately three seconds. The alarm will sound if all electronic circuitry, horn and battery are properly working. Test the smoke alarm at least once a week when the motorhome is in use, prior to each trip and when the motorhome has been removed from storage. The smoke alarm is designed to be loud. Test the alarm at arm's length to reduce exposure to hearing.

WARNING:

Test detector at least once a week, before each trip or when the motorhome has been removed from storage.

CAUTION:

Do not use an open flame to test the smoke alarm as this may ignite the alarm or surrounding area and set fire to the motorhome.

Maintenance

Maintenance for Proper Operation:

- Test the smoke alarm once a week.
- Keep a supply of 9 Volt DC batteries on hand.
- Vacuum the slots in the cover and sides with a soft brush attachment every month. Test the smoke alarm after the unit has been vacuumed.
- The smoke alarm will beep once a minute when a low battery condition exists to signify the battery must be immediately replaced.

Troubleshooting

If the alarm does not sound when the test button is pushed or during a smoke test, try the following:

- **Inspect** alarm for obvious damage.
- Check for the recommended battery type.
- Check the battery for proper connection or replace the battery if needed.
- Gently vacuum as recommended.


If these procedures do not correct the problem, **Do not** attempt repairs. If the smoke alarm is within the warranty period and the terms indicate the nature of the problem, return the unit to your dealer. Smoke detectors beyond the warranty period cannot be economically repaired.

CARBON MONOXIDE DETECTOR

American National Standards Institute (ANSI) **119.2 - Fire & Life Safety 6.4.6 Carbon Monoxide Detectors** states *“CO detectors used must be listed as suitable for use in RV's and installed in accordance within the terms of their listing. No specific mounting location is mandated for CO detectors; only that they be installed in accordance with their listing. The installation of the CO detector mounting bracket alone will be considered acceptable as long as the CO detector is provided.”*

A CO detector is required to be installed in any RV that either contains an internal combustion engine or is designed to have one installed. This would include all motorized RV's, regardless of whether the fuel source is gasoline, diesel, propane, or other alternate fuel. This would also include an RV equipped with a generator or designed to accommodate future installation of a generator (commonly called “generator prep” setups). This would not include RV's equipped to store or transport internal combustion engine vehicles.

Also, all truck campers must have a CO detector installed, since an internal combustion engine is ultimately present once the truck camper is mounted on a pickup truck.”

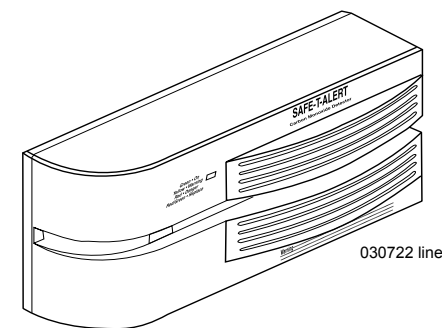

The motorhome is equipped with a Carbon Monoxide detector. Carbon Monoxide (CO) is a colorless, odorless and tasteless gas that binds with hemoglobin to reduce the body's ability to absorb and carry oxygen to vital organs. Anyone exposed to CO gas can be at risk to CO poisoning. When removed from exposure, the symptoms dissipate as Carbon Monoxide is expelled through the lungs. Level of contamination in the body reduces at half-life increments at approximately four-hour intervals. Treatment with Oxygen will quicken recovery time.

In cases of mild exposure, the symptoms may include: a slight headache, nausea, vomiting and fatigue. Some consider this a “Flu-like Symptom.” Symptoms for medium exposure may include a severe throbbing headache, drowsiness, confusion and fast heart rate. Extreme exposure can result in unconsciousness, convulsions, cardio-respiratory failure and death.

Young children and household pets may be the first affected. Other highly sensitive people include the elderly and those with lung or heart disease or anemia. Even low levels of CO have been known to cause brain and other vital organ damage in unborn infants, with no effect on the mother.

The CO detector is designed to detect the toxic CO Gas resulting from incomplete combustion of any fuel. This can be gasoline, propane, natural gas, oil, charcoal or wood. Anything that burns fuel such as engines, generators, furnaces, gas stoves or water heaters, produce CO Gas. Consequently, it is uncommon for household smoke from cigarettes or normal cooking to cause the alarm to sound.

CAUTION:

Activation of this device indicates the presence of Carbon Monoxide (CO), which can be fatal. A concentration of above 100 PPM will cause a warning condition. Individuals with medical problems may consider using detection devices with lower Carbon Monoxide alarming capabilities. Prolonged exposure to the alarm at a close distance may be harmful to hearing.

WARNING:

Constant beeping and a flashing red light means CO gas has been detected. Shut off appliances, motorhome engine, and water heater. Evacuate the motorhome and call the fire department. Have any problems corrected before restarting any appliances or the coach.

The CO detector is powered from the house batteries. The main battery disconnect switch (located in the rear curbside bay) must be on for the CO detector to function. The interior battery cut-off switch will not affect the CO detector. Once the unit is powered, it will run through a brief warm-up and self-check prior to monitoring for CO gas.

Operation

The detector is equipped with a self-cleaning CO sensor and requires a ten minute initial warm-up period to clean the sensor element and achieve stabilization. During the warm-up period, the green power light will flash **on** and **off**. The green power light should be lit when the power is on. If the light is not lit, turn off the power and check all wire connections. If the power is on and the connections are correct, but the indicator still does not light, the detector should be returned for service. **Do not** attempt to fix the detector. The indicator light displays a specific color to monitor along with a matching sound pattern.

Indicator Lights and Sound Patterns:

- **On** or normal condition is indicated by **green**. The CO detector has power and is sensing air for the presence of CO Gas. The alarm will not sound.
- Flashing **red** indicates low CO alarm condition along with **four** beeps then **Off** for five seconds. The alarm horn will sound and can be reset by the **Test/Reset** button. The CO detector has detected the presence of 60 ppm.
- Steady **red** indicates a **CO Alarm** condition. The detector has sensed the presence of levels over 100 ppm of Carbon Monoxide. The alarm horn will continuously sound until the **Reset** switch is reset.
- Alternating **red** and **green** indicates a malfunction alarm.

Alarm

Evacuate the motorhome immediately when the red light is lit and the alarm sounds. Do a head count to check that all persons are accounted for. Call the nearest fire department and ask them to determine the source of the Carbon Monoxide. **Do not** re-enter the motorhome until it has been aired out and the problem corrected.

When the alarm sounds, have the detector and the motorhome checked by an authorized service technician as soon as possible. Never disconnect a CO detector to silence an annoying alarm.

Potential Sources of CO when operating the motorhome:

- Engine Exhaust
- Portable Grills
- Portable Space Heaters
- Camp Fires
- Gas Stoves and Ovens
- Generator Exhaust
- Portable Generators
- Nearby Motorhomes
- Defective Engine Exhaust System

Testing

Test Procedures:

Test the Carbon Monoxide detector operation after the motorhome has been in storage, before each trip and at least once a week during use. Test the alarm by holding the **Test/Reset** button in until the alarm sounds. The alarm will sound four beeps and the indicator lamp goes steady **red**. Six seconds later the alarm will again beep four times and the indicator light goes steady **green**.

Peak Level Memory:

The CO detector has the capability to remember the level of Carbon Monoxide that activated the alarm. Press the **Test/Reset** button for less than one second and observe the visual and audible signals.

- **One beep and one green** flash indicate memory is clear.
- **Two beeps and two red** flashes indicate less than 100 ppm.
- **Three beeps and three red** flashes indicate less than 200 ppm.
- **Four beeps and four red** flashes indicate greater than 200 ppm.

NOTE:

Memory is erased when power is disconnected for 15 seconds.

Cleaning & Maintenance

Use a vacuum cleaner to remove dust or other buildup on the detector. **Do not** wash. Wipe the detector with a damp cloth and dry with a towel. **Do not** open the detector for cleaning. **Do not** paint the detector. It is recommend that the Carbon Monoxide detector be replaced every five years.

The CO detector has no user service parts. If there is a problem with the detector refer to an authorized service center. **Do not remove power.**

INSPECT:

Check the CO detector weekly and at the beginning and end of each trip.

FIRE EXTINGUISHER

The fire extinguisher in the motorhome is located near the main entrance door. Please read the operating instructions that are printed on the fire extinguisher. If there is any doubt on how to operate the fire extinguisher practice using it. Be sure to replace or recharge the extinguisher immediately after use. Three classes of fire can occur within a motorhome. A fire can fall into more than one class. For example, a fire that involves both burning paper and kitchen grease is a Class AB fire.

 
Classes of Fire:

A - Fires fueled by materials that leave a residue when they burn: paper, wood, cloth, rubber, and certain plastics.

B - Fires involving flammable liquids and gases: gasoline, paint thinner, kitchen grease, propane and acetylene.


C - Fires that involve energized electrical wiring or equipment.

If electricity to the equipment is turned off, a class C fire becomes one of the other two class fires.



100209

 Inspect the fire extinguisher at least once a month. Do so more frequently if the extinguisher is exposed to weather or possible tampering. **DO NOT** test the extinguisher by partially discharging. Internal pressure will escape and the fire extinguisher will need to be replaced.



Use the PASS word!


Pull the pin to unlock the extinguisher.

Aim at the base (bottom) of the fire and stand 6 to 10 ft. away.

Squeeze the lever to discharge the agent.

Sweep the spray from left to right until totally extinguished.


WARNING:
Road vibration will cause extinguisher powder to compact and may cause extinguisher malfunction. Invert and shake extinguisher monthly.

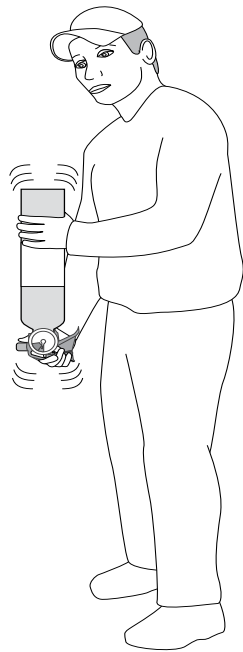

ESCAPE (EGRESS) WINDOW

The Egress window, designated for use as an emergency exit, is identified inside of the motorhome by a red locking handle and Exit label. To open, lift the red handle and push outward. Pull closed and lower handles to lock the Egress window.

Hinges along the outside window top identify the Egress window on the motorhome exterior. The glass slider in the Egress window operates the same as all other windows in the motorhome. Occasionally open and close the Egress window to prevent the rubber seal from sticking.

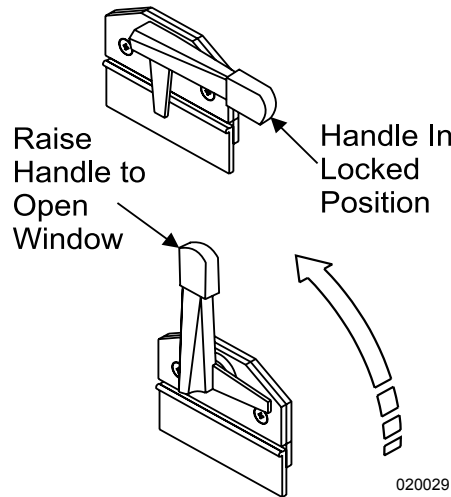

Egress Window Handle

NOTES

Two columns of horizontal lines for writing notes.

Exterior & Interior Care - Section 3



EXTERIOR CARE.....	52	INTERIOR CARE	57	SHOWER	64
Corrosion.....	52	Cockpit	57	CEILING.....	64
Winter Drive Protection.....	52	FABRICS.....	58	WALL COVERINGS	64
Washing	53	General Care & Cleaning.....	58	WOOD CARE.....	65
Drying.....	53	Vinyl	58	COUNTERTOPS	66
Waxing	53	“O” Vinyl.....	59	Solid Surface	66
Paint Codes	54	Ultra-Leather	60	Laminate.....	67
Tire Care.....	54	Leather	60	STAINLESS STEEL SURFACES	67
Wheels - Polished Aluminum	54	Fabric Cleaning Codes.....	61	WINDOWS.....	67
Bright Metal	55	FLOORS.....	62	Condensation.....	67
EXTERIOR MAINTENANCE.....	55	Carpet Cleaning.....	62	WINDOW TREATMENTS	68
Fiberglass	55	Tile Floor.....	63	Mini Blinds.....	68
Roof Care & Seal Inspections	55			Day/Night Shades	68
Sealant Types.....	56			MOLD & MILDEW.....	69
				PEST CONTROL.....	70
				STORAGE	72
				Short Term.....	72
				Long Term	73
				Winter Storage Checklist	74
				Removal from Storage.....	75

EXTERIOR CARE

Corrosion

The most common cause of corrosion to the motorhome exterior is accumulation of road salt, grime and dirt. These elements, combined with moisture, may possibly cause early component failure. The undercarriage, around wheel openings and the radiator/charge air cooler package require periodic cleaning to prevent component failure caused from corrosive materials collected on roadways. If the motorhome is stored or driven near the ocean or in areas where road salts are used, wash it at least once a week, including the undercarriage. Otherwise, hose off the undercarriage area at least once a month to help minimize the corrosion process. High-pressure washers or steam cleaners are the most effective way of cleaning off the undercarriage and inside wheel openings. However, these devices can cause damage. Avoid directly spraying the painted surface with a high-pressure washer of any type. Also avoid directly spraying electrical wiring, connectors or electro-mechanical components with high pressure.

CAUTION:

It is up to the motorhome owner to properly wash and protect the motorhome and its components from corrosion. Sources of corrosion include road surfaces treated with de-icing agents and atmospheric conditions, such as those found in coastal regions.

CAUTION:

Exercise caution when cleaning the radiator charge air cooler package. Damage to the fins can result when using a high-pressure washer or steam cleaner. The nozzle discharge pressure of these devices can exceed 1800 psi. Also avoid using high pressure/high temperature steam cleaners on the exterior paint surfaces. Remove all spattered washing debris from the exterior paint surfaces as soon as possible.

Winter Drive Protection

Various substances and chemicals are applied to roadways to reduce hazardous winter driving conditions. These substances can include rock salt, sand, gravel or chemical applications such as LMC (Liquid Magnesium Chloride).

Road salts are known for their corrosive properties to steel and other metals. Road salt can also damage other vehicle components and materials. Vehicles located in or traveling through areas where road salt is used are subject to rapid corrosion. LMC is a moisture activated chemical applied directly to the road surface for the purpose of lowering the freeze point of water. According to published information, LMC is a suitable replacement for road salt or sanding.

The drawback is that LMC is highly corrosive to all metals and plastics and can even destroy rebar embedded in concrete. After application, road traffic causes LMC to become airborne vapor traveling as much as 2000 ft. from the point of origin.

Vehicles located within that distance, even when stored outside, are exposed to the same corrosive affects as vehicles traveling over a road treated with LMC. LMC lowers the freeze point allowing moisture to further penetrate surfaces, and remains active down to 27% humidity. Foot traffic will also track road salt and LMC into living spaces.

While most sand, road salt and LMC accumulation can be washed away through use of a high-pressure washer, road salt and LMC is still bonded to all exposed surfaces including paint. Only chemical washing can neutralize road salts or LMC. However, chemical washing can only neutralize open surfaces. LMC and road salt remains trapped between mating surfaces and will corrode wiring as well.

Local or state governments determine what is applied during winter months and these substances can change by location. It is possible to encounter one or all of these substances while driving. Only regular weekly washing of the exterior and undercarriage can slow corrosion during the winter months. No single treatment can be used to eliminate and neutralize the affects of these corrosive substances.

Diligent washing and awareness of substances applied to the road surface will dictate if a neutralizing agent must be applied to help slow the process of corrosion to exterior surfaces, including the paint finish. Therefore, it is up to the motorhome owner to perform regular washing maintenance and neutralize any corrosive agent applied to the roadway by local or state governments.

Washing

Periodic cleaning will help to preserve the paint finish. The motorhome is painted with a “base coat, clear coat system.” Clear coat is a polyurethane-based material which brings out the shine and luster to the base coat paint. Care should be used when washing the motorhome. Use only mild detergents or (preferred) specifically designed automotive detergents. Avoid abrasive cleansers or laundry detergents that will scratch the clear coat and leave a soap film. Use a soft cloth to wash the paint finish. Avoid brushes as they can scratch the surface and damage the paint. Before washing the motorhome, remove most of the accumulated dirt and “road wash” behind wheel openings, below the windshield and on the rear of the motorhome. If build-up is excessive, run water over a soft cotton cloth while gently wiping the surface in one direction. This will help float away build-up from the clear coat. Avoid back and forth or circular motions as this may act like sandpaper, scratching the clear coat and leaving a haze or swirl marks. After removing the heavy build-up, use the mixed detergent solution to wash the motorhome. Start washing at the top of the motorhome working towards the bottom. If possible, wash the motorhome in a shaded area when the exterior is not hot to the touch. If necessary, turn the motorhome around to keep the area being washed in the shade. Try not to allow the detergent to dry onto the clear coat surface. Use plenty of water when rinsing the surface to remove all detergent residue.

Drying

Chamois cloths come in natural and synthetic materials. Either type is acceptable as long as the surface is clean. Soak the chamois in clean water and wring it dry. Remove the water from the surface, starting at the top and working towards the bottom, using a downward “S” pattern. Wring out the chamois as needed. Using a chamois cloth to remove the rinse water is not necessary, but the effort can be worthwhile.

Waxing

It is recommended to wax the motorhome twice a year (spring and fall). Many types of protective barriers are available today that may be applied to the clear coat: glazes, waxes, rubbing compounds or combinations of these products.

NOTE:

Use a grease and wax remover before applying another coat of wax. Chemicals can become trapped between layers of wax, possibly damaging the paint finish.

INFORMATION:

When selecting a product, follow the product manufacturer’s recommended application instructions.

Types of Products:

Glazes - Glazes are generally used to fill very fine scratches in the clear coat. They are applied either by hand or by using a polisher with a special pad. Glazes are temporary and will rinse out after a few washes and/or heavy rains.

Waxes - Waxes come in many types of chemical make-up. Most contain cleaning agents, lubricants and wax. Cleaning agents remove oxidation and leave a high gloss, and wax leaves a clear film that protects the finish. Full Molecular Jacket (FMJ) wax by Menzerna is applied at the factory.

Polishes - Polishes combine wax based substances with abrasives to clean and polish at the same time. These products can be too abrasive for clear coats and are not recommended for use.

Rubbing Compounds - These types of products are generally applied by using a buffer. The use of rubbing compounds should be left to professionals as undesired results can quickly occur. These types of products are generally used to correct or flatten a surface by removing high spots or small amounts of material.

When selecting a product, the container should be marked, “**safe for clear coats**” or “**clear coat safe.**” Carefully follow the application instructions when using a product. Upon first use of a product, try it on a small test spot in an inconspicuous area in case an undesired reaction occurs.

Observe the test area from different angles to check for hazing or swirl marks. If an abnormal reaction to the finish occurs, discontinue product use and consult the product manufacturer. If the product is a paste, do not allow dried paste to be baked on by the sun. Remove paste shortly after drying. Clean, dry, 100% cotton cloths are best suited for the removal of dried paste. Turn the cloth often. Use a separate clean cloth to buff. The surface should feel slick when rubbing the cloth lightly over it. Avoid repeated wax applications which can cause wax to build up. Some very fine scratches or swirl marks may be removed by an application of a glaze. These types of glazes fill the scratches or swirl marks.

The motorhome has a large surface area. Washing and waxing may not be completed in one afternoon. Select sections to wax until the motorhome is complete. If the task seems overwhelming, have an automotive detailer perform the task.

Paint Codes

The motorhome color scheme is comprised of specific paint colors, each assigned a code used to achieve a desired color of paint. “Touch-up” paint may be used to repair a small scratch or imperfection in the paint surface. To paint a larger area, it is necessary to obtain the paint code to get the correct color match.

To Obtain the Paint Code:

1. Contact **Parts** at **1-877-466-6226**.
2. Specify the year, model, serial number and exterior color scheme name (if known) to obtain the paint codes.

3. The formula can be mixed at a local Sherwin Williams automotive paint store.

NOTE:

All special paint schemes require contacting Monaco RV LLC directly for paint codes.

Tire Care

Proper care and methods in cleaning must be used to obtain the maximum service years out of the tires. Use a soft brush and a mild detergent to clean the tires. If a dressing product is used to “protect” the tires from aging, use extra care and caution. Tire dressings that contain petroleum products or alcohol may cause deterioration or cracking.

In many cases it is not the dressing that causes a problem but the chemical reaction that subsequently occurs. When these same dressing products are used on a passenger car tire that is replaced every three to four years, it is rare to see a major problem. However, in most cases recreational vehicle tires may last longer due to limited annual mileage and exposure.

Wheels - Polished Aluminum

Inside:

If the tires are removed, **inspect** and clean the entire rim. Air used to fill the tire may contain moisture and can cause the areas of the wheel under the tire to severely corrode. Use a soft brush to remove foreign material from the tire side of the rim.

Lubricate the rim and tire bead with a non-water-based lubricant before mounting the tire and ensure the inside of tire is dry before installing.

WARNING:

Do not use a flammable solution to coat the inside of the rim. This can lead to an explosion during tire inflation or in subsequent operation of the motorhome.

Outside:

The wheels should be treated the same as the paint finish on the motorhome. Road soils, grime and brake dust trap moisture which can cause corrosion over a period of time.

1. Frequently clean using high-pressure water.
2. Wash with a 100% cotton cloth and a mild soap solution (dish soap or car wash soap is recommended).
3. Rinse all remaining soap residue with high-pressure water and wipe the surface dry using a 100% cotton cloth to avoid water spots.
4. A secondary hand washing may be required to remove some stubborn road films.
5. Carnauba wax can be applied to help protect the finish.

NOTE:

Allow heated wheels that are extremely hot to cool before spraying with cold water.

CAUTION:

Do not use the following items on aluminum wheels:

- Synthetic cleaning pads, wire or abrasive brushes, steel wool or scouring pads (these can mar or scratch the finish).
- Strong detergents, alkaline or acidic cleaners, acids or lye-based chemical products or solvents.

CAUTION:

Rinse aluminum wheels using high-pressure water to remove debris from the surface before washing. Do not scrub. Rubbing debris against the surface of the wheel can result in scratches. Do not allow soap solution to dry on the finish of the wheel as spotting will occur.

Bright Metal

All chrome and stainless steel should be washed and cleaned each time the motorhome is washed. **Do not** use rubbing compounds. Use only automotive approved non-abrasive cleaners and polishes on exterior bright work. **Do not** use abrasive cleaners or compounds to clean the mirrors.

NOTE:

When using chemicals to remove road tars, use only automotive products that are recommended for painted surfaces and fiberglass. Observe the warning recommendations and directions printed on the container of any agent being used.

EXTERIOR MAINTENANCE

The motorhome is exposed to extreme temperatures, humidity, ultraviolet rays, rain and other environmental conditions. While in operation the motorhome is subject to twisting and flexing caused by rough roads, potholes and winding mountain roads. Maintenance is necessary not only to keep the exterior looking nice, but also to keep it in proper working order.

Fiberglass

Inspect the fiberglass exterior. Periodic **inspection** may reveal that flexing of the fiberglass exterior has created imperfections in the surface commonly known as “spider” or “hairline” cracks. A crack that has opened up to reveal the cloth weave threatens the integrity of the fiberglass. If the exterior exhibits signs of damage, prevent moisture penetration, particularly in freezing climates. Cover the area using plastic sheeting and/or tape, and have the damaged fiberglass repaired as soon as possible.

Roof Care & Seal Inspections

Wherever there is something affixed to the motorhome, such as a vent attached to the roof, a seal is applied to prevent water intrusion. Each type of sealant has a specific use. While the belt line uses a silicone or urethane base sealant to prevent water intrusion, roof openings use an acrylic based sealant.

Moisture intrusion can occur at any time for a number of reasons; therefore, regular sealant inspection and maintenance will greatly reduce the likelihood of moisture intrusion and costly repairs.

The motorhome is sealed at the factory. However, extreme weather conditions can shorten the life of sealant and harsh road conditions can compromise sealant integrity. Maintaining sealant is part of regular motorhome maintenance. Inspect all joints, seams and openings at least once every six months.

While sealant integrity may appear fine, a small void under the right conditions can quickly cause major damage. Make a full interior inspection for signs of moisture intrusion every two weeks when the motorhome is in storage.

CAUTION:

Inspect exterior seals, seams and joints for sealant integrity at least twice a year. Make a full interior inspection for water leaks every two weeks while the motorhome is in storage.

INSPECTING:

Surface must be clean and dry. Inspect seal for voids, cracks, bubbling, peeling or pulling away. Sealant that looks fine without imperfections is acceptable for continued service. Sealant that is old, cracking, flaking or bubbling will allow moisture intrusion and must be repaired.

WARNING:

Inspecting sealant will require use of a ladder or scaffold assembly. Roof access is also required. Follow proper safety measures accordingly. Exercise extreme care whenever using a ladder/scaffold assembly. Avoid getting on the roof if it is icy or moisture laden as the surface can be very slick. Use judgment if inspection is considered dangerous. Have the motorhome inspected or sealed (if necessary) by a qualified service technician.

Sealant Replacement:

Carefully remove sealant that is cracking, flaking, bubbling, peeling or pulling away from the surface. The area underneath will need to be cleaned and dried before applying new sealant. Applying new sealant over a dirty or moisture laden surface will not allow proper adhesion. Sealant application may require simple hand tools and paper towels or rags for cleanup. Some sealants may be labeled hazardous or require chemicals for cleanup. Follow all of the manufacturer's warnings and precautions when dealing with these substances.

WARNING:

Some sealants may be labeled hazardous or require use of petroleum distillates for cleanup. Use proper precautions as suggested by the sealant or chemical manufacturer. Use of protective eye wear, gloves, respirator or open ventilation may be required. Use judgment when working with chemicals. If health limits exposure to chemicals or inhibits skills or abilities, employ a qualified service technician to perform the tasks.

Sealant Types**Acryl-R®:**

Product Manufacturer Schnee-Moorehead Part # 5509. Used on all roof openings such as vents, skylights, roof-mounted antennas and ladder roof mounts. Sealant should be applied only where equipment bases meet the roof. Acryl-R is generally available in a caulking tube. Two colors are available - white and silver. Silver is used on items mounted on the forward painted area of the roof. White is used at all other points.

Remove old sealant that is not adhered. Sealant that is secured need not be removed. Dirty or damp surface areas will compromise sealant effectiveness. Thoroughly clean and dry the surface area before applying new sealant.

Lay masking tape around the area to be sealed to stop sealant from spreading beyond the desired area. Using a caulking gun, apply new sealant as needed. Work the caulking gun in a manner that will cause the sealant to fully adhere to the applied area. Allow adequate cure time. Roof air conditioners use a closed cell foam base gasket and do not require sealant. The roof air conditioners should be regularly inspected for tightness at the four mounting bolts, one located in each interior corner of the air conditioner roof opening. Torque specification is 40 to 50 in/lbs. The base gasket should be compressed to approximately a ½".

Acrylic Sealants:**Product Manufacturer Geocel Part # 2300**

Used where items are sealed under a painted surface such as the metal corners of slide out rooms and roof mounted awning brackets. The material is specially formulated to allow paint adhesion.

Black Urethane:**Product Manufacturer Bostik Part # 1100**

Used for sealing windshields only. Black Urethane is available in a tube that applies similar to silicone. Clean up using solvents such as paint thinner. Gloves are required as this considered a hazardous material.


Silicone:**Product Manufacturer Dow Corning Part # 733**

Product made in several colors. Primarily used on the sidewalls around windows, doors, handles, belt line molding, latches and bases of surface mounted items such as clearance lights. Old peeling sealant should be removed with nylon sticks or equivalent. Metal utensils can scratch the painted surface. Avoid lacquer thinners or ketone based solvents as these chemicals can damage painted surfaces. Confirm that surface is clean and dry before a new application. Cut the tube at an angle with the smallest usable opening. Avoid a heavy bead as a little goes a long way. Wear a disposable latex glove and use finger at a 45° angle on beaded surface to smooth out product. Keep rags or paper towels handy for clean up. Use care when applying silicone and plan ahead before applying. Look for obstacles that may impede application.


Spray Foam:

This product is used as a sealant where a hole has been made for items such as water lines or wires that are coming through a floor or bulkhead opening.

INTERIOR CARE Cockpit

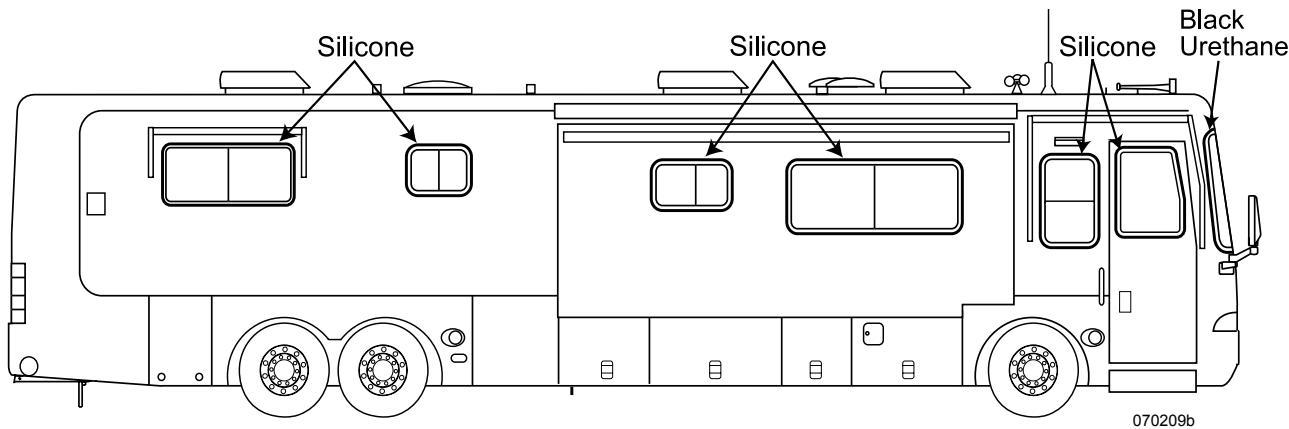

Typical Side View:
Side window seals require silicone. Windshield requires Black Urethane.

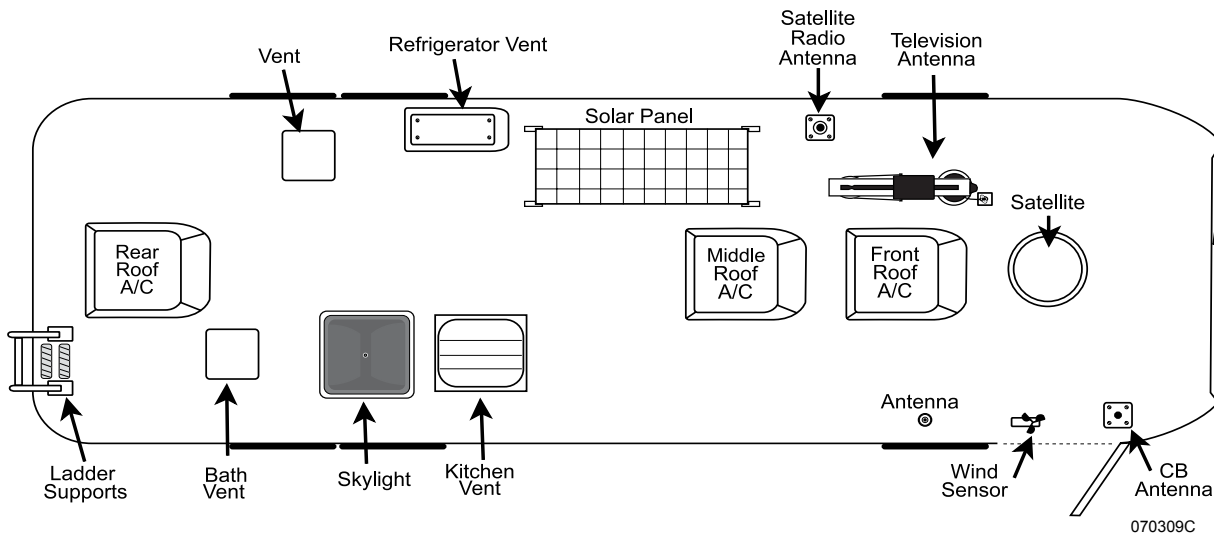

Typical Roof Layout:
Inspect each item for sealant integrity. Acryl-R is used as a roof sealant. Roof A/C's use a special foam gasket.

The cockpit area dashboard is a molded-fiberglass, vinyl-wrapped pod. The instrument panel is comprised of various gauges and switches. Specific cleaning requirements are necessary for the dashboard and instrument panel. Clean the vinyl wrapped dash pod following the instructions under Vinyl Care in this section. In the event a blemish or small cut occurs in the vinyl, contact a professional upholstery repair service.

Clean the plastic or Plexiglas® instrument panels using a cloth dampened in a mild soap and water solution. Dry using a separate cotton cloth. Plastic polish products that will help to brighten the appearance of plastic or Plexiglas instrument panels are Novus Plastic Care®, a three-part system; Meguires® and Johnson Paste Wax®, which will require extensive buffing and rubbing.

Glass lens gauges can be cleaned using glass cleaner. Spray cleaner on the cloth (not directly onto the lens) to prevent over-spray or runoff.

CAUTION:

Do not allow glass cleaners to come in contact with plastic surfaces. Glass cleaning products can damage plastic by dulling the finish or causing it to become brittle.

TIP:

To determine if the lens is glass or plastic, tap the lens with a fingernail. Plastic lens will have a dull hollow sound whereas glass will have a clear ping sound.

FABRICS**General Care & Cleaning**

Special care needs to be taken when the motorhome is exposed to a very humid climate for an extended period of time. Protect fabric from unnecessary exposure to moisture. Cover all upholstery and make sure window coverings are down to protect fabrics from sun damage. Frequently used items require more attention than those not regularly used.

If a spill occurs, blot the moisture as quickly as possible. **Do not** use soap and hot water as this may set a stain. Clean the spot as soon as possible.

Cleaning Upholstery Fabrics:

- Water-based cleaners are not recommended.
- If a spill does occur, blot the soiled area. **Do not** rub it.
- Some solvents may have an adverse reaction on a specific backing of the upholstery fabric and are not recommended.
- Vacuum frequently or lightly brush away dust and grime to prevent overall soiling.
- Clean spots using a mild water-free solvent or dry cleaning product.
- Clean only in a well ventilated area and avoid any product containing carbon tetrachloride or other toxic materials.
- Use a professional furniture cleaning service for overall cleaning.

Vinyl

Several areas of the motorhome, such as the dash, ceiling and items of furniture, may be covered in vinyl. Care and cleaning of these areas are as follows:

Normal Cleaning:

Most common stains can be cleaned using warm soapy water and a clear water rinse. Moderate scrubbing with a medium bristle brush will help to loosen soil from the depression of embossed surfaces. For stubborn stains use the following commercially available mild detergents in accordance with the manufacturer's instructions: Mr. Clean® or Fantastik®.

Full strength rubbing alcohol or mineral spirits may be tried cautiously as a last resort on very stubborn stains if the above suggestions do not work. Indiscriminate use of any solvent, or solvent containing cleaner, can severely damage or discolor the vinyl. Stains may become permanent if they are not immediately removed.

NOTE:

Detergents should never be used on a regular or repeated basis for normal cleaning.

CAUTION:

Powdered cleaners containing abrasives, steel wool and industrial strength cleaners are not recommended for vinyl.

Bird Excreta & Vomit Stains:

Sponge the area with soapy water containing a diluted bleach until the stain is removed. Rinse thoroughly with clean water.

Urine Stains:

Sponge with soapy water containing a small amount of household ammonia. Rinse thoroughly with clean water.

Surface Mildew:

Wash with diluted bleach and use a soft brush for stubborn growth. Rinse repeatedly with clear, cold water.

Ballpoint Ink:

Wipe the stain immediately with rubbing alcohol in a well ventilated area.

WARNING:

If flammable solvents such as alcohol, turpentine or varsol are used for cleaning, use only small quantities while in a well-ventilated area. Exercise proper caution by notifying any persons in the area. Keep away from any ignition source. Always wear protective gloves.

Oil-Base Paint:

Use turpentine in a well ventilated area to remove any fresh paint. Dried paint must be moistened using a semi-solid, gel-type stripper. The softened paint can be gently scraped away. Rinse with soap and water.

CAUTION:

Lacquer solvent will cause immediate irreparable damage to the vinyl. Do not use wax on vinyl upholstery as it will cause premature embrittlement and cracking. Dilute chlorine bleach before using. Never use full strength bleach. Paint strippers will remove the print pattern and damage the vinyl if it comes in direct contact.

Latex Paint:

Fresh paint can be wiped off with a damp cloth. Hot soapy water will normally remove dried latex.

Tar or Asphalt:

Remove immediately. Prolonged contact will result in a permanent stain. Use a cloth lightly dampened with mineral spirits and rub the stain gently, working from the outer edge of the stain toward the center to prevent spreading. Rinse with soap and water.

Crayon, Mustard or Ketchup:

Sponge with mild soap and water. For stubborn stains that have set, use a cloth soaked in diluted mild detergent with gentle rubbing. Any remaining stain should be washed with diluted bleach. Rinse repeatedly with cold water.

Chewing Gum:

Scrape off as much gum as possible using a dull knife. Rub the gum with an ice cube to harden for easier removal. In a well ventilated area, use a cloth saturated with mineral spirits and gently rub the remaining gum. Rinse thoroughly with clean water.

Blood or Plant Residue:

Rub out spots using a clean cloth soaked in cool water. For stubborn spots, use household ammonia and rinse repeatedly with a clean, wet cloth. Do not use hot water or soap suds as this will set the stain.

Lipstick, Grease, Oil, Make-Up or Shoe Polish:

Apply a small amount of mineral spirits with a cloth. Rub gently. Be careful not to spread the stain by smearing beyond the original source. Remove shoe polish immediately as it contains a dye which will cause permanent staining. Rinse thoroughly with clean water.

Candy, Ice Cream, Coffee, Tea, Fruit Stains, Liquor, Wine, Tanning Lotion or Soft Drinks:

Loose material should be gently scraped with a dull knife. Use lukewarm water and sponge repeatedly. Any soiled area that remains after drying should be gently rubbed with a cloth or dampened with a mild detergent solution. Rinse thoroughly with clean water.

TIP:

Vinyl requires periodic cleaning to maintain its appearance and to prevent the buildup of dirt and contaminants that may permanently stain or reduce the life of the vinyl if left untreated. Frequency of cleaning and procedures used depend upon the amount of use and the environmental conditions in which the vinyl is subjected. Tears or holes in the vinyl can be temporarily covered with clear tape to prevent further damage. Repairs should be made by a professional upholstery shop. Commercial repair products may contain lacquers and cause the vinyl to become brittle and more difficult to repair.

“O” Vinyl**Cleaning Suggestions:**

The following steps are to be performed in sequence. Each subsequent step is to be used if the previous step was not successful. Clean area with warm water after each process.

For General Cleaning:

Wipe the soiled area with warm water, a mild detergent soap and a soft cotton cloth.

For Oil-based Stains:

Spray soiled area with household cleaner, such as 409® or Fantastik®, and wipe with warm water using a soft cotton cloth.

For Marker-type Stains:

Dab stained area with solution of 50% Isopropyl Alcohol and 50% warm water using a soft cotton cloth.

WARNING:

Avoid open flames or hot lighting when using an alcohol solution.

CAUTION:

Do not use any abrasive cleaner with this material.

NOTE:

A five parts water to one part bleach solution is recommended for disinfecting.

Ultra-Leather**Care Instructions:**

- Spot clean with mild soap and water.
- Air dry or dry using a hair dryer on the warm setting.
- For stubborn stains, use mild solvent.
- For tougher stains, try Fantastik® brand spray cleaner.
- Disinfect with a **5:1** water to **non-chlorinated** bleach solution.
- Dry clean using commercial dry cleaning solvents only.
- Use a mild detergent for:
 - Red Wine, Liquor, Coffee, Tea, Cola, Milk
 - Ketchup, Mustard, Mayonnaise, Steak Sauce, Soy Sauce
 - Butter, Salad Oil, Chocolate, Lipstick, Make-up, Face Cream
 - Suntan Oil, Machine Oil, Urine, Blood

Removing ballpoint pen stains:

Wipe the stain off with ethanol (ethyl alcohol). Follow all manufacturer safety instructions when using chemicals.

If the stain remains, use the following procedure:

1. Dilute household bleach (sodium hypochloride) with an equal amount of water (1:1 ratio).
2. Apply bleach/water solution sparingly to a piece of tissue. Place the tissue on the stained surface and cover it with polyethylene film to prevent the solution from drying.

3. Periodically remove the tissue to check on the condition of the stain. When the stain is almost gone, remove the tissue completely. Do not leave on for more than one hour.
4. Rinse the stain with sufficient amount of clean water.

CAUTION:

If bleach residue remains on the fabric, the polyurethane resin and back cloth will yellow and deteriorate.

Neutralize bleach by the following method:

- Place a piece of tissue, as in Step 2, and apply hydrogen peroxide solution (15%).
- Leave the solution on for approximately 30 minutes before removing the tissue.
- Completely remove the residue of hydrogen peroxide on the Ultra-leather with water.

CAUTION:

Ensure adequate ventilation when using chemical solutions for stain removal.

**For more information, please call:
Ultrafabrics, LLC
Customer Service: 1-877-309-6648**

NOTE:

These are recommended or suggested methods of cleaning. The manufacturer is not responsible for damage incurred while cleaning. Always test the cleaning method in an inconspicuous area first before applying to the entire area.

Leather**Spots & Spills:**

Absorb excess liquid immediately with a clean cloth or sponge. Use water only if necessary. **Do not** use a cleaning product. If water is used, clean the entire area where the spot occurred. An example would be the entire seat cushion or the entire arm. Allow to air dry. **Do not** dry the wet areas with hair dryers, etc.

Stubborn Spots and Stains:

Use lukewarm water and a mild soap to work up a thin layer of suds on a piece of cheesecloth. Scrub the surface. Rinse with a piece of clean, damp cheesecloth. Allow to air dry. **Do not** use saddle soap, cleaning solvents, furniture polish, oils, varnish, abrasive cleaners, soaps or ammonia water.

NOTE:

These are recommended or suggested methods of cleaning. The manufacturer is not responsible for damage incurred while cleaning. Always test the cleaning method in an inconspicuous area first before applying to the entire area.

Fabric Cleaning Codes

The following fabric cleaning codes list detailed cleaning instructions recommended by the fabric manufacturing industry. Refer to the fabric charts, located on the following pages, for particular fabrics and follow the recommended cleaning code.

“W” - Clean with the foam only of a water-based cleaning agent to remove the overall soil. Many household cleaning solvents are harmful to the color and life of a fabric. A professional furniture cleaning service is recommended for cleaning. Frequent vacuuming or light brushing to remove dust and grime is recommended.

“S” - Clean this fabric with pure solvents (petroleum distillate-based products such as Energine, Carbona, Renuzit, or similar products may be used) in a well ventilated room. Cleaning only by a professional furniture cleaning service is recommended.

CAUTION:

Use of water-based or detergent-based solvent cleaners may cause excessive shrinking. Water stains may become permanent and unable to be removed with solvent cleaning agents. Avoid products containing Carbon Tetrachloride as it is highly toxic. To help prevent overall soiling, frequent vacuuming or light brushing to remove dust and grime is recommended.

“S/W” - Clean with the foam only of a water-based cleaning agent or with a pure solvent in a well ventilated room (petroleum distillate-based products such as Energine, Carbona, Renuzit, or similar products may be used). Cleaning only by a professional furniture cleaning service is recommended. Frequent vacuuming or light brushing to remove dust and grime is suggested.

“P” - The article is resistant against perchlorethene, cleaning benzine (spirit), white spirit, R-11 and R-13.

“Dry Clean Only” - A professional dry cleaner or furniture cleaning service is recommended for cleaning this fabric.

“X” - Vacuum only. A non-metallic brush may be used.

***Machine Washing for 100% Polyester:**

“Wash Cycle” - Use synthetic setting and high water level with mild agitation. A mild soap or detergent in water not to exceed 160° F. can be used. No bleach or fabric softener.

“Drying” - Use low temperatures, a synthetic setting of 85° F. to 90° F. maximum should be used. **DO NOT** exceed three to five minutes time on the synthetic cycle. If washed at 160° F., the maximum temperature which can be used to dry is 140° F. Hang or fold immediately after drying.

“Finishing” - Press as following if necessary:

- Iron on low setting (275° F.) with damp cloth or steam iron using a dry press cloth.
- Grid Head press for short intervals with minimum steam. Do not lock the head.
- Flat bed press dampened drapery using cloth covering.
- Avoid prolonged contact with heat.

FLOORS
Carpet Cleaning

Spot Removal Procedures:

- Act quickly when anything is dropped or spilled. Remove spots before they dry.
- Blot liquids with a clean, white absorbent cloth or paper towel.
- For semi-solids, scoop up with a rounded spoon.
- For solids, break up and vacuum out as much as possible.
- Pretest the spot removal agent in an inconspicuous area to make certain it will not damage the carpet dyes.
- Apply a small amount of the cleaning solution recommended for the particular spot. **DO NOT** scrub. Work from the edges of the spot to the center. Blot thoroughly. Repeat until spot is removed.
- Follow steps on the carpet Spot Removal Guide.
- After each application, absorb as much as possible before proceeding to the next step.
- Absorb remaining moisture with layers of white paper towels, weighted down with a non-staining glass or ceramic object.
- When completely dry, vacuum or brush the pile to restore texture.
- If the spot is not completely removed, contact a professional carpet cleaner.

Cleaning Solutions:

- A. Dry Cleaning Fluid:** A nonflammable spot removal liquid, available in grocery and hardware stores.
- B. Nail Polish Remover:** Any acetate, which often has a banana fragrance. **Do not** use if it contains acetone.
- C. Detergent Solution:** Mix two cups of cold water and 1/8 teaspoon mild liquid detergent (no lanolin, non-bleach).
- D. Warm Water:** Lukewarm tap water.
- E. Vinegar Solution:** One cup white vinegar to one cup water.
- F. Ammonia Solution:** One tablespoon household ammonia to one cup water.
- G. Stain Removal Kit:** Available from retail carpet stores or professional cleaners.
- H. Call Professional:** Additional suggestions, special cleaning chemicals or the ability to patch the area may be available.
- I. Permanent Change:** Due to the nature of the stain, there may be color loss. The carpet has been permanently dyed or the carpet yarns have been permanently damaged.

NOTE:

While the recommended cleaning agents have proven to be effective, some stains may become permanent.

Spot Removal Guide

	A	B	C	D	E	F	G	H	I
Use the solution specified in order from 1-8 until stain is removed.	DRY CLEANING FLUID	NAIL POLISH REMOVER	DETERGENT SOLUTION	WARM WATER	VINEGAR SOLUTION	AMMONIA SOLUTION	STAIN REMOVAL KIT	CALL PROFESSIONAL	PERMANENT CHANGE
SPOTS									
Acid				2		1		3	*
Acne Medication		1		2	5	4	3	6	*
Alcoholic Beverage			1	4	3	2			*
Ammonia				2	1				*
Bleach		1	2					3	*
Blood		1	3		2	4			
Candle Wax	1					2			
Cement & Glue	2	1	3		5	4	6		*
Chalk/Charcoal/Graphite		1	2						
Chewing Gum	1								
Coffee			1	3	2		4	5	*
Cosmetics		2	1	3	6	5	4	7	*
Crayon	1		2	3					
Drain/Toilet Cleaner			2	1	3			4	*
Dye	1		2		4	3	5	6	*
Food/Soft Drinks			1	4	3	2	5	6	*
Fungicides, Insecticides, Pesticides	1		2	5	4	3	6	*	
Furniture Polish (Water Based)			1	4	3	2	5	6	*
Furniture Polish/Stain (Solvent Based)	2	1	3	6	5	4	7	8	*
Grease	1	2	3				4	5	*
Ink	2	1	3	6	5	4	7	8	*
Iodine	1		2	5	4	3	6	7	*
Lipstick	2	1	3	6	5	4	7	8	*
Medicine	2	1	3	6	5	4	7	8	*
Merthiolate			1	4	3	2	5	6	*
Nail Polish/Paint	2	1	3				4	5	*
Oil	1		2	4		3		5	*
Plant Food			1	4	3	2	5	6	*
Rust			2	3	1		4	5	*
Shoe Polish	2	1	3	5		4	6	7	*
Soot	1		2	3				4	*
Tar	1						2	3	*
Toothpaste			1						
Urine			1		2		3	4	*
Vomit			1	4	3	2	5	6	*

* While recommended cleaning agents are effective, some stains may become permanent.

Tile Floor

Tile floors vary in porosity and surface irregularities. Regular maintenance is important to keep the tile in the motorhome looking showroom new. Once the slide-out has been extended, keep the tile floor clean to prevent dirt from scratching the tiles prior to retracting the slide-out.

NOTE:

Tile is ceramic and will chip or break. Avoid dropping heavy or sharp objects on the tile.

Cleaning Tile:

Use a damp sponge mop or a cloth to clean tile. If moderate staining occurs, cleaning with a window cleaner such as *Windex*® should do the job. A mild solution of hot water and all-purpose cleaner for tile floors, walls and countertops can also be used. Rinse well with clear water and dry with a soft cloth to prevent streaking. Avoid cleaning tile with soap. Soap forms a film to dull the luster. Soap also promotes the growth of mildew and bacteria. **Do not** use powdered cleaners on unglazed tile floors. Undissolved powder will dull the surface.

NOTE:

Before using any solution to clean the tile, check the manufacturer's warning label to ensure safety of the product. If there is any doubt, apply several test patches of the solution in an inconspicuous place to determine product suitability.

Grout:

Grout used is a two part concrete mix and can develop surface cracks over time. In motorhome application, due to the constant flexing of the flooring, this process may accelerate. If the grout requires cleaning, scrub with a plastic brush. **Do not** use steel wool as small particles may remain and produce unsightly stains.

Sealing the Tile:

Grout sealers are available that protect the porous surfaces. If a sealer is used, follow the sealant manufacturer guideline for application. Never use sealers on unglazed tile. With the exception of terra-cotta, which may be oiled or waxed, tile does not need to be polished or buffed to maintain its finish.

Apply sealant to the tile floor and grout to prevent discoloring from soils and spills. Follow the sealant manufacturer's application instructions carefully.

CAUTION:

Product contains petroleum distillate. Open windows, vents and doors to provide adequate airflow during application.

NOTE:

It is recommended to test a small amount of sealant on an inconspicuous area before applying to the entire floor. Avoid getting sealant onto surfaces other than the flooring.

To Apply:

1. Extend slide room(s) and clean floor. Allow floor and grout to thoroughly dry.
2. Working from rear towards doorway, apply sealant direct from container onto a cloth towel or broom handle applicator. Grout sealant applicators are available at large hardware stores.
3. Apply sealant per manufacturer instructions. **Do not** allow sealant to puddle in grout lines. Extra care should be used to make sure all grout has been sealed.
4. Refer to container for cure time.

NOTE:

If a spill occurs before sealant has cured, it may be necessary to clean and additionally treat area with sealant as needed.

SHOWER

Showers are susceptible to soap build-up. To control mildew growth, spray the shower with household chlorine bleach. Allow it to stand for five minutes, then rinse with clear water. Clean the glass shower doors with window cleaner on a weekly basis to maintain shine. If water spots cannot be removed from glass, rub lightly with the flat edge of a razor blade to remove deposits.

To prevent excessive moisture and a continual growth of mildew, use the shower only with adequate ventilation. The sealant in a regularly used shower should be replaced once a year. To replace sealant, remove the old sealant using a sharp non-metallic instrument. Apply a new sealant, which can be found at most recreational vehicle supply stores.

CEILING

The ceiling of the motorhome can be a variety of materials or fabrics.

Hardwood, Vinyl and Decorated Paneling:

Certain cleaning agents will affect the surface on both printed and unprinted vinyl. Use only a mild, non-abrasive detergent and warm water with a soft cloth or sponge to clean. **DO NOT** use bleach, alcohol, oil-based spray cleaners or cleaning agents that contain solvents, citrus oil or harsh chemicals.

Decorative Ceiling Mirror:

Household cleaners, ammoniated detergents or glass cleaners may be used on A-Look Decorative Metals. Use a glass cleaner applied to a soft cloth to clean.

Suede Fabric:

Restore surfaces using a soft brush. Remove dust from the suede fabric using the soft brush attachment of a vacuum.

Lumicor:


Clean using warm water, mild detergent, and a soft sponge, cloth or chamois.

WALL COVERINGS

Immediately remove solvent based or pigmented substances from wall coverings. **Do not** use abrasive cleaners containing chlorine bleach or solvents.

Fidelity and *Jolie* brands are recommended. Always begin with a mild detergent or soap and warm water. To remove normal dirt, clean with a soft sponge. Rinse and wipe dry.

Before applying a cleaner, test the cleaning agent on a small, inconspicuous portion of the wall covering to ensure the cleaner does not affect the color or gloss of the wall covering.

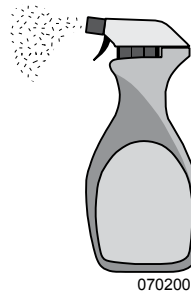

Specific Stain Removal Procedures:

Normal Dirt:

Remove normal dirt using a mild soap or detergent and warm water. Allow it to soak for a few minutes then rub briskly with a cloth or sponge.

Nail Polish, Shellac or Lacquer:

Remove liquid using a dry cloth. Use care not to spread the stain. Quickly clean the remaining stain with rubbing alcohol. Rinse with clean water.

Ink:

Remove immediately by wiping with a cloth dampened in rubbing alcohol. Rinse with clean water.

Chewing Gum:

Rub with an ice cube to cool and harden. Gently pull off the bulk of the gum. Remove remaining gum with rubbing alcohol.

Pencil:

Erase as much of pencil mark as possible. Wipe remaining marks with rubbing alcohol.

Blood, Feces or Urine:

Remove these staining substances as quickly as possible. Wash the stained area with a strong soap. If the stain does not disappear, rinse the soapy area thoroughly with clean water. Mix a solution of 50% water and 50% household bleach. Clean the stained area with the bleach solution. Rinse with clean water.

WOOD CARE

For general cleaning, regularly wipe wood surfaces using a soft cloth lightly dampened with clear warm water. Thoroughly dry to prevent streaking. For stubborn stains, use a clean cloth dampened with a solution of mild non-alkaline soap (dishwashing liquid) and water, then rinse. Dry thoroughly, buffing in the direction of the wood grain. Never use abrasive cleaners, scouring pads or powdered cleansers. Polishing products used on the solid wood surface depends on individual preference. Always follow product instructions.

Excessive dampness, dryness, heat, or cold can damage solid wood finishes. Sunlight can change the color or age the wood. Never allow moisture or spills to stand, always blot dry immediately. Solvents, alcohol, nail polish and polish removers, as well as harsh cleaners, should not be used on finished wood surfaces.

Minor damage to solid wood surfaces can be repaired quickly and effectively with a bit of hard work, some careful attention to details, and most importantly, the right materials. However, any wood repair or finishing job is best left for a professionally trained individual.

NOTE:

It is important to inform the service technician of any products used for the care and cleaning in the event of wood repairs.

Sanding and Sandpaper:

The following table is a general guide, but this may vary with wood type. The key to sanding is using the right sandpaper for the repair that is needed. Always sand with the grain.

GRIT	GRADE	USE
80-120	Medium	Smoothing the surface, removing small marks.
150-180	Fine	Final sanding prior to finishing.
220-240	Very Fine	Sanding between coats of sealing.
280-320	Extra Fine	Removing dust spots or mark between finish coats.
360-600	Super Fine	Removing luster or surface blemishes.

Steel Wool:

Abrasive material composed of long steel fibers of varying degrees of fineness that are matted together. Coarser grades are used to remove paint and other finishes; the finer grades for polishing or smoothing a finished surface.

Nail Holes and Small Cracks:

Fill nail holes and small cracks with wood putty or dough for unstained woods prior to any sanding. Stained finishes require filling holes and cracks after the stain has been applied. Putty should match the stain closely in color.

TIP:

A little sawdust and wood glue can be used to make putty for end grains.

Scratches and Nicks:

“Quick and simple” rarely describes repairs to stained wood finishes; however, a few tricks used by professional woodworkers can be tried to repair nicks and scratches.

Fixing scratches in stained woodwork:

Light scratches will often disappear when carefully rubbed with furniture polish or paste wax. When scratches appear lighter than the surrounding dark-stained woodwork, it usually means either that the scratch goes through the stain into the wood or that the varnish is flaking off. Deeper scratches can be hidden by carefully rubbing with a piece of oily nut meat such as Brazil nut, black walnut or pecan. Be careful to rub the nut meat directly into the scratch to avoid darkening of the surrounding wood. Color the scratch with brown coloring crayon or liquid shoe dye (especially good on walnut). Always test a procedure on an inconspicuous area on the wood to ensure no damages to the finish occurs.

Staining the scratch with iodine:

Mahogany - Use new iodine.

Brown or Cherry Mahogany - Use iodine that has turned dark brown.

Maple - Dilute one part iodine with one part denatured alcohol.

Commercial scratch removers, or stick wax to match the wood finish, can also be used. After the scratch has been hidden, polish or wax the entire area. Deep scratches should be repaired and finished by a professional.

Dents:

Small dents may be repaired by using steam. To raise a small dent, place a damp cloth over the area and hold a medium-hot iron on it. The steam causes the wood fibers to swell back into place. It may be necessary to repeat this process until the dented area is level with the surface. Allow the area to dry.

Restoring the clear finish:

The finished surface on the wood is a clear lacquer coating. The lacquer finish can be repaired if it becomes dull or is scratched. Scratches extending into the wood will require wood repair by filling the damaged area. If there is light damage, the wood can be steamed to bring the surface level.

Lacquer finish sheen can be restored by carefully using 0000 steel wool or equivalent. Sand damaged lacquer with fine sandpaper. Once the scratched surface is smooth, apply a clear lacquer coating using an aerosol. Lacquer can be applied by cloth or brush, but best results are obtained from an aerosol. If necessary, use 0000 steel wool or equivalent to bring out the luster and smooth overspray.

CAUTION:

Use top coats and finishes in accordance with the manufacturer's safety instructions. Use only in well ventilated areas with proper respiratory filters and masks.

Re-staining the wood:

If bare wood is visible at the bottom of the scratch, the wood will need to be re-stained. To remove damaged lacquer, lightly roughen a small area around the scratch with sandpaper, steel wool or synthetic steel wool. Find a stain that is a shade lighter than the wood finish. Stain the bare wood with a very small amount of stain on a rag, brush or cotton swab. If the color is too light, apply additional coats. Rub away excess stain with a dry rag. If the wood becomes too dark, use a rag moistened in mineral spirits to lighten the wood. Select a lighter color stain and continue.

Several companies have simplified this repair process by designing oil-based wood stain into marker-like containers to rub on to the scratch. Torn and scratched wood fibers will absorb stain and quickly darken. Start with a stain color that is lighter than the original finish. A second coat can always be applied if the color of the first coat is too light. Once the color is matched, restore the clear finish as described.

COUNTERTOPS
Solid Surface**Routine Care:**

The motorhome solid surface countertops and sinks have a matte/satin finish. Soapy water or ammonia-based cleaners will remove most dirt and stains from tops and bowls. Individual techniques may be used to remove different stains. Use the following recommendations for solid surface care.

Cleaning the Countertops:

- **Most dirt and stains:** Use soapy water or ammonia-based cleaner.
- **Water marks:** Wipe with damp cloth and towel dry.
- **Difficult stains:** Use Soft Scrub® and a gray Scotchbrite® pad.
- **Disinfecting:** Occasionally wipe surface with diluted household bleach (one part water and one part bleach).

Cleaning the Solid Surfaces Sink:

Occasionally clean by using Soft Scrub Liquid Cleanser® and a gray Scotchbrite® pad. Scrub the sink, rinse and towel dry.

Removing Cuts and Scratches:

Solid surface countertops are completely renewable. Use the following instructions to remove minor cuts and scratches.

- Sand area starting with 180 grit sandpaper, working your way up to 2000 grit or until blemish is gone and renewed finish is achieved.
- Never sand in one small area. Feather out lightly at each increase in sandpaper grit to blend restoration.

Preventing Heat Damage:

Hot pans and heat-generating appliances, such as frying pans or crockpots, can damage the surface. Always use a hot pad or a trivet with rubber feet to protect the surface and prevent heat damage.

Other Important Tips:

Avoid exposing the solid surface to chemicals such as paint removers or oven cleaners. If these chemicals come in contact with the Solid Surface, quickly wash with water. Avoid contact with nail polish or nail polish remover. If contact is made, quickly wash with water.

NOTE:

Do not cut directly on the solid surface. Run cold water to dilute the excess heat when pouring boiling water into the Solid Surface sink.

Laminate

Clean laminate countertops with a damp cloth or sponge. Use a spray cleaner to remove stubborn stains. Do not use harsh abrasives, scouring powders, peroxides or bleaches as these products may dull or damage the surface. Avoid contact with dyes, bleaches, and indelible inks on food packages. Do not use laminated countertops as a cutting board. Laminated countertops are resistant to minor heat; however, hot pans, irons, and lit cigarettes will damage the surface. Use hot pads under pans taken directly from the stovetop.

STAINLESS STEEL SURFACES

Stainless steel can be easily damaged by using improper cleaners. For example: many liquid cleansers designed to be gentle on smooth surfaces will damage stainless steel. Only use the methods outlined below, and always follow the directions that come with the cleaner (usually located on the bottle).

General Cleaning:

- Use warm, soapy water and dry with a soft, clean cloth.

For Heavy Soiling:

- Only use a stainless steel cleaner designed specifically for appliances.
- Follow all directions from the manufacturer of the cleaner.

DO NOT USE:

- Steel wool pads or abrasive cloths
- Abrasive powders or cleaners
- Citrus-based cleaners
- Acidic or vinegar based cleaners
- Ammonia
- Oven cleaners

NOTE:

Citric acid permanently discolors stainless steel. Immediately remove the following items from stainless steel surfaces: mustard, tomato juice, marinara sauce and citrus-based sauces or products.

WINDOWS**Water Spots:**

Glass will develop water spots when not properly cleaned. Water spots are magnified on a reflective finish. Use a squeegee immediately after washing to reduce water spotting. To remove stubborn water stains from reflective glass we recommend *Cerium Oxide Polishing Compound*, made by C.R. Lawrence, available at most glass shops.

Condensation

Condensation occurs from water vapor present in the air. More vapor is added by breathing, bathing, cooking, etc. and collects wherever there is available air space. When the temperature reaches the dew point, the water vapor in the air condenses and changes to liquid form.

Controlling Moisture Condensation:

Reduce or eliminate interior moisture condensation during cold weather by using the following steps:

- Partially open the roof vents and windows so that outside air can circulate into the interior. Increase the ventilation when large numbers of people are in the motorhome. Even in raining or snowing conditions the air outside will be far drier than interior air.
- Install a dehumidifier. Continuous use of a dehumidifier is effective in removing excess moisture from interior air. Using a dehumidifier is not a cure-all, however, it will reduce the amount of outside air needed for ventilation.
- Run the range vent fan when cooking and the bath vent fan (or open the bath vent) when bathing, to reduce water vapor. Avoid excessive boiling or use of steam producing hot water.
- **Do not** heat the motorhome interior with the range or oven. Heating with the range or oven increases the risk of carbon monoxide poisoning and depletes oxygen. Open flames also add moisture to the interior air and increase condensation.
- In very cold weather, leave cabinet and closet doors partially open. Air flow will warm and ventilate the interior storage compartments and exterior walls to reduce or eliminate condensation and prevent the possibility of ice formations.

WINDOW TREATMENTS**Mini Blinds****Dusting:**

Regular dusting will maintain the appearance of the mini blinds. Keep aluminum blinds looking their best by periodically wiping with a soft cloth or a dusting mitt. By tilting the slats down, not quite closed, most of the top surface of each slat can be cleaned. Blinds may be cleaned while hanging in place using this method.

Vacuuming:

For deeper cleaning, vacuum gently with the soft brush attachment of a vacuum cleaner.

Compressed Air/Hair Dryer (non-heat setting):

Blow dust off each slat. Dust will be air-borne using this method so ventilate the motorhome.

Spot-Cleaning:

Spot-clean shades and blinds using a soft cloth or a moistened sponge with lukewarm water. Add mild detergent, if needed. Blot gently to avoid creasing. In a dusty environment, the blinds may need to be cleaned regularly using a sponge or dampened soft cloth. Use warm (not hot) water and a mild detergent that does not contain abrasives.

Rinse the blinds using a clean cloth and water to prevent water spots. Place a towel directly under the blinds to absorb water that may drip.

Ultrasonic cleaning:

Professional ultrasonic cleaning may be preferred.


Day/Night Shades

Leave Day-Night shades in the up position when not in use to help the shades hold their shape.

Tension Adjustment:

Tension should be adjusted if the shades are loose or there is excessive vibration. A button is located on the bottom of the shade at each end. Two lines on each side of the shade are threaded through the button and tied off.

- Pull the tied-off lines through the button to increase tension. Leave some slack so the shades are not too tight.
- Tie the lines off at the new position. Adjust each side equally.
- Operate the shades to ensure tension is set correctly and equally on both sides.
- Trim excess line from both sides if desired.

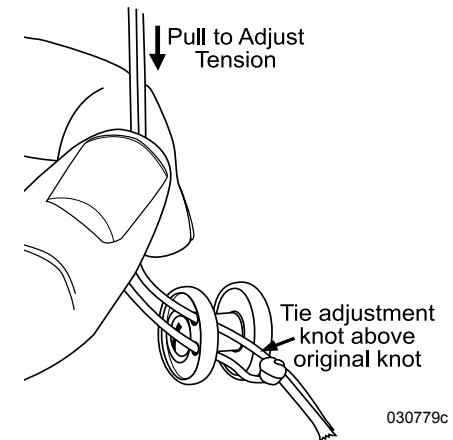**Dusting:**

Vacuum with a brush attachment or use a dusting tool on a regular basis.

Cleaning:

A dry foam cleaner may be used for soil and dirt removal. Follow all directions on the container, or use a cleaning solution of ¼ oz. clear liquid soap to 8 oz. water.

NOTE:

Do not use colored liquid soap as a stain may appear when fabric dries.

MOLD & MILDEW**What is Mold?**

Mold is a type of fungus that occurs naturally in the environment and can leave a musty odor, discolor fabrics, stain surfaces and cause considerable damage to the motorhome.

What Does Mold Need to Grow?

Mold requires a food source to grow, such as grease or soil. Synthetic fabrics, such as acetate, polyester, acrylic and nylon, are mildew resistant, but soil on the surface of these fabrics are susceptible to mold.

Temperate climate and moisture also help to cultivate mold growth. Moisture in the motorhome can result from unattended spills, leaks, overflows and condensation. Moisture allowed to remain on a growth medium can develop mold within 24 to 48 hours. Minimizing moisture inside of the motorhome can reduce or eliminate favorable mold growth conditions. Good housekeeping and regular maintenance are essential in the effort to prevent or eliminate mold growth.

Consequences of Mold:

All mold is not necessarily harmful, but certain strains of mold have been shown to cause, in susceptible persons, allergic reactions, including skin irritation, watery eyes, runny nose, coughing, sneezing, congestion, sore throat and headache. Individuals with suppressed immune systems may risk infections. Some experts contend that mold causes serious symptoms and disease which may even be life threatening. However, experts disagree about the level of mold exposure that may cause health problems, and about the exact nature and extent of the health problems that may be caused by mold. Moreover, the Center for Disease Control states that a casual link between the presence of toxic mold and serious health conditions has not been proven.

Standards or threshold limit values for concentration of mold or mold spores have not been set. Currently, there are no EPA regulations or standards for airborne mold contaminants. There is simply no practical way to eliminate all mold and mold spores in the indoor environment. For example, studies have shown that ozone cleaners are not effective at killing airborne mold or surface mold contamination.

Controlling Mold Growth:

The motorhome owner should eliminate mold growth in the motorhome. Take the following steps to eliminate mold growth in the motorhome:

1. Carefully examine items for signs of mold before loading them in the motorhome. Potted plants (roots and soil), furnishings, clothing and linens, as well as many other household items, may contain mold.
2. Regular vacuuming and cleaning will help reduce mold levels. Mild bleach solutions and most tile cleaners are effective in eliminating or preventing mold growth.
3. Indoor humidity can be reduced by 30 to 60% when venting clothes dryers to the outdoors. Ventilate the kitchen and bathroom by opening windows, using exhaust fans or a combination of both. Operating the air conditioning will remove excess moisture in the air, and help facilitate evaporation of water from wet surfaces.
4. Promptly clean up spills, condensation and other sources of moisture. Thoroughly dry any wet surfaces or material. **Do not** let water pool or stand in the motorhome. Promptly replace materials that cannot be thoroughly dried.
5. **Inspect** for leaks on a regular basis. Look for discolorations or wet spots. Repair leaks promptly. **Inspect** condensation pans (refrigerators and air conditioners) for mold growth. Take notice of musty odors and any visible signs of mold.

6. Should mold develop, thoroughly clean the affected area with a mild solution of bleach. First, test to see if the affected material or surface is color safe. If mold growth is severe, call on the services of a qualified professional cleaner.
7. If mold cannot be removed, throw the item away.

Whether or not a motorhome owner experiences mold growth depends largely on how the motorhome is managed and maintained. As a manufacturer, our responsibility is limited to things that we can control. As explained in the written warranty, we will repair or replace defects in the construction (defects defined as a failure to comply with reasonable standards of motorhome construction) for the Limited Warranty coverage period provided.

THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR DAMAGE CAUSED BY MOLD THAT MAY BE THE CONSEQUENCE OF OR ASSOCIATED WITH DEFECTS IN THE CONSTRUCTION.

PEST CONTROL

Regardless of the area one lives in or travels to, it is safe in stating there will be pests waiting. These pests are not only annoying; they can pose a health risk and create serious damage to the motorhome.

Common pests include insects such as ants, cockroaches, termites, flies, pantry pests and wasps as well as wildlife such as rodents, raccoons, bats, birds and snakes. It is important to remember that pests are searching for food, water and a place to live. Eliminating any one of those elements will help control the pest infestation. Take immediate steps to remove pests as soon as their presence is detected.

Steps to help control pests:

- Reduce clutter inside the motorhome and storage bays. All storage items, particularly food (including pet food), should be kept in tightly sealed containers. Seal all cracks and holes, and ensure that window, door and vent screens are securely in place.
- Routinely clean the motorhome, including storage bays. Wipe down the water bay. Promptly remove all crumbs from areas where food is regularly prepared and eaten. Garbage should be placed in a sealed container and removed to an outside receptacle daily. Only put out pet food that will be immediately eaten.
- Keep foods such as flour, cereal, spaghetti and pet food in re-sealable containers with tight lids.
- Sweep and vacuum often (especially in eating areas) to help eliminate a food source for pests.
- Seal cracks, crevices, and gaps around doors and windows.

- Many pests need moisture to successfully live and reproduce. Limit their access to water or moisture sources by sealing any cracks and leaks in pipes and faucets. Reduce moisture in the motorhome by controlling condensation, immediately wiping up spills and promptly repairing leaks. Be extra alert around areas that attract rodents and insects, including the sewer hose, fresh water hose, bay doors and items that may be leaning against the outside of the motorhome, such as fishing poles and golf clubs.
- When the motorhome is stored outdoors, clear the surrounding area of all rodent friendly hiding places: shrubs, trees and clutter. Completely seal the underside of the motorhome. Wire mesh will work well to prevent points of entry, but beware of blocking necessary air vents. Prior to operating the motorhome after storage, remove all insect and animal nests that may have developed around vents, engine compartments, the exhaust pipe and in the wheel wells.

Rodents:

Rodents may chew through wires or build nests in components of the motorhome. Signs of rodent infestation include droppings, shredded material or chewed furniture fabrics and vinyl. Rodents like to build nests with wire insulation, and are commonly attracted to the outside coating of 120 Volt AC wiring more than 12 Volt DC wiring.

NOTE:

Although the back cap of the motorhomes is well sealed, rodents are capable of chewing through the foam insulation and that area should be routinely inspected.

If there are signs of rodent infestation around the motorhome, place traps or poisons in suspected areas. Keep the traps and poisons safely away from pets and children. Cheese is not the best bait for a rodent trap. Use peanut butter or chocolate in small amounts. Place the bait on the trigger of the trap to induce the rodent to climb onto the trigger to reach the bait. Rodents do not limit invasion to unused vehicles.

Insects:

Eliminate insects when signs of infestation appear. If you are unable to identify the type of insect, purchase sticky traps from the hardware store and place the tape where the insects have been seen. Once a sample is caught, seek assistance in identifying the insect to determine what will be required to remove the infestation.

Regularly **inspect** the exterior of the motorhome for signs of a budding wasp nest, and promptly destroy small nests before they become too large.

Spiders can be in any structure. Immediately remove spider webs. Some types of spiders like to nest on top of the diesel tank and around the diesel hoses. Dispense of spiders using a vacuum. Use care to capture the spider and egg sacs. Throw the vacuum bag away in a sealed bag.

Fruit flies invade the motorhome by attaching to fresh fruits and vegetables. Determine what food items are generating the flies and discard that item in an outdoor trash receptacle. Fruit flies can be eliminated with a homemade trap. Pour a few ounces of vinegar into a cup and cover the cup with plastic wrap. Secure the wrap with tape or a rubber band and poke a ¼" hole in the plastic. Place the trap in the area where fruit flies are present.

Ants live in colonies. Only a fraction of the ant colony will leave to seek food. Spraying pesticides will only kill the ants that are away from the colony. The colony must be destroyed to eliminate all ants. Keep ants away from the sewer hose by spraying the hose ends with a soap and water solution.

Fleas can be removed by properly treating pets with a veterinarian approved treatment and by thoroughly cleaning the motorhome. Vacuum vinyl areas and tile floors to remove dust, flea larva and flea eggs. Follow by thoroughly washing those areas with soap and water. Carpets must be vacuumed and treated with a residual flea control product labeled safe for indoor carpet and furniture use. Perform the cleaning treatment daily for three days to ensure that all fleas have encountered the treatment.

Flying outdoor insects are attracted to bright light. Yellow porch light covers on the motorhome work to discourage insect invasion. During nighttime hours insects will be attracted to docking lights, or other bright exterior lighting.

If the presence of moths is detected inside of the motorhome, usually by holes appearing in material, clean the affected clothing and all other items stored in the same area.

Follow by completely cleaning the closet, dresser or storage area. If cracks are detected, seal the cracks and treat the area with a control product that is safe for indoor use. Follow product manufacturers safety warnings.

Birds:

Even birds can be considered pests, particularly when the motorhome is parked in the flight path of a flock. Bird droppings are hard to remove and will leave stains. Prevent permanent staining to the motorhome roof by regularly cleaning the surface to remove all bird droppings.

Damage from Pests:

Lizards have been known to crawl into the inverter and short out the circuit board. Lizards can be captured using glue traps. To remove the lizard from the trap, dissolve the glue with vegetable oil and release it outside and well away from the motorhome. A scorpion will glow blue-green in UV light. If the presence of scorpions in the motorhome is suspected, investigate with an UV black light during the nighttime hours.

Best sources of information about common household pests:

The Internet is a great place to find information about common pests. The National Pest Management Association website can be useful resource about common pests. Another good source for information are colleges and universities with entomology (study of insects) departments.

Electronic pest control devices can be costly and most likely will not work on all types of rodents and insects. When calling on the services of a professional to combat pest infestation, call a reputable business that is licensed in handling pesticides. Check references. Explain that you are seeking assistance for a motorhome, as treatments may differ from standard household remedies.

If a pest problem is suspected in the motorhome, consider professional pest control help.

The following guidelines can be used for selecting a pest control service:

- Seek referrals from those who have used pest control services. Inquire about the type of pest problem encountered and if they were satisfied with the service.
- Membership in the national, state or local pest control associations is a good indicator that the company has access to modern technical information and is committed to further education.
- Reach a complete understanding with the company before work starts; find out what the pest is, how the problem will be treated, how long the period of treatment will be, and what results can be expected.
- Be sure to understand what is guaranteed and what is not.

STORAGE

Short Term

Short term storage is defined as storing the motorhome for a period of thirty days or less. Properly preparing the motorhome during periods of short term storage will make bringing the motorhome out of storage a much easier process. Winterize the plumbing system if the motorhome is stored in winter months, or if stored when temperatures are below 32° F.

Checklist - Short Term Storage:

- Retract the slide rooms. **Do not** store the motorhome with slide rooms extended.
- Shut off all appliances.
- Close the primary propane valve.
- Disable Automatic Generator Start.
- Remove all articles from refrigerator/freezer and clean thoroughly.
- Drain the refrigerator icemaker and icemaker tray. See manufacturers manual for more details.
- Drain holding tanks. Winterize the fresh water system using FDA approved RV antifreeze or evacuate the plumbing system with air pressure.
- Retract and secure all awnings.
- Turn **off** interior house power.
- Store batteries fully charged. Batteries stored in a discharged state will readily freeze.
- If possible, position the motorhome so the batteries are accessible for charging or changing without having to move the motorhome.
- If available, leave the motorhome hooked to shore power. Leave the main battery disconnect switches **on**.
- If AC power is not available, turn the battery disconnect switches **off**.
- Careful placement of a small heat source in the interior will help control moisture. Desiccate filter systems will help remove interior moisture.
- If possible, store the motorhome inside a storage building.
- If stored outside, **inspect** all seams and seals twice a month for possible leakage.
- Store the motorhome with a full fuel tank to minimize moisture condensing at top of fuel tank.
- Close vents and windows to prevent wind driven rain entrance.
- Store tires at the maximum inflation pressure listed on the sidewall.
- Perform a full interior **inspection** for water leaks twice a month. Be sure to check behind all cabinet doors and drawers.

Long Term

Long term storage of the motorhome can be defined as leaving a motorhome unattended for a period of thirty days or more. A motorhome requires protection from the elements just as a house or a car would. When left out in the environment without proper storage or maintenance, a motorhome is vulnerable to the moisture and oxidation processes inherent in the environment.

NOTE:

The natural process of condensation will occur with temperature changes of 30° F. or more in one day. Humidity readings of 60% or greater will allow the accumulated moisture to remain for extended periods of time.

If AC power is not available in storage area:

- Turn **off** all appliances.
- Close the primary propane valve.
- Disable Automatic Generator Start.
- Turn **off** interior house power using the battery cut-off switch.
- If possible, situate the motorhome so the batteries remain accessible. This allows a battery to be charged or replaced without moving the motorhome.
- Charge the batteries to a full state of charge.
- Turn the main battery disconnect switches **off**.

- Use the monitor panel to make a quick reference check of the battery voltage while the motorhome is in storage. If the motorhome is stored outside, optional solar panels may offset the parasitic loads. Preventative measures should be used if the voltage readings are low. Removing the motorhome from storage or moving the motorhome in case of an emergency will be a much easier process if the batteries are properly maintained.

NOTE:

Batteries in a low state of charge will readily freeze. Freezing will damage the battery.

If AC power is available:

The main battery disconnect switches should remain **on**. The inverter will charge both house and engine battery banks. A 30 Amp shore power service is adequate.

CAUTION:

A 20 Amp service using light duty extension cords and the required adapters create serious voltage losses. Line voltage loss and the resistance at each electrical connection is a hazardous combination and should be avoided. Damage to voltage sensitive electronic equipment may result!

Surfaces to park/store the motorhome on:

- Avoid parking the motorhome on a grass or gravel surface to prevent moisture accumulation.
- Concrete pads seal the surface and allow better ventilation under the motorhome.

- Storage buildings with concrete floors, or heated storage facilities, greatly reduce the amount of moisture accumulation and protects the motorhome from moisture damage.

Outdoor Storage Area:

- The interior should be heated to help prevent mold and mildew growth. Moisture removing desiccate filter systems are available from hardware and RV supply stores. Place the filter system inside the motorhome to reduce interior moisture, condensation or humidity.
- Proper winterization of the fresh water system will prevent potential damage in extreme cold.
- Ultraviolet radiation affects soft goods and rubber products such as privacy curtains, window shades and tires. These items should be protected. Store Day/Night Shades in the Up position.
- Cardboard templates can be made for the windows to protect the interior from exposure to direct sunlight.
- Tire covers are available to protect the sidewall of the tires from cracking. Make sure tires in storage contain the correct air pressure to prevent damaged caused by under-inflation.
- Regularly wash the exterior to help control moss accumulation. Waxing the motorhome twice a year will augment these substances.

Inspect the motorhome:

- Perform a full interior **inspection** for water leaks every two weeks while the motorhome is in storage. Check inside all cabinets for signs of dampness or leaks. **Inspect** the ceiling areas around roof vents or other roof openings.
- Inspect and clean roof and sidewall seams at least twice a year. **Inspect** for exterior sealant gaps of all roof seams, vents, skylights, roof air conditioners and windows.

Fuel:

Storing the motorhome with a full fuel tank will minimize moisture condensing at the top of the tank. Diesel fuel is an organic material which will develop a microbe growth (black slime). Fuel stabilizers may be added to control microbe growth and degrading of the fuel. Consult the engine manufacturer owner's manual or a distributor for further detailed information on fuel stabilizers and additives.

Brakes:

Brakes suffer from non-use during periods of storage. The bare metal machined surfaces of brake drums or rotors have only a light coating of dust from the brake lining friction material. The brake dust is the only thing protecting the bare metal surfaces from rusting. Only regular brake applications dry the moisture preventing rust on brake drum or rotor surfaces.

During periods of non-use, oxygen and moisture oxidize the machined surfaces. Only occasional use keeps these surfaces from oxidizing. Rusty brake drum or rotor surfaces permeate the brake lining upon the first few applications, reducing the friction action of the linings.

Engine:

Internal combustion engines need to be “exercised” on a regular basis to ensure an adequate supply of lubricating oil coats the cylinder walls and piston rings. Valve and valve seat surfaces also suffer from non-use. Some valves will remain open depending at which part of the combustion cycle the engine has stopped. The heat and cold of the day allows moisture to accumulate through the exhaust system. Start all engines at least twice a month.

Electric Motors:

Electric motors in the motorhome should be occasionally operated to help lubricate and keep surfaces freely rotating. These items include the roof air conditioners, dash fans, dash blower motor, furnace fan and powered roof vents.

Winter Storage Checklist

- **Plumbing Lines** - Drain and protect. (See *Winterizing - Section 6*)
- **Fresh Water Tank** - Drain.
- **Body** - Clean and wax. Oil locks and hinges. Seal roof and seams as needed.
- **Countertop and Cabinets** - Wash with mild soap and water.

- **Curtains** - Remove and clean according to care specifications.
- **Windows** - Cover windows by pulling blinds, closing shades or using a separate cover such as a sheet.
- **Holding Tank** - Drain and rinse. Close valves.

NOTE:

Add a small amount of RV antifreeze to waste holding tanks to keep valves and gaskets lubricated.

- **Drain Traps** - Pour RV antifreeze down all drains.
- **Refrigerator** - Clean and leave both doors propped open. Cover exterior panels and roof vents.
- If equipped with an icemaker, drain icemaker and icemaker tray. See the manufacturer's manual for more detail.
- **Batteries** - Add distilled water and recharge if needed. If necessary, disconnect the cables, remove the batteries and store them in a cool dry place. Check and recharge as needed.
- **Air Conditioner** - Remove the air filters. Clean or replace.
- **Roof** - Keep clear of snow accumulation or damage may occur.
- **Interior/Exterior** - Storing under cover or indoors helps extend interior and exterior life.
- **Fuel Tank** - Diesel fuel tank should be full of fuel.

Removal from Storage

Extensive freeze damage or other serious deterioration can occur if the motorhome is not properly winterized. If the motorhome is properly and carefully prepared for storage, removal from storage will not be difficult. The following checklist pertains to items or areas that should be inspected when it is time to take the motorhome out of storage and put back into operation. If you have any questions regarding storage or winterization, consult a qualified service technician.

- Thoroughly **inspect** the outside of motorhome. Look for animal nests in the wheel wells or in other out of the way places.
 - Remove all appliance flue vent covers, ceiling vent covers and air conditioning covers. Be sure the refrigerator openings are free of debris, insect nests, webs, etc.
 - Open all doors and compartments. Check for animal or insect intrusion, water damage or other types of damage which may have occurred.
 - Check the state of charge of the batteries. If necessary, fill LLA cells with distilled water only. Charge as necessary. **Inspect** the cable ends and terminals. They should be secure and free of corrosion.
 - Check all the chassis fluid levels: engine oil, engine coolant, hydraulic fluid reservoir, transmission oil and rear axle oil.
 - Start the engine and allow it to reach operating temperature. Ensure engine instruments indicate proper readings.
 - While the engine is running, check the operation of headlights, taillights, turn signals, back-up lights, license plate light and emergency flasher. Operate the dash air conditioner. If the air conditioner does not work or the compressor makes unusual noises, have the system checked by a qualified air conditioner technician.
 - Shut the engine down. Adjust or add fluids as necessary. **Inspect** around the engine and under the motorhome for fluid leaks.
 - Drain, sanitize and flush the fresh water system as outlined in the *Water Systems-Section 6*. **Inspect** the sewer drain hose and connections for leaks. Replace if necessary.
 - Operate all faucets and fixtures in the fresh water system. Run a sufficient amount of fresh water through all the water lines and faucets to thoroughly purge any potable antifreeze from the fresh water system.
- NOTE:**
Discard at least the first two trays of ice from the icemaker to ensure the ice does not contain traces of antifreeze or other contaminants.
- Open cabinet doors and drawers. **Inspect** for water leaks at joints or fittings. Repair as necessary.
 - Operate all 12 Volt DC lights and accessories. If something does not work there may be a bad 12 Volt DC circuit breaker or blown fuse.
 - Install new batteries in battery operated safety detectors or devices. Test the Carbon Monoxide, propane and smoke detectors for proper operation.
 - **Inspect** the 120 Volt AC electrical system which includes the power cord, inverter/converter, all outlets and exposed wiring.
- NOTE:**
Prepare the generator for operation following the instructions in the Generator OEM manual.
- Start and run the generator.
 - Confirm that the batteries are being charged. Operate the 120 Volt AC appliances and air conditioners. If an electrical item or appliance is not properly functioning, contact the dealer or an authorized service center to have it evaluated.

- Have a qualified technician inspect the propane system and perform a gas leak test. The leak test should also include a propane regulator adjustment (if needed). The test can also verify if the regulator is faulty and should be replaced. Have the propane tank inspected.
- Operate each propane appliance. Observe all burner/pilot flames for proper color and size.
- Inspect and clean the interior.
- Check the sealant around all roof and body seams and windows. Reseal if necessary.
- Lubricate all the exterior locks, hinges and latches with a graphite lubricant.
- Check the windshield wiper blade condition. Check the wiper/washer operation.
- Wash and wax the exterior. Check the body for scratches or other damage; touch up or repair as necessary. Flush the underside thoroughly.
- Run through the operational checks for steering, brakes, engine and transmission. Operate the motorhome slowly during these checks to allow sufficient circulation of fluids and resetting of the components.
- If desired, have the dealer or repair center double-check preparation to make necessary adjustments and/or correct defects.

Appliances — Section 4



APPLIANCES - INTRODUCTION	78	AQUA-HOT	92
REFRIGERATOR - RESIDENTIAL	78	Diesel Operation	92
Control Panel	78	Electric Operation	92
Icemaker	79	Troubleshooting	93
Water Filter	80	Bay Thermostat	94
REFRIGERATOR - ABSORBTION (OPTIONAL)	81	Care & Maintenance	94
Operation Specifics	81	Fuel Filter	95
Control Panel	82	Aqua-Hot Overview	96
Icemaker	82	WASHER-DRYER PREPARED	96
Refrigerator Alarm	83	WASHER/DRYER STACKED (OPTIONAL)	97
Cooling Unit Fans	83	Washer	97
Doors	83	Test Cycle	97
Storage Procedures	83	Operating Instructions	98
Interior Light	84	Cleaning the Washer	98
Service	84	Winterizing the Washer	98
Air in Propane Supply Lines	85	Dryer	98
MICROWAVE/CONVECTION OVEN	85	Operation	99
Setting the Clock	86	Dryer Maintenance	99
Care & Cleaning	86	CENTRAL VACUUM (OPTIONAL)	100
COOKTOP	87	Operation	100
Cooktop Covers	88	Maintenance	100
Burner Grate	88		
Operation Tips	88		
Cooktop/Oven Cleaning & Maintenance	88		
WALL THERMOSTAT	89		
LCD Display	89		
Remote Temperature Sensors	90		
AIR CONDITIONING - ROOF	90		
Operation Requirements	90		
Fan Operation Only	90		
Air Conditioner Operation	90		
Heat Pump Operation	90		
Air Conditioner Maintenance	91		

APPLIANCES - INTRODUCTION

This section covers operation and care of various appliances found in the motorhome: a refrigerator, cooktop range, microwave, roof air conditioner and optional appliances. These appliances operate on AC or DC current, propane or a combination of the three.

NOTE:

Some appliance displays and appliance manuals may refer to LP-Gas as a fuel source; however, the actual fuel source used and required for these appliances is propane. The phrase “LP-Gas” is synonymous with not only propane, but butane and propane/butane mixtures. Since propane is the actual fuel required, the term “propane” will be used throughout this manual except for references to third party appliances (such as the refrigerator) that include the term “LP-Gas” on their displays or other literature.

INFORMATION:

Detailed information with CAUTION or WARNING instructions for the various appliances, other than what is found in this section, can be found in the manufacturer manuals.

WARNING:

Before entering any type of refueling station, turn off all propane operated appliances. Most propane appliances used in recreational vehicles are vented to the outside. When parked close to a gasoline pump, it is possible for fuel vapors to enter this type of appliance and ignite, resulting in an explosion or fire.

WARNING:

Carbon Monoxide gas may cause nausea, fainting or death. Operating a propane appliance with inadequate ventilation or partial blockage of the flue can result in Carbon Monoxide poisoning. Do not store flammable liquids such as lighter fluid, gasoline or propane in the outside refrigerator compartment.

NOTE:

Features and options vary with floor plans.

REFRIGERATOR - RESIDENTIAL

The refrigerator operates from shore power, the generator or the inverter. For ease of operation, thermostat controls are located on the freezer door with the water and ice cube dispenser. Ice can be dispensed as crushed or cubed.

NOTE:


The refrigerator operates on 120 Volts AC, not from propane.

INFORMATION:

See the OEM manual for detailed information and instructions.

Refrigerator Operation from Inverter While Traveling:

Turn the inverter and refrigerator on. The electrical combination of the engine alternator and the inverter will supply the power necessary to operate the refrigerator on 120 Volts AC while traveling.

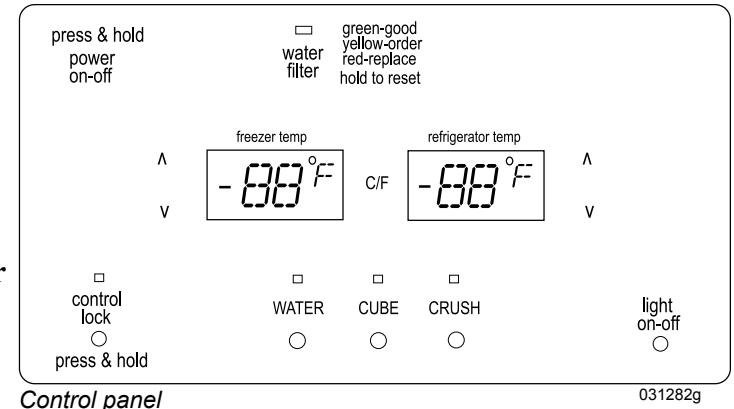

NOTE:

Be sure to turn the inverter off after travel. Hook to shore power to continue refrigerator operation.

Refrigerator Operation while Dry Camping:

Start the generator or turn the inverter on to power the refrigerator. If using the inverter, enable the Automatic Generator Start feature (through inverter remote) to avoid dead house batteries and the possibility of food spoilage. The AGS feature will start the generator based on parameters set in the inverter remote. See Section 8 for more information.

Control Panel

Features include temperature adjustment, water filter monitoring and filter alert reset. LED's indicate water filter status. Dispense water and ice, monitor the water filter and set temperature from the control panel. LED's indicate when a feature is active.

On/Off Button:

Press and hold On/Off for three seconds to turn the cooling system on or off. This will not disconnect power to lights or other electrical components.

NOTE:

Turning off the refrigerator does not disable refrigerator power consumption. The refrigerator must be unplugged to remove power for lighting and control panel operation.

Temperature Controls:

Press the up or down arrow to display temperature. The current set temperature momentarily displays before reverting to current temperature. The current temperature display is for reference only. Place a separate thermometer in the freezer or fresh food compartment for an accurate temperature reading.

CAUTION:

Keep the fresh food compartment temperature at or below 40° F to reduce the possibility of food spoilage. Place a separate thermometer inside the freezer or fresh food compartment to accurately monitor temperature.

Allow the refrigerator to operate for at least 8 to 12 hours before storing food inside to ensure safe food storage. Adjust temperature gradually allowing time for new preset temperature to stabilize.

Water:

Press this button to select water from the dispenser.

Cube:

Press this button to select cubed ice from the dispenser. Press the drinking glass against the dispenser paddle as far up as possible to catch all ice.

Crush:

Selects crushed ice from the dispenser. Press the drinking glass against the dispenser paddle as far up as possible to catch all ice.

Light:

Turns dispenser light on and off. The light will automatically turn on and off with water and ice dispenser use.

Filter Reset:

The Filter Status light above the Filter Reset button will illuminate when water or ice is dispensed. The light will change color depending on water filter condition. (See Water Filter)

Lock:

The ice and water dispenser can be locked out to prevent unwanted use. Press and hold the Lock button until the red LED illuminates to lock out dispenser; press and hold until the red LED turns off to release dispenser.

To Dispense Water:

Press a drinking glass against the water dispenser arm. Release dispenser arm to stop water flow. Water is not chilled; add ice for cold water. Do not pour water or ice in the dip tray as there is no drain.

To Dispense Ice:

Select crushed or cubed ice by pressing the corresponding button on the control panel. Press a drinking glass against the ice dispenser arm. Keep the glass as high as possible to catch all ice.

NOTE:


Use only cotton cloth and mild soap to wash refrigerator components. Harsh detergents such as window cleaner or bleach or use of scouring pads can damage the finish.

Icemaker

The icemaker requires 120 Volt AC power to operate. The icemaker will begin producing ice within 24 hours after the refrigerator is properly cooled.

Operation:

- Hook to city water or turn on the water pump.
- Open the valve for the water supply line located behind the exterior refrigerator access panel.
- Remove the shelf above the icemaker tray to access the icemaker power switch.

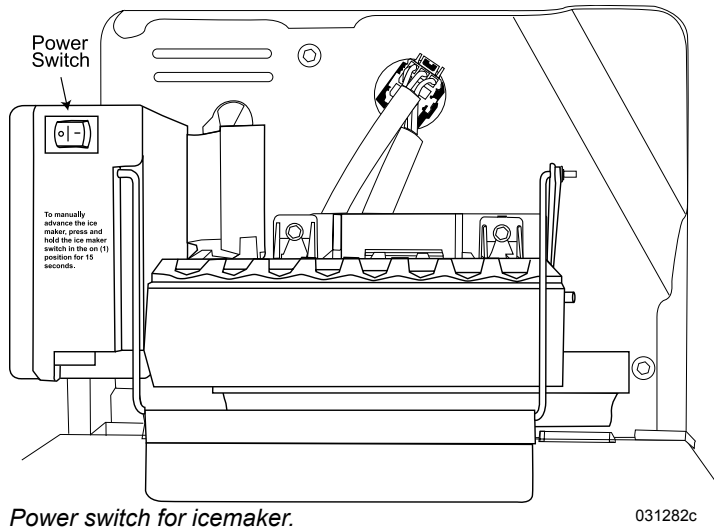

Power switch for icemaker.

- Use the power switch to turn on the the icemaker. Do not use the bail arm to manually turn the icemaker on or off.
- Before traveling, turn the icemaker off before to prevent water from spilling during transit.

NOTE:

Discard the first batch of ice to ensure any impurities in the system are flushed out.

Water Filter

The refrigerator is equipped with a water filter for the ice and water dispenser. The filter cartridge is located at the top of the fresh food compartment. The filter is rated at a capacity of about 200 gallons. The filter element is installed at the factory, so no initial installation is required.

A monitoring system alerts the user when filter replacement is necessary. The Filter Status light, located on the control panel, will illuminate when water or ice is dispensed. The light will change color depending on condition of the water filter.

Green: Filter is operating within specified life cycle.

Amber: Filter is approximately 80% used.


Red: Filter is completely used. Replace as soon as possible.

Water Filter Replacement:

Monitor the Filter Status light on the control panel to determine water filter replacement. Also replace the water filter after extended periods of non-use.

Filter Removal:

Turn the icemaker off (power switch is located on the icemaker). Firmly press the filter inward to release the filter. Pull the filter cartridge straight out of the filter housing. A small amount of water may leak from the filter cartridge. Do not operate the water or ice dispenser without the filter in place.

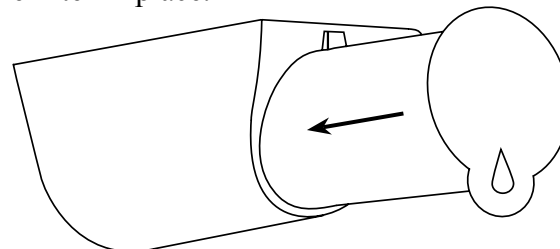

Firmly push inwards on water filter to release.

Filter Installation:

Note cartridge index position and insert new cartridge in same position. Firmly push in the new cartridge until it locks into place.

Turn the icemaker on.

Dispense water into a glass. Check the filter housing for leaks. The Filter Reset button is located on the water and ice dispenser control panel. Press and hold the Filter Reset button for 10 to 15 seconds to reset the monitoring system.

Priming the Water System:

Prime the water system after changing the water filter and whenever the water source is changed. Ensure the water supply valve is open. The valve is located in the outside refrigerator compartment. Press and hold a drinking glass against the water dispenser arm until water flows. Sputtering is normal as air is purged. Allow water to flow for three minutes to flush the system of air and impurities.

NOTE:

The dispenser automatically shuts off after three minutes of use. Release and depress the dispenser arm to reset.

Tips:

- If the temperature display flashes, the control system has detected a fault. Call Frigidaire customer service at 1-800-944-9044. A qualified service technician can interpret the flashing message.
- If possible, cool items first before putting them into the refrigerator.
- Keep the doors shut. Plan ahead what is needed before opening the doors.

- Do not block cold air vents with food items.
- Allow the refrigerator 24 hours of operation before actual use to help it get a head start with the refrigeration process.
- A box of open baking soda will help absorb food odors.
- Use the Automatic Generator Start system when using the inverter to supply AC power to the refrigerator. The amount of time the refrigerator will run from the inverter will vary depending on the state of charge of the house batteries.

REFRIGERATOR - ABSORBITION (OPTIONAL)

Follow the specific guidelines in the refrigerator manual to ensure longevity and proper operation of the refrigerator. With proper care and maintenance, the refrigerator should provide years of trouble-free service.

INFORMATION:

Refer to the refrigerator manual for detailed operating and maintenance instructions.


NOTE:

To reduce the possibility of food spoilage, keep the interior box temperature at or below 40° F. The refrigerator will consume more energy to maintain low temperature, especially in hot, humid climates. Lower temperature may also lead to quicker frost build-up.

Operation Specifics

- The refrigerator operates from propane or 120 Volts AC electric.
- DC Voltage for control pad operation must be no higher than 15.4 Volts DC or lower than 10.5 Volts DC.
- AC voltage must be no higher than 132 Volts AC or lower than 108 Volts AC.

Important: Operate refrigerator only when level. Place a torpedo level on the bottom shelf of the refrigerator. The bubble should be at least halfway in the circle. Generally, this is within comfortable living conditions.

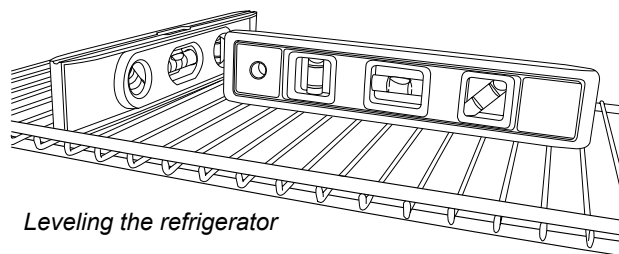

Leveling the refrigerator

020295

CAUTION:


Operating the refrigerator off-level separates chemicals, causing them to crystallize and block the circulation action of the cooling unit. Damage is cumulative and irreversible.

WARNING:

Do not use the refrigerator if an ammonia smell is present inside or outside of the refrigerator or a yellowish substance appears inside or at the outside access compartment. This can be an indication of a refrigerant leak. Contact an authorized repair facility.

For the refrigerator to operate:


- House batteries must be charged.
- The primary propane valve must be on or an AC source must be available.
- **Figure A:** The refrigerator 120 Volt AC cord(s) must be plugged in (located outside behind refrigerator access door).
- **Figure B:** The icemaker shutoff valve must be open if the refrigerator is equipped with an icemaker. The icemaker shutoff valve is located behind the exterior refrigerator access panel.

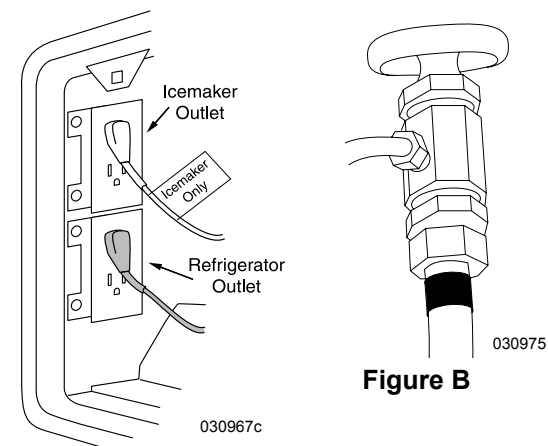

030975

Figure B


Figure A

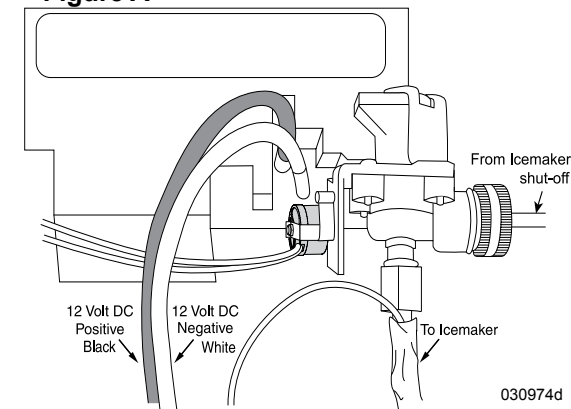

030974d

Figure C

- **Figure C:** If controls do not light up, check the house batteries charge status or see if the 12 Volt DC wires are plugged into the refrigerator circuit board (located outside behind refrigerator access door).

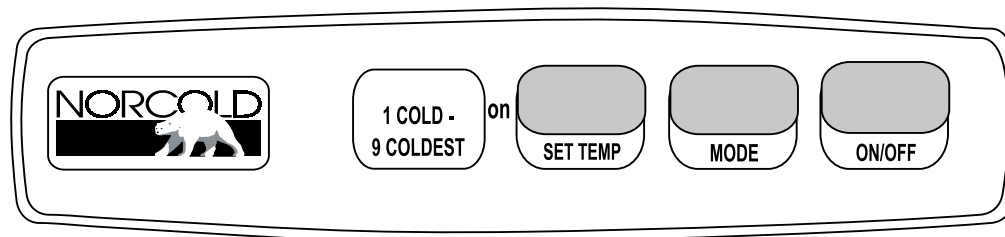

030864d

Control Panel

- **On/Off Button** - Turns the refrigerator **On** or **Off**.
 - Push the **on/off** button to start the refrigerator in **Auto mode**.
 - Push and hold the **on/off** button for two seconds to shut it off.
- **LED Display** - This screen is used for mode, temperature and fault code display.
- **Mode Button** - Controls the operation mode of the refrigerator.
 - Press the **Mode** button to select between Automatic **AU**, **AC** or **LP** (propane) operation.
- **Set Temp Button** - Adjusts the temperature.
 - To adjust, push and hold the **Set Temp** button.
 - Number “9” is the coldest setting.

Manual Mode:

There are two manual modes:

1. **AC** = The refrigerator is operating on AC electric.
2. **LP** = The refrigerator is operating on propane.

Automatic Mode (AU):

This feature selects **AC** over propane operation. If AC discontinues, the refrigerator switches to propane operation. If the refrigerator fails to light, the alarm sounds and a code displays.


- Press the **Mode** button until **AU** displays.
- Press and hold the **Set Temp** button until the desired temperature displays. Release button.
- In **Auto** mode, **AU/AC** or **AU/LP** will alternate three times when a mode has changed.

If the propane does not ignite within 30 seconds, the control changes to a different energy source or the gas safety valve closes and “**NO**” “**FL**” displays. Turn the refrigerator off then back on. If the gas does not ignite after several attempts, consult a dealer or authorized Norcold service center.

Icemaker

The icemaker requires 120 Volts AC to operate. Only after the freezer reaches freezing temperature will the icemaker function. City water or the water pump must be on and the valve for the water supply line to the icemaker must be on. The icemaker shutoff valve is located behind the exterior refrigerator access panel or under the galley counter.

- Pull the metal arm (bail) down to turn the icemaker **on**.
- Push the arm up to turn the icemaker **off**.

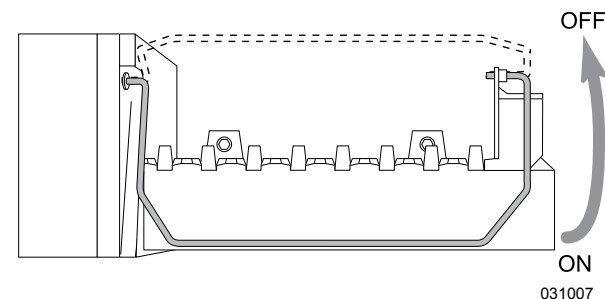

031007

NOTE:

If the icemaker is in operation while the motorhome is in motion, water may spill out of the ice tray. Raise the icemaker arm to stop ice production while in transit. Do not use the first one or two trays of ice if the refrigerator has been in storage. Ice cubes may have contaminants. Do not operate the icemaker without water pressure supplied to the refrigerator as this can damage the icemaker assembly.


Water Line Heater:

A thermal disc supplies voltage to heater tape when ambient temperature is less than 38° F (+/- 4°) and shuts off at temperature greater than 48° F (+/- 5°). The water line heater is only for the line from the solenoid to the icemaker.

Refrigerator Alarm

The refrigerator alarm will sound for the following reasons:

1. DC or AC voltage is higher or lower than allowed.
2. The refrigerator fails to light on propane or fails to light after a period of operation.
3. Refrigerator is set to **Auto**, 120 Volts AC is discontinued and propane fails to light. **NO AC** will display, followed by **NO FL**, and the alarm will sound. Consult the OEM manual.
4. Door is open longer than two minutes.
5. The circuit board detects a failure. The control panel will display a code.

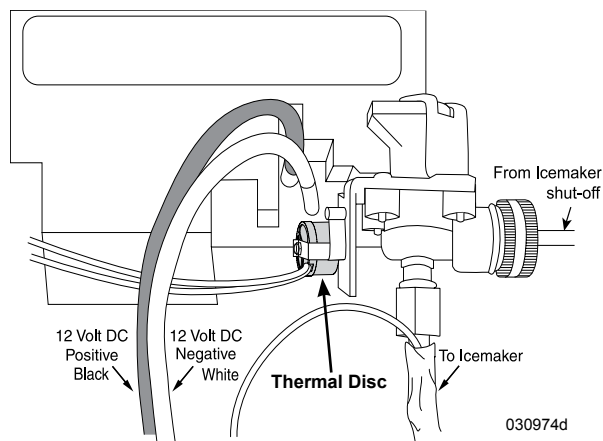**NOTE:**

If the alarm sounds, note the code in the LED display and turn the refrigerator off to silence the alarm.

INFORMATION:

Refer to the OEM manual for the list of codes and their meanings.


Cooling Unit Fans

The cooling unit is equipped with a pair of cooling fans that pass air across the cooling unit. These fans start automatically and are audible when in operation.

Doors**Interior:**

The refrigerator doors use a positive latch that secures the door with a “click” to prevent the door from opening during travel. The doors use a heating element located in the flapper on the left door. The heating element activates when operating the refrigerator in any mode to help prevent moisture accumulation in high humidity conditions.

In storage, a completely sealed refrigerator is a perfect environment for mold and bacteria to grow. When storing the motorhome, reduce odor from mold and bacteria in the refrigerator by using the door storage feature to lock the doors partially open. To use the storage feature, open doors enough to slide tab into the cut-out of the strike plate.

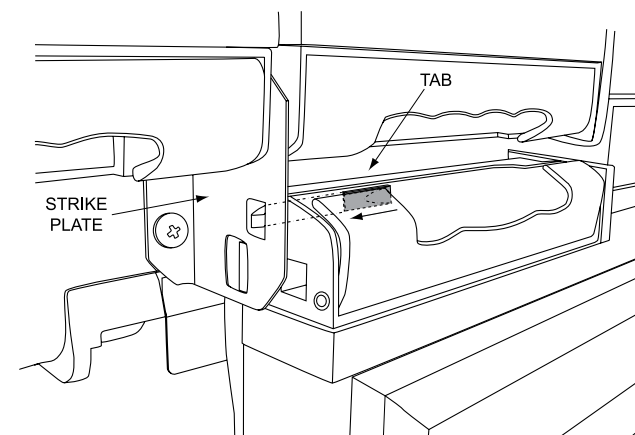

Refrigerator door locks


Storage Procedures**Storage Feature:**

- Turn the refrigerator **off** and remove all items. Leave the drip tray under the cooling fins.
- Shorten defrost time by using trays of warm water. **Do not** use a heating gun, hair dryer or sharp objects to remove frost as these can damage the interior or cooling unit.

- Wash the interior using mild spray cleaners or a solution of liquid dish detergent and warm water. **Do not** use scouring pads or abrasive cleaners that can damage the interior finish.
- Rinse with a solution of baking soda and water. Dry with a clean cloth.
- Lock the doors open.

CAUTION:

When defrosting, do not use a hot air blower. Permanent damage could result to plastic parts. Do not use a knife, ice pick or any other sharp instrument to remove ice from the freezer as they can puncture the system.

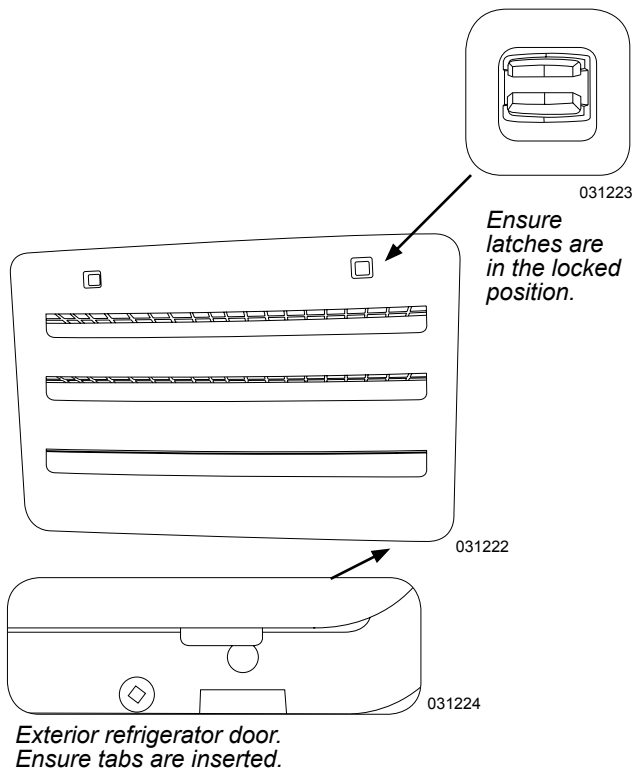

Exterior:


The exterior door is used by technicians to service the refrigerator. The 120 Volt A/C cord, DC wiring and propane connection is accessed through the exterior door. It is important the exterior door is properly attached and latches secured to prevent loss of the door during travel.

Interior Light

The interior light is located at the top of the fresh food compartment. When the door is open the light will illuminate.

Bulb Replacement:

1. Remove the light cover by pulling it toward the front of the refrigerator.
2. Remove the light bulb from the holder.
3. Install a **GE#214-2** replacement bulb and replace the cover.

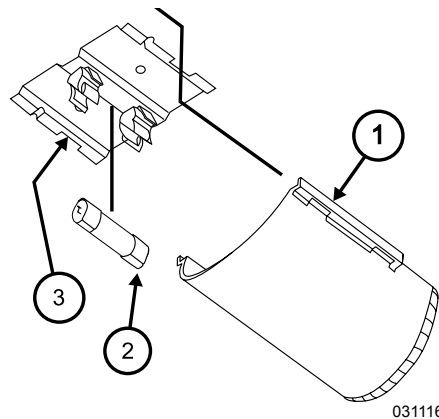

Cleaning:

Cleaning the refrigerator is usually done after a defrost cycle or before storage. Use a lukewarm, weak soda solution to clean the interior of the refrigerator.

Use only warm water to clean the finned evaporator, ice trays and shelves.

WARNING:

Never use strong chemicals or abrasives to clean the refrigerator. Damage to the protective surfaces will occur.

NOTE:

If the refrigerator will not be in operation for a period of weeks, it should be emptied, defrosted, cleaned and the doors left ajar. The ice trays should be dried and kept outside the refrigerator.

Tips:

- Cool items first, if possible, before putting them into the refrigerator.
- Keep the doors shut. Know what is needed before opening the doors.
- Allow the refrigerator 24 hours of operation before actual use to help get a head start with the refrigeration process.
- A box of open baking soda will help absorb food odors.

Service

The propane function of the refrigerator, and propane system pressure check require annual service. Over time, the BTU rating of the flame can change, affecting the refrigerator's performance. Ambient temperature, high humidity and altitude above 5,500 ft. can affect performance and function. If possible, switch mode operation to AC while at a higher altitude. Ensure the exterior refrigerator access panel is properly replaced after removal.

Air in Propane Supply Lines

For safety reasons, the refrigerator will attempt to ignite on propane gas within a specified amount of time. When starting the refrigerator for the first time after storage, or after servicing the gas supply system, propane gas supply lines may contain air. Due to the air in the gas supply lines, the refrigerator may not ignite on propane gas within the specified amount of time. Follow the procedure on how to remove air from the propane supply lines.

- Ensure the primary propane valve and any other necessary valves are open.
- Try lighting the cooktop burners first to quickly purge air from the main distribution line.
- Push the **On/Off** button to turn the refrigerator on.
- Press the **mode** button until the refrigerator indicates propane. The refrigerator will start a 30 second trial for ignition during which the gas safety valve opens and the igniter sparks.
- If the refrigerator fails to light, indicated by **F** or **NO FL (No Flame)**, turn the refrigerator **off** then back **on** and set to propane mode. If after the third attempt the refrigerator fails to light, stop and consult your local dealer or an authorized service center.

MICROWAVE/CONVECTION OVEN

The microwave/convection oven operates from 120 Volt AC supplied by shore power, the generator or inverter.

Operation Tips:

- Ensure cookware being used is microwave safe. Gold paint or glaze may contain a trace amount of gold which is electrically conductive and not compatible for microwave. Hand painted china commonly contains traces of metal.
- The glass tray and roller guide must always be in place during cooking.
- Ensure the door is firmly closed before use.
- If the control pad is not lit, plug another electrical appliance into the same outlet to verify 120 Volt AC power is present. If the test item works, contact an appliance repair facility to have the microwave/convection oven checked.
- Steam accumulating inside or around the outside of the oven door may occur when the microwave/convection oven is operated under high humidity conditions and in no way indicates a malfunction of the unit. Wipe away steam using a soft cloth.

Microwave/Convection Oven Facts:

One of the most useful documents for the microwave/convection oven is the operations manual, located in the owner's information file box. Read it carefully and keep it for reference.

A properly functioning microwave/convection oven presents no hazard with ordinary use. Safety features should be kept in good condition. Never attempt to bypass safety interlocks or allow debris or residue to accumulate on the door or oven face. If the oven is damaged, discontinue use. Oven adjustments or repairs should be made by qualified service personnel. Check the microwave/convection oven owner's manual for maintenance tips and other information. Remember to register the microwave/convection oven with the manufacturer.

CAUTION:

The ventilation fan cannot manually turn off if automatically started from a heated cooktop. In the event of a cooktop fire, turn off the microwave AC breaker to prevent flames from spreading into the microwave.

NOTE:

When dry camping, minimize using the inverter to operate the microwave/convection oven due to the high rate of battery consumption.

NOTE:

The microwave/convection oven is for food preparation only. Do not use the microwave/convection oven to dry clothes, newspapers, shoes or other items.

Setting the Clock

To Set the Clock:

- Press the **Stop/Clear** button.
- Press the **Clock** button.
- Enter the time using the number buttons.
- Press the **Clock** button to start time.

NOTE:

The clock is a 12 hour clock only.

Care & Cleaning


The exterior of the microwave/convection oven is plastic and metal. The interior is metal. **DO NOT** clean with scouring pads, harsh or abrasive cleaners, chemical cleaners or petroleum based thinners that can damage the finish. Use mild soap and water with a damp cloth or paper towel to remove stains or spills. When cleaning the touch pad, open the door to prevent accidental operation. Use mild soap and water with a soft cloth. Avoid using excess water on the touch pad. The turntable plate and oven racks are dishwasher safe.

Charcoal Filter:

Depending on use, the charcoal filter should be replaced every 6 to 12 months. Use the following procedure to remove the louvers to replace the charcoal filter and oven light:

1. Remove power to the microwave/convection oven.
2. Remove the screws (A) securing the louver.
3. Insert a flat edge screwdriver over each tab pressing downward and move the louver away from the microwave.

4. Remove and replace the charcoal filter. Ensure the filter is positioned on the supporting tabs.
5. Replace louver and mounting screws.

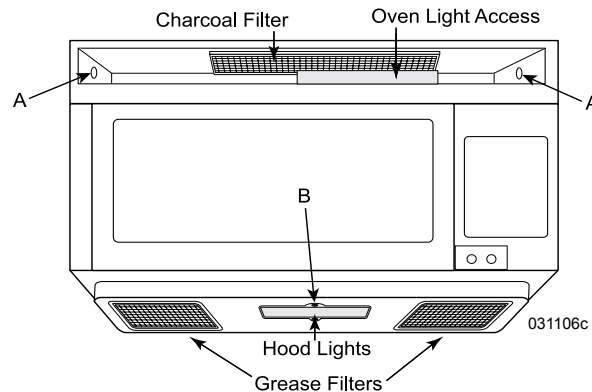

Oven Light:

1. Remove the louver as indicated above.
2. Slide the metal light cover forward and lift upwards.
3. Remove the light bulb and replace only with an equivalent watt bulb. **Do not exceed 30 watts.**
4. Replace light cover, louver and mounting screws.

Hood Light:

1. Remove power to the microwave/convection oven.
2. Remove the screw (B) securing the light cover.
3. Remove the light bulb and replace only with an equivalent watt bulb. **Do not exceed 30 watts.**
4. Close the cover and re-secure with screw.

CAUTION:

Light cover may be hot. Do not touch glass with lamp on. Do not use the light as a night light.

Grease Filters:

Operating the microwave/convection oven without the grease filters in place can damage the unit. Grease filters should be cleaned at least once a month. To remove the filters, use the pull-tab to slide the filter to the end of the opening and tip down. Soak the filters in the sink or in a dishpan filled with hot water and detergent.

- **Do not** use ammonia or other alkali-based products that may darken the filter material.
- Agitate the filter. Use a scrub brush to remove caked on grease.
- Rinse the filter thoroughly and shake dry. Place the filter back into the opening, tip upward and slide filter to the end of the opening. Lock in place. Be careful not to kink or warp the filter upon installation.

Cleaning Tips for the Microwave:

- Turn the oven **off** before cleaning.
- Cover food while cooking to keep food spattering to a minimum.
- Clean up all spills or spatters before they dry. Wipe up food spatters or spilled liquids with a damp cloth. Mild detergent may be used for stubborn spills. **Do not** use harsh detergent or abrasive cleaner.
- It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm, sudsy water or in a dishwasher.

- The roller guide and oven cavity floor should be cleaned regularly to avoid excessive noise. Wipe the bottom surface of the oven with mild detergent water or window cleaner and then dry. The roller guide may be washed in mild sudsy water.
- Food odors may linger inside oven. To help eliminate odors, combine the juice and the peel from one lemon, several whole cloves and 8 oz. of water into a two cup bowl. Place in oven on high power; bring to a boil for several minutes. Let cool in the oven for several minutes.
- Clean the outside oven surface with soap and water. Wipe away any residue using a damp cloth. Dry with a soft cloth. To prevent damage to the operating parts inside the oven, do not allow water to seep into the ventilation openings.
- If the control panel becomes wet, clean with a soft, dry cloth. **Do not** use harsh detergents or abrasive when cleaning the control panel.

COOKTOP

The cooktop uses only propane as a fuel source. The burners use a piezo type igniter. The cooktop is to be used for cooking purposes only and not as a heating source. When the burner valve is opened the fuel source flows through the valve into the mixture tube. The fuel passes by a hole or venturi in the mixture tube which draws air in with the fuel for a proper fuel/air ratio.


The flame should have a blue appearance with a lighter blue defined flame at the burner head. A yellow flame or yellow tips indicate a rich fuel mixture which can leave a black color or carbon on the bottom of a pot or pan.

POISON:

Do not heat the motorhome interior with the cooktop. Gas combustion consumes oxygen inside the motorhome. Carbon Monoxide is an odorless, colorless and highly poisonous gas.

INFORMATION:

For more detailed information and operating instructions, refer to cooktop OEM manual.
Operation

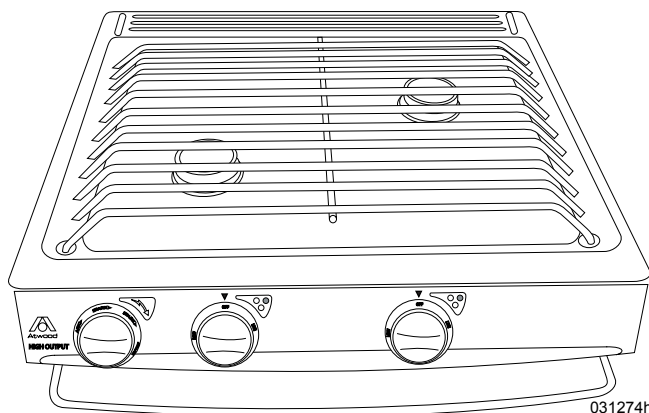

To Use the Cooktop:

- The primary shut-off valve on the propane tank is open.
- The house battery disconnect switch is on.
- Battery cut out switch is on.
- House batteries are charged.

WARNING:

Do not leave burners unattended during cooking. Do not leave burner valve(s) open while burner(s) are not lit. Propane is heavier than air and will settle on the floor and “hide” in corners. If a gas smell exists, extinguish all open flames. Open all windows and doors. Do not touch any electrical switches. They may cause a spark that can ignite. Evacuate the motorhome and shut off the primary shut-off valve on the propane tank. Propane is highly volatile, highly explosive and extremely dangerous. Explosion, fire, property damage, injury or death can result. Contact a qualified service center to have the problem correctly diagnosed and repaired before resuming operation.

⚠ WARNING

IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.

Cooking appliances need fresh air for safe operation.

Before operation:

1. Open overhead vent or turn on exhaust fan.
2. Open window.


FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

020327

Lighting Top Burners:

- Turn the desired burner knob counterclockwise to **Lite**. **Do not** light more than one burner at a time.
- Turn the spark knob clockwise several clicks until the burner lights. The burner should light within six clicks or one full rotation of the knob.

- After the burner lights, adjust the surface burner control knob between HI and LOW to select the desired flame size.
- Turn the burner knob clockwise to OFF to extinguish the top burner flame.

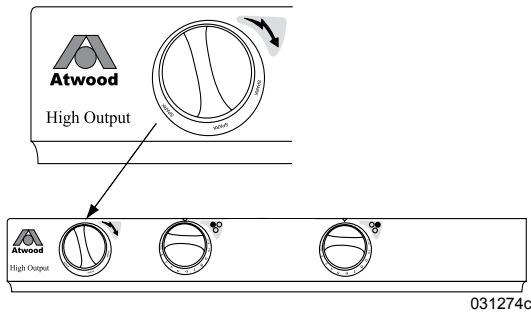

WARNING:
Cooktop covers must be off when the cooking surface is in operation.

Operation Tips:


- A yellow flame is an indication of incorrect fuel/air ratio. Lowered BTU output and carbon build up can occur.
- Flame appearance may change and BTU output will lower when operating the cooktop at an altitude above 5,000 ft. Allow extra cooking time.
- **Do not** allow the flame tips to extend beyond pan or pot edge. Heat is wasted and possibility of injury increases.
- Cooking time can be reduced if the least amount of liquid is used. The choice of cookware selected can make a big difference.

Cooktop Covers

- **Do not** use cooktop unless the covers are removed.
- **Do not** place the covers on the cooktop while the burners are in use.
- **Do not** use the covers as a griddle.
- The covers must be in place while the motorhome is in transit.

Burner Grate

The burner grates can separate from the cooktop cover for cleaning purposes. The grates are attached to the cooktop by insertion tabs. Place a towel next to the cooktop and lift burner grate straight up to remove and place on towel to clean. Use only warm soapy water to clean the burner grates. To re-install a burner grates align the two insertion tabs with the two grommets and push down.

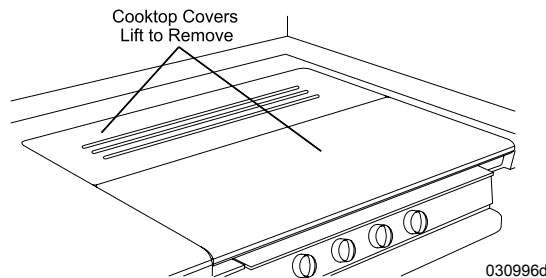

Operation Tips

- A yellow flame is an indication of incorrect fuel/air ratio. Lowered BTU output and carbon build up can occur.

- Flame appearance may change and BTU output will lower when operating the cooktop at an altitude above 5,000 ft. Allow extra cooking time.
- **Do not** allow the flame tips to extend beyond pan or pot edge. Heat is wasted and possibility of injury increases.
- Preheat the oven for approximately 10 minutes prior to use.
- Cooking time can be reduced if the least amount of liquid is used. The choice of cookware selected can make a big difference.

Cooktop/Oven Cleaning & Maintenance


Regular cleaning with a soft cloth and a warm detergent solution is generally enough to keep the cook top clean. Wash, rinse and dry with a soft cloth. Thoroughly clean the cook top when it is cool. Use a dry cloth or paper towel while the surface is warm to the touch to clean splatters or spills. Cleaning will be more difficult if spills bake onto the surface.

- Use glass cleaner sprayed on a paper towel for the cook top surface.
- **Do not** spray glass cleaner directly on the surface.
- **Do not** use abrasive cleaners, steel wool or harsh cleaners such as bleach, ammonia or oven cleaner.
- The surface burner grate and caps should be cleaned using the same guidelines as the cook top surface.
- Clean all surfaces as soon as possible after a boil over or spill. However, allow the surfaces to cool before cleaning.

- Use warm, soapy water to clean the burner grate, cooktop, and stainless steel surfaces and plastic items on cooktop. Grit or acid-type cleaners may ruin the finish.
- Use only non-abrasive plastic scrubbing pads.
- **Do not** allow foods containing acids (such as lemon, tomato juice or vinegar) to remain on the surface.
- Remove the cooktop cover to clean the underside of the cooktop.
- To keep the cooktop floor pan clean, carefully place strips of aluminum foil on the floor pan and under burners. **Do not** restrict air flow of the mixture tubes.

WALL THERMOSTAT

The RV Comfort thermostat is located in the hallway area. The thermostat controls the HVAC (Heating, Ventilation, and Air Conditioning) system comprised of roof top air conditioners and the furnace. The thermostat controls HVAC functions: Cool, Off, Heat Mode and Zone.

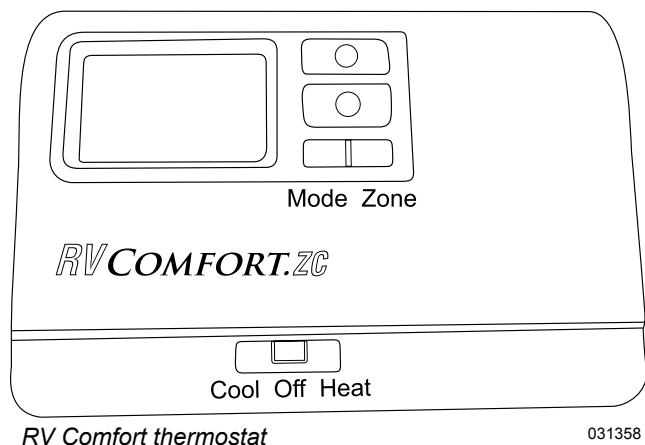


The RV Comfort thermostat must be On to operate any HVAC function. The motorhome is divided into operating zones (See Chart). The selected Zone will be indicated on the left side of the LCD display. Press the mode button to select the desired HVAC function then press the up or down buttons next to the display to adjust temperature.

Room (zone) temperature is indicated on the right side of the display. Room temperature will change over to temperature set point when adjusting temperature.

Due to ambient operating limitations in heat pump mode, the Aqua Hot may become the primary heat source. While in Heat Elec mode (Heat Pump), if zone temperature and temperature set point is greater than 5°, the Aqua Hot will automatically become the primary heat source. Elec(tric) will continue to display with “Gas” flashing indicating the Aquq Hot is operating. The system will automatically switch back to heat pump operation (Heat Elec) when ambient temperature allows heat pump operation.

LCD Display

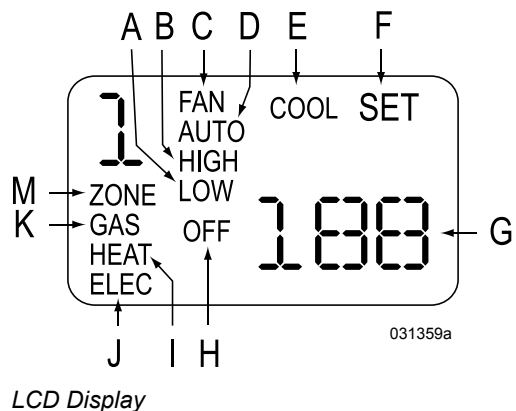

- A. Fan speed Low.
- B. Fan speed High.
- C. Indicates Fan mode.
- D. Fan speed Auto.
- E. Indicates Cool mode.
- F. Displays when temperature setting is adjusted.
- G. Displays room temperature or temperature setting.
- H. Indicates Off mode in selected zone.
- I. Heat mode
- J. Indicates Electric mode.
- K. Indicates Gas (furnace) mode.
- L. Indicates off mode in selected zone.
- M. Identifies zone number.

ZONE 1	ZONE 2	ZONE 3	ZONE 4 Bathroom/ Service Center
Living Room	Galley	Bedroom	
Front AC	Middle AC	Rear AC	
Aqua Hot	Aqua Hot	Aqua Hot	Aqua Hot


Thermostat zone legend

NOTE:
Do not select conflicting modes of operation. One zone cannot be on Cool while another zone is set to Heat.


NOTE:
The motorhome will not heat or cool faster by selecting a very high or very low temperature setting.

Remote Temperature Sensors

Remote temperature sensors are located throughout the motorhome to ensure accurate temperature control.

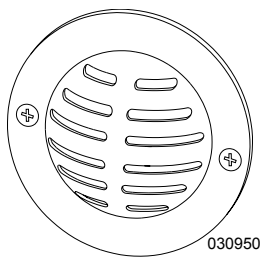

ATS temperature sensor

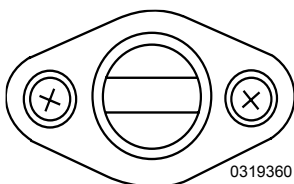

Roof AC temperature sensor

AIR CONDITIONING - ROOF

The roof air conditioners operate from 120 Volts AC supplied by shore power or the generator. The wall thermostat requires 12 Volt DC to operate.

NOTE:

Due to the electrical load shed feature, the air conditioning system may be partially disabled when hooked to limited shore power service. Refer to the *Load Center* in Section 8 for more information.

NOTE:


The air conditioning system freezes moisture in the air. It is recommended to set the blower fan speed to high when operating in high humidity.

Operation Requirements

- 120 Volts AC, from either shore power or the generator is supplied.
- The interior house power is **On** and the house batteries are charged.

Fan Operation Only

Fan mode circulates interior air by using the roof air conditioner blower. Temperature set point is not adjustable in fan mode. Fan speed can be set to Low or High.

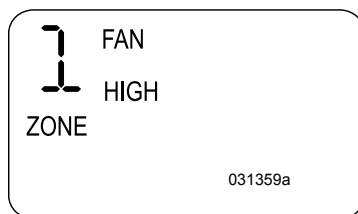


Example of fan screen

- Slide switch to Cool.
- Press the Zone button repeatedly to select desired zone.
- Press the Mode button repeatedly until only Fan High or Fan Low is displayed.
- Repeat process for each desired zone.

Air Conditioner Operation

Setting the thermostat to control air conditioner functions:

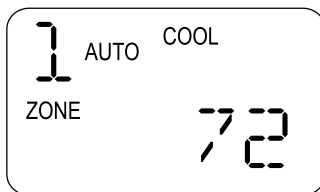

Example of A/C screen


- Slide switch to Cool.
- Press the Zone button repeatedly to select desired zone.
- Press the Mode button repeatedly until Cool is displayed.
- Set desired fan speed by pressing the Mode button repeatedly. Fan speed Auto (default setting in Cool mode) will vary fan speed dependant on disparity of temperature set point and actual zone temperature. If desired, fan speed can be set to Cool Fan High or Cool Fan Low.
- Set desired temperature by pressing the Up or Down buttons.
- Repeat process for each desired zone.

NOTE:

The compressor will engage approximately two minutes after blower motor activation to prevent accidental compressor operation against high pressure.

Heat Pump Operation

In Heat Pump mode the air conditioning principle is reversed, supplying heated air to the ceiling registers instead of refrigerated air. There are ambient temperature limitations in Heat Pump mode.

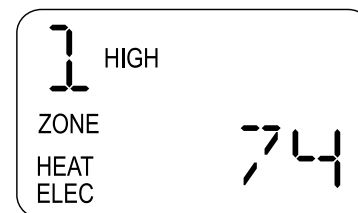

Example of heat pump screen

- Slide switch to Heat.
- Press the Zone button repeatedly to select desired zone.
- Press the Mode button repeatedly until Heat and Elec is displayed.
- Set desired temperature by pressing the Up or Down buttons.
- Repeat process for each desired zone.

NOTE:

Fan speed is not adjustable in heat pump mode.

NOTE:

The roof air conditioner will not operate in heat pump mode in cold ambient temperature. If zone temperature and temperature set point is greater than 5°, the furnace will be used as the primary heat source until temperature disparity is less than 5°.


NOTE:

The Aqua-Hot must be on for backup heat source to function. Turn on the Aqua-Hot diesel burner or electric element. The exchanger blowers automatically begin operation.

Air Conditioner Maintenance

Return Air Filters:

Frequently clean the return air filters. The filters are located inside the motorhome behind the intake vent covers. Push on both tabs to access filters. **Do not** operate the air conditioner without the return air filters in place. Dust and other particles will plug the evaporator core and substantially reduce the performance of the air conditioners.

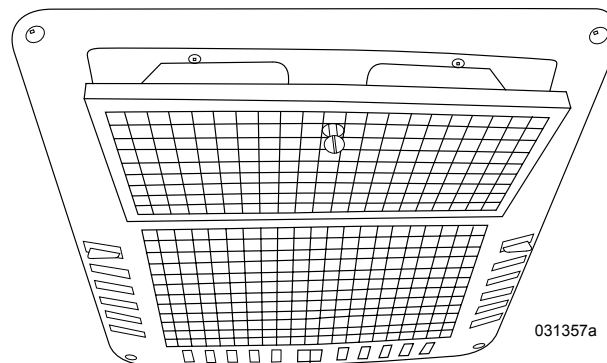

Filter Removal

NOTE:


Turn off optional ceiling fan and battery cut-off switch prior to accessing the return air filter in the bedroom.

To Clean the Return Air Filters:

- Wash filters in warm soapy water. Do not use solvents.
- Rinse filters thoroughly with fresh water. Allow them to dry.
- Install filters and secure cover.


Mounting Bolts:

Four AC mounting bolts must be re-torqued every six months. Two bolts are located directly behind the return air filter and two bolts are located behind a baffle. Torque the mounting bolts to approximately 40 to 50 in. lbs. The base gasket should be compressed to approximately 1/2".

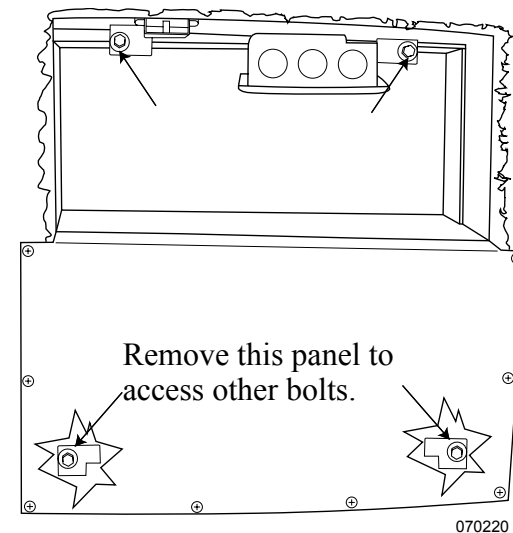

AC Cover Screws:

Use a screwdriver to ensure the AC cover screws are tight whenever the roof is accessed.

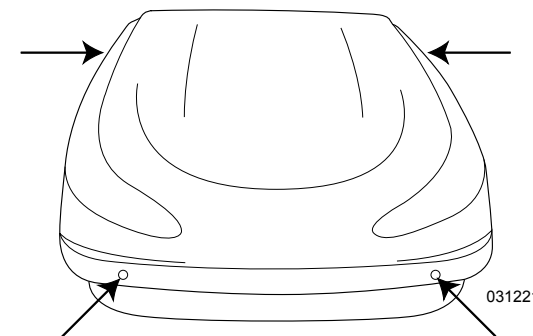

Ensure the A/C cover screws (location as illustrated by arrows) are tight when the roof is accessed.

AQUA-HOT

The Aqua-Hot appliance is a water heater and furnace in one. A 56,000 BTU diesel fired burner and a 1650 Watt AC element work to heat a 50/50 solution of Propylene Glycol antifreeze and water to approximately 200° F.

The heated antifreeze solution circulates through heat exchangers located within the motorhome to provide interior heat. Potable water is heated by the Aqua-Hot for domestic use. The Aqua-Hot can also preheat the engine, making it easier to start on cold mornings.

NOTE:


The Aqua-Hot antifreeze is propylene glycol based boiler antifreeze. Do not mix antifreeze types.

NOTE:

The Aqua-Hot must be turned on before using any heat feature.

Diesel Burner:

The Aqua-Hot will consume approximately ½ gallon of diesel fuel for each hour of continuous burner operation (about one or two gallons a day). The diesel burner is rated at 12 Volt DC/65 watts. Circulating pumps are rated at 12 Volt DC/12 Watts each. The Aqua-Hot has a fast recovery rate when operating on diesel. To heat with the diesel burner, turn the Diesel switch to the **ON** position. The Active indicator will illuminate when the Aqua-Hot diesel switch is **on**. The burner will have to operate for 20 to 30 minutes before maximum heat is available for interior heating or hot water.

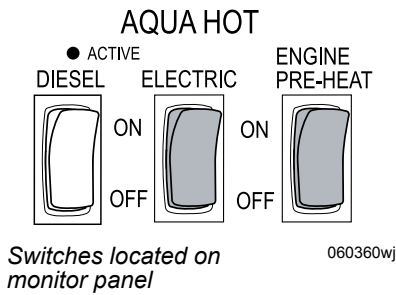


WARNING:

Do not operate the diesel burner if the motorhome is located inside a building. Carbon Monoxide can accumulate and cause asphyxiation.

Diesel Operation

- Press the Diesel Burner switch.
- Set thermostat switch to Heat.
- Press the Zone button repeatedly to select desired zone.
- Press the Mode button repeatedly until Gas is displayed.
- Set desired temperature by pressing the Up or Down buttons.
- Repeat process for each desired zone.

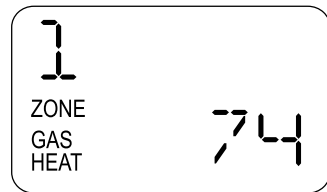

Example of Aqua Hot in Diesel or Electric modes. 031359a


Electric Operation

- Press the Electric switch.
- Set thermostat switch to Heat.
- Press the Zone button repeatedly to select desired zone.
- Press the Mode button repeatedly until Gas is displayed.
- Set desired temperature by pressing the Up or Down buttons.
- Repeat process for each desired zone.

The 1650 watt electric element works well when plugged into 50 Amp service. When plugging into less than 50 Amp service, exercise care not to overload the electric service provided. The rate of recovery of the electric element is slower than the diesel burner. Allow two to three hours for the Aqua-Hot to reach operating temperature when operating from the electric element.

Bathroom Heat:

The bathroom has a separate heater control switch located on the cabinet under the sink. If the Aqua-Hot is on, select fan speed to operate the bathroom heat exchanger.

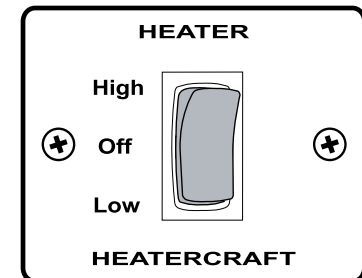

Bathroom heat fan speed control 060311b

Interior Heat Exchangers:

The heat exchangers are small radiators with 12 Volt DC blower motors. Current consumption is approximately ½ Amp per large heat exchanger. The small heat exchanger used in the private bath and the holding tank bay is ¼ Amp.

Engine Preheat:

The Aqua-Hot system has an engine preheat feature to aid engine starting in cold weather. Inside the Aqua-Hot is an engine coolant loop and pump that will circulate heated coolant through the engine.

To Use Engine Preheat:


- Turn on the Diesel switch and allow the system to warm up.
- Turn on the Engine Preheat switch to begin circulating coolant. The time required to preheat the engine varies with ambient temperature. Allow two or three hours of engine pre-heat time.

Engine Heat Exchange System:

When traveling, the water pump on the engine circulates heated engine coolant through the Aqua-Hot. Through convection, heat transfers to the Aqua-Hot coolant, providing hot water and interior heating. Use the thermostat to operate the heat exchangers.

Troubleshooting

An electronic display panel (Electronic Controller) is located next to the Aqua-Hot in the curbside bay. The display panel has LED fault indicators that are used for diagnostics. If a heating source is selected (diesel or electric) and the Aqua-Hot does not appear to be working, check to see if any LED fault indicators are lit on the electronic display panel. A fault lamp may be overlooked due to viewing angle.

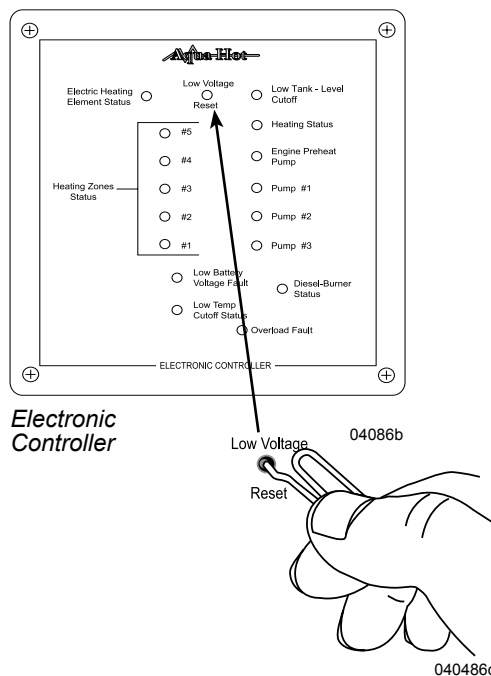

- **Low Tank Level Cutoff:** Heating function has shutdown due to low level of coolant in the Aqua-Hot. Check coolant level.

• Electric Heating Element Status:

Green indicator means the Aqua-Hot is being heated by 120 Volts AC.

- **Low Voltage Reset:** The Low Battery Voltage Fault LED will illuminate. Reset the Controller by cycling the Diesel burner switch or inserting a paperclip into the hole. Press the reset button.

- **Heating Status:** The Aqua-Hot is being heated by Diesel or the 120 Volt AC electric element.


- **Heating Zones Status:** A thermostat is calling for heat in a zone. Normal LED is green. Red LED means a short has occurred in that zone.

- **Pump Status:** When a pump is operating, LED is green. A red LED indicates a short in the pump.

- **Low Battery Voltage Fault:** Red LED indicates that battery voltage is low. Hook to shore power or start the generator. The Aqua-Hot will not function until the Electronic Controller is reset by cycling the Diesel Burner switch off then back to on, or by inserting a paperclip or similar tool into the Low Voltage Reset hole. Press the Reset button.

Bay Thermostat

A snap disc thermostat in the water service center will turn on the exchanger fan to warm the water service center. The thermostat turns on at 45° F. +/- 10° F. Turn on the Aqua-Hot when freezing temperatures may occur.

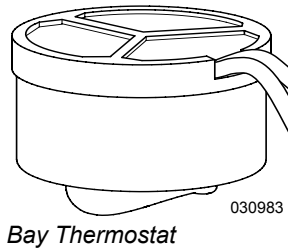

Bay Thermostat

NOTE:

Turn on the Aqua-Hot to supply coolant to the heat exchanger in the service center.

Care & Maintenance

Antifreeze:


The antifreeze, a special boiler type propylene glycol base, has low silicate content with corrosion inhibitors and heat transfer compounds. This type of antifreeze provides freeze protection and excellent heat transfer for operating efficiency. The antifreeze is mixed to a 50/50 ratio with distilled water. **Do not** mix antifreeze types as this can cause scaling and possible component failure. The antifreeze can be purchased directly from *Aqua-Hot Heating Systems Inc.*

CAUTION:

Use only a non-toxic propylene glycol based antifreeze recommended for boiler applications. This antifreeze is affirmed GRAS (Generally Recognized as Safe by the EPA). Contact Aqua-Hot Heating Systems Inc. at 1-800-685-4298 to purchase the antifreeze.

Reservoir:

The coolant reservoir is located curbside in the Aqua-Hot bay. Check the reservoir coolant level monthly. Inspect the coolant level when the diesel burner has just shut off. The coolant level should be at the Full Hot level. Adding coolant to the reservoir when the Aqua-Hot is not at operating temperature may result in overflow when the Aqua-Hot attains normal operating temperature.

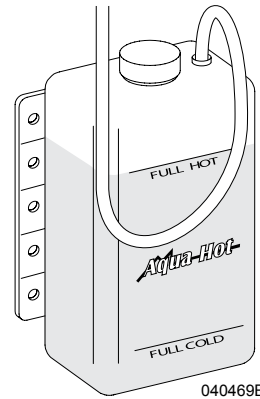

040469B

Disinfecting:

The tubing inside the Aqua-Hot is rated for fresh water and winterizing solutions. The potable water system will be periodically disinfected, which includes flushing the disinfecting solution through the Aqua-Hot. This will not affect the Aqua-Hot as long as the solution is thoroughly rinsed. However, failure to thoroughly rinse the Aqua-Hot with fresh water may result in damage to the Aqua-Hot.

CAUTION:

If not properly and thoroughly rinsed, bleach or other concentrated chlorine bearing chemicals can cause failure to the tubing inside the Aqua-Hot domestic water loop.


Winterization:

The Aqua-Hot can remain on during the winter months or it must be winterized with FDA approved RV antifreeze to prevent freeze damage. The RV antifreeze must be pumped through the Aqua-Hot until the solution appears at the hot water side of a faucet.

The on-board water pump can be used (see illustration), or a separate pump can be hooked to the city water fitting. Refer to the OEM owner's manual for complete winterizing instructions.

Annual Tune Up:

The Aqua-Hot tune up consists of fuel nozzle and fuel filter replacement and a thorough cleaning of the combustion chamber. A tune up will keep the Aqua-Hot running smoothly throughout the year, as well as allow service personnel to inspect for additional wear of other components.

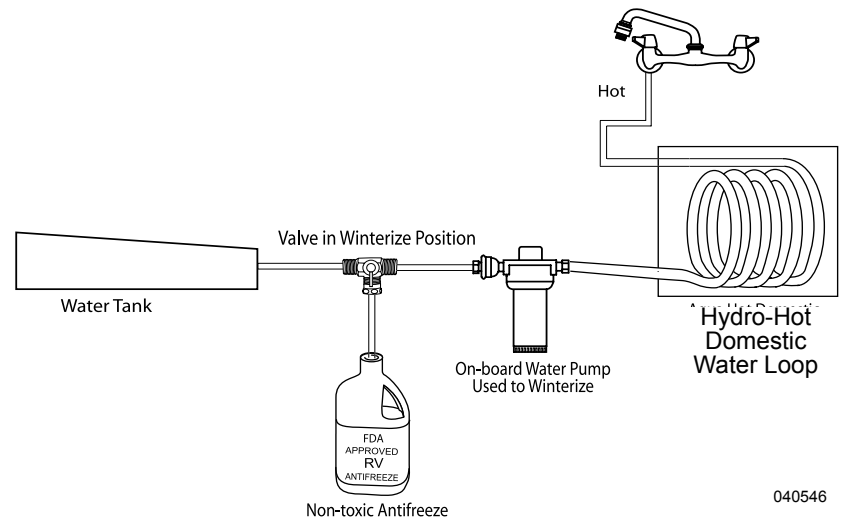

040546

Signs that the Aqua-Hot may need servicing are continuous white exhaust smoke or poor ignition start up. When in operation, the Aqua-Hot should have a smooth, high-pitched whine. Loud growls or other abnormal noise indicates service or repair is required.

CAUTION:

Disconnect all power supplies before cleaning or servicing.

If the Aqua-Hot is not winterized, it must remain operational. If the system is operating from electric and there is a power outage, freeze damage may occur.

CAUTION:

Failure to winterize the Aqua-Hot with Non-Toxic FDA approved RV antifreeze during freezing temperature will result in serious damage to the Aqua-Hot. Refer to the OEM Owner's manual for detailed winterizing instructions.

CAUTION:

If the motorhome is hooked to shore power during the winter months and the Aqua-Hot is operating on the electric element, a temporary power outage can allow the Aqua-Hot to freeze resulting in damage.

WARNING:

Do not operate the diesel burner when the motorhome is located inside a building. Carbon Monoxide can accumulate which can be fatal.

Fuel Filter

Aqua-Hot Fuel Filter:

The filter is located in the roadside compartment with the Aqua Hot.

Filter Replacement:

Contamination levels in the fuel determine the frequency of element replacement. Fuel flow to the Aqua-Hot becomes restricted as the element gradually plugs up with contaminants, resulting in noticeable heating loss and/or hard starting. If this occurs, change the element as soon as possible.

As a guideline, change the filter when clogged (first indication of heat loss) or at the beginning of each heating season. Always carry an extra filter, as one tank of contaminated fuel can plug a fuel filter. Replacement filters must have a 10-micron rating.

Garber Filter: Model #R, 10 micron.



Replacement filter

To Replace the Filter:

- Ensure the Hydro Hot Diesel switch at the galley is turned **off**.
- Spin the filter counterclockwise and remove from head. Remove old O-ring gasket on threaded stud.
- Install new O-ring supplied with filter. Ensure the gasket is seated in the groove around the filter canister.
- Apply clean lubricating oil to the new filter gasket and washer.
- Spin filter onto head until filter makes contact then tighten $\frac{3}{4}$ of a turn.
- Start Aqua-Hot and check fuel filter for leaks.

NOTE:

It may be necessary to cycle the diesel burner switch on and off a few times to thoroughly purge the fuel system of air.

Aqua-Hot Overview

General Layout:

An understanding of the general layout of the Aqua-Hot system will help in operating and troubleshooting the system.

WASHER-DRYER PREPARED

The washer-dryer “prep” package includes the following items:


1. Color coded water supply lines: red for hot and blue for cold.
2. A 1½" waste water drain line with threaded cap, P-Trap, and an automatic vent cap. This will drain the waste water into the grey water holding tank.
3. A 120 AC Volt receptacle located in the compartment.

NOTE:

Sidewall dryer vents are not part of the prep package. If a sidewall vent is to be installed, properly seal vent to sidewall.

If a washer-dryer is to be installed at a later date, follow all the manufacturer installation instructions. Listed here are further instructions which should be adhered to for safe and reliable operation:


- **Do not** connect the clothes dryer exhaust duct to any other duct, vent or chimney.
- **Do not** terminate the exhaust duct beneath the motorhome.
- If the cabinet or closet in which a washer-dryer is installed does not have vented louvered doors, the manufacturer’s installation instructions may require installation of vented doors, or vents to be installed in the doors for sufficient circulation of air.
- Use proper length fasteners when attaching exhaust vent to exterior sidewall. Stainless steel fasteners are best suited for this as they will not rust.

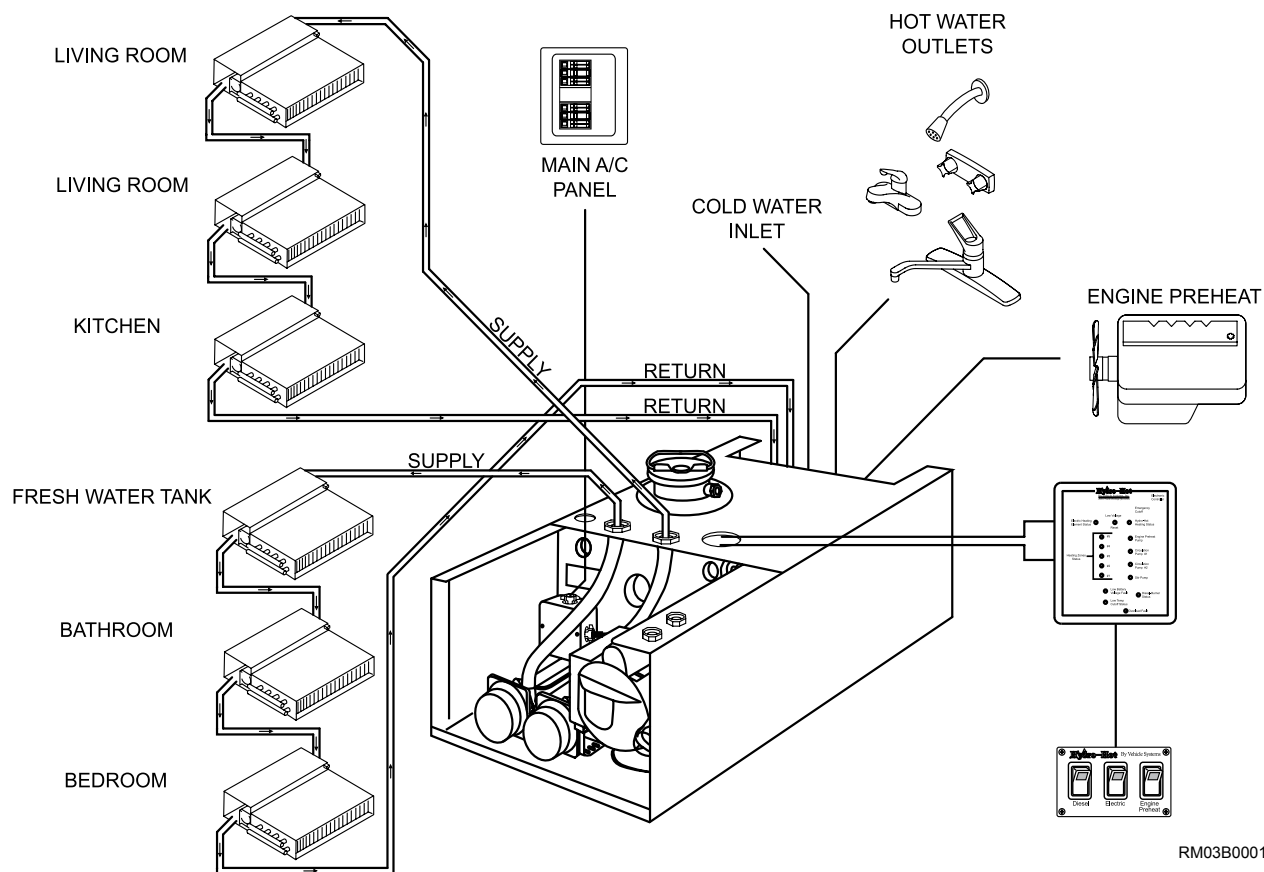

RM03B0001C

CAUTION:

It is highly recommended to hook the motorhome to shore services when using the washing machine due to limited fresh water supply and limited grey tank capacity. The washer may drain into the black tank on some floor plans.

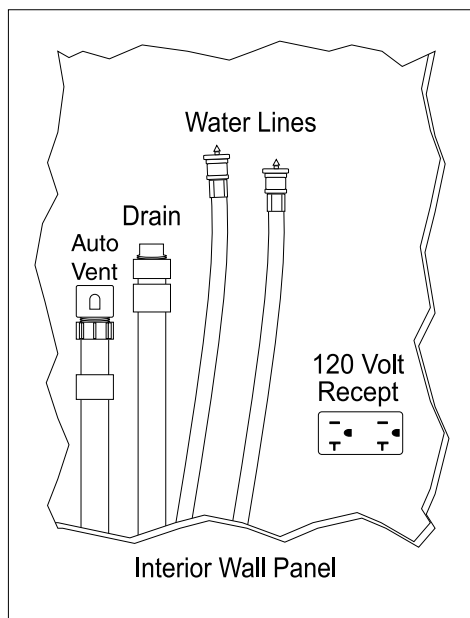

040495c

Location of specified parts may vary within wall panel depending on floor plan and model.

WASHER/DRYER STACKED (OPTIONAL) Washer

The front-loading washer is a large capacity washer that operates on 120 Volts AC from shore or generator power. Water usage will vary with each load, and fill time will vary depending upon water pressure.

CAUTION:

Hook the motorhome to shore services when using the washing machine due to limited fresh water supply and grey tank capacity.

CAUTION:

Do not use the washer while traveling as damage will occur to the washer and motorhome.

INFORMATION:

The washer has many features. Refer to the manufacturer's manual in the owner's information file for detailed operating instructions.

Test Cycle


Before using the washer for the first time, or after a long period of non-use, run a test cycle. The test cycle will confirm the unit is working correctly, remove RV antifreeze that may be present, and verify all hardware, plumbing and electronic components are functioning.

Test cycle requirements:

- Wipe the exterior and interior of the unit with a damp cloth to remove accumulated dust.
- Ensure water lines are secure and all necessary valves are open to supply water.
- Hook to city water or turn on the water pump (must have sufficient water in tank and storage space in holding tanks).
- Hook up to shore power, or turn on the generator.

Conducting test cycle:

1. Add ½ tablespoon of detergent to the detergent chamber (#1 in illustration) of the automatic dispenser.

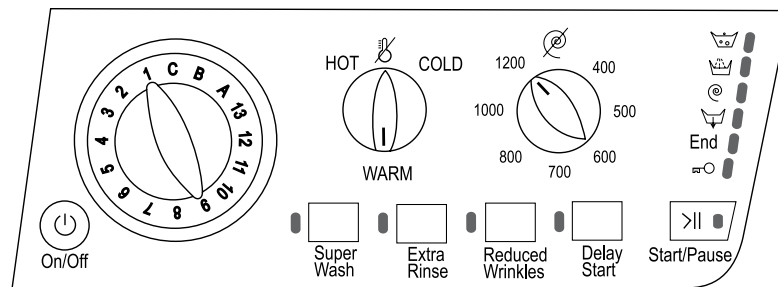


Washer control panel

031365

CAUTION:

Ensure the automatic dispenser is in place before starting the washer. Do not open the automatic dispenser when the washer is running.

2. Close the detergent dispenser.
3. Turn the cycle knob to #4 (light load).
4. Set the temperature knob to warm (rinse is always cold).
5. Set a spin speed between 400-1200.
6. Press On/Off button to turn on the machine. Press and hold to turn off.
7. Press Start/Pause to start cycle. Press again to stop.
8. The door lock light (key symbol) will turn off when the cycle is complete.

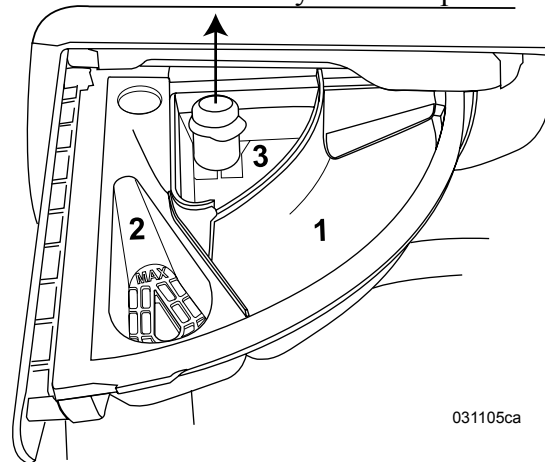

031105ca

Detergent tray are removable for cleaning

Operating Instructions

1. Load the machine and ensure door is closed and firmly latched. See OEM manual for load types and weight limits.
2. Set the cycle knob to the appropriate wash program. See OEM manual for recommendations.
3. Adjust temperature with temperature knob (rinse is always cold).
4. Adjust spin speed according to garment type.
5. To further customize the wash program, press one of the wash option buttons (Soaking, Extra Rinse, etc.). See OEM manual for more information.
6. Open dispenser drawer and add appropriate cleansers and softeners. Close dispenser door.
7. Press Pause/Start button to start cycle.
8. The door lock light (key symbol) will turn off when the cycle is complete.

Cleaning the Washer

Clean the exterior, interior and automatic dispenser as needed.

Exterior:

- Clean the exterior with a soft cloth dipped in lukewarm, soapy water. Never use polish of any kind.

Interior:

- To remove build-up, run the washer through a complete cycle using hot water and two cups of non-precipitating water softener.
- Apply paste wax periodically to the inner door to prevent staining.

Automatic Dispenser:

- Remove the inner portion of the dispenser tray by pulling up and out.
- Rinse under warm water until buildup dissipates.

Winterizing the Washer

To Winterize:

- Ensure the washer is off, and pour 1 pint of FDA approved RV antifreeze into the washer drum.
- Close the door and turn the cycle knob to a spin cycle.
- Press the on/off button and wait one to two minutes.
- Press the on/off button to turn washer off.
- Disconnect power supply and turn water faucets off.
- Disconnect and drain inlet hoses.

To De-winterize:

- Connect inlet hoses and turn water faucets on.
- Connect power supply.
- Add ½ tablespoon of detergent to the dispenser detergent compartment (#1).
- Turn cycle knob to #4, and let the washer run through the complete cycle to ensure all antifreeze is purged.

CAUTION:

Replace inlet hoses every five years.

INFORMATION:


See the OEM manual for more detailed instructions and maintenance procedures.

Dryer

The front-loading dryer operates on 120 Volts AC from shore power or the generator.

INFORMATION:

Read the instructions in the dryer OEM manual located in the owner’s information file.

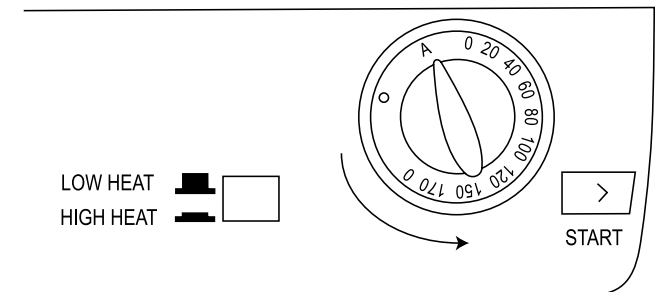

Dryer control panel

031366

NOTE:

Due to the automatic load shed feature in the load center, power to the dryer may be disabled until sufficient AC power is available. See “Load Center” Section 8 for more information.

CAUTION:

Open a window or vent while operating dryer. Negative air pressure inside the motorhome can be dangerous while operating fuel burning appliances.

CAUTION:

Do not use the dryer while the motorhome is in motion as it can damage internal components of the dryer.

NOTE:

Before using the dryer, wipe the interior drum with a damp cloth to remove accumulated dust.

CAUTION:

Do not dry articles that have previously been cleaned, washed, soaked or spotted with gasoline, dry cleaning solvents or other flammable or vaporous substances that can ignite or explode.

CAUTION:


Do not use heat to dry articles containing foam rubber or similar textured, rubber-like materials. Clean the lint screen (located inside the dryer door) after each use. Keep the exhaust opening and adjacent areas free from accumulation of lint, dust and dirt.

Operation

1. Load laundry loosely into dryer and close the door. Allow space for the clothes to tumble freely.
2. Select appropriate cycle and heat (see OEM manual for detailed instructions).
3. Press the Start button to initiate the cycle.
4. Open the door to stop the dryer at any time.

NOTE:

Timer knob rotates only counterclockwise.

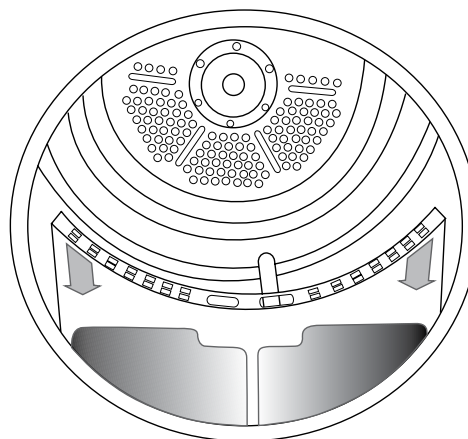

Lint filter removal

031366b

Dryer Maintenance

Clean the exterior and interior as necessary, and clean the lint filter after each load.

Lint Filter:

- Open the door and pull the lint filter upwards.
- Remove lint and replace the filter.

CAUTION:

Do not operate the dryer without the filter in place.

Exterior:

Clean with a soft, damp cloth. Do not use solvents or abrasives.

Interior:

Do not use abrasives, steel wool or stainless steel cleaning agents to clean the dryer drum. Discoloration from fabric softeners and water is normal and does not affect dryer operation.

Technical Service:

For detailed technical service contact Splendide at 1-800-356-0766.

CENTRAL VACUUM (Optional)

Operation

- Start generator or plug into shore power.
- Lift lid on wall receptacle to start vacuum. Insert the hose in the receptacle and release lid.
- Connect desired attachment on hose and start vacuuming.



031264f

Wall Receptacle

NOTE:

Consult OEM manual for detailed operation and maintenance.


Maintenance

Vacuum has a thermal protector built into the motor to prevent overheating. If motor will not operate, it will automatically reset in about ½ hour. If motor brushes or bearings are worn out, the circuit protector will trip off again after a short period of time. If this happens, contact a qualified service representative.


Changing the Bag:

To keep your vacuum at top efficiency, change the filter bag at regular intervals. To maintain cleanability, replace filter bag when it is about ¾ full.

1. Unplug the power unit from grounded outlet.
2. Rotate the bag cover counterclockwise and remove cover.
3. With a finger on each side of the inlet, slide the bag off the inlet tube.

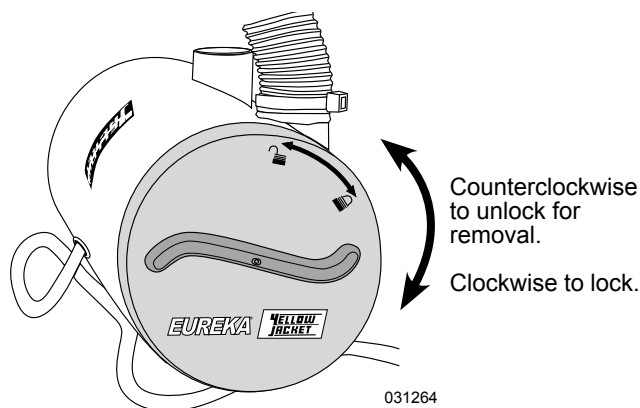


031264

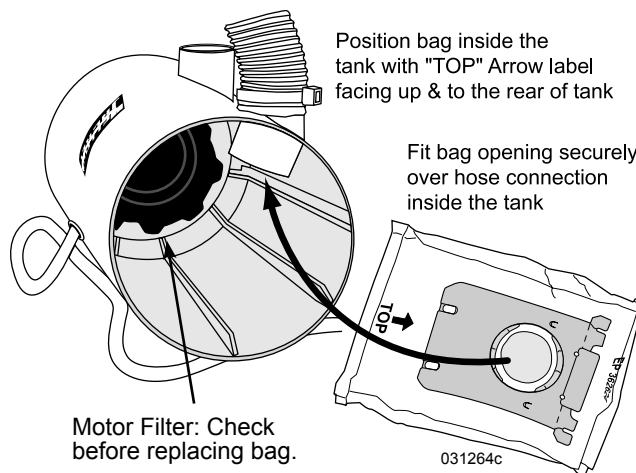

Motor Filter: Check before replacing bag.

031264c

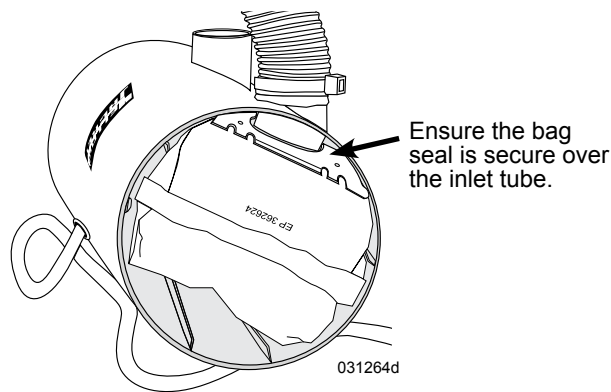


031264d

4. Pull the center cardboard tab to automatically seal the bag and prevent dust from leaking out.
5. Remove the bag from the vacuum and discard. **Do not** reuse.
6. Check motor filter in back of canister.
7. Unfold the new bag and insert into the vacuum so the center cardboard seal tab is toward bag cover. The top arrow should point to the bag cover.
8. With a finger on each of the cardboard tabs, slide the bag on the inlet tube.
9. Line up the mark on the bag cover with the unlock symbol and rotate clockwise to lock symbol.

Replacing & Cleaning the Motor Filter:

1. Inspect during each bag change. The filter should be cleaned every fifth bag replacement or when excessively dry.
2. Remove dust bag as previously instructed.
3. Locate the motor filter in the back of the vacuum and lift out.
4. Clean by rinsing under warm water and let air dry if heavily soiled. If the filter is torn or obstructed it must be replaced.
5. Reinstall dry motor filter before use, making sure filter is tucked under retaining tabs.
6. Reinstall bag as previously instructed.

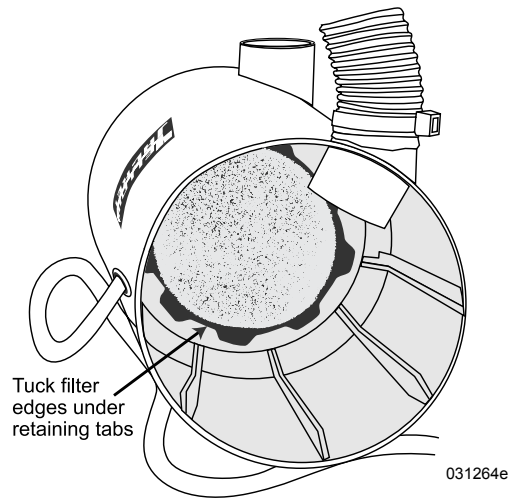**WARNING:**

To reduce the risk of fire, electric shock or injury:

- Unplug and disconnect power before servicing.
- Avoid wet surfaces.
- Use only manufacturer's recommended attachments.
- Do not use without dust bag and/or filters in place.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.

Equipment - Section 5



EQUIPMENT - INTRODUCTION	104	AWNINGS	111	SEAT CONTROLS	116
ENTRY STEP	104	SlideOut Cover	111	Swivel Seats	116
Operation	104	Entry Door Awning	112	SOFA BED CONVERSION	117
Stepwell.....	104	Window Awning.....	112	Air Mattress (Optional)	117
Assist (Grab) Handle	105	Patio Awning.....	112	AIR MATTRESS BED (OPTIONAL)	117
ENTRY DOOR	105	Patio Awning (Optional).....	113	STORAGE SLIDEOUT TRAY (OPTIONAL)	118
Air Seal	105	Awning Care & Cleaning.....	114	LADDER - REAR	118
Latch Adjustments	105	Storm Precautions	114	RADIO - DASH	118
Screen Door	106	FANS	114	Auxiliary Inputs	119
KEYLESS ENTRY	106	Exhaust Fan	114	Navigation system (Optional).....	119
Operation	106	Bedroom Ceiling Fan (Optional)	115	CD Changer (Optional)	119
SLIDEOUT OPERATION	107	SOLAR SCREEN & BLACKOUT SHADE	115	TV & ENTERTAINMENT COMPONENTS	120
Extending & Retracting Slide Rooms.....	107	Windshield.....	115	Television (Front) Lockout Feature	120
Lock Bar	108	SLR SCREENS & B/OUT SHADES (OPTIONAL)	115	Cable TV, Computer & Phone.....	120
Troubleshooting	108	DOOR - SLIDING	116	TV Antenna	120
Manual Override - Living Room	109			Antenna Select.....	120
				Front TV Operation	121
				Home Theater	121
				Bedroom TV Operation	122
				EXTERIOR ENTERTAINMENT (OPTIONAL)	122
				SATELLITE SYSTEMS	123
				Satellite Prewire	123
				KVH R5 (Optional).....	123
				Winegard Trav'ler (Optional)	124
				Satellite Wiring	125
				SYSTEMS CONTROL CENTER	126

EQUIPMENT - INTRODUCTION

This section covers the basic operation and care of equipment found in the motorhome, most of which are provided for entertainment and comfort. More detailed information about specific equipment may be found in that particular manufacturer's manual. Optional equipment will also be discussed in this section which may not apply to all motorhomes.

INFORMATION:

Detailed information with CAUTION or WARNING instructions for the various electronics, other than what is provided in this section, can be found in that specific manufacturer's manual.

ENTRY STEP

Operation

The exterior electric entry step features retractable steps, automatic retraction with the ignition key in the **RUN** position and a last out feature. The bar light indicates the circuit is active when illuminated.



080375m

Located on the base of passenger console

NOTE:

When dry camping and the switch is illuminated, all step circuits are active and drawing current from the chassis battery.

Operating the Entry Step:

1. With the entry door open, turn the step switch on.
2. Close the door. The step should retract and lock in the **in** position.
3. Open the door. The step should extend and lock in the **out** position. The step will retract when the door is closed.
4. When the switch is turned off, the step should remain in the extended position. Close the door and turn on the ignition switch. The step will retract for travel.
5. With the power switch off, the step extended, the entry door closed and the ignition turned on, the ignition override system will engage to automatically retract the step.
6. Turn the ignition off and open the door. The step will extend and lock in the **out** position. This is the "last out" feature. When the ignition is on the step will always activate with door movement, regardless of the power switch position.

CAUTION:

High curbs can impede step operation. Use care when parked on side streets.

CAUTION:

Ensure the exterior step is fully extended before exiting or entering the motorhome.

If the step fails to operate:

- Verify that the step switch is on.
- A magnetic door jam switch is used to control step operation. Use a separate magnet to apply a "trigger" to the door jam switch. Rotate test magnet to align polarity field.
- Check entry step fuses in front electrical bay.

WARNING:

If the motorhome is driven with the step in the extended position there is the possibility of causing major damage to both the step and the motorhome.

CAUTION:

If the Step Out warning indicator lamp illuminates while the motorhome is in motion, the entry step is either partially or fully extended. Repair the step as soon as possible to avoid serious damage to the entry step or motorhome.

Stepwell

The interior stepwell features a cover and step lighting.

Cover:

An electrically operated stepwell cover will extend and retract using the switch on the dash console.

To operate the Stepwell Cover:

1. Turn **on** the Battery Cut-Off switch.
2. Press and hold the Step cover switch to the desired direction. Release the switch to stop movement.

CAUTION:

When operating the stepwell cover, make sure there are no pets, shoes or other obstructions in the stepwell area. Do not operate the stepwell cover while standing in the stepwell area.



080375i

Located on center console

Assist (Grab) Handle

The assist handle is made of clear acrylic. Though normally UV resistant, the assist handle can be weakened or damaged by using improper cleaning agents which cause small stress fractures that can eventually lead to failure of the assist handle. Approved cleaning solutions are mild soap and water solution only. Cleaning agents containing alcohol, such as commonly found in window cleaners, or cleaning agents containing petroleum distillates will damage the assist handle. **Do not** use waxes or plastic and upholstery conditioners as these substances can also cause damage.

ENTRY DOOR

The door uses two separate locks for safety and security: the door handle and a dead bolt. The door handle incorporates a primary and secondary latching system used to ensure secure and safe latching. Adjustments can be made to help maintain entry door performance.


Air Seal

The entry door is equipped with a one-piece air seal to reduce wind and road noise.

- The seal automatically inflates when the engine is running and the transmission is placed in Drive.
- The entry door seal will inflate to approximately 3 to 4 psi.
- The pressure regulator control valve is located curbside in the generator compartment.
- The entry door seal will deflate when the transmission is placed in neutral.

CAUTION:

If the pressure regulator should require adjustment, do not exceed 5 psi. Damage to the seal will occur.

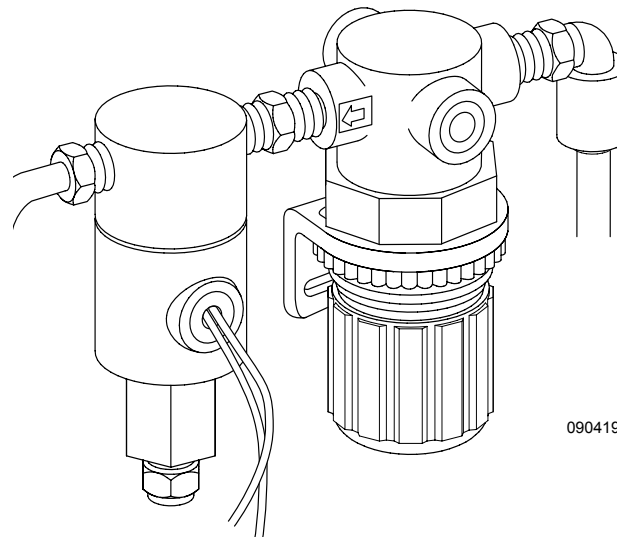

Door Seal Regulator: Located curbside in the generator compartment.

Latch Adjustments**Adjusting the Entry Door Latch:**

- Determine which bolt needs adjustment.
- Observe the latch and strike bolt alignment while slowly closing the entry door. **Do not** attempt to latch if alignment is off. If the alignment is correct, allow the latch to catch in the first (primary) position only.
- The latch should move to the second position with just slight pressure applied to the entry door. Upper and lower latches should be evenly timed. Press on the entry door to see if there is further movement of the door.
- The handle should operate with little effort to open the entry door. Excess amounts of pressure indicate the bolts are set too far back.
- Use an Allen wrench to loosen the movable strike bolt. Make all adjustments in small increments. Tighten the bolt firmly after making adjustments. The bolts should have slight up and down movement for vibration control in travel.
- Test the operation of the dead bolt lock to ensure proper function.
- Apply silicone weekly to the entry door rubber gaskets to prevent squeaking while the motorhome is traveling. Use a one inch sponge paint brush sprayed with silicone for easy application.

CAUTION:

When operating the entry door ensure the dead bolt latch is fully in the unlock position prior to closing the entry door. Failure to do so can result in damage to the dead bolt and/or entry door.

Screen Door**Changing the Glass in the Screen Door:**



- The screen slider is Lexan® and can be bowed for removal and replacement.
- Replace with new Lexan and reverse the procedure.

Adjusting the Screen Door:

- Loosen the chrome bolts on the hinge side of the screen door: Two on each of the three hinges (six hinges total).
- Slots in the steel hinge allow for in and out movement.
- Adjust the screen door to fit. The hinge should fit tightly to the trim of the door when the screen door is latched and the door is open.

Removing the Screen:

- The top half of the screen door is removable to allow clear viewing through the entry door glass while traveling.
- Rotate the clips to remove the top half of the screen door. Store for travel.

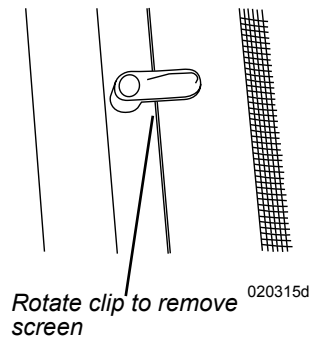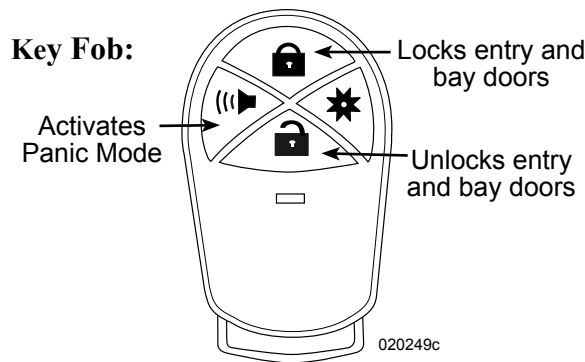**KEYLESS ENTRY Operation**


Keyless Entry Key Fob

NOTE:

Key fob operation distance is approximately within 50 ft. of the motorhome. If the door locking mechanism is not audible, marker lights will flash when the doors are unlocked or locked.

Locking Doors with Keypad:

Regardless of system configuration, lock all doors by pressing and holding down the lock button (1) until there is a beep and the doors lock. An access code is not needed to lock the doors.

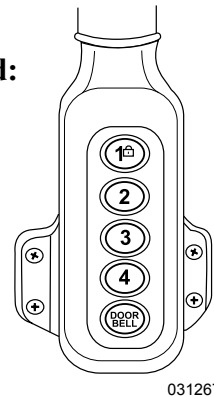**Unlocking Doors with Keypad and other Secure Operations:**

After access codes have been assigned, secure operations can be accomplished by enabling the keypad. The keypad is enabled by entering a valid five digit access code.

Entering the correct access code alone will not initiate a secure operation. If the lock/unlock (1) button is not pressed within five seconds after the access code was entered, then the keypad reverts back to a disabled state. If an unassigned button or no button is pressed while the system is enabled, the keypad reverts back to a disabled state.

NOTE:

Use of entry door deadbolt along with door lock will reduce unauthorized entrance into motorhome.

Factory Access and Authority Default Codes:**NOTE:**

Consult OEM manual for Access and Authority codes.

WARNING:

Ensure possession of entry door keys prior to testing new personal code.

Up to four different access codes can be assigned at one time. As additional access codes are defined, pre-existing access codes are over-written. For example, if a new access code is assigned for access #3, the previous access #3 code is no longer valid.

INFORMATION:

Consult the OEM manual for further information. Contact Monaco Technical Support at 1-877-466-6226 for the master reset code.

NOTE:

During any service work, it is recommended all key fobs be left with the motorhome for thorough testing procedures.

SLIDEOUT OPERATION

Slideout room operation uses safety features to prevent mechanical damage or physical harm. Slideout room(s) will not operate until all safety requirements are met. To prevent damage to cabinet doors or the slide room, secure all cabinet doors in the closed position prior to room activation. Some interior doors may require being fully open or fully closed for the slideout room to operate.

Slideout Operation Requirements:

- Ignition key is off.
- Park brake is applied.
- House battery disconnect switch is on.
- House batteries are charged.
- Lock bar is removed.
- Hydraulic jacks (If applicable) are retracted with the motorhome supported by the air suspension (air springs).

Extending & Retracting Slide Rooms

CAUTION

The motorhome must be supported by the air suspension (air springs) whether extending or retracting any slide room. Do not operate the slideout room with the air suspension deflated or when supported by hydraulic jacks (if applicable). Damage to the slideout room, mechanism or seals can occur.

To Extend or Retract Slide Rooms:


- Retract hydraulic jacks (If applicable). Start the engine. Allow time for the air suspension (air springs) to support the chassis. Motorhome must be supported by the air suspension **before** operating any slideout room.
- Move the driver and passenger seat forward.

MOVE CAB SEAT FORWARD BEFORE ACTIVATING SLIDE-OUT ROOM


020329

CAUTION
BE SURE THAT SHIPPING MECHANISMS HAVE BEEN REMOVED BEFORE OPERATION OF SLIDE-OUT

MOVE CAB SEAT FORWARD BEFORE ACTIVATING SLIDE-OUT ROOM

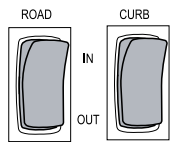

FRONT SLIDEOUTS

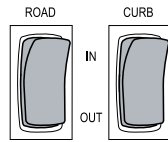


REAR SLIDEOUTS

060306wj

Switches located on monitor panel in hallway.

- If applicable, remove any locking bars.

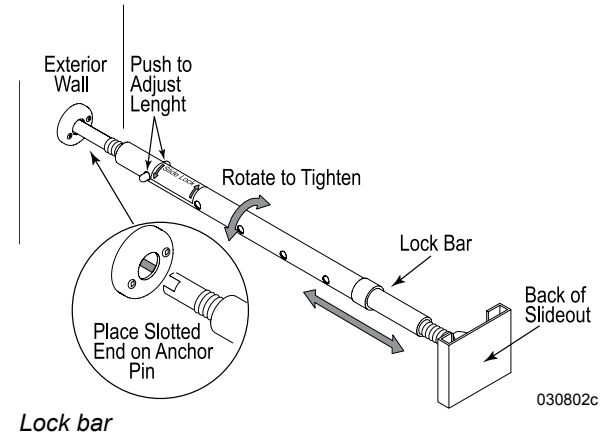

- Confirm the house batteries are fully charged and operating.
- Open a window or vent to equalize pressure during slideout operation.
- Ensure people, pets and objects are clear of the slideout room path.
- Firmly latch all cabinet doors and close drawers. Damage to the doors, drawers and fascia can occur.
- Locate the slideout room control switch. Press and hold the slideout room switch to the desired (In or Out) position.
- Release the switch to stop room movement at any time. The drive motor will not automatically stop at the end of room travel. The switch must be released. A change in motor sound indicates full extension/retraction.

CAUTION

Firmly latch all cabinet doors adjacent to the slideout before extending or retracting the rooms. Damage to doors or the fascia may occur.

- Clean the floor of dirt or grit that could result in damage during operation.
- Confirm there is enough clearance inside/outside the motorhome for the room to extend/retract.
- Allow at least five feet of clearance to extend the slideout.
- Turn off the engine. Ensure park brake is applied.

CAUTION:

Do not leave the slide room extended during severe weather. Conditions such as high winds or heavy rain may cause damage. Rain water can pool on the slide room awning, adding weight and causing the awning to sag. Retract the room in small increments to allow water run off.

CAUTION:

Extensive damage could occur to the slide room and awning when extending the slideout room in snow, sleet, ice or freezing rain conditions. In such conditions, if the slide room is extended, clear the awning and ensure free movement prior to operating the slideout room.

CAUTION:

Dirt and grit trapped under the slide room can scratch and damage the floor. Clean the floor before retracting the slide room. Never move the motorhome with the slide room extended.

CAUTION:

Do not use petroleum based products on the slide seal. Petroleum based products can damage the paint and will cause premature aging of the rubber seal.

WARNING:

The outside area must be clear of obstruction that can restrict slide room operation. Ensure there are five or more feet of clear space outside the slide room prior to extending the room or damage to the slide, motorhome or property can occur. Ensure there is sufficient clearance inside the motorhome prior to retracting. Clear the area of people and pets.

CAUTION:

Continuous operation of the slide room can drain the batteries and overheat the motor.

CAUTION:


If a problem with the slideout occurs, contact a qualified technician.

Lock Bar

The lock bar is a manual locking device to help retain the slideout room in the retracted position.

CAUTION:

Remove locking bar prior to extending slideout.

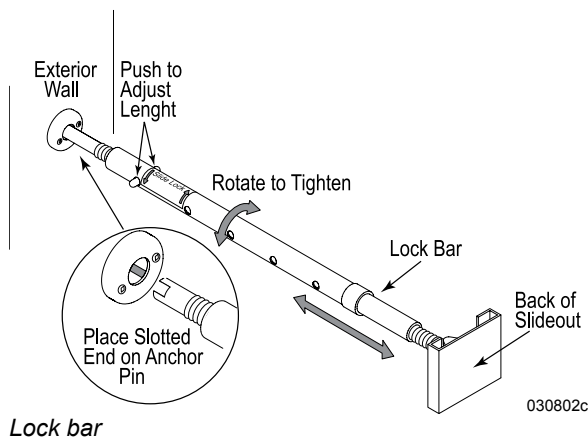**Guidelines to ensure long life of slide system:**

- **Inspect** roof of the slide for debris such as pine needles, dirt, leaves, sticks, etc. Debris left on the top may cause damage to the seals during retraction. If debris is present, wash with soap and water, then rinse.
- When the room is out, **inspect** the wipe seal for dirt or other foreign material and for tears.
- If the slide room leaks, fully retract the room. If necessary, seal exterior opening with duct tape until repairs to the motorhome can be completed.

Troubleshooting


If the slide room does not operate, a safety feature may be engaged to prevent room operation.

If slide room does not respond from switch, check the following safety requirements:

- Ignition key is Off.
- Park brake is applied.
- House battery disconnect switch is on.
- House batteries are charged.
- Lock bar is removed.
- Hydraulic jacks (if applicable) are retracted with the motorhome supported by the air suspension (air springs).


If the slide room does not operate after checking the safety requirements:

- Check the fuse for the slideout room in the 12 Volt DC distribution panel.

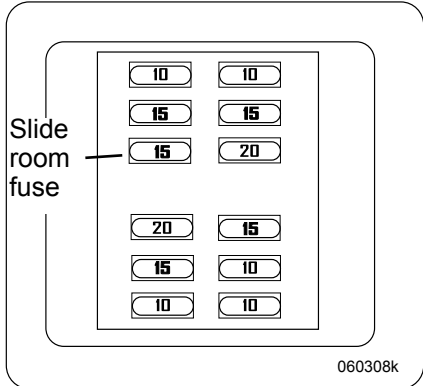

12 Volt DC distribution panel: located in bedroom closet..

- Check the fuse for the slideout(s) in distribution panel located in the front electrical bay.
- Check the inline fuse located at the slideout room hydraulic pump.
- Ensure all electrical connections at the slideout room switch are good.
- Check the slideout relays located in the bedroom closet.

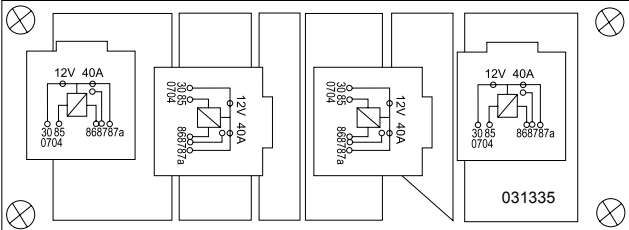


Relays located in bedroom closet.


- It may be necessary to contact a repair facility to have the problem diagnosed and repaired.

Manual Override - Living Room

The slideout will need to be manually retracted if all fuses and electrical connections test good. The slideouts in the living room operate by a hydraulic pump. The hydraulic pump is located curbside in the generator compartment. Manually retracting the room will involve opening control valves and using a drill to operate the hydraulic pump motor.

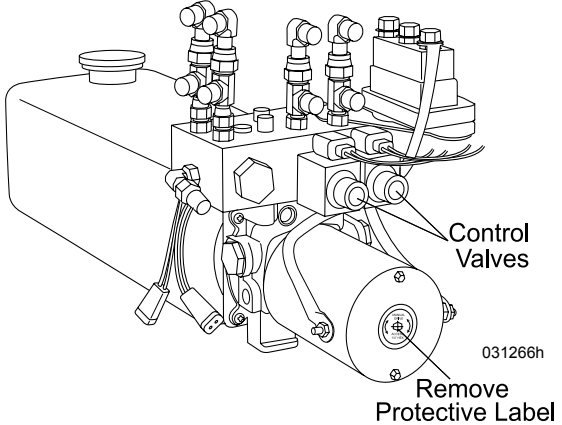

Hydraulic slide motor with air leveling

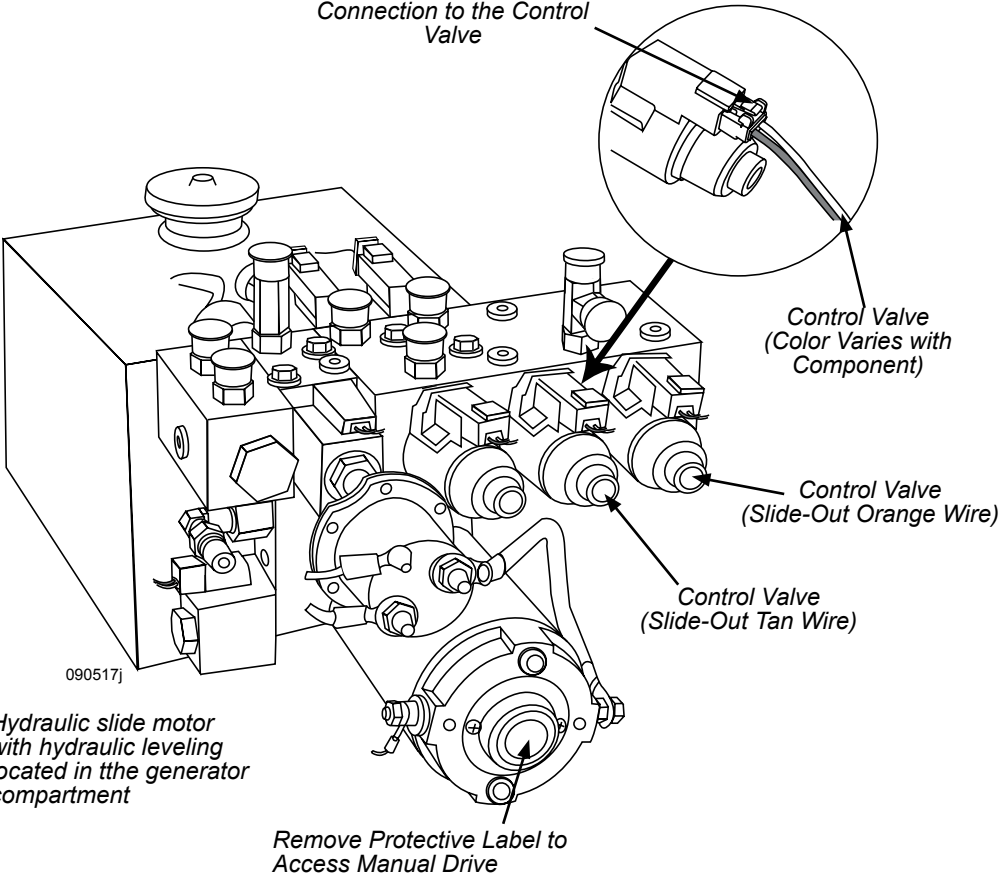

Hydraulic slide motor with hydraulic leveling located in the generator compartment

Determine if Hydraulic Pump is Running:

- Listen for the pump to run when press the slideout retract button.
- If the pump runs, follow instructions under “*If Pump Runs.*”
- If the pump does not run, follow instructions under “*If Pump Does Not Run.*”

CAUTION

Do not continue to operate the hydraulic motor if the slideout does not retract. Damage to the motor could occur.

WARNING

The hydraulic motor can be extremely hot. Use extreme safety when accessing and working on the motor.

WARNING

To avoid injury, do not work on slideout system unless both the house and chassis battery disconnect switches are turned off.

Control Valve Identification:

Each control valve operates a specific slideout. The control valve (specific slideout) is identified by the color of wire on top of the control valve:

- **Tan Wire** – Living room slideout.
- **Orange Wire** – Galley slideout.

If Pump Runs:

- Turn off both the house and chassis disconnect switches.
- Access the hydraulic pump.
- Ensure that the connection to the control valve is plugged in. Properly secure the connection if loose.
- Locate slideout control valve on pump by determining the appropriate colored wire (tan or orange) on top of the control valve.
- Using an Allen wrench, insert it into control valve and turn clockwise (In).
- Turn on both the house and chassis disconnect switches.
- Press the slideout retract button. This should retract the slideout.
- Disconnect both the house and chassis disconnect switches.
- Using an Allen wrench turn control valve on hydraulic pump counterclockwise (Out).
- Turn on both the house and chassis disconnect switches.
- Take the motorhome to an authorized repair center.

If Pump Does Not Run:

- Turn off both the house and chassis disconnect switches.
- Locate slideout control valve on pump by finding the appropriate colored wire (tan or orange) on top of the control valve.
- Using an Allen wrench, insert it into control valve and turn clockwise (In).
- Remove the protective label on the hydraulic pump. This will access the manual drive coupler.
- Attach a standard hex bit into a drill, cordless or standard.
- Insert the hex bit into the coupler found under the protective label.
- Run drill counterclockwise to retract.
- Using an Allen wrench turn control valve on hydraulic pump counterclockwise to secure room.
- Turn on both the house and chassis disconnect switches.
- Take the motorhome to an authorized repair center.


Bed Slide (Electric Gear Drive):

1. The bedroom slideout motor is located under the bed. Lift the bed and remove the access panel.
2. Turn off the house and chassis battery disconnect switches (located in rear curbside bay).
3. Remove 12 Volt DC from the motor by disconnecting the plug from the slideout motor to the power supply.
4. Use a 5/8" wrench to turn driveshaft and retract room (see illustration).

CAUTION:

Do not continue to turn the motor after the room is fully extended or retracted. Damage to the slide mechanism can occur.

5. Once the slide room has manually retracted, apply pressure to the wrench to firmly set the room. This will prevent room drift.
6. Take the motorhome to an authorized repair center.

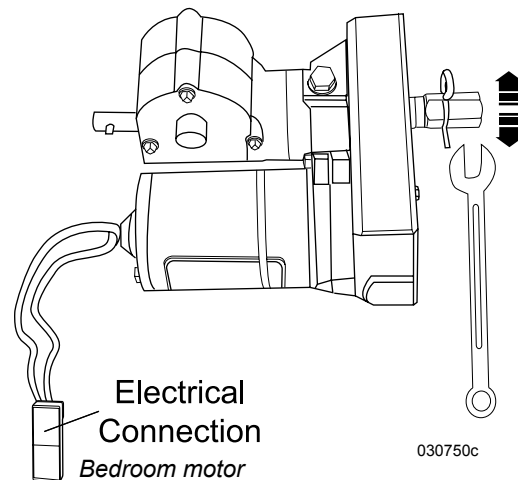
**Wardrobe Slide (Electric Cable Drive):**

1. Turn off both the battery and house disconnect switches (located in rear curbside bay).
2. Locate the slide room motor near the ceiling of the slideout. Remove the fascia, valance or both. The fascia and valance may be attached by Velcro® or screws.
3. Disconnect the slide room motor electrical plug. Locate by following the wires that run from the motor to the plug. This removes 12 Volt DC power from the slideout motor.
4. Attach the flexible shaft to the 1/4" fitting on the end of the slideout motor.
5. Attach a 1/4" socket and ratchet or drill to the other end of the flexible shaft.
6. Turn in proper direction to move the room. Reverse direction if cables tighten and the motor is difficult to turn.


CAUTION:

Over-torquing can result in severe damage.

7. Take the motorhome to an authorized repair center.

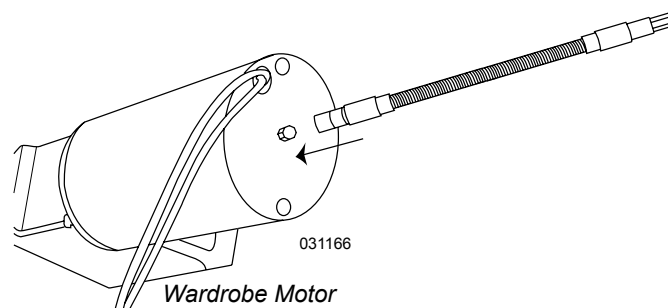**AWNINGS*****SlideOut Cover***

The slideout cover automatically reacts to slideout direction. A fixed edge of the slideout cover is installed into an awning rail, mounted just above the slideout. A spring-loaded roller with special brackets mounts to the slideout. In a hard rain, the cover helps to prevent water intrusion past the seals. The slideout cover will automatically reach full extension when the slideout room is fully extended. The slideout cover automatically rolls up into the travel position when the slideout room is retracted.

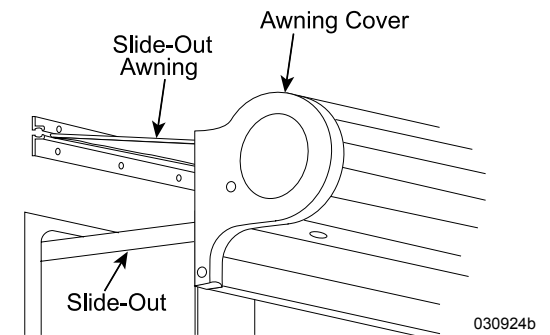**NOTE:**

When retracting the slideout, stop the room approximately halfway. Confirm the fabric is properly rolling before fully retracting the slideout.

CAUTION:

The slideout room and slideout awning should be retracted prior to strong winds, heavy rain or snow to prevent weather related damage to the awning or motorhome. Strong winds can drive rain under the slideout awning and into the motorhome.

CAUTION:


Rain water can pool on the slideout awning. The added weight will cause the awning to sag. Upon retracting the room, material can become caught in between the top of slide room and the opening in the motorhome. It will be necessary to retract the room in small increments and allow the water time to run off.

CAUTION:

At least five feet of clearance is needed between the side of the motorhome and any objects, such as trees or fences, to allow the slide room and slideout awning to fully extend.

Entry Door Awning**To Operate the Awning:**

- Ensure interior house power is on.
- Verify the extend/retract path of the awning and related hardware is clear and unobstructed.
- Turn the ignition key off. Press and hold the door awning switch to extend/retract.
- Release the switch to the neutral position when fully extended or retracted.

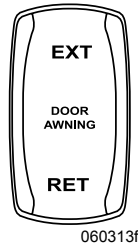**CAUTION:**

Do not activate the awning switches during travel; the awning can extend while the engine is running. Take precautions to ensure the awning switches, located at the base of the passenger console, are not activated during travel or at other unwanted times.

NOTE:


It is not required to have the door awning at full extension. The awning may be stopped at any point by releasing the switch.

Window Awning**To Extend the Window Awning:**


- Hook loop of pull strap with catch rod and pull awning, reel assembly and side arms to extend fully away from motorhome.
- Hook pull strap on side strap hook. Remove catch rod from pull strap and store.

To Retract the Window Awning:

- Hook catch rod on pull strap, remove pull strap from side strap hook and slowly allow awning to retract.
- Remove catch rod from pull strap and store.

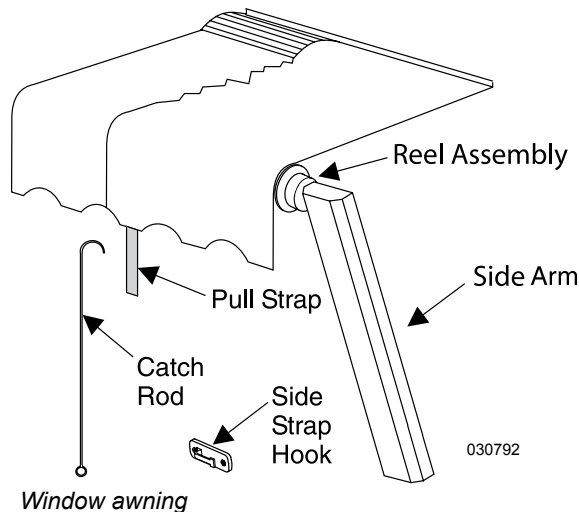**Patio Awning**


The Eclipse awning operates on 12 Volt DC by the push of a button. The awning requires 10 feet of lateral side clearance.

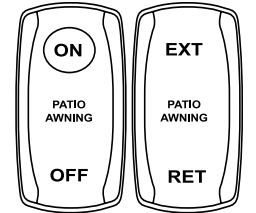**To Operate:**

- Turn the ignition switch off.
- Check for sufficient clearance before extending the awning.
- Chassis battery disconnect switch must be on.
- Turn the awning power On/Off switch to on.
- Push and hold the Extend/Retract switch to operate the awning. Release the switch at any time to stop awning movement.


External Control Switch:

An external control switch is located at the bottom of the front outside arm.

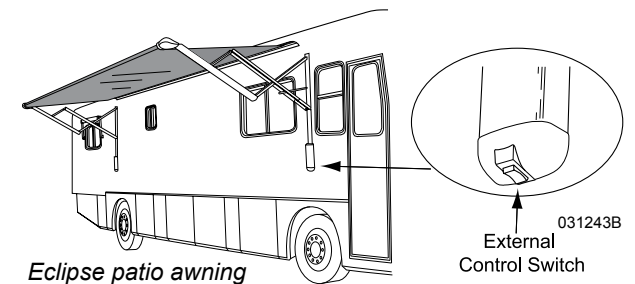

⚠ DANGER

 WATCH YOUR HAND PLACEMENT WHILE DEPLOYING AND RETRACTING, POSSIBLE PINCH POINTS



100227

To Operate:

- Turn the ignition switch off.
- Check for sufficient clearance before extending the awning.
- Chassis battery disconnect switch must be on.
- Turn the Awning Power On/Off button to On.
- Push and hold the external control switch to extend and retract the awning. Release the button at any time for partial extension.

If the awning fails to operate:

- Ensure ignition is off.
- Check power at 15 Amp circuit breaker in front distribution panel in roadside front compartment.

INFORMATION:

See awning OEM manual for detailed operation instructions.

CAUTION:

Do not activate the awning switches during travel; the awning can extend while the engine is running. Take precautions to ensure the awning switches located at the base of the passenger console are not activated during travel or at other unwanted times.

Patio Awning (Optional)


The Apex patio awning is a roof-mounted box awning that requires 120 Volts AC to operate. The Apex awning includes an adjustable Auto-Retract feature that (when activated) will automatically retract the awning in windy conditions.

To Operate Awning:


- Connect to shore power, start the generator or turn on the inverter.
- Ensure there is sufficient clearance before extending the awning.
- Press the “Power On/Off” button on the awning control.
- Press and release the “Extend” or “Retract” button. The awning will completely extend or retract.
- Press and release the “Stop” button to stop extension or retraction at any time.
- Turn awning power off when not in use.

NOTE:

When any button is activated, the LED illuminates and stays on until another function is performed.

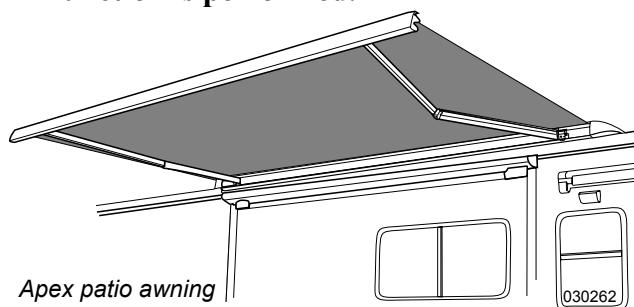

Apex patio awning

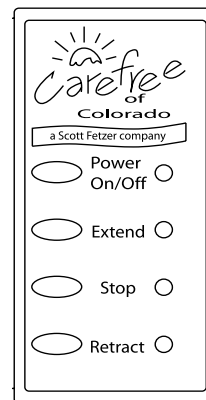

031250b

NOTE:

A remote control is included with the Apex awning system.

Auto-Retract System:


The Auto-Retract system detects awning motion caused by windy conditions. The system can be set at five levels of wind sensitivity. The system operates by monitoring the motion of the awning's front edge. When awning motion exceeds a preset sensitivity level for more than two seconds, the awning will automatically retract.



Awning Remote

To Operate the Auto-Retract System:

- Press the “Power On/Off” button on the awning control.
- Press the “Auto-Retract On/Off” on the Auto-Retract control.
- Set the sensitivity to the desired level.

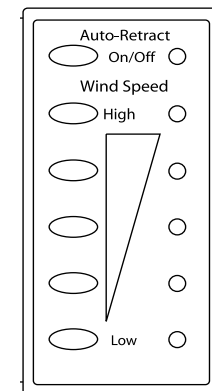

031250

NOTE:

The Awning Power button must be on and AC power must be available for Auto-Retract to operate.

NOTE:

If the Auto-Retract LEDs flash, this indicates that the motion sensor has been disengaged or otherwise disabled. Contact a Carefree service center for service.

Awning Care & Cleaning

On a monthly basis, loosen hardened dirt and remove dust from the awning with a dry, medium bristle brush. Thoroughly rinse both the top and bottom with a garden hose.

A high-quality acrylic fabric cleaner may be used to help maintain appearance. Carefully follow the instructions on cleaning products. Metal surfaces should be cleaned with soapy water and thoroughly rinsed. Allow the awning to thoroughly air dry while extended. Awning maintenance products can be found at RV supply stores.

Acrylic Awnings:

Wash both sides of the awning with a mild soap (i.e., dish soap) and lukewarm water. **Do not** use detergents. If necessary, reapply the solution to keep fabric saturated. Rinse the awning thoroughly. Repeat, if necessary, until most of the stains disappear. Contact *Carefree of Colorado* for removal of stubborn stains.

Leaks:

It is normal for slight leakage to occur through the fabric where water is allowed to accumulate. If water drips through the needle holes in the stitching use a commercial seam sealer that is available in canvas and trailer supply stores. Paraffin wax may also be applied to the top of the seams. As the awning “weathers” these holes will normally seal themselves.

Soap or chemical residue can “wet” the fabric so that it appears unable to repel water. Rinse the fabric thoroughly and test to see if it is water repellent after it dries. If leakage continues after washing and thoroughly rinsing, please contact:

Carefree of Colorado

Storm Precautions

The warranty does not cover damage caused by acts of nature; therefore, steps should be taken to prevent damage from occurring due to wind, rain or storms. Retract the awning in inclement weather or when leaving the motorhome unattended. If the awning must be retracted while the fabric is wet, extend it as soon as possible to allow it to completely dry.

NOTE:

Water weighs 8.33 pounds per gallon. The awning was not designed to withstand the 500 to 700 pounds of water that could accumulate on the canvas.

FANS Exhaust Fan

The exhaust fan power switches are located on a multiplex switch panel in whichever room the fan is located. The fans operate using 12 Volt DC from the house batteries.




The vent fan has three speeds and a built-in thermostat. The blue zone on the thermostat is cool; the red zone indicates heat. The fan starts automatically after the lid opens approximately two inches during normal operation.

Automatic Operation:

Leave the fan in **Auto** position for normal operation. Turn the multiplex power switch on; the lid will open and the fan will start. The fan will not operate with the fan speed switch in the **0** position. Turn the multiplex power switch off to lower vent lid and stop fan.

Manual Operation:

To adjust vent lid to different opening positions, pull down on the manual lid knob. Turn the knob counterclockwise to lower the lid. Return fan to **Auto** position by pushing in on the knob.

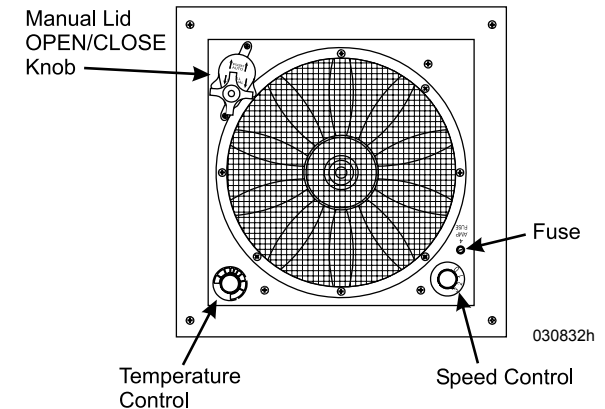

NOTE:

To override any fan setting, pull the vent cover knob out to the manual position and close vent. The fan blade will stop spinning when the vent cover is closed.

CAUTION:

It is recommended to travel with the vents closed. High winds and vibration can damage the dome.

Tips for Fan Operation:

- Operate the fans to keep condensation from accumulating. Condensation occurs naturally from fluctuations in interior and exterior temperatures, humidity and dew point changes, steam from cooking or boiling large amounts of water on the cooktop. Shower use is another source of condensation.


- If the fan fails to operate, check for a blown fuse either in the domestic fuse panel or the fuse on the fan.
- To remove the screen, loosen the eight screws holding the screen in place. Use a non-abrasive soap and water to clean and reinstall.
- Direct airflow by slightly opening selected windows (choose the shaded side of the motorhome to create the most airflow on hot, sunny days). Maximum airflow is achieved between an open window and the Fantastic Vent.

NOTE:

DO NOT leave the fan on while the motorhome is stored or unattended for extended periods. High winds, unusual conditions or obstructions may prevent the fan cover from fully closing, resulting in leakage and serious damage.

Bedroom Ceiling Fan (Optional)

A bi-directional, 12 Volt DC powered ceiling fan is located in the bedroom. Fan operation is controlled by a switch located next to the bed. Periodic maintenance consists of cleaning the blades with a soft cloth or a vacuum to remove dust build up.

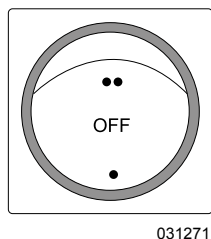


Bedroom Ceiling Fan Switch.

CAUTION:

Fan blades are not enclosed. Use caution not to enter into fan path when on. Serious injury can occur.

**SOLAR SCREEN & BLACKOUT SHADE
Windshield**

The front windshield is equipped a powered solar screen and blackout shade. The solar screens and blackout shades throughout the rest of the motorhome are manually operated. The windshield screen and shade are operated by switches on the driver’s console.

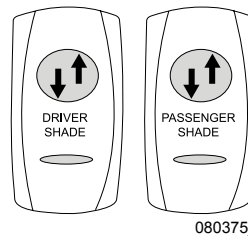

Windshield Solar Screen and Blackout Shade Operation:

The “Front Visor” switch on the driver’s console operates the solar screen. Press and hold switch in the up or down position. Release switch to stop solar screen movement.

The “Front Shade” switch on the driver’s console operates the blackout shade. Press and hold switch in the up or down position. Release switch to stop shade movement.


WARNING:

Do not operate the motorhome with any cockpit window treatment in the down position.

SOLAR SCREENS & BLACKOUT SHADES (OPTIONAL)

Remote Control

A remote control is used to operate the living room and bedroom solar screens and black out shades. The remote is labeled All Day for solar screens and All Night for black out shades. Treatments at each window can be operated individually or use the “All” feature to lower or raise all window treatments.

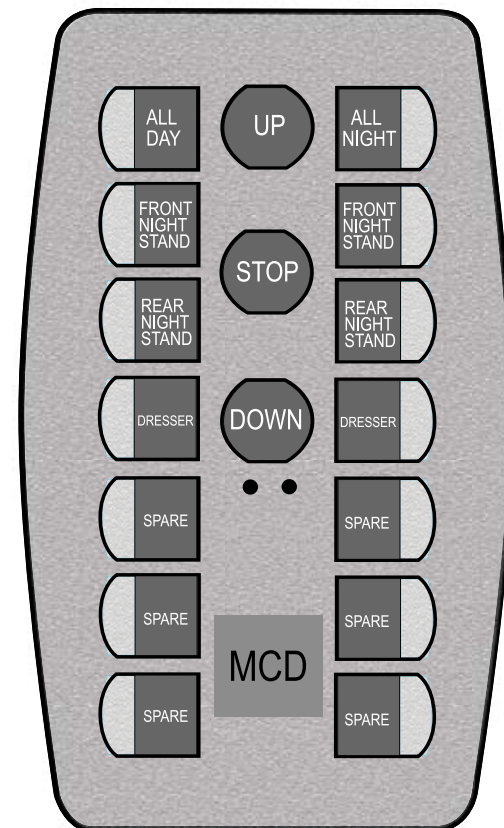

Power shade and screen remote 031367

To Raise or Lower All Shades or Screens:

- Press the All Day (solar screens) or All Night (black out shades) button.
- Press Up or Down. All selected treatments will raise or lower. Press Stop at any time to stop movement.

To Raise or Lower Individual Shades or Screens:

- Press the desired window position and treatment under All Day or All Night.
- Press the Up or Down button. The selected window position and treatment will raise or lower. Press Stop at any time to stop movement.


DOOR - SLIDING

The sliding pocket door uses two rollers at the top of each door. During the life of the motorhome the sliding door may require adjustment. Locate the small wrench and turn the adjusting screw upward or downward.

If the pocket door needs to be removed, locate the portion that is secured to the top of the pocket door and rotate the small lever outward to release the latches.

LUBE:

Lube the pocket door rollers with a small drop of oil once a year to help increase the life of the rollers and improve the sliding of the door.

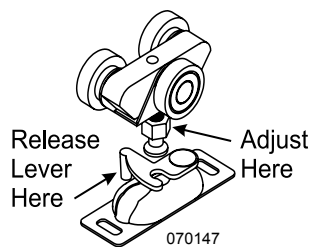**SEAT CONTROLS**

The Pilot and Co-pilot seats are adjustable to provide maximum comfort. Seats must be locked in the forward facing direction while traveling.

NOTE:

The seats operate from 12 Volt DC house power.

Swivel Seats**Swivel Seat Operation:**




- To swivel, lift up the lever located on the side control panel.
- The passenger seat swivels all the way around when the slideout is extended.
- When rotating the driver seat, put the steering wheel in the upright position.
- Move the seat forward, then pull the swivel lever up and rotate to the desired position.

WARNING:

Seats must be locked in the forward facing position while the motorhome while traveling.

NOTE:

After either seat is rotated 180°, it must be rotated back in the opposite direction. The 12 Volt DC wiring in the seat may disconnect if rotated 360°.

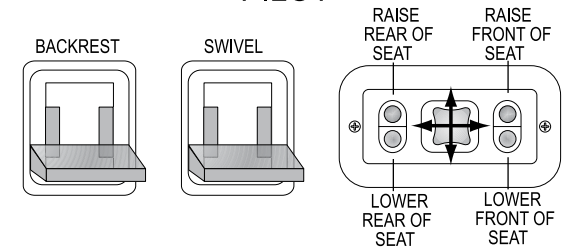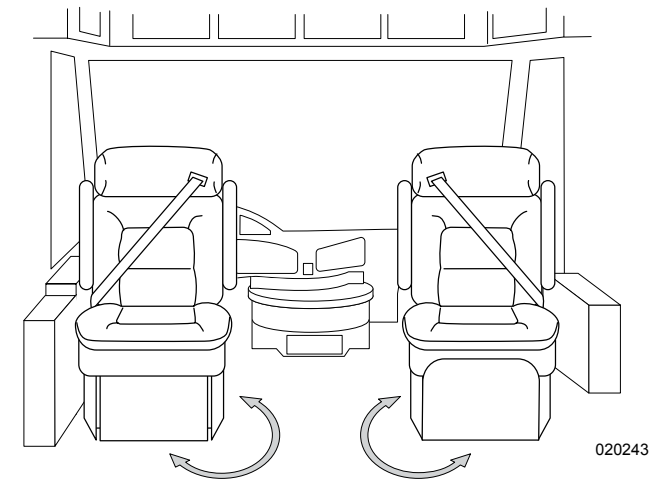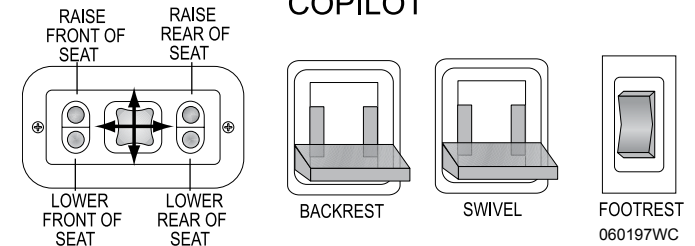PILOT**COPILOT**

SOFA BED CONVERSION


The sofa will convert easily into a bed. The sofa comes equipped with safety belts to use during travel.

Sleeper to Sofa:

- Lift up the seat base and pull up the backrest until they are in a “V” position.
- Push down on seat base.

Sofa to Sleeper:


- Lift up from the center of sofa, just below the seat cushions, to form a “V” shape with the seat base and back rest.
- Push down on seat base, then pull out until the seat base and backrest are flat.
- Fold seat belts out of the way.

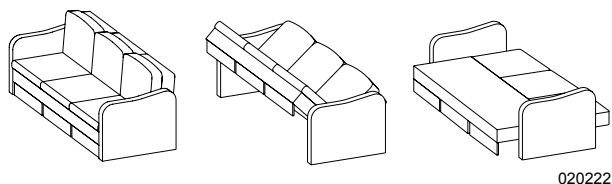

020222

Air Mattress (Optional)


Use the hand-held electric pump to inflate the mattress. The pump operates from any 120 Volt AC outlet.

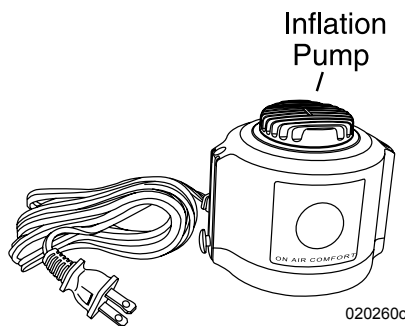

020260c

To Inflate the Mattress:

- Remove and store seat cushions.
- Open the convertible sofa and fully extend the mattress (may be necessary to extend slide-room).
- Unzip the corner of the mattress labeled “Air Pump Access” to access the pump valve.
- Push down on the valve to ensure it is locked in place.
- Open the cap on the valve.
- Plug the pump motor into a wall outlet. Hook to shore power, start the generator or turn on the inverter.
- To turn on the pump, place it on the valve and turn the pump ¼ turn. The pump will lock in place.
- Inflate the mattress to desired firmness.
- Remove the pump, replace the valve cap and zip up the mattress cover.

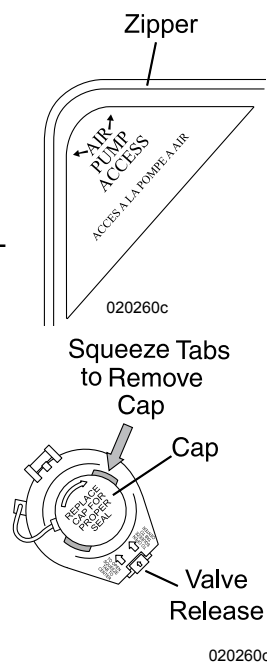

020260c

Squeeze Tabs to Remove Cap

Cap

Valve Release

020260c

To Deflate the Mattress:

- Remove bedding items.
- Unzip the corner of the mattress where the air valve is located.
- Lift the valve release.
- Once deflated, close the valve release, zip up the mattress cover and close the convertible sofa.

AIR MATTRESS BED (Optional)

The air mattress includes two separate air chambers to allow different firmness settings. Each side is equipped with a remote control. The air pump located under the bed is powered by 120 Volt AC.

Operation:

- Hook to shore power, start the generator or turn on the inverter.
- Press the up or down arrow on the remote to adjust the firmness setting. Firmness is represented on a scale of 5 (softest) to 100 (firmest) and is adjustable in increments of 5.

Troubleshooting:

- Ensure the pump power cord is plugged in at the pump and at the 120 Volt outlet under the bed.

CAUTION:

Set bed to a maximum of 20 before traveling in higher elevations. To prevent damage to the remotes, place remotes in wall-mounted holders before extending or retracting the slideout. Broken or damaged remotes are not warrantable.


NOTE:

See the manufacturer’s website at www.selectcomfort.com, for more information.



Air Mattress Remote

031117c

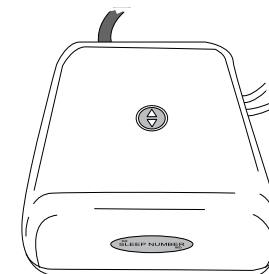

Air Mattress Pump

031117d


STORAGE SLIDEOUT TRAY (OPTIONAL)

The slideout tray is located in a storage compartment. The slideout tray allows for the pay-load to slide outward for easier access.

- The motorhome must be level before opening.
- To open, press down on the latch and hold to unlock. The tray can then be pulled out.
- To close, slide the tray in and the latch
- **Do not** exceed maximum weight capacity (800 lbs).

WARNING:

The motorhome must be level when unlocking the slideout tray. If unlevel, the drawer can slide out abruptly and cause injury.

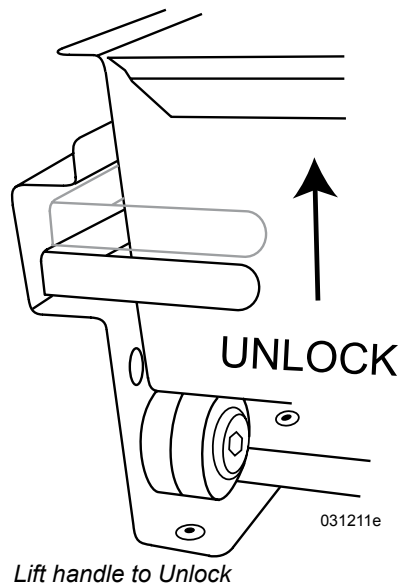

LADDER - REAR

The rear ladder allows access to the roof. Care should be used when climbing the ladder. Access to the roof should be limited to cleaning and sealing purposes only. Stow the lower portion of the ladder in the cargo bay during travel.



NOTE:

Maximum weight capacity for the ladder is 300 lbs.

RADIO - DASH

The dash radio is Sirius ready and includes an AM/FM tuner, CD/DVD player, Weather Band and auxiliary inputs. Depending on the source material, the radio may display track title and file type information.

- The stereo switch in the bedroom turns rear speakers on and off.

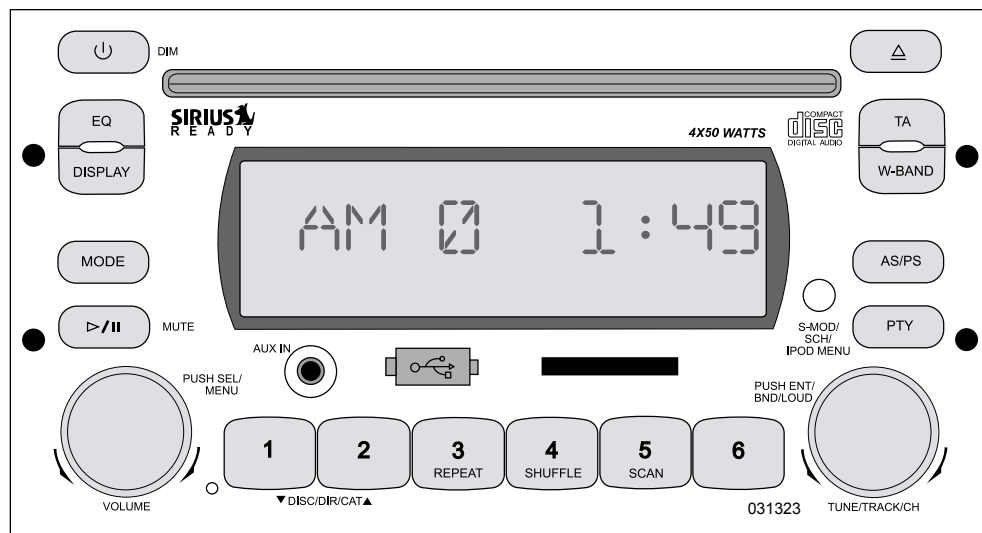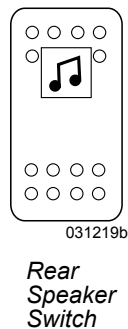

Operation:

- Turn on the battery cut-off switch located at the entry door.
- Turn on the radio.
- Insert CD, select AM/FM by pressing the lower right knob or select Weather Band by pressing the W-Band button on the right.

Clock Adjust:

- Press and hold the Display (Disp) button until clock starts flashing.
- Use the tuning knob to adjust time. Turn clockwise to adjust minutes and counterclockwise to adjust hours. Cycle through hour 12 to change between AM and PM (indicated on screen).
- Press the Display (Disp) button to set.

Auxiliary Inputs

There are three auxiliary inputs on the front of the dash stereo. When an auxiliary device is attached the radio will automatically switch modes to playback from that input. Press the Mode button to change modes at anytime.

Stereo Jack:

Connect a cable with a 1/8" stereo plug (male) on both ends from an auxiliary device (such as an MP3 player headphone jack or a laptop computer speaker/headphone output) to this input for audio reproduction through the dash stereo. Set the auxiliary device to a mid-range volume level and adjust volume at the dash stereo for best results. Source information will not display on the radio screen (such as song title, artist, etc.).

USB Connection:


Use this input to connect a portable USB drive. This input can also be used to connect MP3 players, although not all MP3 players are compatible (use the stereo jack input if not compatible). The radio will automatically switch modes to play back from this input when a USB device is connected.

SD Card Slot:

Insert a Secure Digital (SD) flash memory card here to playback music files. The radio will automatically switch modes to play back from this input when a SD card is inserted. Depending on the source material, the radio may display track title and file type information.

Navigation system (Optional)

The navigation system displays through the rear vision monitor. The Garmin GVN 52 provides detailed street maps, points of interest such as restaurants, hotels, and gas stations; a trip computer and turn-by-turn directions with voice guidance. The unit is preloaded with street mapping for all of North America which is displayed through the back-up monitor. Map perspectives include 3-D, top-down, track-up, or north-up view. The unit is operated by a remote control. An SD card slot is available for loading custom points of interest, additional maps and software updates.

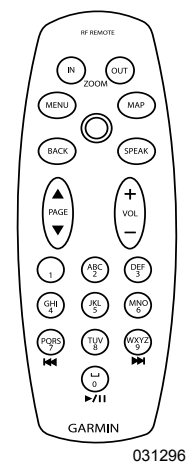


031296

CAUTION:

For safety, only perform navigation operations while parked.

INFORMATION:

Complete operating instructions and information are found in the Garmin OEM manual.

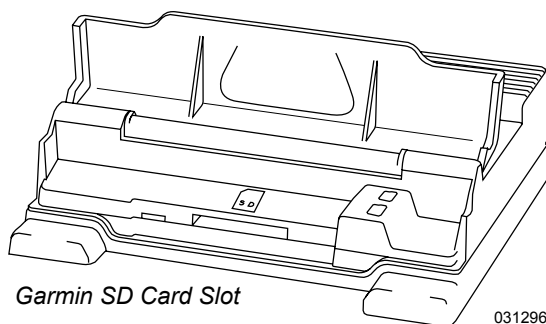


Garmin SD Card Slot

031296c

CD Changer (Optional)

The 10-disc CD changer is located in the front overhead cabinet above the windshield.

- Open changer door to access the magazine.
- Press inwards on the magazine to eject.
- Load CDs on tray with label up.
- Orient magazine with arrow face up pointing towards changer. Insert magazine into changer. Allow time for changer to scan the discs.
- Press the Mode button on the dash radio until the CD menu displays.

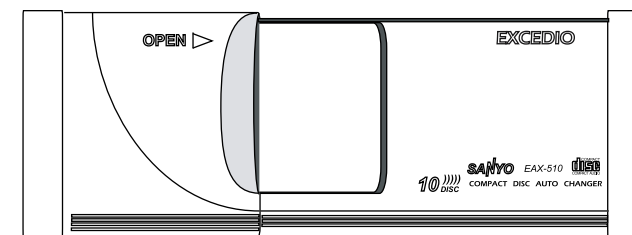

CD Changer

031086d

TV & ENTERTAINMENT COMPONENTS


The following paragraphs discuss the operations and various components that make up the entertainment center.

INFORMATION:

It is recommended to become familiar with individual components. Refer to the respective manual for detailed instructions on operating individual components.

NOTE:

All components of the entertainment system require 120 Volts AC to operate. Hook to shore power, start the generator or turn on the inverter. Turn on the interior house power using the battery cut-off switch.

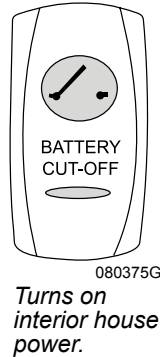


Television (Front) Lockout Feature

The ignition switch controls the outlet for the front TV, allowing the front TV to be operated only when the ignition is off. Viewing time of the front TV from the inverter depends on state of charge of the house batteries and any additional 12 Volt DC lighting being used.

Cable TV, Computer & Phone

The motorhome is equipped with cable TV and phone hook-ups located in the water service bay. For convenience, the auxiliary outlet is located at the cockpit.

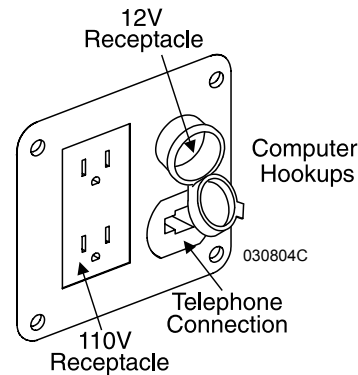


TV Antenna

To Raise the Antenna:

- Rotate the crank handle clockwise to raise the antenna (approximately 14½ turns).
- Pull down on the outside directional wheel and rotate the antenna until the best picture is obtained. The directional wheel is spring loaded.

To Lower the Antenna:

- Pull down on the directional wheel and align arrows together.
- Rotate the crank handle counterclockwise to lower the antenna fully into the cradle. Make an outside visual inspection to ensure the antenna is properly stowed.

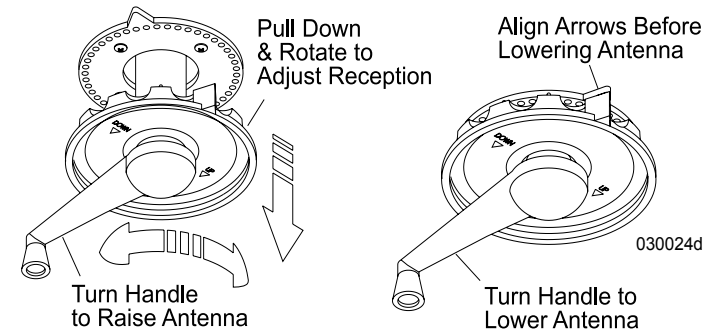

CAUTION:


Do not move motorhome with antenna in the raised or partially raised position and risk damage by tree limbs or wires. Worm gear damage or breakage may result.

WARNING:

Before raising antenna, make an outside visual inspection for any obstructions or overhead electrical wires. Damage to the antenna, severe shock, personal injury or death can occur from inadequate clearance.

Antenna Select

The antenna select switch (located in the cockpit overhead cabinet) will select between the roof antenna or shore cable.

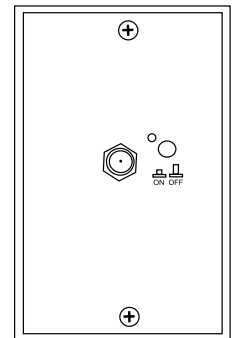

030989b

To Watch TV Using Roof Antenna:

With the button in the **ON** position, the input to the TV is set to roof antenna and the LED will illuminate.

To Watch TV Using Shore Cable:

With the button in the **OFF** position, the input to the TV will be set to shore cable and the LED will be off.

Front TV Operation



NOTE

Due to options in entertainment equipment and floor plans, operation of entertainment components may vary.

- Hook to shore power, start the generator or turn on the inverter.
- Ensure house batteries are fully charged.
- Use the battery cutoff switch to turn on interior house power.
- Ignition key must be in the Off position.

To Watch TV from the Antenna:

- Turn the antenna select button On.
- Turn on the TV. Press TV Input button to select TV.
- Select desired channel.
- Adjust volume on TV to desired sound level.

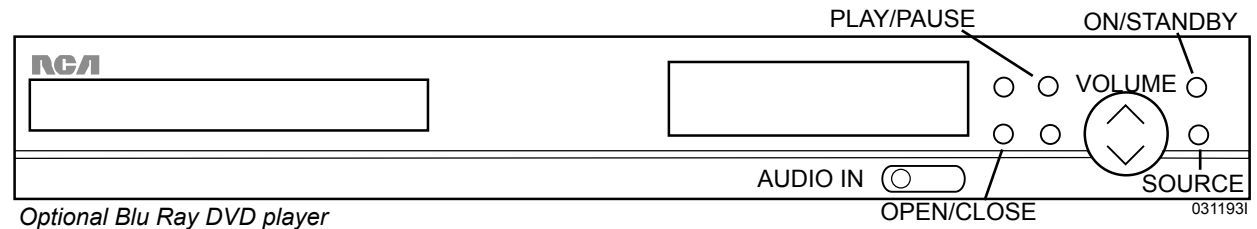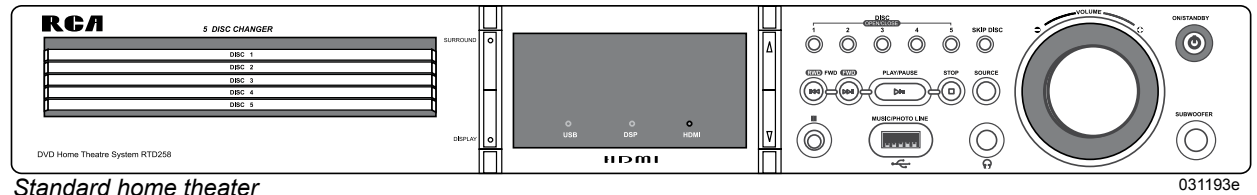

To Watch TV from Shore Cable:

- Hook to shore cable using the Shore Cable port in the water service compartment.
- Turn the antenna select button Off.
- Turn on the TV. Press TV Input button to select TV.
- Select desired channel on TV.
- Use volume control on TV to select desired sound level.

INFORMATION:

To receive cable channels, the television must be programmed to the Cable setting (also called CATV by some manufacturers). This setting is found in set-up menu. In addition, a channel search must be initiated to scan available channels in area. Refer to the television OEM manual on how to receive all available channels in the area.

To Watch TV from the DVD Player:

- Press On/Standby to turn DVD player on.
- Press desired disc number 1-5 to Open DVD tray.
- Place DVD onto tray. Close tray. DVD will load and play automatically.
- Repeatedly press the Input button on the TV until the DVD appears on the TV.

Home Theater

Home theater system speakers are located throughout the living room area. The system operates from 120 Volt DC. Hook to shore power, start the generator or turn on the inverter. Home theater sound operates through the DVD player only.

TV with Home Theater Sound:

- Turn on the DVD player.
- Turn on the TV. Turn down TV volume.

- Adjust volume on the DVD player to desire level.
- Insert a DVD to watch DVD with home theater sound.

INFORMATION:


It is recommended to become familiar with the individual components in the home theater system. Refer to OEM manuals for detailed instructions on operating individual components.

Listen to CDs:

- Turn on the DVD player.
- Insert a CD into the DVD player.
- Adjust volume to desire level.

To Watch TV from the Blu Ray DVD Player (Option):

- Press On/Standby to turn DVD player on.
- Press Open/Close to open DVD tray.
- Place DVD into tray. Close tray. DVD will load and play automatically.
- Repeatedly press the Input button on the TV until DVD appears on the TV.

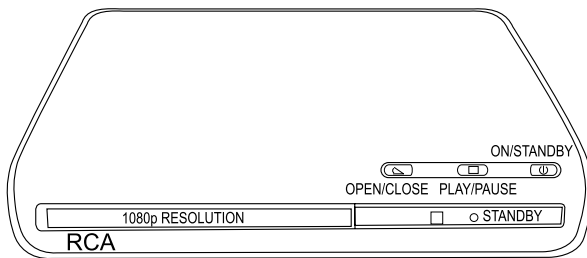

Bedroom DVD player. Also used with optional exterior entertainment system.

Bedroom TV Operation

To Watch TV from the Antenna:

- Turn the antenna select button On.
- Turn on the TV. Press TV Input button to select TV.
- Select desired channel.
- Adjust volume on TV to desired sound level.

To Watch TV from a Shore Cable:

- Hook to shore cable using the Shore Cable port in the water service compartment.
- Turn the antenna select button Off.
- Turn on the TV. Press TV Input button to select TV.
- Select desired channel on TV.
- Use volume control on TV to select desired sound level.

To Watch TV from the DVD Player:

- Press On/Standby to turn DVD player on.
- Press Open/Close to open DVD tray.
- Place DVD into tray. Close tray. DVD will load and play automatically.
- Repeatedly press the Input button on the TV until DVD appears on the TV.

INFORMATION

For detailed information on features and operating instructions refer to OEM manual for particular entertainment component.

EXTERIOR ENTERTAINMENT (OPTIONAL)

The exterior entertainment has a LCD television located in the curbside sidewall. A DVD player for the exterior entertainment system is located in the curbside compartment.


To Operate Any Component:

Entertainment components require 120 Volt AC from shore power, generator, or the inverter.

- Turn on the house battery disconnect switch.
- Ensure house batteries are charged.
- Battery cutoff switch must be on.

To Watch TV from the DVD Player:

- Press On/Standby to turn DVD player on.
- Press Open/Close to open DVD tray.
- Place DVD into tray. Close tray. DVD will load and play automatically.
- Repeatedly press the Input button on the TV until DVD appears on the TV.

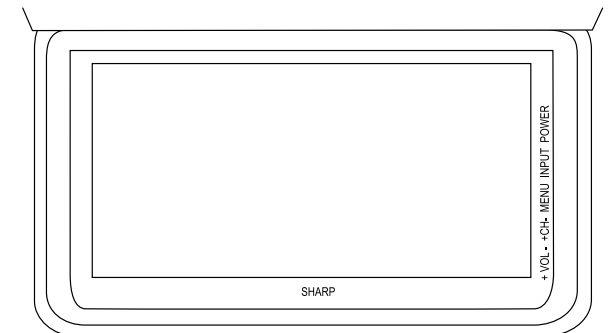


Typical Exterior Entertainment Center

031290

SATELLITE SYSTEMS

The motorhome is pre-wired with coaxial cables for a roof mounted satellite dish or for a stand alone system. The cables are located in the roof approximately 12” in front of the forward air conditioner. A sticker on the roof marks the location of the cable.

NOTE:
A satellite receiver is not included.

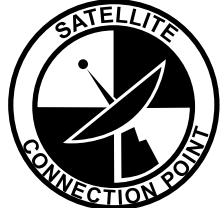

Roof sticker 031318f marks satellite cable location

Satellite Prewire

Sat:

This cable comes from the satellite connection plate in the water service center. This is used to hookup a portable satellite dish. Connect this cable to Satellite In on the satellite receiver.

LNB #1:

This cable comes from the roof mount satellite dish. It is used to hookup a standard definition satellite receiver. Connect this cable to Satellite In on the satellite receiver.

LNB #2:

This cable comes from the roof mount satellite dish. It is used in conjunction with LNB #1. Connect LNB cables 1 & 2 to a high-definition satellite receiver.

Bed Sat:

This cable runs to the bedroom. Hook this cable to Satellite Out on the back of the satellite receiver to supply a satellite signal to the bedroom TV.

HDMI:


This High Definition cable hooks to the living room TV. Cable can be used to hook to a satellite receiver or video game console.

Telephone:

This cable comes from the telephone connection plate in the water service center. The telephone cord hooks to a satellite receiver to order pay per view programming.

Component:

Available with front O/head TV only. Used to connect standard definition satellite receiver or game console.

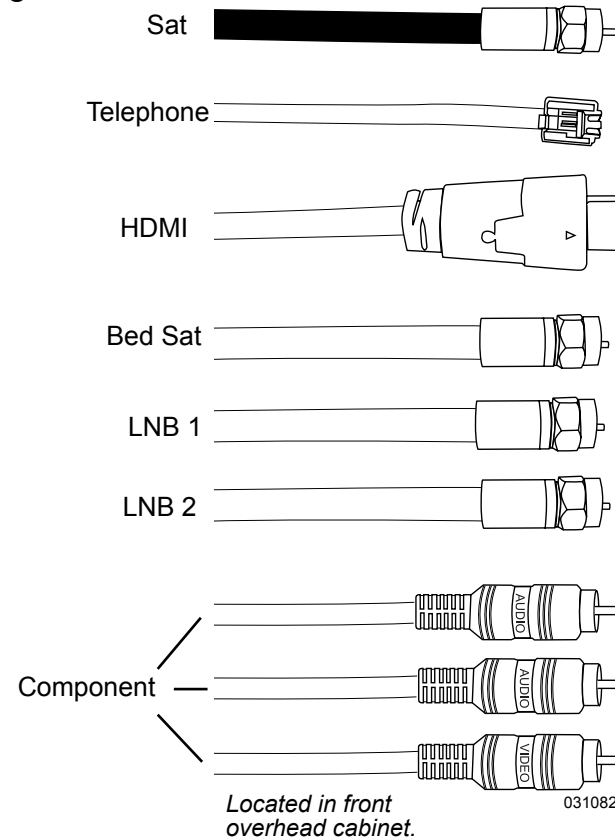

KVH R5 (Optional)

The KVH R5 system is designed to work with DISH network satellite receivers. The system includes an antenna (dish) and a power switch plate. The KVH system powers the antenna and sends information to a receiver, which decodes the satellite signal from the antenna and sends it to the television. The system is designed to operate whether the motorhome is in motion or parked.

The satellite system does not include a satellite receiver.

INFORMATION:


Refer to the KVH R5 OEM manual for complete operating instructions and information.

INFORMATION:

Satellite service requires subscription activation. Contact a service provider to activate the account. For specific satellite coverage areas and providers see the OEM manual. Satellite receiver is not provided.

NOTE:

The Satellite System does not include a satellite receiver.

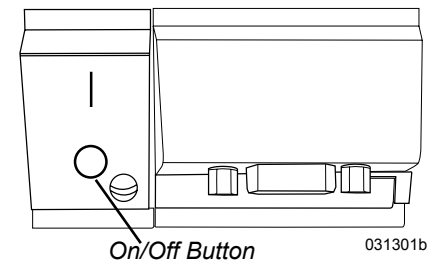

Turning On the System:

- Turn on the KVH satellite system by pressing the power button on the switch plate to the on position. The power button is located in the overhead cabinet above co-pilot seat.
- Turn on the satellite receiver.
- Wait 30 to 60 seconds for the antenna to acquire the satellite signal.
- Turn on TV. Use Input button to select Input that was determined upon receiver installation.
- It takes approximately one minute for the receiver to download guide data. Channels can be selected once the guide is downloaded. Use satellite remote control to select desired channel.

Turning Off the System:

- Press the Power button on the switch plate to the OFF position.

Monthly Maintenance:

- Periodically clean the dome with water and mild soap if necessary. Dirt buildup can affect satellite TV reception.
- **Do not** spray the dome with high-pressure water.
- **Do not** apply abrasive cleaners or volatile solvents, such as acetone, to the ABS dome.
- **Do not** use any compounds that react with plastic when cleaning the dome.
- Do not paint the dome.

CAUTION:

If a need arises to paint the radome, use only non-metallic automotive paint without a primer coat to avoid degrading the RF signal strength. Metallic paint impairs satellite signals.

TIP:


For optimum signal strength, keep the dome clean from dirt, bugs and other debris. Periodic washing of the dome with mild soap and water is recommended. If the motorhome is stored for long periods of time it is recommended that the system be put through a search procedure on a quarterly basis to keep all moving parts in good working order.

Technical Support:

- For assistance in operation or for technical support, call KVH Technical Support at 1-401-847-3327.

Winegard Trav'ler (Optional)

The Winegard system is compatible with virtually any DirecTV® receiver, including HD and DVR receivers. The system can also be programmed for use with SHAW direct Canadian satellite receivers and services. The system includes a roof-mounted antenna and interface box. The interface box is used to raise and stow the antenna. The system does not include receivers. Before ordering service from a satellite provider, ensure the service provider's receiver is compatible with the Winegard system. Consult the receiver manual or www.winegard.com for receiver compatibility. The satellite system does not include a satellite receiver.

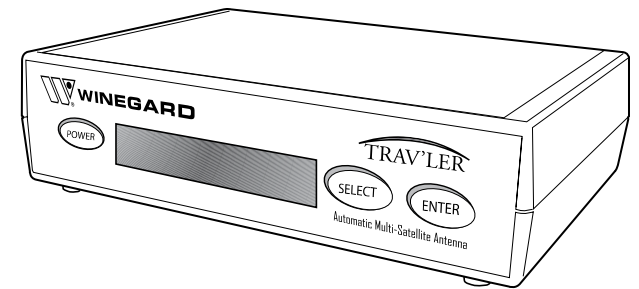

Winegard Trav'ler

031268b

NOTE:

The satellite system does not include a satellite receiver. Refer to the satellite receiver OEM manual for complete operating instructions and information.

NOTE:

Satellite service requires subscription activation. Contact your service provider to activate the account.

INFORMATION:

For specific satellite coverage areas and providers see the OEM manual.

Operation:

- Press and hold the Power button for two seconds or until the interface box screen displays Power On. The system is on and the satellite antenna will raise.

For Travel:

- Press and release the Power button to stow the satellite antenna. The interface box will not turn off until the satellite antenna is successfully stowed.


Technical Support:

- Call 1-800-788-4417 for Technical Support.


Satellite Wiring

The motorhome is pre-wired to accept a roof-mounted or portable satellite dish system. Factory installed coaxial and audio/video cables are provided from the satellite connection plates to the TVs. A phone cable is provided for pay-per-view programming. The “Sat” coax connection located in the water service bay allows connection of a stand-alone dish.

NOTE:
There are a number of ways satellite reception can be obtained dependant upon: types of satellite dishes, equipment hardware, standard definition, high-definition and DVR receivers, satellite subscription providers etc. Due to available possibilities, only the most probable receiver installation diagrams are provided. Additional hardware and cabling can be required when installing satellite equipment.

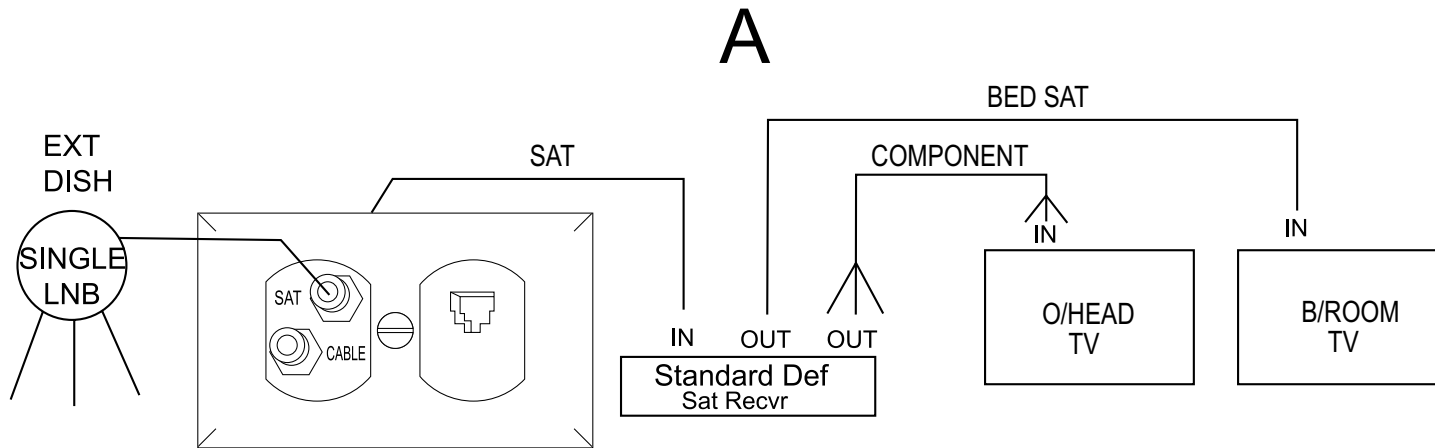


A = Standard Definition
B = High Definition

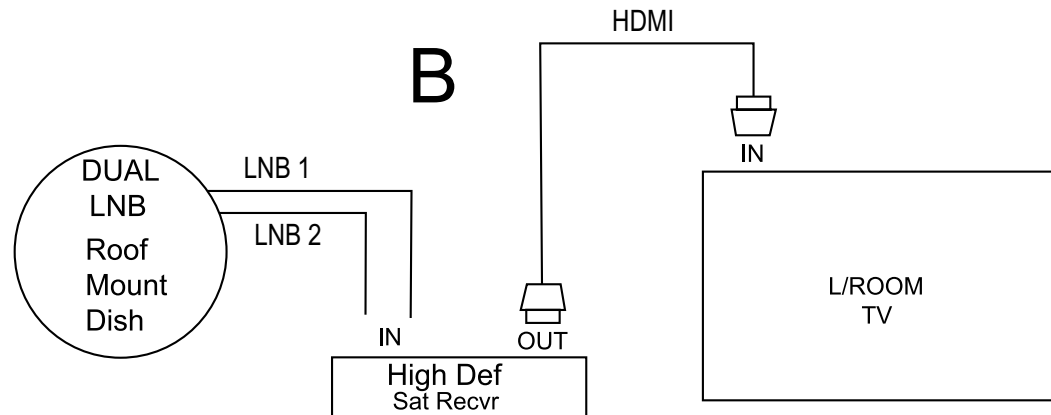

SYSTEMS CONTROL CENTER

The System Control Center enables a central location for many of the switches and control monitors used to operate the motorhome.

1. **HVAC Thermostat:** Controls furnace, roof A/C and fan.
2. **Inverter Remote Panel:** Turns inverter on or off and monitors battery charging status.
3. **Power Control Systems Monitor:** Displays shore service amperage and voltage. Monitors and controls load shedding.
4. **Aqua Hot:** Controls Aqua Hot diesel and electric functions.
5. **Tank Monitor Panel:** Displays the status of the black and grey holding tanks, fresh water tank and propane tank. Also displays status of house batteries.
6. **Tank Test Switch:** Switch displays tank and house battery status on the monitor panel.
7. **Generator:** Starts and stops the generator.
8. **Slideout Room Controls:** Extends and Retracts the front slideout rooms.
9. **Slideout Room Controls:** Extends and retracts the rear slideout rooms.

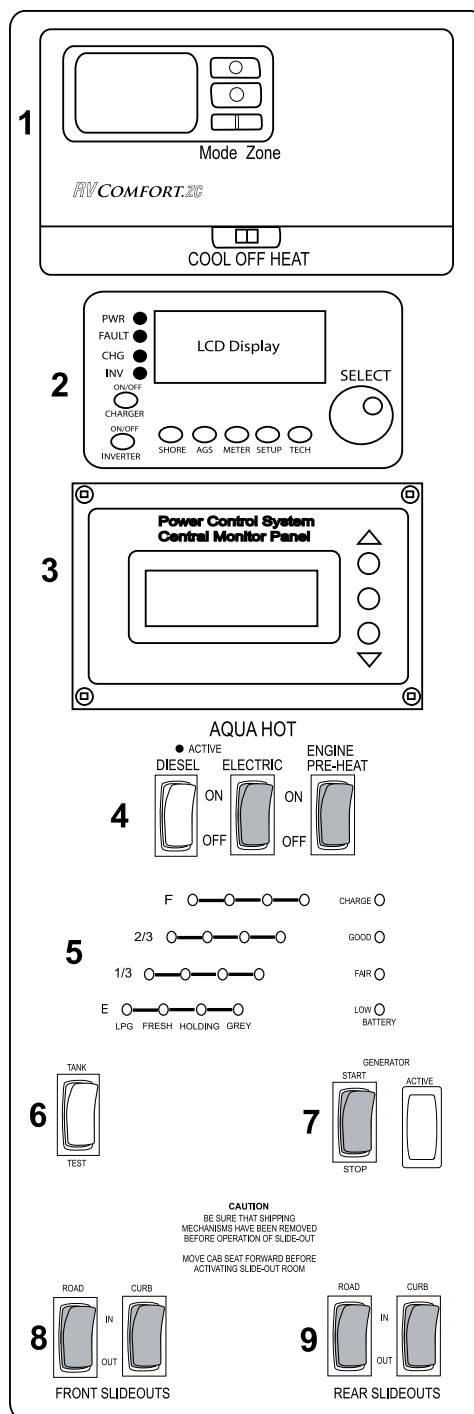

Water Systems - Section 6



WATER SYSTEMS - INTRODUCTION	128	WASTE WATER SYSTEMS	133
WATER TANKS	128	Proper Waste Disposal	133
Measurements	128	Do Not Put in Waste Holding Tanks	133
WATER - POTABLE	129	What to Put in Holding Tanks	133
City Water Hook-up	129	Waste Drain & Sewage Tanks	134
Fresh Tank Fill	129	WASTE PUMP	134
Gravity Fill	130	TOILET	136
Potable Hose Reel	130	Pedal Flush	136
WATER PUMP	130	Cleaning & Maintenance	136
Water Pump Troubleshooting	131	Electric Flush	137
FAUCET SCREENS	131	Programming Water Level	137
WATER FILTER	132	Tank Level Sensors	137
WATER SYSTEMS	132	DRAIN TRAPS & AUTO VENTS	137
Troubleshooting	132	COLD WEATHER CONDITIONS	138
Disinfecting Fresh Water	132	Water Center Heater	138
		Cold Weather Storage	138
		WINTERIZATION	138
		Using Air Pressure	139
		Using Nontoxic Antifreeze	140
		De-Winterization	140
		Prevent-A-Freeze System (Optional)	141
		SERVICE CENTER	142

WATER SYSTEMS - INTRODUCTION

This section contains information about the operation and care of the various water system equipment found in the motorhome. Optional water equipment will also be discussed, so not all information may be applicable to the motorhome. More detailed information with **CAUTION** or **WARNING** instructions for various equipment, other than what is found in this section, can be found in the OEM manuals in the owner information box.

Newcomers to a self-contained motorhome soon discover water does not last long unless consumption is drastically reduced. For example: less water can be used for showering if the shower is turned off while soaping down and then turned back on to rinse. There is plenty of water to meet personal needs once habits are adjusted.

The plumbing system is fully self contained (FSC); the entire fresh water system and waste water system can be operated independently of shore services. The plumbing system includes holding tanks for fresh (potable) water, grey (sinks and shower) water and black (toilet) water. An onboard water pump will supply all faucets and toilets with water from the fresh tank. A monitor panel located in the hallway displays holding tank levels.

If shore services are available, city water is used to pressurize the water system so the onboard water pump can be left off. The grey and black holding tanks share a termination outlet. A sewer hose attaches between the termination outlet and shore sewer connection.

Leave the black tank drain valve closed to prevent solids from clogging the hose. Leave the drain valve to the grey tank open. Drain and flush the grey and black tanks prior to departure.

Fresh Water System:

The fresh water system consists of the fresh water tank, water pump, water filter and a water hose for potable water use only. The onboard water pump uses water from the fresh water tank when a faucet is opened or a toilet is flushed. Use water sparingly when not hooked to shore service.

Proper care of the hose is necessary. After each use, drain the water hose and attach the plug to keep out insects and debris.

Waste Water System:


The sinks, shower and washing machine (optional) drain into the waste water (grey water) holding tank. The sewage holding tank (black water) is dedicated for the toilets. Normally these tanks are proportionate in size to the fresh water tank. If a camping trip is started with a full fresh water tank, the waste holding tanks will be full or nearly full when all the water is used from the fresh water tank.

Prior to using the toilet, add several gallons of water to the black tank to help prevent accumulation of solids. Holding tank odor control chemicals are available.

WATER TANKS Measurements

The motorhome is equipped with tank monitors located on the systems control center and in the water service center. Hold down the “Test” switch to view tank levels. Levels are displayed on a LED scale with a corresponding scale reading.


- **Green** lamps indicate good or normal ranges.
- **Yellow** lamps indicate fair ranges.
- **Amber** lamps indicate partial ranges.
- **Red** lamps indicate full or empty ranges.

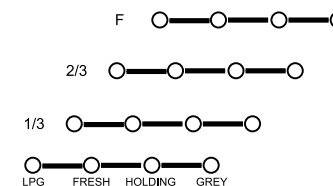

040436e



Hallway Monitor

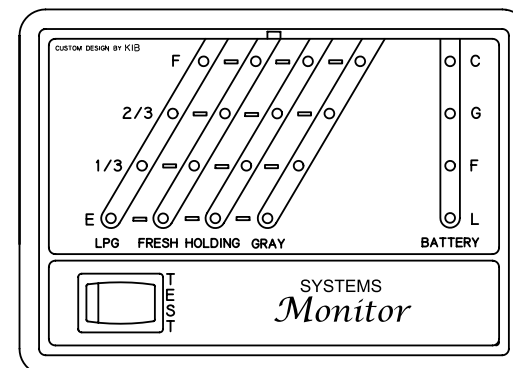

Located in water service center.

030446e

WATER - POTABLE

The motorhome is equipped with a fresh water holding tank and an on-demand water pump. The water pump pressurizes the fresh water system to supply faucets and toilet(s) with water. When city water is available, city water will pressurize the fresh water system and the water pump can be turned off. A water pressure regulator must be installed to safely limit water pressure within the fresh water system to no more than 45 psi.

Methods for using fresh water:

- **Fresh Water Tank** - Water is added to the fresh water tank the using the gravity fill port. The on-board water pump pressurizes the water system using water from the fresh water tank.
- **City Water** - A potable hose located in the water service center connects to a city water source.

CAUTION:

Be sure to use a hose manufactured and labeled for potable water to ensure water purity when supplying fresh water to the motorhome.

CAUTION:


Some water sources develop high water pressure, particularly in mountainous regions. High water pressure is anything over 55 psi (pounds per square inch). Excessive water pressure may cause leaks in water lines, damage the water heater and cause the potable water hose to swell and burst. Attach a pressure regulator to the city water faucet to regulate the pressure to the potable water hose and the motorhome.

WARNING:

Water is electrically conductive. Do not use any electrically powered item or electrical outlet that may be exposed to a water source. This can result in a serious shock, causing injury or death.


City Water Hook-up

- Attach a water pressure regulator to the city water supply to limit water pressure to 45 psi.
- Pull hose from reel and connect to a city water source.
- Turn the “City Water/Fresh Tank Fill” lever to the City Water position.
- Turn on the city water supply. Open faucets to purge air from system.
- The water pump remains off when hooked to city water.

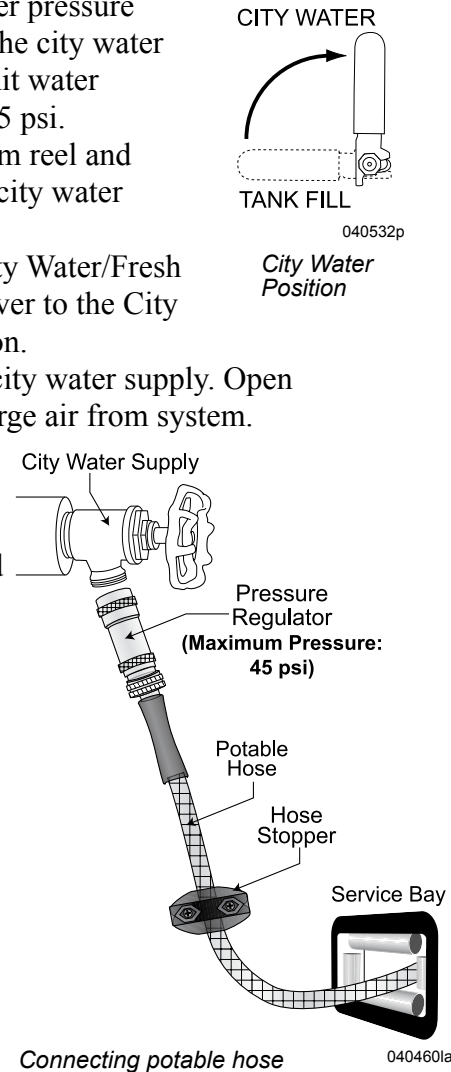

Fresh Tank Fill

- Attach a water pressure regulator to the city water supply to limit water pressure to 45 psi.
- Pull hose from reel and connect to a city water source.
- Turn the “City Water/Fresh Tank Fill” lever to the Tank Fill position.
- Turn on the city water supply.
- Monitor the tank level while filling using the systems monitor.
- As the tank approaches nearly full, be prepared to shut off the water supply.
- The tank is full and topped off when water flows from the fresh water tank overflow pipe.
- Shut off the water supply when the tank overflows. It is possible to damage the tank if the fill process is left unattended.

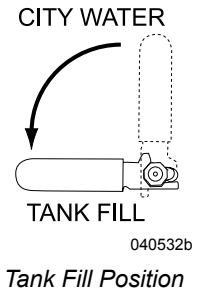

CAUTION:

Continually monitor the tank fill process. Damage to the tank can occur if water is allowed to continue to overflow.

Gravity Fill


The gravity fill inlet allows fluids to be introduced directly into the fresh water tank. When dry camping, water can be poured directly from a container into the fresh water tank. The gravity fill inlet can be used to pour disinfecting solution into the fresh water tank. Use only potable water sources, solutions and delivery systems when using the gravity fill port.

Filling the Tank:

- Unscrew fill cap using care to keep cap and inlet clean.
- Insert potable water hose into fill port.
- The tank is full when water overflows from fill port.

CAUTION:

Monitor the fill process when using the gravity fill port. It is possible to damage the tank if the fill process is left unattended.

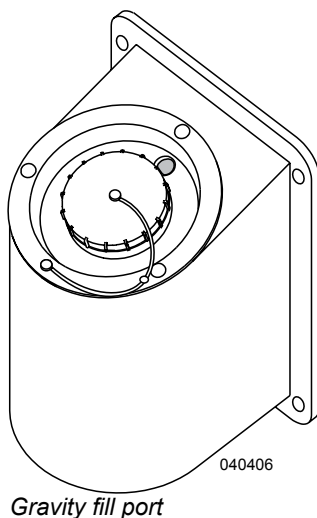

Potable Hose Reel

The potable water hose reel is located behind the water service center. The hose extends through an opening in the service center panel. The hose extends manually and uses a 12 Volt DC motor to retract.

To Retract the Hose Reel:

- Turn off the city water source and water pump.
- Disconnect the water hose from the faucet.
- Press and hold the Hose Reel switch (located in the service bay).
- Guide hose into the service center panel opening when retracting.
- Install plug in hose end to keep hose clean.

Maintenance:

- Carefully layout out hose to prevent kinks or damage.
- Use a water pressure regulator to protect hose from excess pressure especially in hot climates or when in direct sunlight.
- Periodically fully extend the hose. Straighten and clean the hose then retract guiding hose onto reel.

WATER PUMP

The water pump pressurizes the fresh water system when not connected to city water. The water pump is self-priming, operating on demand as water is used. The water pump is located behind the water service panel. Access the water pump by removing an access panel in the pass-through storage bay next to the water service center.

WARNING:

Before leaving the motorhome for extended periods of time (i.e. overnight or longer) be sure that the city water supply and water pump have been turned off. Damage from neglect will be the responsibility of the owner, not the manufacturer.

The water pump can be operated from the following locations:

- Bathroom/Vanity
- Galley
- Water Service Bay
- Hallway Monitor

To turn the water pump on or off:

- Momentarily press the water pump switch. The indicator lamp on the interior switch will illuminate when the water pump is turned on.




060297g

CAUTION:

Do not continue water pump operation if the fresh water holding tank is empty. Damage to the water pump or electrical supply system will result.

To operate the water pump:

- Close all drain valves and low point drains.
- Fill the fresh water tank.
- Open the hot and cold water valves of each faucet.
- Turn the water pump **ON**. Wait for the water lines and the hot water tank to fill.
- Close each faucet when it delivers a steady stream of water (cold water faucets first).

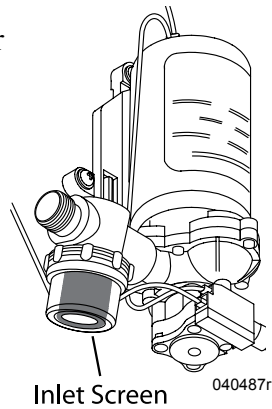

Clean every two months.

Water Pump Troubleshooting

Vibration induced by road conditions can cause the plumbing or pump hardware to loosen. Check the water pump system for components that are loose. Many symptoms can be resolved by tightening the hardware. Check the following items:

Water pump will not start or blows fuse:

- Check electrical connections at the pump and ground connection.
- Check the fuse at position VCM-8, F17 in the front electrical bay.
- Is voltage present at the pressure switch on the pump? If voltage is present, the pressure switch may be faulty. As a test, temporarily bypass the pressure switch.
- Are batteries fully charged and battery cut-off switch on?
- Check for an open or grounded circuit at the motor.
- Check for a seized or locked diaphragm assembly (water frozen).

Water pump will not prime or sputters

(No discharge/motor runs):

- Is the pump inlet screen clogged with debris?
- Is there water in the tank or has air collected in the water heater?
- Is the inlet tubing and plumbing sucking in air at a faulty plumbing connection (vacuum leak)?
- Check for proper voltage with the pump operating.
- Check the pump housing for cracks or loose drive assembly screws.

Water pump will not shut-off or continues to run when the faucet is closed:

- Check to see if the fresh water/tank fill valve is fully seated into position.
- Check the output (pressure) side plumbing for leaks and inspect for a leaky toilet or valves.
- Look for a loose drive assembly or pump head screws.

Water pump is noisy or rough in operation:

- Check for plumbing that may have vibrated loose.
- Does the mounting surface multiply noise (flexible)?
- Check for mounting feet that are loose or compressed too tight.
- Look for loose pump head to motor screws.

Water pump is rapid cycling:

 
- Look for restrictive water flow in the faucets or shower heads.

FAUCET SCREENS

Fresh water sources vary by location. Build up of lime deposits, or debris in the faucet screen, will restrict or plug the flow of water coming from the faucets. Should the flow of water reduce, the filter screen in the faucet head may be clogged. All faucet screens should be checked and cleaned every two weeks of use or as needed.


- The bathroom faucet screen is located on the outlet side of the faucet and held in place with a threaded collar.
- The kitchen faucet has two screens, one located at the faucet head, the other where the hose attaches to the faucet manifold assembly. The hose must be removed to access both screens.
- Clean screen using a small soft brush and de-liming solution.
- Reinstall screen and check water flow.

Clean screen area



Bend a paperclip to help remove kitchen faucet screens

040472p

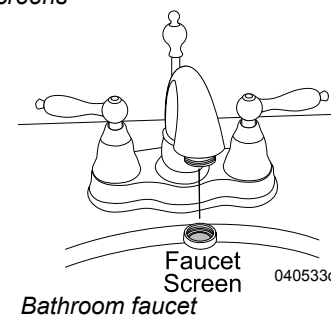


040533d

WATER FILTER


A whole-house water filter is located in a curbside bay. Change the water filter after 1,000 gallons of use or sooner if water flow is noticeably reduced.

Filter Replacement:

- Turn off the water supply (turn off water pump or disconnect from shore services).
- Open the kitchen faucet to relieve water pressure.
- Use the provided wrench to loosen the filter housing.

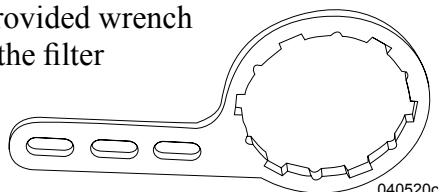

Filter Wrench

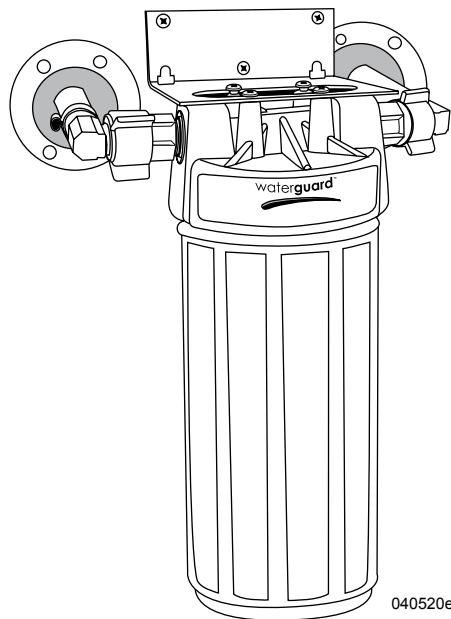

Filter located in curbside compartment


- Finish unscrewing the filter housing by hand.
- Examine the o-ring located at the top of the filter housing. Replace this O-ring every third filter change to ensure proper sealing.
- Replace the old filter element with a new one.
- Thread the filter housing back onto the filter mount and hand tighten.
- Reconnect water supply and run water for 20 minutes to flush the system.

NOTE:

Contact Shurflo at 1-800-3218 or www.shurflo.com for replacement filters and o-rings.

Winterization:

- Remove filter bowl and element from housing.
- Winterize the motorhome as outlined in **Section 6** of this manual.

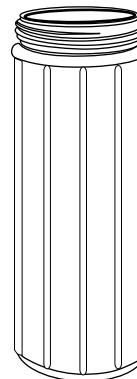

040520c

WATER SYSTEMS Troubleshooting

Water system problems are generally caused by improper winterizing, poor maintenance, road vibration and campsite water pressure variations. Check all plumbing connections for leaks at least once a year. If the water pump runs when a faucet is not open, check for a water leak. Close drain valves. If the pump continues to run, take the motorhome to an authorized dealer for service.

Disinfecting Fresh Water

Disinfecting the water system with household bleach protects against bacteriological or viral contamination from common water sources. Read the following instructions completely before attempting to disinfect the fresh water system.

When to disinfect the fresh water system:

- If the motorhome is new.
- If the motorhome has been in storage.
- Every three months during use.

To Disinfect the Water System:

1. Remove water filter element and re-install the filter housing.
2. Drain the fresh water tank. Close drain when empty.

3. Prepare a disinfecting solution using one of the following methods:
 - Combine one gallon of water and ¼ cup of household bleach. Use 1 gallon of this solution for every 15 gallons of tank capacity.
 - Multiply tank capacity (in gallons) by 0.13. The result is the amount (in ounces) of household bleach to pour into fresh water tank.
 - These methods will yield a 50 PPM (parts per million) disinfecting solution in the water system that will act as a quick-kill dosage for harmful bacteria, viruses and slime-forming organisms. Concentrations higher than 50 PPM may damage the water lines and/or tanks.
4. Pour the solution into the gravity fill opening.
5. Top off tank with fresh water.
6. Turn on the water pump in the motorhome.
7. Open each faucet and run water until you smell a distinct bleach odor.
8. Turn off all faucets and allow the system to stand for four hours.
9. Drain the fresh water tank of the mixed solution.
10. Fill the water tank with fresh water. Thoroughly flush hot and cold lines with fresh water. Repeat this process until the chlorine bleach smell is no longer detected in the water.
11. Install a new water filter.

INFORMATION:
Household bleach is 5.25% Sodium Hypochlorite. Higher concentrations increase PPM Ratio.

WASTE WATER SYSTEMS ***Proper Waste Disposal***

Dumping raw sewage from toilet holding tanks, except at authorized dumping stations, is universally prohibited. Most National, State and private parks have either a central dump facility or campsite hook-up for sewage.

Many modern rest areas along the interstate now have dump stations available. Woodall's Campground Directory, Trailer Life's RV Campgrounds and Services Directory, Rand McNally's Campground and Trailer Park Guide, Good Sam Park Director (Good Sam Club) and other similar publications list dumping stations. Some major oil companies offer dump facilities at selected stations also.

Do Not Put in Waste Holding Tanks

- **Do not** use strong or full strength detergents to deodorize and disinfect. Use odor control chemicals made especially for holding tanks.
- Automotive antifreeze, ammonia, alcohol or acetone in holding tanks will dissolve plastic.
- **Do not** put large table scraps in the tanks. They could be stuck in or damage the valve seals.

- Facial tissue is thicker, softer and stronger than a rapidly dissolving tissue. White toilet paper dissolves faster than colored. To test tissue dissolvability, immerse one tissue square into a jar of water. Shake the jar five times to determine if the tissue disintegrates into pieces or remains in one piece. Do not use tissue that remains in one piece. Paper designed specifically for holding tanks is available at most RV supply stores.

NOTE:
Never dispose of sanitary supplies or other non-dissolving items into the system. Facial tissue, wet strength tissue, paper towels or an excessive amount of toilet tissue can create clogging in the holding tank system.

CAUTION:
Do not use any products that contain petroleum distillate or ammonia in place of RV odor controlling chemicals. Petroleum distillate or ammonia will damage the ABS plastic piping and seals.

What to Put in Holding Tanks

Grey Water Tank:

The grey water waste tank stores the sink, shower and clothes washer drain water. A reduced mixture of chemicals should help to control odor in the grey tank.

Ensure there is enough liquid in the holding tanks prior to dumping the waste holding tanks to provide sufficient flushing action through the valve, drain pipe and drain hose. Empty the waste holding tanks weekly to prevent stagnation and overfilling.

Black Water Tank:

Before initially operating the toilet, treat the sewage holding tank with a pre-charge of several gallons of water and an odor-control chemical (available at most RV supply stores). First, add approximately three gallons of water to the holding tank. Next, mix the chemicals, in accordance with the manufacturer instructions, with approximately one gallon of water.

Pour mixture through toilet to the holding tank. Be careful not to spill the chemical on hands, clothing, toilet bowl or carpet. Hot weather conditions may require adjusting the amount of chemical used to control odor. Repeat the chemical pre-charge to the holding tank each time the tank is cycled.

WARNING:

Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using holding tank additive. Do not use any products that contain petroleum distillate or ammonia in place of RV odor controlling chemical. Petroleum distillate or ammonia will damage the ABS plastic piping and seals.

Waste Drain & Sewage Tanks

The waste drain system provides adequate and safe storage and/or discharge of waste materials. The drain system uses ABS plastic piping and fittings connected to sinks, shower, toilet and holding tanks draining to an outside termination. The motorhome should be reasonably level for optimum operation of the waste systems. The wastewater holding system consists of a grey water tank that stores the sink, shower and laundry washer drain water, and a black holding tank that stores waste from the toilet.

Drain valves and a tank flush system dispose of waste through a common termination. Each holding tank has a separate drain valve dumping the waste water (grey water) and sewage (black water) through a common single discharge outlet. The tank drain valves are located service center on the roadside. Use the hallway monitor to observe tank levels. When ready to drain the tanks, drain the sewage tank first. Next, flush the black tank with the flush system. Close black tank valve after flushing tank. Drain the grey water tank. Using this sequence helps to flush solids from the sewer hose. It is recommended that both holding tanks are less than half full when traveling.

WASTE PUMP

The waste pump is a self-priming impeller pump designed to minimize clogging when draining the tanks.

To Empty the Black Tank:


- Wear disposable gloves, safety glasses and protective clothing as necessary.
- Remove the drip cap at the 1½" hose end (see illustration).

WARNING:

Be sure to remove the drip cap from the Sani-Con hose end (see illustration). Failure to do so will result in damage to the Sani-Con system.

NOTE:

If the pump is activated while the drip cap is on the hose end, switch the pump off and wait at least 30 seconds to allow pressure to dissipate before removing the drip cap.

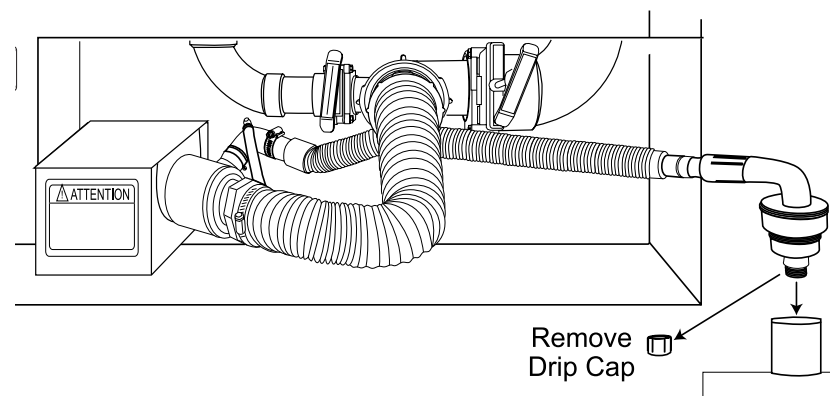

Remove drip cap prior to use

040623b


- Insert hose end into sewer connection.
- Periodically tighten all hose clamps.
- The waste pump hose end can be connected to a 3" or 4" threaded or non-threaded sewer connection. Ensure the hose end is installed correctly prior to operation (see illustration).
- Open the solid waste drain valve at the plumbing service center by pulling outward.
- Turn on the pump using the Sani-Con power switch located in the service center.
- When the black tank is empty, turn off the pump and leave the black tank valve open.

WARNING:

Never leave the pump unattended while in use. Do not allow the pump to run dry for any period of time. Damage to the pump impeller will result.

To Flush the Black Tank:

- Insert the sewer pipe adapter in the facility sewer connection.
- Open the solid waste drain valve. Close the liquid waste drain valve. Fill the grey tank at least 50% full.
- Connect a non-potable water hose with pressure regulator to the flush system fitting in the plumbing service center. Turn on the water supply and waste pump. Allow the water to rinse the black tank for at least three minutes.

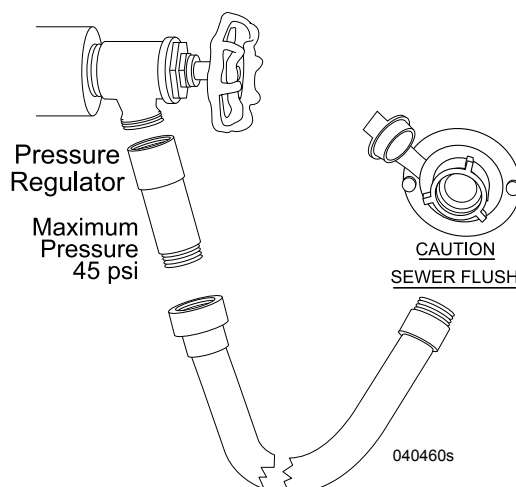

Connection to black tank flush

- Never operate the system unattended. The water must flow freely through the waste pump outlet hose.
- When completed turn off the faucet.
- Close the solid waste drain valve and open the liquid waste drain valve. Turn on the waste pump. The water in the grey tank will flush the remaining solids from the sewer hose. The liquid waste drain valve remains open until the next drain cycle or time of departure.


WARNING:

Operating the flush system unattended can risk flooding. Use the tank flush system each time the holding tanks are cycled. Failure to routinely use the flush system will result in a clogged spray nozzle. Turn off the water supply when finished flushing the tank.

Grey Water Bypass:

The grey water bypass system allows continuous grey water flow. The liquid (grey) waste uses gravity to drain from the tank and bypasses the pump by going through the bypass hose into the sewage service.

The bypass hose is the small hose connected at the termination point of the dump valves and “T-s” into the small flexible hose on the outlet side of the macerator pump.

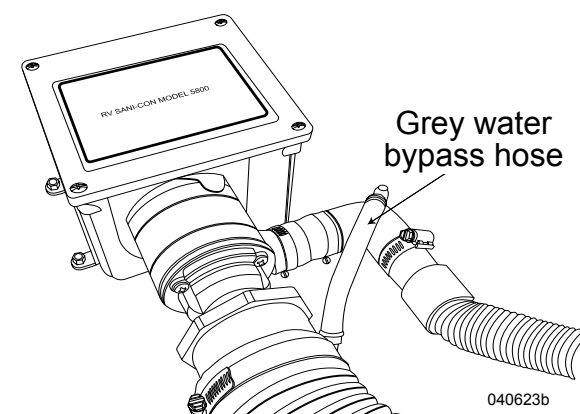

Troubleshooting:

The house battery disconnect switch in the battery compartment must be on for the macerator pump to run.

TOILET

Pedal Flush

The toilet operates from either the fresh water tank or city water supply. Turn on the water pump or connect to a city water source. The toilet flushes directly into a sewage holding tank (black water tank).

NOTE:


Add several gallons of water to the holding tank before use to prevent accumulation of solids.

CAUTION:

Most chemical mixtures for holding tank odor control are poisonous. Follow product manufacturer's directions and warnings when using any holding tank additive.

Toilet Operation:

- Push the flush pedal down halfway to add water to the bowl. Generally, more water is required when flushing solids.
- Push the pedal all the way down to open the flush ball.

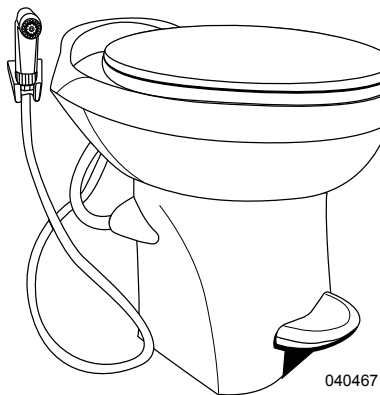


Water flow pressures vary at different locations; therefore, holding the flush pedal down for several seconds may be required. Release the flush pedal by allowing it to snap back, which permits positive sealing around the flush ball. A small amount of water should remain in the bowl.

NOTE:

Holding the flush pedal down longer than necessary will result in excessive water usage.

Spray Nozzle:

- Depress the thumb lever and step on the flush pedal.

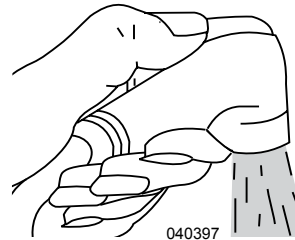

Cleaning & Maintenance

Cleaning the Toilet:

The toilet should be cleaned regularly for maximum sanitation and operational efficiency. Clean the toilet bowl with a mild bathroom cleaner. Do not use chlorine or caustic chemicals, such as drain opening types, as they will damage the seals. Clean out the system by flushing with several gallons of fresh water mixed with one cup of dry laundry detergent. Add odor control deodorant, in the amount specified for the holding tank capacity, after cleaning and every few days during use.

NOTE:

If the motorhome is in storage, spray silicone on the toilet bowl valve and work it back and forth. Perform this maintenance monthly (silicone will evaporate in about 30 days).

Maintenance - Checking for leaks:

Check for leaks behind or under the toilet. Take four or five sheets of toilet tissue and wipe all the seams and water line connections. Start at the top of the unit and work downward. When the tissue comes in contact with water, it will immediately change texture.

Troubleshooting:

Poor flush:

- A good flush should be obtained within two to three seconds. If the problem persists, remove the water supply line and check the flow rate. The flow rate should be at least ten quarts (9.5 liters) per minute.

Leaks:

- Check water supply line connection at back of toilet.
- Check the screws for tightness between closet flange and toilet. If the leak continues, remove the toilet and check flange height. Adjust the height, if necessary, to 7/16" above floor. Replace the flange seal if it is damaged.

Bowl will not hold water:


- Check for foreign material in the valve blade groove in the flush drain.

NOTE:

Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using any holding tank additive.

Electric Flush

The Tecma is an electric macerating toilet. Only flush organic material and toilet paper to avoid damage. Ensure the house batteries are charged and interior house power is on.

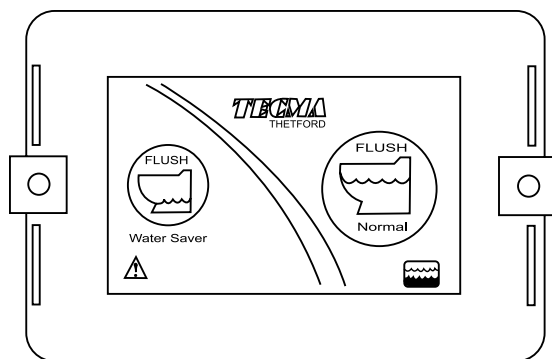

040466e

Water Saver Flush:

- Press and release left button.

Recommended for flushing liquids and small amounts of toilet paper only.

Normal Flush:

- Press and release right button.


Recommended for flushing solids and toilet paper.

Empty Bowl:

- Press both buttons simultaneously and release. This empties the bowl and leaves it dry for travel.
- Press either button once to add water and return to normal use.

Programming Water Level

The water level in the bowl can be programmed. The minimum recommended refill level is ½" above the bowl outfall hole (see illustration). It may be necessary to reset the water level after switching water sources (from city to fresh tank or vice versa).

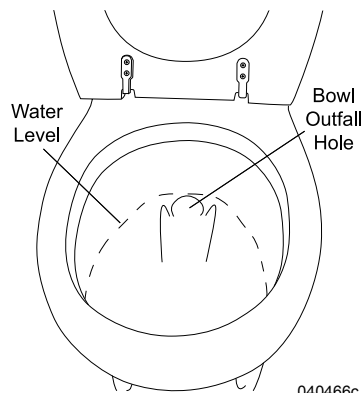

040466c

Setting the water level:

- Press both buttons and hold.
- The LED's will flash, indicating the toilet is in program mode.
- As water enters the bowl, release buttons to set the level of standing water in the bowl. The level will remain constant after each flush until a water source of different pressure is used.

Tank Level Sensors

The Tecma toilet system includes a black tank level sensor. The water icon located in the bottom right corner of the control panel denotes tank level and system status.

Icon Status	Meaning
Off	System is off, in sleep mode or not receiving power.
Green	System is on and black tank is half full or less.
Yellow	System is on the black tank is at least half full.
Red	System is on and holding tank is full.

Full Tank Lockout:

The toilet will not flush when the system senses a full tank. This will prevent system backup and occurs when the Water Icon is red.

LED Sleep Mode:

An automatic sleep mode will save power consumption when the system is not in use for eight hours. The keypad's LED lights will go out. Press any button to flush and reactivate backlighting.

DRAIN TRAPS & AUTO VENTS


Sinks, shower and clothes washer drains incorporate a water trap (P-Trap) and auto vents to prevent waste water holding tank odor from entering the motorhome.

Drain Traps:

P-Traps are usually within 54" of a vent tee and must contain water to block odors. During storage water can evaporate and allow odor into the motorhome. If odor is detected, run water into sinks, shower and clothes washer to fill P-Traps.


Auto Vents:

The auto vent is designed to assist in the smooth flow of water in the drain without creating a vacuum. If stuck in the open position, the auto vent can allow grey odors to enter the motorhome. Some auto vents can double as “clean outs” in the event the line needs to be snaked out.

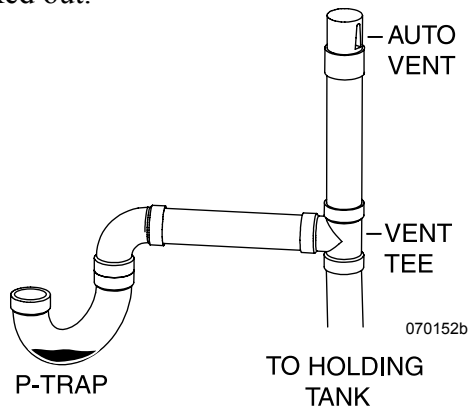

Water Center Heater

A small Aqua Hot heat exchanger is located in the water service center to help prevent freezing in the water service center. The Aqua Hot supplies coolant to the heater and must be turned on to supply heated coolant to the exchanger. Turn on the Aqua Hot when freezing temperatures may occur.

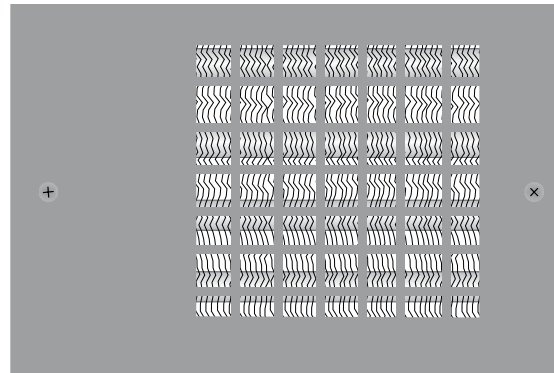

Water compartment heat exchanger 040646ca

CAUTION:

The heat exchanger is designed to help prevent freeze damage in cold temperatures. The system is not designed to prevent freeze damage in extreme cold or Arctic temperatures. If in doubt, Winterize the water system.

Cold Weather Storage

If the motorhome is stored where freezing temperatures may occur, drain the domestic fresh water loop. Begin draining the fresh water tank by opening the low point drain for the fresh tank and allowing the water to drain.

NOTE:

Icemakers, water filters, water heater and optional Aqua-Hot all use domestic water. They should be drained and stored in accordance with the manufacturer’s recommendation for winterization.


COLD WEATHER CONDITIONS

The motorhome is not designed for extended use in below freezing (32° F./0° C.) weather. There are precautionary measures that can be taken during extended cold weather use.

Interior water lines, fixtures, and drains above the floor are normally protected from moderate freezing temperatures as long as the furnace is operating. Cold temperatures can adversely affect water systems below the floor level because the propane furnace does not provide heat to these components. A supplemental 12 Volt DC bay heater is located in the water service bay.

System Operation:

1. Turn on the Aqua Hot.
2. The exchanger fan is controlled by a thermal snap disc that will activate when bay temperature lowers to approximately 45° F. (+/- 10° F.). The exchanger fan will continue to operate until bay temperature reaches approximately 55° F. or if/when the Aqua Hot is turned off.

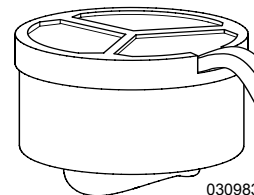

Thermal snap disc

WINTERIZATION

Water, plumbing and sewer systems require winterization when the motorhome is placed in storage. The recommended method of winterizing the motorhome is using air pressure to remove liquids that may freeze and cause damage to the various systems and appliances. The lines can then be left empty or filled with an FDA approved RV antifreeze.

When plumbing lines are drained, antifreeze is not necessary and the decision to use antifreeze is left to the motorhome operator.

WARNING:

Freeze damage is not covered under warranty.

CAUTION:

It is recommended that a qualified RV service technician familiar with motorhomes, such as an authorized dealer, perform the winterizing procedure.

WARNING:

Turn off the Aqua-Hot and allow it to cool before beginning the winterization procedure. Hot water can result in burn injuries.

NOTE:

Some items (optional and otherwise) such as the Aqua-Hot, icemaker and washer-dryer require individual winterizing procedures. Refer to all OEM manuals for winterization instructions and procedures.

POISON:

Use only non-toxic FDA approved RV antifreeze that is specifically made for potable water systems. Automotive antifreeze, if ingested, can cause blindness, deafness or death.

Using Air Pressure

Access to an air compressor and an adapter to connect the air pressure regulator to the water system is necessary. Air adapters used for winterizing are available at RV supply locations. Air pressure should not exceed 40 PSI. Higher pressure can damage the lines.

1. Empty and flush the holding tanks.
2. Drain the fresh water tank by opening the drain valve located in the water service center behind termination valves.
3. Open hot and cold low-point drain valves. Open a faucet to break vacuum and let water drain.

WARNING:

Ensure the water is not hot when opening the low-point drain valves. Hot water can cause burn injuries.

4. Remove water filter. Empty water from filter bowl then reinstall filter bowl without filter.
5. Close faucet and low point drains.
6. Connect an air hose with pressure regulator to the potable hose. Turn the City Water/Fresh Tank Fill lever to City Water. Set regulator for 40 psi and turn on air.
7. Individually open faucets, hot and cold, until only air comes out. Ensure to open water service center faucets.
8. Hold the toilet flush mechanism open until the water has stopped running.
9. Open hot and cold low point drain valves. Allow remaining water to purge from system then close drain valves.
10. Remove water filter bowl and do not re-install.
11. Disconnect the air hose.
12. If applicable winterize the washer-dryer (see washer-dryer “Winterize”). Winterize the Aqua Hot domestic water loop (see Aqua Hot “Winterize” and OEM manual).
13. Use one (1) gallon of FDA approved RV antifreeze to protect various water drain lines in the motorhome. Pour one pint into both the kitchen and bath shower drains. Pour two pints into the bath sink drain. This will protect the P-Traps, with some of the antifreeze going into grey tank to protect the drain valve. Open the valve on the toilet. Pour another three pints into the toilet, letting the antifreeze run into the black tank to protect the drain valve. Use a soft cloth to wipe out the sinks, shower and toilet (after the antifreeze is poured in) to protect the surfaces from stains. Pour the last pint into the washer-dryer drain.

Using Nontoxic Antifreeze

Approximately eight gallons of FDA approved RV antifreeze will be needed to winterize the motorhome.

POISON:

Use only non-toxic FDA approved RV antifreeze that is specifically made for potable water systems. Automotive antifreeze, if ingested, can cause blindness, deafness or death.

CAUTION:

Ensure the fresh water tank is completely drained as antifreeze will not enter the fresh water tank.

NOTE:

Some items (optional and otherwise) such as the Aqua-Hot, icemaker and washer-dryer may require special instructions. Check all OEM manuals for instructions and recommendations.

1. Empty and flush the holding tanks.
2. Remove water filter bowl. Discard filter cartridge and empty remaining water. Screw filter bowl (without cartridge) onto filter head.
3. Drain the fresh water tank and close the tank supply valve to the water pump.
4. Open hot and cold water low point drains.

WARNING:

Ensure the water is not hot when opening the low-point drain valves. Hot water can cause burn injuries.

5. Turn on the water pump until all the water is cleared out of the water pump, fresh water tank and low point drains then turn the water pump off.
6. If applicable, disconnect the water line to the icemaker.
7. Close hot and cold water low point drain valves.
8. Position the City Water/Fresh Tank Fill lever to the City Water position.
9. Insert winterization hose into antifreeze solution.
10. Position winterization valves as shown in diagram.
11. Turn on the water pump.
12. Individually open faucets, hot and cold, until a small amount of antifreeze appears. Ensure to open water service center faucets.
13. Hold the toilet flush mechanism open (flush toilet) until a small amount of antifreeze appears.
14. Use a soft cloth to wipe out the sinks, shower and toilet to protect surface from antifreeze stains.
15. Turn water pump off.

CAUTION:


Clean up antifreeze spills immediately to prevent permanent staining.

De-Winterization

To de-winterize: drain and fill the fresh tank with water. Connect the power supply line for the water pump. Switch the winterizing valves back to normal flow position. Operate all faucets, one at a time, until clear water is present. Add water to water heater. Install new water filters if so equipped.

NOTE:

The first two trays of ice from the icemaker may contain contaminants. Discard and replenish ice as necessary.

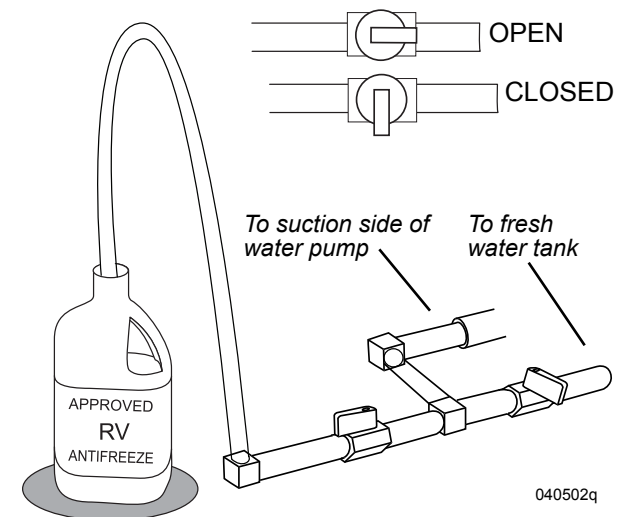

Valves shown in winterization position.

Prevent-A-Freeze System (Optional)

Depending on the size of the motorhome, as many as eight gallons of FDA approved, potable RV antifreeze will be added to the Prevent-A-Freeze storage tank. The storage tank is located behind the water service center. Remove the panel in the pass-through storage bay next to the service center to access.

POISON:

Use only non-toxic FDA approved RV antifreeze that is specifically made for potable water systems. Automotive antifreeze, if ingested, can cause blindness, deafness or death.

CAUTION:

Ensure the fresh water tank is completely drained as antifreeze will not enter the fresh water tank.

NOTE:


Some items (optional and otherwise) such as the Aqua-Hot, icemaker and washer-dryer may require special instructions. Check all OEM manuals for instructions and recommendations.

NOTE:

Clean up spilled antifreeze immediately to prevent permanent staining.

1. Empty and flush the holding tanks.
2. Remove water filter bowl. Discard filter cartridge and empty remaining water. Screw filter bowl (without cartridge) onto filter head.
3. Drain the fresh water tank.

4. Open hot and cold low-point drain valves. Open a faucet to break vacuum and let water drain then close faucet and low point drain valves.
5. Fill the Prevent-A-Freeze storage tank (located curbside with fresh water tank) with FDA approved, potable RV antifreeze. It will be necessary to refill the storage tank as antifreeze is pumped through the system.
6. Set the Prevent-A-Freeze switch to “Winterize.”

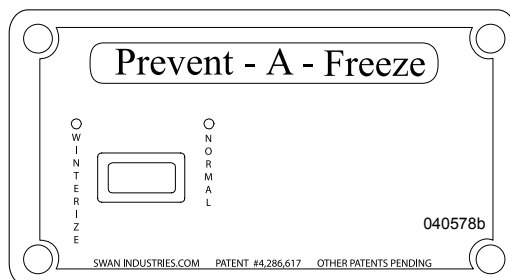

Located on service center panel.

7. Turn on the water pump.
8. Individually open faucets, hot and cold, until a small amount of antifreeze appears. Ensure to open water service center faucets.
9. Hold the toilet flush mechanism open (flush toilet) until a small amount of antifreeze appears.
10. Use a soft cloth to wipe out the sinks and shower to protect surfaces from antifreeze stains.
11. If applicable winterize the washer-dryer (see washer-dryer “Winterize”). Winterize the Aqua Hot domestic water loop (see Aqua Hot “Winterize” and OEM manual).


12. Turn the water pump off.
13. Open a faucet to relieve line pressure.
14. Leave Prevent-A-Freeze switch in “Winterize” position until de-winterization.

De-winterization:

1. Fill the fresh tank with water.
2. Turn Prevent-A-Freeze switch to Normal position.
3. Turn water pump on and operate all faucets one at a time until water is clear.
4. Open the shower faucets and toilet valves until clear water is present.
5. Install a new water filter.
6. If applicable, cycle icemaker several times until fresh water is present.
7. If applicable, operate washer-dryer to purge antifreeze from washer.


CAUTION:

The first two trays of ice from the icemaker may contain contaminants. Discard and replenish ice as necessary.

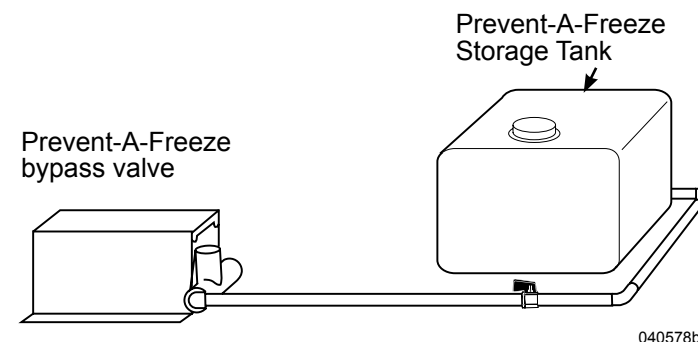

SERVICE CENTER


1. Power Hose Reel
2. Switches
3. Prevent-A-Freeze (Optional)
4. City Water/Fresh Tank Fill Valve
5. Exterior Faucet
6. Monitor Panel
7. Black Tank Flush Connection
8. Exterior Shower
9. Satellite, Cable & Phone Connection
10. Gravity Fill Port
11. Black Tank Termination Valve
12. Grey Tank Termination Valve
13. Sanicon Sewage Hose
14. Hot Water Low Point Drain Valve
15. Cold Water Low Point Drain Valve
16. Winterization Valve
17. Fresh Water Tank Shutoff Valve
18. Water Pump

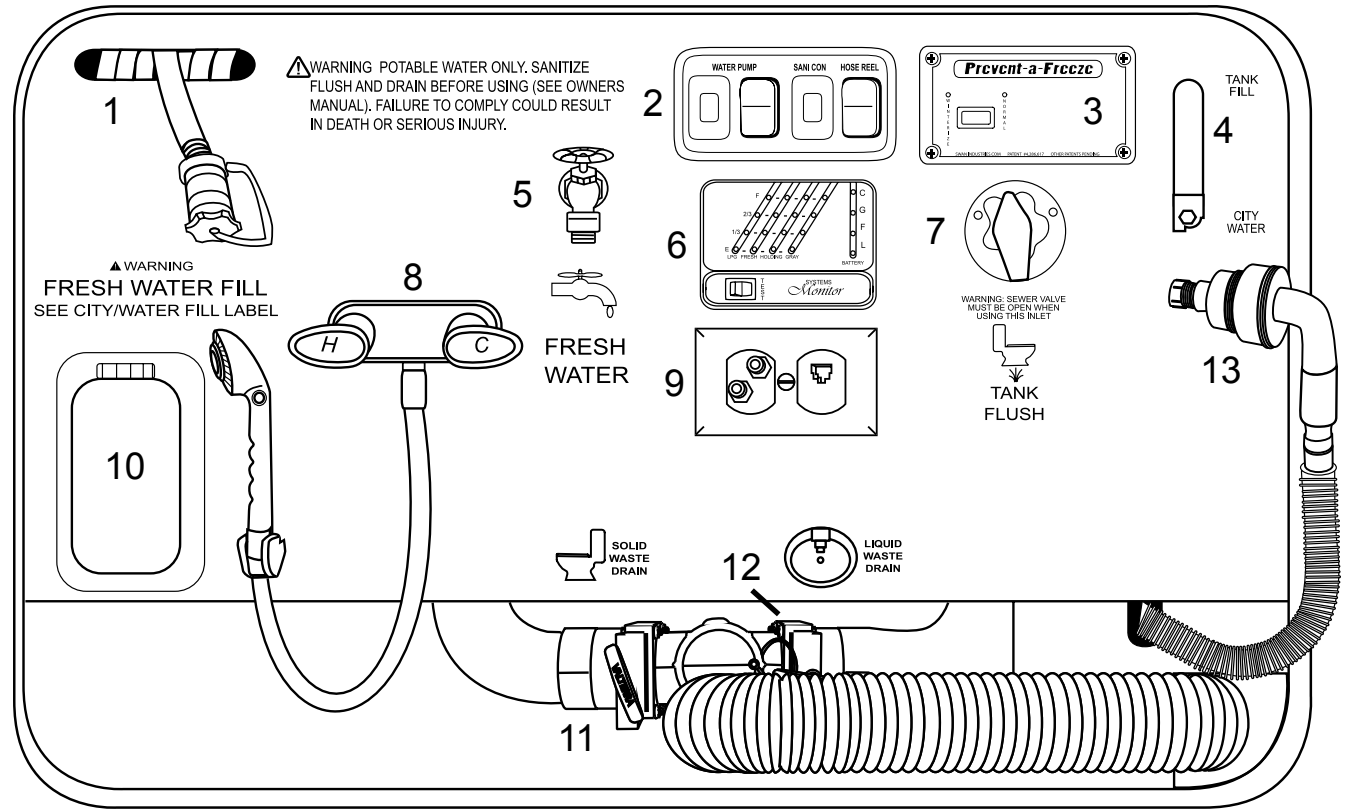

040596p

NOTE:

Layout of Service Center and location of components may vary with floor plans.

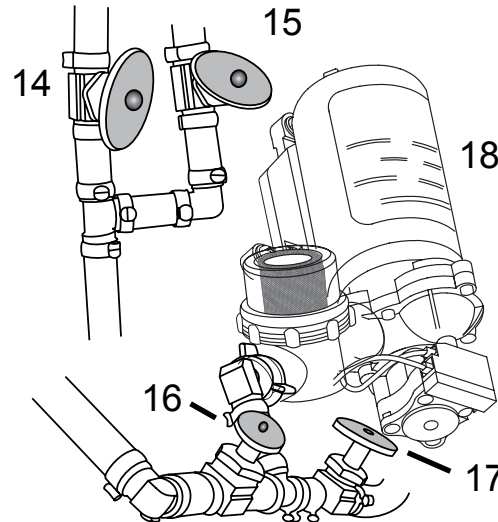

Propane Systems - Section 7



PROPANE SYSTEMS	144
PROPANE DETECTOR	145
Testing	145
Alarm.....	146
Maintenance	146
PROPANE EMERGENCY PROCEDURES.....	146
PROPANE TANK.....	147
Measurement.....	147
Tank Capacity	147
Tank Filling	147
Tank Operation	148
ACCESSORY HOOKUP	148
PROPANE FUNDAMENTALS	148
PROPANE REGULATOR.....	149
PROPANE HOSE INSPECTION.....	150
PROPANE DISTRIBUTION LINES	151
PROPANE CONSUMPTION.....	151
PROPANE SAFETY TIPS	152

PROPANE SYSTEMS

This section contains safety information and operating instructions for the propane system and related equipment in the motorhome. Some items discussed may not be applicable to all motorhomes. More detailed information with **CAUTION** or **WARNING** instructions for various equipment, other than items within this section, can be found in the equipment manufacturer's manual in the owner's information box.

NOTE:

Some appliance displays and appliance manuals may refer to LP-Gas as a fuel source; however, the actual fuel source used and required for these appliances is propane. The phrase "LP-Gas" is synonymous with not only propane, but butane and propane/butane mixtures. Since propane is the actual fuel required, the term "propane" will be used throughout this manual except for references to third party appliances (such as the refrigerator) that include the term "LP-Gas" on their displays or other literature.

The propane tank mounted in the curbside bay is under high pressure. As fuel is used, the liquid vaporizes and passes through the primary tank valve to a regulator that reduces pressure. Low-pressure gas is then distributed to components through a pipe manifold system.

Component ignition problems are commonly caused by air in the manifold system or incorrect gas pressure. **DO NOT** attempt to adjust the regulator. Adjustments must be made by a dealer or an authorized service personnel with the proper equipment. In higher elevations or extreme cold weather (10° F./-12° C. or lower) a shortage of propane may be experienced. If propane is going to be used in higher elevations or cold climates for a long period of time, have authorized service personnel adjust the propane regulator for these conditions.

Have the propane system tested by an authorized dealer or service center at least once a year and before every extended trip. The test will include having the system checked for leaks and the regulator pressure checked and tested for functionality. Although the manufacturer and dealer test the system carefully for leakage, travel vibrations can loosen fittings.

WARNING:

When storing portable propane tanks that are not connected to a propane system, install an approved plug in the tank outlet hole to prevent leaks. Do not store or transport empty propane tanks, portable tanks, gasoline or other flammable liquids in the interior area of the motorhome. Keep open flame and spark producing materials away from the propane area. Shut off all appliances and the primary propane tank valve when the motorhome is in storage. If this warning is ignored, a fire or explosion could result.

Leaks (identified by the odor of rotten eggs or sulfur) can be found by applying a leak detector solution on all connections. Never light a match, use an open flame or use any spark producing equipment or appliance to test for leaks. Leaks can usually be repaired by tightening the fittings. If not, shut off the primary gas valve at the tank. Hand-tighten the primary valve only. **Do not** use a wrench or pliers as over-tightening may damage valve seats and cause leaks. If a leak is suspected, immediately see an authorized dealer or service center for repairs.

WARNING:

Propane is highly volatile and extremely explosive. Do not use matches or a flame to test for leaks. Only approved propane leak testing solution for leak detection should be used. Unapproved solutions can damage copper tubing and brass fittings. A liquid dish soap solution of 10 parts water may be used. Shake the solution until bubbles form and then apply the mixed solution to fittings and accessory control valves. All fittings tested should be thoroughly rinsed and dried after testing. Never attempt to adjust propane regulators. Only qualified service personnel should perform maintenance or repairs to the propane system.

NOTE:

It may be illegal to travel in some states and Canadian provinces with the primary propane valve open. Failure to comply with these State and Canadian province requirements may result in fines and/or pose a safety hazard.

PROPANE DETECTOR

The propane detector is required safety equipment in RVs. American National Standards Institute (ANSI) **1192 - Fire & Life Safety, 6.4.8, Propane Detectors** states:

“All recreational vehicles equipped with a propane appliance and electrical system shall be equipped with a propane detector listed as suitable for use in recreational vehicles under the requirements of UL 1484 and installed according to the terms of its listing.”



Propane is heavier than air and will settle to the lowest point in the motorhome. The propane detector is also sensitive to other fumes, such as hair spray, which may contain butane as the propellant. Butane, like propane, is heavier than air and will settle to the floor level. Sulfated batteries (rotten egg odor) will also sound the alarm. When this occurs, reset the detector to stop the alert sound.

About the Propane Detector:

Be aware of the difference between a leak versus propane escaping from an unlit, open burner. Pure propane vapors from a leaking pipe or fitting are heavier than air and will build up heaviest concentration at the leak and float down to mix with air. If a burner is left on, the area around the burner, range and adjoining counter space is

combustible and can cause injury and damage when ignited. This condition will exist for an extended time. Eventually, propane will reach the detector’s location and cause the alarm to sound.

NOTE:

The propane detector indicates the presence of propane only at its sensor. Combustible levels of propane may be present in other areas. The detector is intended for detection of propane only.

The propane detector is not designed to detect other types of gas. However, some products may cause the detector to alarm, such as alcohol, liquor, methane, kerosene, gasoline, deodorants, colognes, propellant used in spray cans and cleaning solvents. In some cases, vapors from glue and adhesive used in the manufacturing of the motorhome may also cause the detector to alarm for several months after the date of manufacture. If it is determined that the detector has false alarmed because of the above mentioned nuisance gases, reset the detector and ventilate the motorhome with fresh outside air. Take precautions to ensure one of these cases has not masked an actual propane alarm condition.

The propane detector draws less current than one instrument panel lamp and will detect gas until the battery is drained down to 7.0 Volts. A voltage higher than 7.0 Volts is needed for the detector to operate properly. If the power source is disconnected, or if the power is otherwise interrupted, the detector will not operate.

The propane detector has a self-check circuit running at all times while the detector is powered. In the event that the circuitry fails, a failure alarm will sound and the operating indicator will cease to light.

Propane Detector Operation:

Upon first application of power the LED will flash yellow for three minutes as the detector is stabilizing. At the end of the start cycle the LED will turn green, indicating full operation. If the detector senses unsafe levels of propane it will immediately sound an alarm. The propane detector draws power from the chassis batteries at a rate of less than 1/10th of one amp.

CAUTION:


The detector will not alarm during the three minute warm up cycle.

Testing

Press the TEST switch any time during the warm up cycle or while in normal operation. The LED will turn red and an alarm will sound. Release the switch. This is the only way to test full operation of the detector.

WARNING:

Test the operation of this detector after the motorhome has been in storage, before each trip and at least once per week during use.

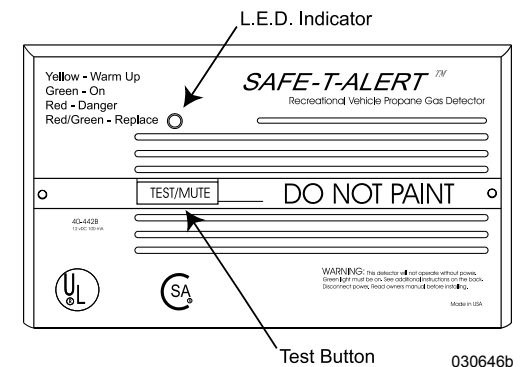

Alarm

The red LED will flash and the alarm will sound whenever dangerous levels of propane or natural gas are detected. The detector will continue to alarm until the gas clears or the **Test/Mute switch** is pressed.

Alarm Procedures:

1. Turn off all propane appliances (stove, water heater, furnace, refrigerator), extinguish all flames and smoking material. Evacuate immediately. Leave doors and windows open.
2. Turn off primary valve on propane tank.
3. Determine and repair the source of the leak. If necessary, contact a qualified professional for service.

WARNING:

DO NOT operate any electric switch. This can produce a spark and ignite the gas.

CAUTION:

DO NOT re-enter until the problem is corrected.

Alarm Mute:


Press the **Test/Mute switch** when the detector is in alarm.

1. The red LED will continue to flash and the alarm will beep every 30 seconds until the gas level has dropped to a safe level.

2. The LED will flash green until the end of the Mute cycle.
3. If dangerous gas levels return before the end of the Mute cycle, the alarm will beep four times and return to phase 1.
4. After two minutes the detector will return to normal operation (solid green) or resound the alarm if dangerous levels of gas remain in the area.

Fault Alarm:

Should the microprocessor sense a fault in the gas detector, a fault alarm will sound twice every 15 seconds. The LED will alternately flash red to green and the **MUTE** switch will not respond to any command. The gas detector must be repaired or replaced.

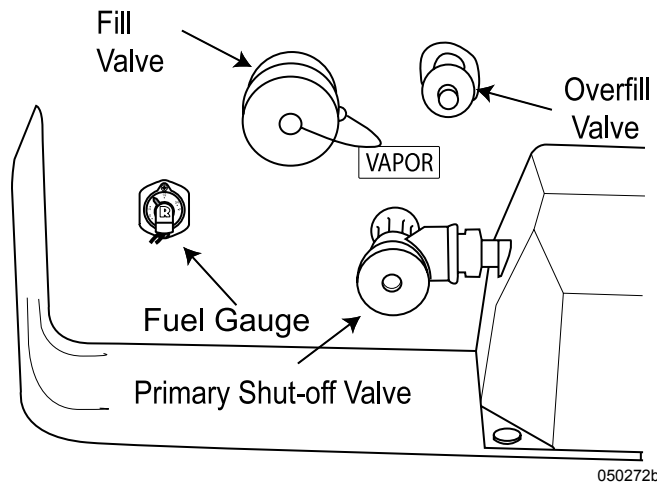

Maintenance

1. Vacuum the dust off the detector cover weekly (more frequently in dusty locations) using the soft brush attachment of a vacuum.
2. **Do not** spray cleaning agents or waxes directly on the front panel. This can damage the sensor, cause an alarm or cause a detector malfunction.

PROPANE EMERGENCY PROCEDURES

If you smell gas (a rotten egg or sulfur smell) at any time, perform the following steps immediately:

WARNING:

A fire or explosion from ignited gas or fumes can cause serious injury or death.

Emergency Procedures:


- Shut off propane appliances.
- Manually turn off the primary shut-off valve at the propane tank.
- **Do Not** operate any electric switch. This can produce a spark and ignite the gas.
- Open windows and doors.
- Evacuate the motorhome. Stay clear of the surrounding area.
- Keep all ignition sources out of the area.
- Contact a qualified service technician to find the source and repair the gas leak.

POTENTIAL SOURCES OF PROPANE LEAKS WHEN OPERATING THE MOTORHOME

- | | |
|---|--|
| <ul style="list-style-type: none"> • Cooktop Burners • Oven • Refrigerator | <ul style="list-style-type: none"> • Defective Propane Connection • Defective Regulator • Portable Propane Powered Appliances/Accessories |
|---|--|

PROPANE TANK Measurement


The propane tank level can be monitored from the hallway monitor panel, the propane tank gauge and an monitor panel in the water service bay.

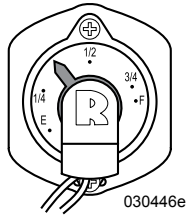

030446e
Propane Tank Gauge: Located on the propane tank.

To display tank level on monitors:


Press the Tank Test switch located on the hallway monitor panel or the monitor panel in the water service bay. Observe the indicator lamps corresponding to the propane tank.

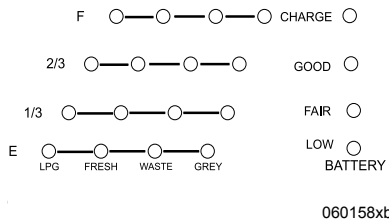

060158xb



Hallway Monitor

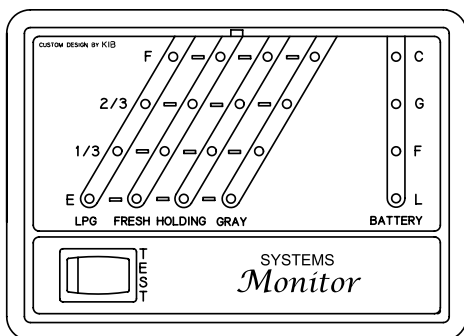

Water Service Center Monitor

030446e

Propane Tank Capacity
*31 Gallons
<i>*Actual filled propane capacity is 80% of listing due to safety shut-off required on tank.</i>

Tank Capacity

NOTE:
This chart reflects product specifications available at the time of printing.

NOTE:
Propane tank capacity is estimated based on calculations provided by the tank manufacturer and represents approximate capacity. The actual “usable capacity” may be greater or less than the estimated capacity. Actual full liquid capacity is 80% of full tank capacity.

Tank Filling

Woodall’s Campground and Trailer Guide, and other similar publications, list refueling stations. Many travel parks sell propane. Before filling the propane tank, shut off pilot lights, appliances and igniters to prevent a fire or explosion. Have a trained service person fill the propane tank.

WARNING:
Turn off all pilot lights and propane operated appliances before entering a refueling station. Most propane appliances used in motorhomes are vented to the outside. Fuel vapors can enter those vents when a motorhome is parked close to a gasoline pump, resulting in an explosion or fire.

WARNING:
Extinguish all sources of heat, sparks, flames and smoking materials within a 50’ radius during the fueling process.

The propane tank fill is located in a curbside compartment. The tank must be filled to the proper level to allow for expansion. An overfilled tank may cause the safety valve to release pressure emitting a strong rotten egg odor near the tank and/or a hissing noise may be detected.

WARNING:
Small amounts of propane can escape and evaporate during the fueling process. Protect bare skin. Instant freezing will occur if exposed to liquid propane.

Propane exists in both liquid and vapor form within the tank. A full tank is approximately 80% liquid. The pressure inside the tank varies with the temperature of the liquid. All tanks are required to have a safety pressure relief device to release excess pressure. When the tank is full, the gauge on the tank will only read 3/4. The monitor panels are adjusted to indicate full at this point.

NOTE:
If the tank is new and being filled for the first time, inform the service technician to purge any air from the tank prior to filling.

Tank Operation

- Manually open the primary shut-off valve located on the propane tank.
- Turn off the primary valve on the propane tank when the tank is being filled, when driving, in between trips and when in storage.
- Hand-tighten the primary valve only. **Do not** use a wrench or pliers. This will over-tighten the valve. The primary valve is designed to be closed by hand. Over-tightening may permanently damage the valve seat.

NOTE:

In some States and Canadian provinces, it may be illegal to drive the motorhome while primary valve on the propane tank is open.

ACCESSORY HOOKUP


An auxiliary remote propane hookup is for external propane accessories and to be used for external components only. For safety, only approved propane quick disconnect fittings and flexible hose should connect external accessories to the remote hookup. A propane quick disconnect fitting should be installed by a qualified agency as defined in the National Fire Protection Association NFPA (Fire) 54-02 code.

The exterior propane line hookup prep is located in a curbside compartment.

WARNING:

Check for leaks on all connections each time the remote hook-up is used. If a leak is detected, turn off the primary valve at the main propane tank. Contact a qualified service center for the necessary repairs.

CAUTION
SHUT OFF GAS SUPPLY BEFORE DISCONNECTING APPLIANCE.
ATTENTION
COUPER LE GAS AVANT DE DECONNECTER L'AAPAREIL

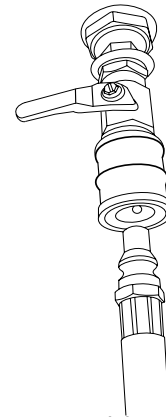

Propane quick disconnect located in curbside bay 050285


PROPANE FUNDAMENTALS

#Capacity	Gallon Capacity	BTU Capacity
5	1.18	107,909
10	2.36	215,807
11	2.59	237,387
20	4.72	431,613
30	7.08	647,420
40	9.43	863,226

The above capacities allow for 20% vapor space on each cylinder. Data taken from the National Fire Prevention Association (NFPA). Pamphlet #58-1998.


CONVERSIONS

Gallons to Liters (1 Gallon = 3.785 Liters)
 Fahrenheit to Celsius (F° - 32 ÷ 1.8 = C°)
 11 in. Water Column = 6 1/4 ozs. per sq. in. pressure.
 27.7 in. Water Column = 1 lb. per sq. in. pressure.

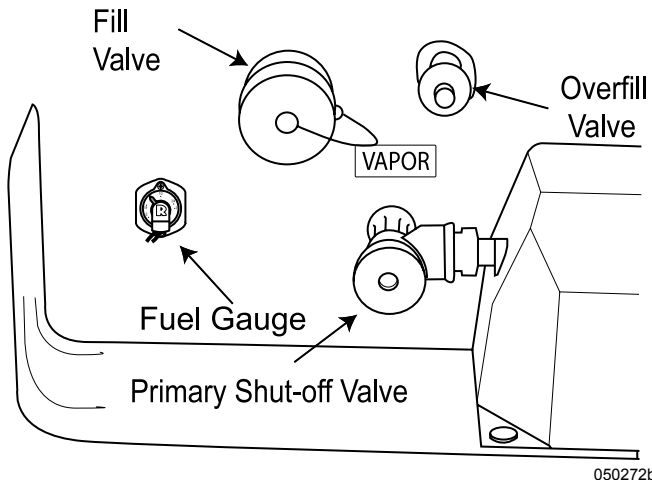

050272b

 QUICK DISCONNECT FITTING



NOTE:
COUPLING TO BE INSTALLED BY A QUALIFIED AGENCY AS DEFINED IN THE NATIONAL FUEL GAS CODE (NFPA 54)

INSTALLATION INSTRUCTIONS

- 1) INSTALL SOCKET WITH SHUT-OFF VALVE ON THE GAS SUPPLY SIDE
- 2) INSTALL PLUG ON THE ACCESSORY SIDE
- 3) LEAK TEST USING SOAPY WATER SOLUTION

OPERATING INSTRUCTIONS

TO CONNECT:

- 1) CLOSE SHUT-OFF VALVE
- 2) PULL SOCKET SLEEVE BACK
- 3) INSERT PLUG; RELEASE SLEEVE
- 4) PUSH PLUG INTO SOCKET UNTIL SLEEVE SNAPS FORWARD
- 5) OPEN SHUT-OFF
- 6) LEAK TEST USING SOAPY WATER SOLUTION

TO DISCONNECT:

- 1) CLOSE SHUT-OFF VALVE
- 2) TO RELEASE PLUG, PULL SLEEVE BACK AWAY FROM PLUG; PULL OUT PLUG
- 3) INSERT PLUG; RELEASE SLEEVE
- 4) LEAK TEST USING SOAPY WATER SOLUTION

! WARNING

Hazardous vapors, explosive and flammable gas.
Can cause suffocation severe injury or death.

020155b

020155b

PROPANE STATISTICS	
Pounds Per Gallon	4.24
Specific Gravity of Gas	1.50
Specific Gravity of Liquid	.504
Cubic Feet Gas Per Gallon of Liquid	36.38
Cubic Feet Gas Per Pound	8.66
BTUs Per Gallon	91,502
BTUs Per Gallon	21,548
Dew Point in Degrees Fahrenheit	-44° F
Vapor Pressure at 0° F	31
Vapor Pressure at 70° F	127
Vapor Pressure at 100° F	196
Vapor Pressure at 110° F	230
Flash Point	842° F

BASIC FACTS ABOUT PROPANE
<ul style="list-style-type: none"> • Propane detectors are a federal requirement on all propane equipped recreation vehicles. • Propane is a by-product produced by refining oil. • Odor is added to propane after the refining process for the purpose of detection. • Each liquid gallon of propane produces 91,502 BTUs (British Thermal Units). • Temperature affects pressure of propane. Internal tank pressure can exceed 200 psi. • Tanks or valves contain pressure relief valves. The relief valve opens at 125% above tank rating. • Propane stops vaporizing at -44° F. • Standard propane operating pressure is 11" of Water Column or approximately 6 ¼ ounces per square inch. • An inch of Water Column is a measurement of applied pressure to one side of a U-Tube ½ filled with water at sea level. The amount of pressure required to raise the water level 11", represents 11" of Water Column.

NOTE:

Propane fundamental information is not a complete guide for the use of propane tanks or appliances. In cold climates keep propane level above 50% to keep vaporization of propane at the highest level.

PROPANE REGULATOR

Propane is compressed into liquid form in the tank. Only the vapor is used during combustion by an appliance. As vapor is removed from the tank, the remaining liquid will vaporize to maintain pressure that is removed during consumption. This process will continue until there is no liquid remaining in the tank.

Temperature affects the vaporizing action of the liquid. If temperature of the liquid is - 44° F, the liquid remains stable with tank pressure, about 0 psi. If liquid temperature is 100° F, the liquid quickly vaporizes with tank pressure, about 200 psi. Vapor pressure must remain relatively consistent, regardless of temperature, for the appliance heat output to remain stable. Vapor pressure regulation is performed by the regulator.

The two-stage regulator reduces vapor pressure so that it is safe for use. The first stage of the regulator reduces tank pressure to a range of 10 to 13 psig (pounds per square inch gauge). The second stage further reduces pressure to a working pressure of 0.4 psig (11 Inches of Water Column or about 6¼ ounces psi.). A vent is installed to allow the internal diaphragm to move with atmospheric pressure change. It is important to keep the vent clean and clear of obstruction or corrosion. If the vent becomes clogged, pressure from the propane tank may cause erratic pressure regulation. If there is any corrosion, contact a qualified propane service technician. The regulator is mounted so that the vent faces downward. If the vent becomes clogged, clean it with a toothbrush.


Under normal atmospheric conditions a propane regulator will not freeze, nor will propane. Vapor passing through the regulator will expand and cool, condensing moisture in the gas. The moisture will freeze, build up and block the vent. The possibility of freeze up is greatly reduced with the two-stage regulator.

To Prevent Freeze Up:

- Ensure the propane tank is totally free of moisture prior to filling.
- Ensure the tank is not overfilled.
- Keep the valve closed when the tank is empty.

If A Freeze Up Occurs:

- Have a propane distributor purge the tank.
- Have the propane distributor inject methyl alcohol in the tank.

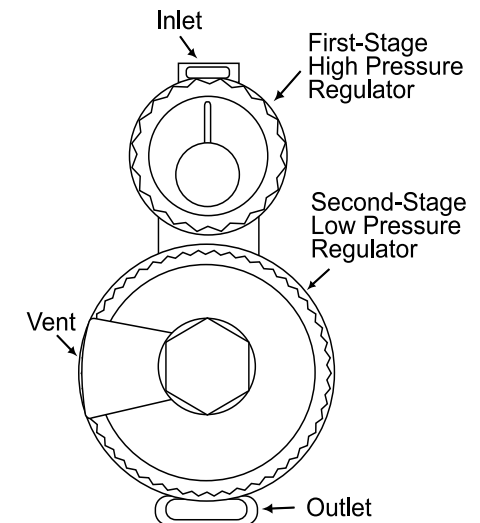

050251a


Damage to the regulator can occur when the tank is overfilled. The regulator is designed to work with vapor only. This is why the tank is filled to only 80% of its liquid capacity. The other 20% allows for vaporization of the liquid. The primary vapor valve is located in the vapor section of the tank. In an overfilled tank, liquefied petroleum can fill the regulator. Vaporizing liquid can freeze the diaphragm. High tank pressure on a frozen diaphragm can cause a rupture and result in erratic pressure regulation. This is why it is important to have the propane pressure checked for proper pressure and accurate regulation during appliance operation. Erratic pressure regulation dramatically affects refrigerator operation on propane.

WARNING:

Do not attempt to adjust the regulator. Adjustments require special equipment. Failure to follow these instructions may result in a fire or explosion, and can cause severe personal injury or death. Do not operate propane appliances until the propane pressure is checked and a leak down test is performed.

Manometers:

The manometer is the best way to accurately determine propane pressure. Two different styles of manometers are gauge and U-Tube.

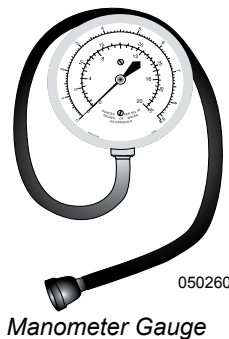


Manometer Gauge

TIP:

Attach the manometer gauge to the accessory hookup line to avoid loosening any interior propane line connections.

Gas pressure is measured in Inches of Water Column. This is the amount of pressure applied to one side of a U-shaped tube half filled with water. The amount of pressure needed to raise the column of water 11" represents 11 Inches of Water Column.

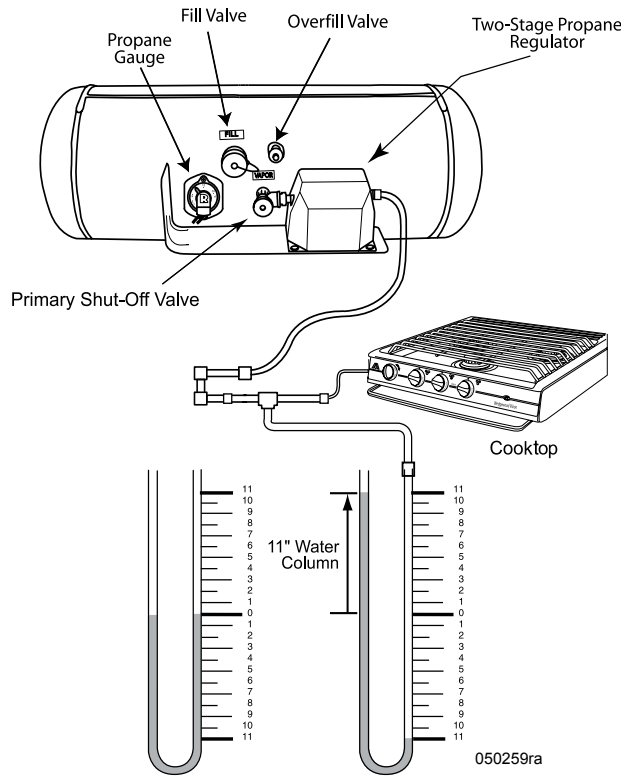

U-Tube Testing Layout

PROPANE HOSE INSPECTION

The hose manufacturer suggests that a flexible propane supply hose undergo regular inspection. As a guideline, we suggest that all flexible propane lines connecting the slide-out, appliances and tanks be inspected in the spring and fall of each year by a qualified RV technician.

Inspection tips:

Hose strength is controlled by the plies of reinforcement. Damage in this area cannot be tolerated. It is important that if a damaged propane hose is found, the source of the damage be determined and corrected prior to the replacement. Small cuts, nicks, or gouges that do not go completely through the cover are not cause for replacement of the hose. Inspection should be performed when the hose is not under pressure.

NOTE:

Pricking of the cover in the manufacture of this type of hose is common and necessary for satisfactory hose performance. Consequently, the uniformly pricked cover should not be viewed with alarm.

Cause for hose replacement:

- Damage to the textile reinforcement or wire braid
- Wire braid reinforced hose that has kinked or been flattened so as to permanently deform the wire braid in the unpressurized state.
- Blistering or loose outer cover.
- Slippage evident by the misalignment of the hose and coupling and/or the scored or exposed area where slippage has occurred.

NOTE:


Only a qualified RV service technician should replace propane components.

Additional suggested maintenance:

After performing extensive testing the manufacturer of the flexible propane supply hoses has determined that the hoses be replaced every ten (10) years as the failure rate may increase after this period of time. The motorhome manufacturer recommends following this guideline to assure continued safety and dependable use.

PROPANE DISTRIBUTION LINES

A primary manifold black steel pipe running throughout the motorhome distributes propane to secondary lines.

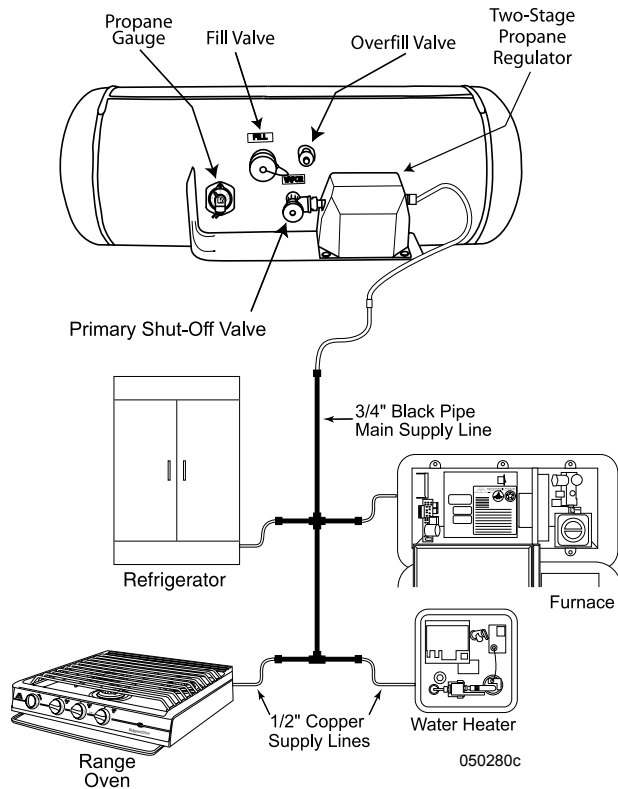

All secondary lines leading to gas appliances are usually copper tubing with flared fittings. It is recommended that gas distribution work be performed by an authorized dealer or an authorized service technician.

INSPECTION:
Inspect the rubber flexible lines twice a year for abrasions, tears, kinks or other signs of damage.

If a gas leak is suspected, have the system inspected and repaired by a qualified service technician as soon as possible.

PROPANE CONSUMPTION

Each gallon of propane produces 91,502 BTUs of heat. One 27 gallon tank produces two million BTUs. Total consumption depends on the rate of usage by each appliance and the operating time. The stove typically uses the most propane.

Determine Fuel Consumption:

To determine approximately how many hours a propane appliance will operate on one gallon of propane, use the following formula:

- Propane appliances are rated in Input BTU (British Thermal Units). The rating is usually stamped or printed on a tag affixed to the appliance. For example: the Input rating of the appliance is 10,000 BTUs.

- One gallon of propane produces 91,502 BTUs.
- Divide the amount of BTUs of one gallon of propane (91,502) by the rating on the appliance in this example 10,000. Net continuous operation time for one gallon of propane for this appliance would be approximately 9.2 hours.

The above formula can be useful when trying to determine the approximate length of time a tank of propane will last. Generally, propane appliances do not continuously operate. An example would be the typical cycling of the refrigerator.

Typical Appliance BTU Ratings

Cooktop

Burner - 9,000 BTU

Refrigerator (Norcold)

4-door - 2,200 BTU

Determining how long a tank of propane will last:

- Combine the BTU input totals of all appliances, and the approximate length of time these appliances operate per day.
- Multiply the number of liquid gallons in the propane tank by 91,502.
- Divide the total of BTUs of the propane tank by the total number of BTUs the appliances consume. This equals the approximate number of operation hours of before refueling.

PROPANE SAFETY TIPS

Propane is one of the safest and most reliable fuels available on the market when handled properly. Propane, however, does have a great explosive potential if handled improperly. Danger is minimized by becoming familiar with and following a few safety precautions, and by learning how to properly operate propane appliances. Use of propane requires the responsibility of enforcing extra safety measures.

The motorhome is equipped with many propane operated appliances because it is a convenient and efficient source of fuel. Propane appliances must be operated and maintained in accordance with the product manufacturer's instructions.

The National Propane Gas Association (NPGA) has a special service program called GAS[®] (Gas Appliance System) Check. The GAS[®] Check program is aimed at educating users about the convenience of propane with safety and peace of mind. For information on the **NPGA Gas[®] Check program**, call **(202) 466-7200** or visit **www.npga.org**.

Maintenance and Safety Tips for the Propane Refrigerator and Furnace:

- Have the refrigerator and furnace systems inspected annually by an authorized service center.
- Have the venting system checked for blockage before using the refrigerator or furnace for the first time each season. Insects may have built nests that will obstruct flow.
- At the first indication of incomplete combustion (yellow flame instead of a blue flame or soot is present) contact a service technician. Improper combustion can cause Carbon Monoxide buildup, which is potentially fatal.

Maintenance and Safety Tips for the Propane Range:

- Burner flame should be a blue color, which indicates complete combustion. If not, have the unit serviced by a qualified technician.
- **Do not** cover the oven bottom with foil. Air circulation will be restricted.

- Never use propane ranges or ovens for heating purposes.
- Ensure children understand never to turn or play with the knobs on the front of the propane range.

Maintenance and Safety Tips for the Propane Water Heater:

- Have the water heater venting system inspected annually or before first use of the season.
- Keep flammable substances away from the water heater. **Do not** store items close to it as this may block airflow that the water heater needs to operate efficiently.
- At the first indication of incomplete combustion (yellow flame instead of a blue flame or soot is present) call a service technician immediately. Improper combustion can cause Carbon Monoxide buildup, which is potentially fatal.

Electrical Systems - House Section 8



HOUSE ELECTRICAL - INTRODUCTION	154	INVERTER	161	LOAD CENTER - 120/240 VOLT AC	164
BATTERY DISCONNECT - HOUSE	155	Providing AC Power with Inverter.....	161	Power Control System	164
BATTERY CUTOFF	155	Battery Charging with Inverter	162	Circuit Breakers.....	165
SHORE POWER HOOK-UP	155	Auto Generator Start	163	GFCI Breakers & Outlets	165
Power Cord Reel	157	Factory Default Settings	163	DISTRIBUTION PANEL - HOUSE 12 VOLT DC...	166
TRANSFER SWITCH	158	Battery Temperature Sensor	163	FUSES & CIRCUIT BREAKERS - 12 VOLT DC...	166
GENERATOR - 120 VOLT AC DIESEL	158	Power Assist.....	163	Multiplex	168
Pre-Start Checks.....	159			BATTERIES - HOUSE	168
Starting the Generator	159			Battery Slide-Out Tray	168
Stopping the Generator.....	160			Battery Maintenance	169
Powering the Equipment.....	160			Testing the Battery	171
Generator Fuel.....	160			Charge Time & Consumption Rate.....	172
Resetting the Circuit Breaker.....	160			SOLAR PANEL (OPTIONAL)	173
Generator Exercise	161			Charge Controller	173
				Monitor	174
				Solar Panel Care	174
				LIGHTS	175
				Incandescent	175
				Interior Halogen.....	175
				ELECTRICAL SYSTEMS LAYOUT (TYPICAL)	176

HOUSE ELECTRICAL - INTRODUCTION

This section contains guidelines, procedures and information that will assist in understanding the domestic electrical system and the operation of various components. Refer to the OEM manuals included in the Owner's Information File box for their respective, in-depth component operating instructions.

General Overview:

The motorhome can utilize various sources of electrical power: shore power, the generator, inverter, solar panels (optional), chassis batteries, and domestic batteries. All of these electrical power sources, while independent of each other, can be combined in a variety of ways to provide a highly efficient electrical operating system. Two types of electrical voltages are used: 120/240 Volt AC and 12 Volt DC.

The motorhome 120/240 Volt AC system can be operated from three different power sources: shore power, the on-board generator, or the inverter/charger. Shore power is the most efficient and should be used whenever possible. The generator can be used when shore power is unavailable. The inverter/charger supplies silent AC power by using the house batteries. However, AC output of the inverter/charger is limited and should be used sparingly to conserve house battery power.

The AC load center (breaker panel) is divided into two sections; Main and Sub. A transfer switch automatically selects between shore power and the generator to supply the Main side of load center with power. The inverter supplies AC power to the Sub side of the load center. See the Load Center article for more information.

WARNING:

The electrical system is engineered and tested for complete safety. Circuit breakers and fuses protect the electrical circuits from overloading. When planning modifications or additions to the electrical system, it is strongly recommend consulting a qualified technician for assistance to ensure continued integrity and safety of the electrical system. Please note that any modifications to the electrical system may void the warranty.

WARNING:

Water is electrically conductive. Do not use any electrically powered item or electrical outlet that may be exposed to a water source. Such use can result in a serious electrical shock causing injury or death.

The motorhome has two 12 Volt DC systems: chassis and house. These two systems, for the most part, are separate from one another. The house system does not operate engine functions; the engine system does not operate house functions. However, within the two systems there are some inner connections. For example: While the motorhome is driven, the alternator maintains the charge on the house batteries. Likewise, while the motorhome is plugged into shore power, or the generator is running, the engine batteries are being charged. Each system will supply 12 Volt DC power to the 12 Volt DC (direct current) distribution panels.

The chassis and house systems have their own sets of batteries. The chassis batteries supply 12 Volt DC power to the front distribution panel located outside in the front roadside bay.

This panel contains mostly engine system circuits and wiring such as headlights, taillight, dashboard functions, gauges, etc. The house batteries supply 12 Volt DC power to the distribution panel located above the pilot's seat. These fuses are for the house interior lighting and appliances. Become familiar with these fuses and the items they operate.

With all the technological advancements taking place in the past several years, manufacturers have now incorporated electronics into these systems. It is important the 12 Volt DC systems are in proper working order. These systems, with their incorporated electronics, are voltage sensitive. Some items can be damaged if the DC voltage is not maintained within the designed specifications.

A majority of the lighting and appliances operate from 12 Volt DC. This is why the batteries must be charged and in good condition to ensure proper function of 12 Volt DC systems. While appliances such as the microwave or television are powered by 120 Volt AC; the inverter can use house battery power to supply these appliances with AC power. Chassis functions such as the engine, transmission, dash air, are also 12 Volt DC.

Shore Power:

The motorhome is equipped with a shore power cord to connect the motorhome to outside electrical services. Shore power service is the most efficient source of electrical power. The plug end of the shore power cord is 50 Amp, 240 Volt AC. When this type of power service is not available, electrical adapters are required to allow a proper and safe connection to the electrical service supply.

NOTE:

When 50 amp shore service is not available, care will have to be used when operating the appliances and using the outlets to avoid overloading the shore power service.

Generator:

The generator can be selected for use when shore power is unavailable. The maximum amount of generator output power, measured in watts, is calculated at an elevation of 500 ft. above sea level. This figure will decrease slightly at higher altitude. Ambient temperature also effects total maximum output. The amount of AC electrical load applied to the generator determines fuel consumption.


Inverter:

The Inverter is an auxiliary 12 Volt AC power source that inverts 12 Volt DC house battery power to 120 Volts AC. This device has limited AC power output, measured in watts, and operates only selected appliances and outlets. The Inverter also converts 120 Volts AC power, supplied from either shore power or the generator, to 12 Volts DC power to recharge the batteries. When dry camping, the Inverter can be used to supply power to selected outlets.

BATTERY DISCONNECT - HOUSE

The main house battery disconnect switch turns the house battery power supply on or off by disconnecting 12 Volt DC power to the following items: inverter, house multiplex fuse panel, domestic fuse panel in the front electrical bay and domestic power supply in the rear run box.

Turn the house battery disconnect switch off when the motorhome is stored for more than 48 hours or before performing electrical maintenance. If possible, leave the motorhome plugged into shore power with the battery disconnect switch on to help prevent the possibility of dead batteries. Use of this battery disconnect switch will not turn off all DC electrical items or other parasitic loads present on the house battery. Some are federal mandate items, such as the propane detector.

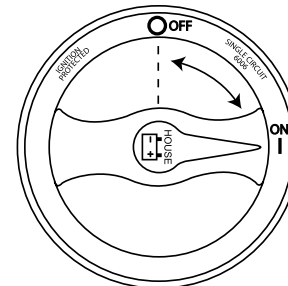

Located in rear curbside compartment.

NOTE:

The solar panel (optional) will charge the batteries with the disconnect switches off.


BATTERY CUTOFF

The battery cutoff switch is located inside the motorhome next to the entry door. This switch controls the 12 Volt DC power to the domestic fuse panel and Multiplex System. When the switch is activated, power is supplied to all interior DC lighting and DC operated appliances. Some appliances will require both DC and AC power to operate, such as the roof air conditioner. This switch is helpful when dry camping to conserve house battery power.

- Press the top of the switch to turn on interior 12 Volt DC house power.

- Press the bottom of the switch to turn off interior 12 Volt DC house power.

Refrigerator and inverter operation are unaffected by the use of this switch. When the interior house power is off, there are still parasitic loads on the house batteries; therefore, it is not a substitute for the main battery disconnect switch.

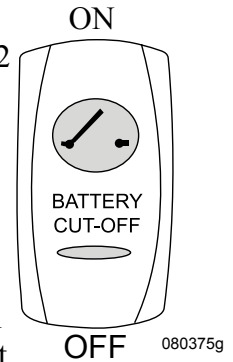**CAUTION:**

Avoid flash damage to electrical contacts. Turn off the interior lighting before operating the battery cutoff switch.

SHORE POWER HOOK-UP

The power requirement for the motorhome is 50 Amp 240 Volt AC single phase. The motorhome can be operated from 30 Amp 120 Volt AC, but with limited capacity. If 50 Amp shore power service is available, connect the supplied shore power cord. If less than 50 Amp service is available, electrical adapters are required and power consumption must be reduced to avoid tripping the shore power breaker.

CAUTION:


Avoid flash damage to the electrical system contacts. Before plugging the motorhome into shore power, starting the generator, or using the inverter, turn off all the appliances.

WARNING:

Keep fingers away from metal contacts of the shore plug end. Do Not stand in water when making electrical connections. Serious electrical shock and personal injury can occur. To avoid the risk of electrical shock, turn the circuit breaker off at the power supply outlet before making the shore power connection.

CAUTION:

Do not remove cover from the shore power supply to troubleshoot electricity to the motorhome. Serious personal injury or death may occur. Inform the park manager if there is no power to the motorhome. It is the park manager's responsibility to fix problems with the shore power pedestal.

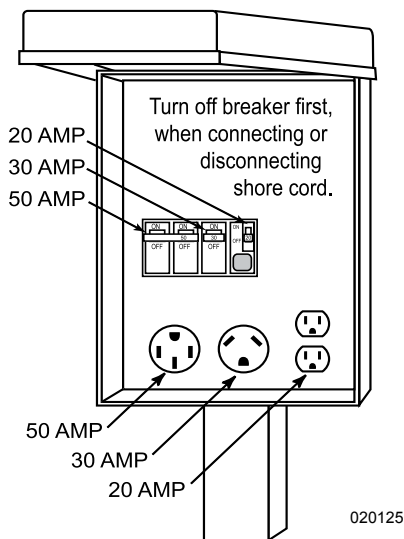

Typical Power Pedestal

Plugging in the Shore Cord:


- The shore power cord reel is located on the roadside rear. Grabs cord and extend a sufficient amount of cord to reach the power supply.
- If 50 Amp service is not available, install the proper electrical adapter(s) to the cord.
- Always turn **Off** the shore power breaker at the power supply before connecting or disconnecting the shore cord to avoid an accidental shock or flashing of electrical contacts.
- After the connection is made, turn the shore power breaker on. Refer to the Power Control Systems monitor to verify proper voltage.

When Hooked to 50 Amps:

After verifying proper voltage, wait approximately one minute for the inverter/charger to stabilize charging of the batteries before starting air conditioners or other large AC loads.



060203

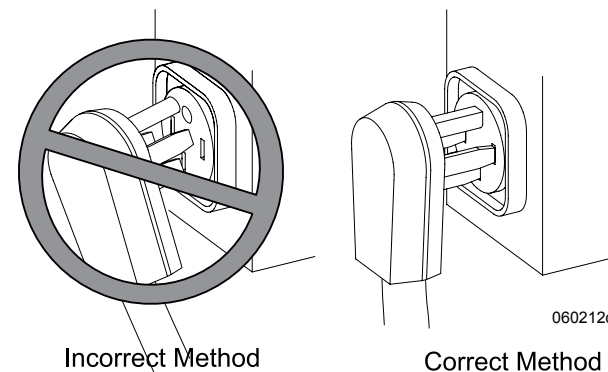**When Hooked to 30 Amps:**

If 50 Amp service is not available, wait approximately one hour before operating electric appliances. Use caution when operating appliances to avoid overloading the supplied shore service breaker. Operate appliances and outlets in sequence rather than all at the same time.

Disconnecting Shore Cord:

- Turn off all AC appliances.
- Turn off the shore power breaker to prevent accidental shock and flashing of electrical contacts when disconnecting.
- Grasp housing of electrical plug. Without touching electrical contacts, work plug out and away from socket.
- Straighten and clean the cord.
- Press the power cord switch to retract the cord or stow the cord in storage bay.

WARNING:

Avoid risk of electrical shock or component damage by disconnecting from shore power during electrical storm activity. Use the Inverter/Charger or start the generator if AC power is needed.


Power Supply:

Amperage supplies vary greatly depending on the amount of available current.


- The continuous amount of current through a breaker or fuse is only 80% of its rated capacity.
- 50 Amp 240 Volt AC shore power service consists of two power supply conductors, a neutral and a safety ground. The 50 Amp, two-pole breaker simultaneously limits each power supply conductor to no more than a short-term maximum of 50 Amps for each conductor. 50 Amp 240 Volt AC shore power actually provides 80 continuous amps.
- Use care when hooked to anything less than 50 Amp shore service. Shore power service less than 50 Amps consists of one power supply conductor, a neutral and a safety ground; 30 Amp shore service is limited to 24 continuous Amps; 20 Amp shore service is limited to 16 continuous Amps.

NOTE:


Three types of shore power outlets most commonly used are shown in the illustration.

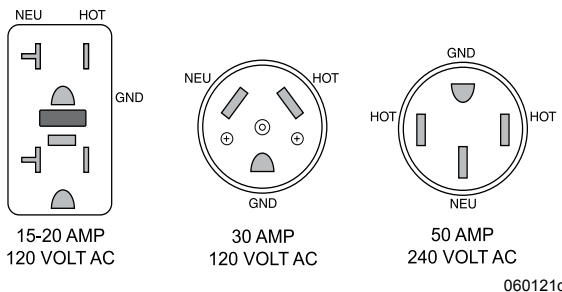

Electrical Adapters: There are many different electrical adapters available to suit a variety of needs. Use only UL approved adapters. Always install the adapter to the cord prior to making the connection to the outlet.

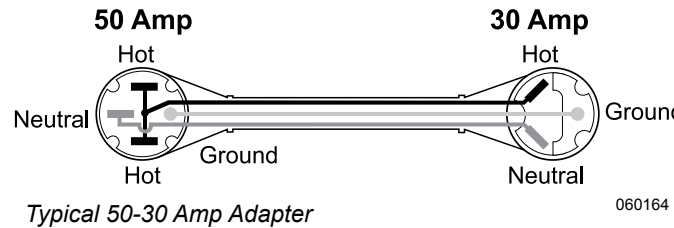

The most common adapter is a 50-30 Amp adapter. This type of connector adapts the 50 Amp shore cord to a 30 Amp shore power outlet.

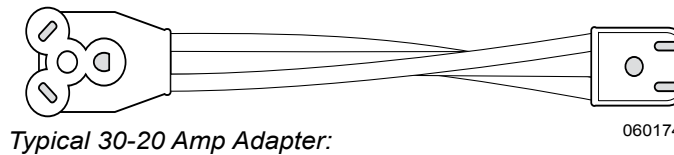

Another common adapter is the 30-20 Amp adapter. Always install the adapter to the cord prior to making the connection to the outlet.


CAUTION:

If shore power service is limited to 15 or 20 Amps, use of light duty extension cords and electrical adapters will create voltage loss through the cord and at each electrical connection. Line voltage loss and the resistance at each electrical connection can be a hazardous combination. Damage to sensitive electronic equipment may result.

Power Cord Reel

The Power Cord reel is a 12 Volt DC powered assembly that mechanically coils and stows the shore cord. The power cord switch operates a 12 Volt DC motor that retracts the cable.

Assist the cord when retracting. Stop retracting the cord when it is 6" from the opening. Retracting the cord too far will make it difficult to retrieve the cord. When connected to shore power, the cord should be slightly slack.

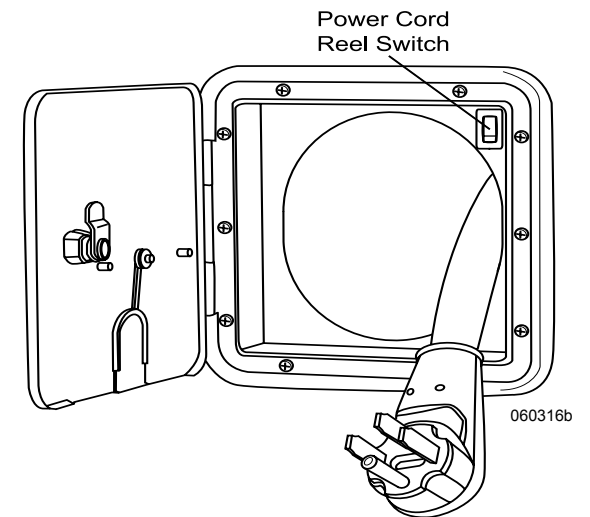

Maintenance:


Kinks may form in the shore power cable when only a short section is frequently used. Routinely extend the cable full distance and straighten the power cable on the ground to relieve kinking.

WARNING:

Before working on the electrical system, disconnect from shore power and turn off the Inverter/Charger. Disconnect the negative 12 Volt DC battery cables at the batteries. Remove rings, metal watchbands, and other metal jewelry before working around batteries and connectors. Use caution when working with metal tools. If the tool contacts a battery terminal or metal connected to it, a short circuit could occur causing personal injury, explosion, or fire.


TRANSFER SWITCH

The transfer switch automatically transfers AC power from the shore power cord or generator through the transfer switch to the 120/240 Volt AC breaker panel. When using the generator as a power source, the transfer switch engages a time delay before transferring power to the AC breaker panel. This allows the generator time to stabilize output voltage before applying an AC load. When operating the generator while hooked to shore power, the transfer switch automatically selects generator power as priority over shore power.

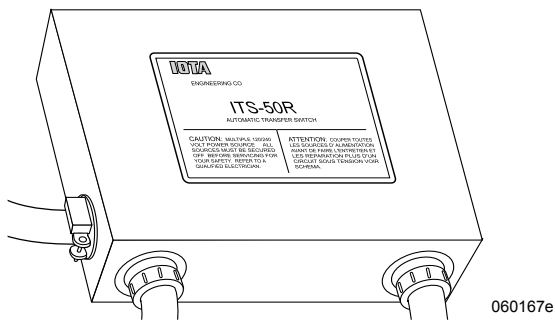

Transfer switch: located in pass-through storage bay.

The transfer switch is not a surge protector. Plug sensitive electronic equipment (such as laptops) into a surge protector for protection from power surges.

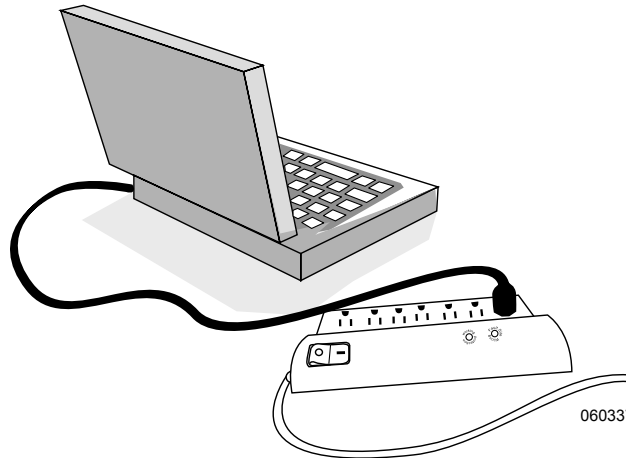**CAUTION:**

The transfer switch does not have surge protection or high/low voltage cutout.

WARNING:

Do not have appliances on or AC loads plugged into outlets when hooking to shore power or starting the generator. Damage to the transfer switch contacts may result. Low voltage operation may damage the transfer switch, appliances or other items plugged into outlets. Start the generator and disconnect from shore service until the shore service supply voltage stabilizes.

NOTE:

The shore cord is not electrically connected to the generator. When the generator is operating, the electrical contacts of the unplugged shore cord are not electrically energized.

GENERATOR - 120 VOLT AC DIESEL

The generator is located in the front compartment of the motorhome. To open the compartment, pull and release the manual locking mechanism handle located within the license plate access. To close the generator compartment, push the door closed until the slide mechanism latches.

INFORMATION:

For detailed operating instructions and information refer to the generator OEM manual.

The generator can be started from these locations:

- The generator remote switch on the dash.
- The generator switch located on the generator.
- The generator switch on the hallway systems control panel.
- Inverter remote panel.

Pre-Start Checks

Prior to the first start of the day, perform a general inspection including oil and coolant levels. Keep a maintenance log on number of hours in operation since the last service. Perform any service or maintenance that may be due.

WARNING:
Disable the Auto Gen Start feature before servicing the generator.


Before Starting the Generator:

- Clear people and animals from hazards of electrical shock and moving parts.
- All appliances and other large AC electrical loads must be off.

NOTE:
The generator may require priming. To prime, hold control switch in the Off position. Repeat if necessary. The diesel generator fuel pick-up tube is cut to approximately 1/4 tank so as not to run the main engine out of fuel.

Starting the Generator

Push and hold the control switch in **Start** position until the generator starts. Release switch. The switch may flash up to 15 seconds indicating engine preheat.

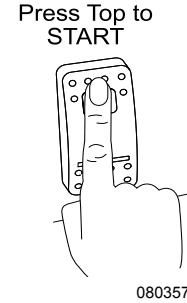

WARNING:
Excessive cranking can overheat and damage the starter motor. Do not crank the engine more than 30 seconds at any one time. Wait at least two minutes before resuming. If the generator fails to start, refer to the manufacturer's manual.

WARNING:
When parking near high grass, hot exhaust pipe or hot exhaust gases can ignite the grass.

CAUTION:
An exhaust extension adds weight and stresses the generator exhaust system. Damage to the exhaust piping or exhaust manifold can result allowing Carbon Monoxide gases to accumulate under or leak into the motorhome.

10 Kw

Start/Preheat

Indicator Light Flashes

Preheat	Rapid
High Temp	1
Low Oil Pressure	2
Service Required	3

SERVICE INFORMATION
Refer to operator's manual for maintenance specifications and adjustments.



Air Cleaner	-	140-3071
Oil Filter	-	122-0697
Fuel Filter	-	149-2513
Oil Capacity	-	6 Qts w/oil filter
API Designation	-	CE
Temp	SAE Viscosity	
5° - 120°F		15W-40
(-13°F) - 68°F		10W-30
(-40°F) - 68°F		5W-30

If service/parts are needed the Onan distributor can be located in the yellow pages under Generators-Electric. In the USA or Canada call 1-800-888-Onan DC Fuse & Radiator Cap Under Cover.

Total Hours 000000

060144p

10 Kw used on 42' models

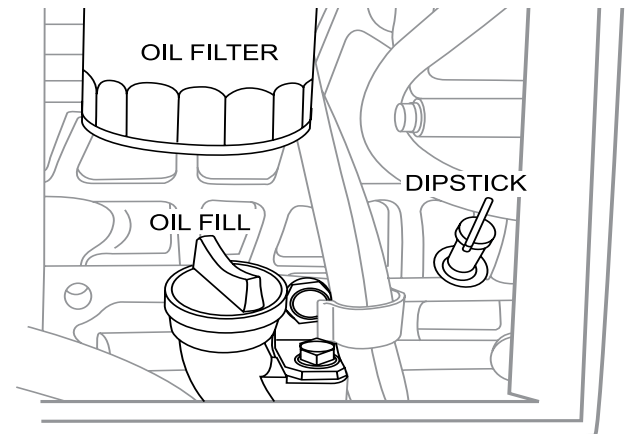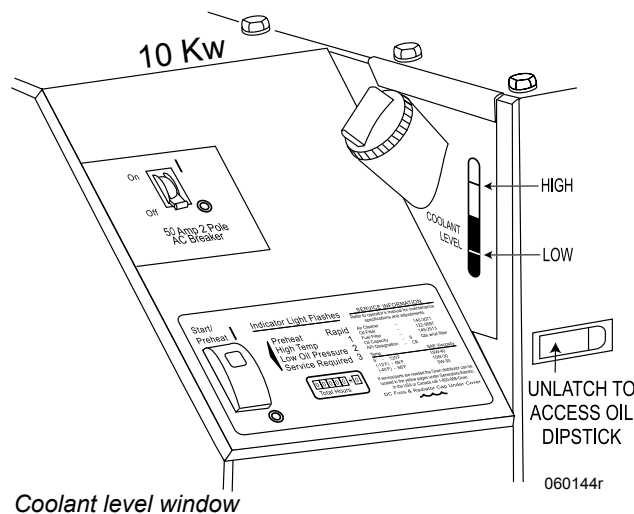

Oil dipstick located behind access door on generator.


090492

WARNING:

When the motorhome is parked, position the dash air conditioner vent control in the Off position to prevent exhaust gases from entering the motorhome. The engine exhaust contains Carbon Monoxide, which is an odorless and colorless gas. Carbon Monoxide is poisonous and can cause unconsciousness and/or death. Inspect the exhaust system thoroughly before starting the generator. Do Not block the exhaust pipe or situate the motorhome where the exhaust may accumulate either outside, underneath, or inside the motorhome or any nearby vehicles. Operate the generator only when safe dispersion of exhaust can be assured. Monitor the outside conditions to be sure that the exhaust continues to disperse safely.

Stopping the Generator

Turn off the appliances and disconnect other AC loads being used. Allow the generator to run unloaded for at least one minute before shutdown to allow the engine to cool. Momentarily push the control switch to the **Stop** position.

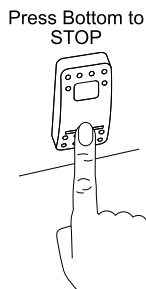

080357

Powering the Equipment

The AC output of the generator powers the motorhome air conditioners, the Inverter and all appliances and items plugged into the electrical outlets of the motorhome. The number of electrical appliances that can be operated at any given time depends upon how much power is available from the generator.

If the generator is overloaded or a short circuit causes over current, either the generator will shut down or the circuit breaker will trip.

If power consumption, in total, exceeds the generator power output, compensation for temperature and elevation may be necessary. Operate appliances in sequence, rather than all at the same time.

NOTE:

The generator may shut down when loaded nearly to full power and an air conditioner (or other large motor load) cycles on. Briefly during start up an electric motor can draw up to three times its rated power. For this reason it may be necessary to operate appliances in sequence when air conditioners or other large motor loads are on.

Compensation for temperature and elevation may also be necessary. Generator maximum output is rated at 500 ft. above sea level. Beyond this point the generator loses approximately 3.5% of its rated power for every 1,000 ft. gained in elevation. High and low temperatures can also affect generator output. Power decreases 1% for every 10° F. above 85° F. Counteract these effects by operating appliances in sequence rather than at the same time.

INFORMATION:

The generator may shut down for reasons other than an overload. If a blink code appears on the control switch, refer to the manufacturer's manual to obtain an explanation for the code.

Generator Fuel

There is always a possibility fuel may be contaminated. Diesel fuel may contain water or a microbe growth (black slime). Any contamination of fuel will greatly reduce the total output of the generator and may cause erratic AC output.


Average Fuel Consumption	Diesel 10,000 Watts (gal/hr)
No Load	.1
Half Load	.43
Full Load	1.01

NOTE:

The motorhome manufacturer does not cover damage to the generator caused by fuel contamination, or to appliances due to erratic AC voltage.

Resetting the Circuit Breaker

If a circuit breaker trips in the main AC breaker panel or on the generator control panel, there may be a short circuit or too much load.

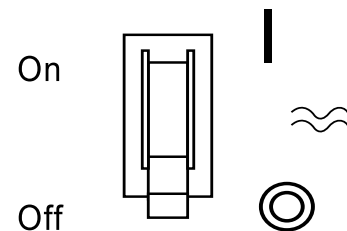

Breaker on Generator Control Panel

060043

NOTE:

The generator will continue to run after a circuit breaker trips.

If a circuit breaker trips, disconnect or turn off as many loads as possible. To reset the circuit breaker, switch the circuit breaker to **Off**, then back to **On** to reconnect the circuit. If the circuit breaker immediately trips, the electrical distribution system has a short or the circuit breaker is faulty.

Call a qualified electrician. If the circuit breaker does not trip, reconnect a combination of loads that will not overload the generator or cause the circuit breaker to trip again. Remember to compensate for elevation and temperature changes when reconnecting loads.

NOTE:

An appliance or load may have a short if it causes a circuit breaker to trip after reconnection. **DO NOT** continue to reset breaker. Have the problem corrected before resuming operation.

Generator Exercise

If use of the generator is infrequent, exercise the generator once a month by operating it at approximately half the maximum rated output for two hours. This will help promote better starting, more reliable operation and longer engine life. This procedure drives off moisture, lubricates the internal engine parts, replaces the old stale fuel with a fresh supply, and also promotes removing oxides from the electrical switches and contacts.

NOTE:

Avoid short run periods of the generator. Run the generator set under a load for a minimum of one-half hour.

INVERTER

The inverter changes DC battery power to AC electrical power. It also charges the house and chassis batteries when hooked to shore power or operating from the generator. Use the inverter to supply AC power when shore power is not available and the generator is not going to be used as a secondary AC power source. The inverter supplies AC power to most outlets and appliances. Remember that using the inverter quickly consumes house battery power. Turn off the inverter when not in use to conserve house battery power. The inverter works in conjunction with the “load shed” feature of the AC load center. In instances where shore power amperage is limited 20 or 30 amps, the inverter will “power assist” during periods of peak demand when total amount of amperage available exceeds shore power capacity. The battery cutoff switch must be on for the inverter remote panel to function and respond to commands. The remote panel is used to change variable settings.


NOTE:

The inverter/converter is a comprehensive system with many features. It is strongly recommended to read the OEM manuals

Providing AC Power with Inverter**To turn the inverter on:**

- Turn on house battery cutoff switch.
- Press the **Inverter On/Off** switch on the remote panel.

If the inverter does not sense AC power from the generator or shore power, it will provide AC power from the motorhome batteries to most outlets and appliances. If the generator is started or the motorhome is connected to shore power, the inverter will automatically begin charging.

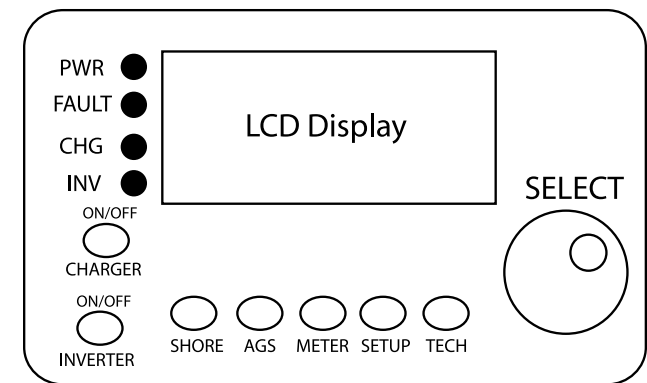

Inverter Remote Panel

060254

Battery Charging with Inverter

The inverter will automatically begin charging when AC power is supplied from shore service or the generator. The inverter uses a three-stage charge cycle to charge the batteries. The charger may be turned off if desired.

To turn the charger on and off:

- Press the switch marked **CHARGER ON/OFF** on the remote panel.

Shore Setting:

The Shore setting in the remote panel adjusts the amount of AC current the battery charger can use. If hooked to less than 50 amp service, select the proper Shore setting to help prevent combined AC loads such as the roof air conditioner and the charger from overloading limited shore power service.

To Adjust Shore Power Setting:

- Press the Shore button on inverter remote.
- Turn the knob on the inverter remote left or right to scroll through shore setting options.
- Press the knob to select. An arrow will appear next to the selected setting.

NOTE:

Settings 20 Amp and below limits battery charge capacity and may hamper ability to efficiently operate DC electrical loads. Remember to reset to higher amperage when available.

Set Shore Settings To:

Shore Setting	AC Power
50 Amp	When hooked to 50 Amp shore Service.
30 Amp	When hooked to 30 Amp shore service.
20 Amp	When hooked to 20 Amp shore service.
10 Amp	Used when shore service is severely limited or experiencing shore power overload.
5 Amp	Minimum charge capacity setting. Used when shore service is severely limited or experiencing shore power overload.

Three-stage charging cycle:

- **Bulk Charge Cycle:** Brings the DC voltage up high, initially between 14.2 - 14.6 Volts DC. The length of time the inverter is in Bulk Charge depends the state of charge of the batteries.
- **Absorb Cycle:** Absorb Cycle battery voltage is the same as the Bulk Charge Cycle, between 14.2 - 14.6 Volts DC. Length of the Absorb Cycle is a timed event determined by the inverter.
- **Float Charge Cycle:** Charge voltage is generally around 13.3 - 13.7 Volts DC. Approximately 80% of the charging cycle has been completed by this time.



80%

Bulk Charge

Water (charger) on full until bucket (battery) is 80% full.



90%

Absorb Charge

Water (charger) slows until bucket (battery) is 90% full.



100%

Float Charge


Water (charger) slowly trickles into bucket (battery) until 100% full. Water (charger) will adjust flow to maintain level.

060236c

**Hose = Inverter in Charge Mode
Bucket = Battery**

Auto Generator Start

The **Auto Gen Start (AGS)** feature allows the inverter remote control to start the generator when battery voltage or interior motorhome temperature reaches a preset point. The AGS parameters are set at the inverter remote control (located in the front passenger overhead cabinet). The AGS controller, located in the pass-through bay with the inverter, carries out the AGS functions.

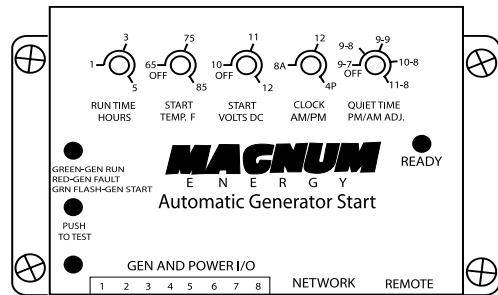

AGS Controller: Located next to inverter in large pass-through bay. 060299

NOTE:


The setting knobs on the AGS controller (located in the front run box) are not functional. AGS settings are set using the inverter remote located in the front passenger overhead cabinet.

NOTE:

Refer to the OEM manual located in the Owner’s Information File Box for detailed instructions.

AGS Menu:

Press the AGS button on the remote to access the AGS menu. Rotate the knob to scroll through menu options and press the knob to make selections. Press the AGS button at any time to return to the main AGS menu. Menu options are labeled 1 through 8.

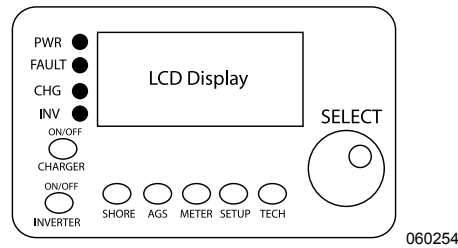

1. **AGS Control:** Rotate the knob to scroll through Off, Enable, Test, or Enable w/Quiet Time.
2. **AGS Status:** View current AGS status.
3. **Run Time Hours:** Choose run time duration after the AGS system starts the generator (from .5 to 6 hours).
4. **Start Temp F:** Select the interior coach temperature set point for AGS. Be sure to set the Comfort Control Thermostat at the same temperature.
5. **Start Volts:** Select the house battery voltage set point for AGS.
6. **Set Time:** Set the 24 hour clock on the remote. Clock will have to be set if power to the remote is lost.
7. **Quiet Time:** Choose from a preset list of quiet time hours during which the AGS will not start the generator. This function is only active when the AGS Control (menu option 1) is set to Enable w/Quiet Time.
8. **AGS Tech:** Used by service personnel for troubleshooting.

Factory Default Settings

Function	Default
Search	5 Watts
Low Battery Cutoff	11 Volts DC
Battery Bank	400 AH
Battery Type	Liquid Lead Acid
Charge Rate	80 %
Contrast	75 %

Battery Temperature Sensor

A **Battery Temperature Sensor (BTS)** is affixed to one of the house battery terminals to measure battery temperature and send that information to the inverter. When battery temperature rises, the inverter will decrease charge voltage to prevent boiling the batteries. When battery temperature cools, the inverter will raise charge voltage. Voltage compensation with temperature variation is necessary to keep charge voltage at optimum values. If the BTS cord is unplugged from the inverter, the inverter will use a temperature default setting of 77° F./25° C. as a reference point.

Power Assist

During periods of peak demand for AC power when connected to limited shore power, the inverter will automatically enable “Power Assist” mode using house battery power. The inverter will supply the added current necessary to meet the demand. Power assist mode will occur only when the inverter is in Float or Absorb charge modes ensuring battery charging is maintained when possible.


When demand for power is reduced and shore power can adequately supply the power, Power Assist mode will automatically disable returning the inverter to charge mode. If demand for power once again exceeds the shore power supply, Power Assist will automatically be enabled. The assist cycle will continue until house battery voltage falls within .3 Volts DC of the Low Battery Cutoff setting in the inverter remote panel.

LOAD CENTER - 120/240 VOLT AC

The main 120/240 Volt AC panel receives power from the transfer switch supplied by either shore power or the generator. AC power is supplied to the 50 Amp main breaker first, then power is supplied to individual branch circuit breakers. The panel label describes the breaker layout and item, outlet or appliance to which they pertain.

WARNING:

The 120/240 Volt AC panels contain high voltage which can cause serious injury or death. Before beginning any work or testing procedures involving the electric panels, or any of the branch circuits, the motorhome must be unplugged from shore power, the generator off, and the inverter in the off position. Disable the Auto Gen Start feature. Certain testing procedures may require the AC power to be on. Only qualified personnel with electrical backgrounds should attempt any testing procedures.

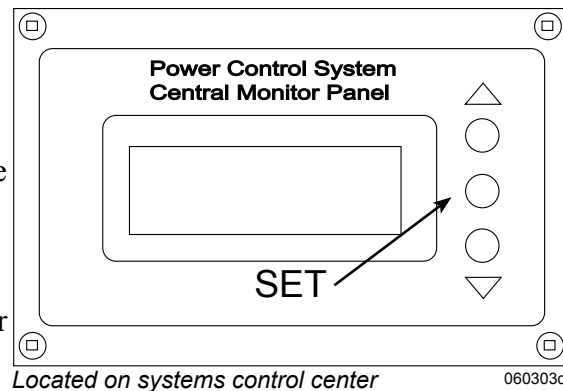

Power Control System

Overview:


The Power Control System (PCS) monitors AC power consumption. If AC power consumption exceeds the supply, the system automatically reduces power consumption by “shedding” predetermined loads. The system also monitors AC voltage and current as well as polarity. A PCS monitor panel located on the systems control panel details operating conditions.

Requirements:

- Connect to shore power or start the generator.
- Turn on the battery cutoff switch.

Operation:

The PCS automatically senses whether it is connected to 30 Amp 120 Volt AC shore power or 50 Amp 240 Volt AC shore power or the generator. If connected to 20 amp shore power, the remote will need to be changed to 20 amp service by using the Set button.

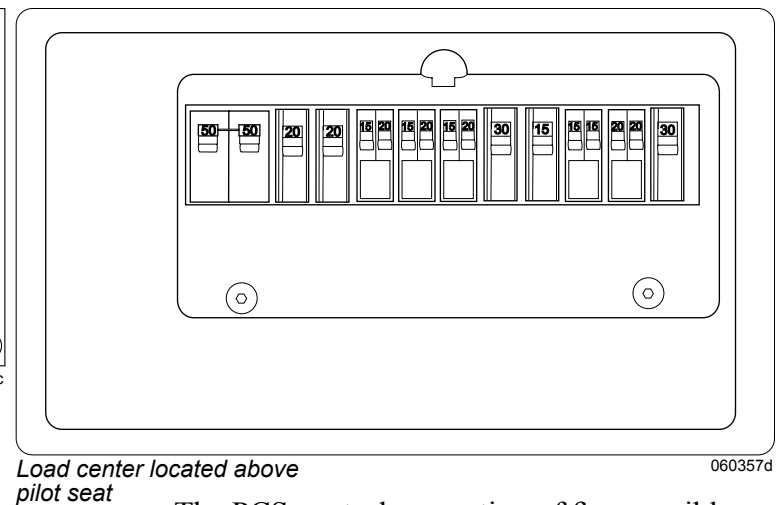

The PCS controls operation of five possible loads to shed. Shedding a load means removing power from the load allowing extra power to operate other loads of more importance. These shed loads are typically heavy power consuming loads that can be temporarily postponed until enough power is available to safely operate the loads without the possibility of overloading the shore power breaker.

Load shed example, if average current demand exceeds 24 Amps when hooked to a 30 Amp service, the system will automatically shed load Number 1 to keep average current demand below 80% (24 Amps) of the 30 Amp shore service to avoid the possibility of overloading the shore power breaker. If shedding load number 1 is insufficient to avoid tripping the shore power breaker, the system will shed load 2 and so on until current demand in total is within safe operating limits. The PCS remote will indicate which loads have been shed. Repeatedly press the Down arrow on the remote to display the load shed list. Any loads that are shed will automatically be reactivated when sufficient power is once again available.

Load Status

Water Heater ON
Rear A/C ON
Mid A/C ON
Washer Dryer ON
Front AC ON

Load shed screen

NOTE:

20 amp shore service mode is not automatically detected and the operator must manually set 20 Amp mode when connected to 20 amp shore power.

Loads are shed in order of priority.

1. Water Heater
2. Rear AC
3. Mid AC
4. Washer Dryer
5. Front AC

Power Share and Reduced Charging:

Depending on operating conditions, amperage of shore power and battery state of charge, the system may attempt to reduce battery charging as a way to conserve AC power during peak demand or if batteries are of sufficient charge, the system will automatically enable the inverter to help supply extra power during peak demand periods. These operating conditions will be indicated on the remote.

Operation Modes

Bat Charger	Normal
Inverter	Normal
Load(s) Shed	= 0

Operation Screen

Power Monitoring:

The system monitors voltage and current as well as polarity when connected to shore power or operating from the generator. Refer to the remote to monitor voltage and current.

Line Status

L1	118Volts	07Amps
L2	115Volts	00Amps
Both		007Amps

Voltage & Current screen

Circuit Breakers

The internal configuration of the circuit breaker is designed to trip when excess current causes the breaker to heat up. The trip action of the circuit breaker can occur within milliseconds. Breakers are designed to operate at a continuous load of 80% of the breaker's rated capacity.

For example: A breaker with a 20 Amp rating will operate a continuous 16 amp load. This design leaves a small amount of working capacity within the breaker.

When an inductive load is applied, such as when an electric motor turns on, the motor starts to spin and current consumption may momentarily exceed the rated capacity of the breaker. As the electric motor comes up to operating speed, the electric motor's current consumption will decrease. The AC current load then falls back into the breaker's rated 80% set point. This electric principle should be kept in mind when using anything other than 50 Amp shore service and using appliances with electric motors, such as air conditioners.


When using outlets, care should be considered when applying loads such as electric motors, heaters, coffee makers, toasters, hair dryers or other large current consuming loads. The current rating is usually stated on most electrical items. The current rating will either be rated in amps or watts. Current ratings stated on electrical items will change slightly with voltage fluctuations. As voltage increases, current consumption decreases. As voltage decreases, current consumption increases. This may explain why in some instances items operated at borderline voltage to current tolerances may seem fine in one location but problematic in another.

NOTE:


To calculate watts to Amps divide the watt figure by the voltage from which the item operates from. For example: The electrical item is rated at 1370 watts. Divide that by the operating voltage of 115 Volts AC which equals 11.913 Amps. Use this formula to calculate the amount of load and compare to the available power supply.

GFCI Breakers & Outlets

A Ground Fault Circuit Interrupter (GFCI) can be found in two different types of applications. One type is incorporated in a breaker used in 120 Volt AC breaker panels; the other is incorporated in an outlet.

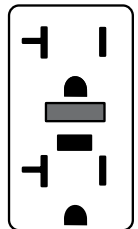

060072

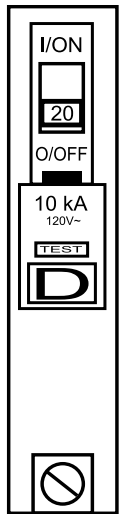

RM03A0003

GFCI Breaker

The GFCI, whether it is a breaker or an outlet, offers two types of protection. One type of protection is from over-current or shorts to guard against hazardous ground fault currents that can result in injury or death. Ground fault currents are currents that flow from the “hot” or power terminal through a person to the ground. **For example:** touching a faulty appliance while making contact with an electrical ground such as a water fixture or the earth.

The GFCI offers protection against the type of shock that can result from faulty insulation, wet wiring from inside an appliance, or any device or equipment plugged in or wired to that circuit. The ground fault portion of the outlet or breaker uses sensitive electronics inside the outlet or breaker to detect a ground fault problem. The electronics monitor the normal current of power flowing to the hot (black) wire through the load (eg. a light bulb or appliance) and coming back on the neutral (white) wire. If a small amount of current comes back on the safety ground wire, the electronics will trip the breaker or outlet, stopping the flow of electricity. The amount of current it takes to trip the device from a ground fault varies slightly from the different outlet or breaker manufacturer (approximately 4 to 6 milliamps or less).

NOTE:
One milliamp is 1/1000 of one Amp.

Electrical shocks resulting from ground faults can be felt, but such a shock is considerably less than one without ground fault protection. People with medical conditions that make them susceptible to shock can still be seriously injured.

A GFCI outlet or breaker will not protect against shock from a normal current flow. **For example:** a shock from touching both metal prongs of an electrical cord or appliance while plugging it in.


WARNING:
If a breaker or outlet continually trips, do not continue to reset breaker or outlet until the problem has been identified and corrected.

NOTE:
The ground fault outlet or breaker should be tested once a month to ensure it is operating. Use the TEST button on the outlet or breaker. It should trip with an audible “click.” The breaker or outlet will not trip if AC power is not present at the device. If power is present and the device will not trip, replace it before using that circuit.

DISTRIBUTION PANEL - HOUSE 12 VOLT DC

The 12 Volt DC house distribution panel is located in the bedroom closet. This panel contains fuses that protect the electrical circuits. These fuses are a standard automotive type.

Refer to the fuse label for circuit assignments

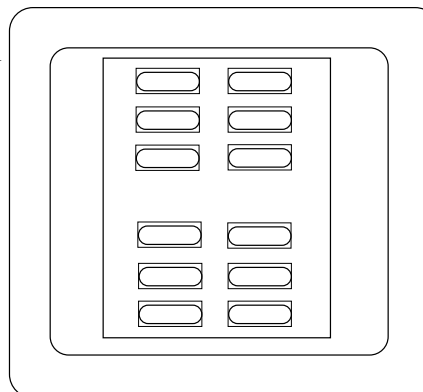

Fuse panel located in bedroom closet.

1. VENT FANS 10A	2. COMPUTER POWER PORT 10A	3. SLIDEOUT 15A	4. FURNACE/ WATER HEATER 15A
5. SLIDEOUT LIGHTS 5A	6. CLOSET LIGHT 10A	7. PORCH LIGHT 10A	8. SAT PWR TV BOOST 10A
9. MPX TANK MON 10A	10. SANICON 20A	11. T-STAT EMS CIELING FAN 15A	12. DUMP VALVES WINTERIZER 15A

Typical circuit assignments. Refer to actual label on fuse panel cover.

FUSES & CIRCUIT BREAKERS - 12 VOLT DC

Circuit protection devices are installed to protect circuit wiring in case an over-current condition occurs. An over-current condition usually falls into one of two categories: a short circuit or overload. A short circuit is when a break or fault in the circuit allows electricity to flow directly to ground. Circuit overload is when circuit amperage or the electrical load exceeds designed operating parameters. Several factors are considered when designing a circuit to operate an electrical load. The amperage required to operate the electrical load will determine wire size and wire insulation type. The application of the electrical load can determine whether a fuse or circuit breaker is selected. Circuit protection devices come in a variety of shapes and ratings. Most common are the blade style plug in fuse and auto reset circuit breakers.


These types of circuit protection devices are readily available from auto supply stores. Circuit protection devices in a 12 Volt DC system are actually rated at 32 Volts DC due to voltage variances in a 12 Volt DC system. Replacement devices must use the same amperage rating and be of the same type as the original for proper circuit protection and electrical safety. Generally a fault exists in the circuit when an over-current condition has caused a fuse to blow or circuit breaker to trip. Until the condition that caused the fault is corrected, replacing the fuse may be a temporary fix. Continually replacing the fuse or circumventing the protection device can jeopardize safety and circuit integrity.

WARNING:

Replacement fuses or circuit breakers must be of the same type and rating as the original equipment. Installing protection devices other than the original type and rating will create a safety hazard that will potentially result in circuit and/or component damage and fire.

Fuses:

Blade fuses come in three sizes: Mini, Standard and Maxi. Fuse color determines amperage ratings. A blown fuse indicates an over-current condition has occurred. Typically the conductor strip in the center of the fuse is broken, but not always, and is best verified by use of a 12 Volt DC test light.

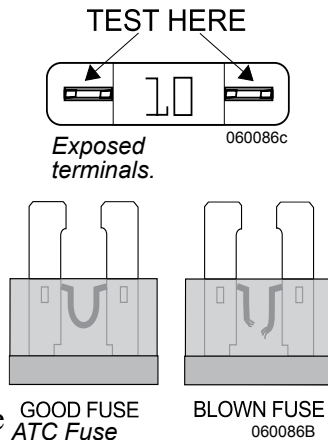

Located atop the blade style fuse housing are two exposed terminals. The fuse is good if the test light illuminates at both terminals. This may require the circuit be activated for power to be present at the fuse. The fuse is bad if the test light illuminates at only one terminal.

BLADE FUSE GUIDE			
	Mini	Standard	Maxi
Black	1		
Gray	2	2	25
Violet	3	3	
Pink	4	4	
Tan	5	5	70
Brown	7 1/2	7 1/2	35
Red	10	10	50
Blue	15	15	60
Yellow	20	20	20
Clear	25	25	80
Green	30	30	30
Blue-Green	35		
Orange	40		40



Mini, Standard and Maxi fuse colors and amperage ratings

Three types of Circuit Breakers:

Type 1 is an automatic reset type circuit breaker. This type of breaker may cause component damage under a short circuit condition. It will not damage the circuit, the installation or present a safety risk

Type 2 is an automatic reset type circuit breaker. Under a short circuit condition, this type of breaker will not cause component damage or damage to the circuit, the installation or present a safety risk.

Type 3 is a manual reset circuit breaker. This type of breaker will open under a short circuit condition and must be manually reset.

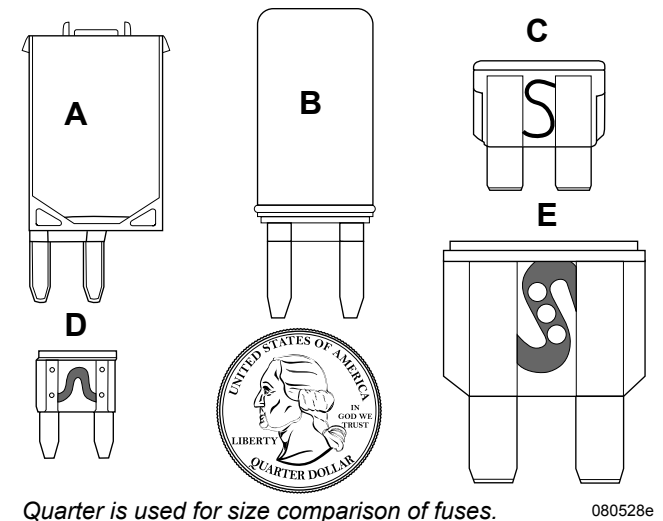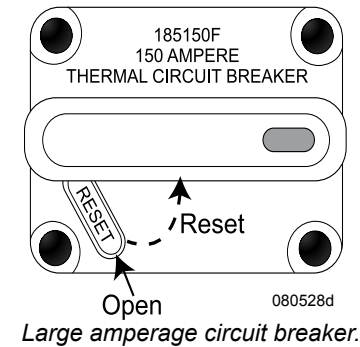


Quarter is used for size comparison of fuses.
A. Manual Reset Circuit Breaker. B. Auto Reset Circuit Breaker
C. Standard Fuse. D. Mini Fuse. E. Maxi Fuse.

Multiplex


The Multiplex system consists of fuse modules and switches located throughout the motorhome. The fuse modules are located with the AC Breaker Panel, which is typically located in the bathroom. The Energy Management System (EMS) acts as the Central Processing Unit (CPU) for the Multiplex system. When a switch is pressed, the EMS processes the command and then activates or deactivates the corresponding circuit on a fuse module.

Troubleshooting:


- The Battery Cut-off switch must be on.
- If a switch is pressed and the backlighting does not turn on, check the 10 Amp fuse in position 9 on the 12 Volt DC distribution panel (located in the same cabinet as the multiplex modules).
- If the backlighting turns on and the yellow communication LED illuminates but the item does not turn on, check the fuse for that circuit.

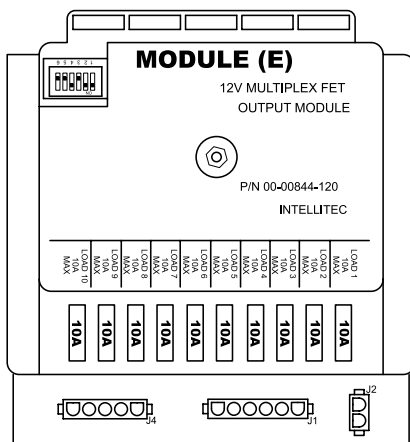

1. 14 YEL - T-RM VANITY LT
2. 14 YEL - BATH VANITY LTS
3. 14 YEL - T-RM CAB LT
4. 14 YEL - BATH CAB LT
5. 14 YEL - PS SLIDE CAB LTS
6. 14 YEL - PS READING LTS
7. 14 YEL - DS READING LTS
8. N/C
9. N/C
10. 14 YEL - EDGE CEILING LTS

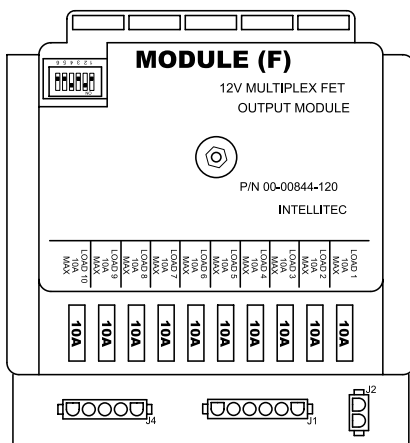

1. 14 YEL - GALLEY CAB LTS
2. 14 YEL - PS SOFA CAB LTS
3. 14 YEL - DS SOFA CAB LTS
4. 14 YEL - DINETTE LT
5. 14 YEL - SCONCE LT
6. 14 YEL - GALLEY CEILING LTS
7. 14 YEL - DINETTE CEIL LTS
8. 14 YEL - HUTCH LTS
9. N/C
10. N/C

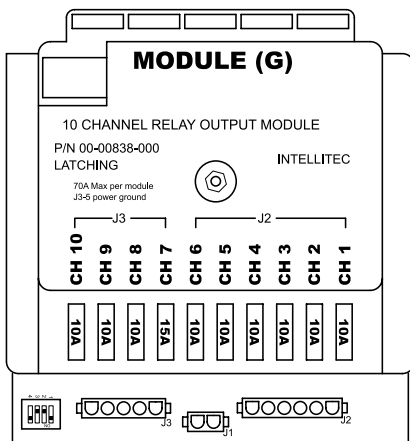

1. 14 YEL - T-RM CEILING LTS
2. 14 YEL - BATH CEIL LTS
3. 14 YEL - BDRM CEIL LTS
4. 14 YEL - LVRM CEILING LTS
5. N/C
6. N/C
7. 12 RED - WATER PUMP
8. 14 YEL - GALLEY FAN
9. 14 YEL - BATH FAN
10. 14 YEL - TOILET FAN

0321

060327c

BATTERIES - HOUSE

House batteries are designed for use with 12 Volt DC operated lights, appliances and inverters.

House Battery Types:

- Liquid Lead Acid (LLA)

Deep Cycle Batteries:


Deep cycle batteries are a type of Liquid Lead Acid (LLA) battery. Deep cycle batteries are best suited for use with 12 Volt operated lights, appliances and inverter/converters. Deep cycle batteries are designed to have a majority of their capacity used before being recharged.

NOTE:

Tap water contains minerals which can alter chemistry and ruin the battery. Use only distilled water when refilling the LLA battery.

Battery Slide-Out Tray

The slide-out battery tray is secured in place by two locking mechanism at the front of the tray. To slide the tray out, pull inwards on the two handles to unlock then pull tray out until it stops. To secure the battery tray, push it back in until the tray latches securely closed.

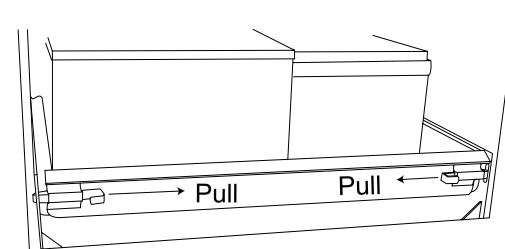

Battery slide-out tray

060193s

Slide Tray Maintenance:

The battery tray does not require lubrication. If lubrication is deemed necessary, use a minimal amount of non-lithium bearing grease. Use sparingly. Lubricant can attract dirt and dust, causing slide problems with the tray.

If, due to extreme weather conditions, lubrication is deemed necessary follow these steps.

- Use the red nozzle on *WD-40* to clean the tray mechanism, not to lubricate it.
- Use an air hose to blow out all the dirt, dust and *WD-40*.
- Sparingly use a non-lithium bearing grease.

CAUTION:

Do not drive without the tray secured. Damage can result.

CAUTION:

Many types of petroleum based products or battery by-products can damage the paint finish. Do not allow these types of chemicals to get on the paint finish. If the chemicals spatter on to the painted surfaces, immediately rinse the surface using plenty of water and a mild detergent.

WARNING:

No repairs should be attempted by anyone other than by a qualified technical professional. The deployment and retraction of the tray could cause serious injuries.

Battery Maintenance

Liquid Lead Acid (LLA) battery cells should be checked at least once a month. The level should be above the top of the plates, but not overfull. Remember to use only distilled water to refill the battery. A battery with a low electrolyte level will rapidly boil out the water once the plates have been exposed to air.

IMPORTANT!

IMPORTANT!
This motorhome is equipped with Non-sealed Liquid Lead Acid (LLA) house batteries which require regular maintenance. Lack of maintenance will result in a shortened battery life.

NOTE:
Read your owners manual for storage, dry camping and battery maintenance.

MONACO CUSTOMER SERVICE: 1-877-4-MONACO

Label affixed to house batteries


060331

NOTE:

The cap on individual cells is threaded onto the battery and can be removed to inspect water level.

Periodically check the batteries for corrosion and cracks. Replace vent plugs that are cracked or missing. Keep the top of the batteries clean. The accumulation of electrolyte and dirt may permit small amounts of current to flow between the terminals, which can drain the battery.

Check the battery connections for tightness and corrosion. Battery terminals and cables will occasionally need the corrosion removed. The batteries and trays will also need to be cleaned. This requires removing the cables and possibly the batteries from the tray(s)

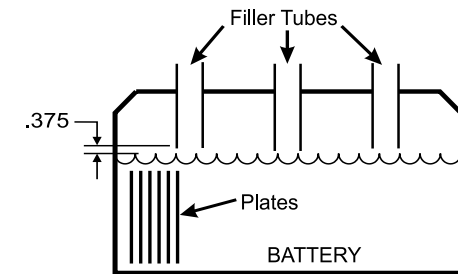

Battery State of Charge	Spec. Gravity	Voltage
100%	1.265	12.7
75%	1.225	12.4
50%	1.190	12.2
25%	1.155	12.0
Discharged	1.120	11.9 or Less

NOTE: The distilled water level in battery should be 3/8" below the filler tube. 020034c

WARNING:

Liquid lead acid batteries produce a highly explosive hydrogen gas while charging. DO NOT smoke around batteries and keep all sources of ignition or flames away from batteries. The hydrogen gas may explode resulting in fire, personal injury, property damage or death.

WARNING:

Sulfuric acid in the batteries can cause severe injury or death. Sulfuric acid can cause permanent damage to eyes, burn skin, and eat holes in clothing. Always wear splash-proof safety goggles when working around the battery. If the battery electrolyte is splashed in the eyes, or on skin, immediately flush the affected area for 15 minutes with large quantities of clean water. In case of eye contact, seek immediate medical aid. Never add acid to a battery once the battery has been placed in service. Doing so may result in hazardous splattering of electrolyte.

Battery Tools:

A few simple hand tools are required to work on the batteries and should be kept aside for working on batteries only.


- Wear old clothes. Clothing is easily damaged when in contact with batteries.
- Wear thick rubber gloves that are solvent and thinner proof.
- Keep a ½" box-end wrench, wire brush and pair of adjustable pliers separate from other tools.

Safety Precautions:

Working on batteries requires a few safety procedures:

- Never short battery terminals or cables with anything metallic to “test” batteries for power.
- Wear safety glasses. Even a small amount of corrosion or acid can be very painful and harmful to the eyes.
- When wire brushing terminals, work the brush in one direction away from you. Avoid contacting opposite polarity terminals. Avoid breathing the powder. A particle mask can be helpful.

Before performing major maintenance procedures, draw a diagram of how the batteries fit in the tray and the relative location of the positive and negative terminals. Draw a diagram of cable routing, polarity and how the cables attach to the batteries. Mark all cables positive and negative respectively. One misplaced cable can have disastrous results.

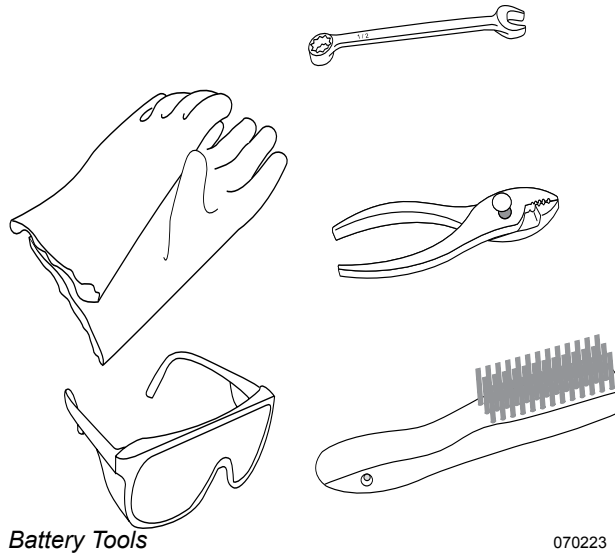

Battery Tools

070223

Before removing any cables, stop all charging or discharging current.

- Unhook from shore power or stop the generator.
- Use the remote to turn off the inverter.
- If the motorhome has solar panels, remove the fuse near the battery connection or place a blanket over the top of the panels. Unhooking charge wires from the solar panel during daylight hours can damage the controller.
- Remove all rings and wristwatch to prevent short circuits. A severe burn can instantly occur.
- Open the battery compartment door and slide tray out (if equipped).
- Turn off the interior house power and the main battery disconnects.

- Wear safety glasses and thick rubber gloves when working around batteries. Battery tools required: a wire brush, ½" box-end wrench, adjustable pliers and a box of baking soda. Prepare a baking soda/water solution. Keep paper towels handy.
- Rinse batteries thoroughly with water before disconnecting cables. Remove all cables large and small. Remove the batteries, if necessary. If removing the batteries, the temperature sensors for the inverter and solar panel will need to be removed. Double sided sticky tape will be needed to adhere the sensors to the battery. The sensor may also be placed between two batteries.
- Wire brush cable ends and battery posts. Dip the ends of the cables in neutralizing solution.
- With battery caps securely in place, carefully apply solution to the terminals. Using a paper towel, dip it into the solution and wipe the top of each battery. **Do not** allow solution to get into any battery cell. This will neutralize the acid and ruin the battery.
- Rinse cables and batteries thoroughly with clear water.
- Use the rest of solution to clean battery tray. Thoroughly rinse tray, battery area and sidewall of the motorhome with water.
- If equipped, operate the battery trays several times while simultaneously rinsing with water. Use Kwiklube spray or equivalent to lubricate the moving components.

- Install the batteries in correct order noting their relative post location. Remove old sticky tape from the temperature sensors. Clean the sensors, an area on the battery. Apply sticky tape to the inverter temperature sensor. Adhere the sensor to the battery. Secure the solar panel thermistor by overlaying the thermistor with the sticky tape to the battery. Install tie-downs securing the batteries into position.
- Carefully install all positive cables. Double check before making each connection to confirm they are in the right location.
- Install the negative cables. When hooking up the ground cable going to the frame there will be a small spark indicating a momentary current draw. This is a normal process of charging the capacitors in the inverter. If there is a heavy flash STOP. Something is wrong. Double-check all wiring and battery post location for error.
- Verify proper voltage in the system before turning on the main battery disconnects.
- If the motorhome has a Solar Controller, place the battery selection switch to House Battery Volts. It should indicate about 12-13 Volts DC. If the voltage is other than this reading, check the cables and routing. If the voltage is okay, remove the blanket from the solar panel. Coat terminals and posts with a protective coating to seal the connections from the gas and electrolyte.

- Turn on the main battery disconnect switches.

NOTE:

The automatic generator start feature will need to be programmed.

WARNING:

Liquid lead acid batteries produce hydrogen gas while charging. Hydrogen gas is highly flammable. Do Not smoke around batteries. Extinguish all flames in the area. Hydrogen gas can explode resulting in fire, personal injury, property damage or death.

CAUTION:

Many types of petroleum based products or battery by-products can damage the paint finish. If the chemicals come in contact with painted surfaces, immediately wash with a mild automotive detergent and clear water.

Testing the Battery

A battery can be tested and/or monitored several ways.


Checking the Electrolyte Solution (LLA Only):

The most efficient way to test the batteries is check the electrolyte solution with a hydrometer. Many styles are available, from types with cylinder graduation (shown in the illustration) to types with floating balls. Hydrometers can be purchased from most auto parts stores.

The hydrometer tests the battery's electrolyte solution which is measured in specific gravity. Distilled water has a specific assigned gravity of 1,000. The hydrometer is calibrated to this mark. Pure sulfuric acid has a specific gravity reading of 1,840. The acid is 1.84 times heavier than water. The electrolyte solution is about 64% water to 36% acid (fully charged battery). Hydrometers with cylinder graduation are graphed and the exact state of specific gravity can be determined.

Temperature and recent battery activity (charging or discharging) affect the hydrometer readings. It is best to check the battery when it has been at rest for at least three hours, although readings taken at other times will give a ballpark figure. When using the hydrometer, draw the electrolyte solution up into the tube. Allow the hydrometer to attain the same temperature as the electrolyte solution. Note the reading for that cell.

Complete the same test for the rest of the cells on that battery bank.

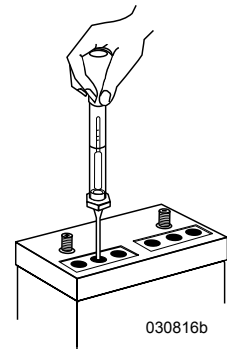


Hydrometer (cylinder type) shown testing LLA type battery.

The hydrometer is calibrated at 80° F. Temperature affects the hydrometer readings. The higher the electrolyte temperature, the higher the specific gravity reading. The lower the temperature, the lower the specific gravity reading. Add or subtract four points for each 10° variance from the 80° F. chart. Readings between cells should not vary more than 50 points.

If one cell in a particular battery bank being tested is at a 50% state of charge and the other cells indicate full, charge only that battery to see if the low cell will come up and at the same time does not over-charge the healthy cells.

If the low cell does not come up after charging, this battery can damage the rest of the battery bank and should be replaced. An accurate digital Volt meter + .5% will also give an indicator of the battery's state of charge.

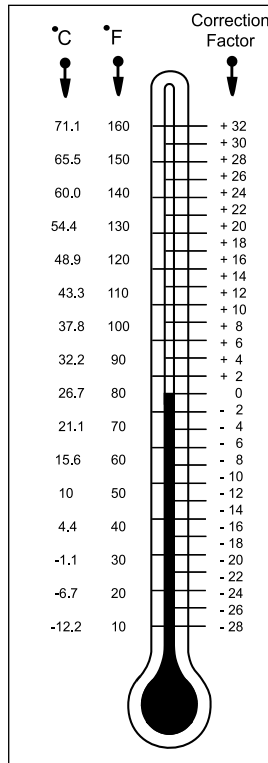

Temperature Correction Chart

030815

Placing a load on the Battery:

Another test that can be performed is to place a specific load on the battery for a predetermined length of time equal to that particular battery's rating.

This machine is usually an adjustable carbon pile that can vary the load being applied to the batteries while monitoring voltage to see if they will perform to their specific rated capacities.

NOTE:

See the chart for temperature compensation. Liquid levels should be even between the cells of the battery being tested as it will affect the accuracy of the test.

Charge Time & Consumption Rate

Calculating Run Times:

Calculating run time figures when operating 120 Volt AC electrical items with an inverter can be exponential due to battery characteristics. Flow characteristics of electrons vary with different battery types and chemical compositions. Deep cycle batteries are generally designed to slowly release a majority of their charge capacity. Deep cycle batteries are rated in amp hours (Ahrs) with the discharge occurring over an extended period of time before the battery is charged. Engine starting batteries are designed to quickly release large amounts of current for a short duration, without depleting battery reserves. Commercial type batteries bridge the gap of deep cycle and engine batteries. Commercial batteries release medium amounts of current over a longer period of time but they are not designed to cycle their charge capacity.

The working range of a deep cycle battery is between 50 and 100% state of charge (SOC). Deep cycle batteries should not be cycled below 50% state of charge. Discharging a deep cycle battery below 50% state of charge shortens the life of the battery. Deep cycle batteries use an amp hour rating which is usually calculated over a 20 hour discharge interval. **For example:** A deep cycle battery with a rated capacity of 100 Ahrs. is designed to release current at the rate of 5 amps per hour. Multiply a 5 amp load over a 20 hour discharge period equals the rated 100 Ahr. capacity.

These discharge figures are calculated with the battery starting at 100% state of charge with the battery at 80° F when the discharge cycle begins. However, increasing the discharge load applied to the battery from 5 amps to 10 amps on a 100 Ahr battery does not yield ten hours of discharge time. This is due to the internal reactions which occur when a battery is discharging. Actual discharge time for a 10 amp load may be closer to eight hours of discharge time. Increasing the load applied to the battery to 20 amps will not yield five hours discharge time but may be less than three hours. It might be understood as a point of diminishing return.

Calculating applied loads to an inverter to approximate run time from the battery amp hours available is not an equal trade up when voltage is inverted and amperage is calculated. When the inverter is used to operate an AC load it uses approximately ten times the DC current needed from the battery when inverting 12 Volts DC to operate the 120 Volt AC item.

There is also a small efficiency loss of about 10% when inverting. **For example:** When using the inverter to operate an AC electrical item, which has a current draw rating of 2 amps, the inverter will use over 20 amps DC power from the batteries.

Determining Current Consumption:

First determine the amount of current used by an AC item. **For example:** The television is rated at 200 watts at 120 Volts AC. Calculate watts to amps. Divide 200 watts by the operating voltage of 120, this equals 1.6 amps. Multiply 1.6 amps AC current by a factor of ten the inverter will use, this equals 16 amps DC battery current. Add the revised 10% efficiency loss figure, this calculates to a total of 17.6 amps DC. If the battery bank capacity is rated at 500 Ahrs., actual elapsed time to the suggested 50% state of charge would net viewing time for the television at approximately 13 hours in ideal conditions.

The run time figure will vary greatly with the actual state of charge of the battery bank when the discharge process begins. Ambient temperature, combined with other working loads, such as lights and parasitic loads applied to batteries, affect run times. Calculating the exact run time is not precise due to all the variables and equations involved; however, an approximate time figure can be obtained. Proper battery maintenance and charge cycles affect battery performance. Observe the battery condition with hydrometer and voltage readings. Use only distilled water when filling batteries. To achieve the highest quality of battery performance and longevity maintain the batteries in their proper operating range.

How long will the batteries last?

- Conduct this eight-hour test to determine how long your particular battery bank will operate before dropping below 50% state of charge.
 1. Before beginning the test, be sure the batteries are at 100% charge by verifying with a hydrometer or an accurate voltmeter.
 2. Turn the interior house power ON. Turn on three lights. Switch refrigerator operation to LP-Gas. Turn the inverter ON and operate the TV for two hours only. After two hours turn the TV and the inverter off.
 3. After the eight-hour period, turn off the lights, refrigerator and interior house power. Allow the battery electrolyte to stabilize for at least one to three hours.


Test the batteries again with a hydrometer or voltmeter. Are the batteries above or below 50% State of Charge? This test will give an idea of how long your particular battery bank will actually last.

SOLAR PANEL (OPTIONAL)

The solar power system consists of a solar panel, charge controller and a remote monitor panel located in the hallway. This system can deliver enough power to offset the normal day-to-day drain on house batteries caused by various parasitic electrical loads, such as radio memories, alarm systems and natural self-discharge of batteries.

Charge Controller

The charge controller automatically charges the house and chassis batteries whenever sunlight is available. Features include Pulse Width Modulation (PWM) charging. This means the controller delivers full charging amperage (Bulk Charge) when batteries are low. As battery voltage rises, charge amperage lowers (Absorption Charge) until the batteries reach their set voltage point. The charger then delivers low amperage (Float Charge) to maintain the batteries.

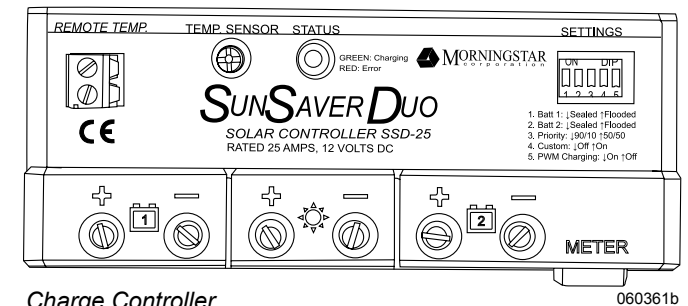

Charge Controller

060361b

The charge controller is located on the ceiling of the bay behind the service center. The green Charging LED (see illustration) illuminates when sunlight is reaching the solar panel. Solid green indicates bulk charging; flashing green indicates absorption or float charging. The LED will glow red if errors occur. A red LED means that the system is not charging. An error code will also display on the remote monitor. See the OEM manual for troubleshooting. It is normal for the controller to become warm to the touch, especially when processing higher amperage.

NOTE:

The charge controller is limited to 425 watts maximum input.

NOTE:

This system will charge only lead-acid batteries.

CAUTION:

The charge controller may be warm to the touch. This is a normal function of the charge controller.

Maintenance:

Perform the following maintenance tasks twice a year for best performance.

- Tighten all terminals. Inspect for loose, broken or corroded connections.
- Ensure all wire clamps and tie-downs are secure.
- Verify LED indication matches system conditions.

NOTE:


See OEM manuals for more information.

Fuse Location:

There are two fuses for the solar charging system in positions F6 and F7 on the circuit board located in the curbside rear electrical bay.

Monitor

The remote monitor is located in the hallway. The monitor features a display screen, three operation buttons and three battery state of charge LED's for a quick reference of battery charging levels. Press the center button to scroll through four main screens, and use the left or right arrow buttons to scroll through sub-screens.

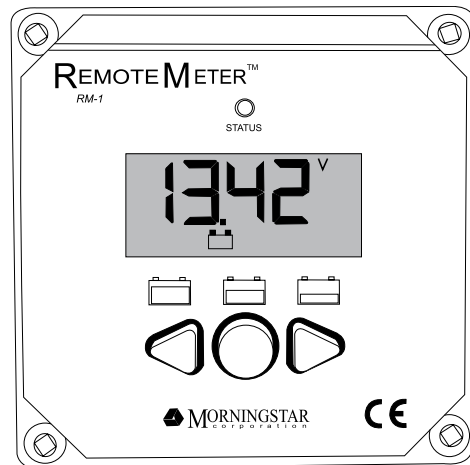

Solar Monitor

060361

Main Screens:

- **Solar Charge Current:** Press the left and right arrows to view solar amp hours and maximum charge current.
- **Battery 1 Voltage:** This is house battery voltage. Press the left or right arrows to view battery amp hours and minimum and maximum battery voltage.

- **Battery 2 Voltage:** This is chassis battery voltage. Press the left or right arrows to view battery amp hours and minimum and maximum battery voltage.
- **Temperature Screen:** This displays the ambient temperature at the remote monitor.

Solar Panel Care

Keep the solar panel clean. The amount of power that a panel produces is directly related to the intensity of sunlight. A single layer of dust, road grime or other debris can greatly reduce power. Regular inspections and regular cleaning will assure maximum charging power. Use a non-abrasive cleaner and paper towels to clean the panel. The surrounding environment and the amount of road dust encountered will determine how frequently the panel should be cleaned.

- Solar panels should be cleaned monthly or more frequently depending upon weather conditions.
- The panel should be cleaned if a film or a layer of dust is on the windshield.
- High winds can blow dust and debris around causing dirt build up. Frequently inspect the panel and clean as necessary.

CAUTION:

To avoid arcing at the battery connections when replacing batteries or performing battery cable maintenance, be sure to remove the fuses for the solar panel charge controller, or cover the solar panel to stop the production of electricity.

LIGHTS

Light fixtures found in the motorhome vary greatly depending on floor plans. The articles that follow reflect a general overview of some of the more common fixture types. Actual styles and types may differ.

Incandescent


The bulb inside the 12V incandescent light is replaceable.

To Replace a Bulb:

- Carefully squeeze the lens cover then gently pull the cover out. The cover has tabs that lock the cover in place.
- Using a clean cloth or piece of tissue carefully grasp the bulb and rotate to the unlock position.
- Remove bulb from the socket.
- The bulb replacement is 1141 12V 21CP.

INFORMATION:

Replacement bulb number is accurate at time of printing. Confirm replacement bulb number before ordering or obtaining a replacement.

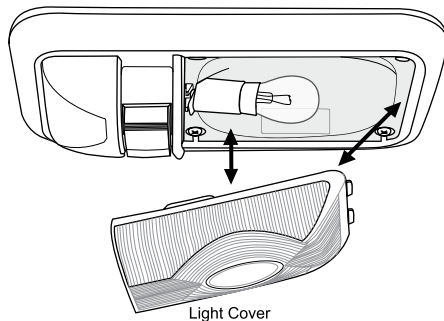

- Using a clean cloth or piece of tissue grasp the new bulb and align the prongs on the bulb with the slot on light socket.
- Push bulb in and rotate to lock position.
- Gently squeeze lens cover and insert tabs on cover into fixture.

CAUTION

DO NOT touch the incandescent bulbs while on. Allow bulb to cool down before replacing because a hot bulb can cause a burn.


Interior Halogen

To Remove:

- Grasp light fixture and pull down slightly then tilt fixture to one side. This will allow one spring clip to come out.

CAUTION:

Push spring clip inward with a finger as clip is being eased out. If this is not done spring clip can snap back on fingers.

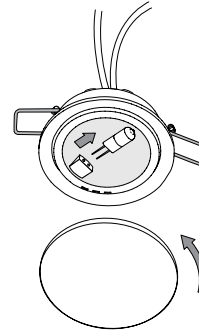

- Tilt fixture to other side and ease the other spring clip out.
- Unscrew the light lens counterclockwise and remove.
- Carefully grasp bulb and pull from socket.

The bulb replacement is 12V 10W CE.

INFORMATION:

Replacement bulb number is accurate at time of printing. Confirm replacement bulb number before ordering or obtaining a replacement.

- Use a clean cloth or piece of tissue to grasp new bulb. **Do not** touch bulb directly as this can cause a “hot spot” and result in immediate bulb failure.
- Align contacts of bulb with terminals in fixture base. Insert bulb until contacts are firmly seated.


To Reinstall:

- Align tabs on light lens with slots in fixture base. Rotate lens clockwise until light lens locks into place.
- Fold up both spring clips and insert light fixture into opening. Once in, opening the spring clips will expand and lock light fixture into place.

CAUTION:

Do not touch halogen lighting while on. They can cause a burn. Do not touch replacement bulbs. Oil in the hands can cause a “hot-spot” to occur. If the bulb is touched, allow it to cool and clean the bulb with alcohol.

ELECTRICAL SYSTEMS LAYOUT (TYPICAL)

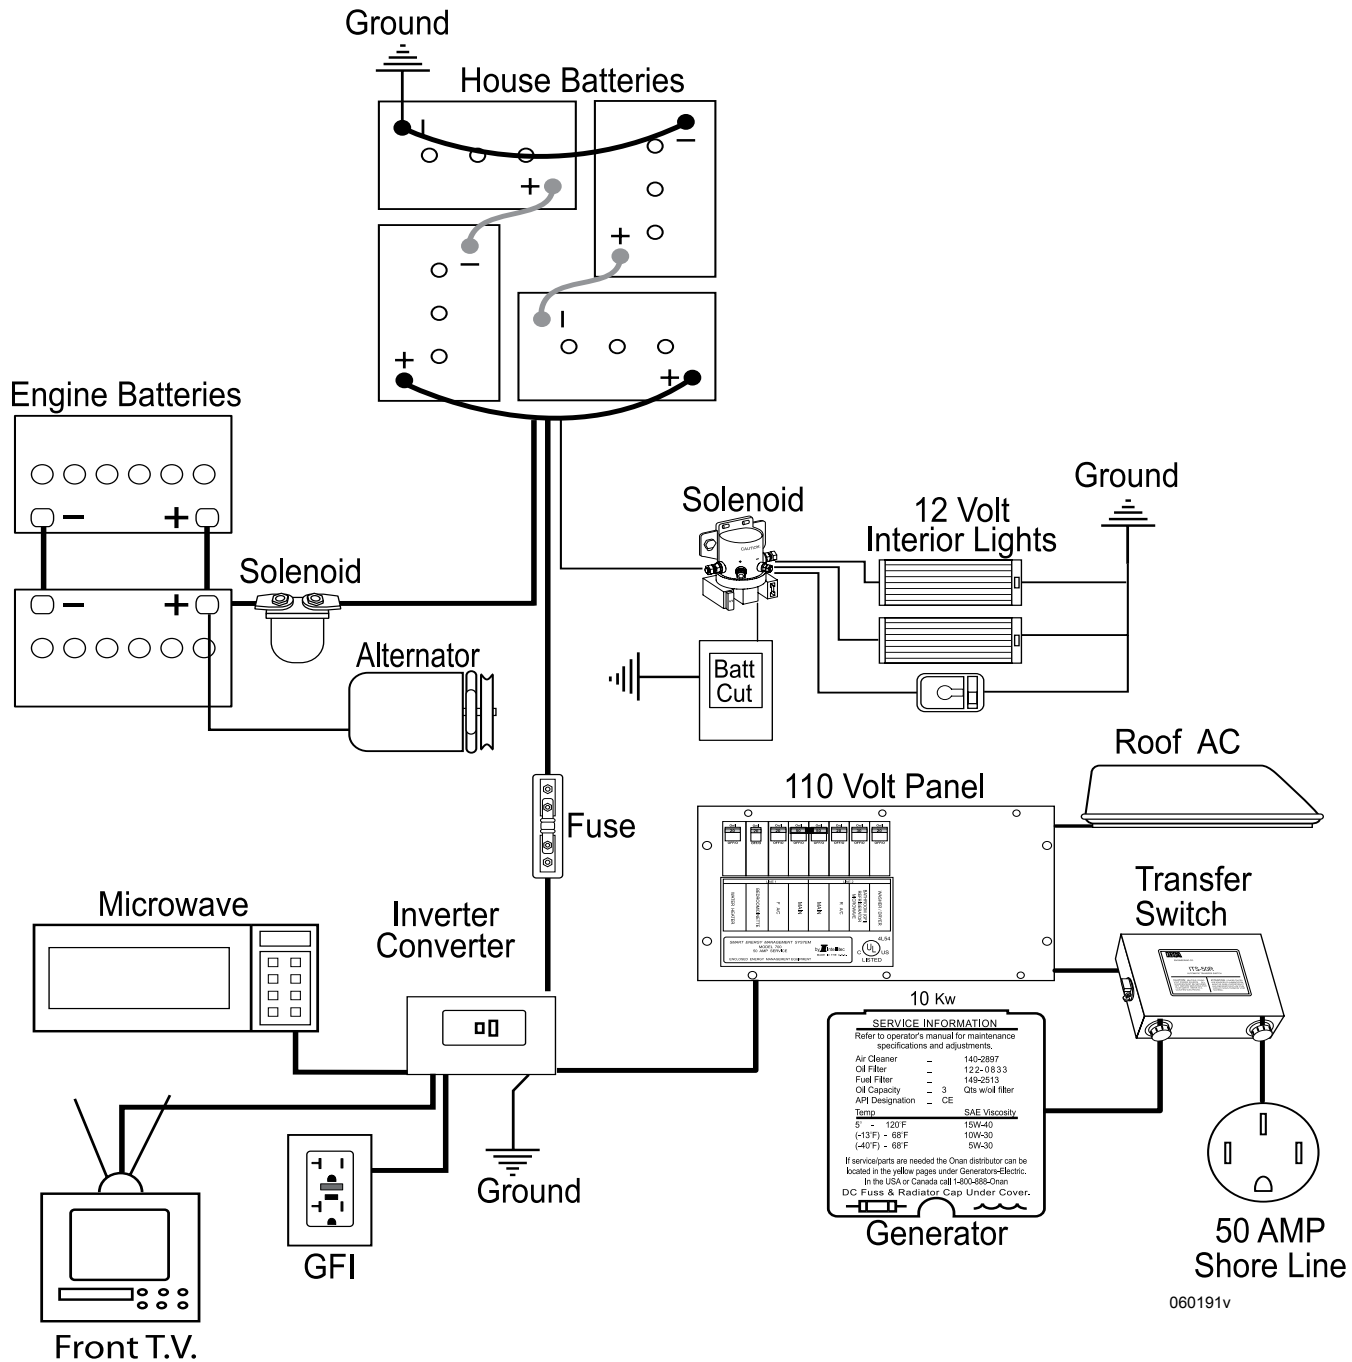

060191v

Electrical Systems - Chassis Section 9




CHASSIS ELECTRICAL - INTRODUCTION	178	ALTERNATOR	184	CONSOLE	186
BATTERY DISCONNECT - CHASSIS	178	Alternator Testing Procedure.....	185	Transmission Shift Selector	186
BATTERY - CHASSIS	178	STEERING COLUMN	185	Parking Brake.....	186
FUSES & CIRCUITS	179	Tilt & Telescope	185	Leveling Controls	187
Fuse Labels.....	180			DASH	187
Distribution Box - Main.....	182			Gauges	187
Bi-Directional Isolator Relay Delay	182			Indicator Lights	189
Isolator Relay	183			Switches.....	190
Relays	183			AIR CONDITIONER & HEATER CONTROLS	192
				Operating Tips & Hints	193
				System Components.....	193
				Troubleshooting	194
				DIAGNOSTIC PLUG LOCATION	195
				ENGINE "NO START" FLOW CHART	196

CHASSIS ELECTRICAL - INTRODUCTION

This section contains guidelines, procedures and information that will assist in understanding the chassis electrical system and the operation of various components. Refer to the OEM manuals included in the Owner's Information File box for their respective, in-depth, individual component operating instructions.

BATTERY DISCONNECT - CHASSIS

The main battery disconnect switch located in the rear curbside bay controls the DC power to the front electrical bay. Most chassis and engine functions are interrupted when the battery disconnect is turned off.

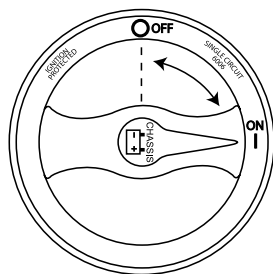

060350ba
Located in the rear curbside compartment.

Some electronic components of the engine and transmission require constant power and will continue to draw power when the disconnect is off.

Turn the main battery disconnect switch off when the motorhome is stored or when performing electrical maintenance. If possible, leave the motorhome plugged into an AC source with the battery disconnect switch on to help prevent the possibility of dead batteries.

If an AC source is not available and the motorhome is stored more than 48 hours, it is recommended to turn the battery disconnect switch off.

WARNING:

When welding is involved for motorhome repair or modification, only qualified, experienced technicians should weld on the chassis. Improper welding procedures and materials may weaken the assembly or result in damage that is not obvious and may not cause an immediate problem or failure. Unauthorized modifications or repairs to the chassis could result in a forfeiture of warranty coverage.

DANGER:

Due to the sensitive nature of the electronics on the chassis, the following precautions are required to protect electrical components in the motorhome chassis:



1. Disconnect the (+) positive and (-) negative battery connection.
2. Cover electronic control components and wiring to protect from hot sparks.
3. Disconnect the terminal plugs from the engine Electronic Control Unit, located on the passenger side of the engine block.
4. Disconnect all the plugs from the transmission Electronic Control Unit, located in the front electrical bay.
5. Disconnect the wiring from the alternator.
6. Do not connect welding cables to electronic control components.
7. Attach the welding ground cable no more than two feet from the part to be welded.

BATTERY - CHASSIS

The chassis battery is designed to produce high amperage necessary to start the engine. Maintain the chassis battery through regular electrolyte level inspections and hydrometer readings. High electrolyte consumption or inconsistent hydrometer cell readings may indicate a charging system problem. Perform a charging system and current draw check if the battery is exhibiting abnormal hydrometer readings.

NOTE:

Replacement batteries should have the same cold cranking amp (CCA) rating.

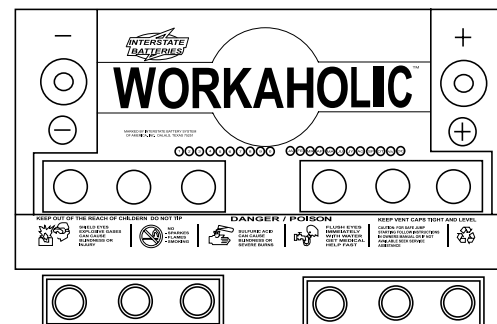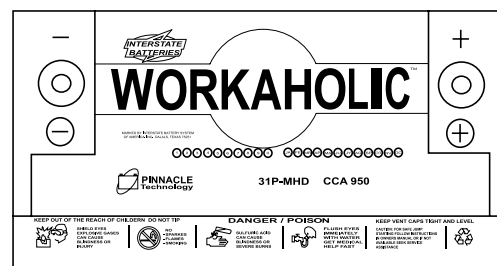

Battery with cover removed. Cut plastic to remove cover.


080460

FUSES & CIRCUITS

The front electrical panel located roadside ahead of the front wheel contains relays and mini-fuses. Specific assignments are noted on a label on the inside of the bay door.

The wire in the middle of the plastic case will break when a fuse blows. A bad or blown fuse must be replaced with a fuse of the same rating and type. Using a fuse of a different type or rating will defeat the circuit protection provided by the fuse and may result in damage to the motorhome electrical system.

A fuse that continues to blow may indicate that a fault exists or an electronic component has failed. It is recommended that the motorhome be taken to a qualified RV technician before any future use to diagnose and repair the potential problem.

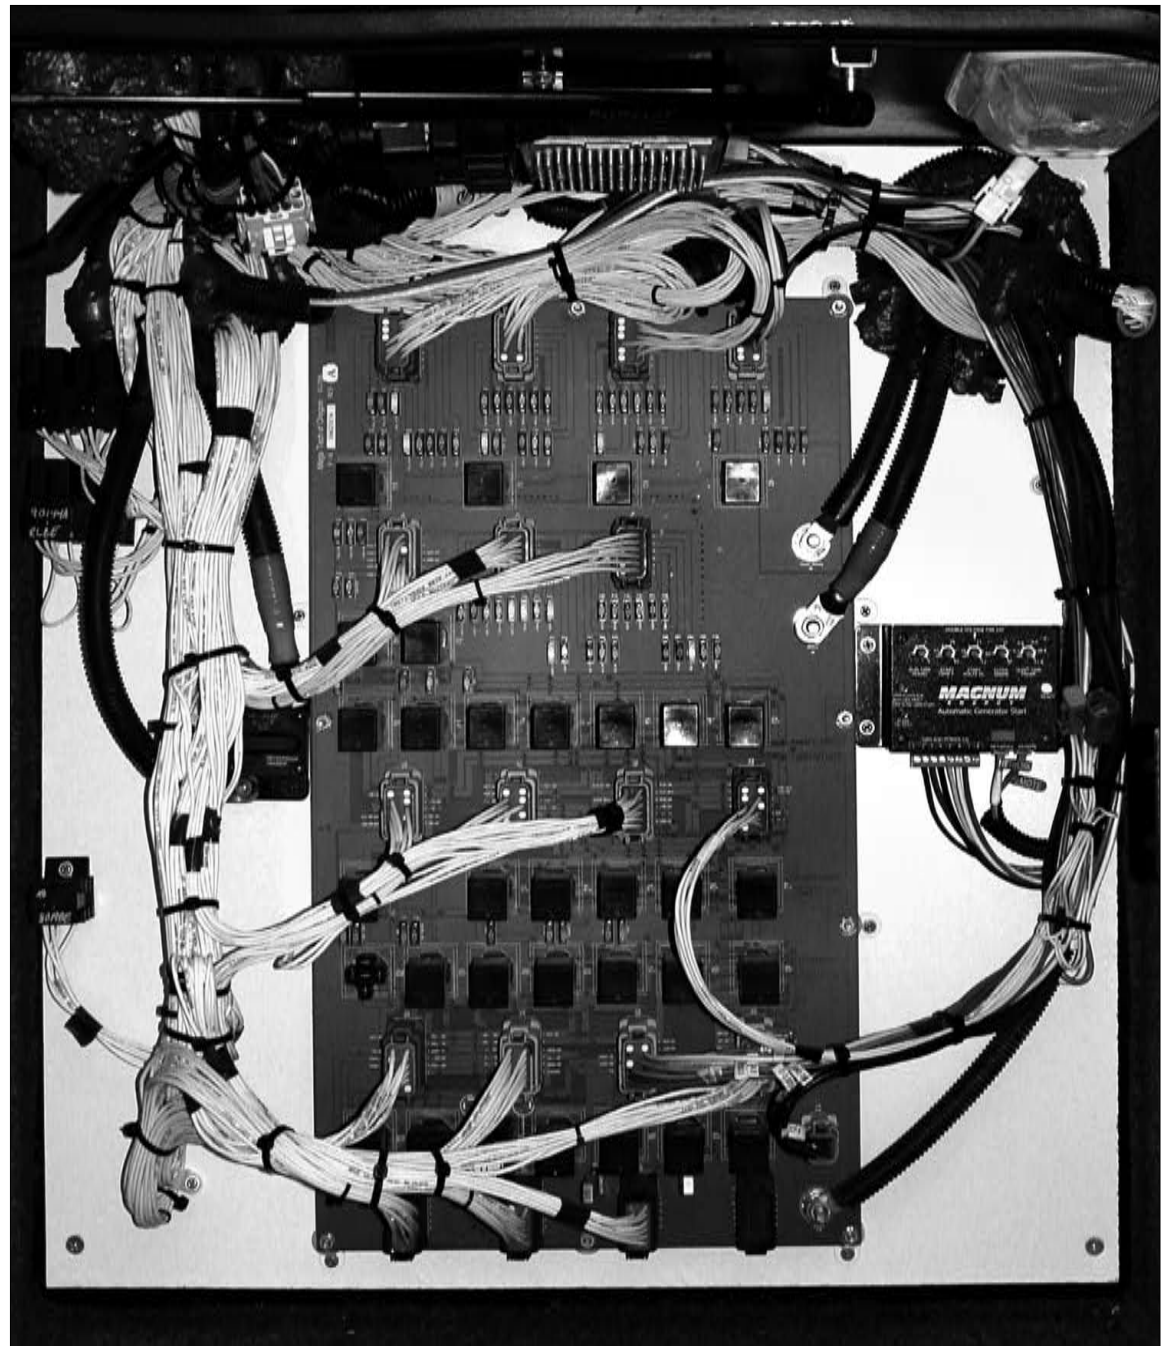

Front Electrical Panel

VCL - BROWN (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include VCL1 IGN+ BRAKE SW, VCL2 BATT+ SEC SYSTEM, VCL3 BATT+ INSTRUMENTS, etc.

VCN - GREEN (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include VCN1 IGN+ DRIVING LIGHTS, VCN2 IGN+ OVERHEAD FAN, VCN3 IGN+ INSTRUMENTS, etc.

VCO - BROWN (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include VCO1 IGN+ ENGINE ECM, VCO2 IGN+ TRANSMISSION TCM, VCO3 IGN+ ABS ECU, etc.

VCM - GRAY (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include VCM1 HSE BATT+ DSH RADIO, BOOST, VCM2 HSE BATT+ NAV SYS, DLP*, VCM3 HSE BATT+ TANK HEATERS*, etc.

Vehicle Cabin - PCB Connectors

VCI - GREEN (LEVELER HARNESS)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include GND FRONT REAR AIR*, GND CONT FR HYD*, GND CONT JACKS DOWN*, etc.

VCK - GREEN (FRONT CAP HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include VCK1 BATT+ PSNGR PNL, VCK2-3 BATT+ STEP, VCK4 BATT+ STEERING, etc.

VCJ - BROWN (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include VCJ1 BATT+ AUX BRAKE CONTRLR*, VCJ2 BATT+ DSH POWER PORTS, VCJ3 BATT+ PARKING LITS, etc.

VCG - BROWN (AUX CHASSIS HARN)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include VCJ1-30 PORCH LIGHT, VCJ31 GND A/C TRIN SW, VCJ32 GND A/C TRIN SW, etc.

VCH - GRAY (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include SWRHH HIGH BEAM, SWRHL LOW BEAM, LADRO LOCK ENTRY DOOR, etc.

VCG - GREEN (FRONT CAP HARNESS)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include VCG1-30 PORCH LIGHT, VCG31 GND A/C TRIN SW, VCG32 GND A/C TRIN SW, etc.

VCG - BROWN (AUX CHASSIS HARN)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include VCG1-30 PORCH LIGHT, VCG31 GND A/C TRIN SW, VCG32 GND A/C TRIN SW, etc.

VCG - BROWN (AUX CHASSIS HARN)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include VCG1-30 PORCH LIGHT, VCG31 GND A/C TRIN SW, VCG32 GND A/C TRIN SW, etc.

VCC - BROWN (FRONT CAP HARNESS)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include SWRHH HIGH BEAM, SWRHL LOW BEAM, LADRO LOCK ENTRY DOOR, etc.

VCCB - GREEN (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include SWRDL DOCKING LITS*, AM6 UNLOCK BAY DOORS*, AM7 LOCK ALL DOORS, etc.

VCA - GRAY (SUB FLOOR CHAS HARN)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include BLR87 YELI BAY LIGHTS, BLR87 YELI DOCKING LITS*, LADRO31 GRN DOOR UNLOCK, etc.

VCD - GRAY (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, TO/FROM. Rows include SWRBR BRAKES SW OUT, TCM63 SERVICE BRAKE STATUS, TCM3 SIGNAL RETURN, etc.

* INDICATES EQUIPMENT OPTIONS USED ON SOME VEHICLES.

VCP - BLACK (SPARE)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include GROUND BUS, GROUND BUS, GROUND BUS, etc.

VCO - BLACK (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include GROUND BUS, GROUND BUS, GROUND BUS, etc.

VCR - BLACK (FIREWALL HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include GROUND BUS, GROUND BUS, GROUND BUS, etc.


VCS - BLACK (FRONT CAP HARNESS)

Table with 3 columns: LOC No, FUNCTION, FROM. Rows include GROUND BUS, GROUND BUS, GROUND BUS, etc.


Distribution Box - Main

The main distribution box includes the battery isolator (Big Boy), the Bi-Directional Isolator Relay Delay (BIRD), the battery disconnect relay and various mini-breakers.

The Battery Isolator is installed between the chassis and house systems to connect them for charging. The Battery Disconnect Relay provides a quick and easy means of disconnecting the battery prior to storing or performing electrical maintenance.

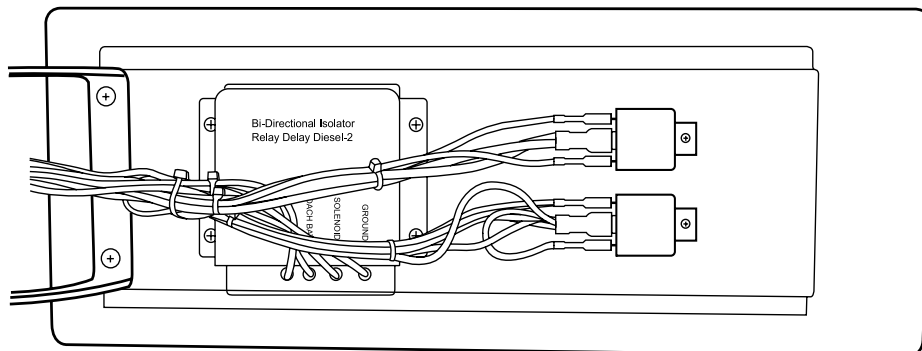


060231b

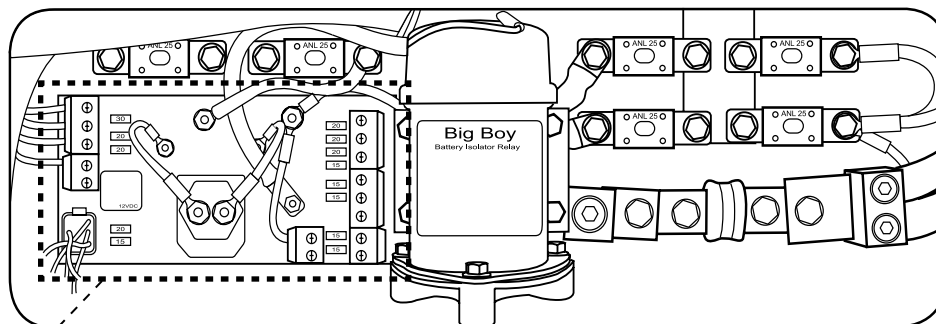

0800523b


Distribution Box: Located in rear curbside bay.

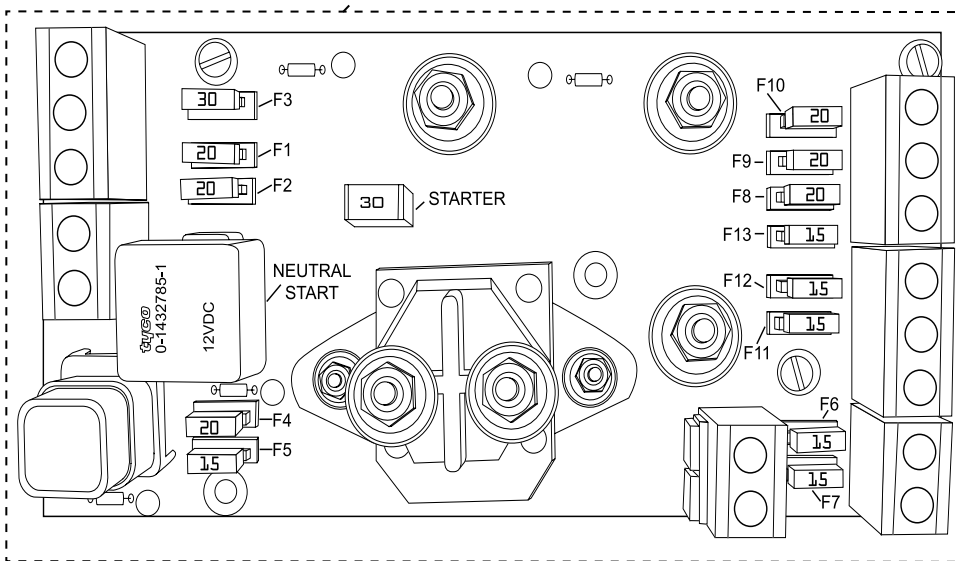

- F1 - OPEN
- F2 - OPEN
- F3 - ECM BATT
- F4 - IGN SW POWER
- F5 - BATT TRANSMISSION
- F6 - SOLAR PANEL
- F7 - SOLAR PANEL
- F8 - TANK HEAT/FAN
- F9 - CORD REEL
- F10 - HYDRONIC HEAT (opt)
- F11 - BOOST/BIRD
- F12 - LP/CO DETECTOR
- F13 - REFER

Bi-Directional Isolator Relay Delay

The Bi-Directional Isolator Relay Delay (BIRD) performs two important functions: Charging the motorhome house batteries from the engine alternator and charging the chassis batteries from the inverter/converter when the motorhome is plugged into shore power or operating from the generator. When neither battery bank is being charged they are isolated from each other to prevent the loads of one battery bank from inadvertently discharging the other.

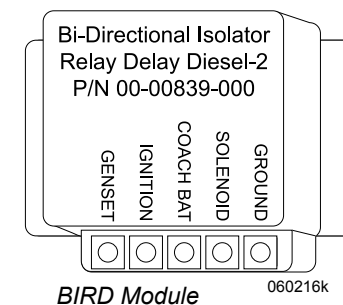

BIRD Module

060216k

The BIRD measures both house and chassis battery voltage. If voltage of either battery bank is above 13.3 Volts DC (indicating the battery is being charged), BIRD will close the isolator relay, thus paralleling the batteries and charging both.

NOTE:

The BIRD controls the Isolator Relay (Big Boy) that is connected directly to the chassis and house batteries. Power from both battery banks is fed into the module. The full power of batteries may be available at this module. Inadvertent shorts at this box could result in damage and/or injury. Only a qualified Service Technician should service this module.

Engine Alternator Charging the Batteries:

When the engine is running, the system senses the level of voltage on the chassis 12 Volt DC system. When this voltage goes above 13.3 Volts DC for approximately 12 seconds, as happens when the engine is running normally (normal alternator output voltage of a cold engine is approximately 14.4 Volts DC), the isolator relay will close and charging current will go to the house batteries. This delay allows the opportunity for chassis voltage to stabilize before a heavy load, such as discharged house batteries, are placed on it. If chassis battery voltage should fall below 12.6 Volts DC for more than four seconds, the relay will drop out so full alternator output to the chassis battery is available as needed to keep the engine running. This even may happen when the alternator is unable to supply sufficient current to all of the loads and charge the house batteries at the same time. When the chassis voltage again reaches above 13.3 Volts DC, the relay will close in four seconds and send charge to the house batteries. A resultant flickering of lights may signify alternator overload.

Inverter Charging the Batteries:

The inverter charges the house batteries when connected to shore power or when the generator is running. When house battery voltage rises above 13.3 Volts DC for approximately 12 seconds, the BIRD module will close the isolator relay, connecting the house and chassis battery banks. This provides charging current to the chassis batteries. If house battery voltage should fall below 12.8 Volts DC for more than four seconds, the BIRD module will open the relay to prevent the house loads from

discharging the chassis batteries. This might happen when a heavy demand is placed on the inverter. If house battery voltage again rises about 13.3 Volts DC for 12 seconds, the relay will close to also charge the chassis batteries.


Isolator Relay

The Isolator Relay provides a simple means of isolating the two battery systems, house and chassis, and connecting the batteries together when the engine is running.

A momentary dash-mounted switch is added to provide a boost for the engine batteries from the domestic batteries.


When using the battery boost switch, the relay may have to deliver the full starting current to the engine batteries. The relay contacts must close and provide low resistance without the harmful effects of arcing.

To be sure relays can perform under harsh conditions, the contacts are protected with a unique antioxidant coating. The relay is of heavy construction and can easily deliver the needed current. In a battery charging situation, both batteries will charge at equal voltage.

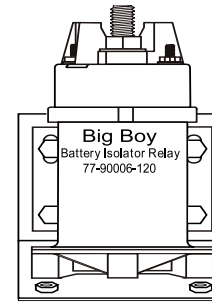


060216b
Isolator Relay: Located in Rear Curbside Bay

Relays of this style can look the same in appearance, but differ in function. Note that on the side of the relay is a schematic identifying the relay as an 87 or 87a relay. The operating characteristics differ, and if mixed, will create problems. Ensure the replacement relay is of the same type and current rating to assure proper operation.

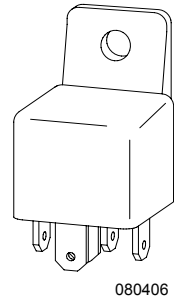

Another indicator to the type of relay is the post or legs. Turn the relay over and look at the posts.

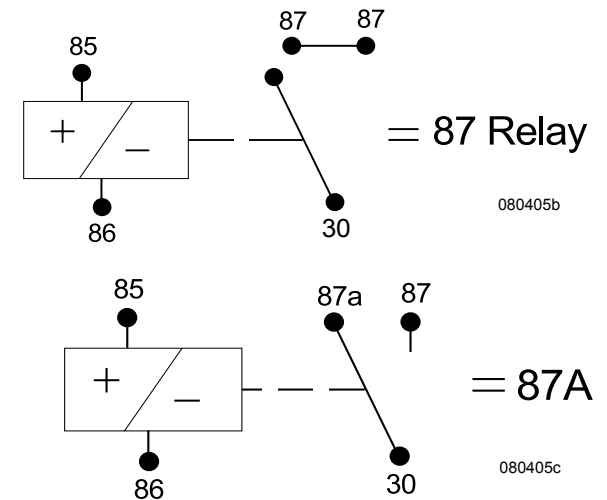


Note differences between numbered posts:


1. The 30 post is the incoming fuse and/or breaker power. Some relay applications supply power to the 30 post. Some use it for ground. The 30 post can be used many different ways.
2. The 85 post is one side of the coil, tripped different ways.

3. The 86 post is the opposite side of the coil, tripped different ways.
4. The 87 posts are not common to the 30 post until the relay is tripped. When the relay trips, both 87 posts are common to the 30 post.
5. Using an 87a relay, the 30 post and the 87a post are common. When the coil is tripped, the 87a post becomes inactive and the 30 post becomes common to the 87 post located on the outside of the relay.

A Single Pole Single Throw relay (SPST) is an electro-magnetic switch consisting of a coil (terminals 85 & 86), one common terminal (30), one normally closed terminal (87a), and one normally open terminal (87).

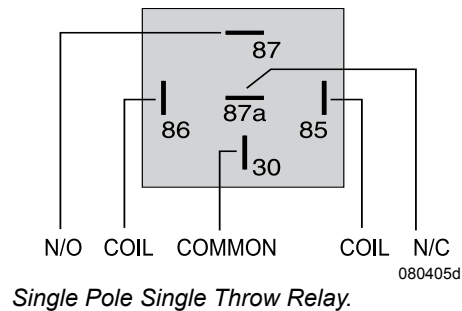

When the coil of the relay is at rest (not energized) the common terminal (30) and the normally closed terminal (87a) have continuity. When the coil is energized, the common terminal (30) and the normally open terminal (87) have continuity.

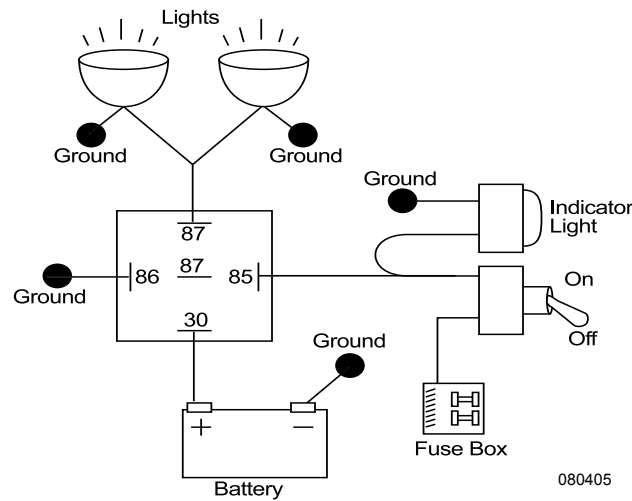

NOTE:

When there is power applied to the coil, the coil sets up a magnetic field in the windings. When the power is removed, the field collapses. A momentary high voltage discharge will occur. This is how an ignition coil works.


ALTERNATOR

The alternator is designed for consistent output through the engine operating range. When traveling, keep an eye on the voltmeter in the dash area. Normal readings should be between 13 to 14.5 Volts DC. Voltage indications higher or lower indicate a potential problem with the charging system. If the alternator output drops below an acceptable level, a low battery warning will display on the dash LCD.

The alternator replaces amp hours the chassis battery used to start the engine. The amount of charge the alternator sends to the chassis battery is dependent on the amount of time the engine is operated. Repeatedly starting the engine for short periods may not be enough operating time to adequately replace the amp hours the chassis battery uses to start the engine.

The function of the alternator is an electrical system voltage maintainer, not a battery charger. When the engine is operating, the alternator maintains electrical system voltage relative to a load, such as headlights and windshield wipers. When a heavy load is placed on the alternator, such as trying to charge dead house batteries, the operating temperature of the alternator will increase.

Excess operating temperature of the alternator for extended periods of operation can lead to premature failure of the alternator.

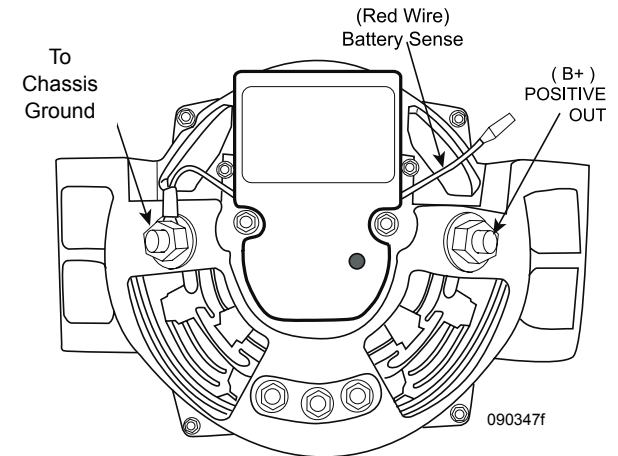

160 Amp Alternator

NOTE:

The alternator is not designed to charge the house batteries from a complete discharge to a full state of charge. The alternator will maintain the battery charge during travel, supplying the DC current necessary to operate running lights or other DC loads.

If the house batteries are in a low state of charge, it is recommended to charge the house batteries with the inverter or an auxiliary battery charger before driving the motorhome.

CAUTION:

Long-term use of the inverter to operate the microwave while in transit will damage the alternator. Use the generator to operate the microwave while in transit.

Alternator Testing Procedure**Alternator Testing:**

- Check all wiring for burnt or loose electrical connections. Repair as needed.
- Check all grounds and electrical connections to confirm they are clean and tight.
 - Alternator ground to chassis frame.
 - Motor block ground to chassis frame.
 - Chassis battery ground to chassis frame.
 - Alternator positive output to isolator relay terminal.
- **Inspect** the alternator for damage.
- Check belt pulley for wear. Replace as needed.


- **DO NOT** disconnect the battery or battery wire from the alternator with the engine running. This can damage the alternator or regulator and voltage sensitive drive train electronics.
- The pulley for the alternator should be torqued to 80 ft. lbs.
- Chassis battery voltage with the engine **OFF** should range from 12.2 to 12.7 Volt DC.
- Chassis battery voltage with the engine at idle should range 13.5 to 14.2 Volts DC.
- The output of the alternator range is 13.6 to 15.4 Volts DC. Connect a volt meter to the (B+) terminal of the alternator and chassis ground. Idle the engine up to 1200 RPM.
- Connect a clamp-on amp-meter, if available, to the positive battery cable to verify the battery state/rate of charge.

CAUTION:

The alternator is not a battery charger. The alternator is designed to maintain proper electrical system voltage. A battery with a low state of charge, or a dead battery, may overheat and damage the alternator.

**STEERING COLUMN
Tilt & Telescope**

Tilt and telescope steering wheel control lever is located on the steering column.

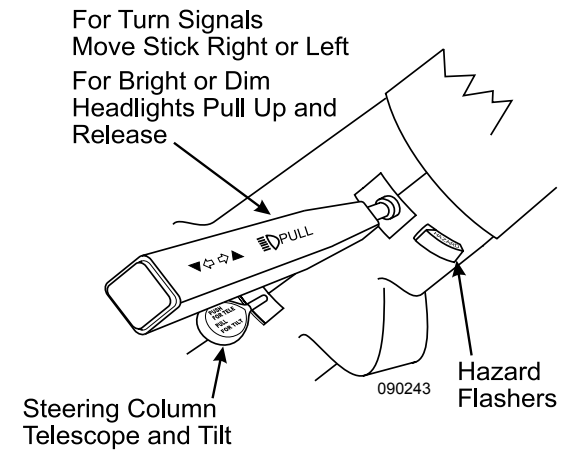

- **To Tilt the Steering Wheel:** Pull the lever up and tilt the steering wheel to the desired level. Release the lever to lock the steering wheel in the new position.
- **To Telescope the Steering Wheel:** Push and hold the lever down. Move the steering wheel to the desired location. Release the lever to lock the steering wheel in the new position.

Turn indicator and headlight high/low dimmer control is located on the steering column.

- Push the lever forward to activate right turn indicator circuits when the ignition is on.
- Pull the lever back to activate left turn indicator circuits when the ignition is on.
- Pull the lever up to select high/low beam circuits when the headlights are on.


Hazard Flashers:

- The flasher button is located on the steering column.
- To turn on the four-way flashers, pull **out** on the flasher button. The turn signal alarm will sound.
- To turn off the flashers, push the button **in**.

CONSOLE

Transmission Shift Selector

NOTE:
Switch and component placement on panels may vary.

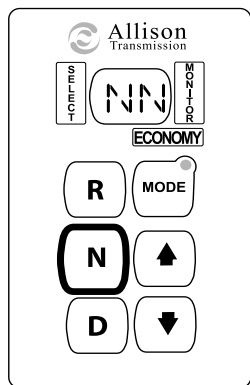

080355g

The keypads on the shift control are **R** (Reverse), **N** (Neutral), **D** (Drive), Arrow up, Arrow down, Mode button. A digital display window shows gear selection, various transmission modes, oil level and transmission fault codes. Two number sets display while in Drive. The left number displays the highest forward range available. The right number is the range that the transmission is currently in. **NN** (Neutral) will appear in the display window when the ignition is turned On.

This indicates the transmission is in neutral and it is safe to start. If **NN** does not display when the ignition is turned on, there is no power to the shift selector and the transmission will not allow the engine to start. No display is an indicator of electrical problems with the engine batteries, transmission ECU or the shift selector.

Keypad Functions:

- Select Reverse gear by pressing **R**. **RR** will display.
- Select Neutral by pressing **N**. The area around the **N** button has a raised ridge so the driver can orient his hand to the push buttons by touch without looking at the display. **NN** will display.
- Select Drive range by pressing **D**. The highest forward gear (6th gear) appears in the display and the transmission will shift to first gear indicated as 6 1.
- **Up** and **Down** arrow buttons are used to select a higher (if not in “6”) or lower (if not in “1”) forward range. These buttons are not functional in Neutral or Reverse. When in Drive, one press changes the gear range selected by one. If the button is held continuously, the selected range will continue to change up or down until the button is released or until the highest/lowest possible range of gears is selected.
- The Mode button enables a secondary shift point to be selected. This is commonly referred to as Economy mode. Economy mode affects the upshift schedule 3-4, 4-5, 5-6 and downshift schedule 6-5, 5-4, 4-3. During highway driving, with the cruise control set between 55 and 65 m.p.h., setting the transmission to economy mode will eliminate about 99% of transmission downshifts from sixth to fifth when incurring a slight incline or overpass.

DO NOT use economy mode while traveling in mountain terrain. The lower RPM shift schedule will reduce the flow of antifreeze, lubricating oil and air flow through the radiator, resulting in increased transmission and engine temperature.

CAUTION:

DO NOT use the economy mode in heavy stop and go traffic or mountainous terrain. Frequent shifting will occur and increase transmission fluid temperature. Exit economy mode until road conditions improve.


NOTE:

When the Auxiliary Braking device is used, the display will change to a default reading of 6-2. The transmission is not actually in second gear. This is only a reference point indicating the transmission will automatically downshift to second gear when auxiliary braking device is engaged.

Parking Brake

The parking brake system is activated by pulling the push-pull control knob located on the driver’s console. When the knob is pushed, the brake is released.

The air system must be fully charged and the motorhome at ride height prior to driving. Start the engine and allow the air system to fully pressurize (approximately 135 psi). The air dryer will audibly purge air when the air governor attains cutout pressure.

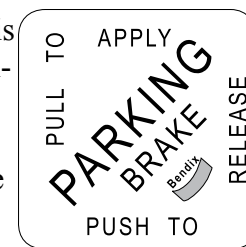


080313e

If the air system is not depleted when parked, it is possible to accidentally release the parking brake. Traveling with small children and/or pets may require fabrication of a small block to be placed under the park brake knob. A wooden clothes pin, clasped at the base of the shaft, will also work (block or clothes pin not included). Do not forget to remove before travel.

Leveling Controls


Lippert - Hydraulic System:

The three-point hydraulic leveling system is operated from the control module to manually or automatically level the motorhome. The control features a multiple warning system with flashing lights and an alarm to alert of a jack down.

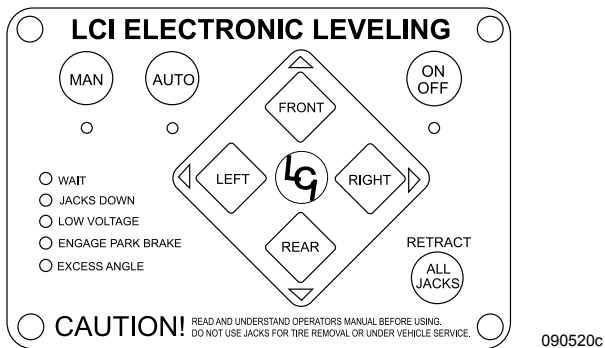

Lippert Hydraulic Level Control

NOTE:
Air leveling will not operate unless the ignition is on.

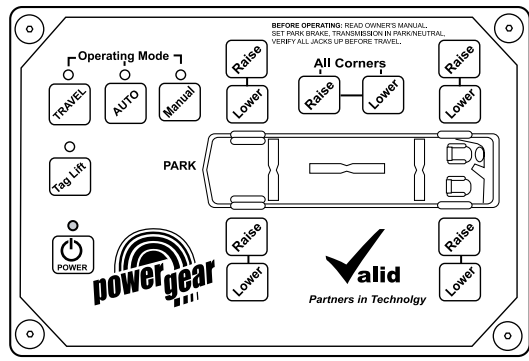

Power Gear Air Leveling Control



NOTE:
Some of the items depicted in the dash drawing are not used depending on floor plans and equipment options.

1. FUEL:

The fuel gauge will register approximate fuel tank level when the ignition switch is in the run position.

NOTE:
Fuel mileage varies with driving style and road conditions. Always average more than one tank of fuel to obtain a more accurate figure. The diesel generator uses fuel from the main tank and will affect fuel mileage figures. The diesel generator will not operate below 1/4 tank to ensure there is enough fuel to run the engine.

DASH Gauges

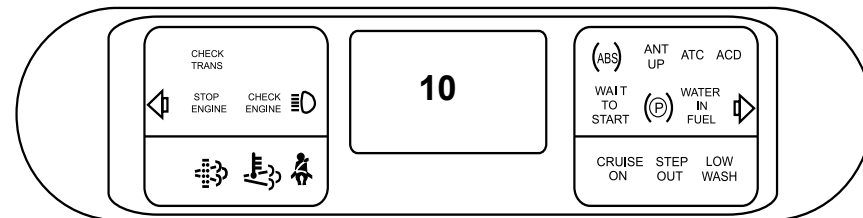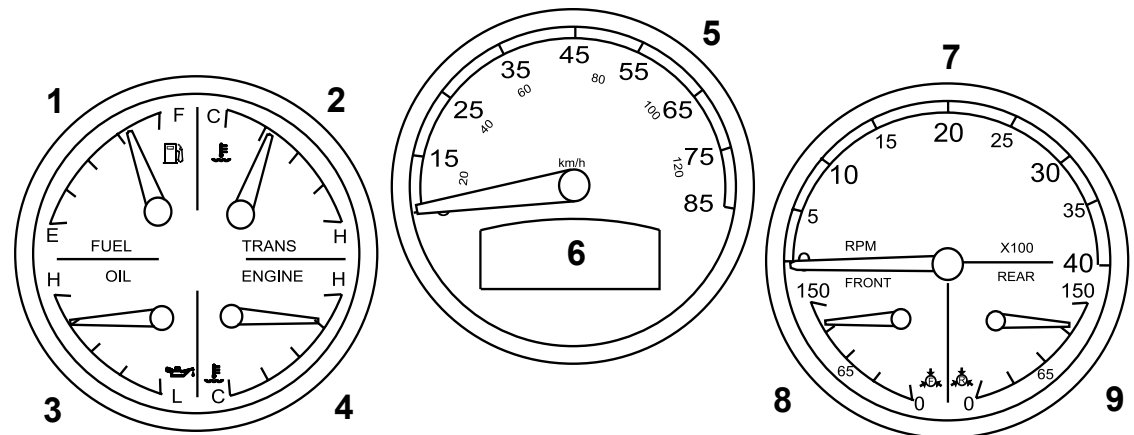

ULTRA LOW SULFUR DIESEL FUEL ONLY

080515h

2. TRANS TEMP:

Shows approximate temperature of the transmission fluid. Do not let the transmission oil temperature exceed OEM specifications. Stop the motorhome and shift into neutral if excess temperature is indicated. Raise engine speed between 1200 to 1500 rpm to help transmission fluid temperature to return to normal.

3. OIL PRESSURE:

Indicates oil pressure (not the amount of oil in the engine). Please refer to manufacturer's instructions for specific pressure recommendations.

4. COOLANT TEMPERATURE:

Indicates an approximate normal operating range. Monitor this gauge frequently in all conditions, especially when climbing hills, towing and/or traveling in high ambient temperatures. If the needle indicates an out of range condition, take immediate action to avoid engine damage. Refer to the OEM manual for specific temperature recommendations.

5. SPEEDOMETER:

Indicates the speed of the motorhome. The gauge indicates MPH and KPH.

6. ODOMETER:

Displays total mileage.

7. TACHOMETER:

Displays engine speed in revolutions per minute (RPM).

8 & 9. AIR PRESSURE GAUGES:


One gauge is for the front air tank, and the other is for the rear air tank. Normal air system operating pressure cycles between approximately 115 to 135 psi. This range is preset at the factory. If a problem occurs with either air system not maintaining normal operating pressure, it is indication of a malfunction in the air system. Use caution and stop the motorhome in a safe area. Contact an authorized service technician immediately.

NOTE:

DO NOT drive the motorhome with low air pressure. It is not safe. Damage can occur to the suspension and driveline and the air brake system will not properly function.

10. LCD DISPLAY:

The LCD displays chassis data and fault codes. A ten button controller is located on the dash. Press the up and down arrows to scroll through menus, and press the enter button to select items.

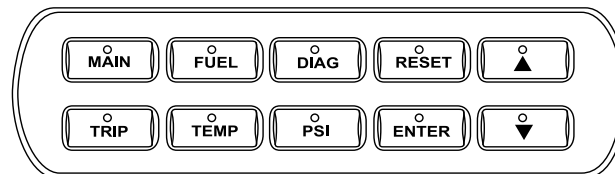LCD Controller:

080515f

Main – Press at any time to return to the main screen. The main screen displays outside temperature, chassis battery voltage and odometer.

Trip – Press to view Trip menu. Use the up or down arrow to highlight a trip, and press the Enter button to view trip information. Trip information includes average speed, distance traveled, trip time and fuel used.

Fuel – Press to display average miles per gallon, instantaneous miles per gallon, and fuel used. Hold the reset button for five seconds to clear.

Temp – Press to view outside, basement, transmission and engine coolant temperature.

Diag – Press to view engine, transmission, ABS, and LCD diagnostic menu. Use the up and down arrow to highlight an option from the menu. Press the Enter button to view diagnostic information and options.

PSI – Press to view oil pressure, turbo boost pressure and front and rear air tank PSI.

Reset – Press and hold for five seconds to clear selected trip information (trips 1 through 4 can be individually selected for reset).

Enter – Press to select menu options.


Warnings:

LCD also displays following warnings:

- ABS Warning
- Check Transmission
- Bay Door Open (including engine door)
- Low Oil Pressure
- High Transmission Temp
- Generator Door Open
- High/Low Coolant Temp
- Low/High Battery
- Low Air Pressure – Front
- Low Fuel Level
- Low Air Pressure – Rear
- Water in Fuel
- Engine Not Running
- Turn Signal
- Headlight On
- Low Coolant

NOTE:

The “Bay Door Open” warning includes all bay doors and the engine door.

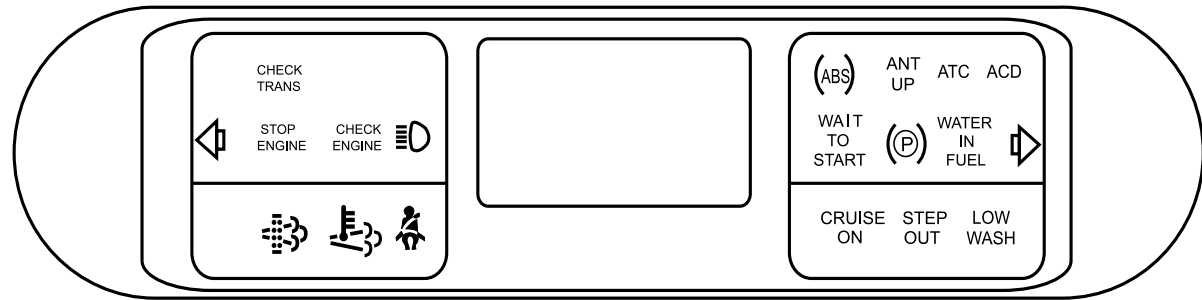

ULTRA LOW SULFUR DIESEL FUEL ONLY

080515e

LEFT ARROW - Audible Turn Indicators:

Left turn indicator circuits active. Alarm cancels when service brake is applied.

STOP ENGINE:

A severe out of range condition exists within the engine protection circuits. Pull over and stop as soon as possible. Shut-off the engine to avoid damage to the engine or related systems. Check gauges. Inspect engine fluid levels. Refer to OEM engine manual.

CHECK ENGINE:

An out of range condition exists within the engine protection circuits. Have the engine serviced as soon as possible.

HIGH BEAM:

Turns on when high beams are active.

DPF:

The DPF (Diesel Particulate Filter) light signals an active regeneration cycle is necessary, but unable to initiate. See *Section 10* for more information.



080515b

HEST:

The HEST (High Exhaust System Temperature) light illuminates when an active regeneration cycle is underway, which results in elevated exhaust temperatures. No fault exists as long as there are no other active warning lights. See *Section 10* for more information.



080515b

SEATBELT LIGHT:

Stays lit for eight seconds after the key is turned on.

ABS:

Indicates possible fault in the ABS Brake system.

ANTENNA UP:

Illuminates when the TV antenna is raised. Lower the antenna before moving the motorhome.

Indicator Lights**CHECK TRANS:**

Alerts of problems related to the Allison Transmission. The light should momentarily illuminate when the ignition is switched ON. When starting, the lamp will extinguish indicating the circuits are properly working. If the lamp fails to illuminate or remains on, immediately have the transmission checked by the nearest Allison dealer.

ATC:

The ATC (Automatic Traction Control) light is continuously lit when ignition is first turned on and stays lit until the brakes are used for the first time and then turns off. The ATC light continuously flash when the ATC switch (located on the driver console) is on. See Section 10 for more information.

ACD: N/A

WAIT TO START:

Monitors the manifold preheat. Wait for the lamp to cycle off before cranking the engine.

PARK BRAKE:

Parking/emergency brake is applied.

WATER IN FUEL:

Water has been detected in the primary fuel filter. Purge water from filter at engine compartment.

RIGHT ARROW - Audible Turn Indicators:

Right turn indicator circuit is active. Alarm cancels when service brake is applied.

CRUISE ON:

Cruise control is activated.

STEP OUT:


Exterior entry step is extended.

LOW WASH:


Indicates low windshield washer fluid.

Switches

Dash switches come either with or without a Bar Light. The Bar Light indicates the item/function is active. Icon lighting for both switch types illuminate with panel lamps.

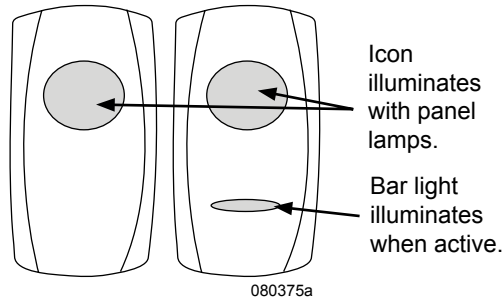**Driver's Console:****MIRROR ADJUST:**

To adjust the outside mirrors, place the small selector in the middle of the switch to the desired side. The middle position is to prevent accidental bumping of the switch and changing the mirror position. The outside mirrors are easily adjusted with the Allen wrench. After taking delivery of the new motorhome it will be necessary to sit in the driver's seat and adjust both the driver and the passenger mirrors.

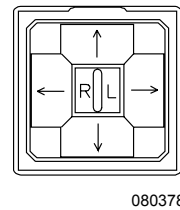**MIRROR HEAT:**

The switch turns on the heaters in outside rearview mirrors. Mirror heaters should only be used when defogging or de-icing is needed.

NOTE:

Extreme weather conditions combined with elevated interior humidity levels may require additional manual assistance to clear the windshield for safety. It is not safe to drive with obscured vision due to moisture or snow accumulating on the windshield.

STEP COVER:


Extends and retracts the step cover.

AUX BLOWER:

Operates a two-speed overhead fan for air circulation in the windshield area.

SAFETY CRUISE ADJUST (Optional):

Adjusts following distance, changes the menu and turns the Vorad Safety System on and off.

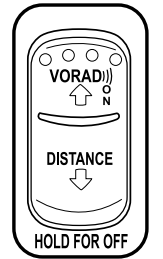**ATC:**

Activating the ATC switch allows greater torque during an ATC event.

ENGINE BRAKE:

This three-position switch activates the control solenoid for the engine brake system. (See Sec 10 for operating information.)

HI = All six cylinders.

LO = Three cylinders.

Off = System off

BATTERY BOOST:

A switch that connects the house batteries to the chassis batteries to assist in starting the engine in the event that the motorhome chassis battery has been drained and cannot start the engine.

Dash:**FRONT VISOR:**

Operates the front visor.

FRONT SHADE:

Operates the front shade

FOG LIGHT:

Turns on fog lights.

PEDAL IN/OUT:

This switch moves both the brake and throttle pedals closer or farther away from the driver.

DIMMER/RHEOSTAT:

Controls dash switch backlighting when headlight switch is on.

**HEADLIGHT:**


Pull out one stop to operate the parking lights. Pull out two stops to operate the headlights.



080416

SAFETY CRUISE DISPLAY (Optional):

Displays following distance and menu settings of the Vorad Collision Warning System.

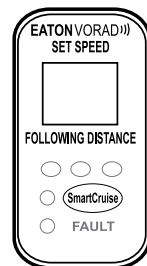

020296

TAG AXLE:

Hydraulic Leveling - Switch on driver's console raises and lowers the tag axle. The bar light on the switch is illuminated when the tag axle is raised.

Air Leveling (Optional) - The tag axle switch is incorporated into the air leveling control panel. Pushing the "Tag Lift" button will raise or lower the tag axle. The engine must be running with level control in Travel Mode for two minutes before it is possible to raise the tag axle. This allows extra time to pressurize the air system.

NOTE:

Raise the tag axle when making sharp turns under 5 mph.

NOTE:

Do not drive the motorhome over 5 MPH with the tag axle raised. The manufacturer will not be held responsible for any damage that occurs from driving with the tag axle raised.

AIR DUMP (Hydraulic Leveling Only):

Dumps air from the air bags which may aid in leveling the motorhome. Releasing the air from air bags will lower the suspension, giving the jack more range of travel. Ignition must be in accessory or ON position.

CAUTION:

Do not drive the motorhome with the air suspension (air springs) deflated. This will damage the motorhome.

GEN SET:

The generator automatically initiates a preheat cycle when the switch is pressed to START. The preheat cycle is indicated by the light on the switch rapidly flashing. Depending on ambient temperature the preheat cycle may last up to 10 seconds. For detailed operating instructions, see Section Eight of this manual.

SIDE DOCK:

Operates the side docking lights.

Passenger Console:**STEP COVER:**

Extends and retracts the step cover.

MAP LIGHT:

Turns map lights on and off.

FRONT SHADE:

Operates the windshield shade.

STEP LIGHT:

Turns step well lights on and off.

Passenger Console Base:**ENTRY STEP:**

Provides power to the entry step.

PORCH LIGHT:

Turns the outside porch light on and off.

CEILING LIGHT:

Turns the front overhead lights on and off.

DOOR AWNING:

Extends and retracts the entry door awning.

PATIO AWNING ON/OFF:

Provides power to the patio awning. Turn on for interior and exterior awning switches to operate.

PATIO AWNING EXTEND/RETRACT:

Extends and retracts the patio awning.

BATTERY CUT-OFF:

Turns power ON and OFF to interior 12 Volt DC fuse panel.

BAY LIGHTS:

Turns storage lights on and off.

AIR CONDITIONER & HEATER CONTROLS**Dash AC and Heater Control:**

Designed to provide heating, cooling and defrost capabilities for the pilot/co-pilot area. The system is not designed to heat or cool the entire motorhome.

Blower Control Switch:

Controls the four speeds of the blower motor. This is one of the most effective ways of controlling temperature. The Mode Control Switch must not be in the OFF position in order for the blower to activate.

Temperature Control Switch:


Setting the switch to the **red** zone controls an electric water valve regulating the amount of engine coolant passing through the heating coils in the system. Rotating to the **blue** zone sets the cut-in/cut-out temperature of the air conditioning compressor on the engine.

Mode Control Switch:

Directs air flow by opening or closing damper doors. Use the Mode Control Switch to direct airflow where it is needed to maximize comfort in the cockpit area.

NOTE:

The air conditioning compressor is activated when using MAX A/C, A/C, MIX and DEFROST.

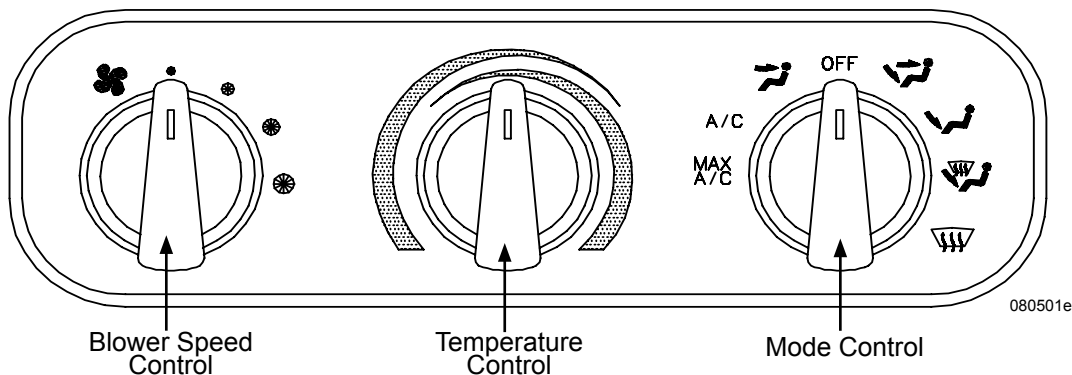

- MAX A/C** - Recirculated air is drawn from the passenger area and discharged through the dash louvers.
- A/C** - Fresh air is drawn from outside into the system and discharged through the dash louvers.
- VENT** - Fresh air is drawn in and discharged throughout the dash.
- OFF** - The blower motor does not operate. The fresh air inlet door will close, minimizing outside air infiltration into the motorhome.
- BI-LEVEL** - Fresh air is drawn in and discharged through the dash and the floor.
- FLOOR** - Fresh air is drawn in and discharged through the floor louvers.
- MIX** - Fresh air is drawn in and discharged through the floor and defrost louvers. The A/C system operates to dehumidify the discharged air.
- DEFROST** - Fresh air is drawn in and discharged through the defrost louvers. The A/C system operates to dehumidify the discharged air.
- 090273 - 277

A/C Operation:

The A/C dash system will operate in all modes except **BI LEVEL**, **FLOOR** and **OFF**. When the Mode Control Knob is positioned in the A/C mode, fresh air is drawn through the front air intake of the unit through the A/C coil. The Mode Control Knob in the **MAX A/C** position closes off a damper door to outside interior air.

Select this position when maximum cold air is desired or to keep outside air from entering the motorhome.

Heat and Defrost Operation:

- Set the Mode Control Switch to the desired position.
- Set the Temperature Control Switch to the red zone.

Operating Tips & Hints

Air intake and discharge temperatures are greatly affected by ambient temperature and relative humidity. A large amount of cooling capacity is used to dehumidify as well as cool air.

Winter Use:

- De-ice the windshield using the **DEFROST** mode.
- Discharged air temperature increases with a slower blower speed until normal engine operating temperature ranges are reached.

Summer Use:

- Close all windows and vents to hot, humid outside air.
- The recirculation blower provides quick cool down.
- Use a lower blower speed to produce cooler air.

Heater:

The heater warms the air in the dash area. Much like the refrigeration side of the system, a liquid will be used in the process. This liquid is the engine coolant. The coolant is passed from the radiator to an electronic water valve. The water valve, when open, will allow the coolant to flow through the heater core. The heater core is much like a miniature radiator. Air is drawn into the system by a blower motor through the outside recirculation door opening.

Air is blown through the A/C evaporator core and then through the heater core. When the temperature control is in the **WARM** position coolant flows through the heater core. When the temperature is in the **COOL** position coolant flow bypasses the heater core. In either position, the airflow is felt at the discharge vents.

Electric Water Valve:

The water valve controls the water flow to the heater core. A control module compares the output voltage from the thermostat to the feedback for the stepper motor of the water valve. The control module then drives the motor to within one-half volt of the control thermostat voltage.

Functional Test:

- Start and operate the engine until the water reaches normal operating temperature.
- Set the HVAC temperature control to the full hot position.
- Discharge air outlets should have hot air.
- Rotate the temperature control to full cold position.
- Allow 10 minutes for the temperature to stabilize.
- The discharge air outlets should have cold air.

System Components

Compressor - The compressor is belt driven from the engine through the compressor and electronic clutch pulley. The compressor will pump freon from a low-pressure gas into a high-pressure, high-temperature gas. This is the start of the refrigeration process.

Condenser - The condenser is made of coils and fins which provide rapid transfer of heat from the refrigerant as external air passes over the coils. The high-pressure gas is changed to a high-pressure liquid.

Condenser Fan - A steady flow of cooling air is maintained across the condenser during system operations.

Expansion Valve - The expansion valve suppresses the refrigerant into the evaporator according to the cooling requirements. The pressure is reduced in the restrictive effort of the expansion valve. A part of the valve is the capillary tube assembly. The capillary tube is the sensing bulb at the outlet of the evaporator.


Evaporator - A tube core and fins are used in the evaporator similar to the condenser. Air is blown through the fins to allow the evaporator to cool and reduce pressure.

Receiver-Drier - Freon leaves the condenser, enters the receiver-drier and is stored until needed. The drier filters out moisture in the system. It only takes one drop of moisture to cause a malfunction in the cooling unit.

Blower and Motor - The evaporator has a fan called the blower. The blower will draw air from the cab area and force the air over the evaporator coils and fins. This forced air will ensure continuous vaporizing of the R134a.

Relays and Switches - Both electronic and vacuum switches are used in the control and operations of the system.

Vacuum Generator - The vacuum generator is important to the operation of the dash heating and A/C systems. This provides the vacuum to open and close the vacuum switches.

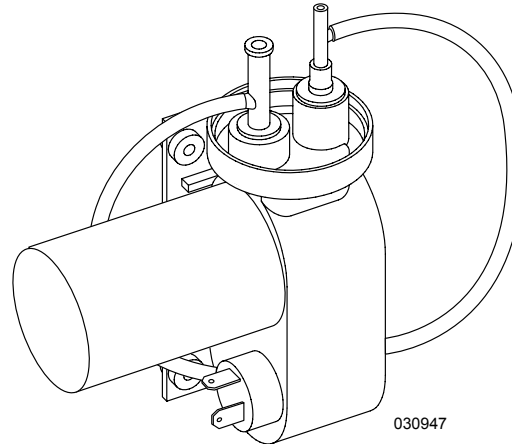

Vacuum Generator: Located at front firewall.

The vacuum generator creates 15" of vacuum that is passed to a reservoir ball. Most dash heater and A/C systems will only require 10" of vacuum to operate the switches. The output from the reservoir is sent to the vent control knob. The control knob will then direct the vacuum operation to the appropriate vacuum switch to open or close vents and switches. When the ignition is on and the A/C is operating, the vacuum generator will operate.

Troubleshooting

The dash A/C and heat system uses a combination of compressed air (developed by the chassis system), vacuum air (developed by the vacuum generator) and electric relays and vacuum switches. Therefore, any repair can be classified in one of five categories:

- Electrical
- Air Conditioner
- Defroster
- Vacuum
- Heater

No Cooling:

1. Check that the blower is operating, A/C switch is in A/C or **MAX A/C** position, temperature control is turned to **MAX** cooling (blue area).
2. Verify system fuses are not blown.
3. Verify condenser fan is operating.
4. Check power supply to unit and grounding of system.
5. Check wiring.
6. Coolant valve is leaking.
7. Drive belt is loose or broken.
8. Compressor clutch is inoperative, will not engage.
9. Expansion valve is faulty or frozen.
10. Thermostat control is faulty.
11. Mode control switch is faulty.
12. Compressor is faulty.
13. Loss of refrigerant.

NOTE:

An Ultraviolet or UV blue light is used for leak detection when dye is introduced to the A/C System.

Reduced Cooling:

1. Coolant valve not operating correctly.
2. Air passages are obstructed.
3. Loose or worn drive belt.
4. Check blower and select switch.
5. Thermostat control valve is faulty.
6. Expansion valve is faulty.
7. Compressor is faulty.
8. Low refrigerant charge.

No Heating:

1. Verify A/C switch is turned off.
2. Verify blower switch is turned on.
3. Verify the proper engine coolant level.
4. Verify that the engine is reaching operating temperature.
5. Verify engine coolant is reaching water valve attached to unit.
6. Verify operation of water valve to permit engine coolant to pass through valve to heater core.
7. Check unit fuses.
8. Check power supply to water valve and grounding.
9. Check wiring.
10. Engine thermostat faulty.

Blower Does Not Operate or Runs Slow:

1. Check fuses.
2. Check for loose or corroded connection.
3. Check wiring.
4. Check to ensure ignition switch is on.
5. Check blower and select switch.
6. Motor shaft has seized.
7. Blower wheel is out of alignment.

Damper Doors DO NOT Operate:


1. Is the vacuum generator being powered and producing a vacuum?
2. Check the vacuum line entering the unit for vacuum.
3. Check that the vacuum solenoid mounted on unit is receiving power from the mode switch. If operating properly, the vacuum solenoid will feel hot if current is engaging the solenoid.
4. Check the mode switch.
5. Check wiring.
6. Check for a pinch in the vacuum line leading to the vacuum motor that operates the damper door in question.

DIAGNOSTIC PLUG LOCATION


The ABS/ATC, engine and transmission systems communicate electronically over SAE J1939. J1587 is used to retrieve diagnostic codes from a particular system. A diagnostic plug is located to the left of the steering wheel under the dash, and another is located in the curbside rear bay. Both diagnostic plugs have J1939, J1587, power and ground.

Engine Diagnostics:

The engine diagnostics will notify the operator of deviations from the programmed limits of the engine through the “Check Engine” lamp in the dashboard. Should a system component with the engine develop a deviation, the “Check Engine” lamp will illuminate and a diagnostic code will be logged and stored in the system memory. These codes are accessed by a service technician using special equipment.

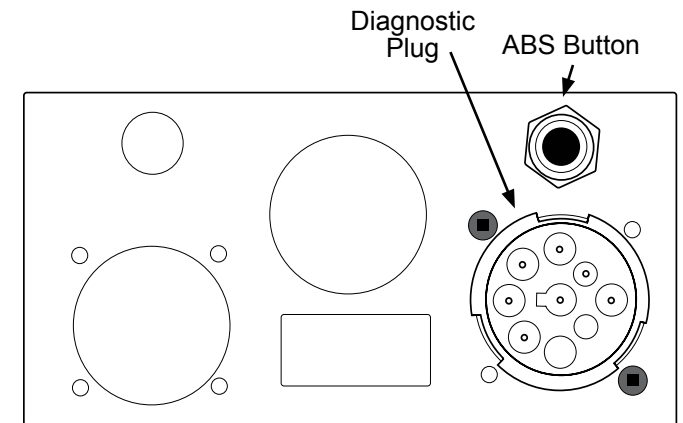


Located left of steering column.

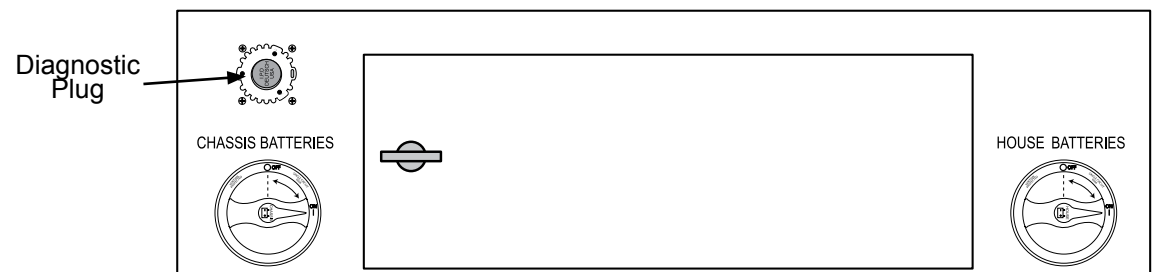

Diagnostic Plug: Located in rear curbside bay

ENGINE “NO START” FLOW CHART

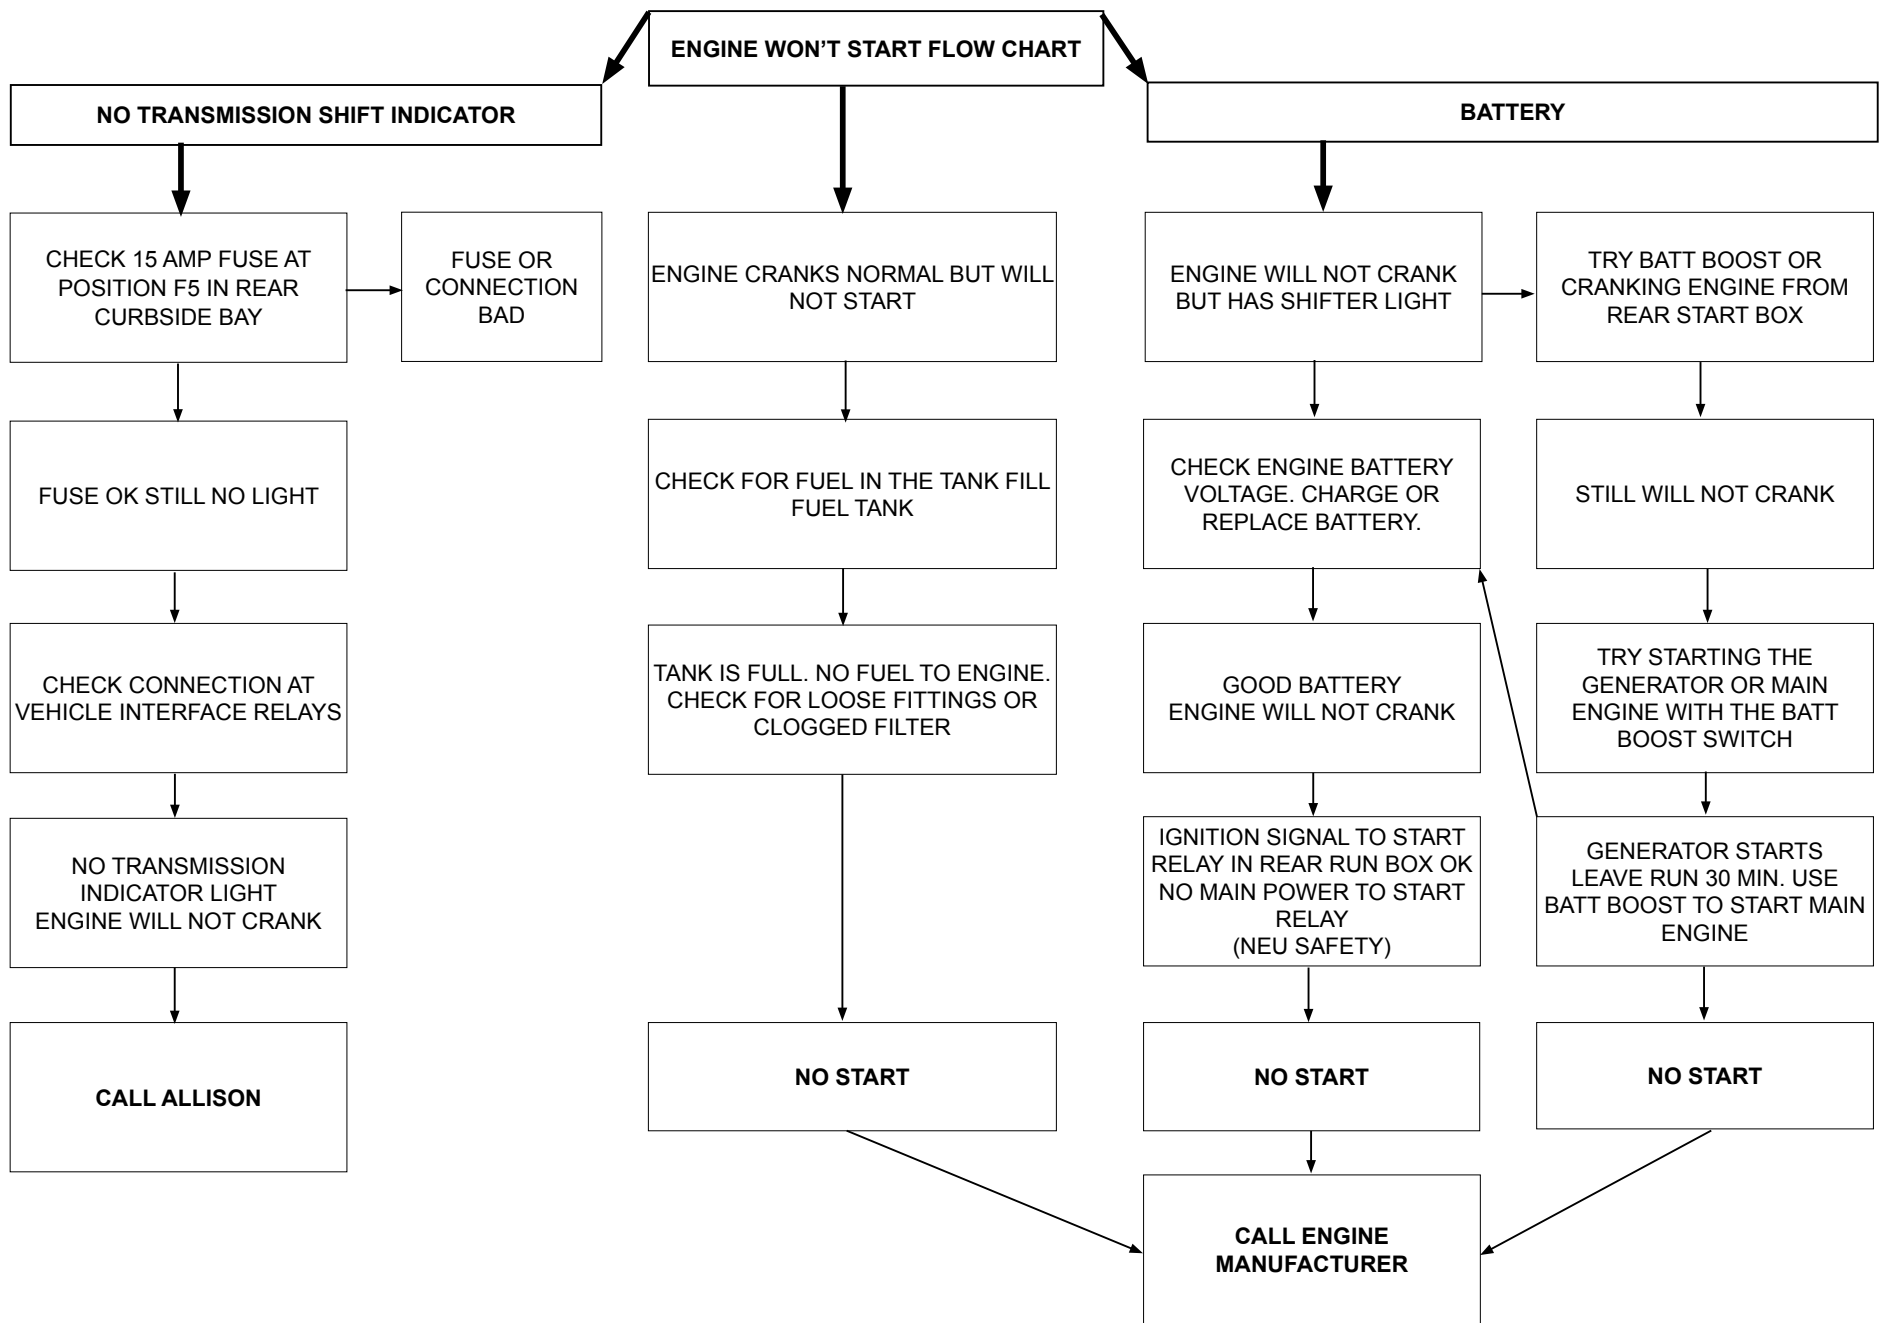

Chassis Information - Section 10



CHASSIS - INTRODUCTION	198	TAG AXLE	216	FUEL SYSTEM	236
AIR SUPPLY SYSTEM	198	Tag Axle Switch	216	Fuel Requirements	236
Air Governor	199	Adjusting Tag Axle Load	217	Fuel Tank	237
Air Storage Tanks	199	Tag Axle Lubrication	217	Fuel Sender	237
Air Fittings	200	Oil Change Intervals	218	Fuel Lines & Hoses	237
Air Coupler - Universal	200	DRUM BRAKE MAINTENANCE	218	Fuel Filters	238
Air System - Charging (External)	201	SHOCK ABSORBER	218	DIESEL PARTICULATE FILTER	238
Air System Test	201	LEVELING - HYDRAULIC	219	HYDRAULIC SYSTEM	239
AIR DRYER	203	Prior to Leveling	220	Hydraulic Pump	239
Desiccant Cartridge	203	Operation	220	Hydraulic Cooler	240
Desiccant-Type Air Dryer	204	Retracting Leveling Jacks	221	Hydraulic Fan System	240
Air Dryer Cycle	204	Maintenance	222	Thermostat	241
AIR SPRING INSPECTIONS	204	LEVELING - AIR (OPTION)	223	Switching Valve	241
HEIGHT CONTROL VALVES	205	Automatic Air Leveling	223	Fan Motor	241
BRAKE SYSTEMS	205	Travel Mode	225	Hydraulic Filter	241
Air Brakes	205	Service	225	Hydraulic Reservoir/Filter	242
Park & Emergency Brake System	206	ENGINE - GENERAL INFORMATION	225	AIR FILTER	242
Automatic Slack Adjuster	206	STARTING PROCEDURE	226	Air Filter Minder	242
Brake Systems - Backup	206	Normal Starting	226	Changing the Filter	243
BRAKE - AUXILIARY	207	Cold Weather	226	LUBRICATION MAINTENANCE	243
Engine Brake	207	ENGINE OIL	227	LUBRICATION CHARTS	246
ABS/ATC SYSTEM	208	ENGINE SHUTDOWN	228	ENGINE DRIVE BELT ROUTING	248
FRONT AXLE	210	Extended Engine Shutdown	228	SPECIFICATIONS	248
Alignment	211	COOLANT SYSTEM	228	Tank Capacities	248
Alignment Specifications	212	Radiator/Charge Air Cooler	230	Engine Specifications	248
Lubrication Maintenance Safety	212	TRANSMISSION	231	Chassis Fluid Capacities	248
Steering Components	212	Shift Selector	231	Belts & Filters	249
Steering Column	213	Trans Service Icon	232	Generator Specifications	249
Drag Link	213	Check Trans Icon	233	Battery Specifications	250
Center Link	213	Diagnostic Trouble Codes	233	MAINTENANCE RECORDS	251
Steering Spindles	214	Transmission Fluid	234	WEIGHT RECORD SHEETS	253
Control Arm Bushings	214	Filter Change Interval	236		
Steering Gear	214				
DRIVE AXLE & DRIVE SHAFT	214				

CHASSIS - INTRODUCTION

This section contains information and instructions regarding various components of the motorhome chassis. Follow the guidelines and procedures to help understand and operate the motorhome. Complete instructions for the engine and transmission are located in their respective operator's manual included in the Owner's Information File Box.

WARNING:

When welding is involved for motorhome repair or modification, only qualified, experienced technicians should weld on the chassis. Improper welding procedures and materials may weaken the assembly or result in damage that is not obvious and may not cause an immediate problem or failure. Unauthorized modifications or repairs to the chassis could result in a forfeiture of warranty coverage.

DANGER:

Due to the sensitive nature of the electronics on the chassis, the following precautions are required to protect electrical components in the motorhome chassis:

- 1. Disconnect the (+) positive and (-) negative battery connection.**
- 2. Cover electronic control components and wiring to protect from hot sparks.**
- 3. Disconnect the terminal plugs from the engine Electronic Control Unit, located on the curbside side of the engine block.**

- 4. Disconnect all the plugs from the transmission Electronic Control Unit, located in the front electrical bay.**
- 5. Disconnect the wiring from the alternator.**
- 6. Do not connect welding cables to electronic control components.**
- 7. Attach the welding ground cable no more than two feet from the part to be welded.**

The Roadmaster chassis design provides exceptional balance, handling and braking characteristics. The Roadmaster chassis is an engine and frame unit featuring an all steel frame design, providing structural integrity and uniform stress distribution. The air suspension system incorporated in the Roadmaster chassis uses eight air bags and shock absorbers. The tag axle uses two in-board mounted air bags. This design provides the smoothest ride, best handling and trouble free service while delivering excellent drivability. The Roadmaster chassis design offers unsurpassed ease of maintenance and service. The chassis also has a three-point hydraulic leveling system.

The Roadmaster's raised-rail chassis with air suspension consists of front and drive axles with trailing links. The tag axle uses leading arms. A panhard bar on each axle controls side motion. The axles mount to the trailing links that are connected to the chassis. The suspension control arms attach to the frame through bushings, which require no lubrication. Unlike suspension that uses springs, the air suspension system automatically maintains the same attitude and ride height throughout the entire load range. The raised rail design of the main chassis offers increased bay storage space.

The towing receiver is rated at 10,000 lbs. towing weight and 1,000 lbs. tongue weight.



Tag located on curbside frame behind front wheel and in generator compartment.

100168b


AIR SUPPLY SYSTEM

The air compressing system on the motorhome includes a compressor, governor, dryer, front tank and rear tank. The compressed air system operates several items, including brakes, suspension, air horns, air gauge and the stepwell cover. The air system is charged by a gear driven air compressor mounted on the engine. As engine speed increases, compressed air output increases. When air is compressed, heat is generated. Heat dissipates as the air is discharged from the compressor. Moisture condenses in the compressed air as it cools and enters the air dryer to be filtered. The filtered air charges the front air tank, which is divided into a wet and dry side. The compressed air enters the wet side before entering the dry side. A discharge line from the dry side of the front air tank charges the rear air tank. Discharge lines use in-line check valves to prevent a back flow of compressed air.


The pneumatically operated items are divided into two categories: brakes and accessory air. Brakes have full use of supplied air pressure. Accessory air items, such as the air horns or stepwell cover, receive air through **pressure protection valves (PPV)**. The PPV will not allow compressed air flow until the system reaches approximately 60 psi. In the event of an air system problem, the pressure protection valve will leave a reserve air charge for braking. The pressure protection valve is installed for safety.

Air Governor

The air governor, located in the engine compartment, regulates the air compressor to cut-in and cut-out, keeping the air system in the specified operating range of 115 to 135 psi and sending an air “purge” signal to the air dryer.

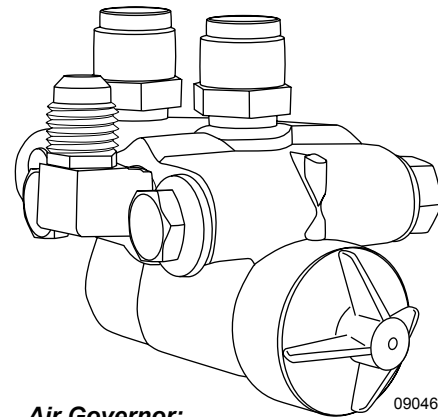

Air Governor:
Mounted on curbside of engine compartment

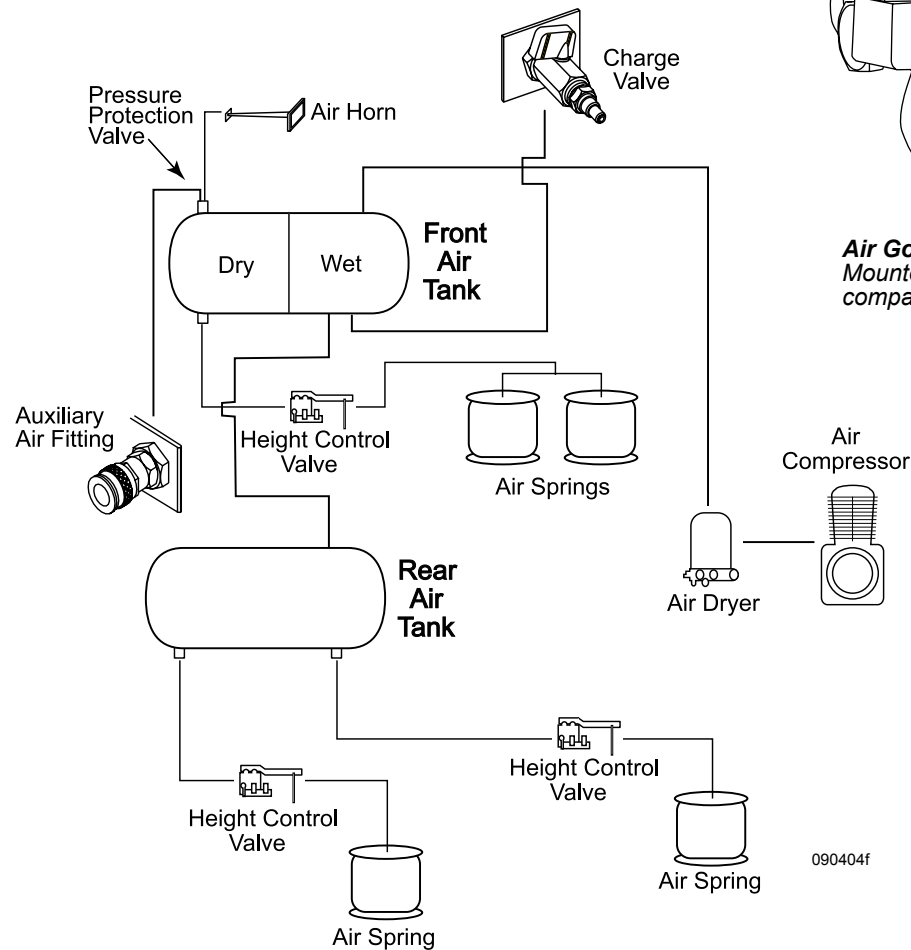

The air governor will send an air purge signal to the air dryer when cut-out pressure is reached. This opens the purge port of the air dryer, expelling moisture. The purge action of the air dryer is identified by the short release of air at the rear of the motorhome.

Air Storage Tanks


Drain the front and rear air tanks once a month or more depending on operating conditions and humidity levels. The front air tank has a drain valve for both the wet and dry side. The rear air tank only has one drain valve. The drain valves are located in the generator compartment. Both air tanks have a pressure relief valve set to release at approximately 150 psi.

WARNING:

Wear safety glasses to prevent eye injury from expelled moisture. Open drain valves slowly as moisture will be expelled under high-pressure.

To Drain the Tanks:


- Slowly open the drain valves. Air and moisture are expelled under pressure. Leave the valves open an additional five minutes after all air is expelled to allow any remaining moisture to drain.
- Close valves and start engine. Check valves for leaks.

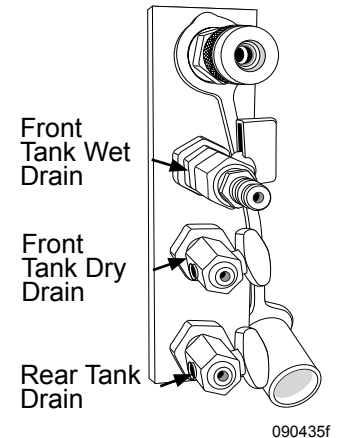

Located roadside in the generator compartment

Air Fittings


Push-in fittings are used to connect air hoses between pneumatically operated items. Fittings, sizes and types vary for different applications. Threaded fittings adapt the push-in fittings to connect pneumatically operated items. Parts include the release ring, locking ring, solid brass body and special rubber compound O-ring. Damaged hoses can be repaired by splicing.

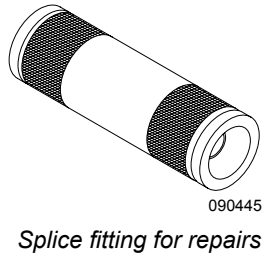

Splice fitting for repairs

To Disconnect Hose:


- Push hose into fitting.
- Push release ring down against locking ring portion of the fitting body.
- While holding the release ring down, pull hose away from fitting.

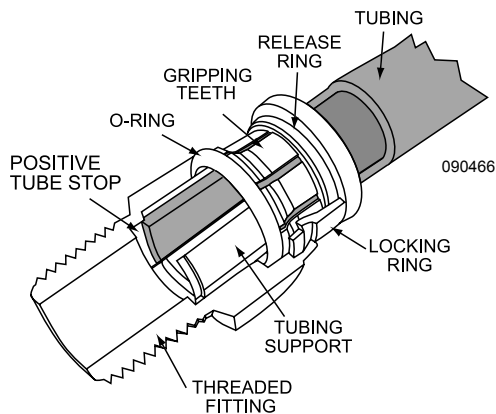

Cut-away of push-in fitting.

To Connect Hose:

- Push hose into fitting through the release ring and the O-ring. Use a slight twisting motion to seat firmly against the internal tube stop.
- Pull hose away from fitting to expand and set inner seal. Ensure hose is properly retained in fitting.

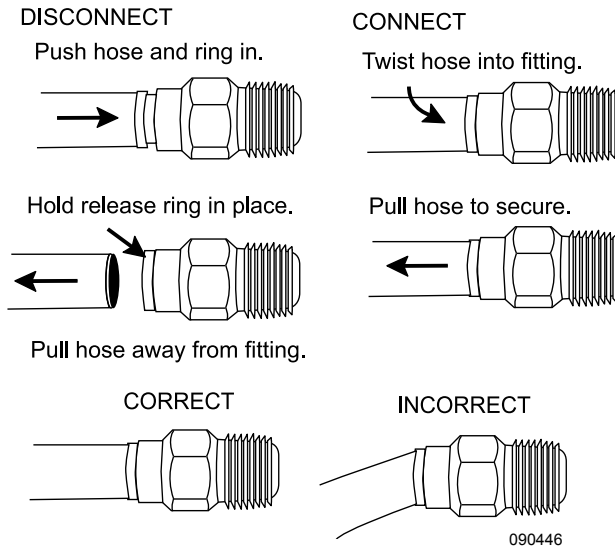

NOTE:

When putting air hose back into fitting, be sure that hose is cut as squarely as possible to evenly seal in the fitting. The cavity of the positive tubing stop provides support to prevent leakage.

WARNING:

DO NOT remove air hoses from fittings while system is pressurized. Serious injury may occur.

WARNING:


Never place yourself under motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Air Coupler - Universal

A remote air supply coupler is located in the generator compartment. The universal female fitting will accept several types of 1/4" ID male air fittings, including type C automotive. The auxiliary air fitting may be used to inflate tires, air mattresses or other pneumatic items. This fitting is not designed to charge the air system on the motorhome. The air supply for the auxiliary air fitting is charged from the front air tank through a pressure protection valve.

To Use the Universal Air Coupler:

- Remove the plastic protective dust cap.
- Using a firm grip, insert the air fitting into auxiliary air supply. The locking collar is spring loaded and will automatically lock when the fitting is properly inserted.

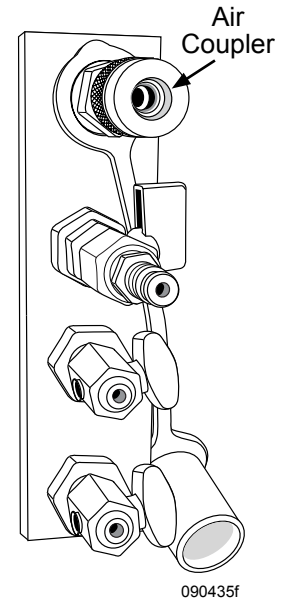

To remove fitting:

- Firmly grip the air hose near the fitting to prevent recoil.
- Slide the locking collar back to release fitting. The collar will lock into the open position when fully retracted.
- Replace the protective dust cap when finished.

NOTE:


Due to air pressure restrictions in the pressure protection valve and tire stem valve, the maximum amount of tire pressure achieved when the system is used to fill a tire is approximately 115 psi with the air system on the motorhome charged to 130 psi. Maximum outlet air pressure is achieved when the air system completes the fill cycle indicated by the purge cycle of the air dryer.

Air System - Charging (External)

The air system on the motorhome can be charged from an external air supply source. A type C automotive male fitting (also used as the front tank wet side drain) is located in the generator compartment. Use caution when charging the air system from this fitting. Air supplied from an external source may contain moisture. Compressed air introduced into the air system on the motorhome from this fitting is not filtered by the air dryer. The auxiliary air charge fitting will charge the front and rear air tanks. A shut-off valve is installed to prevent air from escaping.

CAUTION:

The external air supply source should be regulated to charge the air system on the motorhome no higher than 140 psi. Damage to the air system or pneumatically operated items may occur.

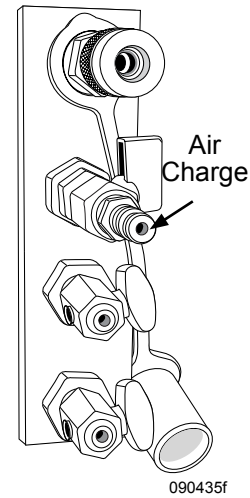***Air System Test***

Air system integrity is tested at the factory. The air system is equipped with several safety features. Periodically test these safety features for function as well as checking the air system for possible leaks.

NOTE:

These tests can also be found in the Department of Motor Vehicle (DMV) air brake certification requirement. Some tests will require precautions for safety purposes.

Inflation Rate Test:

This will test how long it takes the air system to achieve a specific pressure in a timed event when starting at a lower pressure. This test will verify the minimum acceptable volume of compressed air created by the air system.

1. Start engine. Increase engine speed to 1000 rpm.

2. Beginning time for the test will commence when air system pressure obtains 85 psi.
3. End time when system pressure obtains 100 psi.

Elapsed time must not exceed 45 seconds.

Air Governor Cutout Test:

The air governor controls action of the air system pump. This will test the air governor cutout pressure setting, which indicates system pressure has achieved maximum set psi.

1. Start engine.
2. Run engine until a chuff (air release) is heard from the air dryer.

Maximum cutout pressure must not exceed 155 psi. Air system pressure will stabilize between 125 to 135 psi.

Unapplied Pressure Loss Test:

This test will verify maximum acceptable air system pressure loss rate without use of any pneumatically operated devices. This test requires a flat, level surface as the park brake will be released with the engine off. Chock wheels to prevent vehicle movement.

1. Start engine.
2. Run engine until a chuff (air release) is heard from the air dryer.
3. Shut engine off.
4. Release the park brake.

Note system pressure after air system stabilizes from release of park brake. Air system pressure must not lose more than 2 psi per minute.

Applied Pressure Loss Test:

This test will verify the rate of maximum acceptable air system pressure loss with only the service brakes applied. Do not use other pneumatically operated devices during this test. This test requires a flat, level surface as the park brake will be released with the engine off. Chock wheels to prevent vehicle movement.

1. Start engine.
2. Run engine until a chuff (air release) is heard from the air dryer.
3. Shut engine off.
4. Release the park brake.
5. Apply and hold service brake pedal.

Note system pressure after air system pressure stabilizes. Air system pressure must not lose more than 3 psi per minute.

Low Air Warning Test:

This test will verify low air warning buzzer/lamp activation. A Low Air warning buzzer or lamp will sound/illuminate should air system pressure fall to 60 or 65 psi.

1. Start engine.
2. Run engine until low air warning indicators are inactive.
3. Shut engine off then turn key to ignition on.
4. Fan (apply/release in quick succession) service brake pedal.

Low air warning indicator will sound no lower than 60 psi.

Park Brake Apply Test:

The park brake will automatically apply if low air warning indicator(s) are ignored and system pressure falls well below safe operating levels. A flat, level surface is required as the park brake will be released with the engine off. Chock wheels to prevent vehicle movement.

1. Start engine.
2. Run engine until low air warning indicators are inactive.
3. Shut engine off.
4. Release park brake.
5. Fan (apply/release in quick succession) service brake pedal.

The park brake will automatically apply between 20 to 40 psi.

Park Brake Hold Test:

This test will verify engagement of the park brake. A flat, level surface is required. While the test is performed with the park brake applied, use precaution in case of vehicle movement. This test only verifies the park brake is engaged. It is not intended to verify the maximum amount of braking force created by the park brake.

1. Start engine.
2. Place transmission into gear. Do not release park brake.
3. Apply light throttle, not to exceed 1,000 RPM.

Test confirms that the park brake is engaged and holding.

Air Governor Cut-in Test:

The air governor controls action of the air system pump. This will confirm the air governor cut-in pressure setting.

1. Start engine.
2. Run engine until a chuff (air release) is heard from the air dryer.
3. Fan (apply/release in quick succession) service brake pedal until system pressure is between 110 and 115 psi.

Air governor cut-in pressure is approximately 115 psi.

Brake Grab Test:

A brake grab test will verify brake friction torque between the front wheels. The test requires a rapid and full pressure application of service brake pedal. Use proper precaution to prevent movement of cargo or other unsecured items. This is a single vehicle test. Select the most deserted, level road surface as possible (i.e. a large, empty parking lot). Road crown may affect test results, depending on severity of crown.

1. Start engine.
2. Run engine until a chuff (air release) is heard from the air dryer.
3. Release park brake.
4. Accelerate to approximately 5 mph.
5. Rapidly and firmly apply service brake pedal to bring vehicle to an abrupt stop.

The steering wheel will not pull to the left or right if front wheel braking torque is symmetrical.

AIR DRYER

The air dryer, located curbside in the engine compartment, removes moisture from the compressed air system to prevent freezing of brakes or other pneumatically operated items. The three functions of the air dryer are cooling, filtering and drying the system air. This prevents valve and seal damage or wash away of lubricants as well as freeze damage to the system components.


Air Dryer Cycle:

The governor turns the compressor on when the supply tank pressure drops below cut-in pressure. Compressed air then passes into the air dryer at the inlet port. Moisture-laden air and contaminants pass through the desiccant. Moisture is retained by the desiccant and collects in the base of the dryer. When the compressor reaches cut-out pressure (approximately 135 psi) the purge valve opens and the dryer purges and expels water collected in the dryer base. The regeneration valve opens sending a small charge of dry system air from the front air tank back through the dryer. The backflow dries the desiccant, preparing it for the next cycle.

Air Dryer Components:

1. Purge Valve: A valve located on the bottom of the air dryer base that remains open during a compressor unload cycle to allow collected moisture, condensation, and contamination to expel from the air dryer during the purge cycle.

- 2. Pressure Relief Valve:** Protects the air dryer from over-pressurization.
- 3. Air Governor:** Regulates compressor cut in and cut out pressure.
- 4. Heater Power Connection:** Provides 12 Volt DC power to the heating element. In extreme cold, verify that the air dryer heater is in good working order. The 100-watt heater in the air dryer is controlled by ignition power. The heater turns on below 45° F. and off when the air dryer temperature is above 86° F. The circuit breaker for the heater is located in the rear electric bay.

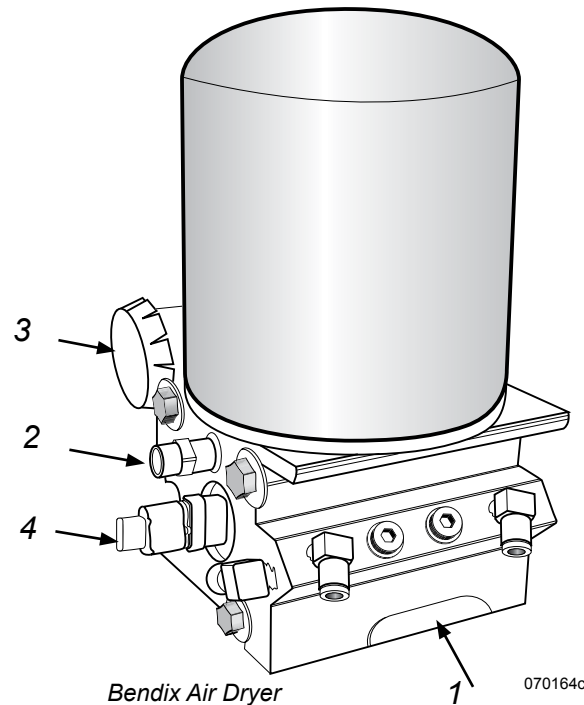


In extreme cold, verify that the air dryer heater is in good working order. The 100-watt heater in the air dryer is controlled by ignition power. The heater turns on below 45° F. and off when the air dryer temperature is above 86° F.

WARNING:

Remove all pressure from the air system before disconnecting any component, including the desiccant cartridge. Pressurized air can cause serious personal injury.

Desiccant Cartridge

Warm, humid air from the compressor condenses into either water or water vapor. A desiccant-type air dryer protects the air brake system by drying moisture-laden air before it passes through the air reservoirs and into the brake system. The replacement kit contains one cartridge and one O-ring.

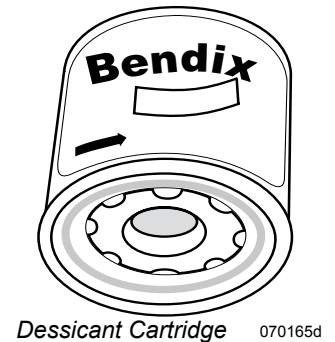

To Replace the Cartridge:


1. Loosen and remove the old cartridge. Use a strap wrench, if necessary.
2. Remove and discard the O-ring from the dryer base.
3. **Inspect** and clean the seal seat. Repair any minor damage.

NOTE:

If the seats are damaged so badly that a tight seal cannot be maintained, replace the air dryer.

REPLACEMENT REQUIREMENTS		
Components	When to replace?	Why?
Desiccant Cartridge	<ul style="list-style-type: none"> • Every two to three years. • When compressor is replaced • Water in supply tank 	<ul style="list-style-type: none"> • Preventive maintenance • Contaminated cartridge • Saturated or contaminated cartridge, high duty cycle (wrong application of air dryer)

4. Install a new O-ring.
5. Lubricate the O-Ring on the stem with a thin layer of grease.
6. Lubricate the cartridge seal with a thin layer of grease.
7. Thread the replacement cartridge onto the base until the seal touches the base. Tighten the cartridge **one** additional turn. **Do not overtighten.**

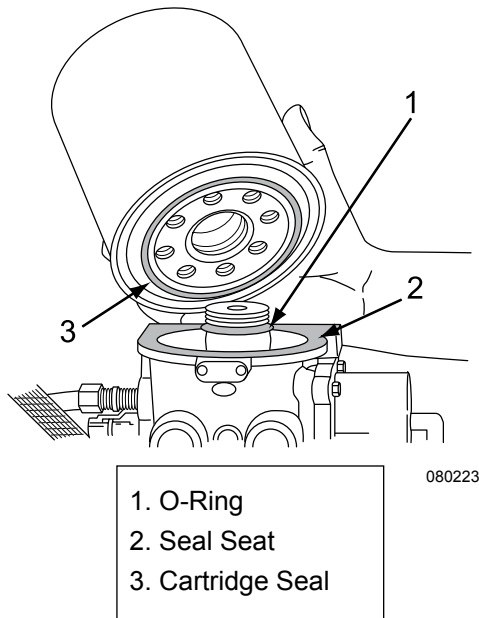

NOTE:

If an excessive amount of water is present when performing the monthly air tank drain service, the filter for the air dryer may need to be changed.

Desiccant-Type Air Dryer

1. Warm, humid air from the compressor condenses into either water or water vapor before entering the air dryer.
2. A desiccant-type air dryer protects the motorhome air brake system by drying moisture-laden air before it passes through the air reservoirs and into the brake system.
3. Water collects in the base of the dryer when warm air condenses the water before it enters the dryer, or inside of the dryer before the water reaches the desiccant.
4. The desiccant material then removes additional water vapor, further drying the air.
5. During regeneration phase, the regeneration valve and pressure-controlled check valve remove water from the desiccant bed with a backflow of dried, expanded system air.

Air Dryer Cycle

The governor turns the compressor on when the supply tank pressure drops below cut-in pressure. Compressed air passes into the air dryer at the inlet port:

1. Moisture-laden air and contaminants pass through the desiccant.
2. Moisture is retained by the desiccant. Moisture also collects in the base of the dryer.
3. The governor turns the compressor off when the system reaches cutout pressure (approximately 135 psi).
4. The dryer purges and expels water collected in the dryer base.
5. When the regeneration valve opens, the dry system air flows back through the dryer. A small charge of air from the front air tank backflows through the filter. The backflow dries the desiccant, preparing it for the next cycle.

AIR SPRING INSPECTIONS

Items listed below should be checked when the motorhome is in for periodic maintenance.

NOTE:

Never attempt to service the air suspension on a motorhome with the air spring inflated.

- **Inspect the Outside Diameter (OD)** of the air springs. Check for irregular wear, heat cracking or chaffing.
- **Inspect** air lines to ensure contact does not exist between air line and OD of the air springs. Air lines can rub a hole in an air spring very quickly.
- Ensure there is sufficient clearance around the complete circumference of the air spring while at maximum diameter.
- **Inspect** the OD of piston for buildup of foreign materials. On a reversible sleeve style air spring, the piston is the bottom component of the air spring.
- The correct ride height should be maintained. All motorhomes with air springs have a specified ride height established by the manufacturer. This height should be maintained within ¼". This dimension can be checked with the motorhome loaded or empty.
- The leveling valves (or height control valves) assist in ensuring the total air spring system works as required. Clean, **inspect** and replace if necessary.
- Make sure to check shock absorbers for leaking hydraulic oil and worn or broken end connectors. If a broken shock is found, replace it immediately. The shock absorber will normally limit the rebound of an air spring and keep it from over extending.
- Check the tightness of all mounting hardware (nuts and bolts). If loose, tighten. **DO NOT** over-tighten.

Cleaning:

The approved cleaning method is to use soap and water, methyl alcohol, ethyl alcohol or isopropyl alcohol. Unapproved cleaning methods include all organic solvents, open flames, abrasive and direct pressurized steam cleaning.

HEIGHT CONTROL VALVES

Height Control Valves (HCV) inflate or deflate air springs to maintain proper suspension height throughout the load range. Two Height Control Valves are installed at the rear drive axle to control rear suspension height and left or right tilt of the motorhome. A separate HCV is installed to control front suspension height. The three HCVs mount to the main frame of the motorhome, above the axles, with a linkage rod connecting the valve to the axle.

Actuating components inside of the valves are oil dampened to reduce valve reaction to momentary suspension bounce and rebound. When a constant suspension change occurs, such as a load change or weight transfer through a sustained corner, the valve reacts by adding or purging air from the air springs as needed.

The air springs mount between the axle H-frame assembly and the two main frame rails. Air spring support plates mount to the main frame and the H-frame. There is a specified distance the air spring must maintain between the mounting plates. Other than specified distance between the plates will compromise ride quality and handling, and affect shock absorber travel, drive shaft angle, as well as various other running gear components.

BRAKE SYSTEMS

Air Brakes

The air brake system on the motorhome differs from a conventional automotive hydraulic braking system and should be treated differently. Proper maintenance and lubrication are the keys to keeping the air brake system in proper working order.

The air system supplies air to the foot brake or treadle valve. Pushing down on the treadle valve supplies an air charge signal to a sealed brake chamber, consisting of a spring and air bladder. The air charge signal pushes on the bladder and extends a threaded rod connected to the automatic slack adjuster, which rotates the S-cam and expands the shoes against the drum. Air disc brakes follow much the same principle, with the exception of the threaded rod directly activating calipers.

Consideration needs to be given to stopping distances and air system pressures. The motorhome requires longer stopping distances. Each brake application uses air from the air system, and engine speed is directly proportional to how fast that air system is replenished. Prepare for downhill grades. It may be necessary to select a lower gear and/or use the engine brake. Use individual, short brake applications down long hills rather than riding the brakes. This will extend the life of the brake lining. Avoid overheating the brakes. Hot brakes have less stopping power. When maneuvering the motorhome around small areas, or backing into spaces, several individual brake applications might be made. Watch the air gauge. When preparing to back into a space, swing the motorhome so it is aligned with the parking slot before backing up.

The air braking system on the motorhome is equipped with a low air pressure warning safety feature. Should a low air condition occur while the vehicle is in operation, a warning buzzer will sound and a dash warning light will illuminate at approximately 60 to 65 psi (pounds per square inch) to alert the operator.

Park & Emergency Brake System

The Park and Emergency Brake System (Spring Brakes) applies to the rear drive axle only. When the park brake is applied, air is released from the drive axle brake chambers, allowing the large spring in each rear brake chamber to push the brake pads against the rotor. The air system must be charged above 35 psi to allow the park brake to release. Pushing down on the park brake handle charges the rear brake chambers with air pressure, overriding the emergency brake springs and releasing the brakes. In the event of air loss while the vehicle is under operation, the park brake will automatically apply (this occurs at approximately 30 psi), acting as an automatic emergency brake system.

When preparing to depart, allow the air system to achieve full air pressure as indicated by the air gauge needles. Listen for the air dryer to purge, indicating that the air dryer is functioning. Look and listen for abnormalities. Abnormal air pressure readings by either needle of the air gauge alerts the operator to have the air system checked to avoid an untimely failure.

Should a failure occur in the air system, preventing the air pressure from building, it may become necessary to “cage” the spring brakes (**Section 2 Towing Procedures - *Disabling Parking Brake***). This is an emergency procedure only. Caging the rear air brake chambers manually overrides the spring brakes and allows the vehicle to move. This procedure does not affect normal service braking.

NOTE:

When the park brake is released, the Park illumination lamp will remain lit until air system pressure is above 65 psi.

If the air system is not depleted when parked, it is possible to accidentally release the parking brake. Traveling with small children and/or pets may require fabrication of a small block to be placed under the park brake knob. A wooden clothes pin, clasped at the base of the shaft, will also work (block or clothes pin not included). Do not forget to remove before travel.

Automatic Slack Adjuster

The braking system is equipped with automatic slack adjusters. As brake lining wears, the slack adjusters will automatically ratchet on the return stroke as needed. This ratchet action will keep the brake lining at proper adjustment. Automatic slack adjusters and the connecting S-cam shaft require periodic lubrication and inspection.

WARNING:

Do not manually adjust the slack adjusters. If any loss of braking effectiveness or abnormal braking indications are noticed, the brakes and slack adjusters should be inspected by a qualified brake technician.

NOTE:

Replacement parts should be of the same original equipment size and type. Mixing brake components may result in unequal braking action. Brake maintenance is not covered by the manufacturer.

WARNING:

Brake lining may contain asbestos material and should only be serviced by qualified service technicians who are trained in the appropriate precautionary procedures.

Brake Systems - Backup

The motorhome air braking system is equipped with backup safety systems and warning alarms in the event of air system failure. For example: should the air compressor fail to charge the air system and low air gauge readings go undetected, a low air pressure warning buzzer will sound and a low air pressure dash warning indicator light will flash. These warning indicators occur at approximately 65 psi. This will alert the operator of an impending situation.

If the motorhome is allowed continued operation, the pneumatic emergency spring brake relay valve, installed in the air system, senses the low air pressure condition and will release the air charge from the spring brake air chambers on the rear drive axle. In this case, the park brakes will automatically apply at approximately 30 psi. This safety backup system acts as an automatic emergency brake system.

Another backup safety is the air system separation of the front and rear brakes, implemented by using two air tanks. This separation allows the front air tank to operate the front brakes; the rear tank operates the rear drive axle brakes and tag axle brakes. This tank division gives reassurance in case one tank experiences the failure of an accessory air item that allows the compressed air to escape.

Accessory air items are other pneumatically operated items such as the air horn, vacuum generator, etc. The accessory air items operate only when air tank pressures exceed 65 psi. This is done with pressure protection valves. Should an accessory air item fail, the pressure protection valve (PPV) reserves the remaining air pressure of 65 psi for braking. This will leave the motorhome with one air tank fully charged for safety backup.

The rear air tank also has a safety backup - the safety inversion valve. The inversion valve senses the absence of rear air tank pressure. In this case the inversion valve will allow the operator to make a modulated spring brake application, which is made in conjunction with the emergency spring brake relay valve.


The inversion valve allows the front air tank pressure to recharge the rear brake chambers after the modulated spring brake application is made. This backup system implements use of all the brakes, allowing the operator to bring the motorhome a safe stop. In case of all compressed air charge escaping from the front air tank, the operator will still have full use of the rear brakes.

BRAKE - AUXILIARY

Auxiliary braking systems are designed to supplement the standard wheel braking system, not designed to bring the motorhome to a complete stop; however, they can assist in controlling the speed of the motorhome. Use of the auxiliary braking system can extend service life of brake linings.

Engine Brake

Auxiliary braking systems are designed to supplement the standard air brake system. The engine brake is not designed to bring the motorhome to a complete stop; however, it can assist in controlling the speed of the motorhome. Use of the engine braking system can extend the service life of pads, shoes, rotors, and drums. The engine brake operates on a different principle than an exhaust brake. An engine brake functions by releasing engine compression. The effect of the engine brake increases with engine speed. When the engine brake is activated the transmission automatically optimizes downshifts, utilizing the gear selected to maximize the effectiveness of the engine brake.

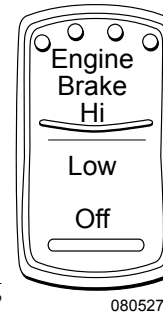

When the engine brake activates, an electrical signal is sent to the engine ECM (electronic control module). The ECM controls a hydraulic circuit that opens the exhaust valves near the end of the compression stroke. The potential engine braking power depends on turbocharger boost pressure, engine speed and gear selection.

Use the engine brake when descending a hill or off ramp. Use the Brake Hi/Low switch to select the amount of engine brake action. “Hi” utilizes all six cylinders while “Lo” utilizes three cylinders. The bar light on the switch will illuminate when active. The engine brake will activate when the throttle is released to the idle position.

NOTE:

Activating the Engine Brake switch will not cancel cruise control. Vorad Smart Cruise will engage the engine brake should the vehicle ahead decelerate or when cruise set speed exceeds cruise speed parameters. Refer to the OEM Engine Manual for more information.

NOTE:


The engine brake is designed to supplement the service brakes. The engine brake will not bring the motorhome to a stop. Use of the engine brake can help increase the service life of the service brakes.

NOTE:

Idle the engine three to five minutes at approximately 1000 RPM to warm the engine before activating the engine brake. Do not operate the engine brake until engine oil temperature is above 30° C. (86° F.).

ABS/ATC SYSTEM

The motorhome is equipped with an Anti-lock Braking System (ABS) and Automatic Traction Control system (ATC). The ABS system monitors wheel rotation speeds by using a 100 tooth magnetic tone ring mounted to the hub. Revolving with the wheel, the magnetic tone ring is polarized, giving positive and negative pulsations. A stationary sensor is mounted adjacent to the tone ring to monitor magnetic pulses. The pulses are monitored by the ABS electronic control unit (ECU).

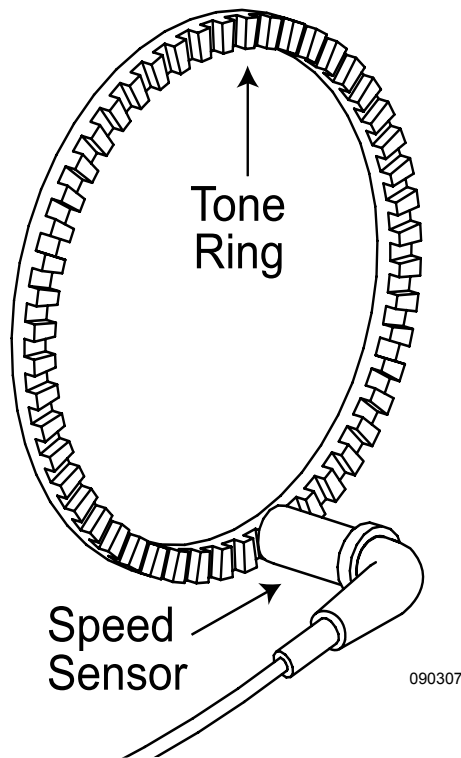

The ECU monitors all wheel sensors at the rate of 100 times per second. The ECU controls Pressure Modulator Valves. Pressure Modulator Valves have two electric-over-air solenoids – a hold solenoid and a release solenoid. The modulator valves are open under normal braking, allowing a straight through air signal from the treadle valve to the brake chamber. Should a wheel lose traction under a braking application, the ECU will energize the hold solenoid of the Pressure Modulator Valve to interrupt the air signal from the treadle valve to the brake chamber. The release solenoid vents the existing air signal, at the brake chamber to the atmosphere, allowing the skidding tire to regain traction. Skidding tires have less tractive efficiency. It is possible under certain conditions to have the wheel(s) skid with a normally functioning ABS system.

The ABS itself does not apply additional braking power. The purpose of the ABS is to limit wheel lock and decrease stopping distance. Cautious driving practices and maintaining a safe distance when following vehicles is the key to safe vehicle operation.

WARNING:

The ABS/ATC system is designed to increase tire to road surface traction but cannot overcome naturally occurring laws of physics. The ABS/ATC system combined with safe driving practices will reduce the possibility of wheel skid and loss of lateral stability.

ABS Component Function:

- Speed sensors and tone rings on each wheel monitor wheel rotation.
- Each speed sensor communicates wheel rotation pulses to the Electronic Control Unit.
- The ECU receives the speed sensor signal pulses to calculate speed and acceleration rates of each wheel.
- Based on the speed sensor input, the ECU detects impending wheel lock and operates the ABS Modulator Valves required for proper control. The Modulator Valves are operated in the Air, Release or Hold modes to regulate air pressure to the brake chambers.
- Braking force is applied at a level that minimizes stopping distance while maintaining as much lateral stability as possible.

ABS Warning Light:

The ABS will perform a dash indicator lamp check and self-diagnostic test each time the ignition is switched to the ON position.

- When the ignition is turned on, the ABS indicator illuminates momentarily (five seconds) verifying the self-diagnostic test. If the ABS indicator light remains on, or illuminates while the motorhome is being operated, this indicates a fault in the anti-lock brake system. This fault will not affect normal service braking. Take the motorhome to a service center for repairs.

INFORMATION:

If a fault code occurs, call a Bendix service locator at 1-800-247-2725 and take the motorhome to the nearest repair facility.

ABS Diagnostic Button:

By properly actuating the ABS diagnostic button (located under the dash to the left of the steering wheel), system configuration codes and fault codes can be retrieved as blinked sequences on the ABS warning light. System configuration codes are sequences of six blinked digits while fault codes are sequences of two blinked digits. Refer to an authorized Bendix service center for a list of blink code sequences. If the Diagnostic button is not pressed correctly for a specific readout, stop and start over at the beginning of the procedure.

NOTE:

All blink codes are displayed by the ABS warning light only.

The blink code switch is capable of performing several diagnostic mode functions. At Ignition On, a two second delay must be observed prior to pressing the diagnostic button. For functions requiring multiple presses, the delay between presses cannot be longer than two seconds.

- **Press once for Active Code retrieval.**
- **Press twice for Inactive Code retrieval.**
- **Press three times to clear Active codes.**
- **Press four times for System Configuration check.**
- **Press five times for Dynamometer Test Mode.**
- **Press seven times to Reconfigure ECU.**

NOTE:

Reconfigure Mode is entered by holding the switch in prior to “ignition on.” Once ignition is on, release the switch and press seven times.

ATC System:

The ATC system improves traction on slippery or unstable road surfaces by limiting excessive drive wheel slip. This is accomplished in two ways – limiting engine torque to the drive wheel or engaging a brake to the spinning drive wheel.

Engine torque is unaffected during normal operation. The ATC system works in conjunction with the ABS Electronic Control Unit. The ECU monitors tone ring speed of the drive wheel in relation to the other wheels. If a speed differential occurs in the drive wheel, the ECU enters Automatic Traction Control mode.

During an ATC event, the ECU will automatically react to optimize traction and safety if the motorhome encounters a slippery road surface. Engine torque is normally reduced to limit drive wheel slip.

NOTE:


The ATC system is always active.

ATC reacts to drive wheel slip by:

- Reducing engine torque to the drive wheel if road speed is above 25 mph.
- Reducing engine torque and activating drive axle brake controls if road speed is below 25 mph. If the brake control activates, it remains active regardless of road speed.

ATC Switch:

Activating the ATC switch reduces ECU control over engine torque. Momentarily pressing the ATC switch allows the ECU to increase the amount of engine torque applied to the drive wheel in an ATC event. The amount of engine torque applied to the drive wheel will vary with the amount of drive wheel slip versus road speed. In an ATC event, the ECU remains active regardless of road speed or switch position.

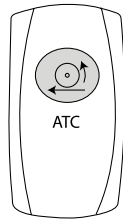

0803750
Located on Driver Console

ATC Indicator Light:

During normal operation, the ATC indicator light on the dash will illuminate when the ignition key is turned ON until the first brake application. If an ATC event occurs, the indicator light will flash quickly. The indicator light will flash slowly if the ATC switch is activated.

CAUTION:

Normally the switch should remain inactive. During an ATC event (drive wheel slip) the ECU will automatically optimize drive wheel traction in most situations. Activating the switch during periods of wheel slip can increase torque to the spinning drive wheel. Drive train damage can occur if the spinning drive wheel should suddenly regain traction. If the motorhome is stuck it is advised to call a professional towing company to limit the possibility of body and drive train damage.

FRONT AXLE


While driving the motorhome, be aware of any changes in the feel of steering and have the system checked when noting apparent differences. It is normal to hear some hydraulic noise from the steering, especially when the steering is at maximum, or while turning the wheel when the motorhome is stationary. Investigate any unusual or loud noises that occur. Begin by checking the level of the hydraulic fluid. Traveling at slow speeds over rough surfaces may cause a “clunking” noise to emanate from the steering column, but if noise is heard on smooth surfaces while sharply turning back and forth, the noise should be inspected and repaired as necessary.

Shimmy and looseness should be checked and corrected as soon as possible. If looseness is felt in the steering, the steering linkages can be observed while someone turns the steering wheel left and right. Watch the linkages for evident play or uneven interaction between components to help pinpoint a problem.

How Automatic Traction Control (ATC) Works

If this wheel is spinning due to slippery surface or wheel off the ground, the ABS system with ATC applies the brake to this wheel.

This wheel then delivers torque to the ground.

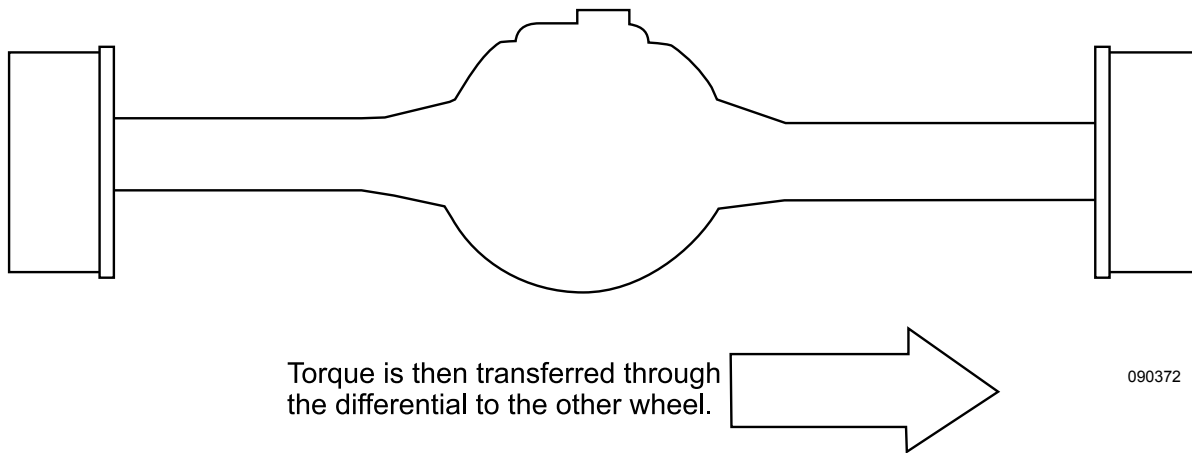


Torque is then transferred through the differential to the other wheel.

090372

Wheel bearings should be cleaned and repacked with high temperature disc brake grease every 30,000 miles. Have the steering system and tires checked for damage after a severe impact, such as striking large potholes or curbs, and front-end collisions. Observe the alignment of the steering wheel; a change in the alignment may indicate damage to the steering components or suspension.

Maintenance for the system entails adequate lubrication. Use only a hand operated grease gun on the fittings. Grease fittings for the steering system are found on the both ends of the drag link (the bar connecting the steering gear to the axle), and on the intermediate steering shaft located between the steering wheel and steering gear. The correct wheel alignment promotes longer tire wear and ease of handling while minimizing the strain on the steering system and the axle components. Use NLGI #2 Lithium soap base lubricant for all steering linkage and brake components.

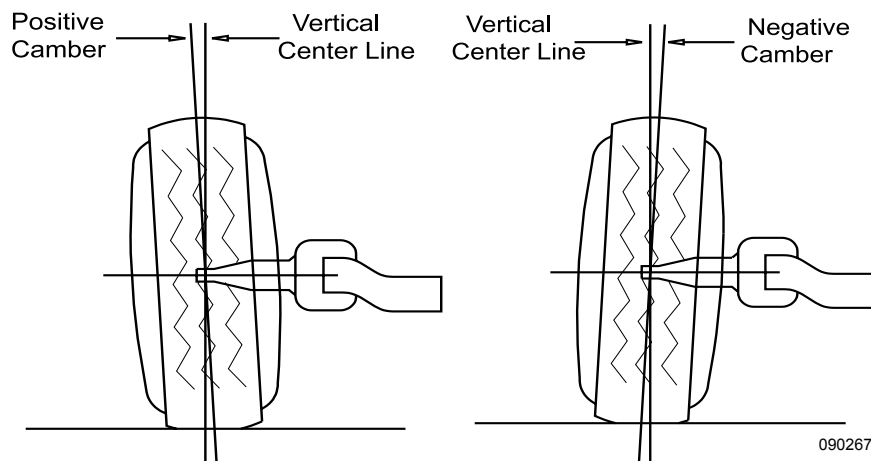

Alignment

Camber:

Camber, as shown, is vertical tilt of wheel as viewed from the front of the motorhome. This is machined into the axle when manufactured and is not adjustable.


- **“Positive”** camber is an outward tilt of the wheel at the top.
- **“Negative”** camber is an inward tilt of the wheel at the top.

Toe Setting:

The toe setting represents different distances between the front and rear of the tires (measured at the vertical center line of the tires).


Toe-in: Occurs when the tire front distance is less than the tire rear distance.

Toe-out: Occurs when the tire front distance is greater than the tire rear distance.

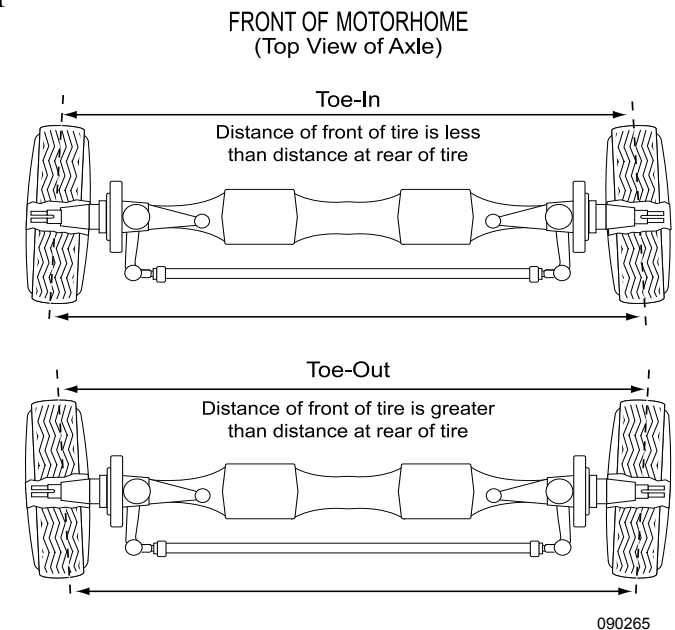

Wheels are generally set with initial toe-in. As the motorhome operates tires tend toward a toe-out condition. By starting with an initial toe-in setting, a desirable “near zero toe-in” can be achieved when the motorhome is in motion.

Incorrect toe settings, whether toed-in or toed-out, can have a significant affect on tire wear. The toe setting is adjusted by lengthening or shortening the cross tube.

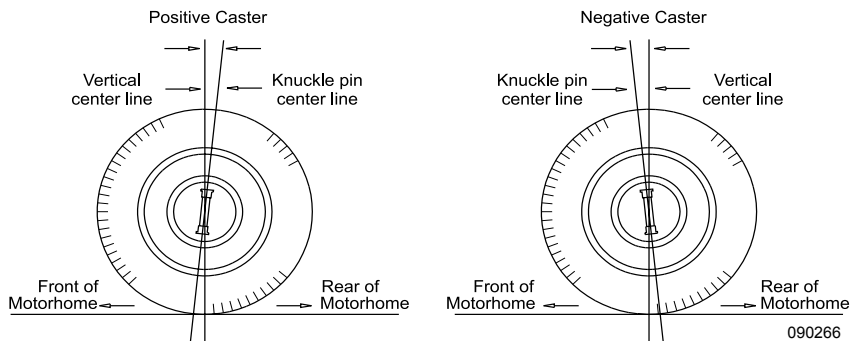

Caster Adjustments:

Caster is the fore and aft tilt (toward the front or rear of the motorhome) of the steering kingpin as viewed from the side of the motorhome.

“Positive” caster is the tilt of the top end of the kingpin toward the rear of the motorhome.

“Negative” caster is the tilt of the top end of the kingpin toward the front of the motorhome.

Setting the caster angle more positive than specified may result in excess steering effort and/or shimmy. Decreasing the angle may result in the motorhome wandering or poor steering return to center. The caster angle is determined by the installed position of the steer axle.

Alignment Specifications

	LEFT	RIGHT
Camber	1/8° +/- 7/16°	-1/8° +/- 7/16°
Caster*	4.25° +/- 1°	4.25° +/- 1°
Total Toe	1/16" (0.08°)	

NOTE: The motorhome must be at ride height for proper alignment.

WARNING:


Do not place yourself under the motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

NOTE:


Suspension and steering components are lubricated at the factory using Texaco Starplex NLGI 2 Lithium Soap based grease.

Lubrication Maintenance Safety

The front axle components require periodic lubrication maintenance. Chock wheels for safety prior to accessing components underneath the motorhome.

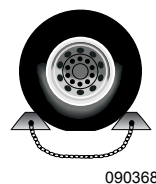

Steering Components

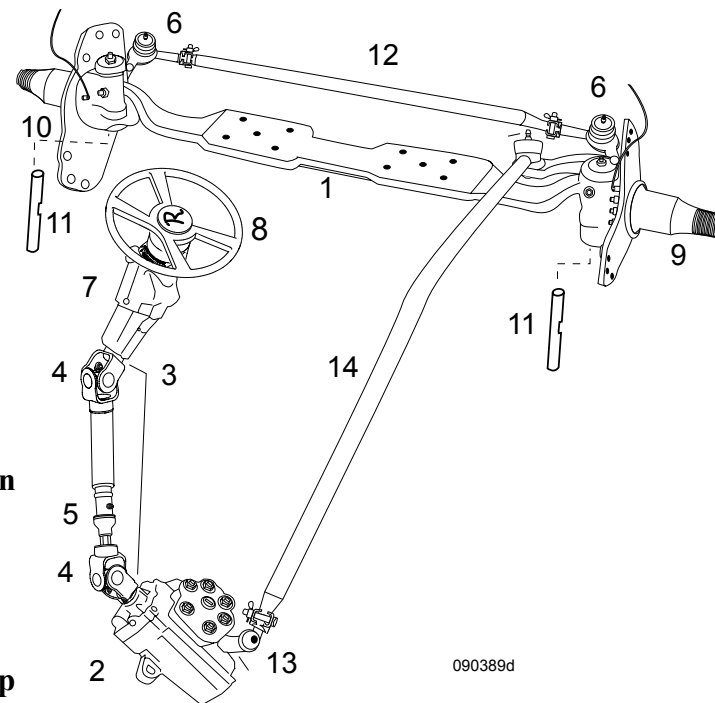


Typical Steering Components

- 1. Axle Beam
- 2. Steering Gear
- 3. Intermediate Steering Shaft
- 4. Universal Joints
- 5. Slip Yoke
- 6. Tie Rod End
- 7. Steering Column
- 8. Steering Wheel
- 9. Left Knuckle Assembly
- 10. Spindle
- 11. Kingpin
- 12. Centerlink
- 13. Pitman Arm
- 14. Drag Link

Steering Column

The intermediate steering shaft connects the steering wheel to the steering box. Service the intermediate steering shaft universal joints and slip yoke every 30,000 miles or annually. Check the torque on the clamp bolt (48 ft. lbs. for 3/8" and 75 ft. lbs. for 7/16") at least every five years or 50,000 miles.

Remove the steering column cover to access the upper universal joint and slip yoke lubrication points. The lower universal joint is accessed from underneath in the generator compartment behind the front electrical box.

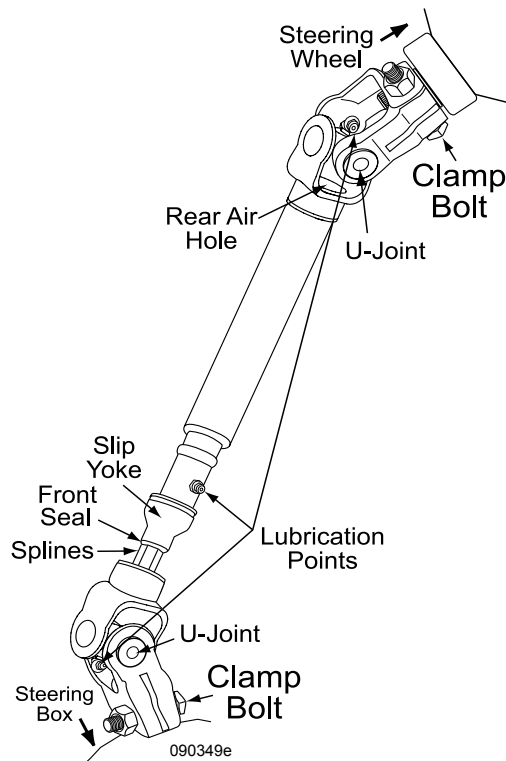

Intermediate Steering Shaft: Torque clamp bolt to 48 ft. lbs. for 3/8" and 75 ft. lbs. for 7/16".

WARNING:

DO NOT place yourself under the motorhome without first properly blocking the frame (jackstands) from coming down in case of rapid deflation of air system.

Greasing the Intermediate Steering Shaft Universal Joints:

1. Check the shaft for looseness. Repair if loose or worn.
2. Apply the specified grease at the grease fitting on the universal joint. Apply until the new grease purges from all the seals.
3. If the new grease does not purge from the seals, disassemble and clean the joint or replace the universal joint. **DO NOT** lose the needle bearings.

Greasing the Intermediate Steering Shaft Slip Yoke and Splines:


1. Check the shaft for looseness. Repair if loose or worn.
2. With finger, cover the rear air hole so grease flows to the front seal. Apply the specified grease at the grease fitting on the slip yoke. Apply until new grease purges and forces finger away from the air hole in the end of the slip yoke. Greasing interval is yearly or every 30,000 miles.

Drag Link

The drag link connects the steering box pitman arm to the steer axle. The movable joint uses sealed boots to prevent water intrusion. **DO NOT** rupture the boot when applying grease. Grease interval is six months or every 5,000 miles.


NOTE:

It will be necessary to start the motorhome and turn the steering wheel to access fitting(s).

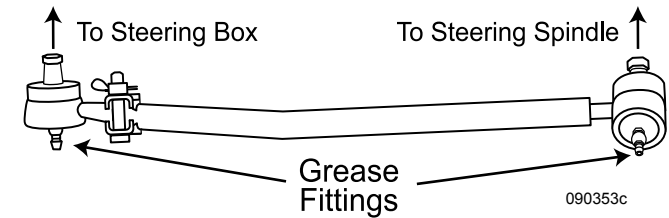


Center Link

The center link is located on the backside of the steer axle. The center link attaches the two wheels together causing the right front to track with the left front. Greasing interval is every six months or 5,000 miles.

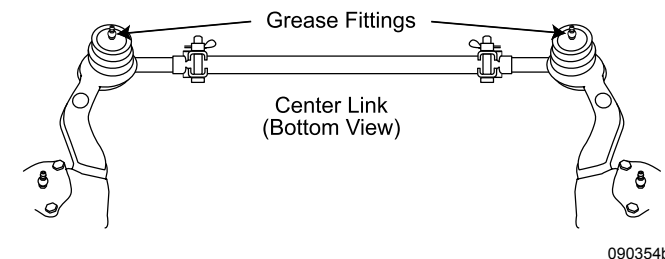

Steering Spindles

The steering spindles attach to the front axle and pivot on the kingpin. The wheel end assembly and brake system attach to the spindle. There are upper and lower lubrication points for the kingpin. The drag link attaches to the roadside spindle. After initially lubricating the roadside and curbside kingpins, rotate the steering assembly lock to lock (full left to right) then move assembly back to center. This purges any remaining air pockets. Continue lubricating the kingpins until new grease purges with no air pockets. Greasing interval is every six months or 5,000 miles.

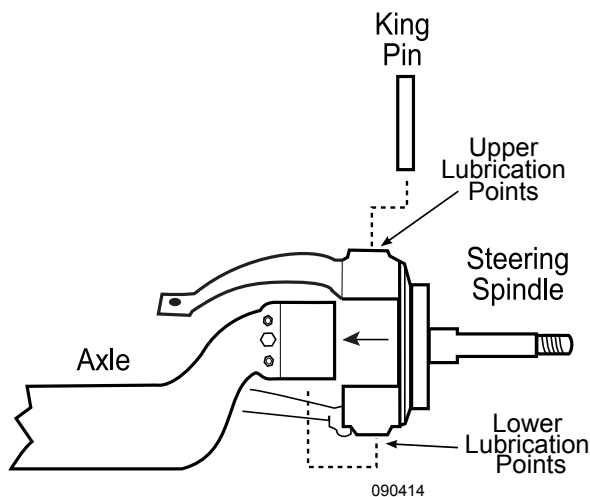

Control Arm Bushings


Control arms align the axles perpendicular with the frame. The panhard bar controls side to side motion of the axles in the frame. Control arm bushings and panhard bar bushings do not require lubrication.

Steering Gear

Lubricate the steering gear at least twice a year. The grease fitting is located on the housing trunnion. Use NLGI grade 2 multipurpose chassis lube and use only a hand operated grease gun. Add grease until it begins to extrude past the sector shaft seal.

Power steering is provided by using hydraulic pressure to assist in rotating the output shaft of the steering gear. A poppet valve and worm drive are located at the end of the steering gear input shaft. The poppet valve directs the hydraulic fluid pressure to a type of spool; the worm drive threads in the center of the spool. When in the center position, pressurized hydraulic fluid bypasses the spool. When a turn is made, the poppet valve shifts to one direction or the other, directing the hydraulic pressure to one side of the spool depending on turning direction. The hydraulic fluid is then cooled before returning to the reservoir.

NOTE:
Inspect for signs of leakage when performing fluid level checks.

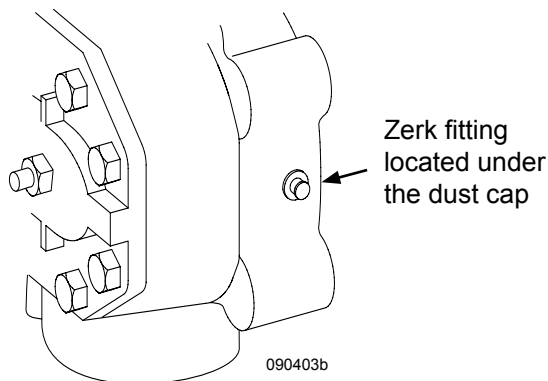

Steering Gear - Rear View


Change the hydraulic filters in the engine compartment at regular intervals to help ensure trouble-free operation.

DRIVE AXLE & DRIVE SHAFT

Drive Axle:

The chassis drive axle is a single reduction axle. The differential gears consist of a hypoid pinion and ring gear set and beveled differential gears. The differential carrier can be removed from the axle housing as a unit in order to perform repairs.

All power from the engine to the rear tires is transferred through the rear axle. For this reason, it is important that maintenance be performed on the axle as required to avoid premature wear of the gears and bearings in the axle.

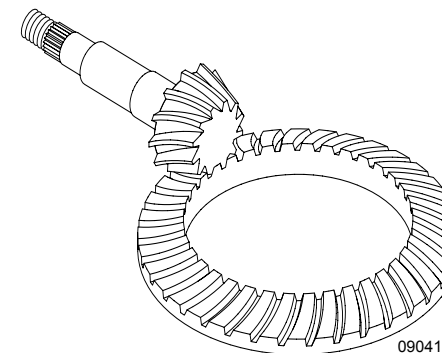

Ring and Pinion Gears

Drive Axle Lubricant:

The rear axle is filled with 80w-90 gear oil meeting SAE J 2360 specifications. Change interval is every 250,000 miles or 36 months, whichever occurs first.

During a lubricant change, fine metal particles may be observed clinging to the magnetic fill and drain plugs of the axle. These particles are normal wear particles from the axle components, but will cause faster than normal wear of the axle components if allowed to circulate through the lubricant. It is recommended that the magnetic plugs be tested, and if necessary, replaced at each lubricant change. These plugs should have sufficient magnetic strength to pick up 1.5 lbs. of low carbon steel. Never replace a magnetic plug with a non-magnetic “pipe plug” as they will not keep the lubricant clear of metal particles or properly seal.

The level of lubricant in the rear axle should be checked every 30,000 miles or annually, whichever occurs first. This will ensure adequate lubricant in the axle for proper operation. Regular inspection of the drive axle lube levels is an essential maintenance procedure.


WARNING:

Never place yourself under the motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Proper Drive Axle Lubricant Level:

- With the motorhome parked on a level surface and rear axle warm, place a large container under axle.
- Clean the area around the fill plug, which is located approximately halfway up the axle housing bowl.
- Remove the fill plug and observe the lubricant level.

- The lubricant should be level with bottom of the hole.
- Important: The lube level close enough to the hole to be seen or touched is not sufficient. The lube must be level with the hole.
- Correct the level as necessary.
- Re-install the fill plug and tighten to 35 to 50 ft. lbs.

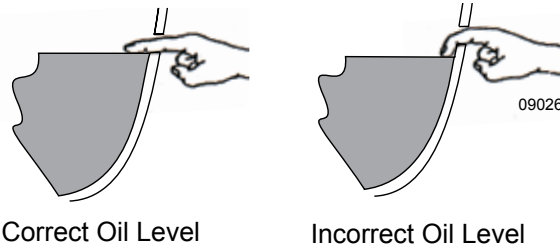


To Drain and Replace Lubricant:

1. Place a large container under the axle.
2. Remove drain plug and allow axle to completely drain.
3. Properly dispose of oil.
4. Clean the drain plug and test (replace the drain plug if needed).
5. Install and tighten drain plug to 35 to 50 ft. lbs.
6. Clean the area around the fill plug from the axle-housing bowl.
7. Fill the axle with approved lubricant until the level is even with the bottom of the fill plug hole.



Fill Plug

NOTE:
When checking the lube level also check the housing breathers on top of axle housing. Clean the breathers if dirty or replace them if damaged.

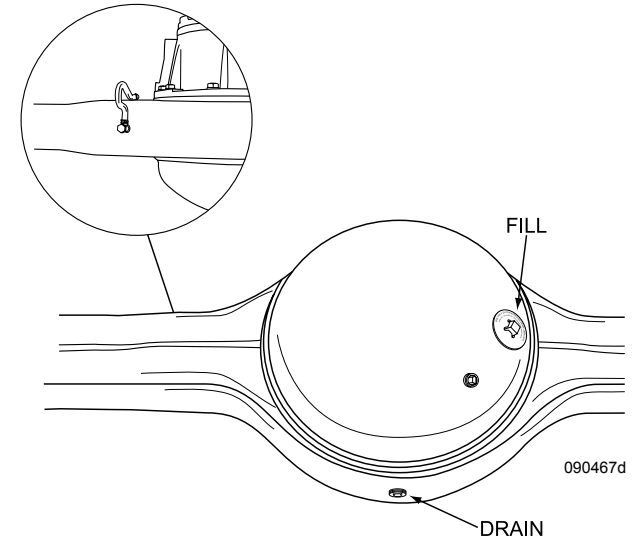

Drive Shaft:

The drive shaft transfers the power produced by the engine to the drive axle. A worn or out of balance drive shaft causes chassis vibration that generally increases in intensity with road speed.

Lubrication Maintenance:

The drive shaft requires periodic lubrication maintenance. Lubricate the slip joint and universal joints every 5,000 miles or six months, whichever occurs first. Use NLGI #2 chassis lubricant.

NOTE:

It will be necessary to move the motorhome forward or backward to access all fittings on the drive shaft.

WARNING:

When checking or changing the lubricant, always ensure that the axle is not hot. Oil temperature 90° F. or hotter can easily cause severe burns.

Greasing the Drive Shaft Universal Joints:

1. Check the drive shaft for looseness.
Repair if loose or worn.
2. Apply specified grease at grease fitting on the universal joint. Apply until new grease purges from all the seals.
3. If new grease does not purge at the seals, loosen bearing cap bolts and re-grease until all four caps purge. If new grease still does not purge, disassemble and clean or replace the universal joint.

NOTE:

Depending upon application universal joints may have two grease fittings each. It is necessary to apply grease to each fitting to properly lube the universal joint.

Greasing the Drive Shaft Slip Yoke and Splines:

1. Check the drive shaft for looseness.
Repair if loose or worn.


2. With finger, cover the rear air hole so grease flows to the front seal. Apply the specified grease at the grease fitting on the slip yoke. Apply until new grease purges and forces finger away from the air hole in the end of the slip yoke.



090341


WARNING:

Rotating shafts can be dangerous. Rotating shafts can snag clothes, skin, hair, hands, etc. causing serious injury or death. DO NOT work on or near a shaft with or without a guard when the engine is running.

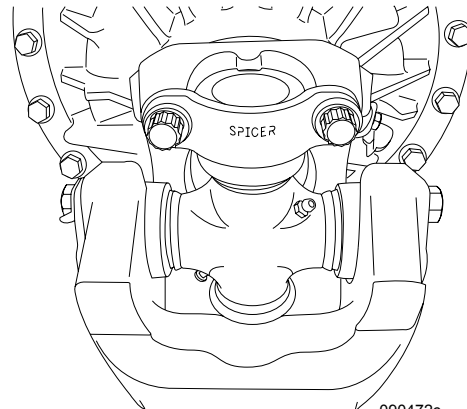

090472c

Dual Zerk U-Joint

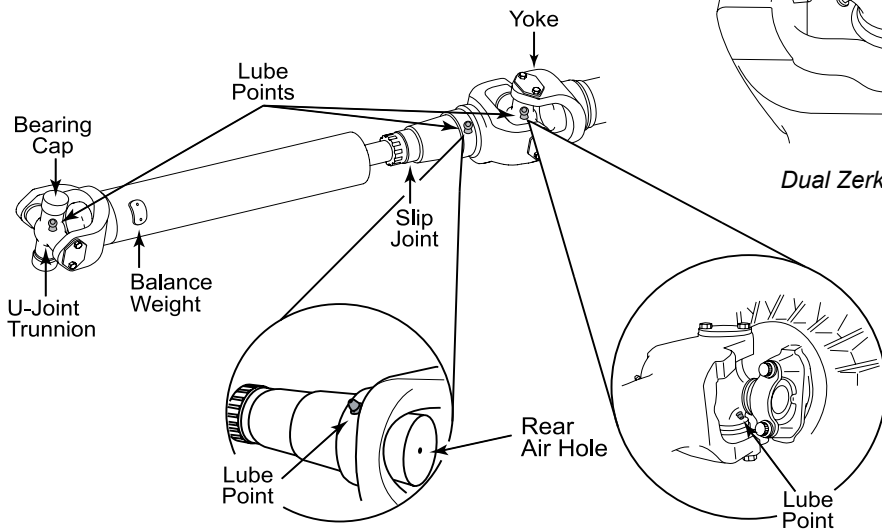

090417f

TAG AXLE
Tag Axle Switch




080504j

Hydraulic Leveling Only:

A stand alone switch is used to raise or lower the tag axle. The tag axle switch is located on the driver's console. Two lights are located on the switch: the tag axle icon will illuminate with the park lights and the lower bar light will illuminate when the tag axle switch is on and the transmission is in neutral, reverse or first gear. When the transmission is in second through sixth gear, the tag axle is automatically lowered and the light is off. A beeping alarm sounds when the switch is on. Raise the tag axle when performing tight maneuvers at less than 5 mph to reduce turn radius and prevent the tag axle tires from scuffing.

CAUTION:

Raising the tag axle reduces ground clearance.

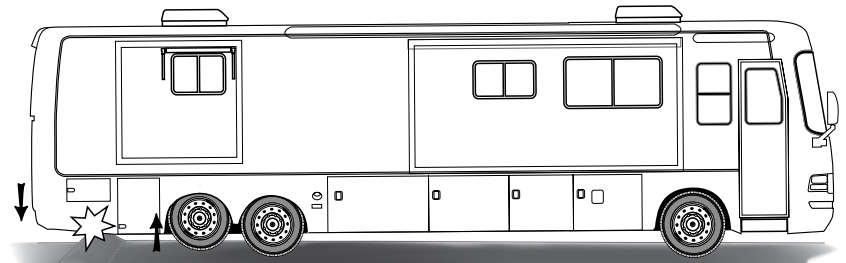


090507

Raising the tag axle reduces ground clearance.

Air Leveling (Optional):

The tag axle switch is integrated into the air leveling pad located on the driver’s console. Pushing the “Tag Lift” button will illuminate the corresponding LED and raise the tag axle. The tag lift feature uses a two minute delay at each ignition cycle to ensure enough air system pressure is available to raise or lower the tag axle. After starting the engine, press the Travel button to begin the time delay. After approximately two minutes the tag axle LED will stop flashing, indicating the time delay is over and the tag axle can be raised. The tag axle will automatically lower when speed approaches 10 mph.

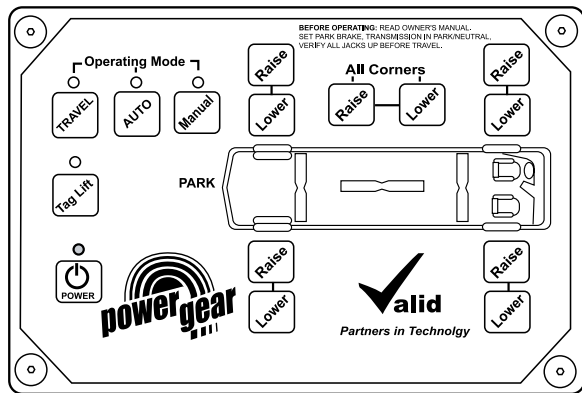


Tag Axle Switch

020307c

Adjusting Tag Axle Load

An adjustable pressure regulator located in the engine compartment sets the amount of air pressure in the tag axle air bags. The amount of down force applied to the tag axle is controlled by the amount of air pressure in the tag axle air bags. Changing the amount of weight carried by the tag axle affects weight distribution between the tag, drive and steering axles. Regulator pressure is preset at the factory and may require adjustment to obtain the proper weight distribution on all axles. To determine the correct setting of the pressure regulator, weigh the motorhome after it has been loaded for travel. See Section 2, “Weighing the Motorhome” for adjustment instructions.

NOTE:
The tag axle pressure regulator valve is located in the engine compartment on the curbside.

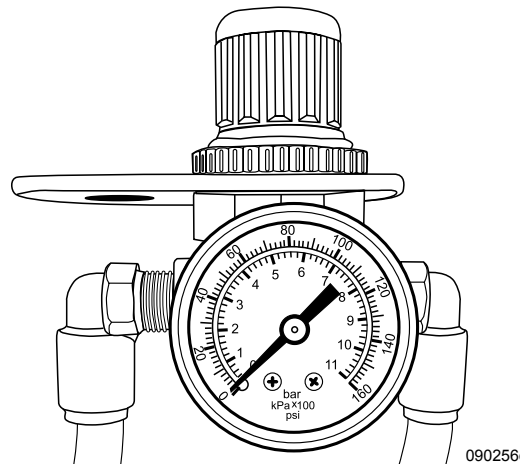


090256d


Tag Axle Lubrication

All tag axles use oil to lubricate the wheel bearings. The oil is drained and refilled without removing the wheel end assembly. Remove the hubcap to access the bearing cover and drain plug.

INSPECTION:
Inspect the oil level before every trip and every 5,000 miles. The motorhome should remain motionless for at least 30 minutes in order to stabilize oil level before inspecting.

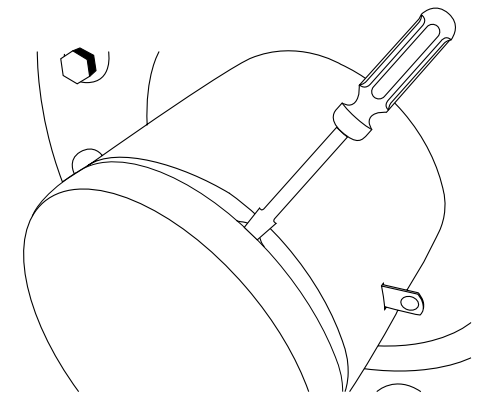

090312c

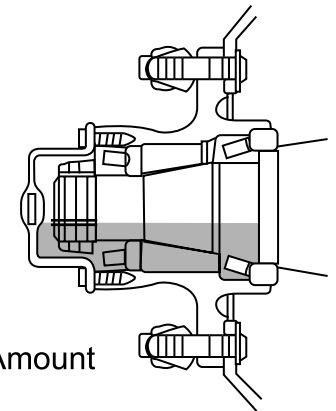


Shading Indicates Correct Amount of Oil

090312b

To inspect the oil level:

- The motorhome must remain stationary for 30 minutes.
- Remove the chrome hubcap.
- Locate the full and add mark on the outside of the clear plastic cover.
- If the lubricant is low, add recommended fluid to proper level.

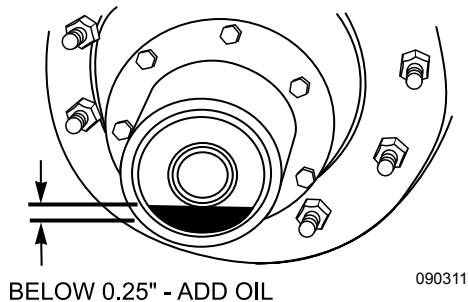

090311

Lubricant Type:


- Texaco Star Gear Lubricant SAE 80w/90. Specifications state a minimum ambient temperature of -15° F (-26.1° C). There is no maximum ambient temperature. Lubricant temperature must never exceed 250° F (+121° C).

To Drain:

- Place a suitable container below the bearing cover and remove the drain plug. If the cover does not have a drain plug, remove the screws retaining the cover plate to drain the lubricant.
- Replace plug or cover plate and fill bearing assembly with the recommended lubricant.


DRUM BRAKE MAINTENANCE

The drive and tag axle (42' only) slack adjusters and “S” cam shafts require periodic lubrication to ensure proper brake operation. Lubricate every 10,000 miles or three months.

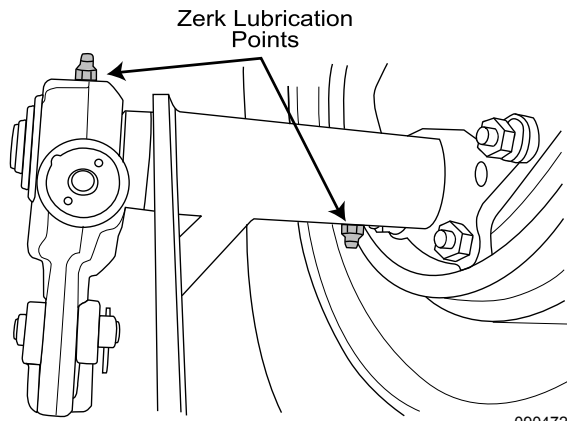

090472b

Drive Axle Brakes

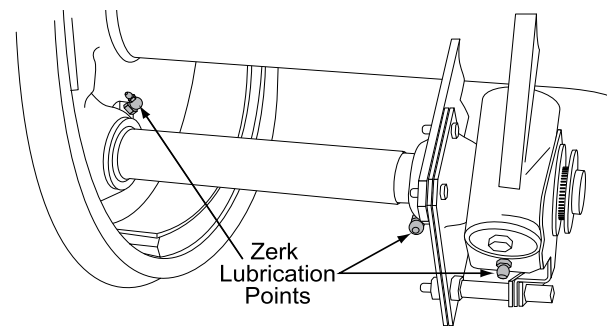

Tag axle brakes

090350

SHOCK ABSORBER

The shock absorber is a hydraulic device used to dampen suspension/body movement. Road surface irregularities are compensated for by the shock absorber.

The Roadmaster chassis incorporates the shock in the design of the exclusive air glide suspension system. This shock absorber is a telescopic, mono tube unit filled with nitrogen gas and hydraulic oil. The result of the mixture is uninterrupted damping for the smallest of wheel deflection.

By design, a self lubricating seal is used to allow approximately 10% of the total oil capacity to pass onto the piston rod. The gradual process of oil loss does not affect performance of the shock absorber during service life. This process will be evident after a long period of service by an oil film on the body of the shock absorber. Coating or film on the body or rod is indication the shock is functioning normally.



090315

Oil Change Intervals

The recommended oil change interval is based on operating conditions, speeds and loads. Limited service applications may allow the recommended interval to increase. Severe applications may require the recommended interval to reduce. For more information, contact a Dana/Eaton service representative.

Recommended Interval Change:

- Change the fluid whenever the seals are replaced, the brakes are relined or at 30,000 miles (48,000 km). However, check the lubricant twice a year (spring and fall) for contamination. Change as needed.
- If yearly mileage is less than 30,000 miles, change the fluid twice a year (spring and fall).

Road holding, handling, balance and braking characteristics all can be contributed to the shock absorber. The operating conditions for which the shock absorber must endure will determine the life span. However, since the only moving part is the piston rod, there are no springs, hinges or pins to wear out, get weak or deteriorate.

LEVELING - HYDRAULIC

The leveling system is designed to reduce sight selection problems and stabilize the motorhome when parked. The leveling system features a remote control panel on the driver's console. The multiple warning system consists of a Jacks Down LED and warning alarm if a jack is down and the park brake is released. The leveling system can be operated in manual or automatic modes.

Safety Features:

The leveling system has safety features to prevent a jack from extending during travel. The control panel will not activate until the following safety features are in place.

- Transmission is in Neutral.
- Parking brake is applied.
- Ignition switch is ON and the engine is running.

Control Panel:

The control panel includes four jack extend switches, an Auto switch, a **MAN** (manual) switch, a retract All Jacks switch and a power **ON/OFF** switch. A LED next to a directional button indicates that position is low.

Indicator Lamps:

- **MAN** – Indicates system is in manual level mode.
- **AUTO** – Initiates Automatic level mode.
- **ON/OFF** – Turns the leveling system on or off.
- **JACKS DOWN** – Indicates one or more jack is extended.
- **LOW VOLTAGE** – Indicates chassis voltage is low.
- **ENGAGE PARK BRAKE** – Indicates the Park Brake is disengaged.
- **EXCESS SLOPE** - Site is not level enough for system to compensate. Move to a more level site.


- The LED adjacent to any extend switch indicates that position is low.

CAUTION:

The leveling jacks are not designed for changing tires. Using the jacks to elevate any wheel position off the ground will cause problems with the suspension system, frame alignment and damage to the windshield.

CAUTION:

DO NOT move the motorhome while the jacks are still in contact with the ground or extended. Damage to the jacks can occur.

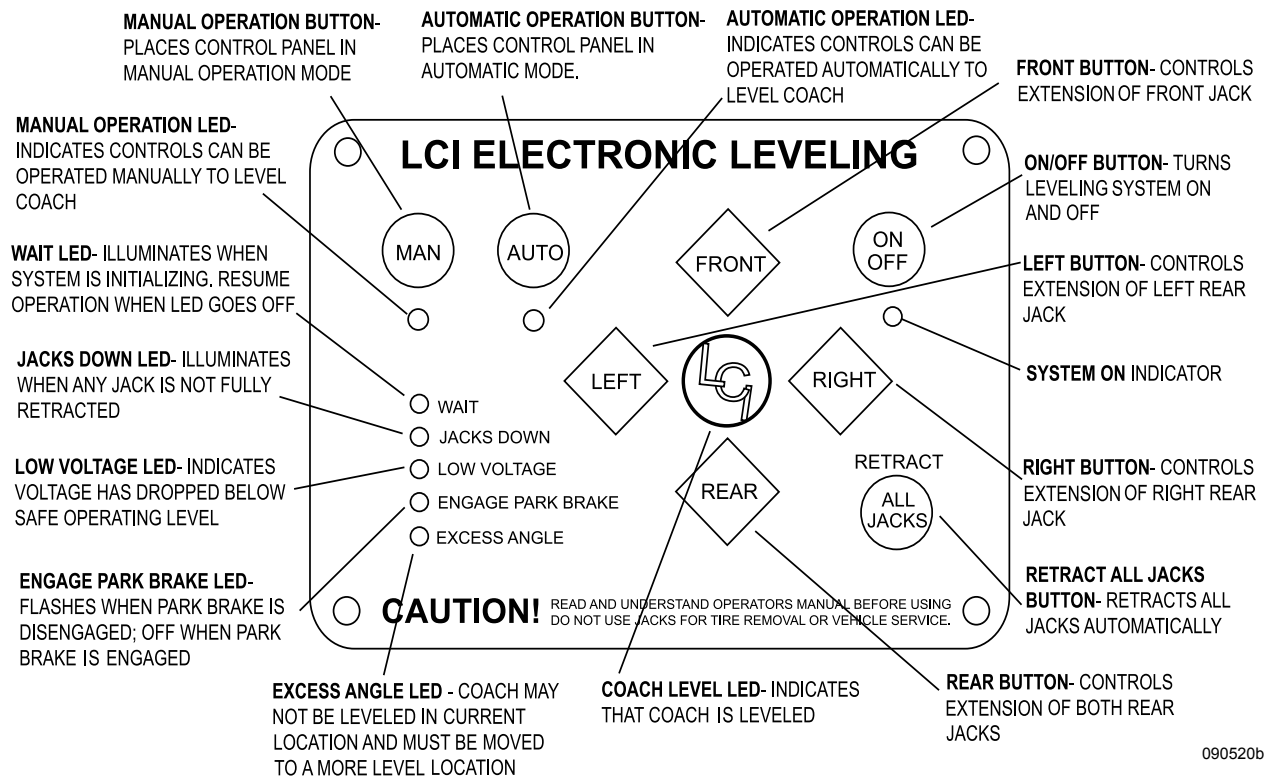

090520b

Prior to Leveling

- Chassis battery voltage must be at least 12 Volts DC.
- Select as level a site as possible. When the coach is parked on an excessive slope the leveling requirements may exceed the jack lift stroke capability. If the motorhome is parked on an excessive slope, the motorhome should be moved to a more level surface before the leveling system is deployed.
- Apply the parking brake. Place the transmission in Neutral.
- With the ignition on, push and hold the Air Dump switch to lower the suspension. This reduces the amount of jack extension required to make contact with the surface.

CAUTION:


Survey the area around and under the motorhome for obstruction that can damage the motorhome or undercarriage components before lowering the air suspension. Damage to the mud flap may occur if it is located over a raised area.

CAUTION:

Ensure potential jack contact points are clear of obstruction or depression before operation. Keep all people clear of the motorhome during the leveling system operation. Never expose hands or other parts of the body near hydraulic leaks. Hydraulic lines are under high pressure. Oil leaks may cut and penetrate the skin causing serious injury.

CAUTION:

Hot asphalt, gravel or dirt may not support the weight that is placed on the hydraulic jack pads. Place thick plywood under the jack pads to help disperse the weight. If blocking up a rear jack pad to gain added clearance when the motorhome is on a slope, place a wheel chock at the opposite set of rear wheels to prevent the motorhome from rolling.

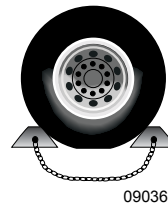

090368
Properly chock the wheels to prevent the motorhome from rolling.

Operation

Automatic Leveling:

- Follow the instructions in *Prior to Leveling*.
- Start the engine. The engine must be running for the leveling system to operate.
- Press the ON/OFF button to turn the system on.
- Press the Auto switch. The pump motor activates and the appropriate jacks automatically extend and level the motorhome. After starting the automatic leveling cycle, do not move around in the motorhome until the unit is level and the green LCI logo illuminates in the center of the touch pad. Failure to remain still during the leveling cycle could affect the performance of the leveling system.


NOTE:

A “Jacks Down” warning light will turn on when the jacks are extended. The alarm will sound and all lights on the controller will flash if the jacks are down and the park brake is released.

- If further adjustments are necessary, press and hold the **MAN** (manual) button for five seconds. Once the indicator lamp below the MAN button illuminates, the system is set to manual level mode.
- Push the appropriate jack button to make adjustments.
- Turn off the remote panel.
- Turn off the ignition switch.

NOTE:

If additional height or surface support is needed, construct a 1' x 1' wooden block made from two pieces of ¾" plywood for a total thickness of 1½". Drill a hole in one corner and use the awning wand to slide the wooden block under the jack pad.

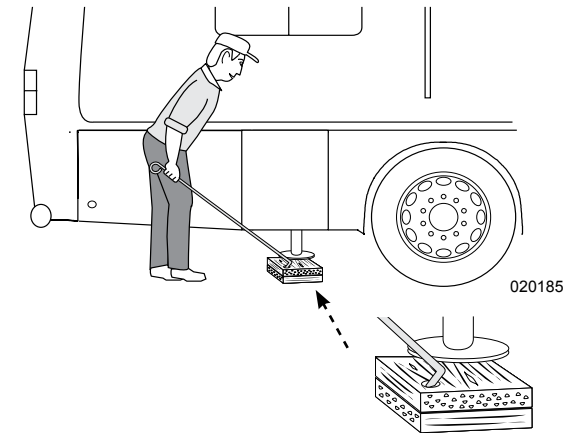

020185b
Wood Support Block

Manual Leveling:

- Follow instructions in *Prior to Leveling*.
- Start the engine. The engine must be running for the leveling system to operate.
- Press the ON/OFF button to turn system on.
- Press and hold the MAN (manual) button for five seconds. Once the indicator lamp below the MAN button illuminates, the system is set to manual level mode.

CAUTION:

Prior to leveling the motorhome it is important that all jacks be in contact with the ground to stabilize and support the frame. No single jack should be used to level the motorhome. Applying an improper leveling process can cause excess torsion stress and/or twisting of the chassis, frame and body, resulting in damage to the windshield or an entry door malfunction.

- Push the **FRONT** button until the front jack makes contact with the ground.
- Push the **REAR** button until the rear jacks make contact with the ground.
- Extend the respective jack position according to the indicator lamps. Example: If the indicator lamp above the FRONT button is on, the front of the motorhome is low. Press and hold the FRONT button. The LCI Level light will illuminate when the motorhome is level. Release the switch.
- Turn off the remote panel.
- Turn off the ignition switch.

WARNING:


DO NOT lift tires off the ground to level the motorhome. Lifting tires off the ground may result in serious damage to the motorhome and/or personal injury or death.

Retracting Leveling Jacks

- Turn the ignition on.
- Apply the parking brake.
- Turn On the remote panel.
- Momentarily press the All Jacks Retract button. If retracting in manual mode, the All Jacks button must be held until the Jacks Down light goes out.
- Once the Jacks Down light goes out, the jacks should be fully retracted. Visually inspect to ensure that all jacks have fully retracted before moving the motorhome.

INSPECTION:

Before moving the motorhome always perform a visual inspection to ensure all jacks have fully retracted. Remove any debris that may be on the jack pad.

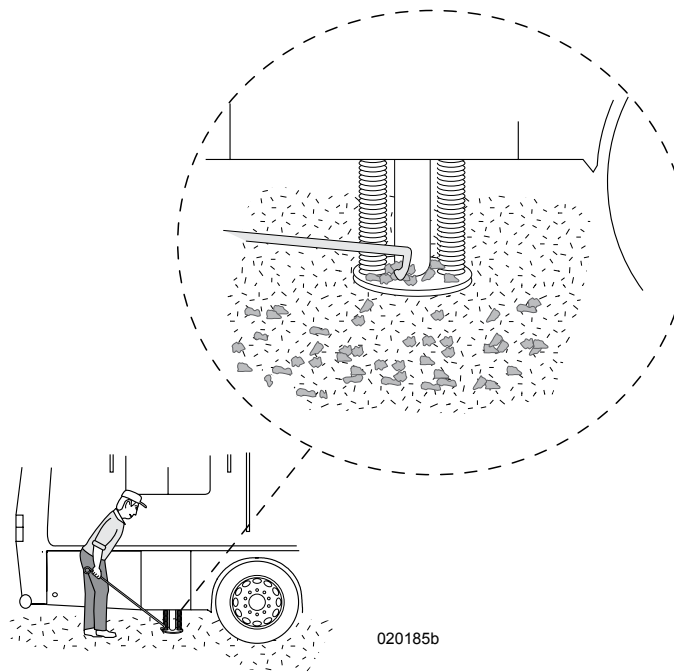

020185b

Remove any debris before travel.

Drive-Away Protection:

With the jacks extended and the park brake released, a warning alarm will sound and all LEDs will flash. The jacks will automatically retract. A full visual inspection is required to confirm full retraction of jacks before moving motorhome.

If the jacks fail to extend or retract:

- Apply the park brake, start the engine and place the transmission in Park.
- If the leveling panel does not light up check the following fuses located in the front electrical panel: VEC-1 20 Amp, F54 10 Amp, F73 15 Amp, F72 15 Amp, F71 15 Amp and F44 5 Amp.
- Check the 150 Amp breaker located in the front electrical bay.
- Turn off the main chassis and house battery disconnect switches, and check the electrical connection at each control valve on the hydraulic pump manifold.

NOTE:

The hydraulic pump is equipped with an internal thermal breaker for protection against overheating. If the pump is repeatedly used in a short period of time the breaker will trip and automatically resets in five to thirty minutes.

Manual Retract:

The hydraulic pump is located curbside in the generator compartment. This hydraulic pump also operates the main and galley slide rooms. To manually operate the pump and retract the leveling legs, an isolator valve must be closed to separate the slide room and leveling functions. There is a control valve on the pump manifold for each leveling leg.

WARNING:


The hydraulic motor can be extremely hot. Use extreme safety when accessing and working on the motor. Hot metal can result in serious burn injuries.

- Turn off the house and chassis main battery disconnect switches.
- The isolator valve is a knurled knob located on the motor side of the pump manifold. On some models, the isolator valve is a blue knurled knob; push in and turn all the way until it stops. On some models, the isolator valve has a black plastic cap; remove the cap and turn the knob until it stops.
- Insert an Allen wrench into a leveling control valve and turn clockwise.
- Remove the protective label from the pump.
- Attach a standard 1/4" hex bit into a cordless drill, screwdriver or socket wrench.
- Insert the 1/4" hex bit into the coupler found under the protective label.

- Run drill counterclockwise to retract.

NOTE:

The hydraulic pump operates two slide rooms and the hydraulic leveling system. If the correct leveling jack is not retracting, the wrong control valve may have been selected. Turn that control valve counterclockwise and try another valve.

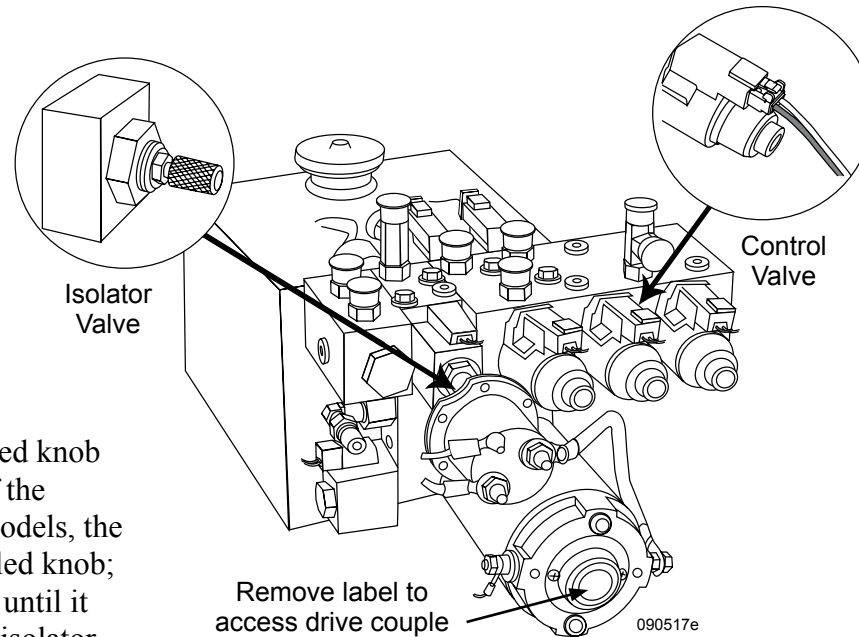

- Once the jacks are retracted, return the isolator valve (knurled knob) to the normal position.
- Use an Allen wrench turn control valve(s) counterclockwise.
- Turn on both the house and chassis disconnect switches.
- Take the motorhome to an authorized repair center.

Maintenance**Jack Rod Maintenance:**

- If jacks are down for long periods, spray exposed leveling jack rods with a silicone lubricant every seven days for protection.
- If the motorhome is located in a salty environment, spray the rods every two to three days.
- Remove dirt and road debris from the jacks as needed.
- Operate the leveling system once or twice a week to keep seals and internal moving parts lubricated.
- Check for any visible fluid leakage before and after movement of the system.
- If squeaks emanate from the jacks during operation, apply a coat of silicone lubricant spray to the jack rod. Do not use grease on the jack rod.

Checking/Adding Hydraulic Fluid:

The hydraulic leveling pump is located curbside in the generator compartment. Check the fluid level once a month, and change fluid in reservoir every 36 months.

- Check a wheel fore and aft for safety.
- Ensure that jacks and slide rooms are completely retracted. Filling the reservoir when jacks or slide rooms are extended will cause the reservoir to overflow during retraction.
- Unscrew the fill cap.


- The fluid level should be within ½" of spout lip. Slowly add AW46 fluid if necessary. **Do not** allow any contamination into the reservoir during fill process.
- Replace the fill cap. Make sure the cap is free of contamination before removing and installing.

NOTE:

The system is filled with AW46 hydraulic fluid. A pink dye has been added for clarity.

NOTE:

In colder temperatures (less than 10° F.) the jacks may extend and retract slowly due to fluid's viscosity. For cold weather operation, fluid specially formulated for low temperatures may be desirable.

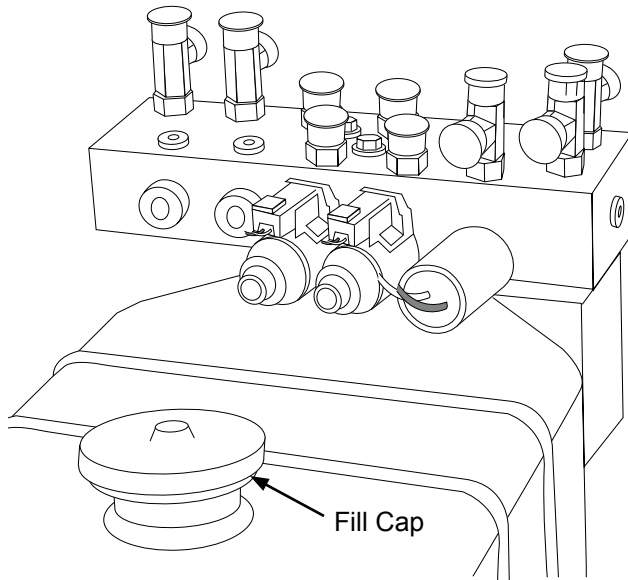

090517d

Electrical Connections:

Inspect and clean all hydraulic pump electrical connections every 12 months. If corrosion is evident, spray with WD-40 or equivalent.

WARNING:

Do not work on the hydraulic pump unless the both the house and chassis battery disconnect switches are off.

LEVELING - AIR (OPTION)

The air leveling control touchpad is located on the driver's console. The computer controlled system can operate automatically or manually to adjust the air springs when leveling the motorhome.

NOTE:

The motorhome engine must be ON for the air suspension to operate.

NOTE:

The automatic leveling system will perform best if there is no movement in the motorhome while the system is attempting to level.

CAUTION:

Several inches of unobstructed downward travel is required when using the leveling system. Look underneath the motorhome for any obstacles that could damage the undercarriage components before using the leveling system.

WARNING:


DO NOT engage the leveling system when anybody is near or underneath the motorhome. Serious injury or death can occur.

Automatic Air Leveling**Prior to leveling:**

- Set the park brake.
- Place the transmission in neutral.
- Front wheels must point straight ahead.
- The motorhome must be at ride height with air tanks full.
- Turn off ignition and extend slide-outs.

Leveling Procedure:

- Start engine.
- Press the **POWER** button on the leveling control panel to turn the system **ON**. The Power indicator light will glow solid green.
- Press the **AUTO** button to initiate the leveling process. The indicator light above Auto will blink and the motorhome will automatically level itself. Red lights in the motorhome icon indicate the motorhome is leveling. The system measures rear axle, front axle and longitudinal axis of the chassis to check for both level and flex in the motorhome.
- When all lights in the motorhome icon turn solid green, the motorhome is level.
- When leveling is achieved, leave the control panel on and turn ignition switch off.

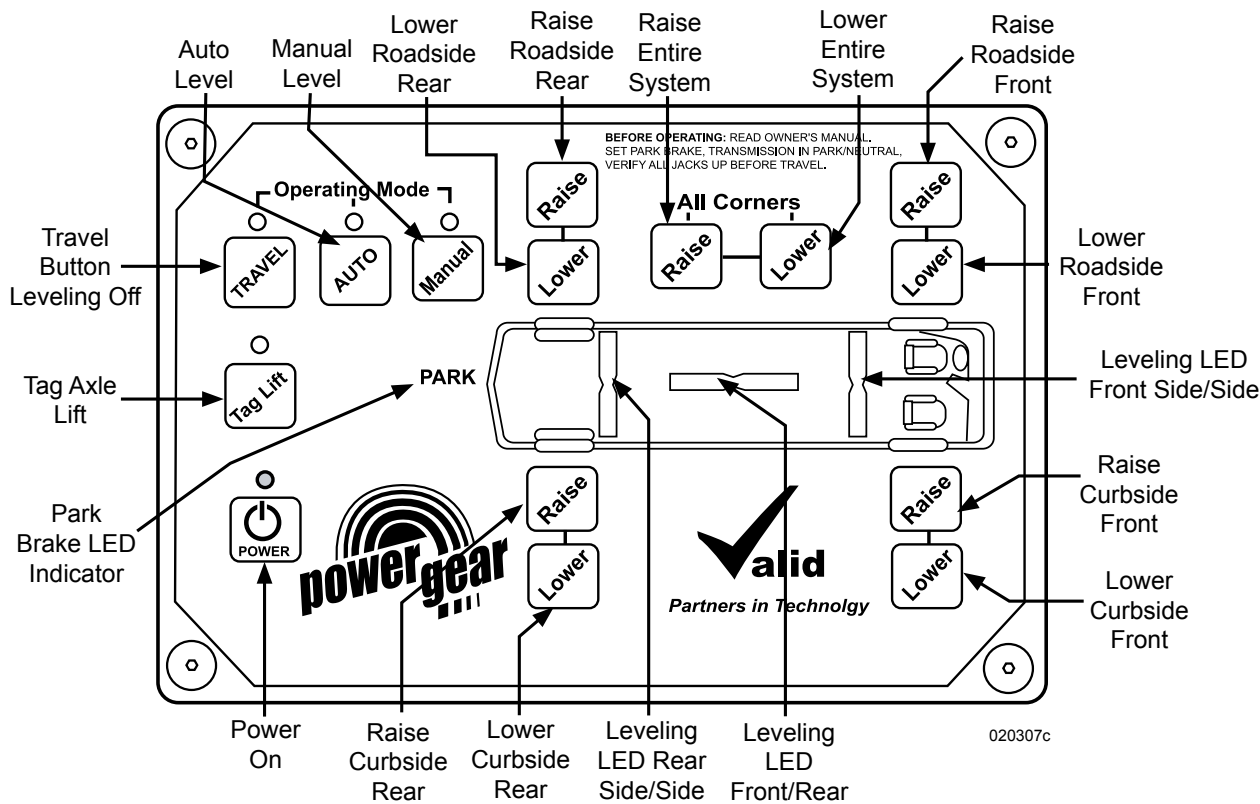

Manual Air Leveling

The Manual Leveling Mode gives the operator control over the leveling process.

Prior to leveling:

- Set park brake.
- Place transmission in neutral.
- Ensure front wheels are pointing straight ahead.
- Have motorhome at ride height with air tanks full.
- Turn off ignition and extend slide-outs.

Leveling Procedure:

- Start the engine.
- Press the **POWER** button on the leveling control panel to turn the system on. The Power indicator light will glow solid green.
- Press the **MANUAL** Mode button. The indicator light above Manual will blink.
- Press **RAISE** or **LOWER** for each corner to manually adjust. During the leveling process a red light will blink on the motorhome icon. Once that corner is level the light will turn solid green. Proceed to the next corner until the motorhome is level.
- To control all four corners simultaneously, use the **ALL CORNERS RAISE** and **ALL CORNERS LOWER** buttons.
- Turn ignition switch off when leveling is achieved.

After leveling:

- The leveling system goes into “Sleep” mode after 15 seconds to minimize parasitic current draw on the chassis batteries.
- The system goes into “Low Power” mode after 20 seconds indicated by the occasional flashing of the Auto and Power indicator lights.
- After a period of time in “Low Power” mode the system automatically “wakes” and checks to see if re-leveling is required.

- If leveling is required the system will automatically level the motorhome.

NOTE:

Turning off the control panel after leveling will disable the system and not allow automatic re-leveling if necessary.

System Air Compressor:

Should air pressure in the leveling system need adjustment while parked in Automatic Leveling mode, a small air compressor provides the leveling system with air pressure. This compressor requires no maintenance.

Travel Mode

Travel Mode exits Leveling Mode and allows the height control valves to set proper suspension height for travel. Initiate Travel Mode prior to moving the motorhome. It may take several seconds for the motorhome to achieve full ride height once in Travel Mode.

WARNING:

The time required to achieve ride height varies. Make sure that the motorhome is at ride height before driving. If the motorhome is too low, severe damage can result.

To Use Travel Mode:

- Start engine and press the **TRAVEL** button.
- If the Air Leveling System is turned off, or in any other mode other than Travel, the system automatically switches to Travel Mode when the parking brake is released.
- Enter Travel Mode before moving the motorhome.

NOTE:

The tag axle will not raise until Travel Mode is selected, initiating a two minute time delay. This allows extra time for the air system to pressurize before selecting Tag Lift.

INFORMATION:

For detailed information and operating instructions on the Air Leveling System, refer to the OEM manual.

Service

The air leveling system includes a compressor and air tank located curbside in the generator compartment. Drain the air tank once a month or more depending on operating conditions and humidity levels.

The air tank drain is located at the bottom of the air tank. Open the drain valve until all air is released from the tank. Wait five minutes before closing the drain valve to ensure that all moisture has been expelled.



ENGINE - GENERAL INFORMATION

The diesel engine operates differently from the conventional gasoline engine. Gasoline engines control engine speed using a butterfly throttle plate to control air/fuel mixture inlet flow. As the throttle plate opens, vacuum created by the piston velocity draws the metered fuel/air charge into the combustion chamber, then ignites from a controlled electric ignition source. Closing the throttle plate limits the fuel/air supply, slows engine speed and increases intake manifold vacuum.

The diesel engine in the motorhome controls engine speed by varying fuel supply only. No throttle plates are used. An exhaust driven turbine system (turbocharger) compresses the fresh air supply into the engine. The fuel is injected under pressure into the combustion chamber. Ignition of fuel/air charge occurs from heat generated by rapid high compression. The turbo boost gauge registers amount of intake manifold pressure measured in lbs./in². Therefore, no intake manifold vacuum exists.

Diesel engine RPM (revolutions per minute) is generally much lower than that of the gasoline engine. Peak torque and horsepower output values occur at much lower engine speeds. Idle speeds between the two engine types are similar, however, maximum engine speeds are quite different. The gasoline engine generally is not regulated to a maximum engine speed. The maximum engine speed on a diesel engine is controlled by an engine speed governor set by the engine manufacturer.

WARNING:

DO NOT operate a diesel engine where there are or can be combustible vapors. Vapors can be drawn through the air intake system and cause engine acceleration and over-speeding, resulting in fire, explosion and extensive property damage. Numerous safety devices are available, such as air intake shutoff devices, to minimize risk of an engine over-speeding where an engine (due to its application) might operate in a combustible environment, such as fuel spills or gas leaks.

INFORMATION:

The equipment owner and operator is responsible for safe operation of engine. Consult your engine manufacturers owners manual or authorized repair location for more information.

STARTING PROCEDURE***Normal Starting***

The engine is equipped with an intake manifold grid heater. The grid heater helps engine starting in cold weather. Intake manifold air temperature is monitored by the Electronic Control Module on the engine. The manifold grid heater will activate if intake manifold temperature is below approximately 40° F. Grid heater activation is indicated by the **WAIT TO START** indicator lamp.

WARNING:

Use of ether starting fluids may cause an explosion upon grid heater activation.

To Start the Engine:

With the throttle in idle position, turn ignition to ON. Allow the WAIT TO START lamp to extinguish. Turn key to the start position. When the engine starts the grid heater will again energize for a time period determined by the Electronic Control Module. Allow the engine to idle with no load for three to five minutes. The engine coolant temperature should be up to normal operating range (140° F./60 ° C to 212° F./100° C) before operating the engine under full throttle.

CAUTION:

DO NOT idle the engine for long periods of time. Consistent periods of long idle wastes fuel and may cause engine damage.

Cold Weather

In extreme cold temperatures, engine oil becomes thick and battery output is reduced. Thick oil, combined with less amperage available from the battery, increases difficulty in starting the engine.

Depending on ambient temperature it may be necessary to pre-heat the engine. Located in the coolant passage in the engine is a heating unit (block heater) that operates from 120 Volt AC. If it is necessary to pre-heat the engine due to ambient temperature, activate the block heater the night before, allowing several hours for the block heater to warm the engine.

Another method to preheat the engine is to use the optional Aqua-Hot. The Aqua-Hot engine pre-heat function will heat engine coolant and the interior.

It is possible to operate diesel engines in extremely cold environments when the engine is properly equipped with the correct lubricants, fuels and coolant. Cold weather operation can be defined in two categories: Winter and Arctic.

WINTER (32° to -25° F.) (0° to -32° C.): Use a 50% antifreeze to 50% water coolant mixture, use multi-viscosity oil meeting manufacturer specification and fuel to have maximum cloud pour points 10° F. (6° C) lower than the ambient temperature in which the motorhome operates.

ARCTIC (-25° to -65° F.) (-32° to -52° C.): Use a 60% antifreeze to 40% water coolant mixture. Use oil meeting manufacturer specification and fuel to have maximum cloud pour points 10° F. (6° C.) lower than the ambient temperature in which the motorhome operates.

NOTE:

The engine is filled with *Kendall Super-D XA SAE 15w-40 (with CJ-4 rating)* multi-viscosity oil from the factory. Generally this will start the engine in temperature down to 15° F. If the engine has normalized to a temperature below 15° F. it will be necessary to pre-heat the engine before starting.

CAUTION:

Upon cranking an engine in cold temperature, the starter may rapidly engage and disengage. If this occurs STOP attempting to crank the engine to prevent starter damage. Pre-heat the engine before making further attempts to start.

INFORMATION:

Refer to the engine manufacturers Owner's Manual for more detailed information.


Block Heat:

A 120 Volt AC outlet and the block heater power cord are located in the exterior engine compartment.

The block heater is rated between 850 and 1500 watts, depending on engine size. For efficiency, hook to shore power or plug the block heater cord into a separate power cord rated for 15 Amps and a GFCI protected outlet rated at 20 Amps. The engine may require several hours of preheating before starting. It is recommended to start preheating the engine the night before departure.

To Use the Block Heater:

- Hook to shore power and plug the block heater cord into the block heater receptacle (both are located in the engine compartment).

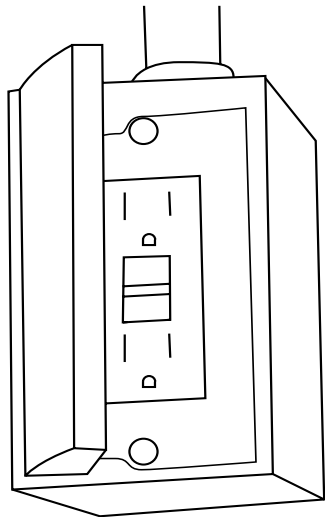

090480

Aqua-Hot Engine Preheat:

The diesel burner inside the optional Aqua-Hot heats an internal engine coolant loop. When the Aqua-Hot Engine Preheat switch is turned on, an engine coolant pump inside the Aqua-Hot circulates heated coolant through the engine. The time it takes for the Aqua-Hot to preheat the engine depends on ambient temperature. Allow at least three hours of preheating before attempting to start the engine.

To Use the Engine Preheat System:

- Press the Aqua-Hot switch at the kitchen to turn the system on.
- Turn the Aqua-Hot Engine Preheat switch at the dash to the **ON** position. This activates the engine pump inside the Aqua-Hot.

Tips:

1. When operating below 32° F., the Aqua-Hot and/or block heater preheat can enhance engine starting by easing cranking and helping to prevent engine misfire and white smoke during starting.
2. Always follow the recommended oil, fuel, and coolant specifications as outlined in the OEM Engine Manual. Proper oil viscosity and coolant concentration eases engine starting and helps to avoid engine damage.

3. Allow the engine to idle until it sufficiently warms for operation. Utilize the fast idle feature to quicken the process. Wait to operate the motorhome for at least three minutes or until the coolant temperature begins to rise.
4. Check the air inlet and filter daily, or as necessary, when driving in snow conditions.
5. The demand on batteries increase during winter; check and service the batteries frequently to help ensure trouble-free starts.
6. Start out slowly with the motorhome to allow the transmission and axle lubricants time to circulate and warm before putting them under full load.

WARNING:

Use of ether starting fluids may cause an explosion upon grid heater activation.

ENGINE OIL**Cummins Engine Requirements:**

Maintenance guidelines and requirements are located in the Cummins Operation & Maintenance Manual. These recommendations for the engine will extend engine life and improve performance, resulting in cost efficient operations. A good maintenance schedule begins with a daily awareness of the engine and its various systems.


A high grade 15W-40 multi-viscosity heavy duty lubricating oil meeting American Petroleum Institute (API) specification **CJ-4** is recommended. A critical factor in maintaining engine performance and durability is the use of high grade, multigrade lubricating oil and strict adherence to the maintenance service intervals.

A straight weight or monograde lubricating oil is not recommended. Shortened drain intervals may be required as determined by a close monitoring of the lubricating oil condition by means of an oil sampling program. The use of oil analysis to extend drain interval is not recommended. There are numerous variables which is the basis of the recommendation.

Oil additives should not be used unless the oil supplier or oil manufacturer has been consulted and provided positive evidence or data establishing satisfactory performance in the engine.

NOTE:

The engine is filled with ***Kendall Super-D XA SAE 15w-40*** (with ***CJ-4*** rating) multi-viscosity oil from the factory.

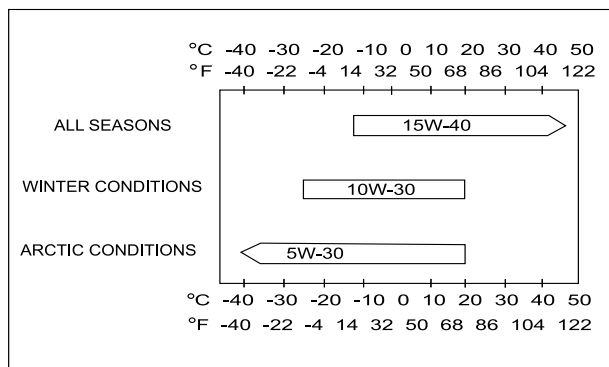

070201

Lubricating oil recommendations and specifications.

NOTE:

The engine does not require a “break-in” procedure.

INFORMATION:

Refer to the **Engine Manufacturers Owners Manual** for details on the oil maintenance schedule.

ENGINE SHUTDOWN

Allow the engine to idle three to five minutes after a full load operation. This allows adequate cool down of pistons, cylinders, bearings and turbocharger components. Under normal driving conditions, exiting the highway is generally lighter engine operation and the need for the three to five minutes is not necessary.

Extended Engine Shutdown

Verify all fluid levels are correct when the motorhome has been sitting for 30 days or more prior to starting, then follow the normal starting procedures. If oil pressure does not register within 15 seconds, immediately shut off the engine to avoid damage. Consult the engine manufacturer’s owner’s manual for guidelines on troubleshooting low oil pressure, or contact a qualified service technician. Otherwise, allow the engine to idle for five minutes before operating under a load.

COOLANT SYSTEM

A fully formulated coolant is recommended to simplify cooling system maintenance. Coolant that is fully formulated contains balanced amounts of antifreeze, Supplemental Coolant Additive (SCA), buffering compounds and clean, quality water.

Antifreeze that is not fully formulated must be mixed with clean, quality water (distilled water preferred) in a 50/50 ratio (40 to 60% working range).

This ratio will provide protection from -34° F. to 228° F. Antifreeze must be of low silicate content as defined by ASTM D-4985. The 50/50 ratio of antifreeze and clean quality water plus SCA must be premixed prior to being put in the cooling system. Placing antifreeze and then water in the cooling system is not recommended. Refer to the OEM engine manual for more information.

CAUTION:

An over-concentration of antifreeze will reduce freeze protection. Use of high silicate antifreeze can damage the cooling system. SCA is required in the cooling system to inhibit cylinder liner pitting as a result of cavitation erosion.

WARNING:

DO NOT continue engine operation if engine temperature rises above 220° F. At approximately 225° F., the Check Engine light on the dash will illuminate and the engine protection software will begin to decrease fuel (derate) to the engine regardless of throttle position. Continued operation will result in severe engine damage.

Check the coolant level before each trip and when checking the oil level. Coolant freeze point is checked at every oil change interval or as specified by the engine manufacturer. Coolant drain and flush intervals are specified by the engine manufacturer. Refer to the OEM engine manual for more information on service maintenance intervals.


INFORMATION:

Refer to the engine OEM manual for details on engine coolant maintenance.


Engine Coolant Reservoir:

The engine coolant reservoir is connected to the radiator by a hose. Coolant heats and expands as the motorhome is driven. Coolant displaced by expansion overflows from the radiator into the reservoir tank. Coolant contracts as it cools and is drawn back into the radiator by vacuum. Thus, the radiator is filled to capacity with coolant at all times resulting in increased cooling system efficiency.

The reservoir fluid level is marked MIN (cold check)/MAX (hot check). Maintain coolant between the appropriate reservoir indicators.

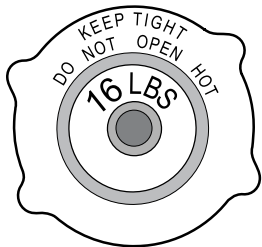

Coolant Reservoir Cap rated at 16 lbs.

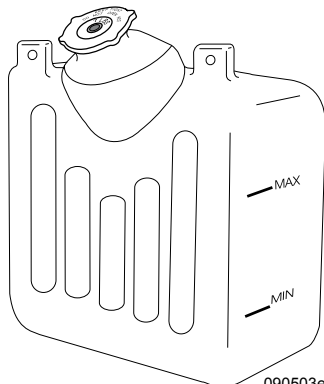

Coolant Reservoir Tank

CAUTION:

DO NOT remove the reservoir cap while the engine is running or if the engine is hot. Cap removal can result in severe burns and damage to the engine cooling system.

CAUTION:

Be sure to replace the cap after adding fluid.

Coolant Checks:

- Check coolant level daily or when refueling.
- A low coolant alarm will sound and a low coolant indication will appear on the instrument panel if coolant level drops below acceptable levels in the reservoir.
- Coolant level should remain between the MIN and MAX indicators on the reservoir when the cooling system is properly filled.

Supplemental Coolant Additive (SCA):

SCA is required to protect the cylinder liner/sleeve from cavitation erosion. Cavitation erosion is caused by minute air pockets that collect on the cylinder liner. The air pockets will pop (implode) during engine operation. Over time this can erode a hole through the cylinder liner. Supplemental coolant additives inhibit formation of the air pockets. The SCA content of the coolant is checked with Litmus paper. Test kits are available from the engine manufacturer as well as aftermarket. Litmus paper is time and light sensitive. Check the SCA content at each oil change following the directions in the test kit.

NOTE:

Refer to the engine OEM manual for further information.

NOTE:

SCA test kits are time and light sensitive. Store test kit in a dry and dark location. Discard if out of date. Pink colored antifreeze may not be compatible with certain test kits.

Cooling System Maintenance:

Refer to the engine OEM manual for detailed information regarding cooling system service and maintenance intervals. Services include draining and replacing the coolant, flushing the cooling system, inspecting the water pump and standpipe and replacing the thermostat, gasket or seal.

Coolant Overheated:

The engine can overheat for a number of reasons. Before engine temperature reaches a critical point it is preceded by illumination of dash indicator lamps as well as above normal temperature gauge readings. It is best to adhere to these indicators and take corrective action before the engine is subjected to extreme heat and potential engine damage.

If the engine should begin to severely overheat, engine protection software will decrease fuel regardless of throttle position (derate) to reduce heat created by combustion. Damage to the engine will occur if engine operation continues and cause of the overheat condition is not immediately corrected. At this point it is best to shut off the engine as soon as possible to avoid further engine damage.

WARNING:

It is advised to shut off the engine should the engine overheat. It may take several hours before engine temperature has lowered to a safe operating range. Do not remove the coolant reservoir cap as severe burns may result. Never add cold water to an overheated engine as this will cause uneven rapid cooling and possibly result in further engine damage.

Coolant System - Thawing:

If the coolant system becomes frozen, the motorhome must be towed. Place the motorhome in a warm area until completely thawed. If the engine is operated when the cooling system is frozen, the engine may overheat due to insufficient coolant circulation. Once thawed, check the engine, radiator and related components for damage caused by expansion of frozen coolant.

Coolant Hoses:

Inspect coolant hoses and connections when checking engine or transmission fluids. Look for any signs of chaffing at hose restraints or sharp edges. Indications that hoses have reached the end of service life include cracking or swelling around clamps and connections. Oil leaks can also deteriorate hoses.


Overheating can be caused by a collapsed hose. Old hoses can also deteriorate on the inside causing partial clogs reducing cooling efficiency. Replace any hose found to be cracked, swollen or damaged. Periodically check hose clamp torque.

INSPECT:

Every 12 months, inspect all hoses, clamps, and fittings for leaks due to cracking, softness and loose clamps/fittings. Look for signs of fluid leaks, damaged end fittings or ballooning; chafed, kinked, or crushed hoses; and loose clamps and fittings. Correct any deficiencies found.

Radiator/Charge Air Cooler

The diesel engine uses compression to ignite the fuel/air charge. To increase compression inside the combustion chamber (resulting in increased power output) a turbocharger is added to the engine. The turbocharger is a paired housing assembly with impellers inside each housing connected by a common shaft. One impeller is propelled by the engine exhaust, which drives the other impeller. The function of the other impeller is to increase compression inside the combustion chamber by forcing air into the intake manifold.

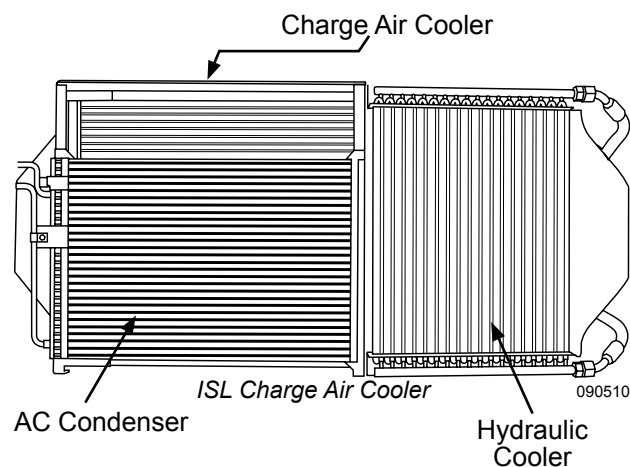

This process works well, however, the intake air to the engine is heated two different ways: through convection by the exhaust gases driving the turbocharger and when air is compressed. This negative effect inside the combustion chamber results in lost power potential. Therefore, a Charge Air Cooler (CAC) is installed to cool the intake air before it enters the engine. The CAC performs the same function as a radiator, cooling air instead of liquid. Ambient air passing through the CAC will cool the engine intake air charge.

After leaving the turbocharger, intake air is compressed and heated to approximately 300° to 375° F., depending on the engine load and throttle position. Before air enters the intake manifold, the CAC cools the intake air temperature to the engine manufacturer specifications. Lowered intake air temperatures reduce exhaust emissions, improve fuel economy and increase horsepower. The CAC will continually expand and contract up to ¼" as throttle increases and decreases.

Cleaning and Maintenance:

- **Inspect** the charge air cooler every week and remove dirt and debris that may block the fins. If the motorhome develops an oil leak, there is a possibility that the oil will coat the fins of the CAC. Dust will adhere to the oil film, clog the fins and reduce cooling efficiency. When the oil leak is repaired, the CAC must be thoroughly cleaned.
- During each oil change **inspect** the engine side of the radiator/CAC assembly for foreign objects that may cause restriction.

- Spraying degreaser on the charge air cooler, as well as using a steam cleaner, will not damage the CAC. **However, pressure washer and steam cleaner nozzles placed too close to the CAC can bend the fins.** The recommended cleaning procedure for the CAC and the radiator is to use a bucket of mild soap and water. Carefully wash with a bristle brush then rinse using a garden hose with minimum water pressure, standing back a distance to avoid bending the fins.
- **Inspect** other components of the cooling system when performing maintenance. The charge air cooler and radiator also requires an **inspection** for cracks, broken welds, secure mounting, and general cleanliness.

Every 12 months:

Inspect all hoses, clamps, and fittings for leaks due to cracking, softness, and loose clamps/fittings. Look for signs of fluid leaks, damaged end fittings, ballooning, chafed, kinked, or crushed hoses, and loose clamps and fittings. Correct any deficiencies found.

TRANSMISSION


The Allison transmission is comprised of four major components connected by a wiring harness: Transmission Control Module (TCM), Throttle Position Sensor, Speed Sensors and Shift Selector. The TCM processes information received from the throttle position sensor, speed sensors, pressure switches, and shift selector to provide optimum shift quality under a wide range of conditions.

This is accomplished by matching transmission gear changes and road speed with engine percent of load to establish a desired shift profile within the TCM. Another feature of the transmission is the ability to “learn and adapt” (Adaptive Logic) to optimize shift quality.

Shift Selector

The keypads on the shift selector are R (Reverse), N (Neutral), D (Drive), Up and Down arrow, and Mode button. The digital display shows gear selection (Select), and gear attained (Monitor), a Trans Service icon (wrench), and transmission prognostic information. The shift selector will display the Trans Service icon when maintenance is due.

NN (Neutral) will appear in the display window when the ignition is turned On. This indicates the transmission is in neutral. If NN does not display when the ignition is turned on, there is no power to the shift selector and the transmission will not allow the engine to start. No display is an indicator of electrical problems with the engine batteries, TCM, or the shift selector.

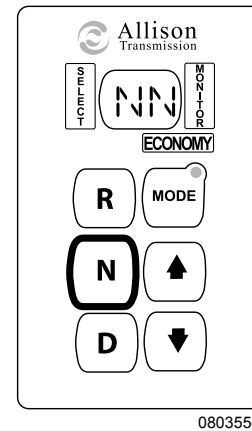

Keypad Functions:

- Select Reverse by pressing R-RR will display.
- Select Neutral by pressing N-NN will display. The perimeter of the neutral keypad is indexed with a raised area for identification.
- Select Drive range by pressing D. The highest forward gear (6th) appears on the Select (left) side of the display. The Monitor (right) side of the display will show first gear displayed as 6 1.

As the transmission upshifts, the Monitor side of the display will show subsequent gears attained. When the auxiliary brake is applied, the display will show the highest forward gear and the “pre-select” gear, displayed as 6 2 for example. With the auxiliary brake applied, the transmission will automatically downshift until the target pre-select gear is attained. In this case, 2nd gear is the target pre-select gear. The Up and Down buttons are used to select a higher (if not in 6) or lower (if not in 1) forward gear. These buttons will not select Drive when the transmission is in neutral or reverse. Using the Up or Down buttons in Drive changes forward gear selection by one. If a button is held continuously, the gear range will continue to change up or down until the button is released or until the highest/lowest possible forward gear is selected.

- The Mode button enables a secondary shift schedule. This is commonly referred to as Economy mode. Economy mode sets the transmission upshift schedule to occur a lower engine RPM through gear changes 3-4, 4-5, 5-6 and downshift schedule 6-5, 5-4, 4-3. During highway driving with the cruise control set between 55 and 65 m.p.h., placing the transmission in economy mode should eliminate most transmission downshifts from sixth to fifth when incurring a slight incline or overpass.

CAUTION:

Do not use Economy Mode in heavy stop and go traffic or mountainous terrains. Frequent shifting while using heavy throttle occurs in Economy Mode and increases transmission fluid temperature. Exit Economy Mode until road conditions improve.

NOTE:

Cruise control power switch enabled alters the shift schedule. Turn off the cruise power switch in congested traffic and mountainous terrain.

NOTE:

The Mode button is used by the service technician to access diagnostic codes when troubleshooting. The diagnostic circuitry must be enabled to display.

CAUTION:

Engine temperature may rise when ascending long grades using full throttle. Towing a load will increase the demand on the engine. If this occurs, manually shift the transmission to the next lower gear and use less throttle. The engine will use less fuel and RPM should increase.

NOTE:

The transmission will not accept a manually selected gear change to occur if the gear selected is out of the specified operating range.

NOTE:

The transmission will not shift into gear from Neutral if the engine RPM is at or above 900. The display will flash “66” indicating the engine RPM is excessive. Select “N” and lower engine RPM.

Maintenance Prognostics:

The shift selector allows the operator to perform several types of maintenance checks:


- Transmission fluid level.
- Fluid life remaining before changing specified in percentages from 99% to 0%.
- Filter life remaining before changing the filters represented FM OK or FM LO.
- Transmission “health” monitor detects excessive internal component (clutch) wear represented TM OK or TM LO.

Enter a category by simultaneously pressing the Up and Down keypads. Press N (Neutral) to exit

- Once for oil level display.
- Twice for fluid life remaining.
- Three times for filter life remaining.
- Four times for health monitor.
- Five times for diagnostic codes.

Trans Service Icon

If the electronics determine maintenance is due, the Trans Service icon will illuminate in the display when the ignition key is turned on. The electronics record into memory the day and time, mileage, and message reference. The Trans Service icon will turn off shortly after selecting Drive. If necessary maintenance is repeatedly ignored, the Trans Service icon and Check Trans icon will illuminate continuously. If this occurs, the motorhome must be taken to an authorized Allison service center for repairs.

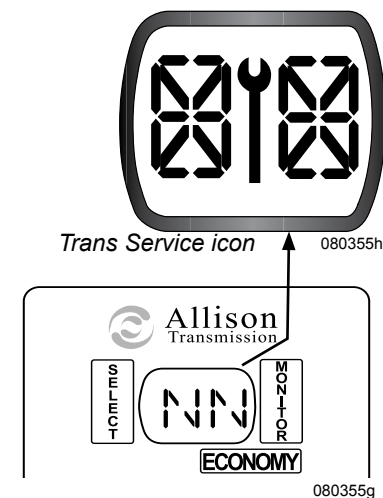

NOTE:

If the Trans Service icon remains illuminated while in Drive, the motorhome must be taken to an authorized Allison service center for repairs.

Check Trans Icon

The electronic control system of the transmission is programmed to alert the operator of a problem with the transmission system, and reacts automatically to help protect the motorhome and transmission from damage. The icon, located on the instrument panel, will illuminate briefly when the key is turned on to confirm it is functioning. The icon will go out after the engine has started.

If the Check Trans icon illuminates after engine startup or while traveling, this indicates the TCM has detected an error condition and recorded a diagnostic trouble code. The Check Trans icon may be accompanied by a flashing or steady Trans Service icon. The motorhome should be taken to an authorized Allison service center as continued operation can result in severe transmission damage.

The shift selector can inform the operator the transmission is operating at reduced capacity, such as the shift selector display shows the actual range attained and the selector may not respond to shift requests when the TCM detects a Do Not Shift (DNS) condition. The transmission generally will downshift to 4th gear. The torque converter will not “lock-up” and engine speed is automatically reduced. Direction changes (i.e. forward to reverse) are not allowed.

This allows a short time to find a safe place to park to prevent transmission damage. If the engine is shut off, then started after a Check Trans indication, the transmission remains in Neutral until the fault is corrected. Service should be performed immediately in order to minimize potential damage to the transmission.

NOTE:

Contact an authorized Allison transmission service center whenever a transmission related concern arises. For some problems, diagnostic trouble codes may be registered without the TCM activating the Check Trans indicator. An authorized Allison service center will have the equipment to check diagnostic codes and correct problems that may arise.

Diagnostic Trouble Codes

The shift selector can display transmission malfunctions as a two-digit main code and two-digit sub code. These codes are classified Active or Inactive. Active codes are generally indicated by illumination of the Check Trans icon. Active codes affect TCM processes and transmission operation. Inactive codes generally do not illuminate the Check Trans icon. Inactive codes are retained in memory and may not affect TCM processes or transmission operation.

Should the Check Trans icon illuminate, a service technician can activate Diagnostic mode or connect a diagnostic reader (Pro-Link) to the J1939 data port and retrieve diagnostic trouble codes. A maximum of five codes, D1 to D5, can be listed at one time. The highest priority code will be listed in D1.

The Mode button will enable selection of subsequent codes. The shift selector will list each code consisting of five characters. The first being a letter designate followed by a four digit number string. When new codes are added, the oldest inactive codes will be dropped.

To Display Diagnostic Codes:

- 1 Stop the motorhome at a safe location.
2. Apply the parking brake.
3. Simultaneously press the up and down arrows 5 times to enter diagnostic mode.

The codes will display one digit at a time or two characters at a time. Press the mode button to scroll through the codes. Record all diagnostic codes that are displayed. The codes are used by an Allison service center for evaluation and repair. Inactive codes can be cleared by holding the Mode button for approximately 10 seconds. Some codes are self-clearing while others will require the motorhome be brought in for repair.

NOTE:

Diagnostic codes are listed in the OEM transmission owner’s manual.

Periodic Inspections:

Careful attention to fluid level and operating temperature is very important. The prognostic function in the shift selector can warn of potential problems or maintenance due. Inspect hoses for signs of leakage or abrasion. The transmission should be kept clean. Make periodic checks for loose bolts and leaking fluid.

Check the condition of the electrical harnesses regularly. Check the engine cooling system occasionally for evidence of transmission fluid that would indicate a faulty oil cooler. Report abnormalities in operation or when the Check Trans icon illuminates or Trans Service icon remains illuminated to an authorized Allison service center.

Prevent Major Problems:

Minor problems can be kept from becoming major problems by contacting an authorized Allison transmission service center when one of these conditions occurs:


1. Shifting feels odd.
2. Transmission leaks fluid.
3. Unusual transmission-related sounds.
4. The Trans Service and/or Check Trans icon illuminates frequently or remains illuminated.

Transmission Fluid

The transmission is filled with TranSynd™ synthetic transmission fluid at the factory. A tag is attached to the dipstick identifying the transmission is filled with TranSynd™ synthetic transmission fluid. Use only transmission fluid meeting Allison specification TES 295.

CAUTION:

The transmission is filled with TranSynd™ synthetic transmission fluid meeting Allison specification TES 295. Do not mix with other fluid types such as Dexron/Mercon ATF (Automatic Transmission Fluid). The TCM prognostics are programmed for use with TES 295 approved fluids only.

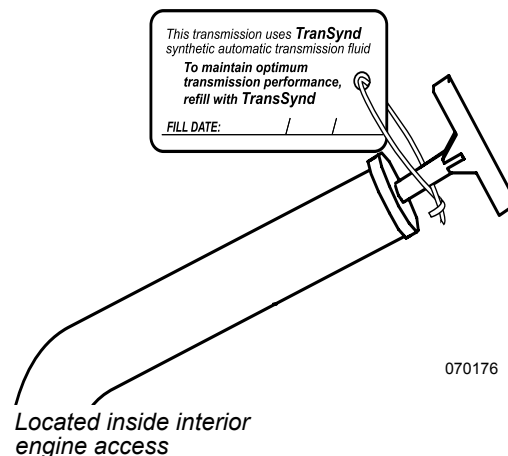

Fluid Change Interval:

The transmission fluid change intervals are determined by these factors:

- When the Trans Service icon indicates.
- Date/mileage as determined by Allison in the OEM transmission owners manual.
- If the shift selector in prognostic mode displays between 99 and 2, the fluid does not need to be changed. If the shift selector displays 1, the fluid needs to be changed and the Trans Service icon will remain illuminated.

NOTE:

Date/mileage change intervals still apply as specified in the Transmission OEM Manual. Fluid must also be changed whenever there is evidence of dirt or high temperature operation as indicated by discoloration, strong odor or fluid analysis. Refer to the Allison transmission owner's manual or contact an authorized Allison service center for fluid and both filters service intervals.

Proper Fluid Levels:

The preferred method for checking the fluid level is using the shift selector. Proper fluid levels must be maintained at all times. If fluid level is too low, internal components do not receive an adequate supply of fluid. If fluid level is too high, the transmission may shift erratically or overheat. Check the transmission fluid level before each trip and after removing the motorhome from storage.

Fluid Level Check from the Shift Selector:

- Park the motorhome on a level surface.
- Place the transmission in "N" and set parking brake.
- Transmission temperature must be between 140° and 220°.
- The motorhome must be stationary and in Neutral for approximately two minutes to allow the fluid to settle in the sump.
- The engine must be idling lower than 800 RPM.
- Simultaneously press the Up and Down buttons once.

The transmission is now in Oil Level Sense mode. The display will indicate one character at a time. An “o” followed by “L” represents oil level check mode.

One of the following will be indicated:

- “o K” represents the level is okay.
- “Lo” represents a low fluid level followed by a numeric indication of the number of quarts needed fill the sump.
- “HI” represents an overfull condition followed by a numeric indication of the number of quarts the sump is overfull.
- A countdown of flashing numbers indicates the fluid is still settling. When the fluid has stabilized in the sump, the true level is indicated.
- If an “o” “L” “-” followed by a number displays, the oil level sensor could not read the level due to one of conditions listed in the “Common Oil Level Fault Codes” chart.
- Exit by pressing “N.”

Common Oil Level Fault Codes

Display	Cause of Code
o,L - O,X	Setting time too short
o,L - 5,0	Engine speed (RPM) too low
o,L - 5,9	Engine speed (RPM) too high
o,L - 6,5	Neutral must be selected
o,L - 7,0	Sump fluid temperature too low
o,L - 7,9	Sump fluid temperature too high
o,L - 8,9	Output shaft rotation
o,L - 9,5	Sensor failure

Manual Cold Check Procedures:

A cold check is performed to determine adequate fluid level for safe operating such as after a fluid and filter change. A cold check should be performed after transmission maintenance or service until a hot fluid level check or fluid level check from the shift selector can be performed.

To Check the Fluid When Cold:

- Park the motorhome on a level surface. Set the parking brake.
- Chock the wheels to prevent the motorhome from moving.
- Start the engine.
- Allow the engine to run at idle (500 to 800 RPM) for one minute.
- Apply the service brakes and shift to D (Drive), then to N (Neutral), and next to R (Reverse) to fill the system. Shift the transmission to N (Neutral) and release the service brakes. Allow the engine to idle at 500 to 800 RPM. Remove the dipstick and wipe clean. Reinsert the dipstick fully into the tube, then remove to check fluid level. Repeat to verify reading, if needed.
- Safe operating level is anywhere within the Cold Check band on the dipstick. This allows safe operation of the transmission until a Hot Check or fluid level check from the shift selector can be performed.

- If the level is not within this band, add or drain fluid as necessary to put the level to the middle of the Cold Check band. Perform a fluid level check from the shift selector or a Hot Check at the first opportunity when normal operating temperatures are reached.

CAUTION:

Low or high fluid levels can cause overheating and irregular shift patterns. These conditions can damage the transmission if not corrected.

Manual Hot Check Procedures:

Fluid level rises as temperature increases. Fluid must be hot to ensure an accurate check. Be sure fluid has reached normal operating temperature. If a transmission temperature gauge is not present, check the fluid level when the coolant temperature gauge has stabilized and the motorhome has been driven for at least one hour.

- Park the motorhome on a level surface and shift to N (Neutral). Apply the parking brake and allow the engine to idle (500 to 800 RPM).
- After wiping the dipstick clean, check the fluid level. Safe operating level is anywhere within the Hot Run band on the dipstick.
- The width of the Hot Run band is approximately one quart of fluid at normal temperature range.

- If the level is not within this band, add or drain fluid as necessary to put the level within the Hot Run band. Ensure that fluid level checks are consistent. Check the level more than once. If readings are not consistent, ensure the transmission breather is clean and not clogged. If readings are still not consistent, contact the nearest authorized Allison service center.

Filter Change Interval

There are two filters in the transmission: Main Filter and Lube Filter. Both filters are replaced as a set.

The transmission filter change intervals are determined by these factors:

- Whenever the Trans Service icon indicates.
- Date/mileage as determined by Allison in the OEM Transmission Owners Manual.
- If the shift selector displays FM OK, the filters do not need to be changed. If the shift selector displays FM LO, the filters need to be changed.

Health Monitor:

The health monitor checks the amount of service life remaining of the internal clutches. If the Trans Service icon remains illuminated with the indication “LO” in the display, the transmission must be inspected by an authorized Allison service center for diagnosis and repair.


FUEL SYSTEM

Fuel Requirements


Diesel Fuel in the United States is categorized by sulfur content. There are two categories: Low Sulfur Diesel (LSD) and Ultra Low Sulfur Diesel (ULSD). LSD fuel contains a maximum sulfur content of 500 parts per million (ppm); ULSD fuel contains a maximum sulfur content of 15 ppm.

CAUTION:
Cummins ISL engines require Ultra Low Sulfur Diesel.

Do not use Low Sulfur Diesel. Diesel fuel dispensing pumps are labeled to indicate either ULSD or LSD. Use of Low Sulfur Diesel in engines that require Ultra Low Sulfur Diesel will damage emission control systems and is subject to fine.

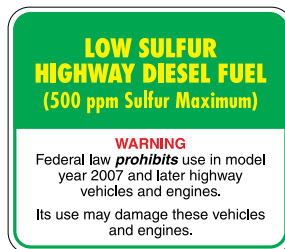

100217

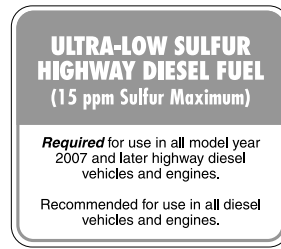

100217b

WARNING:
Use of LSD fuel in ULSD engines will damage emission control systems and is subject to fine.

NOTE:
Some states (including California) have prohibited the sale of Low Sulfur Diesel.

CAUTION:

Engines designed for ULSD fuel require specially formulated motor oil classified by the API (American Petroleum Institute) as category CJ-4.

Seasonal Requirements:

Diesel fuel classified as # 2 is used in moderate and temperate climates. A winter blend of #1 and #2 diesel fuels is available during the winter months in cooler climates (or possibly year-round in extremely cold or arctic areas). The dispensing pump may not indicate winter blend.

Biodiesel:

Biodiesel is a synthetic fuel made from plant oil or recycled cooking oil. Biodiesel is often sold as a biodiesel/petrodiesel blend with an alphanumeric designation that indicates biodiesel content. For example: B5 is 5% biodiesel and 95% petrodiesel while B100 is 100% biodiesel. Due to variances in biodiesel, its use is restricted by the engine manufacturer. Refer to the OEM engine manual for acceptable biodiesel tolerances.

Tips:

Try to obtain fuel from sources that are serviced often, such as large truck service facilities. The fuel supply is fresh and the possibility of introducing contaminants or water into the fuel system is reduced. If the engine runs out of fuel, the fuel system will need to be thoroughly primed before the engine will start and run properly.

WARNING:

Do not mix gasoline, alcohol or gasohol with diesel fuel. This mixture can cause an explosion.

NOTE:

Due to the precise tolerances of diesel injection systems, it is extremely important that fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors. Fuel additives for lubricity are not recommended. There are numerous diesel fuel additives to help remove moisture from fuel, prevent microbe growth and to prevent gelling during cold weather. Before adding any type of fuel additive or extender, consult the Manufacturer's Owner's Manual.

Fuel Tank


Pick-up and return lines are placed at opposite ends of the tank to inhibit fuel aeration. The engine pickup tube is cut at a 45° angle to allow optimum flow to the engine. The generator intake tube is set to approximately ¼ of a tank. This will prevent depleting the fuel supply while dry camping.

NOTE:

Fill the fuel tank prior to storage to reduce the amount of potential condensation. After storage, check the fuel tank vent tube for blockage. It is not uncommon for insects to plug the vent tube. If pressure or vacuum exists when the fuel cap is removed, the vent tube may be blocked. The end of the vent tube is located on the curbside of the fuel tank, near the bottom.

Fuel Sender

The fuel sender, located on the top of the fuel tank, is preset at the factory and non-adjustable.

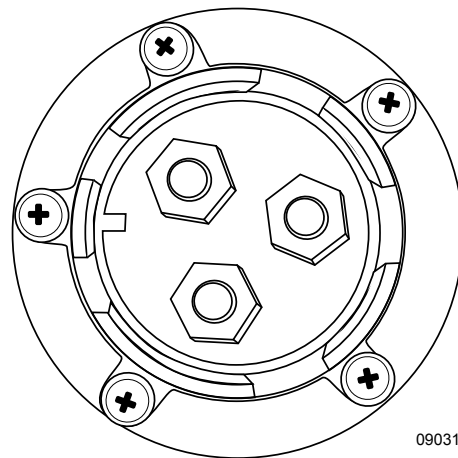


090318d

Fuel Lines & Hoses

Make a visual check for fuel leaks at all engine-mounted fuel lines, connections and at the fuel tank pick-up and return lines. Leaks in this area may best be detected by checking for accumulation of fuel under the tank. Engine performance and auxiliary equipment is dependent upon the ability of flexible hoses to transfer lubricating oil, air, coolant and fuel. Maintenance of hoses is an important step in ensuring efficient, economical and safe operation of the engine and related equipment.

INSPECTION:

Check hoses for leaks each day as part of the pre-start inspection. Check all fittings, clamps and ties. Ensure the hoses are not touching shafts, couplings or heated surfaces, including exhaust manifolds, sharp edges or other obvious hazardous areas. Vibration from the engine and road can move or fatigue clamps and ties. To ensure continued proper support, inspect fasteners frequently and tighten or replace them as necessary.

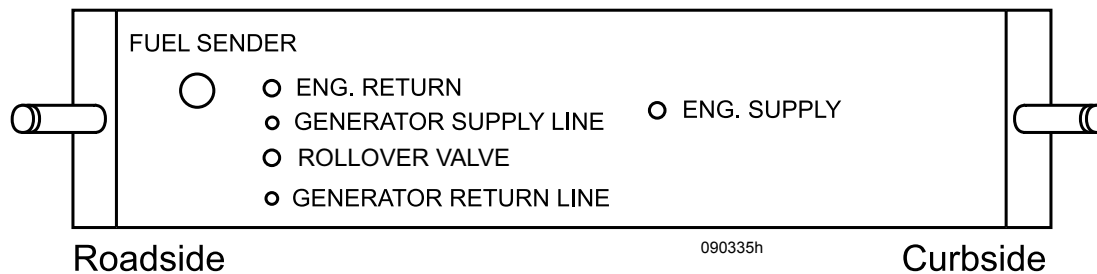

Fuel Filters

Two filters are used for the engine: a primary and secondary filter. Both filters are located in the engine compartment.

NOTE:

It is recommended to wear gloves and old clothing when working with diesel fuel. Avoid getting fuel in the interior of the motorhome.

Filter Maintenance Intervals:

- Drain the primary fuel filter daily before travel.
- Change the primary fuel filter every six months or every 15,000 miles or at the first indication of power loss.
- Refer to the engine OEM manual for service intervals of the secondary fuel filter.

Water in Fuel Light:


If the **Water In Fuel** light illuminates on the dash, the primary filter has detected water in the fuel. **DO NOT** continue engine operation. Fuel contaminated with water can damage fuel injectors. Water is heavier than fuel and will collect in the primary filter. Drain the primary filter by opening the valve on the bottom of the filter bowl.

To Drain the Filter:

- Shut off the engine.
- Open the drain valve, by hand, counterclockwise approximately 1½ to 2 turns until draining occurs. Drain water/fuel into a container and dispose of in accordance with local environmental regulations.
- Close the drain valve by turning clockwise when clear fuel is visible.

NOTE:

Water and sediment from the filter can contain petroleum products. Consult the local environmental agency for recommended disposal guidelines.

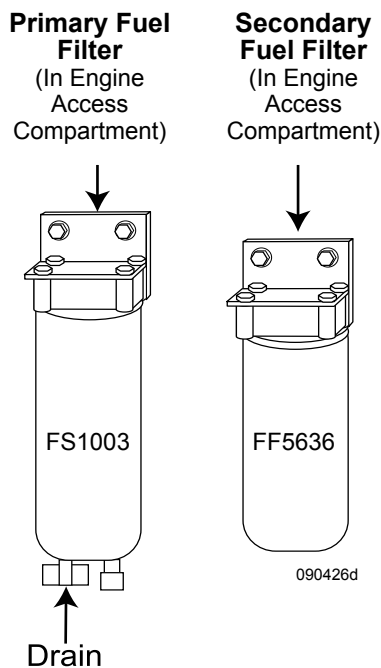

DIESEL PARTICULATE FILTER

The exhaust system is equipped with a DPF (Diesel Particulate Filter) to lower particulate emissions. The DPF traps particulate matter. Naturally occurring exhaust heat oxidizes built up particulate and regenerates the filter. This is called passive regeneration. If passive regeneration is not sufficient, an active regeneration cycle will automatically initiate at speeds greater than 20 mph. Both passive and active regeneration cycles initiate automatically.

WARNING:

Use Ultra Low Sulfur Diesel (ULSD) only. Do not use Low Sulfur Diesel (LSD) with a DPF equipped engine. LSD will damage the DPF, which may cause the Stop Engine light to illuminate and cause the engine to severely derate.

Passive Regeneration:

Passive regeneration uses heat from naturally occurring exhaust gasses to oxidize built-up particulate.


Active Regeneration:

An active regeneration cycle will be initiated if exhaust temperatures are not high enough to regenerate the filter. The motorhome must be traveling in excess of 20 mph for an active regeneration cycle to initiate.

Diesel fuel is introduced into the exhaust system upstream of the DPF during an active regeneration cycle. The fuel will ignite and super-heat the DPF to oxidize particulate matter.

HEST Dash Light

The HEST (High Exhaust System Temperature) dash light will illuminate when an active regeneration is underway and exhaust system temperatures are elevated above normal levels.

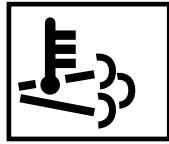

090502
HEST Dash Light

Exhaust temperature can reach 1450° F, which may last for up to 40 minutes. The HEST light will remain on until the exhaust temperature cools to 650° F., which may not be until the engine is turned off and the exhaust system cools before restarting. The HEST light does not indicate a fault as long as there are no other active warning lights.

CAUTION:


Use extreme caution if parking the motorhome while the HEST light is on. The exhaust system and exhaust gas will be extremely hot to the point of fire hazard. Do not park the motorhome on or around anything combustible.

NOTE:

If the engine is turned off during an active regeneration cycle, the cycle will automatically begin again (if necessary) when the motorhome is operated at speeds above 20 mph.

DPF Dash Light:

A DPF (Diesel Particulate Filter) indicator light on the dash illuminates when an active regeneration cycle is necessary and has not been able to initiate. Driving the motorhome above speeds of 20 mph will allow an active regeneration cycle to initiate. The HEST light will turn on when an active regeneration cycle is underway. Once the DPF is clear of particulate matter the DPF light will turn off.

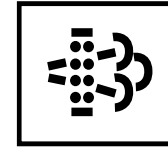

090502
DPF Dash Light

DPF Light Warning System:

If the DPF remains clogged, there are four stages of the DPF light warning system. The HEST light may illuminate during this sequence, which indicates that an active regeneration cycle is underway. The only indication that the DPF is clear and in good working order is the DPF light turning back off.

- **Stage One:** The DPF light glows steady. This means that an active regeneration cycle is necessary but has not been able to initiate.
- **Stage Two:** The DPF light flashes. The DPF filter is clogged to the point that the engine will slightly derate (lose power).
- **Stage Three:** The DPF light flashes and the Check engine light turns on. The DPF is clogged to the point that service is required immediately. The engine will severely derate at this point.

- **Stage Four:** The DPF light and Check Engine lights extinguish and the Stop Engine light turns on. Turn off the engine as soon as possible to avoid severe engine and/or system component damage. Do not drive the motorhome in this condition. The DPF will need to be removed for repair.

HYDRAULIC SYSTEM

The motorhome uses an engine driven hydraulic pump to operate the power steering and radiator fan cooling systems. Both systems share a common reservoir, which is located in the engine compartment. The hydraulic fluid used is Kendall AW46 which has a wide ambient temperature operating range.

CAUTION:

If ambient temperatures approach 0° F., Pennzoil Arctic Blue hydraulic fluid, or equivalent hydraulic fluid, should be used. Using incorrect hydraulic system fluid weights in cold temperatures will raise the hydraulic system operating pressure and may damage the hydraulic cooler.

Hydraulic Pump

The hydraulic pump creates pressure by meshing sets of gears together inside close-tolerance housing. A filtered supply of hydraulic fluid from the hydraulic reservoir enters the intake side of the pump.

The meshing gear assembly “squeezes” the oil through the pump to the output side delivering the pressurized fluid to the power steering gear and the switching valve of the engine cooling system. Each half of the pump is equipped with an internal by-pass pressure relief spring. If the hydraulic pressure should exceed the specified pressure limit, the internal by-pass relief valve will be forced open to keep the hydraulic fluid at operating pressure.


The hydraulic pressure generally is not rated in psi but is rated in bars. One bar is equivalent to approximately 14.5 psi. Hydraulic system pressures with a system at no load may be as low as eight bars on the output side of the pump. This is due to the hydraulic fluid flow of the pump.

When a load is placed on the hydraulic pump, such as turning the steering wheel, hydraulic fluid flow slows from hydraulic fluid restriction and pressure increases. This may be understood as a faucet with a garden hose attached. Crimping the hose with the faucet on will create pressure from the restriction. This principle applies to the hydraulic system. The hydraulic pump is the supply, the load would be the power steering gear or the hydraulic fan motors. Hydraulic system pressure at full load can exceed 130 bar or 2000 psi. Hydraulic system pressure falls dramatically after the load. The return line pressure may be as low as six to eight bars. The fluid enters the hydraulic cooler where the heat is dissipated.

Hydraulic Cooler

The hydraulic cooler prevents hydraulic fluid from overheating. When a load is placed on the hydraulic system, heat is created in the fluid. Heat must be dissipated to prevent the hydraulic fluid from overheating and breaking down. After cooling, the fluid is filtered before returning to the reservoir.

Care must be used when starting an engine in very cold climates. As with any oil, lower temperatures thicken the oil. Hydraulic system pressure increases due to the viscosity of the fluid. Although the hydraulic pump is equipped with pressure relief valves, the thick oil on the return line can exceed the operating pressure of the hydraulic cooler.

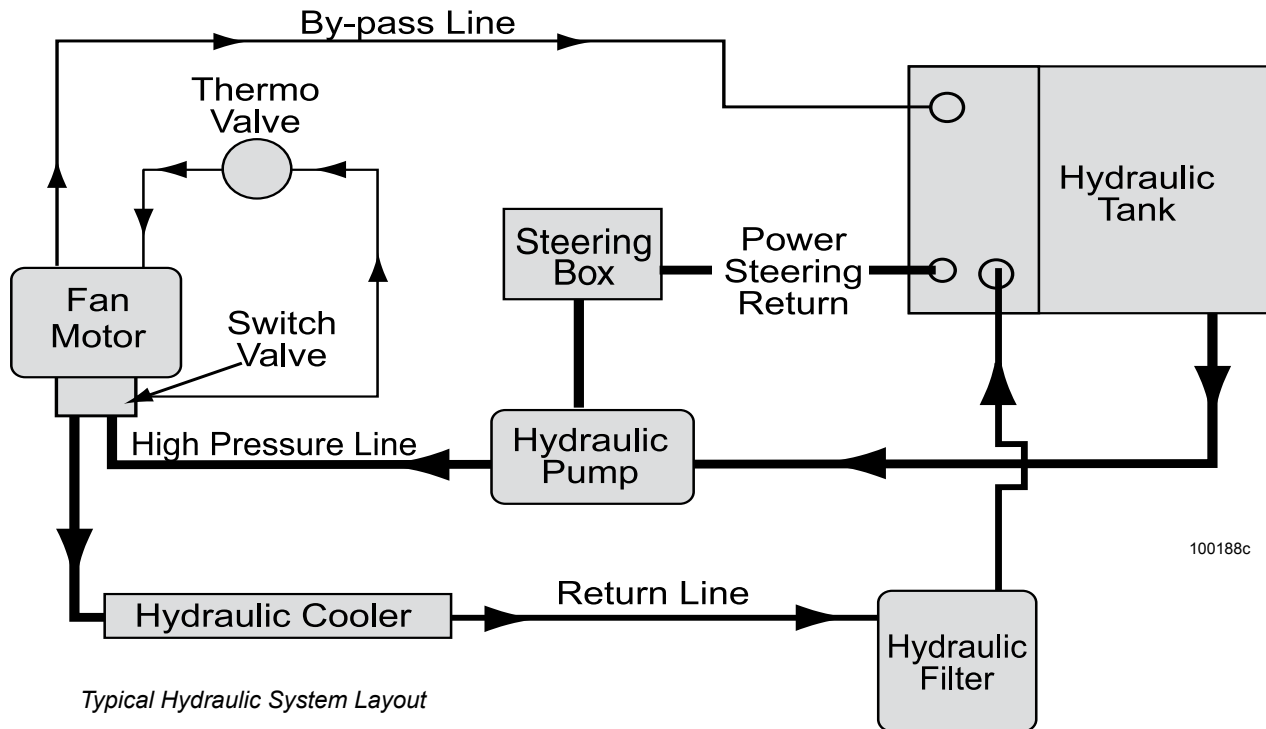

Hydraulic Fan System

The hydraulic fan drive system cools the radiator, charge air cooler, hydraulic fluid cooler, transmission cooler and the dash air conditioning condenser. The components of the hydraulic fan system include a hydraulic reservoir, filter, pump, hydraulic fan motor, hydraulic switching valve and thermostatic valve. Cooling fan speed is proportional to engine speed and coolant temperature. When coolant temperature rises above 185° F., the thermostatic valve slowly closes off the bypassing hydraulic fluid from the switching valve. As coolant temperature rises, a spool valve begins to move in the switching valve. The spool valve directs the pressurized hydraulic fluid to the fan motor.

The higher the coolant temperature, the further the spool valve is moved in the switching valve, providing a higher volume of pressurized hydraulic fluid to the fan motor. Fan motor speed is increased to meet the demand for cooling. The action of the thermostatic valve is designed to move the spool in the switching valve to ramp up fan motor speed. This design saves horsepower and increases fuel mileage by precise control of hydraulic fan motor speed. The fan motor will increase in speed when the motorhome is ascending long hills or operating in high ambient temperatures. It is normal for the fan to “roar” when it is operating. Fan motor speed and engine RPM are approximately the same with the switching valve in the full open position.

Thermostatic Valve

The wax filled thermostatic valve, mounted at the top of the radiator, controls the action of the switching valve. When the radiator is cool, hydraulic fluid is allowed to flow through the inlet and outlet ports of the thermostatic valve and return to the hydraulic reservoir. As coolant temperature inside the radiator rises to approximately 185° F, wax inside the thermostatic valve begins to melt and expand, which restricts hydraulic fluid flow through the thermostatic valve. The restricted hydraulic fluid pressure then begins to move the internal spool valve of the switching valve.

This process will continue until coolant temperature inside the radiator reaches approximately 199° F. At this temperature, hydraulic fluid flow through the thermostatic valve is stopped, moving the spool valve to the full open position.

Switching Valve

The switching valve is mounted to the fan motor and controls direction of high pressure hydraulic fluid flow. High pressure hydraulic fluid comes from the hydraulic pump to the switching valve before returning to the reservoir. Either the thermostatic valve or the electric override valve (ISM Only) directs the fluid to the spool in the switching valve. When the radiator is cool, pressurized hydraulic fluid will bypass the fan motor and return to the fluid reservoir. As radiator temperature rises, the thermostatic signal is slowed or stopped to the switching valve. High pressure fluid is then directed to the fan motor, cooling the radiator.

Fan Motor

The fan motor is driven by hydraulic fluid pressure from the switching valve. The fan motor works on the same mechanical principle as a hydraulic pump, only in reverse. Instead of creating hydraulic pressure by meshing gears together in close-tolerance housing, the fan motor receives hydraulic pressure. The hydraulic fluid drives the fan motor’s internal gear assembly, spinning the fan motor and attached fan blades.

The switching valve is mounted to the fan motor. The hydraulic fluid is then cooled and filtered before returning to the reservoir.


Hydraulic Filter

The remote-mounted hydraulic system filter is located in the engine compartment. A specially designed media filter absorbs harmful contaminants, such as moisture and dirt. The filter element is rated at 10 micron. Replace the filter whenever the needle leaves the green range and enters the yellow range with the engine running.

Filter Part Number: Zinga ZSE 10

CAUTION:

Hydraulic fluid is not being filtered when the filter gauge needle enters the red zone.

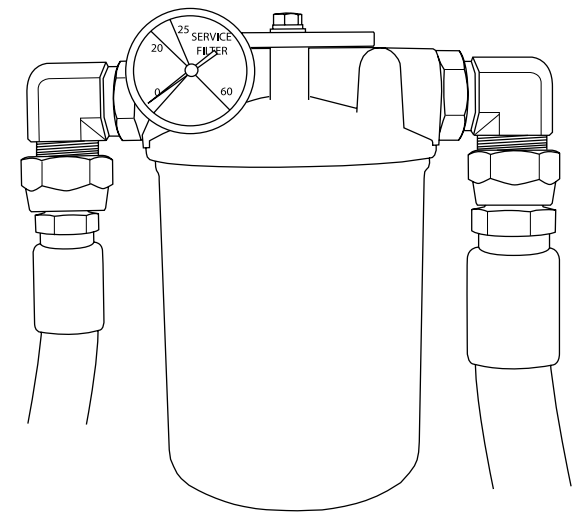

090393d

Hydraulic Reservoir/Filter

The hydraulic reservoir with internal filter, located in the engine compartment, is the reservoir for the hydraulic fan drive and power steering systems. Check the oil level in the reservoir when the oil is at operating temperature before each trip, every 6,000 miles or three months.


The dipstick/oil fill is located on top of the reservoir. When performing fluid level checks, inspect fittings and hoses for signs of leakage. Avoid untimely and costly failures by having leaks repaired. The oil level should be kept between the full and add marks on the dipstick.

Replace the internal filters every 15,000 miles or once a year. Loosen the band clamp at the top of the reservoir and remove the lid. Place a 5-gallon drain bucket under the reservoir. Loosen one of the bottom fittings to drain the reservoir. Drain only enough fluid from the reservoir to expose filter. Tighten fitting. Remove the wing nut, filter spring and filter washer. Remove and replace the filter. Install the filter washer and filter spring. Tighten the wing nut until wing nut reaches end of threaded rod. It is recommended to install new hydraulic fluid. Old fluid may contaminate the hydraulic system. Fill the reservoir to the full mark and install top and band clamp. Run engine to purge trapped air. Check fluid level after fifteen minutes of operation to confirm proper level.

Nelson Filter Part Number: 83804

NOTE:

Confirm filter element part number stamped on the outside of the reservoir.

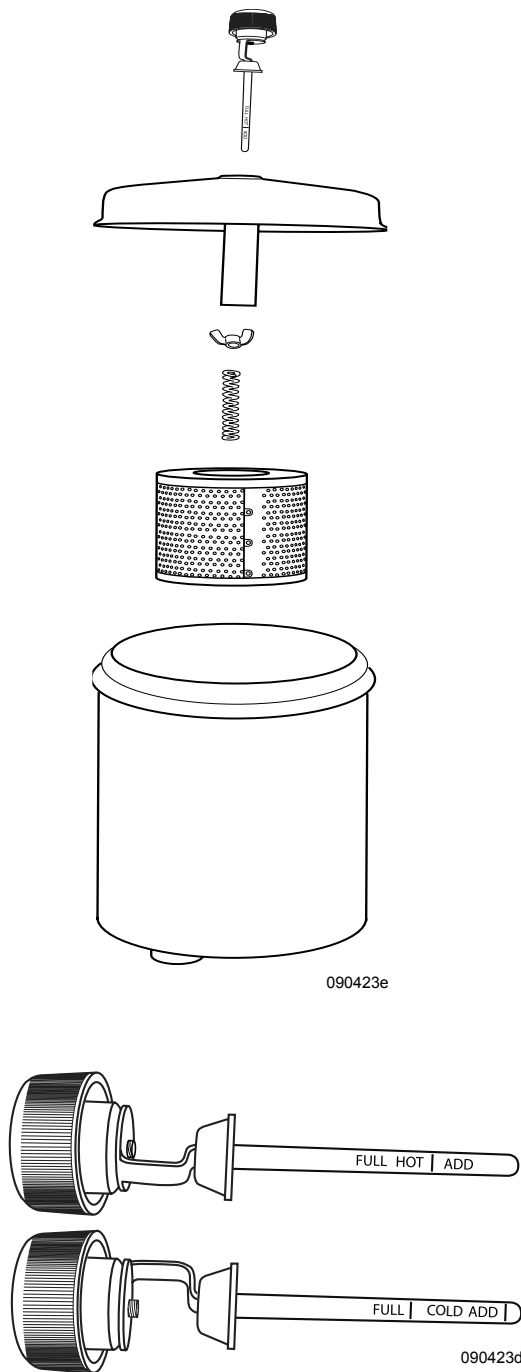


AIR FILTER

Air Filter Minder


The air filter minder, located in the roadside engine compartment, is a precision overflow restriction gauge designed to take the guesswork out of air cleaner replacement.

As dirt captured by the filter cartridge slowly builds up, vacuum between the filter and charge air cooler increases. The indicator locks at the point of maximum restriction so readings can be taken with or without the engine running.

When the desired change-out point is reached, the air filter should be replaced and the service indicator reset by pushing the **Reset** button on the bottom of the minder.

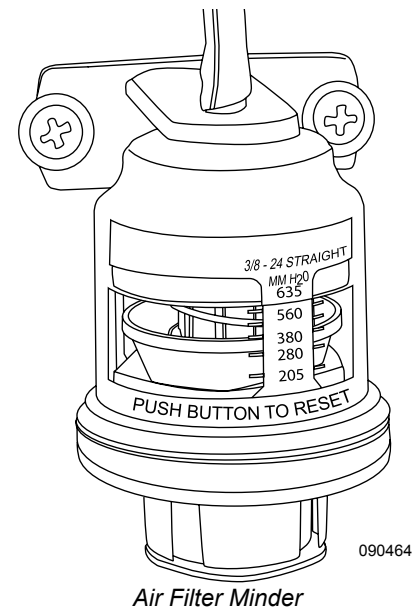

Air Filter Minder

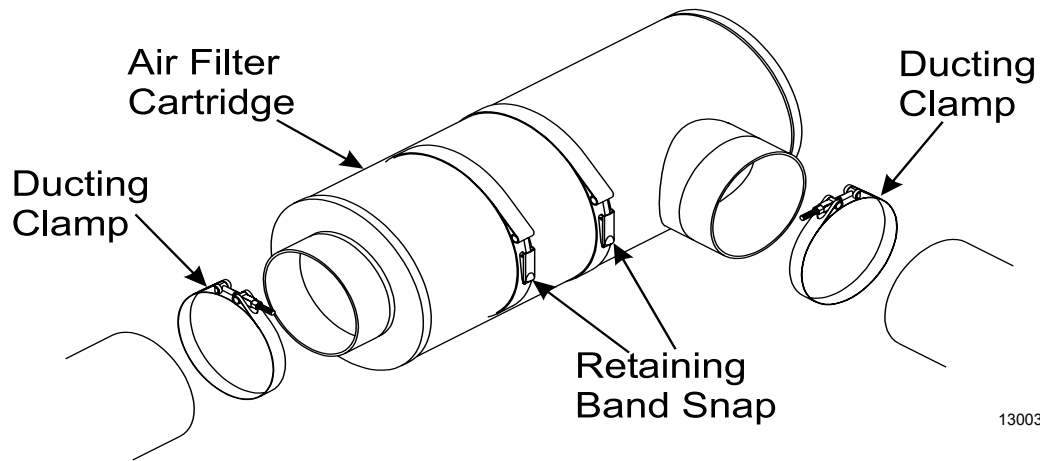

Changing the Filter

The entire air filter cartridge is discarded and replaced by loosening the inlet and outlet ducting clamps and releasing the retaining band snaps. The air filter is located in the engine compartment. The Air Filter Minder will indicate when the filter will need to be changed.

LUBRICATION MAINTENANCE

Performing regular scheduled maintenance ensures reliable operation and optimum service life of the various chassis components. Completed maintenance brings peace of mind knowing the various components have received proper service. Failure to follow maintenance guidelines, or perform scheduled maintenance, results in inefficient operation, premature component wear or component failure resulting in breakdown.

Maintenance schedules are usually performed at certain mile or time intervals. When performing high level procedures, lower level service should also be performed.

NOTE:

Maintenance schedules are based on normal operating conditions and use. Operating under unusual or adverse condition shortens service intervals.

NOTE:

Engine and transmission service intervals are listed in their respective manuals.

Proper Lubricant Waste Disposal:

When performing service maintenance on the engine, transmission or rear axle, waste fluids and filters should be properly disposed of or recycled. Package used oils, antifreeze and other fluids in sealed containers. In many cases used oil is accepted free of charge at county disposal sites.

Waste fluids are toxic to pets and other animals. Waste fluids should not be left in open containers. The sweet odor of antifreeze is attractive to pets, but highly toxic.

CAUTION:

Properly dispose of used antifreeze and waste oil. Animals like the sweet odor of antifreeze and may ingest it if left in open containers. Wipe up any fluid spills. Pets may lie in puddles of fluid, many of which are irritants and can cause severe chemical burns if not properly washed.

Lubricant Classification:

Lubricants are manufactured in many forms for a variety of applications. There are many different oil and grease consistencies each with a designed application. To properly select a particular type of lubricant for a specific application, the component must be evaluated. Component stress loads, ambient temperature, working temperature and environmental exposure are just a few of the variables to consider. Select the proper lubricant for its intended application. As an example: selecting high viscosity grease to lubricate a lock cylinder results in sluggish lock cylinder operation especially in a cool environment.

Conversely, using graphite to lubricate a component that is under extreme temperature and load will result in component failure.

Grease ratings and their base compounds are especially important when selecting a lubricant type for an intended application. Some grease compounds are manufactured for multi-use application. These are acceptable if the grease rating is in accordance with the manufacturer's recommended lubricant type and rating.

Lubricants:

Many chassis components require lubrication. The types of lubricants used will vary with the application of the component. A component may fail prematurely due to lack of lubrication or from using an incorrect lubricant type. The component manufacturer usually recommends a particular type of lubricant with a minimum approval rating. Most lubricants are tested under strict guidelines set by the **ASTM (American Society for Testing and Materials)**.

The **NLGI (National Lubricating Grease Institute)** helps disperse information to the grease production industry. Grease containers usually have an approval rating by the **SAE (Society of Automotive Engineers)**, **Mil Spec (Military Specification)**, **API (American Petroleum Institute)** or by other recognized and accepted organizations. The correct lubricant type with an approved specific rating must be used whenever applying, changing or adding any lubricant. When purchasing lubricants for a specific application be sure the label affirms the type of lubricant required with the tested rating by the term "meets or exceeds" in accordance with the manufacturer specifications.

Lubricating greases are made from different base compounds giving the grease different lubricating consistencies, properties and maximum operating temperatures. Most containers list the base compound and maximum operating temperature usually listed as melting point or drip point. Lubricating components, such as brake component for example, require a high-temperature special base compound grease. Lubricating this type of component with other than specified grease type will result in inadequate lubricating qualities resulting in component malfunction or failure.

INSPECTION:

When performing any scheduled maintenance, inspect the area around where you are working. For example, changing the oil, look at the rear differential. Inspect for visual signs of fluid leaks.

Most fluids and lubricants have a distinct odor, which can be used to detect early signs of trouble. Generally, odors are most detectable soon after parking. Unusual sounds are another method of detecting a problem early. There are many types of sounds that are normal, such as the cyclic purging of the air dryer. Become familiar with the different sounds. If something sounds odd, smells peculiar or looks unusual, investigate the situation.

Greasing:

Thoroughly clean all Zerk grease fittings before applying new lubricant. Keep paper towels or disposable rags handy when greasing.

When lubricating items such as drive shafts and steer axle components, continued grease application is generally required until new grease appears at exit points.

Some items use sealed boots around the component to prevent moisture intrusion. When greasing these types of components, care must be given to prevent excess lubricant pressure from rupturing the seal.

WARNING:

Always chock wheels before going underneath the motorhome.

WARNING:

Never place yourself under motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Brake actuating components require lubrication to keep the actuating components freely operating. Avoid contaminating brake linings with lubricant. Particular care and attention to details should be taken when lubricating brake actuating components. Wheel removal may be necessary to gain access the grease fittings.

NOTE:

Suspension, steering, brake and drivetrain components are lubricated at the factory using Texaco Starplex NLGI 2 Lithium Soap based grease.


To apply grease:

- Clean the grease fitting. Initially operate grease gun until new lubricant discharges from nozzle, then wipe nozzle clean to avoid introducing contaminants into the component.
- Snap nozzle onto grease fitting. Nozzle must remain in line with the grease fitting during the application process. If the nozzle is not in line, lubricant will collect around nozzle and grease fitting, failing to lubricate the component.
- Wrap the nozzle with a paper towel or rag to prevent contamination and accidental soiling of other areas.

If the component does not accept grease the Zerk fitting may be plugged or damaged. Zerk fittings are replaceable and generally available at most auto supply stores. Zerk fittings come in a variety of angles depending on the application. Every effort should be made to lubricate the component, as neglect will only result in premature component failure.



NOTE:

Some grease fittings may not be accessible until the steering wheel is turned or the motorhome is moved slightly.

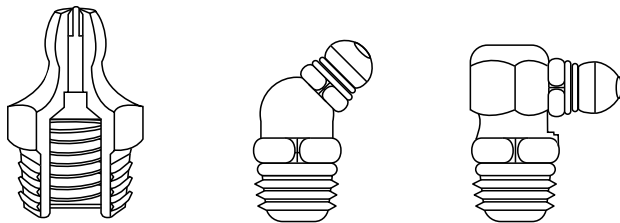

Typical Zerk Fitting (Not actual size).

LUBRICATION CHARTS

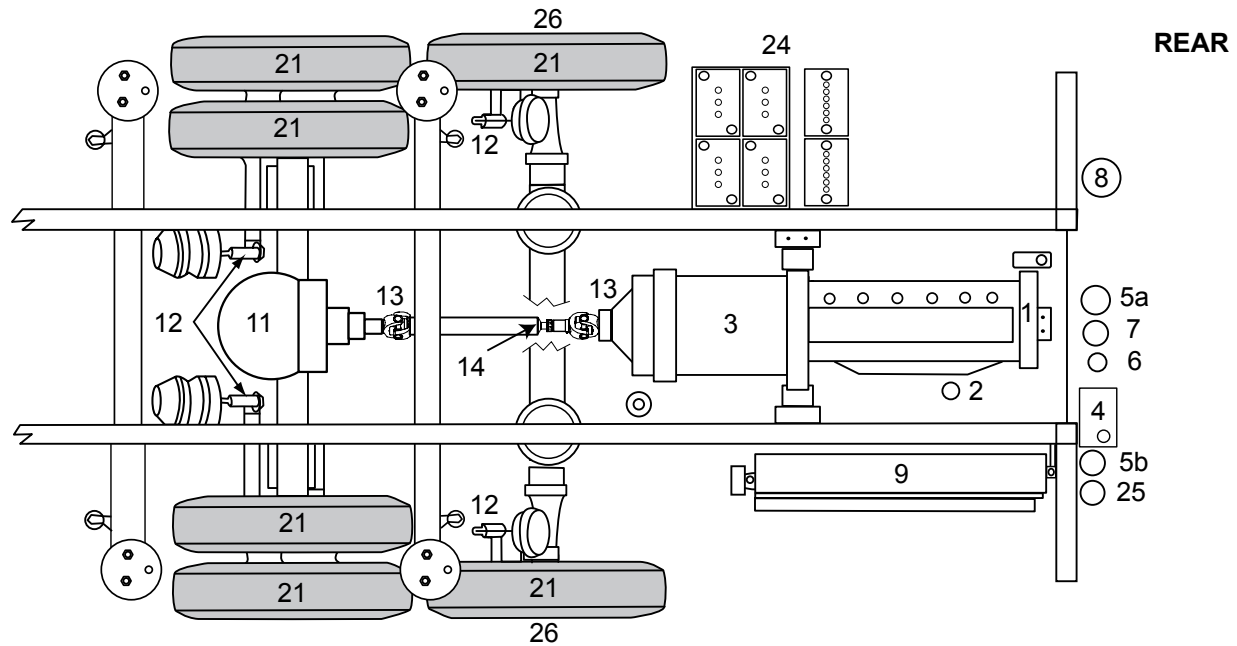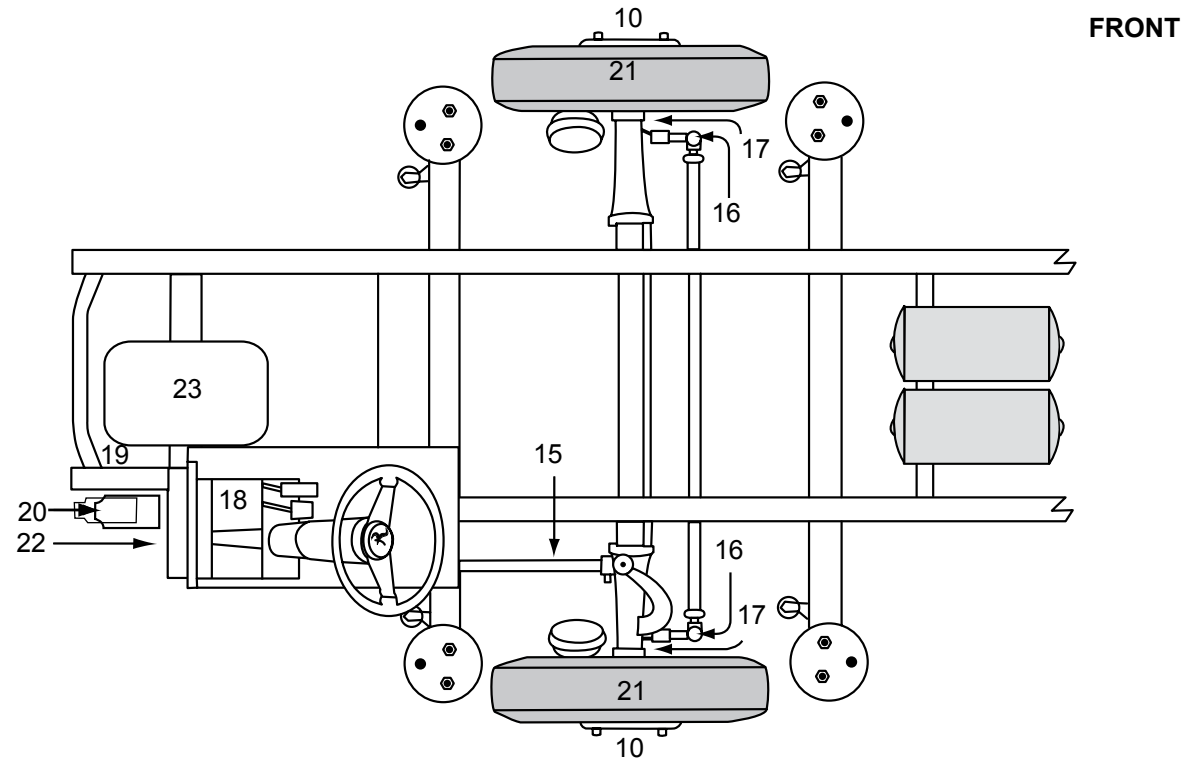

	COMPONENT:	ACTION:	WHEN:	CODE
1	Engine Oil Fill	Keep to full mark	Before each trip/daily en route	EO
2	Engine Oil Filter	Replace	At Oil Change	OEM
3	Transmission	Keep to full mark	Refer to OEM Manual	TS
4	Engine Coolant Reservoir	Maintain level	Before each trip	OEM
5a	Hydraulic Reservoir/Filter	Maintain level/Replace	Before each trip/ 15,000 miles or 6 months	HF
5b	Hydraulic Filter	Replace	Monitor Gauge	-
6	Primary Fuel Filter	Replace	15,000 miles or 6 months	FF
7	Secondary Fuel Filter - Cummins	Replace	Refer to OEM manual	OEM
8	Air Dryer Filter	Replace	2-3 Years	-
9	Radiator/Charge Air Cooler	Inspect	Weekly	-
10	Wheel Bearings	Re-pack	30,000 miles or annually	HT
11	Rear Differential	Replace Fluid	250,000 miles or 3 years	MP
12	Slack Adjuster/S-cams	Grease 3 fittings each	10,000 or 3 months	CL
13	Drive Shaft Universal Joints	Grease 2 fittings	5,000 or 6 months	CL
14	Drive Shaft Slip Yoke	Grease 1 fitting	5,000 or 6 months	CL
15	Drag Link	Grease 2 fittings	5,000 or 6 months	CL
16	Center Link	Grease 2 fittings	5,000 or 6 months	CL
17	Spindles/Kingpins	Grease 2 fittings	5,000 or 6 months	CL
18	Intermediate Steering Shaft	Grease 3 fittings	30,000 or annually	CL
19	Air Tank Drains	Drain	Monthly	-
20	Slide-room/Hydraulic Leveling Reservoir	Keep to full mark	3 months	HF
21	Tire Pressure	Check	Before each trip	-
22	Steering Box	Grease 1 fitting	Every 6 months	CL
23	Generator	Refer to OEM Manual	Refer to OEM Manual	OEM
24	Batteries	Inspect Apply Coating	Every Two Weeks 10,000 miles or quarterly	DW P
25	Air Filter Minder	Inspect	--	-
26	Tag Axle - Oil Bath Hubs	Keep to full mark Change	Before each trip/daily en route Annually	MP


Lubrication Code Chart:	
*EO	Engine oil as recommended by engine manufacturer. Kendall Super-D XA SAE 15w-40 with API CJ-4 rating.
*OEM	Refer to the Original Equipment Manufacturer's manual.
*MP	API GL-5 or MT-1 type gear lubricant - Texaco Star Gear SAE 80W-90 Non-Synthetic.
*CL	Chassis lubricant should be high quality, non-corrosive multi-purpose lithium soap base lubricant that is water resistant and designed to withstand extremely high operating temperatures. Texaco Starplex NLGI 2.
*AF	Antifreeze as recommended by engine manufacturer. Texaco 50/50 with bitterant and SCA.
FF	Fuel Filter
HT	High Temperature Bearing Grease
*TS	TranSynd™ Synthetic Transmission Fluid.
DW	Distilled Water
*HF	Kendall AW-46 Hydraulic Fluid
P	Petroleum Jelly

* Fluids initially filled at factory.

NOTE:

Service must be performed every twelve (12) months, regardless of actual mileage, to protect seals, bearings and gaskets from drying out and failing. The motorhome must be started and driven for at least 20 miles every two weeks. It is important to remember the generator maintenance interval is based on hours of usage. Consult the OEM Owner's Manual for the generator service interval.

ENGINE DRIVE BELT ROUTING

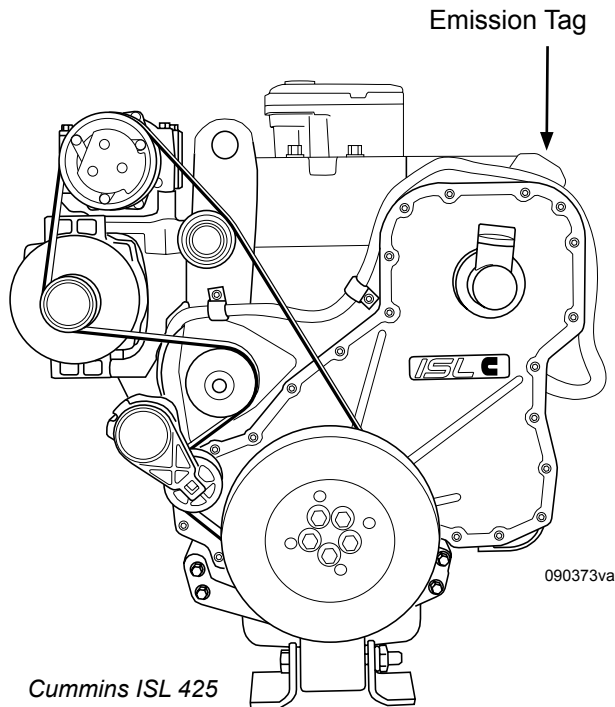

Cummins ISL 425

SPECIFICATIONS

Tank Capacities

Tank Capacities (Approx. Gallons) All Models	
Water Heater	10 gallons
Grey Water	78 gallons
Black Water	44 gallons
Fresh Water	100 gallons
Fuel Tank	130 gallons
Propane*	31 gallons

*Actual filled propane tank capacity is 80% of listing due to safety shutoff required on tank.

NOTE:

All tank capacities are estimated based upon calculations provided by the tank manufacturers and represent approximate capacities. The actual “usable capacity” may be greater or less than the estimated capacities based upon fabrication and installation of the tanks.

NOTE:

This chart reflects product specifications available at the time of printing. Therefore any floor plans introduced thereafter may not be reflected in the chart. All other information contained throughout the manual will still apply.

Engine Specifications

ENGINE SPECIFICATIONS	ISL
Cubic Inch Displacement	8.9 L/538 CI
Engine HP	425 HP @ 2100 RPM
Engine Torque	1200 lbs./ft. @ 1300 RPM
Governed Speed	2200 RPM
Firing Order	153624
Rear Axle Ratio	4:30:1
Alternator Amp Size	160 Amp

Chassis Fluid Capacities

CHASSIS LIQUID CAPACITIES	
Engine Oil	26 Qts.*
Transmission Oil (initial fill)	26 Qts.*
Transmission Oil (with service)	19 Qts. w/filter
Radiator Coolant (initial fill)	50-55 Qts.*
A/C Refrigerant (initial fill)	4 lbs. 134 A*
Hydraulic Oil	35 Qts.*
Rear End	15 Qts. Approx.*

*On Initial Fill. Service quantity may vary.

Belts & Filters

CUMMINS ENGINE		
Oil Filter	Fleetguard	LF 9009
Fuel Filter (Primary)	Fleetguard	FS 1003
Fuel Filter (Secondary)	Fleetguard	FF 5636
Aqua-Hot Fuel Filter	Garber	Model # R
Hydraulic Filter	Zinga	ZSE 10
Drive Belt	Cummins	4942431
Air Filter	Donaldson	P53744802 (*MP 2329)
Air Dryer Filter	Meritor Wabco	R950011
Transmission Filter	Allison	2952688
A/C Filter Drier	--	*MP 05400001

*MP= Manufacturer Part #.

NOTE:

Filter and belt numbers were correct at the time of printing. Verify the numbers at time of removal. The manufacturer will not be responsible for incorrect filter or belt usage. Please refer to the engine manufacturer's operating instructions for specific maintenance information.

Generator Specifications**10 Kw****SERVICE INFORMATION**

Refer to operator's manual for maintenance specifications and adjustments.

Air Cleaner	-	140-3071
Oil Filter	-	122-0897
Fuel Filter	-	149-2513
Oil Capacity	-	6 Qts w/oil filter
API Designation	-	CE

Temp	SAE Viscosity
5° - 120°F	15W-40
(-13°F) - 68°F	10W-30
(-40°F) - 68°F	5W-30

If service/parts are needed the Onan distributor can be located in the yellow pages under Generators-Electric.

In the USA or Canada call 1-800-888-Onan
DC Fuse & Radiator Cap Under Cover.



060144p

Battery Specifications

Application	AH (20 HR)	CCA†	RC (25A @ 80° F) Minutes
12 Volt Chassis (ISB 340) Group 31p - LHD (2 each)*		750	180
6 Volt Domestic** UL16HC 2 Std (4 each w/residential refer option)	420		75 Amp @ 80° F = 250 Min.

*Batteries connected in parallel. **Batteries connected in a Series/Parallel configuration.
†CCA Ratings are 0° F. These are the minimum requirements.

Approximate Minutes of Ampere Load					
UL16HC**	10 AMPS	25 AMPS	50 AMPS	75 AMPS	100 AMPS
	4980	1780	688	472	328

**Batteries connected in a Series/Parallel configuration.

Battery State of Charge vs Voltage/Specific Gravity			
Voltage	Specific Gravity	State of Charge	Depth of Charge
12.65	1.265	100%	0%
12.45	1.225	75%	25%
12.25	1.190	50%	50%
12.05	1.145	25%	75%
11.90	1.100	0%	100%

Voltage Reading: Battery fully charged at rest for one hour.

Engine Cold Cranking Amp Requirements			
ISL	1500	CCA	12 VOLTS

CCA Ratings are at 0° F. These are the minimum requirements.

MAINTENANCE RECORDS

After scheduled services are performed, record the date, odometer reading and who performed the service in the boxes provided after the maintenance interval. Any additional information from “Owner Checks and Services” or “Periodic Maintenance” can be added on the following record pages. **In addition, retain all maintenance receipts.** The owner information portfolio is a convenient place to store them.

LUBRICATION SERVICE RECORD

KEY TO SERVICES

- A – Lubrication & Inspection
- A1 – Motor Oil & Filter Change
- A2 – Transmission Oil Change

- A3 – Drive Axle Oil Change
- A4 – Wheel Bearing Service
- B – Prescribed Service

- C – Prescribed Service
- D – Prescribed Service
- E – Prescribed Service

MILEAGE	SERVICES										JOB PERFORMED	
	A	A1	A2	A3	A4	B	C	D	E	DATE	BY	
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												
16												
17												
18												
19												
20												
21												
22												
23												
24												
25												
26												
27												
28												
29												
30												

A

ABS/ATC System208
Air Conditioner & Heater Controls192
 Operating Tips & Hints193
 System Components193
 Troubleshooting194
Accessory Hookup.....148
Air Mattress Bed (Optional)117
Air Conditioning - Roof.....90
 Operation Requirements90
 Fan Operation Only90
 Air Conditioner Operation90
 Heat Pump Operation90
 Air Conditioner Maintenance91
Air Dryer.....203
 Desiccant Cartridge203
 Desiccant-Type Air Dryer204
 Air Dryer Cycle204
Air Filter242
 Air Filter Minder242
 Changing the Filter243
Air Spring Inspections204
Air Supply System.....198
 Air Governor199
 Air Storage Tanks199
 Air Fittings200
 Air Coupler - Universal200
 Air System - Charging (External)201
 Air System Test201
Alternator184
 Alternator Testing Procedure185
Appliances - Introduction.....78

Aqua-Hot92
 Diesel Operation92
 Electric Operation92
 Troubleshooting93
 Bay Thermostat94
 Care & Maintenance94
 Fuel Filter95
 Aqua-Hot Overview96
Awnings.....111
 SlideOut Cover111
 Entry Door Awning112
 Window Awning112
 Patio Awning112
 Patio Awning (Optional)113
 Awning Care & Cleaning114
 Storm Precautions114

B

Backing Up A Motorhome.....20
Batteries - House168
 Battery Slide-Out Tray168
 Battery Maintenance169
 Testing the Battery171
 Charge Time & Consumption Rate172
Battery - Chassis178
Battery Cutoff.....155
Battery Disconnect - Chassis.....178
Battery Disconnect - House155
Brake - Auxiliary.....207
 Engine Brake207
Brake Systems205
 Air Brakes205
 Park & Emergency Brake System206
 Automatic Slack Adjuster206
 Brake Systems - Backup206

Breaking Camp23

C

Carbon Monoxide Detector.....46
 Operation47
 Alarm47
 Testing48
 Cleaning & Maintenance48
Ceiling64
Central Vacuum (Optional).....100
 Operation100
 Maintenance100
Chassis - Introduction.....198
Chassis Electrical - Introduction178
Cold Weather Conditions138
 Water Center Heater138
 Cold Weather Storage138
Console.....186
 Transmission Shift Selector186
 Parking Brake186
 Leveling Controls187
Cooktop.....87
 Cooktop Covers88
 Burner Grate88
 Operation Tips88
 Cooktop/Oven Cleaning & Maintenance ...88
Coolant System.....228
 Radiator/Charge Air Cooler230
Countertops66
 Solid Surface66
 Laminate67

D

Dash.....187
 Gauges.....187
 Indicator Lights189
 Switches190
Diagnostic Plug Location.....195
Diesel Particulate Filter.....238
Distribution Panel - House 12 Volt DC166
Door - Sliding.....116
Drain Traps & Auto Vents.....137
Drive Axle & Drive Shaft214
Driving & Safety10
 Inspections.....10
 Familiarize Yourself10
 Mirror Adjust.....10
 Safety Seat Belts.....11
Driving Tips12
Drum Brake Maintenance.....218
Dry Camping23

E

Electrical Systems Layout (Typical).....176
Emergency Roadside Procedures24
 In Case of Flat Tire.....25
 Dead Chassis Battery25
Engine - General Information.....225
Engine “No Start” Flow Chart196
Engine Drive Belt Routing248
Engine Oil227
Engine Shutdown228
 Extended Engine Shutdown228
Entry Door.....105
 Air Seal.....105
 Latch Adjustments.....105
 Screen Door106

Entry Step.....104
 Operation.....104
 Stepwell.....104
 Assist (Grab) Handle.....105
Equipment - Introduction104
Escape (Egress) Window49
Exterior Care.....52
 Corrosion.....52
 Winter Drive Protection52
 Washing.....53
 Drying.....53
 Waxing.....53
 Paint Codes.....54
 Tire Care.....54
 Wheels - Polished Aluminum.....54
 Bright Metal55
Exterior Entertainment (Optional)122
Exterior Maintenance.....55
 Fiberglass.....55
 Roof Care & Seal Inspections55
 Sealant Types.....56

F

Fabrics.....58
 General Care & Cleaning58
 Vinyl.....58
 “O” Vinyl.....59
 Ultra-Leather60
 Leather.....60
 Fabric Cleaning Codes61
Fans114
 Exhaust Fan114
 Bedroom Ceiling Fan (Optional).....115
Faucet Screens.....131
Fire Extinguisher.....48

Floors.....62
 Carpet Cleaning.....62
 Tile Floor63
Front Axle210
 Alignment.....211
 Alignment Specifications212
 Lubrication Maintenance Safety212
 Steering Components212
 Steering Column.....213
 Drag Link213
 Center Link.....213
 Steering Spindles.....214
 Control Arm Bushings.....214
 Steering Gear214
Fuel System.....236
 Fuel Requirements.....236
 Fuel Tank237
 Fuel Sender.....237
 Fuel Lines & Hoses237
 Fuel Filters.....238
Fuses & Circuit Breakers - 12 Volt DC166
 Multiplex168
Fuses & Circuits179
 Fuse Labels.....180
 Distribution Box - Main182
 Bi-Directional Isolator Relay Delay.....182
 Isolator Relay183
 Relays.....183

G

Generator - 120 Volt AC Diesel.....158
 Pre-Start Checks 159
 Starting the Generator 159
 Stopping the Generator 160
 Powering the Equipment 160
 Generator Fuel 160
 Resetting the Circuit Breaker 160
 Generator Exercise 161
Glossary of Terms5

H,I,J,K

Height Control Valves.....205
Hitch16
 Using the Rear Receiver 16
House Electrical - Introduction154
Hydraulic System239
 Hydraulic Pump 239
 Hydraulic Cooler 240
 Hydraulic Fan System 240
 Thermovalve 241
 Switching Valve 241
 Fan Motor 241
 Hydraulic Filter 241
 Hydraulic Reservoir/Filter 242
Interior Care.....57
 Cockpit 57
Inverter161
 Providing AC Power with Inverter 161
 Battery Charging with Inverter 162
 Auto Generator Start 163
 Factory Default Settings 163
 Battery Temperature Sensor 163
 Power Assist 163

Keyless Entry.....106
 Operation 106

L,M,N,O

Ladder - Rear118
Leveling - Air (Option)223
 Automatic Air Leveling 223
 Travel Mode 225
 Service 225
Leveling - Hydraulic219
 Prior to Leveling 220
 Operation 220
 Retracting Leveling Jacks 221
 Maintenance 222
Lights.....175
 Incandescent 175
 Interior Halogen 175
Limited Warranty Transfer8
Load Center - 120/240 Volt AC164
 Power Control System 164
 Circuit Breakers 165
 GFCI Breakers & Outlets 165
Lubrication Charts246
Lubrication Maintenance.....243
Maintenance Records251
Microwave/Convection Oven85
 Setting the Clock 86
 Care & Cleaning 86
Mold & Mildew69

P,Q

Pest Control70
Propane Consumption151
Propane Detector.....145
 Testing 145
 Alarm 146
 Maintenance 146
Propane Distribution Lines151
Propane Emergency Procedures.....146
Propane Fundamentals.....148
Propane Hose Inspection150
Propane Regulator149
Propane Safety Tips152
Propane Systems144
Propane Tank147
 Measurement 147
 Tank Capacity 147
 Tank Filling 147
 Tank Operation 148

R

Radio - Dash	118	Satellite Systems	123	Specifications	248
Auxiliary Inputs.....	119	Satellite Prewire	123	Tank Capacities	248
Navigation system (Optional)	119	KVH R5 (Optional).....	123	Engine Specifications	248
CD Changer (Optional)	119	Winegard Trav'ler (Optional)	124	Chassis Fluid Capacities	248
Rear Vision System	19	Satellite Wiring.....	125	Belts & Filters	249
Refrigerator - Absorbtion (Optional)	81	Seat Controls	116	Generator Specifications	249
Operation Specifics	81	Swivel Seats	116	Battery Specifications	250
Control Panel	82	Security System (Optional)	44	Stainless Steel Surfaces	67
Icemaker	82	Arming & Disarming	44	Starting Procedure	226
Refrigerator Alarm	83	Alarm.....	44	Normal Starting	226
Cooling Unit Fans	83	Service Center	142	Cold Weather	226
Doors	83	Set-Up Procedures	22	Steering Column	185
Storage Procedures.....	83	Shock Absorber	218	Tilt & Telescope	185
Interior Light	84	Shore Power Hook-up	155	Storage	72
Service	84	Power Cord Reel	157	Short Term	72
Air in Propane Supply Lines	85	Shower	64	Long Term	73
Refrigerator - Residential	78	Slideout Operation	107	Winter Storage Checklist.....	74
Control Panel.....	78	Extending & Retracting Slide Rooms	107	Removal from Storage	75
Icemaker	79	Lock Bar	108	Storage Slideout Tray (Optional)	118
Water Filter.....	80	Troubleshooting.....	108	Systems Control Center	126
Reporting Safety Defects	4	Manual Override - Living Room.....	109		
		Smoke Detector	45		
		Operation.....	45		
		Testing	46		
		Maintenance	46		
		Troubleshooting.....	46		
		Sofa Bed Conversion	117		
		Air Mattress (Optional)	117		
		Solar Panel (Optional)	173		
		Charge Controller	173		
		Monitor.....	174		
		Solar Panel Care	174		
		Solar Screen & Blackout Shade	115		
		Windshield.....	115		
		Solar Scrns & Blackout Shades (Opt)	115		

S

Safe (Optional)	45
Safety Cruise System (Optional)	42
Driver Display	42
Remote Warning Indicators	42
SmartCruise® Operation	43
Special Situations	43
Safety Terms	4

T,U,V

Tag Axle.....216
 Tag Axle Switch 216
 Adjusting Tag Axle Load..... 217
 Tag Axle Lubrication..... 217
 Oil Change Intervals..... 218
Tires.....28
 Importance of Air Pressure..... 29
 Tire Pressure Inflation Guideline..... 29
 Load Inflation Table 29
 Inspecting & Pressure..... 30
 Air Pressure Checklist..... 31
 Tire Support When Leveling 31
 Tire Vibration 32
 Tire Rotation..... 32
 Tire Replacement Information 32
 Storage of Tires - Long Term 33
Toilet.....136
 Pedal Flush 136
 Cleaning & Maintenance..... 136
 Electric Flush..... 137
 Programming Water Level 137
 Tank Level Sensors 137
Towing Procedures.....27
 Disabling Parking Brake 28
Transfer Switch158
Transmission.....231
 Shift Selector 231
 Trans Service Icon..... 232
 Check Trans Icon..... 233
 Diagnostic Trouble Codes 233
 Transmission Fluid 234
 Filter Change Interval..... 236
Trip Preparation15

TV & Entertainment Components.....120
 Television (Front) Lockout Feature..... 120
 Cable TV, Computer & Phone..... 120
 TV Antenna 120
 Antenna Select..... 120
 Front TV Operation..... 121
 Home Theater 121
 Bedroom TV Operation..... 122

W,X,Y,Z

Wall Coverings64
Wall Thermostat.....89
 LCD Display 89
 Remote Temperature Sensors 90
Warranty Information File4
Washer-Dryer Prepared96
Washer/Dryer Stacked (Optional).....97
 Washer 97
 Test Cycle 97
 Operating Instructions 98
 Cleaning the Washer..... 98
 Winterizing the Washer 98
 Dryer..... 98
 Operation..... 99
 Dryer Maintenance 99
Waste Pump.....134
Waste Water Systems133
 Proper Waste Disposal..... 133
 Do Not Put in Waste Holding Tanks 133
 What to Put in Holding Tanks 133
 Waste Drain & Sewage Tanks 134
Water - Potable129
 City Water Hook-up 129
 Fresh Tank Fill..... 129
 Gravity Fill 130

Potable Hose Reel 130
Water Filter132
Water Pump.....130
 Water Pump Troubleshooting 131
Water Systems132
 Troubleshooting..... 132
 Disinfecting Fresh Water 132
Water Systems - Introduction128
Water Tanks.....128
 Measurements 128
Weighing The Motorhome34
 Weight Terms..... 35
 Tag Axle Regulator..... 36
 Tag Axle Adjustment..... 37
 Tire Pressure 38
 Scales..... 38
 Six-Point Weighing 39
 Weight Record Sheet Tag Axle..... 41
Weight Record Sheets253
Wheel Mounting.....33
Windows.....67
 Condensation..... 67
Window Treatments.....68
 Mini Blinds..... 68
 Day/Night Shades..... 68
Winterization138
 Using Air Pressure..... 139
 Using Nontoxic Antifreeze 140
 De-Winterization 140
 Prevent-A-Freeze System (Optional) 141
Wood Care65