

MONACO MOTORHOME LIMITED WARRANTY

WHAT THE PERIOD OF COVERAGE IS:

This Limited Warranty provided by Monaco® (“Warrantor”) covers those components, assemblies and systems of your new motorhome not excluded under the section “What is Not Covered” and when sold by an authorized dealer, for twelve (12) months from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. However, this Limited Warranty covers the internal steel or aluminum structural support frames inside the walls and roof (excluding slide-outs) for sixty (60) months from the original retail purchase date or the first 50,000 miles of use, whichever occurs first. If you use your motorhome for any rental, commercial or business purposes whatsoever, the Limited Warranty provided by Warrantor covers your new motorhome when sold by an authorized dealer for ninety (90) days from the original retail purchase date or the first 24,000 miles of use, whichever occurs first, and it covers the internal steel or aluminum structural support frames inside the walls and roof (excluding slide-outs) for twelve (12) months from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. A conclusive presumption that your motorhome has been used for commercial and/or business purposes arises if you have filed a federal or state tax form claiming any business tax benefit related to your ownership of the motorhome. The above Limited Warranty coverage applies to all owners, including subsequent owners, of the motorhome. However, a subsequent owner must submit a warranty transfer form by filing the form through an authorized Monaco dealer. A subsequent owner’s warranty coverage period is the remaining balance of the warranty coverage period the prior owner was entitled to under this Limited Warranty. Warranty transfer forms can be obtained by contacting the Customer Relations Department. There is no charge for the transfer.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES:

IMPLIED WARRANTIES, IF ANY, ARISING BY WAY OF STATE LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE TERM OF THIS LIMITED WARRANTY AND ARE LIMITED IN SCOPE OF COVERAGE TO THOSE PORTIONS OF THE MOTORHOME COVERED BY THIS LIMITED WARRANTY. WARRANTOR DISCLAIMS ALL IMPLIED AND EXPRESS WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ON COMPONENTS AND APPLIANCES EXCLUDED FROM COVERAGE AS SET FORTH BELOW.

There is no warranty of any nature made by Warrantor beyond that contained in this Limited Warranty. No person has authority to enlarge, amend or modify this Limited Warranty. The dealer is not the Warrantor’s agent but is an independent entity. Warrantor is not responsible for any undertaking, representation or warranty made by any dealer or other person beyond those expressly set forth in this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

WHAT THE WARRANTY COVERS:

Warrantor’s Limited Warranty covers defects in the manufacture of your motorhome and defects in materials used to manufacture your motorhome. “Defect” means the failure of the motorhome and/or the materials used to assemble the motorhome to conform to Warrantor’s

design and manufacturing specification and tolerances. Also see the section “What the Warranty Does Not Cover” set out below.

WHAT WE WILL DO TO CORRECT PROBLEMS:

Warrantor’s sole and exclusive obligation is to repair and/or replace, at its option, any covered defect if: (1) you notify Warrantor or one of its authorized servicing dealers of the defect within the warranty coverage period and within five (5) days of discovering the defect; and (2) you deliver your Motorhome to Warrantor or Warrantor’s authorized servicing dealer at your cost and expense. It is reasonable to expect some service items to occur during the warranty period. The performance of warranty repairs shall not extend the original warranty coverage period. Further, any performance of repairs after the warranty coverage period has expired or any performance of repairs to component parts and appliances that are excluded from coverage shall be considered “good will” repairs, which shall not alter the express terms of this limited warranty. If the repair or replacement remedy fails to successfully cure a defect after Warrantor received a reasonable opportunity to cure the defect(s), your sole and exclusive remedy shall be limited to Warrantor paying you the cost of having an independent third party perform repair(s) to the defect(s). Warrantor may use new and/or remanufactured parts and/or components of substantially equal quality to complete any repair. Defects and/or damage to interior and exterior surfaces, trim, upholstery and other appearance items may occur at the factory during manufacture, during delivery of the motorhome to the selling dealer or on the selling dealer’s lot. Normally, any such defect or damage is detected and corrected at the factory or by the selling dealer during the inspection process performed by the Warrantor and the selling dealer. If, however, you discover any such defect or damage when you take delivery of the motorhome, you must notify your dealer or Warrantor within five days of the date of purchase to have repairs performed to the defect at no cost to you as provided by this Limited Warranty. If either three or more unsuccessful repair attempts have been made to correct any covered defect that you believe substantially impairs the value, use or safety of your motorhome, or repairs to any covered defect(s) which you believe substantially impairs the value, use or safety of your motorhome have taken 30 or more days to complete, you must, to the extent permitted by law, notify Warrantor directly in writing of the failure to successfully repair the defect(s) so that Warrantor can become directly involved in exercising a final repair attempt for the purpose of performing a successful repair to the identified defect(s).

HOW TO GET SERVICE:

The “Acknowledgement of Receipt of Warranty/Production Information” form must be returned to Warrantor promptly upon purchase to assure proper part replacement and repair of your motorhome. Failure to return the “Acknowledgement of Receipt of Warranty/Production Information” form will not affect your rights under the Limited Warranty so long as you can furnish proof of purchase. For warranty service simply contact one of Warrantor’s authorized service centers for an appointment, then deliver your motorhome (at your expense) to the service center. If you need assistance in locating an authorized warranty service facility, contact Warrantor’s Warranty Department (1-877-466-6226). The mailing address is:

**91320 Coburg Industrial Way
Coburg, Oregon 97408**

In the event the motorhome is inoperative due to malfunction of a warranted part, Warrantor will pay the cost of having the motorhome towed to the nearest authorized repair facility provided you notify Warrantor prior to incurring the towing charges to receive directions to the nearest repair facility. Because Warrantor does not control the scheduling of service work by its authorized servicing dealers, you may encounter some delay in scheduling and/or in the completion of the repairs.

WHAT THE WARRANTY DOES NOT COVER:

This Limited Warranty does not cover: any motorhome sold or registered outside of the United States or Canada; items which are added or changed after the motorhome leaves Warrantor's possession; items that are working as designed but which you are unhappy with because of the design; normal wear and usage, such as fading or discoloration of fabrics, or the effects of moisture inside the motorhome; defacing, scratching, dents and chips on any surface or fabric of the motorhome, not caused by Warrantor; owner maintenance, including by way of example wheel alignments and resealing exterior sealant areas; the automotive chassis and power train, including, by way of example the engine, drivetrain, steering and handling, braking, wheel balance, muffler, tires, tubes, batteries and gauges; appliances and components covered by their own manufacturer's warranty including, by way of example the microwave, refrigerator, ice maker, stove, oven, generator, roof air conditioners, hydraulic jacks, VCR, television(s), water heater, furnace, stereo, radio, compact disc player, washer, dryer, inverter and cellular phone; or flaking, peeling and chips or other defects or damage in or to the exterior or finish caused by rocks or other road hazards, the environment including airborne pollutants, salt, tree sap and hail. Component part and appliance manufacturers issue limited warranties covering those portions of the motorhome not covered by the Limited Warranty issued by Warrantor. To learn more on what specific component parts and appliances are excluded from the Limited Warranty issued by Warrantor please contact your selling dealership or Warrantor directly or review the warranty packet inside the motorhome.

EVENTS DISCHARGING WARRANTOR FROM OBLIGATION UNDER WARRANTY:

Misuse or neglect, accidents, unauthorized alteration, failure to provide reasonable and necessary maintenance (see Owner's Manual), damage caused by off road use, collision, fire, theft, vandalism, explosions, overloading in excess of rated capacities, and odometer tampering shall discharge Warrantor from any express or implied warranty obligation to repair any resulting defect.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:
THE ORIGINAL PURCHASER OF THE MOTORHOME AND ANY PERSON TO WHOM THE MOTORHOME IS TRANSFERRED, AND ANY PERSON WHO IS AN INTENDED OR UNINTENDED USER OR BENEFICIARY OF THE MOTORHOME, SHALL NOT BE ENTITLED TO RECOVER FROM WARRANTOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE MOTORHOME, INCLUDING BY WAY OF EXAMPLE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE PRODUCT TO THE SERVICING DEALER, HOTEL ROOMS, LOST WAGES AND MOISTURE DAMAGE SUCH AS MOLD AND MILDEW. THE EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES SHALL BE DEEMED INDEPENDENT OF, AND SHALL SURVIVE, ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusions may not apply to you.

LEGAL REMEDIES:

THESE LIMITED WARRANTIES ARE NOT INTENDED TO, AND DO NOT "EXTEND TO FUTURE PERFORMANCE". ANY ACTION SEEKING REMEDIES FOR BREACH OF WARRANTY OR SEEKING TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE EARLIER OF: (i) THE EXPIRATION OF THE WARRANTY COVERAGE PERIOD DESIGNATED ABOVE; (ii) THE FAILURE OF THE WARRANTOR TO REPAIR THE DEFECT AT ISSUE; OR, (iii) THE DATE ON WHICH THE BUYER'S ACTION ACCRUED UNDER APPLICABLE LAW. IF YOU USE YOUR MOTORHOME FOR COMMERCIAL OR BUSINESS PURPOSES, ANY ACTION SEEKING REMEDIES FOR BREACH OF WARRANTY OR SEEKING TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE YEAR AFTER THE EARLIER OF (i) THE EXPIRATION OF THE WARRANTY COVERAGE PERIOD DESIGNATED ABOVE; (ii) THE FAILURE OF THE WARRANTOR TO REPAIR THE DEFECT AT ISSUE; OR (iii) THE DATE ON WHICH THE BUYER'S CAUSE OF ACTION ACCRUED UNDER APPLICABLE LAW. UNLESS PROHIBITED BY LAW, THE PERFORMANCE OF REPAIRS SHALL NOT SUSPEND THIS LIMITATIONS PERIOD FROM EXPIRING. THESE TERMS AND ALL WRITTEN AND IMPLIED WARRANTY DISPUTES BETWEEN WARRANTOR AND PURCHASER SHALL BE GOVERNED BY THE SUBSTANTIVE LAWS OF THE STATE OF OREGON, WITHOUT REGARD TO CONFLICTS OF LAW RULES. Some states do not allow the reduction in the statute of limitations, so the above reduction in the statute of limitations may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

LARGER PRINT VERSION AVAILABLE WITHIN THE OWNERS MANUAL AND UPON REQUEST ADDRESSED TO YOUR SELLING DEALER OR WARRANTOR'S WARRANTY DEPARTMENT.

ROADMASTER CHASSIS LIMITED WARRANTY

WHAT THE PERIOD OF COVERAGE IS:

This Limited Warranty provided by Roadmaster® (“Warrantor”) covers your Roadmaster Chassis for thirty-six (36) months from the original retail purchase date or the first 50,000 miles of use, whichever occurs first. If you use the Roadmaster Chassis that your motorhome is mounted upon for any rental, commercial or business purposes whatsoever, this Limited Warranty covers your new Roadmaster Chassis for Ninety (90) days from the original retail purchase date or the first 24,000 miles of use, whichever occurs first. A conclusive presumption that the Roadmaster Chassis has been used for commercial and/or business purposes arises if you have filed a federal or state tax form claiming any business tax benefit related to your ownership of the motorhome. This Limited Warranty applies to all owners, including subsequent owners, of the Roadmaster Chassis. However, a subsequent owner must submit a warranty transfer form. A subsequent owner’s warranty coverage period is the remaining balance of the warranty coverage period the prior owner was entitled to under this Limited Warranty. Warranty transfer forms can be obtained by contacting the Customer Relations Department. There is no charge for the transfer.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES:

IMPLIED WARRANTIES, IF ANY, ARISING BY WAY OF STATE LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE TERM OF THIS LIMITED WARRANTY AND ARE LIMITED IN SCOPE OF COVERAGE TO THOSE PORTIONS OF THE MOTORHOME COVERED BY THIS LIMITED WARRANTY. WARRANTOR DISCLAIMS ALL IMPLIED AND EXPRESS WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ON COMPONENTS AND APPLIANCES EXCLUDED FROM COVERAGE AS SET FORTH BELOW.

There is no warranty of any nature made by Warrantor beyond that contained in this Limited Warranty. No person has authority to enlarge, amend or modify this Limited Warranty. The dealer is not the Warrantor’s agent but is an independent entity. Warrantor is not responsible for any undertaking, representation or warranty made by any dealer or other person beyond those expressly set forth in this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

WHAT THE WARRANTY COVERS:

Warrantor’s Limited Warranty covers defects in the manufacture of the Roadmaster Chassis and defects in materials used to manufacture the Roadmaster Chassis. “Defect” means the failure of the Roadmaster Chassis and/or the materials used to assemble the Roadmaster Chassis to conform to Warrantor’s design and manufacturing specification and tolerances. Also see the section “What the Warranty Does Not Cover” set out below.

WHAT WE WILL DO TO CORRECT PROBLEMS:

Warrantor’s sole and exclusive obligation is to repair and/or replace, at its option, any covered defect if: (1) you notify Warrantor or one of its authorized servicing dealers of the defect within the warranty coverage period and within five (5) days of discovering the defect; and (2) you deliver your Roadmaster Chassis to Warrantor or Warrantor’s authorized servicing dealer at your cost and expense. It is reasonable to expect some service items to occur during the warranty period. The performance of warranty repairs shall not extend the original warranty coverage period. Further, any performance of repairs after the warranty coverage period has expired or any performance of repairs to component parts and appliances that are excluded from coverage shall be considered “good will” repairs, which shall not alter the express terms of this limited warranty. If the repair or replacement remedy fails to successfully cure a defect after Warrantor received a reasonable opportunity to cure the defect(s), your sole and exclusive remedy shall be limited to Warrantor paying you the cost of having an independent third party perform repair(s) to the defect(s). Warrantor may use new and/or remanufactured parts and/or components of substantially equal quality to complete any repairs. Defects and/or damage to interior and exterior surfaces, trim, upholstery and other appearance items may occur at the factory during manufacture, during delivery of the motorhome to the selling dealer or on the selling dealer’s lot. Normally, any such defect or damage is detected and corrected at the factory or by the selling dealer during the inspection process performed by the Warrantor and the selling dealer. If, however, you discover any such defect or damage when you take delivery of the motorhome, you must notify your dealer or Warrantor within five days of the date of purchase to have repairs performed to the defect at no cost to you as provided by this Limited Warranty. If either three or more unsuccessful repair attempts have been made to correct any covered defect that you believe substantially impairs the value, use or safety of your motorhome, or repairs to any covered defect(s) which you believe substantially impairs the value, use or safety of your motorhome have taken 30 or more days to complete, you must, to the extent permitted by law, notify Warrantor directly in writing of the failure to successfully repair the defect(s) so that Warrantor can become directly involved in exercising a final repair attempt for the purpose of performing a successful repair to the identified defect(s).

HOW TO GET SERVICE:

For warranty service simply contact one of Warrantor’s authorized service centers for an appointment, then deliver your Roadmaster Chassis (at your expense) to the service center. If you need assistance in locating an authorized warranty service facility, contact Warrantor’s Warranty Department (1-877-466-6226). The mailing address is:

**91320 Coburg Industrial Way
Coburg, Oregon 97408**

In the event the Roadmaster Chassis is inoperative due to malfunction of a warranted part, Warrantor will pay the cost of having the motorhome towed to the nearest authorized repair facility provided you notify Warrantor prior to incurring the towing charges to receive directions to the nearest repair facility. Because Warrantor does not control the scheduling of service work by its authorized servicing dealers, you may encounter some delay in scheduling and/or in the completion of the repairs.

WHAT THE WARRANTY DOES NOT COVER:

This Limited Warranty does not cover: modifications and alterations to the Roadmaster Chassis by others; the motorhome that is mounted upon the Roadmaster Chassis, including by way of example the motorhome manufacturer's design, manufacture, assembly and/or installation of the side walls, roof, windows, flooring, electrical system, plumbing system, LP-Gas system, appliances and slide outs; items that are working as designed but which you are unhappy with because of the design; normal wear and usage; routine maintenance including by way of example wheel alignments; component parts covered by their own manufacturer's warranty, including by way of example the engine, radiator, transmission, tires, tubes, batteries, exhaust system and the emission control systems; and, flaking, peeling rusting and chips or other defects or damage in or to the frame and frame cross members caused by rocks or other road hazards and the environment including airborne pollutants and salt. Component part manufacturers issue limited warranties covering those portions of the Roadmaster Chassis not covered by the Limited Warranty issued by Warrantor. To learn more on what specific component parts are excluded from the Limited Warranty issued by Warrantor please contact your selling dealership or Warrantor directly or review the warranty packet inside the Motorhome.

EVENTS DISCHARGING WARRANTOR FROM OBLIGATION UNDER WARRANTY:

Misuse or neglect, accidents, unauthorized alteration, failure to provide reasonable and necessary maintenance (see Owner's Manual), damage caused by off road use, collision, fire, theft, vandalism, explosions, overloading in excess of rated capacities, and odometer tampering shall discharge Warrantor from any express or implied warranty obligation to repair any resulting defect.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:
THE ORIGINAL PURCHASER OF THE ROADMASTER CHASSIS AND ANY PERSON TO WHOM THE ROADMASTER CHASSIS IS TRANSFERRED, AND ANY PERSON WHO IS AN INTENDED OR UNINTENDED USER OR BENEFICIARY OF THE ROADMASTER CHASSIS, SHALL NOT BE ENTITLED TO RECOVER FROM WARRANTOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE ROADMASTER CHASSIS, INCLUDING BY WAY OF EXAMPLE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE PRODUCT TO THE SERVICING DEALER, HOTEL ROOMS, LOST WAGES AND WATER DAMAGE. THE EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES SHALL BE DEEMED INDEPENDENT OF, AND SHALL SURVIVE, ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusions may not apply to you.

LEGAL REMEDIES:

THESE LIMITED WARRANTIES ARE NOT INTENDED TO, AND DO NOT "EXTEND TO FUTURE PERFORMANCE." ANY ACTION SEEKING REMEDIES FOR BREACH OF WARRANTY OR SEEKING TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN (1) ONE YEAR AFTER THE EARLIER OF: (i) THE WARRANTY COVERAGE PERIOD DESIGNATED ABOVE; (ii) THE FAILURE OF THE WARRANTOR TO REPAIR THE DEFECT AT ISSUE; OR, (iii) THE DATE ON WHICH THE BUYER'S ACTION ACCRUED UNDER APPLICABLE LAW. IF YOU USE YOUR MOTORHOME FOR COMMERCIAL OR BUSINESS PURPOSES, ANY ACTION SEEKING REMEDIES FOR BREACH OF WARRANTY OR SEEKING TO ENFORCE THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTIES SHALL NOT BE COMMENCED MORE THAN ONE YEAR AFTER THE EARLIER OF (i) THE EXPIRATION OF THE WARRANTY COVERAGE PERIOD DESIGNATED ABOVE; (ii) THE FAILURE OF THE WARRANTOR TO REPAIR THE DEFECT AT ISSUE; OR (iii) THE DATE ON WHICH THE BUYER'S CAUSE OF ACTION ACCRUED UNDER APPLICABLE LAW, UNLESS PROHIBITED BY LAW. THE PERFORMANCE OF REPAIRS SHALL NOT SUSPEND THIS LIMITATIONS PERIOD FROM EXPIRING. THESE TERMS AND ALL WRITTEN AND IMPLIED WARRANTY DISPUTES BETWEEN WARRANTOR AND PURCHASER SHALL BE GOVERNED BY THE SUBSTANTIVE LAWS OF THE STATE OF OREGON, WITHOUT REGARD TO CONFLICTS OF LAW RULES. Some states do not allow the reduction in the statute of limitations, so the above reduction in the statute of limitations may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

LARGER PRINT VERSION AVAILABLE WITHIN THE OWNERS MANUAL AND UPON REQUEST ADDRESSED TO YOUR SELLING DEALER OR WARRANTOR'S WARRANTY DEPARTMENT.

112107

2009 DIPLOMAT

SECTIONS

| | |
|--|-----|
| SECTION 1 - GENERAL INFORMATION | 3 |
| SECTION 2 - DRIVING & SAFETY | 13 |
| SECTION 3 - EXTERIOR & INTERIOR CARE | 49 |
| SECTION 4 - APPLIANCES..... | 73 |
| SECTION 5 - EQUIPMENT | 99 |
| SECTION 6 - WATER SYSTEMS | 125 |
| SECTION 7 - PROPANE SYSTEMS..... | 147 |
| SECTION 8 - ELECTRICAL SYSTEMS (HOUSE)..... | 157 |
| SECTION 9 - ELECTRICAL SYSTEMS (CHASSIS)..... | 179 |
| SECTION 10 - CHASSIS INFORMATION | 197 |
| INDEX | 249 |

The information contained in this document is intended to reflect standard and optional equipment included in a typically equipped model at the time of delivery to the initial retail owner. Your actual unit may vary from this document as a result of optional equipment that is not generally offered on this model. In the case that you are not the initial retail owner of the unit, this document will not reflect modifications that may have been performed by previous owners.

Product information and specifications are shown herein as of the time of printing. The motorhome manufacturer reserves the right to change product specifications, designs and standard equipment without notice and without incurring obligation.

©Copyright Monaco Coach Corporation. Monaco. All rights reserved. All other trademarks or registered trademarks are property of their respective holders. Brand name products of other companies mentioned in this manual are not endorsed by the manufacturer of the motorhome.

Check online for Addendums or Tech Tips that may apply to your motorhome.

MANUAL ADDENDUMS & TECH TIPS

www.monaco-online.com

Click on the **Monaco** logo, then click on **SERVICE** link and choose either **MANUAL ADDENDUMS** or **TECH TIPS** from the menu.

2009 DIPLOMAT

GENERAL INFORMATION – SECTION 1

| | |
|--|----|
| WARRANTY INFORMATION FILE..... | 4 |
| REPORTING SAFETY DEFECTS..... | 4 |
| SAFETY TERMS..... | 4 |
| GLOSSARY OF TERMS | 5 |
| OWNER'S MANUAL SURVEY: 2009 DIPLOMAT ... | 9 |
| LIMITED WARRANTY TRANSFER APPLICATION/ CHANGE OF OWNER INFORMATION..... | 11 |



WARRANTY INFORMATION FILE

In addition to this Owner's Manual, a Warranty Information File can be found in the motorhome. This box contains valuable documents about the motorhome's systems and equipment. Many of the component manufacturer warranty registration cards can be found in the box. They will need to be filled out and mailed. Careful reading and understanding of all the information in this box will help in the safe operation, maintenance and troubleshooting of the systems and equipment.

Additional Information:

Changes, additions and supplemental information in the form of Manual Addendums and "Tech Tips" can be obtained by visiting our Web Site at www.monaco-online.com. Select one of the products from the product lineup. Go to the Service menu. A submenu will appear.

It may also be helpful to browse the "Tech Tips" menu for the other product lines. The tips may not completely apply to a particular model, but information contained therein can be useful.

REPORTING SAFETY DEFECTS

If you believe that your motorhome has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Monaco Coach.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a

safety defect exists in a group of motorhomes, it may order a recall or remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer or Monaco Coach.

To contact NHTSA, you may call the Vehicle Safety Hot line toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE, Washington, DC, 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

SAFETY TERMS

Many of the safety terms are personal safety instructions. Definitions for the terms are listed below. It is important to thoroughly read and understand the safety instructions displayed throughout the manual. Failure to comply with specific instructions may result in personal injury or death. Many instructions are required by National Safety Associations.

WARNING

Warnings contain information regarding personal safety and/or pertaining to potential extensive or permanent damage to the motorhome or its components by means of hazards or improper use.

CAUTION

Cautions pertain to potential damage to the motorhome and/or its components.

POISON

A warning or caution pertaining to safety and/or use of a poisonous substance or harmful chemical.

NOTE

Information and reminders concerning proper operation of the motorhome and/or its components.

INSPECTION

Inspection of the motorhome and/or its components is required. Additional instruction may follow.

LUBE

Lubrication, or addition of a lubricant product, to the motorhome and/or a specified component or part is required. Additional instruction may follow.

ASSEMBLE or REPAIR

Assembly, disassembly or installation of a component or part, and/or repair to the motorhome may be required. Assistance of Technical Support or Technician may be necessary.

INFORMATION

References to additional information regarding operation of the motorhome and/or its components found in additional sources, other than the Owner's Manual. Also refers to the WARRANTY INFORMATION FILE, found within the Warranty Information Box in the motorhome.

TIP

Tips contain information, helpful hints and/or suggestion for ease of operation of the motorhome or its components.

GLOSSARY OF TERMS

AC Electricity - Alternating current also known as household power.

Air Compressor - Pumps air to and builds air pressure in an air system.

Air Dryer - Cools, filters and dries the air delivered by an air compressor.

Air Governor - Controls the operation of the air compressor by constantly monitoring air pressure in the supply tank of the air system. The air governor initiates the unload cycle when the cut-out pressure is reached.

Alternating Current (AC) - A voltage that oscillates in polarity. Shore power, generator power and inverter power supply alternating current. Rate of oscillation is typically identified as frequency, cycle and hertz. Batteries supply direct current.

Ampere (Amp) - The measure of electron flow rate (current) through a circuit.

Ampere-hour (Amp-hr. AH) - A unit of measure for a battery electrical storage capacity, obtained by multiplying the current in amperes by the time in hours of discharge. *Example:* A battery which delivers 5 amperes for 20 hours, delivers 5 amperes times 20 hours, or 100 Amp-Hr. of capacity.

ANSI - American National Standards Institute.

ASTM - American Society for Testing and Materials.

Black Water - Term associated with the sewage holding tank. The toilet drains directly into this tank.

CCA - Cold Cranking Amperage is the amount of current a battery can deliver for 30 seconds at 0° F without dropping below a specified voltage, usually 10.5 Volts DC.

Chassis Battery - Powers chassis 12 Volt accessories and starts engine.

Circuit - An electric circuit is the path of an electric current. A closed circuit has a complete path. An open circuit has a broken or disconnected path.

City Water - A term associated with the water supply at campgrounds. It is called city water because water is pulled from a central source (like in a city) and not the fresh water tank.

Compressor Load Cycle - The time during which the air compressor is building air pressure in an air system.

Compressor Unload Cycle - The time during which the air compressor is idling and is not building air pressure in an air system.

Curbside - This refers to the side of the motorhome that faces the curb when it is parked. Often called the door side or the passenger side.

Current - The rate of flow of electricity or the movement rate of electrons along a conductor. It is comparable to the flow of a stream of water. The unit of measure for current is the ampere.

Cut-In Pressure - The pressure level in the air system supply tank which triggers the compressor load cycle.

Cut-Out Pressure - The pressure level in the air system supply tank which triggers the compressor unload cycle.

Cycle - A battery discharge and subsequent recharge equals one cycle.

Desiccant - A granular substance that has a high affinity for water and is used to retain moisture from the air stream flowing through the air dryer cartridge.

DC Electricity - Direct current also known as battery power.

Direct Current (DC) - Power that is stored in a battery bank or supplied by photovoltaics, alternator, chargers and DC generators. Direct current is also known as battery power. Current only flows one way.

Drain Trap - This is a curve that is in all drains. Water is trapped in the curve and this creates a barrier so tank odors cannot escape through the drain.

Dry Camping - Camping in the motorhome when there is no city water hook-up or shore power. In other words, using only the water and power that is in the motorhome and not from another source.

Drying Cycle - The time during which the air dryer cools, filters and removes moisture from the air delivered by the air compressor. The drying cycle begins and ends the same as the compressor load cycle.

Dump Station - A site where the waste (grey) and sewage (black) tanks can be drained. In most states it is illegal to drain waste tanks anywhere other than at a dump station.

Dump Valve - Another name for the T-handle valve used to drain the sewage (black) and waste (grey) tanks.

Escape (Egress) Window - The formal name for the emergency exit window located in the motorhome. Egress windows are identified by their red handles.

Full Hook-Up Site - A campground that has city water, shore power and sewer hook-ups or connections available.

Grey Water - Term associated with the waste water holding tank. Water from the sink drains, the shower and the washer-dryer (if equipped) go into this tank.

House Battery - Powers 12 Volt DC lights and accessories inside motorhome.

LED (Light Emitting Diode) - Indicator light.

Liquid Lead Acid Battery (LLA) - A type of battery that uses liquid as an electrolyte. This type of battery requires periodic maintenance such as cleaning the connections and checking the electrolyte level.

Low Point Drain - The lowest point in the plumbing. Drains are placed here so that water will drain out of the lower end of the motorhome. Drains must be closed when the water tank is filled.

OEM - Term for Original Equipment Manufacturer.

OHM - A unit for measuring electrical resistances.

Ohm's Law - Expresses the relationship between Volt (E), amperes (I) in an electrical circuit with resistance (R). It can be expressed as follows: $E = IR$. If any two of the three values are known, the third value can be calculated by using the above formula.

Potable Water - Water that is safe for human consumption.

Potentiometer - A device for measuring an unknown potential difference or electromotive force.

Pounds Per Square Inch Gauge (psig) - Pressure measured with respect to that of the atmosphere. This is a pressure gauge reading in which the gauge is adjusted to read zero at the surrounding atmospheric pressure. It is commonly called gauge pressure.

Purge - The initial blast of air (decompression) from the air dryer purge valve at the beginning of the air compressor.

Purge Cycle - The time during which the air dryer is undergoing purge and regeneration. This cycle starts at the beginning of the compressor unload cycle and normally ends well before the beginning of the compressor load cycle.

Regeneration - The mild backflow of air through the air dryer and out the purge valve that begins immediately after the purge and lasts normally 10 to 15 seconds. This backflow of air, from the air system and through the air dryer, removes moisture from the desiccant cartridge and prepares the air dryer for the next compressor load cycle.

Roadside - The side of the motorhome that faces the road while parked. Often called the off-door side or the driver side.

SCA - Term for Supplemental Coolant Additive. Chemical added to coolant for diesel engines to help prevent cylinder liner pitting and internal corrosion.

Shore Line - The electrical cord which runs from the motorhome to the campground 120/240 Volt AC electrical supply.

Stinger - An arm attachment on a tow truck that is used to lift the motorhome slightly for towing.

Volt - The unit of measure for electric potential.

Watt - The unit for measuring electrical power, i.e. the rate of doing work, in moving electrons by or against an electric potential.

Wet Cell Battery - A type of battery that uses liquid as an electrolyte. This type of battery requires periodic maintenance to clean the connections and check the electrolyte level.

OWNER'S MANUAL SURVEY: 2009 DIPLOMAT

Your suggestions are very important to us as we continually strive to improve the quality of our manuals. After becoming familiar with your new recreational vehicle and the accompanying manual, please take the time to answer the following questions. Please return the survey via mail to our Technical Publications Department or fax the survey to: **(541) 681-8031 Attention: Technical Publications Department.** Feel free to attach an additional page if you desire.

1. Is this your first recreational vehicle? YES / NO (circle one)

2. If no, what was your previous recreational vehicle brand/model? _____

3. Was the overall appearance and lay-out of this manual what you expected to see in your new recreational vehicle?

4. Was the information within this manual helpful in acquainting you with your new recreational vehicle? If not please address any area(s) we need to expand or improve on.

5. Were the operating instructions clearly written, and were you able to follow the steps without any difficulty?

6. Is there any additional information you would like to see incorporated within the owner's manual?

NAME: _____

PHONE: (_____) _____

ADDRESS: _____

SERIAL # _____

TEAR OFF PAGE AND MAIL TO:

TECHNICAL PUBLICATIONS PLT. 17
MONACO COACH CORPORATION
91320 COBURG INDUSTRIAL WAY
COBURG, OR 97408

LIMITED WARRANTY TRANSFER APPLICATION/CHANGE OF OWNER INFORMATION

Mail to:

**Monaco Coach Corporation
Warranty Transfer
91320 Coburg Industrial Way
Coburg, OR 97408**

Please read terms and representations below before signing.

Submitted By:

Name: _____

Address: _____

City: _____ State: _____ Zip: _____

Phone: (_____) _____

Limited Warranty Transfer

Address Change

A. Current Owner Information:

First Name Initial Last Name

Vehicle Identification Number Unit # (15 digits) (6 digits) Model/Year

B. New Owner Information, Transfer Coverage To:

First Name Initial Last Name

(_____)
Phone Number Street Address City State Zip

Date of Transfer (If Applicable) Odometer Reading at Transfer (If Applicable)

C. Signatures:

(New) Owner's Signature Date Selling Dealer's Signature (If Applicable) Date

Terms & Representations

By your signature(s) on face side of this form, and in order to induce Monaco Coach Corporation to transfer its Limited Warranty, you represent the following:

1. That you have received and read a copy of the Limited Warranty.
2. You understand that the unit is to be used only for family camping and cross country travel on improved roads.

3. All information provided by you on face side of this form is true and correct.
4. You understand that you are purchasing a pre-owned recreational vehicle and Monaco Coach Corporation does not make any representation as to its present condition.

TEAR OFF PAGE AND MAIL TO:

WARRANTY TRANSFER, MONACO COACH CORPORATION,
91320 COBURG INDUSTRIAL WAY
COBURG, OR 97408

| | | | |
|---|-----------|---|-----------|
| DRIVING & SAFETY | 14 | WHEEL MOUNTING | 36 |
| Inspections | 14 | WEIGHING THE MOTORHOME | 36 |
| Familiarize Yourself..... | 14 | Weight Limits | 36 |
| Mirror Adjust..... | 14 | Weight Terms | 37 |
| Safety Seat Belts | 14 | Scales | 38 |
| DRIVING TIPS | 16 | Weight Label | 38 |
| Adjust to Driving Conditions | 16 | Four Corner Weighing (Example) | 39 |
| TRIP PREPARATION | 19 | Cargo Carrying Capacity | 39 |
| HITCH | 20 | Cargo Carrying Capacity Flowchart | 41 |
| Using the Rear Receiver | 20 | Weighing Procedure Worksheet | 42 |
| Tow Plug Connection..... | 22 | Weight Record Sheet..... | 43 |
| REAR VISION SYSTEM | 23 | SMOKE DETECTOR | 44 |
| BACKING UP A MOTORHOME | 24 | Operation | 44 |
| SET-UP PROCEDURES | 25 | Testing | 44 |
| DRY CAMPING | 26 | Maintenance | 44 |
| BREAKING CAMP | 27 | Troubleshooting | 44 |
| EMERGENCY ROADSIDE PROCEDURES | 28 | CARBON MONOXIDE DETECTOR | 44 |
| In Case of Flat Tire | 28 | Operation | 45 |
| Dead Chassis Battery | 29 | Alarm..... | 46 |
| TOWING PROCEDURES | 30 | Testing..... | 46 |
| Disabling Parking Brake..... | 31 | Cleaning & Maintenance..... | 46 |
| TIRES | 31 | FIRE EXTINGUISHER | 47 |
| Importance of Air Pressure..... | 32 | ESCAPE (EGRESS) WINDOW | 47 |
| Tire Pressure Inflation Guideline..... | 32 | | |
| Inspecting & Pressure | 33 | | |
| Air Pressure Checklist | 34 | | |
| Tire Support When Leveling | 34 | | |
| Tire Vibration..... | 34 | | |
| Tire Rotation | 35 | | |
| Tire Replacement and Related Information | 35 | | |
| Storage of Tires - Long Term..... | 35 | | |



DRIVING & SAFETY

Section Two contains information on driving tips, emergency situations, towing, safety devices, weighing the motorhome and tires.

NOTE

The motorhome has electronic data recording devices that may record information about direction, road speed, engine speed, brake application, steering attitude or other vehicle operating data. Data recording devices can be present in engines, transmissions, ABS (Antilock Brake Systems) or other systems affiliated with operation of the vehicle. Information from data recording devices can be examined in case of an accident. Contact the component manufacturer to learn more about these devices.

Inspections

Differences between a passenger automobile and a motorhome are significant. Always be aware of these differences when traveling. The key to safely operating a motorhome is inspection. Undetected problems could cause problems on the road and may result in lost time and increased repair costs. Several states require a special license endorsement and motorhome inspection prior to registration. Know and observe the laws of the states in which the motorhome will be traveling. Laws may vary from state to state. A systematic inspection conducted prior to moving the motorhome can help ensure nothing is overlooked and will assist in familiarizing the owner with the motorhome. Prior to moving the motorhome perform a general inspection.


Examine the condition of the motorhome and the surrounding area. Look high and low when walking around the motorhome.

Familiarize Yourself

Because the driver seat location in the motorhome is higher and farther to the left than most vehicles, a different perspective of the roadway is created. Rely on the outside mirrors to line up with the center of the road and to check conditions behind the motorhome. The dashboard may include more gauges and controls than are normally found in passenger automobiles. Become familiar with these gauges and their indications before starting out.


Mirror Adjust

Adjust the mirrors prior to starting out. Have an assistant help to simplify the mirror adjustment process.

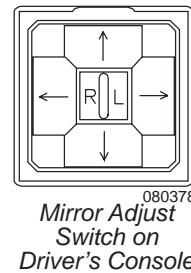

Mirror Adjusting:

- ◆ Tools needed: Allen wrench, flat blade screw driver and socket wrench.
- ◆ Adjust the driver seat to the travel position.
- ◆ Remove plug at the bottom of the arm.

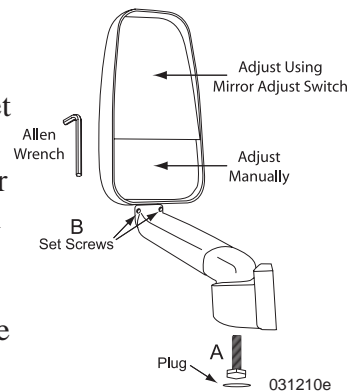

- ◆ Use the socket wrench to loosen the bolt located at the base of the arm. (See point A on the drawing.)
- ◆ Adjust the mirror for a clear side view of the coach.
- ◆ Tighten the bolt once the proper adjustment is made.
- ◆ Reinstall the plug.
- ◆ To adjust the “head” of the mirror, loosen the set screws located below the mirror shown as point B. Adjust the head of the mirror to the left or right.
- ◆ Manually adjust the bottom section of the mirror.
- ◆ Tighten set screws once the proper adjustment is made.
- ◆ Repeat procedure for passenger side mirror.

TIP

Use the mirror adjust switch located on the driver’s console to fine tune the view.

Safety Seat Belts

All occupants must be furnished with and use seat belts while the motorhome is moving. The driver’s seat, and all other seats designed to carry passengers while the motorhome is in motion, are equipped with safety seat belts. **DO NOT** occupy beds or seats that are not equipped with a safety belt while the motorhome is in motion. The driver’s seat must be locked in the forward facing position while motorhome is in motion. **DO NOT** use a seat belt for more than one person.

To fasten the seat belt, pull the belt out of the retractors and insert the tab into the buckle; a click will sound when the tab locks into the buckle. Seat belt lengths automatically adjust to each occupant's size and sitting position. **DO NOT** route belts over armrest or under the arm.

THIS SEAT NOT FOR OCCUPANCY WHILE VEHICLE IS IN MOTION
AD-09W

WARNING

Safety belts are supplied at affixed seating positions. **DO NOT** occupy seats not equipped with safety belts while the motorhome is in motion. Seat belts must only be used on permanently mounted seats. **DO NOT** use a single seat belt on more than one person. Pilot and co-pilot seats must be locked in a forward facing position with seat belts fastened while the motorhome is in motion. **DO NOT** rotate the seat while in transit.

Child Passenger Safety:

Child restraint requirements are determined by age *and* weight. According to NHTSA (National Highway Traffic Safety Administration), there are four stages to child restraint safety.



CAUTION

Always refer to the child seat manufacturer's instructions for proper use and installation instructions.

Step 1:

For the best possible protection keep infants in the back seat, in rear-facing child safety seats, as long as possible up to the height or weight limit of the particular seat. At a minimum, keep infants rear-facing until a minimum of age 1 and at least 20 pounds.



020356


Step 2:

When children outgrow their rear-facing seats (at a minimum age 1 and at least 20 pounds) they should ride in forward-facing child safety seats, in the back seat, until they reach the upper weight or height limit of the particular seat (usually around age 4 and 40 pounds).



Step 3:

Once children outgrow their forward-facing seats (usually around age 4 and 40 pounds), they should ride in booster seats, in the back seat, until the vehicle seat belts fit properly. Seat belts fit properly when the lap belt lays across the upper thighs and the shoulder belt fits across the chest (usually at age 8 or when they are 4', 9" tall).

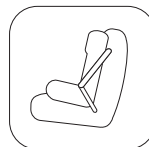

Step 4:

When children outgrow their booster seats, (usually at age 8 or when they are 4'9" tall) they can use the adult seat belt in the back seat, if it fits properly (lap belt lays across the upper thighs and the shoulder belt fits across the chest). All children under age 13 should ride in the back seat.



NOTE

The motorhome manufacturer is not the author of the above information. The information in this chart is reprinted from the National Highway Traffic Safety Administration's website. Visit NHTSA's website at www.nhtsa.gov for the most recent and up to date information.

Tips:

- ◆ Go to www.nhtsa.gov and choose "Child Safety Seat Information" from the menu or click on the child passenger safety icon. The site includes child safety seat installation tips, product ratings, recalls and other useful information.
- ◆ For more information about child safety seats, booster seats, inspection/fitting stations in your area, seat belts, air bags, and other highway safety issues, call the DOT Vehicle Safety Hotline at: 1-888-327-4236.
- ◆ A certified child passenger safety technician can check your installation and answer questions. To find a technician or an inspection station near you, go to www.nhtsa.gov, click on the child passenger safety icon, and then click on the Fitting/Inspection Station link, or go to www.seatcheck.org.

The child safety seat can be positioned in two places in the motorhome: the front passenger (co-pilot) seat and forward facing permanently mounted booth dinette seat.

CAUTION

Individual states and Canadian provinces may have laws that can exceed the requirements as described in this section. It is the owner's responsibility to know and comply with the laws in the state or province in which the motorhome will travel.

CAUTION

Use of a safety or booster seat in the front seat may be prohibited in some states and Canadian provinces.

WARNING

DO NOT transport children unrestrained. Infants must be placed in approved safety seats - small children must be restrained in child safety seats. DO NOT use a single seat belt on more than one child. Failure to comply with these rules can lead to injury or death.

WARNING

Because many styles of safety and booster seats are available, refer to the safety seat OEM manual for proper installation and how to properly install and secure the safety or booster seat.

Seat Belt Care:

Keep the belt clean and dry. Clean with mild soap and lukewarm water. **DO NOT** use bleach, dye or abrasive cleansers that may weaken the belt material. Periodically inspect belts for cuts, frays or loose parts, and replace damaged parts. **DO NOT** disassemble or modify the system. Replace the seat belt assembly after a severe impact, even when damage is not obvious.

DRIVING TIPS

The motorhome is a complex vehicle that requires increased driving awareness because of its size and various components. Due to the motorhome length the turning radius will be much wider than that of a standard automobile. Always pay close attention to the perimeter of the motorhome including front, sides, rear, roof and undercarriage. Ensure the surrounding area is clear of obstacles. Utilize the driving mirrors to observe traffic conditions as well as the motorhome exterior including tires, compartment doors, blind spots, etc. Use a push-pull method of steering, with both hands parallel on the steering wheel.



The motorhome is heavier than an automobile and has a higher center of gravity, which affects reaction time of the motorhome. Swerving and sharp turning, especially performed at high speeds, could result in loss of control. Keep the size of the motorhome in mind and drive with extra caution to avoid situations that might require quick momentum changes. Increase reaction time by paying attention to traffic and road conditions 12 to 15 seconds ahead of the motorhome's position.

The motorhome will travel safely and comfortably at highway speed limits. However, it takes more time to reach highway speed. When passing another vehicle, allow extra time and space to complete the pass due to the added length of the motorhome.

When descending a long hill, manually shift to a lower gear and begin the descent at a slow speed. **DO NOT** allow the motorhome to gain momentum before trying to slow down.

Use the exhaust brake in conjunction with the service brakes to help maintain a slow, safe descent. The transmission and engine will help control downhill speed and can extend the service life of the brake lining. Distance required to stop the motorhome is greater than an automobile. Practice stopping away from traffic to get the feel of distance required to stop the motorhome.

Adjust to Driving Conditions

Adjusting to road, weather and terrain conditions is necessary to keep the motorhome under control. Pay attention to road signs that advise of local road hazards and driving conditions. **DO NOT** operate the motorhome when road, weather and terrain conditions seem unsafe.


Keep the windshield clear of humidity in the form of water or ice. Start the motorhome and turn on the dash defrost to help remove moisture from inside the windshield. It may also be necessary to use a clean cloth to wipe away moisture. Keep windshield wipers in good working order at all times. **DO NOT** operate the motorhome if the windshield is not clear.

Check tonnage limits of bridges before crossing to ensure they can support the weight of the motorhome. Signs should be posted at bridge entrances. Check the posted height of all overpasses or situations where overhead clearance is limited. Keep in mind that road surfaces may be repaved or packed with snow; therefore, the actual posted clearance height would not apply in such conditions.

Driving Cautions:

- ◆ Avoid getting too close to the shoulder of the road, which may be too soft to support the weight of the motorhome.
- ◆ Side spacing is best maintained by keeping the motorhome centered in the driving lane.
- ◆ Driving lanes in work zones can be uneven, congested and narrower than usual.
- ◆ Be cautious of road debris that can damage the undercarriage of the motorhome or become lodged in the dual tires and cause damage to the tires, wheel rims or tow vehicle.
- ◆ On back roads and single divided roads, tree branches and shrubbery can protrude into the roadway. Watch for low hanging branches especially during inclement weather as rain and snow will cause branches to hang lower than usual.
- ◆ Keep in consideration that posted speed signs are usually passenger automobile rated. Be extra aware of driving conditions and use the appropriate speed for a motorhome when necessary, especially on corners and mountain roads.
- ◆ Downgrade speed should be at least 5 mph less than upgrade speed, or downgrade speed should be attainable within three seconds of a brake application.
- ◆ Use a four second rule when following other vehicles at speeds under 40 mph. Use a five second rule when following at speeds over 40 mph.

Right Turns:

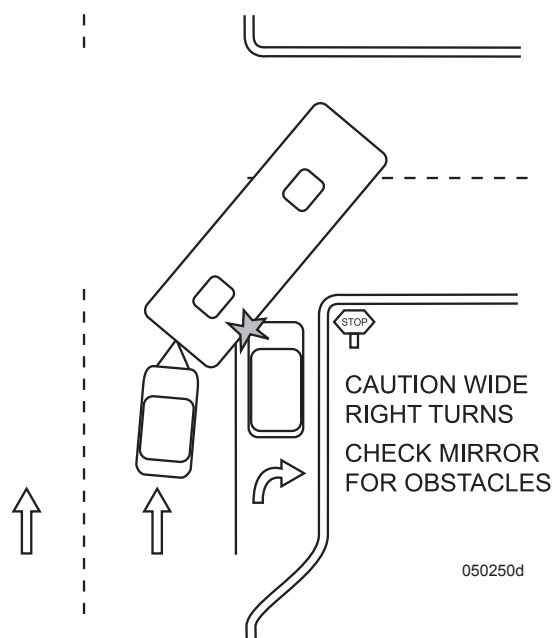

Negotiating a right hand turn in a motorhome can be difficult. Many drivers fear they cannot make the turn without entering into the other lane or jumping the curb. Here are a few tips to make a right hand turn easier:

- ◆ As the turn approaches, look into the mirror to ensure the lane to the left is clear, then move wide over to the left.
- ◆ When making the right turn, the left rear wheel should touch the center line of the road and the driver's hips should be parallel to the roadside curb of the corner being turned to aid in avoiding a premature turn.
- ◆ Make the turn slowly.
- ◆ Check mirrors frequently. Stay aware of necessary clearance and space management of the motorhome while negotiating the turn.

Left Turns:

- ◆ **DO NOT** proceed with the turn until the driver's seat is aligned with the middle of the intersection. If two lanes are available, take the right hand lane. A vehicle or object located on the left-hand side is easier seen.

Ascending a Grade:

When approaching an uphill grade, assess the grade and length before beginning the climb. Prepare early for long climbs. Unlike gasoline engines, diesels do not necessarily produce more power by pressing further on the accelerator. A gasoline engine will operate at full throttle (at least for a short period of time), but a diesel usually just wastes fuel at full throttle. The power output from a diesel engine is dependent upon the following:

- ◆ **RPM** - Every engine has a range of RPM that produces power most efficiently.
- ◆ **Fuel/Air Mixture** - At a given RPM, the engine, even with the help of a turbo-charger, can only introduce a given volume of air into the combustion chamber. This volume of air can efficiently combine with only so much fuel; so adding more fuel to the engine only wastes it.

Determine ranges where the motorhome works best by driving long grades when temperatures remain stable for the duration of the climb.

IMPORTANT SAFETY TIP

Turn on the four way flashers if road speed decreases to the point where the motorhome is moving significantly under the posted speed. Use pullouts if traffic is building. Once in a pullout, if there is sufficient clearance for safety, idle the engine for a while to allow the exhaust and the turbo to cool. While these are cooling, the transmission will also cool. Monitor the gauges while waiting.

Descending a Grade:

Prepare to descend a grade at the crest of the hill. Observe any signs indicating grade angle and duration. The sign may suggest maximum downhill speed according to Gross Combined Weight (the combined weight of the motorhome and a trailer/tow car). At the crest of the hill, manually shift the transmission into a lower gear. **DO NOT** allow the motorhome to gain momentum before slowing down.

Use the exhaust brake to help maintain a slow, safe downhill speed. When the exhaust brake switch is on, the exhaust brake will activate when the throttle is released. With exhaust brake applied, road speed may increase until the transmission automatically shifts to the next higher gear. Apply the brakes using moderately heavy pressure on the brake pedal to reduce speed and manually downshift to maintain a safe, slow speed. **DO NOT** pump the brakes as this can result in a loss of air pressure. Avoid riding the brakes as this can cause brakes to overheat. Either method can result in brake failure or loss of brake effectiveness.



080498m
Located
on Driver's
Console

Night Driving:

- ◆ Be well rested and alert while driving. If necessary, find a safe stopping place to rest until ready to continue.
- ◆ Avoid using interior lights while driving that create a glare on the windshield and decrease visibility.
- ◆ Dim dash lights to a comfortable level to reduce glare.

Extreme Heat and Hot Weather Conditions:

- ◆ Frequently observe all gauges. Variations from normal conditions should be promptly evaluated.
- ◆ Check tire pressure before traveling in hot conditions. Tire air pressure increases with heat. **DO NOT** let air out of a hot tire. When the tires cool down they will return to the correct/previous tire pressure.
- ◆ Pay extra attention to hoses and belts that are more susceptible to fatigue in extreme heat.

Winter and Cold Climate Conditions:

- ◆ The motorhome should be prepared for cold weather use.
- ◆ During cold weather tire air pressure can decrease. Ensure tires are at proper inflation rate.
- ◆ Keep speeds slow and steady. Make moves gradually and increase visual distance for a gain in reaction time.
- ◆ If road or weather conditions are treacherous, find a safe stopping place and wait for conditions to improve.
- ◆ Avoid downshifting or using the exhaust brake on wet or slippery surfaces, which can cause the drive wheels to skid.

- ◆ Wiper blades should be in good condition. Fill the washer reservoir with antifreeze formula window washer fluid.
- ◆ Use mirror heat to keep mirrors clear.
- ◆ Remove any ice build-up from the entry step to avoid accidental slipping.



080498n
Located
on Driver's
Console

Wet Conditions:

- ◆ Worn or improperly inflated tires can increase the risk of hydroplaning.
- ◆ Heavy rain or deep standing water can cause brakes to apply unevenly or grab.

Refueling:

- ◆ Truck stops are good refueling points for motorhomes.
- ◆ Check overhead clearance heights before pulling through the fuel island.
- ◆ Be aware of concrete/steel posts installed around fuel islands.
- ◆ Avoid running over the fuel hose as it can get hung up on the motorhome and cause body damage.
- ◆ Use of gloves is recommended for refueling. Store gloves in the outside compartment.
- ◆ To prevent grease and fuel deposits from being tracked into the motorhome when refueling, change shoes before entering. Store the extra pair of shoes near the entry door.

WARNING

Propane and gasoline are highly flammable and can ignite, resulting in explosion, fire or death. Ensure all flames are extinguished, all propane appliances are turned off and the primary propane valve is off prior to refueling.

Fuel Economy:

Driving style, wind resistance, terrain, vehicle weight, and engine-driven accessories are some of the factors that affect fuel economy.

Guidelines to Help Increase Fuel Efficiency:

- ◆ When starting out, apply the throttle lightly and accelerate gradually. Avoid using excessive throttle and accelerating quickly.
- ◆ Check the tire pressure. A low tire is not only a safety hazard, but also increases rolling resistance and increases fuel consumption.
- ◆ Keep the engine at a low to mid operating range of 1100 to 1500 RPM. This will use less fuel than a higher RPM.
- ◆ Avoid using full throttle when ascending a long hill. This wastes fuel and increases engine operating temperature from incomplete combustion. Manually shift to a lower gear and use less throttle. Fuel will burn more efficiently.
- ◆ Avoid extended idling to warm-up the engine. Start the engine and wait for normal oil pressure to register. Engage the high idle feature until the engine coolant temperature gauge raises.

The engine is now ready for travel. Whenever coolant temperature is below operating temperature (idling engine) incomplete combustion occurs, causing carbon build-up and raw fuel to wash lubricating oil from the cylinder walls and dilute the crankcase oil.


- ◆ Excessive idling (more than 10 or 15 minutes) can clog fuel injectors, damage the emission system and eventually causing piston rings and valves to stick.
- ◆ Operate the transmission with the MODE function set to Economy whenever possible; this allows for earlier shifts and enhanced fuel economy. Shift points are also lowered if the cruise switch is on. Turn off the cruise power and set the transmission to normal mode when in mountainous terrain and congested traffic.
- ◆ Follow the maintenance schedule for the engine.

TRIP PREPARATION


The following suggestions are general guidelines to follow when preparing for a trip:

Items to Carry:

- ◆ An emergency road kit containing a flashlight, road flares, warning signs and a fire extinguisher.
- ◆ Local, State and National Maps, as well as a 'Motor Carrier' road atlas (for refueling station and truck repair facility locations).

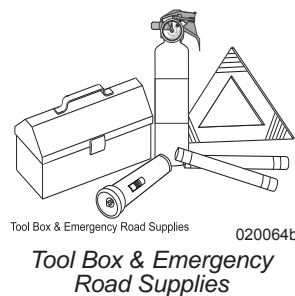

- ◆ Hand tools, a 12 Volt DC test light, a 120 Volt AC polarity tester, battery hydrometer, an assortment of blade fuses, mini fuses and alternator belt.
- ◆ Potable and non-potable water hoses, a water pressure regulator and various termination connectors for sewage.

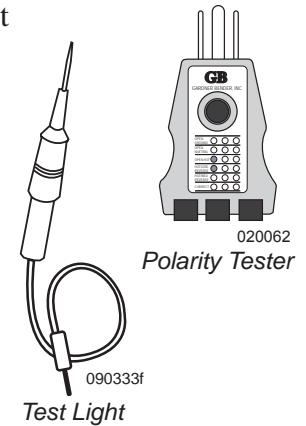

Inspection:

- ◆ Ensure all exterior items are stored or secured (i.e. TV antenna, ceiling vents and windows).
- ◆ Check belts, hoses, battery and engine fluid levels. Inspect the engine, transmission and generator per the OEM manuals.
- ◆ Evenly distribute and secure cargo. Store heavy items near the rear axle and lighter items toward the front to prevent uneven stress and handling problems.
- ◆ Check motorhome tires for accurate pressure and physical condition.
- ◆ Look around, above and under the motorhome for obstruction or leaks. Test all exterior lighting: headlamps, taillights, brake and clearance lights.
- ◆ Store and secure heavier objects in the lower cabinets to maintain a low center of gravity for sway reduction.

- ◆ Secure loose items to prevent weight shifts.
- ◆ Store lighter items in the overhead cabinets.
- ◆ Close and secure all cabinet doors and drawers, shower and pocket doors.
- ◆ Turn off interior lighting.
- ◆ Adjust exterior mirrors and check dash gauges for proper operation.

Shower Door
must be
latched
when vehicle
is in motion.
03005039

INFORMATION


For chassis maintenance details refer to the chassis section.

CAUTION

Open the compartment doors slowly after a trip as cargo may shift during travel.

WARNING

To avoid injury, DO NOT place hands or fingers near the edges of the compartment door when opening or closing. Always use the latch handle. Apply pressure with the other hand just above the latch handle.

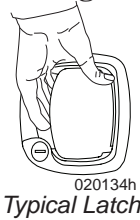

020134h
Typical Latch

TIPS


Multi-purpose items, versatile clothing and periodic removal of unused cargo will streamline cargo storage.

HITCH


Using the Rear Receiver

When using the rear hitch receiver, remember that the motorhome is intended for towing light loads and is primarily designed as a recreational vehicle. Safety and durability of

the hitch receiver requires proper use. Avoid excessive towing loads or other misuse of the receiver. Towing will affect fuel economy.

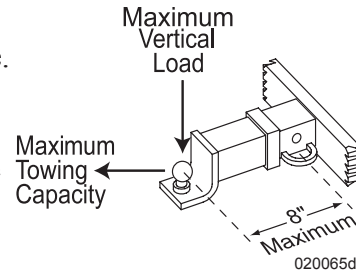

Weight pushing down on the rear hitch (tongue weight) must not exceed 10% of maximum tow capacity. It is recommended to weigh the motorhome when fully loaded to ensure proper weight distribution of the GCVW (Gross Combined Vehicle Weight).



MONACO
COACH CORPORATION

Coburg, Oregon
Bend, Oregon
Wakarusa, Indiana
Elkhart, Indiana

Do Not Cut, Weld or Modify

Do Not Exceed Vehicle Ratings

| | |
|-------------------------|----------------------------|
| Maximum Towing Capacity | 10,000 lbs. (4,536 Kg.) |
| Maximum vertical Load | 1,000 Lbs. (454 Kg.) |

Any Towed Vehicle or Trailer Over 1000 lbs. (450 kg) Should Have Separate Functioning Brake System

Refer To Owner's manual For Additional Towing Guidelines

020144e

When weighing the motorhome, add all passenger weight to the GCVW total. The motorhome fully loaded, including fresh water, propane and any vehicle or trailer towed, must not exceed the GCWR (Gross Combined Weight Rating).

WARNING

Most States and Canadian provinces require trailers and/or towed vehicles to have adequate auxiliary brakes. Failure to comply with these State and Canadian province requirements may result in fines and/or pose a safety hazard, which may result in an accident.

WARNING


DO NOT tow a trailer or vehicle that exceeds the rated capacity of the hitch receiver. Overloading the hitch receiver can cause unusual handling characteristics and overstress the hitch receiver and chassis. It could also void the warranty. If there are any questions, call customer support.

Ball Mount:


Ball mounts come in various configurations and weight limitations. There are three things to consider when selecting a ball mount: weight rating, pin to ball center length and rise/drop. The weight rating of the ball mount, tongue weight and tow weight must meet or exceed the total load weight.

Pin to ball center should not exceed 8". Ball mounts of longer length will significantly reduce the weight rating of the hitch receiver. Observe weight reduction percentages that may be listed on ball mounts longer than 8".


Selecting how much rise or drop a ball mount will need is relative to hitch receiver height and height of the towed load with respect to the type of towing equipment between the motorhome and towed load.

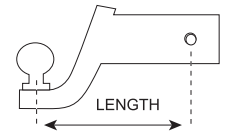

Distance from the center of the hitch ball hole to the center of the pin hole.



Distance from the shank to the top of the hitch ball platform.

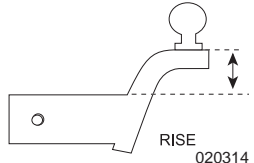

Distance from the top of the shank to the top of the hitch ball platform.

Weight Distributing Hitches:

A weight distributing hitch uses spring bars of spring steel to compensate for lack of adequate rear suspension of the tow vehicle. This type of hitch is generally used for towing heavier loads as tongue weight and gross tow weight increases. The spring bars attach to the hitch head assembly and the trailer frame.

Hitch Ball:

The hitch ball is what the trailer attaches to. A hitch ball is available in three common diameters, 1-7/8", 2" and 2-5/16". The larger the diameter of the hitch ball, the higher the weight rating. The diameter of the hitch ball shank also factors into weight rating. Match shank diameter with the hole in the ball mount or weight distributing head. Shank clearance should not exceed 1/16". There should be at least two additional threads extending past the nut when the hitch ball is secure.

Safety Chains:

Safety chains are required by law when towing any load. The chains and any fasteners used to attach the chains to the hitch receiver must be rated for the load being towed. Attach chains so they crisscross under the towing equipment. Allow just enough slack in the chains to make sharp corners. Too much slack will allow the chains to drag on the road surface. If towed load should become uncoupled from the hitch ball, the towing equipment will be cradled by the safety chains. If the towed load does uncouple, **DO NOT** attempt to make a sudden stop and exacerbate the situation. Apply the brakes with gentle, steady pressure. Pull over to the side of road at a safe location.

Tow Capacity and Class Ratings:

Several components may comprise a tow hitch system. The weight rating of individual components that are part of the towing system must be greater than the gross weight of the load being towed.

Components are classified into weight groups to help define weight capacity of towing equipment. Maximum tow capacity is limited to the component with the lowest weight rating in the tow hitch system.

Example: a ball mount may have a weight rating of 5,000 lbs. but the hitch ball is rated 3,500 lbs. Maximum tow capacity is reduced to 3,500 lbs. Many times a component will have a Class weight rating. These groups are shown in chart:

WARNING

Be sure the weight ratings of the ball mount, tow ball and safety chains are equal to or greater than the load. The use of an extension to the receiver or extended ball mount will significantly reduce hitch receiver weight ratings. Modifications to the hitch receiver, or use of the hitch receiver other than intended, can void the warranty of the hitch receiver, chassis or both.



| | CLASS I | CLASS II | CLASS III | CLASS IV | CLASS V |
|----------------------------------|------------------------|---------------------------|------------------------|-------------------------|-------------------------|
| Weight Carrying Hitch | TW - Up to 200 lbs. | WC TW - Up to 350 lbs. | TW - Up to 500 lbs. | TW - Up to 750 lbs. | TW - Up to 1,200 lbs. |
| | GTW - Up to 2,000 lbs. | WC GTW - Up to 3,500 lbs. | GTW - Up to 5,000 lbs. | GTW - Up to 7,500 lbs. | GTW - Up to 12,000 lbs. |
| Weight Distributing Hitch | --- | --- | --- | TW - Up to 1,200 lbs. | TW - Up to 1,400 lbs. |
| | --- | --- | --- | GTW - Up to 12,000 lbs. | GTW - Up to 14,000 lbs. |

- ◆ **GTW** = Gross Trailer Weight. Weight of trailer fully loaded.
- ◆ **TW** = Tongue Weight. Weight pushing down on Tow Ball.
- ◆ **WC** = Weight Carrying. Weight carrying capacity of the Ball Mount.
- ◆ **WD** = Weight Distributing. Weight carrying capacity of a weight distributing hitch.

Calculating Tow Capacity:


Several variables must be reviewed and calculated to properly determine towing capacity. Limiting factors include GCWR (Gross Combination Weight Rating), GAWR (Gross Axle Weight Rating), hitch receiver weight rating and the weight rating of each piece of towing equipment. One or some of these variables will limit tow capacity.

Example: The tow vehicle has a GCWR of 35,000 lbs. The tow vehicle in a fully loaded, ready for travel condition, weighs 29,500 lbs. The hitch receiver is rated at 700 lbs. tongue, 7000 lbs. tow. The load being towed weighs 4,200 lbs. with a tongue weight of 400 lbs. However, the hitch ball is rated at 3,500 lbs. In this case tow capacity is limited to 3,500 lbs. due to the rating of the hitch ball, even though the rest of the towing equipment, hitch receiver and vehicle GCWR are within specifications.

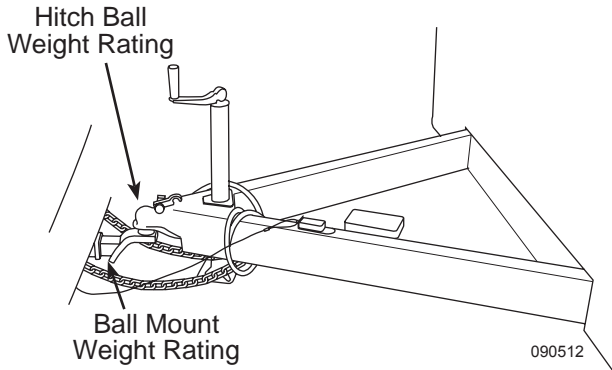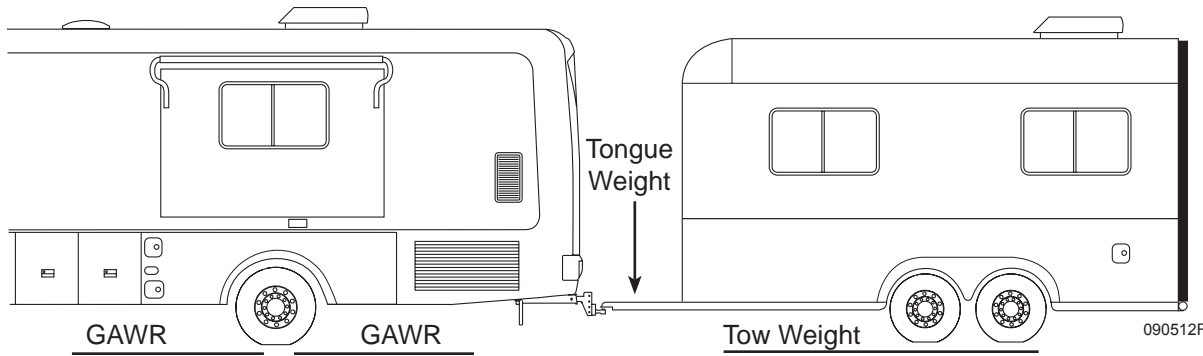

It is possible to be within the GCWR but exceed the GAWR. When tongue weight is applied, mechanical advantage increases with distance (lever) from the hitch ball to the drive axle. The drive axle now becomes a pivot point (fulcrum). As tongue weight increases (effort), weight on the drive axle also increases (fulcrum) while weight on the front axle decreases (load) as weight is displaced from the front axle.

It may be necessary to weigh both the tow vehicle and towed load as an assembly to ensure the GAWR is not exceeded.

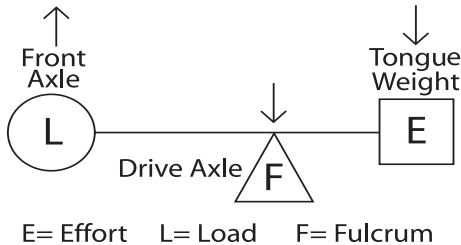

It is also possible to be within the rating of the hitch receiver and yet exceed the GCWR.

Due to changes in weight, the motorhome must be weighed in a loaded, ready for travel condition that includes passengers, cargo and liquids. Subtract the weight of the motorhome in a loaded, ready to travel condition from the GCWR to determine tow capacity. Whether towing a vehicle or trailer, the load being towed must be weighed to ensure the towed weight, when added to the tow vehicle, will not exceed the GCWR and the weight ratings of each tow system component are equal to or greater than the load being towed.

WARNING

The motorhome and towed load must be weighed after they are loaded for travel to determine if actual weights are within towing specification. Each component of the towing system must be rated equal to or greater than the load being towed. DO NOT exceed the Gross Combination Weight Rating.

Taillight Configuration:


Taillights come in different configurations referred to as a 2-wire or 3-wire configuration. A 2-wire configuration has all red lens. A 3-wire configuration usually has red and amber lens. Amber is used for turn signals only and red for taillight and brake light. These systems are electrically different. Whenever hooking a 2-wire system to a 3-wire system, or vice versa, a converter box must be installed for correct taillight function. A taillight converter is available from auto and RV supply stores. **DO NOT** attempt to wire a tow plug connector if unfamiliar with these systems. A trained technician will install the proper converter so the taillights and turn signals work correctly on the motorhome and towed vehicle or trailer when the tow plug connection is made.

Tow Plug Connection

The motorhome is pre-wired from the factory with an electrical connection for towing. The connection is located on the rear cap, near the hitch receiver. Convoluted tubing protects the tow harness wires. Current draw should not exceed ten amps for each designated light circuit. Within the electrical connection is a positive terminal for use when towing a trailer equipped with a battery. The positive terminal maintains the charge of the trailer battery.

| Towing Weight Checklist | | | | |
|-------------------------|-----------------------|------------------------|-----|----|
| Towed Load | (Tongue Weight) _____ | (Overall) _____ | Yes | No |
| Towing Equipment | (Ball Mount) _____ | (Hitch Ball) _____ | Yes | No |
| Hitch Receiver | (Tongue) _____ | (Tow) _____ | Yes | No |
| GAWR | (Rated) _____ | (After Hitching) _____ | Yes | No |
| GCWR | (Rated) _____ | (After Hitching) _____ | Yes | No |

Insert Weight Ratings: Check Yes or No if within specifications.

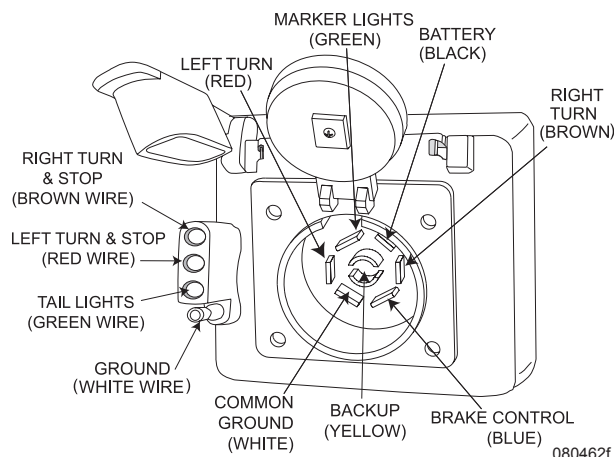

When preparing a tow plug connection, strip the wires 3/8". Twist the wire strands and place under the clip and secure the screw. Make sure there are no loose strands of wire that could short against the case or other terminals. **DO NOT** accidentally mirror image the trailer connection.

CAUTION

Positive terminal connection of the tow plug remains live at all times. When towing a trailer equipped with a battery, unplug the electrical tow connection when parked. Failure to unplug the tow connection may result in discharged chassis batteries.

To Tow Car or Trailer:



- ◆ Connect a tow car or trailer to the motorhome with safety chains rated for the weight being towed.
- ◆ Make the electrical connection and perform a light check before starting a trip and at each rest stop.
- ◆ Check the tires frequently. Flat tires on a towed vehicle cannot be detected from the motorhome while driving. A flat tire is a safety hazard and will cause extensive damage.

REAR VISION SYSTEM

The motorhome can be equipped with either a rear camera, or an optional three camera vision system. The rear vision system consists of a camera with a microphone both located at the rear of the motorhome. The microphone aids in communication while the camera is designed to provide the driver with a rear view when backing up. The rear camera is adjustable up and down and is controlled by the driver.

On the optional three camera system, side cameras are located at the front of the motorhome directly above the front wheels and are not adjustable. This system provides the driver with a rear view as well as roadside and curbside views of the motorhome and a microphone for audio communication.

The system may be used while driving in forward, reverse or when parked.

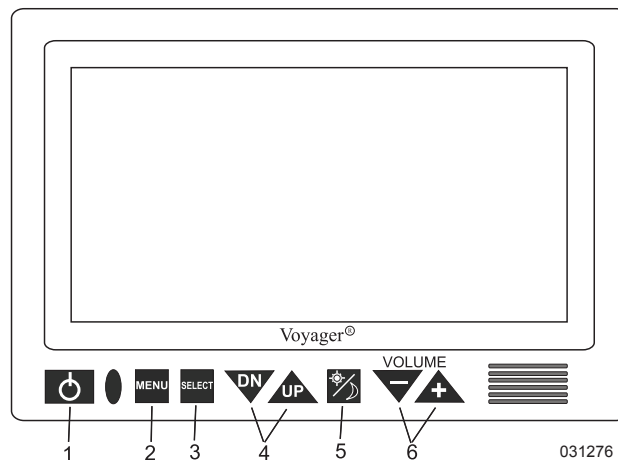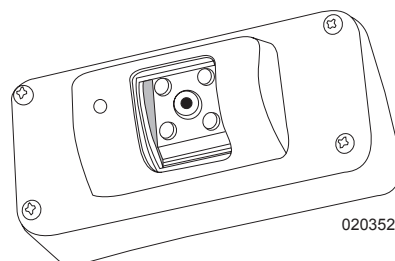

Features:

- 1. POWER BUTTON:** Press this button to turn the unit ON or OFF. Turning the unit ON will allow continuous operation of the rear vision system when ignition key is on.
- 2. MENU:** Press to enter/exit the main menu mode. Functions that can be adjusted include brightness, contrast, color, tint, input setup, auto-scan, split screen, distance markers, and advanced menu. Use the Down (DN) or Up button to navigate to a function. Press select button to choose a function. Use the + and - buttons to change values.
- 3. SELECT:** Pressing the "select" button sequences source input modes. Press the "Select" button to repeatedly change camera views, if equipped with the optional side camera. The monitor will display each input channel separately, and then will display a split-screen, tri-screen and quad-screen view. These multi-screen views can't be adjusted to include different inputs. In addition, the Select button is used to select a highlighted function or option setting.
- 4. UP/DOWN:** Adjusts rear camera position upward and downward. In addition, while in the Menu mode, the Up/Down button navigates through the available menu options. Optional side cameras are not adjustable.

5. DAY/NIGHT: Press this button to change setting for daylight, nighttime or auto driving conditions.

6. VOLUME -/+: Pressing will decrease or increase speaker volume. In addition, while in the Menu mode, the “-” and “+” button adjusts settings and navigates through the available menu options.

NOTE

With engine running, the rear camera will automatically display when the gear selector is placed in reverse.

NOTE

If equipped with the optional side cameras, the system will automatically change views, left or right, with turn signal activation. When the hazard light button is activated the left camera will display.

INFORMATION

For more information, consult the OEM manual or visit the manufacturer’s website at www.asaelectronics.com.

BACKING UP A MOTORHOME


Whether a long time owner of recreational vehicles, or just starting out, backing up can be a challenge. Following some simple guidelines may help to reduce that challenge. When backing up, the driver (pilot) should be comfortable using the mirrors, the back-up camera and co-pilot directions (ground guide) for assistance. Practice backing up with co-pilot guidance in a large, unobstructed parking lot. Backing up is a team effort.

The backing process should begin while the motorhome is in forward motion. Maneuver the motorhome to align with the chosen site. Aligning the motorhome with the site after the backing process begins may require more than one attempt. When the motorhome is properly aligned with the site, the parking area will be visible in both mirrors. Use road markings as reference points when possible.

When pull-through sites are not available, pick a solid, level site on the left side for a better field of vision using the roadside mirror. If the site is on the right, use the curbside mirror for backing up, but stay aware of blind spots. Get out and walk the area prior to backing in. Look for potential hazards or obstacles that may damage the motorhome. If the site is satisfactory, prepare to back in carefully. Have the co-pilot provide guidance using the five hand signals. Use of walkie-talkies will also aid in guidance.

The co-pilot will perform just as important a job as the driver. When guiding the driver, the co-pilot should be located safely at the left rear corner of the motorhome, facing forward, while remaining visible in the roadside mirror at all times. The co-pilot should make a conscious effort to maintain sight of the driver through the roadside mirror as the motorhome maneuvers. If the driver loses sight of the co-pilot, stop the backing up process until the co-pilot returns to view. To avoid mishaps, the co-pilot should be focused only on what the driver is doing, with brief observation moments. If necessary, stop the backing up process to have co-pilot inspect other areas or angles of concern.

The driver should receive directions only from the co-pilot. When the co-pilot is guiding the driver, only five clearly defined signals

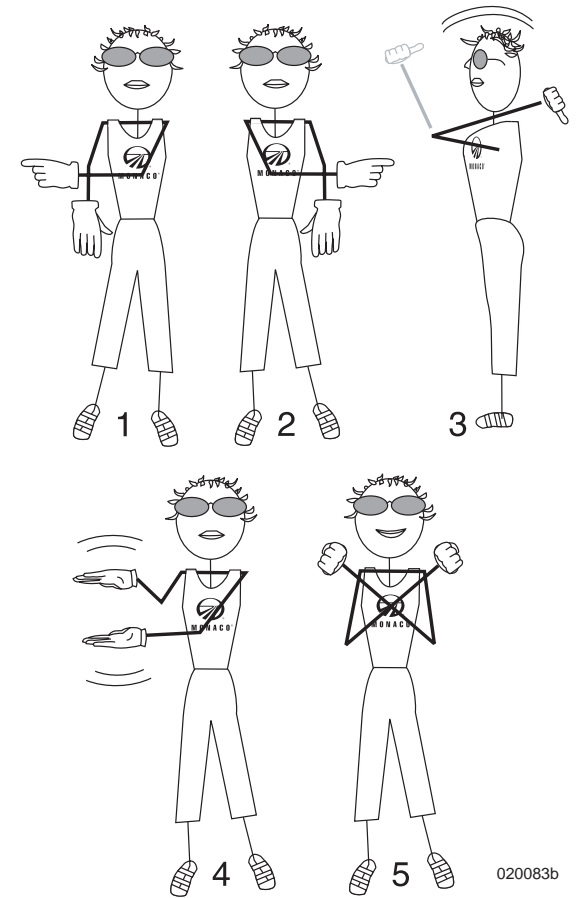

should be used, with only one signal given at a time. Flailing arms with indecisive signals only confuse the driver. Signals should be given with purpose and confidence. Directional signals are directing travel of the rear of the motorhome.

If the desired direction is left, the co-pilot points left. *For example:* The co-pilot will use his/her right arm and forefinger pointing distinctly left with arm and finger held on a horizontal plane, indicating desired direction of travel of the rear of the motorhome. The directional signal given should remain steady until the desired movement is complete.

Five Directional Signals:

1. Co-pilot uses left hand and arm held horizontal, with forefinger pointing right, to direct rear of motorhome to the right.
2. Co-pilot uses right hand and arm held horizontal, with forefinger pointing left, to direct rear of motorhome to the left.
3. Co-pilot uses both arms and hands parallel with thumbs pointing up and to rear in a waving vertical motion. This signals driver to maintain a straight back direction.
4. Co-pilot holds arms horizontally, hands open with palms facing one another. Start with a wide separation, gradually closing distance of hands in a rate appropriate to vehicle speed to indicate amount of distance to the stop point.
5. Closed fists and crossed arms indicate STOP.

Backing Up Trailers:

Towed vehicles using a tow bar or tow dolly have more than one pivot point and are not suitable for backing. Attempting to back up the motorhome while connected to a tow bar or tow dolly can jack-knife the tow device causing the wheels of the towed vehicle to move in a forward “sideways” motion that will cause irreparable and expensive damage. If necessary, disconnect the tow vehicle to avoid a backing up situation.

Trailers have one pivot point and may be backed up. The same rules for backing a motorhome can be applied to backing a trailer. When preparing to back the trailer into a space, maneuver the motorhome sweeping

wide. Turn back to the opposite direction to maneuver the trailer into the space. Keep the bottom of the steering wheel in the desired direction of travel for the trailer. *For example:* If the desired direction of the trailer is left, rotate the bottom of the steering wheel left.


If the trailer moves in an undesired direction, pull forward just far enough to align the trailer with the space. The co-pilot should stand safely at the left rear corner of the trailer within view of the driver in the roadside mirror, using the five hand signals for guidance.

CAUTION

Tow bars or car dollies are generally made to travel in a forward direction only. Most towing equipment of this type is not designed for backing. DO NOT attempt short back up distances with a tow bar or tow dolly. Damage to the motorhome, vehicle or towing device will result.

SET-UP PROCEDURES

If the site for the motorhome provides full hook-ups, use this quick reference as a guide only. This information is an overview on hooking up the utilities and preparing appliances for use. Specific information on slide room, awning and leveling system operations is discussed in detail in other sections.

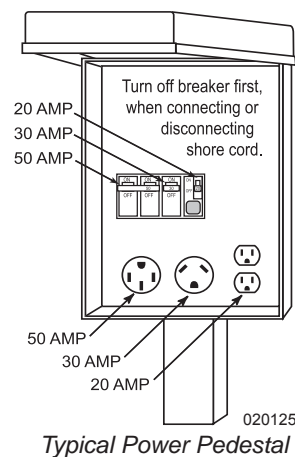

1. Level the motorhome:

- ◆ Follow the procedures and guidelines for “Leveling the Motorhome” in Section 10. When using the hydraulic jacks confirm that the parking surface will accommodate the weight placed on the jacks.

2. Hook up utilities and prepare appliances for use:

- ◆ Open the propane tank primary shut-off valve.
- ◆ Prepare the shore cord for connection. Uncoil and inspect the cord. Perform necessary cord maintenance. Install proper electrical adapters if anything other than 50 Amp service is provided. Operate electrical appliances in sequence when hooked to limited shore power service. Turn shore power circuit breaker OFF prior to plugging in the shore cord.
- ◆ Begin appliance operation on propane, if hooked to less than 50 Amp service, for the first 60 minutes. Switch the refrigerator operation to propane, start the water heater and furnace (if needed). This will allow time for the inverter to stabilize the battery charging.

NOTE

If shore power is less than what is rated for the motorhome (50 Amp), electrical adapters will be required and power consumption must be reduced to avoid tripping the shore power breaker.

CAUTION

If shore power service is limited to 15 or 20 Amps, use of light duty extension cords and electrical adapters will create a voltage loss through the cord and at each electrical connection. Line voltage loss and the resistance at each electrical connection can be a hazardous combination. Damage to sensitive electronic equipment may result.


CAUTION

DO NOT remove cover from the shore power supply to troubleshoot electricity to the motorhome. Serious personal injury or death may occur. If there is no power to the motorhome, inform the park manager. It is the park manager's responsibility to fix any problems with the shore hook-up at the site.

NOTE


To avoid shore power overload when hooked to 30 Amp service, determine appliances current load prior to turning on appliances or using interior outlets.

- ◆ If cable service is provided, hook-up a 75 Ohm RG59 or RG6 cable to the cable connection.
- ◆ An exterior phone connection port is provided. Phone utility outlets are placed throughout the motorhome, including a phone line to be attached to a satellite receiver for Pay-Per-View movies and events.

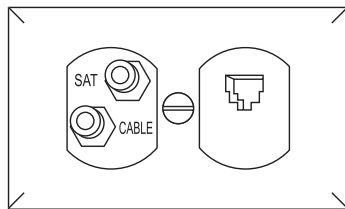

Satellite, Cable and Phone Connections. Located Roadside Rear.

- ◆ Hook the potable water hose to the city water connection in the water service center.
- ◆ Hook-up the sewer hose. Sewer drain pipe diameters are generally either three or four inches. Proper sewer hose adapters will ensure against leaks or spillage. With the sewer hose properly connected open the grey water valve (liquid waste drain). The black water valve (solid waste drain) remains closed until the tank is full or until time of departure.

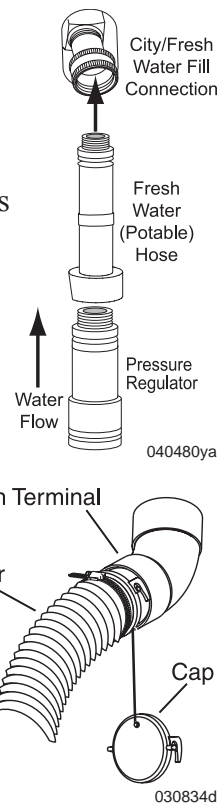**DRY CAMPING**

Below are suggestions to follow when staying at a location that does not have electrical, water or sewage hook ups. Plan ahead and conserve resources.

Before arriving at the site, ensure batteries are fully charged and properly maintained (see Section 8 in Batteries - House under "Battery Maintenance"), the fresh water tank and water heater are full and waste holding tanks are empty.

To conserve water and fuel:

- ◆ Operate the refrigerator on propane. Plan what is needed from the refrigerator prior to opening. Conserve propane by cooking over a campfire.

- ◆ Turn the water heater on about twenty minutes prior to use. Once heated, water will remain hot for several hours. Turn the water heater off when not in use.
- ◆ Set the thermostat temperature slightly lower than desired to prevent frequent cycling of the heating system.
- ◆ Know the tank capacities and routinely check fuel levels, especially during cold weather.
- ◆ Use ventilation fans or open windows to reduce roof air conditioner use.
- ◆ Frequently monitor water consumption. Limit shower usage; turn water off when soaping down and back on to rinse. When water conservation is critical, take a sponge bath or use campground shower facilities if available. **DO NOT** fill the sink with water to wash only a few dishes. Use disposable dishes when possible.
- ◆ Evacuate waste holding tanks prior to filling fresh water tank.

To conserve battery power:

- ◆ **DO NOT** allow batteries to fully discharge before operating the generator. Run the generator twice a day, morning and afternoon, to charge the batteries.
- ◆ When not using the inverter for 120 Volts AC, turn it OFF.

- ◆ Turn OFF interior 12 Volt DC power whenever possible. Refrigerator, battery charging and inverter operation will not be affected. Turn OFF small battery operated items i.e., porch, exterior step, generator and engine compartment lights, etc. One light left on can quickly reduce battery reserves. Turn OFF the antenna boost when not watching TV.

| Typical Current Draw | |
|---------------------------|----------|
| Battery Cut-out | 1.5 Amps |
| 13" TV | 1.7 Amps |
| Rope Light (10 ft.) | 1.3 Amps |
| Porch Light | 2.0 Amps |
| Fluorescent Bulb (1) | 2.1 Amps |
| Halogen Ceiling Light (1) | .09 Amps |


- ◆ Keep a working flashlight handy for night trips through the campsite and inside motorhome. When interior lighting is desired, use one light in a central location such as the vanity. Disconnect all but one or two bulbs.
- ◆ If equipped with a solar panel, keep the panel clean for optimum performance.
- ◆ Turn on the water pump only when using water.
- ◆ If weather does not permit or no outdoor table is available, eat at the dinette table by candlelight.
- ◆ Operate the generator when using the convection microwave oven.

BREAKING CAMP

Preparing the motorhome for travel will require several small tasks. Properly securing and storing items will help to prevent them from getting lost or damaged. Below is a checklist to reference when preparing to break camp.

Outside Checklist:

- ◆ Disconnect the cable TV and lower the TV antenna.
- ◆ Disconnect and store the telephone line.
- ◆ Retract awnings and secure them for travel.
- ◆ Close the primary propane shut-off tank valve.
- ◆ Connect the sewer hose.
- ◆ Drain and flush holding tanks. Start by closing the grey water valve. Run enough cold water down sink and shower drains to fill the grey tank at least 50%. Use caution to avoid overflowing or flooding the grey tank. Open the black tank valve and allow adequate time for black tank to drain. If applicable, connect a non-potable water hose to the tank flush fitting and flush the black tank system. Close black tank valve and open grey water valve. Water from the grey tank will help to flush the drain hose. Once evacuated, close grey water valve. Disconnect the sewer hose and flush that hose with clean water from a non-potable hose. Store the hose. Replace the sewer cap.

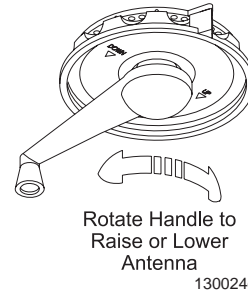

- ◆ Fill fresh water tank, then disconnect fresh water hose from the source. Store hose with end cap in place. If applicable, remove the hose protection water pressure regulator from the city water faucet.
- ◆ Turn shore power breaker off and disconnect shore line. Wind up and store shore cord. Secure door.
- ◆ Check all tire pressures.
- ◆ Secure all compartment doors.
- ◆ Inspect tires and wheels.
- ◆ Check for fluid leaks under and around the motorhome.



Screw the ends of the hose together before storage to prevent leakage and to prevent dust and insects from entering the hose.

Engine Checklist:

- ◆ Inspect the engine, transmission and the engine compartment for fluid leaks.
- ◆ Inspect the area under the motorhome for fluid leaks or puddles.
- ◆ Check all fluid levels: oil, antifreeze, transmission, hydraulic fluid and washer fluid.
- ◆ Inspect belts and hoses for wear.
- ◆ Inspect wiring for loose, frayed or corroded connections.
- ◆ Start engine and listen for unusual noise.
- ◆ Inspect gauges and controls for proper operation.

Interior Checklist:

- ◆ If applicable, retract leveling jacks allowing the air suspension to obtain proper ride height.

- ◆ Clear the slide room path, clean the floor and move the driver seat forward. After confirming compartment doors are closed, retract the slide room.

CAUTION


To extend/retract the slide-out room, the ignition must be OFF, park brake set, jacks retracted and the motorhome supported by the air suspension (air bags). DO NOT operate the slide room with the air suspension (air bags) deflated or when supported by hydraulic jacks. Damage to the slide room, the mechanism, or seals can occur. Confirm the house batteries are fully charged.

- ◆ Secure and fasten all interior doors. Lock the shower door.
- ◆ Close roof vents and windows.
- ◆ Secure all loose, heavy or sharp objects in case of a sudden stop.
- ◆ Close all cabinet doors and drawers.
- ◆ Turn off interior lights.
- ◆ Turn off the water pump.
- ◆ Check the fuel level gauge and all other dash gauges for operation and correct level indications.

Departure Checklist:

- ◆ Check items in storage compartments to ensure shifting or damage of items will not occur.
- ◆ Look around, above and under the motorhome for obstructions. Check for debris stuck between the rear dual tires.
- ◆ Exterior compartment doors should be closed and locked.
- ◆ Check operation of all exterior lights, headlamp, taillamp, brake and clearance lights.

- ◆ Secure all awning and travel locks.
- ◆ Ensure jack pad is clear of debris when retracting hydraulic jacks. Loose rocks, gravel and debris can be thrown from the jack pad and possibly damage the tow car.
- ◆ Secure and lock the entry door for travel.
- ◆ Pull forward out of the campsite. Ensure the site is clean and no items are forgotten.

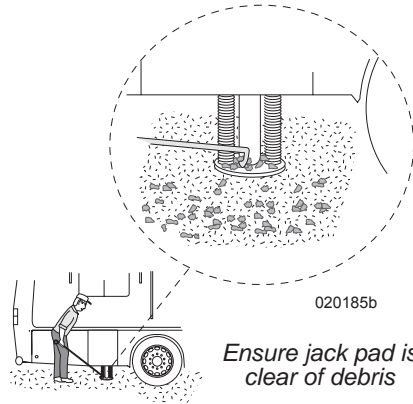

EMERGENCY ROADSIDE PROCEDURES

If an emergency situation occurs use the appropriate braking technique and pull off the roadway a safe distance from traffic (if possible). Set the parking brake and turn on the hazard warning flashers, especially when parked alongside traffic lanes. In the event of an emergency stop due to a mechanical breakdown or other motorhome related problems, contact the customer support or an emergency service provider.



Road flares or reflective warning signs should be displayed if the motorhome is on the side of the road for any length of time. Guidelines for placing warning triangles depend upon road characteristics and visibility. For example: The standard placement is 10, 100 and 200 ft. from the rear of the motorhome when on a divided highway or one-way road. On a two-way road, with traffic traveling both directions, the same placement is required at the front of the motorhome. Roads with curves and hills may require the placement of the last/furthest triangle to be 500 ft. behind the motorhome in order to safely warn approaching traffic.

In Case of Flat Tire

In the event of a flat tire, it is recommended to call for roadside assistance. The size and weight of the motorhome and its tires require proper equipment to change the tire. A professional service technician will have the equipment and training needed to repair or replace the tire.

| EMERGENCY SERVICE PROVIDER | | |
|-----------------------------------|------------------------------------|------------------|
| Equipment | Provider | Emergency Number |
| Motorhome: Monaco Coach | Monaco Customer Support | 1-877-466-6226 |
| Chassis: Roadmaster | Roadmaster | 1-877-466-6226 |
| Engine: Cummins | Cummins Customer Assistance Center | 1-800-343-7357 |
| Transmission | Allison Transmission | 1-800-524-2303 |
| Towing | Owner's Advantage Program | 1-877-882-0614 |
| Tires: Goodyear | Goodyear | 1-877-484-7376 |

In the case of sudden tire failure, avoid heavy braking. Hold the steering wheel firmly and gradually decrease speed. Slowly move to a safe off-road place, which should be a firm level spot. Turn the ignition OFF and turn the hazard flasher system ON. Save the old tire for possible warranty coverage.

WARNING


DO NOT crawl under the motorhome for any reason if a wheel has been removed. Any number of circumstances could cause the motorhome to suddenly fall, resulting in severe injury or death.

Dead Chassis Battery

A weak or discharged battery will not supply the amount of CCA (Cold Cranking Amps) necessary to initiate the required voltage to start the engine. If the engine fails to crank, or cranks slowly due to a weak chassis battery, there are electrical back-up systems in place that may increase chassis battery voltage.

Battery Boost Switch:

The Battery Boost switch engages a heavy-duty solenoid to electrically connect the house batteries to the engine battery in the event the engine will not crank or cranks slowly. The solenoid is designed for short-term high current intermittent use. Engaging the boost solenoid for an extended period will damage the solenoid.

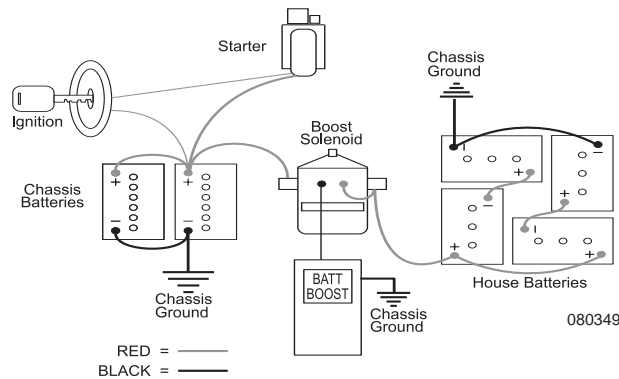

Jump Starting Using the Battery Boost Switch:

- ◆ With the ignition key OFF, press and hold the Battery Boost switch for ten seconds. After ten seconds, continue to hold the switch down and turn on the ignition.
- ◆ If the engine fails to crank or does not crank fast enough, discontinue the attempt. Continued attempts will only diminish any remaining surface charge in the chassis battery and end future alternative attempts.
- ◆ Next, start the generator. This may require using the Battery Boost switch for the generator to start from the engine battery. Once the generator is operating, the electrical combination of the generator and the inverter will charge the batteries.
- ◆ Allow the generator to run approximately ½ hour before attempting to start the engine.




- ◆ After ½ hour of generator operation, leave the generator on and hold down the Battery Boost switch for one minute. Release the switch for one minute, then press the switch again for one minute. Alternate this cycle three to five times.
- ◆ Next, hold the switch down and turn the ignition ON. The battery voltage gauge should indicate at least 12 Volts. If voltage is sufficient with the Boost switch held down, try to start the engine.
- ◆ If the engine fails to crank, or fails to crank quickly, the chassis battery may be depleted and the motorhome will require jump-starting or an external charger hooked to the chassis battery.

Jump Starting Using an External Source:

When using jumper cables to start the engine, the cables must connect in a parallel configuration. That is, positive (+) to positive and negative battery (-) to negative chassis (-). Always connect the positive (+) before connecting the negative (-). To prevent arcing when disconnecting the cables; disconnect the negative (-) before disconnecting the positive (+).

WARNING

Always ventilate the battery compartment prior to any work or service to the batteries. Gas emitted by the batteries can explode when exposed to smoking material, flames, sparks or other sources of ignition, resulting in injury or vehicle damage. Batteries contain sulfuric acid that can burn skin, eyes and clothing. DO NOT connect the end of the second cable to the negative (-) terminal of the battery to be jumped. Connect only to the chassis, away from the battery.

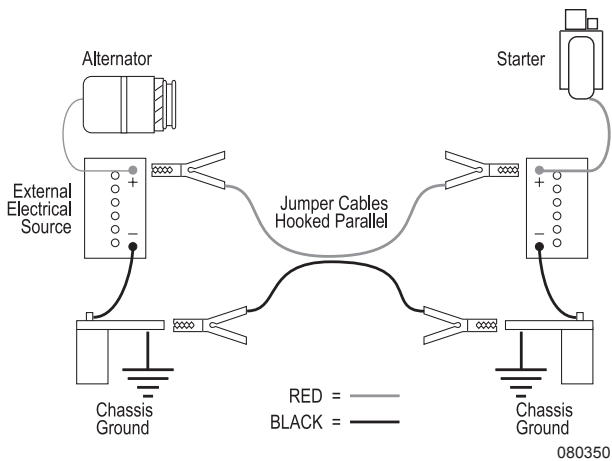**CAUTION**

A large amount of electrical current is required to jump-start an engine. The sizes of the battery, alternator and jumper cables supplying the “jump” are current limiting factors. Wait a sufficient amount of time for a surface charge to build before attempting to start the engine. Voltage fluctuations that occur during a jump-start procedure can damage sensitive electronic equipment and charging systems. If a jump-start is necessary, it is recommended to call Roadside Assistance. They will have the equipment necessary to jump-start the motorhome.

CAUTION


DO NOT use the towed vehicle for jump-starting. The charging system of the towed vehicle does not supply the amperage necessary to jump-start the motorhome. Voltage sensitive equipment on the towed vehicle can be damaged and render the towed vehicle disabled.

- ◆ When using an external electrical source to connect to the chassis battery, turn the main battery disconnect switches OFF prior to hooking up the jumper cables.
- ◆ Hook up the cables then wait several minutes to allow a surface charge to build in the chassis battery before attempting to start the engine.
- ◆ Turn ON the battery disconnect switches and attempt to start the engine. **DO NOT** crank the engine more than a few seconds.
- ◆ After the engine has started, disconnect the cables. Disconnect the negative (-) cables before disconnecting the positive (+) cables to prevent arcing.
- ◆ If the engine does not crank, or cranks slowly, **DO NOT** continue. Extensive damage, fire or injury can occur. Obtain help from a qualified technician.

TOWING PROCEDURES


If calling a towing company for service, it is recommended to use a lowboy/landall type of trailer. If a tow truck is used it needs to have a support arm that goes under the motorhome and secures to the front axle. Inform the tow company of the axle weights and total weight of the motorhome.

Other important information is the length of the motorhome, number of passengers and milepost location. Two tow trucks may be necessary to tow the motorhome and to tow a trailer or tow vehicle if it is not operational.

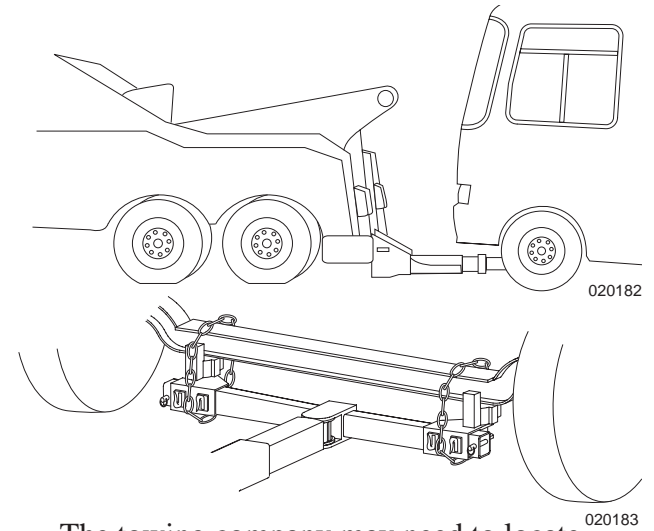


The towing company may need to locate the air nipple to release the air brakes. The air nipple should be used by towing personnel only. Generally, if the motorhome ever needs to be towed, use the following instructions.

- ◆ Secure any loose or protruding parts if the motorhome is damaged.
- ◆ Inspect the points of attachment on a disabled motorhome. If attachment points are damaged, select other attachment points at a substantial frame structural member.
- ◆ **DO NOT** allow anyone to go under a motorhome while it is being lifted by towing equipment unless the disabled motorhome is adequately supported by safety stands.

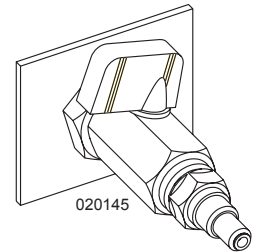

Air Nipple: Located in the front generator compartment.

- ◆ **DO NOT** tow the motorhome from the rear. Towing from the rear will severely overload the front tires and suspension, possibly resulting in tire and/or front suspension failure. Rear frame extensions are not designed to support weight loads imposed by lifting the motorhome from the rear.

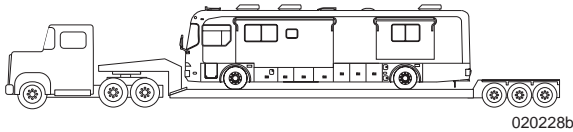


- ◆ If the rear wheels are disabled, place the motorhome on a flat bed trailer, or use a heavy duty dolly under the rear wheels and tow the motorhome from the front.
- ◆ The drive shaft must be removed to prevent damage to the transmission. Secure end caps to prevent losing or contaminating the needle bearings.
- ◆ The mud flap may need to be removed to prevent damage due to limited ground clearance.

WARNING

In case the motorhome requires towing, ensure all precautions are followed. The drive shaft must be disconnected and the mud flap may need to be removed. The manufacturer WILL NOT cover damage to the motorhome caused by a towing company.

Disabling Parking Brake

The park/emergency brakes apply to the drive axle only. The brakes can be manually released if the air system will not build sufficient air pressure to release them. This emergency procedure is to be used by trained technicians or towing personnel to move the motorhome to a safe location or repair facility.

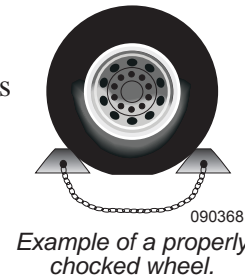

WARNING


Only trained personnel should perform this procedure. Brake chamber spring is under high pressure. Removal of retaining band could result in serious injury or death.

Disabling Brakes:

- ◆ Place wheel chocks firmly against the wheel before performing this procedure.
- ◆ Remove the plug from the center of rear brake chamber on the drive axle.
- ◆ Remove the caging tool from its holder on the brake chamber and insert the tool into hole. Turn clockwise to engage.
- ◆ Screw nut and washer onto caging tool. Use a wrench to tighten the nut, compressing the internal spring to release the brake.
- ◆ Repeat procedure for the other side.

Enabling Brakes:

- ◆ After towing, or when air pressure is again available, loosen the nut and remove the tool. Return the caging tool to its original location and replace the plug.
- ◆ Repeat for the other side.

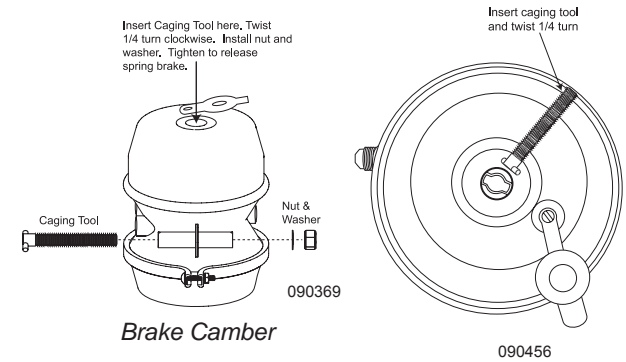

WARNING


Failure to securely chock the wheels can result in the motorhome rolling when the spring brakes are released. Severe injury or death can occur.

TIRES

Maintaining proper tire inflation pressure is one of the most critical aspects of travel. Improper pressure will lead to abnormal wear and/or sudden tire failure. All tire positions must be weighed separately with the motorhome fully loaded to determine proper tire inflation pressure.

If one tire position on the axle is heavier than the other side, inflate both sides according to the heaviest side. This will provide correct air pressure across the axle while cornering. To obtain the maximum wear and best service from tires, it is helpful to understand their components and functions.

Tire Components:

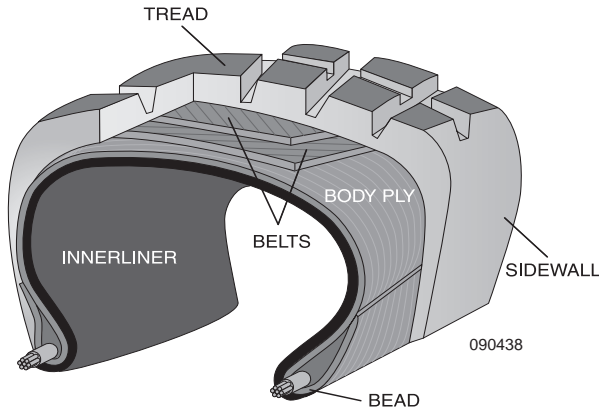

Tread: Provides traction and cornering grip.

Belts: Stabilize and strengthen the tread.

Sidewall: Protects the side of the tire from road and curb damage.

Body Ply: Gives the tire strength and flexibility.

Bead: Assures an air-tight fit with the wheel.

Inner Liner: Keeps air inside the tire.

Importance of Air Pressure

The most important factor in maximizing the life of the tires is maintaining proper inflation. Driving on any tire that does not have the correct inflation pressure for the load of the motorhome is dangerous and may cause premature wear, tire damage and/or loss of control of the motorhome.

An under-inflated tire will build up excessive heat that may go beyond the design limits of the rubber and radial cords and could result in sudden failure. An under-inflated tire will also cause poor motorhome handling, rapid and/or irregular tire wear and an increase in rolling resistance that results in decreased fuel economy.

An over-inflated tire will reduce the tire footprint/contact patch with the road, thus reducing traction, braking capacity and handling of the motorhome. Over-inflation of a tire for the load will result in a harsh ride, uneven tire wear and is susceptible to impact damage. Maintaining correct tire inflation pressure for each loaded wheel position on the motorhome is of the utmost importance and must be a part of regular motorhome maintenance.

WARNING

Driving on a tire that is under-inflated can exceed the design limits of the tire and may damage the sidewall. A damaged sidewall can burst upon inflation resulting in serious damage, injury or death. Aged tires are also susceptible to sidewall damage.

Tire Pressure Inflation Guideline

Federal law requires that the specifications for a tire maximum load rating be molded into the sidewall of the tire. The amount of air pressure to use is dependent on the weight of the motorhome when fully loaded. The tire chart indicates the weights that can be properly supported by varying air pressures. Decreasing air pressure decreases load carrying capacity.

Always comply with the tire manufacturer recommended pressure inflation guidelines. The actual weight of the motorhome can vary significantly depending on how it is loaded. For optimum tire wear, ride and handling always comply with the manufacturer guidelines. A tire inflation chart listing proper inflation pressure for different loads can be found in this section.

GOODYEAR

LOAD/INFLATION INFORMATION FOR RV TIRES

TIRE LOAD LIMITS (LBS) AT VARIOUS COLD INFLATION PRESSURES (PSI) HIGHWAY STEER AND ALL-POSITION TREAD DESIGNS USED IN NORMAL HIGHWAY SERVICE*

| Tire Size | Max Speed Rating (MPH) | Single (S) Dual (D) | Inflation Pressure - PSI | | | | | | | | | | | |
|-------------|------------------------|------------------------|--------------------------|----|----|----|--------------|--------------|--------------|--------------|--------------|--------------|--------------|----------------------------------|
| | | | 70 | 75 | 80 | 85 | 90 | 95 | 100 | 105 | 110 | 115 | 120 | 125 |
| 275/80R22.5 | 75 | S D | | | | | 5500 5080 | 5745 5305 | 5985 5530 | 6225 5750 | 6460 5965 | 6700 6185 | 6930 6400 | 7160(H) 6610(H) |

The motorhome manufacturer is not the author of this chart and makes no representation or warranty concerning the accuracy of the information disclosed by the chart. Monaco is not responsible for the accuracy of the information disclosed or for any errors within the Tire Inflation Chart.

WARNING: DO NOT exceed tire manufacturer's maximum speed rating.

The tires of the motorhome are inflated to pressure(s) appropriate for the actual weight on each axle in the unloaded, shipped condition. When the motorhome is loaded, check and adjust the inflation pressure on each tire as needed. Always inflate tires to the pressure indicated in the tire chart for the load carried by the tire. **DO NOT** overinflate or underinflate the tires.

The Gross Axle Weight Rating (GAWR) of the axles listed on the federal certification label typically located behind the driver's seat on the wall, is the maximum allowable loaded weight on an axle.

When the actual loaded weight of the motorhome and the weight on each axle is unknown, follow the recommended tire inflation pressure(s) listed on the federal certification label. When loading a motorhome never exceed the motorhome Gross Vehicle Weight Rating (GVWR) or the GAWR for each axle.

Contact the tire manufacturer for further information concerning proper tire pressure inflation and other tire issues.

NOTE

The motorhome is equipped with Goodyear 275/80R 22.5 G670 RV Unisteel Radial, Load Range H tires at the time of printing. The motorhome manufacturer will not be responsible for substitution of an incorrect tire size or load range. Verify tire brand, size and load range before obtaining replacement tires.

Understanding the Inflation Table:

The tire size is on the left margin of the table. Determine the Single or Dual inflation reading, denoted with a D or S on the Table. Single is for the front axle. Dual is for the drive axle. On the following chart, find the corresponding psi at the top columns to see the corresponding maximum weight capacity for that psi.

Rated load capacities are listed for individual tires in a Dual or Single position.

WARNING

Every load range has a maximum rating as well as a minimum rating. DO NOT exceed those ratings.

WARNING

DO NOT exceed tire manufacturer maximum speed rating. Consult tire OEM manual.

Inspecting & Pressure

Weigh all tire positions separately and use the tire charts to determine correct tire inflation pressure. All pressures are rated at a cold psi. Cold psi is defined as early in the morning before ambient temperature, sun or heat generated while driving have caused the tire pressure to temporarily increase. Check tire inflation pressure every morning before driving. Use a quality truck tire gauge with an angle airhead to ensure access to the dual wheel positions of the drive axle.

Ensure the valve cap is replaced on the stem after the inflation pressure is checked. Use valve stem caps with a positive seal to prevent air escaping from the valve stem.

If there are extension hoses on the valve stem, make sure they are good quality reinforced stainless steel braid. Attach hoses securely to the outer wheel.

The valve stem cap guarantees the valve core will remain free of dirt and foreign material. Material lodged between the valve core and internal stem can cause slow leaks resulting in tire failure.


Optimum tire performance is achieved at proper inflation pressure for the load carried. **DO NOT** mix tires of different tread patterns, size or construction on the same axle. The difference in traction could cause rear end gear bind and mechanical damage to the drive train.

CAUTION

DO NOT let air out of a hot tire.

Over-inflation can cause:

- ◆ Hard ride.
- ◆ Tire bruising or carcass damage.
- ◆ Rapid tread wear in the center of the tire.

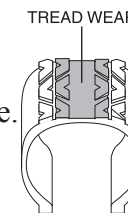


Under-inflation can cause:

- ◆ Tire squeal on turns.
- ◆ Separations.
- ◆ Rapid and uneven wear on the edges of the tread.
- ◆ Circumferential breaks.
- ◆ Tire container may bruise or rupture.
- ◆ Higher risk of road hazard.
- ◆ Tire cord breakage.
- ◆ Loss of casing durability.
- ◆ Excessive tire temperature.
- ◆ High fuel consumption.
- ◆ Reduced handling quality.

Over-inflation wears in center of tire.

TREAD WEAR

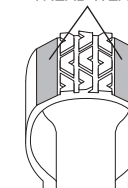

Under-inflation wears on edges of tire.

090440b

WARNING


A slow leak may go unnoticed on one of the dual tires. This can cause the good tire to fail by exceeding the load limit. Tires with damaged sidewalls can burst upon inflation. A flat or nearly flat tire can also generate enough heat from friction to ignite.

Unequal tire pressures on same axle can cause:

- ◆ Uneven braking
- ◆ Swerve upon acceleration
- ◆ Steering lead
- ◆ Torque steer
- ◆ Reduced handling quality

WARNING

For safety purposes, clear the area of people and pets during tire inflation. Inflate tires using a remote inflation device.

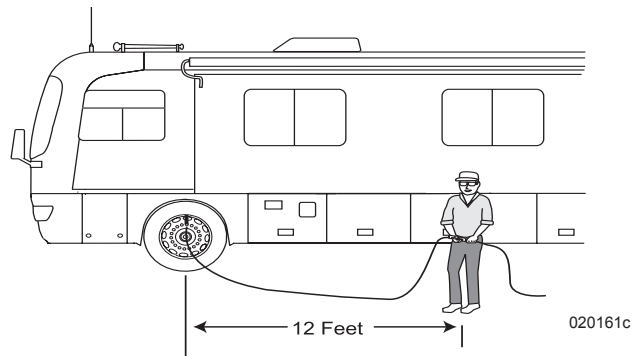**Air Pressure Checklist**

- ◆ When inspecting the tires, confirm the tires are cool before increasing or reducing air pressure. Driving a short distance can heat up tires.

CAUTION

If the motorhome must be driven a distance to get air, check and record the tire pressure first and add the recorded calculation when reaching the pump. It is normal for tires to heat up and the air pressure to increase as driven. **DO NOT** reduce air pressure when tires are hot.

NOTE

Air pressure in a tire goes up (in warm weather) or down (in cold weather) one to two pounds for every 10° F of temperature change.

- ◆ Remove the cap from the valve on one tire.
- ◆ Firmly press a tire gauge onto the valve and record reading.
- ◆ Add air to achieve recommended air pressure.
- ◆ If the tire is over filled, release air by pushing on the metal stem in the center of the valve. Recheck the pressure with the tire gauge.
- ◆ Replace the valve cap.
- ◆ Repeat with each tire.
- ◆ Visually inspect all the tires for nails or other objects that could be embedded or puncture the tire and cause an air leak.
- ◆ Check the sidewalls for gouges, cuts, bulges, or other irregularities.


Tire Support When Leveling

Extreme caution must be taken to ensure the tires are fully supported when placing blocks under the tires. The load on the tire should be evenly distributed on the support block. In the case of dual tires, distribute the load evenly on

blocks for both tires. If not properly supported, the steel cables in the sidewall of the tires may be damaged and could lead to premature fatigue of the sidewall.

CAUTION

Supporting the tires prevents damage to the sidewall of the tires but does not prevent tire roll.

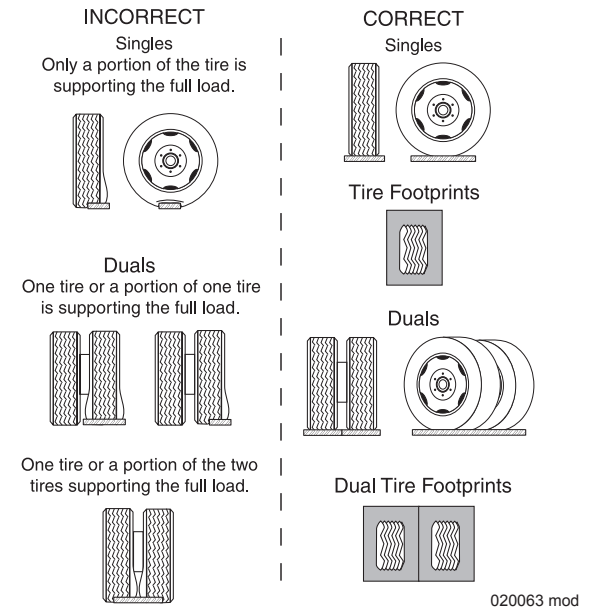Tire "Support" Methods**Tire Vibration**

Sudden tire failure is often preceded by tire vibration. Symptoms that can cause tire failure are a bulge in the sidewall or swelling in the tire carcass. Striking an object or large hole in the road surface can damage a tire. Inspect the tires periodically thereafter as rotational forces can continue to stress damaged areas and later manifest in tire failure. If an unusual vibration begins, or a bulge is noticed in the sidewall, have the tires evaluated by a qualified professional as soon as possible.

Tire Rotation

Tire rotation can increase the useful life of the tires by achieving uniform wear. Have the tire manufacturer determine the rotation pattern. The first tire rotation is the most important in determining which pattern to use. Any unusual or unique wear patterns, or indications of uneven wear that may have developed, should be evaluated for possible tire rotation. Misalignment, imbalance or other mechanical problems may exist and will need to be corrected prior to rotation.

Tire Replacement and Related Information

As represented within the tire manufacturer published tire data guide, the size and rated load carrying capacity of the original equipment tires on your motorhome meet or exceed the maximum axle weight/load ratings.

Criteria used to determine when tire replacement is necessary are road hazard damage, wear and age. Tire replacement based on wear is determined by either measuring the tire's groove depth or a visual inspection of wear bars. Replace tires when the groove depth is 2/32" or less on rear tires and 4/32" or less on front tires. Wear bars are raised areas cast into the groove of the tire. Replace the tire when the wear bar in the groove is even (preferably before) with the road surface contact patch. A worn out tire cannot adequately channel water through the groove, which will result in hydroplaning.

The tire manufacturer determines tire replacement based on age. While ozone inhibitors in the rubber help extend the life expectancy of a tire, exposure to the elements slowly breaks down the rubber, which can then suddenly fail when put to use. Tires that are five to seven years old (depending upon environment) are considered age worn and need to be replaced for safety even though the tire may not outwardly show age weathering and still has considerable tread.

Replacement tires must be of the same manufacturer brand, model, size, and load range at each wheel position (matched set) and must have a load rated carrying capacity equal to or greater than the original equipment tires. Mixing tires of a different brand, model, size, load rating and load range can cause unusual handling and uneven braking due to different traction coefficient and could result in sudden tire failure or loss of control due to non-symmetrical handling.

WARNING

DO NOT mix tires of different sizes, load ranges or manufacturer brand types or models. Any and all replacement tires must have a rated load carrying capacity equal to or greater than the gross axle weight/load ratings as identified by the Federal Certification Label.

WARNING

In many instances tire life is not determined by mileage or wear but by age. Tires are subject to weathering. Weathering cracks can appear in the sidewall and also run along the edge of the tire. Though the sidewall of the tire may look structurally sound, weathering can occur inside the groove of the tread. If any tire exhibits age weathering, replace all tires.

CAUTION

Signs of irregular tread wear, exhibited by scalloping or unusually smooth areas on the tire surface, are cause for concern. Immediately have the tire manufacturer inspect the tires.

Storage of Tires - Long Term

A cool, dry garage with a sealed cement floor is the preferred method of storage. Tires stored outside may prematurely age.

Prior to Storage:

- ◆ Thoroughly clean the tires.
- ◆ Unload the motorhome to reduce weight on the tires.
- ◆ Ensure the surface is reasonably level, firm, clean and has good drainage.
- ◆ Inflate the tires to the maximum inflation pressure as indicated on the Federal Identification Label.

During Storage:

- ◆ Cover the tires to block direct sunlight.
- ◆ Periodically ensure tires are at proper pressure.
- ◆ Move the motorhome every three months to prevent cracking in bulge areas, as well as flat spotting from prolonged sidewall strain and tread deflection.

Removal from Storage:



Before removing the motorhome from long-term storage thoroughly inspect each tire tread areas and air pressures. If the tires have lost air during storage, inflate them to the correct pressure.

WHEEL MOUNTING

Hub Piloted Mounting:

- ◆ Flange nuts generate higher clamping force. Always use grade eight studs with hub mount wheels.
- ◆ Before installing the wheels, lubricate the hub pilot pads with a drop of oil to prevent galling. **DO NOT** lubricate any other wheel or hub surface.
- ◆ For a hub with intermittent pilot pads, position a pad at the twelve o'clock position to center the wheel and reduce runout.


For used nuts add two drops of oil between flange and hex.

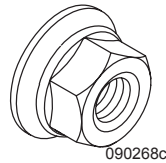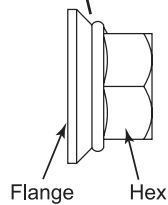

*Flange Nut:
Front & Side
View.*

NOTE

Loosen and tighten lug nuts in sequence (see illustration). Sequence tighten to 50 ft. lbs. first, then sequence tighten to 500 ft lbs. Over-tightening can cause distortion.

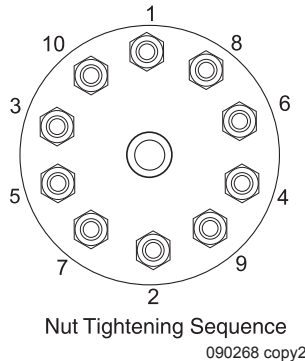

WARNING

DO NOT use wheels or lug nuts different than the original equipment as this could damage the wheel or the mounting system. Damage to the wheel or mounting system could cause a wheel to come off while the motorhome is in motion.

Front Wheels:

Slide the front wheel over the studs. Use caution to avoid damaging stud threads. Snug the nuts in sequence. When all nuts have been seated, tighten the nuts to 500 ft. lbs. in sequence (as in illustration).

Dual Rear Wheels:

Slide the inner dual wheel over the studs. Use caution to avoid damaging threads. Align the handholds for valve access and slide the outer dual wheel over the studs, again using caution to avoid damaging the stud threads. When all nuts are seated, tighten the nuts to 500 ft. lbs. in sequence (as in illustration).

The hub mount wheels use two-piece flange cap nuts for both front and rear applications. No inner cap nuts are required.

Torque the Nuts Properly:

- ◆ Tighten the wheel nuts to the recommended lug nut torque. **DO NOT** over tighten.
- ◆ Maintain the nut torque at the recommended level through planned periodic checks or at 10,000 mile intervals, whichever comes first.
- ◆ If air wrenches are used, they must be periodically calibrated for proper torque output. Use a torque wrench to check air wrench output and adjust line pressure for the correct torque.

WEIGHING THE MOTORHOME

Proper weight distribution, load management and operating within established limitations will aid in safe and enjoyable travel. The information in this section outlines guidelines and provides worksheets for weighing procedures.

Proper weight distribution and load management is an individual responsibility. In order to correctly manage load and weight distribution, more than one weight measurement is required. Each wheel position must be weighed to accurately determine the weight placed on each wheel position for proper weight computations. The entire process of weigh management begins with the Gross Vehicle Weight Rating as listed on the Federal Certification Label. This weight cannot be exceeded. The Federal Certification Label is typically located behind the driver's seat on the wall.

CAUTION

Most States limit the amount of weight carried by any single axle position. It is the responsibility of the operator to know the legal weight limit of the State in which they travel.

Weight Limits

Numerous Federal, State and local governments mandate weight limits. Understanding the terminology and performing proper weighing procedure will help eliminate confusion. It is important to weigh the motorhome to calculate Cargo Carrying Capacity (CCC) and ensure no axle is overloaded.

The Gross Axle Weight Rating (GAWR) of the axles is listed on the federal certification label attached to the motorhome. This is the maximum allowable loaded weight on a particular axle. This label is generally located to the rear of the driver's seat, on the wall.

When the actual loaded weight of the motorhome, and the weight on each axle is unknown, follow the recommended tire inflation pressure(s) listed on the federal certification label. When loading a motorhome never exceed the Gross Vehicle Weight Rating (GVWR) or the GAWR for each axle.

INFORMATION

Contact the tire manufacturer for further information concerning proper tire pressure inflation and other tire issues.

The Gross Vehicle Weight Rating (GVWR) and Gross Axle Weight Rating (GAWR) listed on the Federal Certification Label attached to the motorhome details the chassis manufacturer's and/or the RV manufacturer's total vehicle maximum weight rating and per axle weight rating.

The GVWR is the maximum total weight for which the motorhome is rated - including passengers, fluids and cargo. The GAWR is the maximum weight for which a single axle is designed. The tires, wheels, axle, motorhome frame and/or other components of the motorhome may limit these per axle and total maximum weight ratings.

The Federal Certification Label is a guide in knowing the maximum loaded axle weight rating GAWR, and subsequently the correct tire inflation pressure for that weight. Every motorhome, even of the same make and model, will vary in actual loaded axle weights because of different options and personal loads.

While the actual loaded axle weight should be below the GAWR, the motorhome must be weighed in a loaded condition to determine actual weight. Separately weigh the front axle and rear axle. It is possible for a motorhome to be within the GVWR yet overloaded on one axle. It is even possible for one wheel position to be overloaded, even though the GAWR is not exceeded. For this reason it will be necessary to weigh each wheel position of the motorhome to give a clear indication of exactly how the weight of the motorhome is distributed.

Instructions and diagrams are presented on the following pages. When the total weight and the weight on each axle is known, the tire load data chart in this manual will show the correct cold inflation pressure per tire for each axle.

There are two important factors to consider when loading the motorhome: total weight and balance. When loading heavy objects keep them as low as possible, preferably on the floor or below in storage compartments. Load weight must be distributed as evenly as possible.

Weight Terms

- ◆ **Gross Vehicle Weight Rating (GVWR):** Maximum permissible weight of this motorhome. GVWR is equal to or greater than the sum of UVW plus CCC.
- ◆ **Unloaded Vehicle Weight (UVW):** Weight of this motorhome as built at factory with full fuel, engine oil and coolants. UVW does not include cargo, fresh water, propane, occupants or dealer installed accessories.
- ◆ **Cargo Carrying Capacity (CCC):** Equal to GVWR minus each of the following: UVW, full fresh potable water weight (including water heater), full propane weight, and SCWR. Tongue weight of towed vehicle and dealer installed equipment will reduce CCC.
- ◆ **Gross Combination Weight Rating (GCWR):** The maximum allowable loaded weight of this motorhome and any towed trailer or towed vehicle.
- ◆ **Gross Axle Weight Rating (GAWR):** Load-carrying capacity specified by manufacturer of a single axle system, as measured at tire ground interfaces.
- ◆ **Sleeping Capacity Weight Rating (SCWR):** The manufacturer's designated number of sleeping positions multiplied by 154 pounds.

Tire Pressure:

A motorhome may weigh slightly heavier on one side. Tire inflation pressure of the heavier side tires determine the inflation pressure for all tire(s) on that axle due to the weight transfer that occurs when cornering.

Improperly inflated tires, or an incorrectly loaded suspension, can result in poor fuel economy, poor handling and over-stressed chassis components. How the motorhome is loaded will influence tire inflation pressure and the load carried by each axle. This is why each wheel position must be weighed. Motorhome axle configuration and floor plan styles will require different weighing procedures.

NOTE

When weighing a motorhome, each tire on any axle must be inflated to the same pressure. The wheel position carrying the most weight will determine the tire inflation pressure for each tire of that particular axle.

Scales

Certified public scales are located in moving and storage lots, farm supplies with grain elevators, gravel pits, recycling companies and large commercial truck stops. To locate a nearby public scale access, check the local area telephone book yellow pages under Scales-Public or Weighers. A nominal fee may be charged, but this is money wisely spent.

Weight scale types and weighing methods determine the procedure used to calculate proper tire inflation pressure and axle loading. Several types of scales are in use today. A platform scale will allow the entire motorhome to fit on the scale to read the GVW in one scale recording. A segmented platform scale is designed to weigh one axle at a time. A single axle scale weighs one axle at a time. Some scales read only one wheel position at a time due to physical size. Several scale readings may be required to determine the GAW or GVW total. Each wheel position requires weighing, referred to as a four-point weigh to accurately determine the correct tire inflation pressure.

INFORMATION

The most accurate method to determine proper tire pressure is to weigh each wheel position independently. Weighing the entire axle will not accurately determine the actual weight carried by each wheel position. When weighing the drive axle dual position, divide the total weight by two to determine the weight carried by each tire.

When weighing, the scales and the motorhome must be level to obtain an accurate scale reading. Even when an axle is not physically on the scale, a definite lean in the motorhome will produce inaccurate scale readings.

Weight Label

| | | | | | |
|---|---|--------------|-------|--------|-------|
| MODEL YEAR: | _____ | MAKE: | _____ | MODEL: | _____ |
| UNIT NO. | _____ | CHASSIS VIN: | _____ | | |
| | | | | LBS. | KGS. |
| GVWR | (Gross Vehicle Weight Rating) is the maximum permissible weight of this fully loaded motorhome | | | | |
| UVW | (Unloaded Vehicle Weight) is the weight of this motorhome as manufactured at the factory with full fuel, engine oil and coolants..... | | | | |
| SCWR | (Sleeping Capacity Weight Rating) is the manufacturer's designated number of sleeping positions multiplied by 154 pounds (70 kilograms) | | | | |
| CCC | (Cargo Carrying Capacity) is the GVWR minus each of the following: UVW, full fresh (potable) water weight (including water heater), full LP-Gas weight and SCWR (*1)..... | | | | |
| GCWR | (Gross Combination Weight Rating) is the maximum allowable combined weight of this motorhome and the towable product. (*1)..... | | | | |
| | FACTORY INSTALLED OPTIONS are options installed at the factory but do not include dealer installed after market equipment... | | | | |
| | CARGO CARRYING CAPACITY (CCC) COMPUTATION | | | | |
| GVWR | _____ | | _____ | | _____ |
| minus UVW | _____ | | _____ | | _____ |
| minus fresh water (*2) weight of _____ gallons @ 8.3 lbs./gal | _____ | | _____ | | _____ |
| minus LP-Gas weight of _____ gallons @ 4.2 lbs./gal | _____ | | _____ | | _____ |
| minus SCWR of _____ persons @ 154 lbs./person | _____ | | _____ | | _____ |
| CCC for this motorhome (*3) | _____ | | _____ | | _____ |
| WARNING: CONSULT OWNER MANUAL(S) FOR SPECIFIC WEIGHING INSTRUCTIONS AND TOWING GUIDELINES INCLUDING AUXILIARY BRAKE REQUIREMENTS FOR ANY TOWED TRAILER OR TOWED VEHICLE. | | | | | |
| Factory installed options do not include dealer installed after market equipment. | | | | | |
| WARNING: DO NOT EXCEED THE GVWR, GCWR AND/OR GAWR AFTER LOADING YOUR MOTORHOME WITH WATER, FUEL, PASSENGERS AND CARGO. GAWR (Gross Axle Weight Rating) means the maximum permissible load weight a specific axle is designed to carry. See Federal Certification Label for disclosure of The GAWR for each axle. | | | | | |
| (*1) Towing capacity is limited by GCWR; your vehicle's towing capacity is the difference between the GCWR and the actual vehicle weight; including all water, fuel, passengers, and cargo. Consult your Owner's Manual for further information. | | | | | |
| (*2) Your motorhome's fresh water tank and water heater taken together determine the gross fresh water capacity. Your usable fresh water capacity, however, may be less. | | | | | |
| (*3) Dealer installed equipment and towed vehicle tongue weight will reduce CCC. | | | | | |


Four Corner Weighing (Example)

NOTE

Following scale readings and Gross Axle Weight Ratings are fictitious. Actual scale readings and Gross Axle Weight Ratings will vary with model and options.

The motorhome must be weighed fully loaded to obtain accurate scale readings and to determine the proper tire pressure. All slide rooms must be in retracted position.


- ◆ Take the rear axle Gross Axle Weight Rating (GAWR) and divide it by two. Example: Rear axle GAWR taken from the motorhome Vehicle Certification Label is 14,500 lbs. Divide the figure by 2, using chart below, record 7,250 lbs. on Scale B and D, line 1.
- ◆ Weigh the driver side rear corner (Scale B) and record weight on chart Scale B, line 2. Example: 4,400 lbs.
- ◆ Weigh the passenger side rear corner (Scale D) and record weight on chart Scale D, line 2. Example: 4,100 lbs.
- ◆ Add chart Scale B and D, lines 1, for Gross Axle Weight Rating (GAWR) and record on chart under Totals. Example: 14,500 lbs.
- ◆ Add chart Scale B and D, lines 2, for actual Gross Axle Weight (GAW) and record on chart under Totals. Example: 8,500 lbs.
- ◆ Actual Gross Axle Weight (GAW). Example: 8,500 lbs., is not to exceed Gross Axle Weight Rating (GAWR). Example: 14,500 lbs.

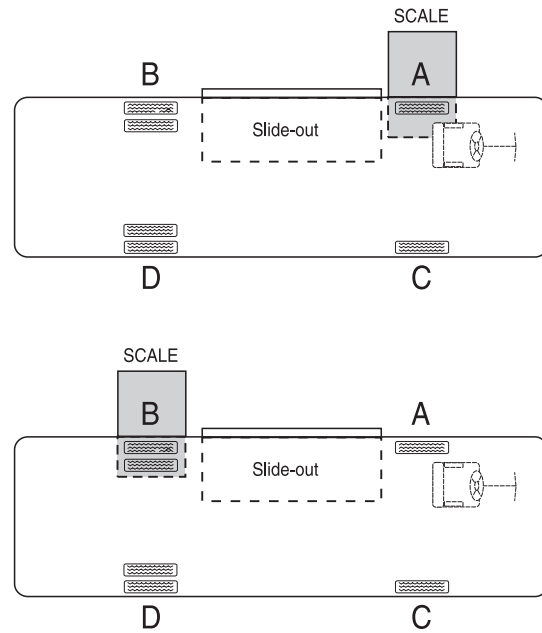

- ◆ Refer to the Example Tire Chart. Use the highest actual weight, Scale B or D, line 2. Example 4,400 lbs. Determine the proper tire pressure for each tire using the Load Inflation chart. Example: 95 psi or stamp on the sidewall of the tire.
- ◆ Repeat above procedures to determine front axle Scale A and C, tire pressures.

WARNING

Improperly inflated or overloaded tires can cause a blowout. An overloaded axle can cause a component failure of the suspension system. Tire blowout or broken suspension components can lead to loss of vehicle control resulting in property damage, personal injury or death.

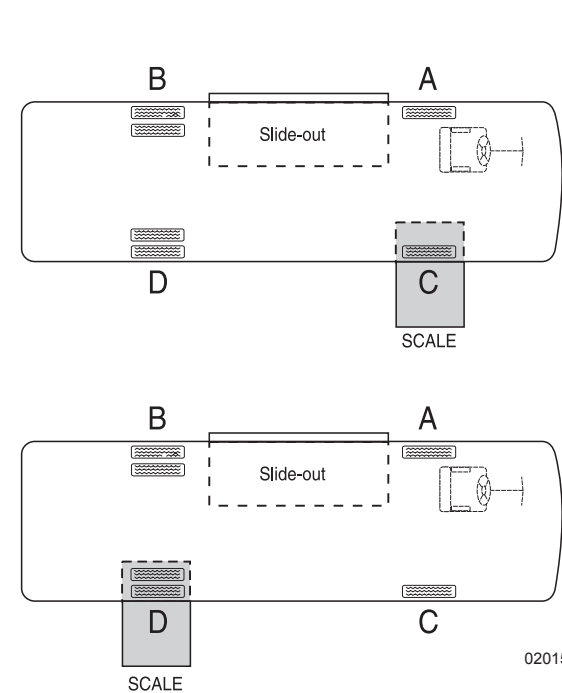

CAUTION

If actual weight carried by any tire is below the tire chart weight specification minimum tire pressure, the minimum inflation pressure must be maintained. Tire pressure below the minimum inflation pressure can overheat and damage the tire casing leading to premature tire failure or blowout.

Cargo Carrying Capacity

When weighing the motorhome it is important to understand that each motorhome, even of the same model year, floorplan and length will weigh different due to options and accessories. The Gross Vehicle Weight Rating (GVWR), Gross Combination Weight Rating (GCWR) and/or Gross Axle Weight Rating (GAWR) must not be exceeded.

GVWR limits the weight of the entire load combination, regardless of the water, propane, passengers and cargo weight.

It is important to understand that the weighing process is performed in two phases. First, by determining the Cargo Carrying Capacity (CCC); and second, to ensure the GVWR is not exceeded when adjusting tire pressures. The weighing process should start by recording the GVWR from the Federal Weight Label, then weighing the motorhome unloaded, without passengers and with a full fuel tank. Engine and transmission fluid levels must be full. This is known as the Unloaded Vehicle Weight (UVW). Once this weight has been recorded it can be subtracted from the GVWR.

GVWR 22,500 - UVW 14,300 = A 8,200


Next, begin to calculate the Cargo Carrying Capacity (CCC). Fresh water weight and propane weight can now be subtracted from the remaining total line A.

- ◆ Water weight is the number of gallons multiplied by 8.3.
- ◆ Propane weight is the number of gallons multiplied by 4.2.

A 10-gallon water heater with a 40-gallon fresh tank would total 50 gallons times 8.3, or 415 lbs. A 30-gallon propane tank will have 24 gallons of propane due to the 80% valve. This would mean 24 gallons multiplied by 4.2, or 100.8 lbs.

| | ROADSIDE | | CURBSIDE | | TOTAL AXLE WEIGHT | GROSS AXLE WEIGHT RATING GAWR | GAWR Minus Total Axle Weight |
|------------|-------------|---|-------------------|---|-------------------|-------------------------------|------------------------------|
| FRONT AXLE | 1. 4,000 | + | 4,000 | = | 8,000 | 8,000 | 2,200 |
| | 2.(A) 3,000 | | (C) 2,800 | | 5,800 | | |
| DRIVE AXLE | 1. 7,250 | + | 7,250 | = | 14,500 | + 14,500 | 6,000 |
| | 2.(B) 4,400 | | (D) 4,100 | | + 8,500 | | |
| | | | Total Axle Weight | | = 14,300 UVW | = 22,500 GVWR | = 8,200 CCC |

NOTE:
These measurements are with a full fuel tank and nobody in the motorhome.

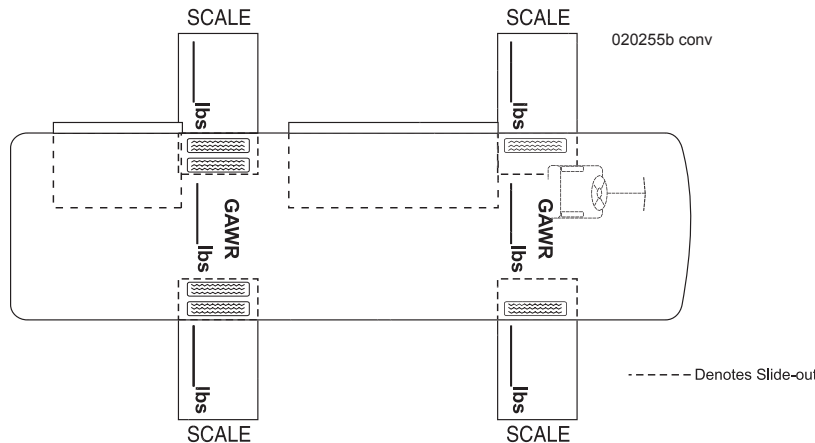

A 8,200 - 581 = B 7,619

B 7,619 - 100.8 = C 7,518.2

Next, calculate the Sleep Capacity Weight Rating (SCWR) the manufacturer's designated number of sleeping positions for the motorhome multiplied by 154 lbs.

The 154 lbs. (70kg) is the average weight established by the U.S. Federal Government and Transport Canada, and is used to arrive at Cargo Carrying Capacity (CCC). However, actual sleep capacity weight may be greater. The SCWR is not intended to limit the sleeping capacity to a specified weight.

Example: If the manufacturer has designated the motorhome sleeping position at 4 (616 lbs.) and there are four people who weigh 200, 200, 178 and 138 lbs., totaling 716 lbs., that doesn't mean the sleeping capacity is reduced to three individuals, but rather the CCC is reduced by 100 lbs. due to the actual passenger weight.


C 7,518.2 - SCWR 770 = CCC 6,748.2

Cargo Carrying Capacity (CCC) is how much cargo the motorhome can carry. However, tongue weight of a towed vehicle will further reduce this amount.

Now the motorhome can be fully loaded and weighed to ensure GVWR is not exceeded. Once the motorhome is fully loaded it is ready to be weighed to obtain an accurate scale reading and determine the proper tire pressure. All slide rooms must be in the retracted position when weighing the motorhome. The motorhome must remain as level as possible on the scale, even when an axle or side is not physically on the scale.

- ◆ Each wheel position must be weighed to accurately determine the weight carried at each wheel position.
- ◆ Refer to the previous examples on how to weigh each wheel position. Each wheel position weight must be weighed and recorded to determine proper tire inflation.
- ◆ Wheel position weights are not to exceed Gross Axle Weight Rating (GAWR) and Gross Vehicle Weight Rating (GVWR) as printed on the Motorhome Vehicle Certification Label.
- ◆ Compare wheel position weights with weight ratings on the label. If wheel position weights exceed maximum specifications, items will need to be removed until rating weight is within specification.

Cargo Carrying Capacity Flowchart

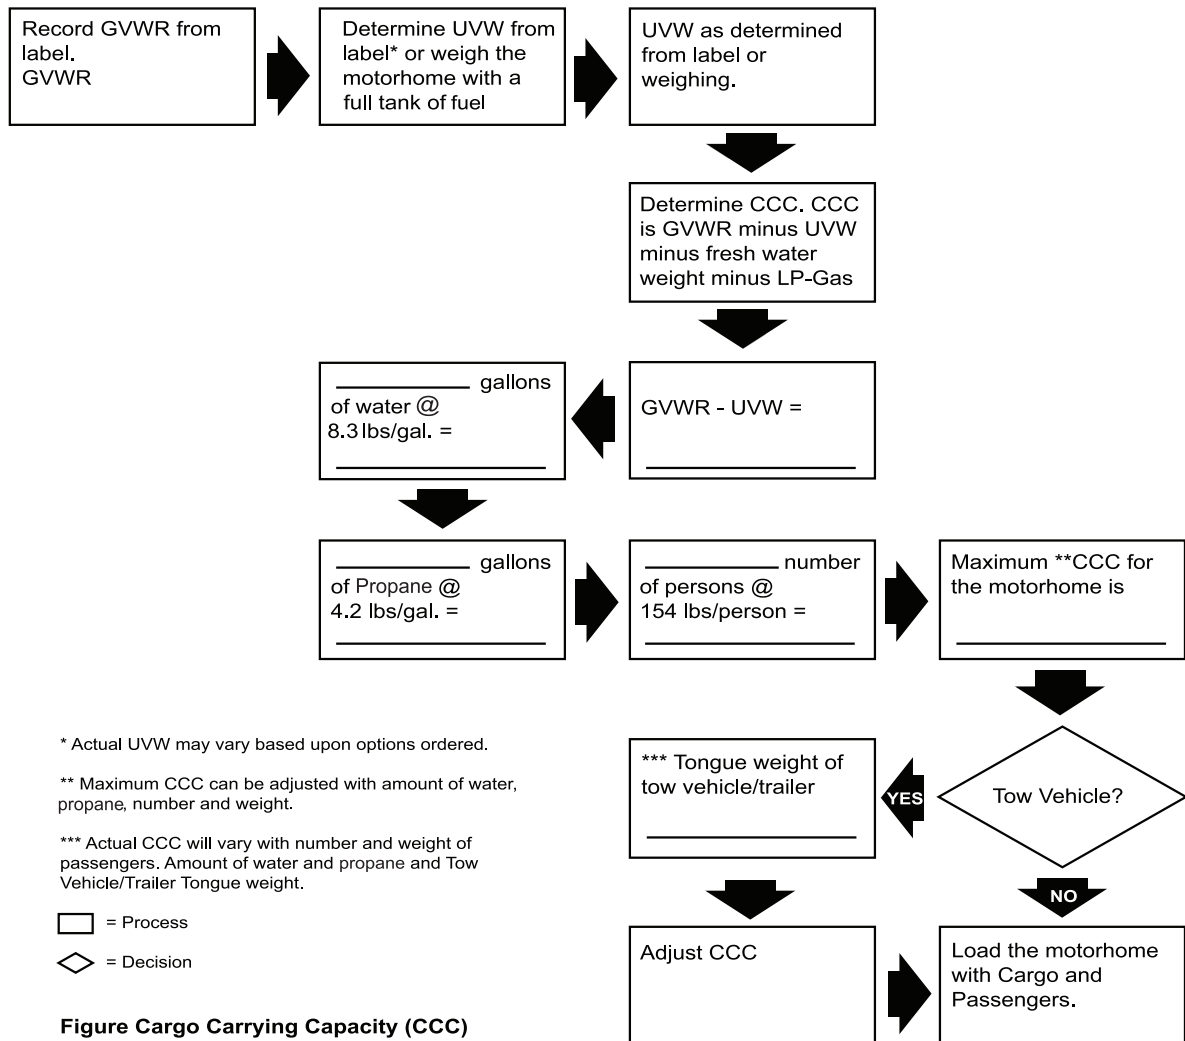

* Actual UVW may vary based upon options ordered.

** Maximum CCC can be adjusted with amount of water, propane, number and weight.

*** Actual CCC will vary with number and weight of passengers. Amount of water and propane and Tow Vehicle/Trailer Tongue weight.

□ = Process

◇ = Decision

Figure Cargo Carrying Capacity (CCC)

020254c


Weighing Procedure Worksheet

Example Worksheet

| | ROADSIDE | | CURBSIDE | | TOTAL AXLE WEIGHT | GROSS AXLE WEIGHT RATING GAWR | GAWR Minus Total Axle Weight |
|------------|-------------|---|-------------------|---|-------------------|-------------------------------|------------------------------|
| FRONT AXLE | 1. 4,000 | + | 4,000 | = | 8,000 | 8,000 | 2,200 |
| | 2.(A) 3,000 | | (C) 2,800 | = | 5,800 | | |
| DRIVE AXLE | 1. 7,250 | + | 7,250 | = | 14,500 | + 14,500 | 6,000 |
| | 2.(B) 4,400 | | (D) 4,100 | = | + 8,500 | | |
| | | | Total Axle Weight | = | 14,300 UVW | = 22,500 GVWR | = 8,200 CCC |

NOTE:

These measurements are with a full fuel tank and nobody in the motorhome.

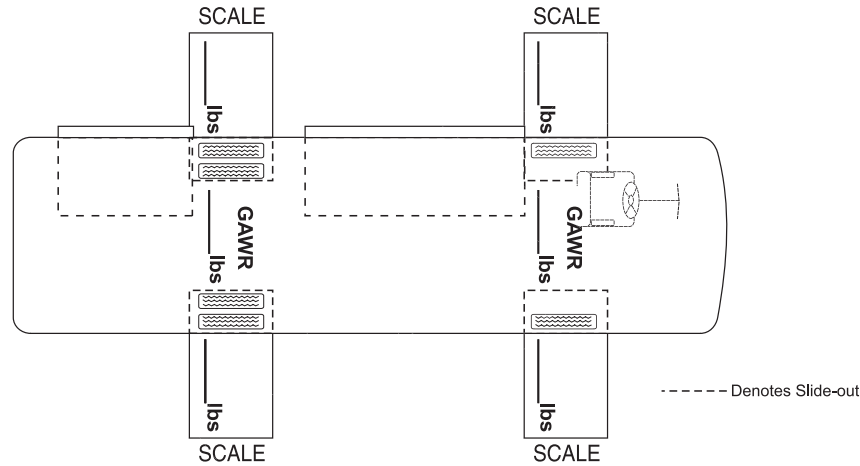


| | FORMULA | UVW CAPACITY | CCC |
|------------------------------|--------------------------------------|-------------------------------------|-----------|
| FRESH WATER | Subtract Gallon @ 8.3 lbs/gal | 60 X 8.3 = 498 | - 7,702 |
| WATER HEATER | Subtract Gallon @ 8.3 lbs/gal | 10 X 8.3 = 83 | - 7,619 |
| PROPANE | Subtract Gallon @ 4.2 lbs/gal | 24 X 4.2 = 100.8 | - 7,518.2 |
| SLEEP CARRYING WEIGHT RATING | Subtract Persons @ 154 lbs/person | 5 X 154 = 770 | - 6,748.2 |
| | | Maximum Cargo Carrying Capacity CCC | 6,748.2 |

Maximum Cargo Carrying Capacity will change by varying any of the capacities. Tongue Weight of a towed vehicle will reduce the Cargo Carrying Capacity (CCC).

Actual Worksheet

| | ROADSIDE | CURBSIDE | TOTAL AXLE WEIGHT | GROSS AXLE WEIGHT RATING GAWR | GAWR Minus Total Axle Weight |
|------------|----------|-------------------|-------------------|-------------------------------|------------------------------|
| FRONT AXLE | 1. | + | = | | |
| | 2.(A) | | | | |
| DRIVE AXLE | 1. | + | = | + | |
| | 2.(B) | | | | |
| | | Total Axle Weight | = UVW | = GVWR | = CCC |

NOTE: These measurements are with a full tank and nobody in the motorhome.

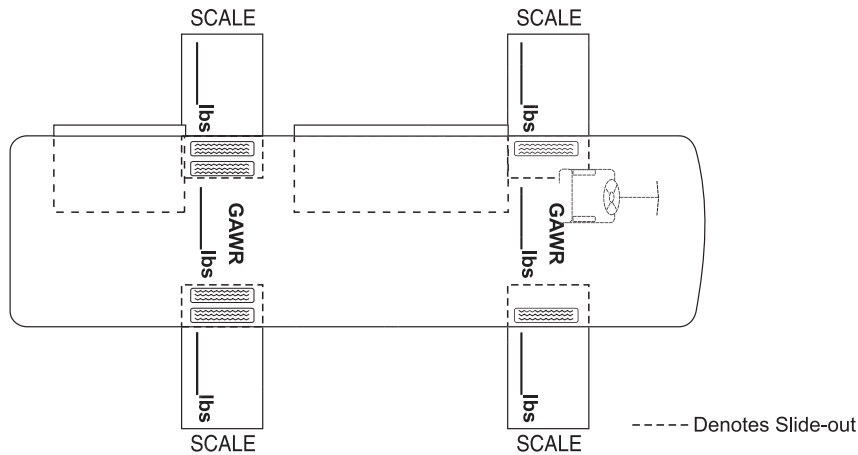

| | FORMULA | UVW CAPACITY | CCC |
|------------------------------|-----------------------------------|-------------------------------------|-----|
| FRESH WATER | Subtract Gallon @ 8.3 lbs/gal | X 8.3 = | - |
| WATER HEATER | Subtract Gallon @ 8.3 lbs/gal | X 8.3 = | - |
| PROPANE | Subtract Gallon @ 4.2 lbs/gal | X 4.2 = | - |
| SLEEP CAPACITY WEIGHT RATING | Subtract Persons @ 154 lbs/person | X 154 = | - |
| | | Maximum Cargo Carrying Capacity CCC | |

Maximum Cargo Carrying Capacity will change by varying any of the capacities. Tongue Weight of a towed vehicle will reduce the Cargo Carrying Capacity (CCC).

020255b

Weight Record Sheet

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

DATE: _____

PLACE: _____

FRONT: _____ + _____ = _____
LEFT RIGHT TOTAL

REAR: _____ + _____ = _____
LEFT RIGHT TOTAL

= _____
TOTAL GROSS VEHICLE WEIGHT

020263

SMOKE DETECTOR

Statistics show that most fire casualties are not caused by direct flame, but by less visible smoke (products of combustion). The smoke detector automatically returns from alarm to normal state when the reason for activation, the presence of smoke, is completely removed. Fires are commonly caused by smoking in bed, leaving children unattended or using flammable cleaning fluids. Please be safety conscious and avoid unnecessary risk.

WARNING

There is no way to insure against injury or loss of life in a fire; however, the smoke detector is intended to help reduce the risk of tragedy. Additional smoke detectors may help to reduce the risk. Proper use and care of the smoke detector could save lives.

Operation

When a 9 Volt DC battery is correctly connected, the LED flashes every minute and a loud alarm will sound when a product of combustion is sensed.

NOTE

The detector will not operate without a battery. A battery flag pops up preventing the detector from being installed to the mounting bracket without a battery. Carbon zinc batteries average a service life of one year. Alkaline batteries average a service life of one to two years.

Testing

Simply press the test button on the smoke detector cover for approximately three seconds. The alarm will sound if all electronic circuitry, horn and battery are properly working. The detector should be tested at least once a week when the motorhome is in use, prior to each trip and when the motorhome has been in storage. When testing the smoke detector it is advised to stand at arm's length.


CAUTION

DO NOT use an open flame to test the smoke detector as this may ignite the alarm or surrounding area and set fire to the motorhome.

Maintenance

Maintenance for Proper Operation:

- ◆ Test the smoke detector once a week.
- ◆ Keep a supply of 9 Volt DC batteries on hand.
- ◆ Vacuum the slots in the cover and sides with a soft brush attachment every month. Test the smoke detector after the unit has been vacuumed.
- ◆ The smoke detector will beep once a minute when a low battery exists. Replace battery immediately.

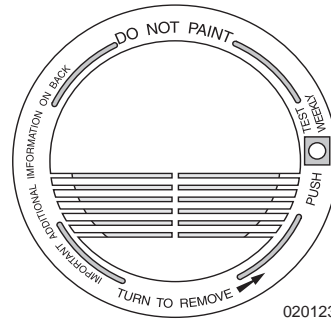

Located on ceiling in main living area

Troubleshooting

If the alarm does not sound when the test button is pushed, or with a smoke test, try the following:

- ◆ Inspect detector for obvious damage.
- ◆ Check for the recommended battery type.
- ◆ Check the battery for proper connection or replace the battery if needed.
- ◆ Gently vacuum as recommended.

If these procedures do not correct the problem, **DO NOT** attempt repairs. If the smoke detector is within the warranty period and the terms indicate the nature of the problem, return the detector to your dealer. Smoke detectors beyond the warranty period cannot be economically repaired.

CARBON MONOXIDE DETECTOR

American National Standards Institute (ANSI) 119.2 - Fire & Life Safety 6.4.6 Carbon Monoxide Detectors states "*CO detectors used must be listed as suitable for use in RV's and installed in accordance within the terms of their listing. No specific mounting location is mandated for CO detectors; only that they be installed in accordance with their listing. The installation of the CO detector mounting bracket alone will be considered acceptable as long as the CO detector is provided.*"

A CO detector is required to be installed in any RV that either contains an internal combustion engine or is designed to have one installed. This would include all motorized RV's, regardless of whether the fuel source is gasoline, diesel, propane, or other alternate fuel. This would also include an RV equipped with a generator or designed to accommodate future installation of a generator (commonly called "generator prep" setups). This would not include RV's equipped to store or transport internal combustion engine vehicles.

Also, all truck campers must have a CO detector installed, since an internal combustion engine is ultimately present once the truck camper is mounted on a pickup truck."

The motorhome is equipped with a Carbon Monoxide detector. Everyone is at risk with Carbon Monoxide poisoning. Carbon Monoxide (CO) is a colorless, odorless and tasteless gas that binds with hemoglobin reducing the body's ability to absorb and carry oxygen to vital organs. Even low levels of CO have been known to cause brain and other vital organ damage in unborn infants, with no effect on the mother.

When removed from exposure, the symptoms dissipate as Carbon Monoxide is expelled through the lungs. Level of contamination in the body reduces at half-life increments at approximately four-hour intervals. Treatment with Oxygen will quicken recovery time.



Located in bedroom

In cases of mild exposure, the symptoms may include: a slight headache, nausea, vomiting and fatigue. Some consider this a "Flu-like Symptom." Symptoms for medium exposure may include a severe throbbing headache, drowsiness, confusion and fast heart rate. Extreme exposure can result in unconsciousness, convulsions, cardio-respiratory failure and death. Young children and household pets may be the first affected. Other highly sensitive people include the elderly and those with lung or heart disease or anemia.

The CO detector is designed to detect the toxic CO Gas resulting from incomplete combustion of any fuel. This can be gasoline, propane, natural gas, oil, charcoal or wood. Anything that burns fuel such as engines, generators, furnaces, gas stoves or water heaters, produce CO Gas. Consequently, it is uncommon for household smoke from cigarettes or normal cooking to cause the alarm to sound.

CAUTION

Activation of this device indicates the presence of carbon monoxide (CO), which can be fatal. A concentration of above 100 PPM will cause a warning condition. Individuals with medical problems may consider using detection devices with lower carbon monoxide alarming capabilities. Prolonged exposure to the horn at a close distance may be harmful to hearing.

WARNING

Constant beeping and a flashing red light means CO gas has been detected. Shut off appliances, motorhome engine, and water heater. Evacuate the motorhome and call the fire department. Have any problems corrected before restarting any appliances or the coach.


The CO detector is wired to the house batteries. This allows reliable protection by alerting the build up of potentially dangerous levels of CO. Once the unit is powered, it will run through a brief warm-up and self check prior to monitoring for CO gas.

WARNING

If unplugged from shore power the house battery disconnect switch must be ON for the CO detector to operate.

Operation

The detector is equipped with a self-cleaning CO sensor and requires a ten minute initial warm-up period to clean the sensor element and achieve stabilization. During the warm-up period, the green power light will flash ON and OFF. The green power light should be lit when the power is on. If the light is not lit, turn off the power and check all wire connections. If the power is on and the connections are correct, but the indicator still does not light, the detector should be returned for service. DO NOT attempt to fix the detector. The indicator light displays a specific color to monitor along with a matching sound pattern.

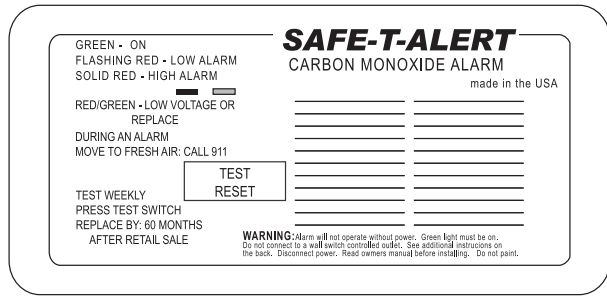

Indicator Lights and Sound Patterns:

- ◆ ON or normal condition is indicated by green. The CO detector has power and is sensing air for the presence of CO Gas. The alarm will not sound.
- ◆ Flashing red indicates low CO alarm condition along with four beeps then OFF for five seconds. The alarm will sound and can be reset by the TEST/RESET button. The CO detector has detected the presence of 60 ppm.
- ◆ Steady red indicates a CO ALARM condition. The detector has sensed the presence of levels over 100 ppm of Carbon monoxide. The alarm horn will sound continuously until the RESET switch is reset.
- ◆ Alternating red and green indicates a malfunctioning alarm.

Alarm

When the alarm sounds have the detector and the motorhome checked by an authorized service technician as soon as possible. **DO NOT** disconnect a CO detector to silence an annoying alarm. Evacuate the motorhome immediately when the red light is lit and the alarm sounds. Do a head count to check that all persons are accounted for. Call the nearest

fire department and ask them to determine the source of the Carbon Monoxide. **DO NOT** re-enter the motorhome until it has been aired out and the problem corrected.

Potential Sources of CO when operating the motorhome:

- ◆ Engine Exhaust
- ◆ Portable Grills
- ◆ Portable Space Heaters
- ◆ Camp Fires
- ◆ Gas Stoves and Ovens
- ◆ Generator Exhaust
- ◆ Portable Generators
- ◆ Nearby Motorhomes
- ◆ Defective Engine Exhaust System

Testing

Test Procedures:

Test the Carbon Monoxide detector operation after the motorhome has been in storage, before each trip and at least once a week during use. Test the alarm by holding the TEST/RESET button in until the alarm sounds. The alarm will sound four beeps and the indicator lamp goes steady red. Six seconds later the alarm will again beep four times and the indicator light goes steady green.

Peak Level Memory:

The CO detector has the capability to remember the level of Carbon Monoxide that activated the alarm. Press the TEST/RESET button for less than one second and observe the visual and audible signals.

- ◆ One beep and one green flash indicate memory is clear.
- ◆ Two beeps and two red flashes indicate less than 100 ppm.
- ◆ Three beeps and three red flashes indicate less than 200 ppm.
- ◆ Four beeps and four red flashes indicate greater than 200 ppm.

NOTE

Memory is erased when power is disconnected for 15 seconds.

Cleaning & Maintenance

- ◆ Use a vacuum cleaner to remove dust or any buildup on the detector.
- ◆ Wipe the detector with a damp cloth and dry with a towel.
- ◆ **DO NOT** wash.
- ◆ **DO NOT** open the detector for cleaning.
- ◆ **DO NOT** paint the detector.
- ◆ It is recommend that the Carbon Monoxide detector be replaced every 5 years.

The CO detector has no user service parts. If there is a problem with the detector refer to an authorized service center. **DO NOT** remove power.

INSPECT

Check the CO detector weekly and at the beginning and end of each trip.

FIRE EXTINGUISHER

The fire extinguisher in the motorhome is located near the front entry door. Please read the operating instructions that are printed on the fire extinguisher. If there is any doubt on how to operate the fire extinguisher practice using it. Be sure to replace or recharge the extinguisher immediately after use.

Inspect the fire extinguisher at least once a month. Do so more frequently if the extinguisher is exposed to weather or possible tampering. **DO NOT** test the extinguisher by partially discharging.

Internal pressure will escape and the fire extinguisher will need to be replaced.

Use the **PASS** method:

Pull the pin. Hold extinguisher upright.



Aim at the base (bottom) of the fire and stand six feet away.

Squeeze the lever to discharge the agent.

Sweep the spray side to side until fire is totally extinguished.

WARNING

Road vibration will cause extinguisher powder to compact and may cause extinguisher malfunction. Invert and shake extinguisher monthly.

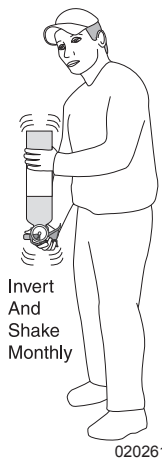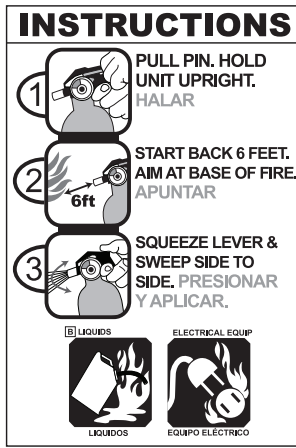

There are three classes of fire to be concerned with in a motorhome. Any fire can fall into more than one class; a fire that involves both burning paper and kitchen grease is a Class AB fire.

Classes of Fire:

- A-** Fires that are fueled by materials that leave a residue when they burn: paper, wood, cloth, rubber, and certain plastics.
- B -** Fires that involve flammable liquids and gases: gasoline, paint thinner, kitchen grease, propane and acetylene.
- C -** Fires that involve energized electrical wiring or equipment. If electricity to the equipment is turned off, a class C fire becomes one of the other two class fires.

ESCAPE (EGRESS) WINDOW

The Egress window, designated for use as an emergency exit, is identified inside of the motorhome by a red locking handle and Exit label.




To Operate:

- ◆ To open, lift the red handle and push window outward.
- ◆ To lock, pull window closed and lower handles to lock.

Hinges along the outside window top identify the Egress window on the motorhome exterior. The glass slider in the Egress window operates the same as all other windows in the motorhome.

Maintenance:

- ◆ Occasionally open and close the Egress window to prevent the rubber seal from sticking.

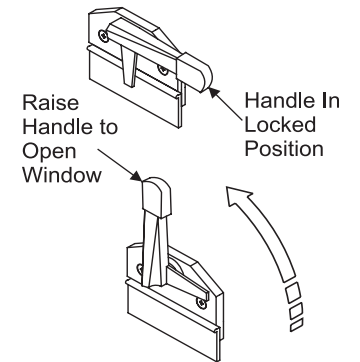

| | | | |
|------------------------------------|-----------|---------------------------------------|-----------|
| EXTERIOR CARE..... | 50 | COUNTERTOPS | 63 |
| Corrosion..... | 50 | Solid Surface | 63 |
| Winter Drive Protection..... | 50 | Laminate..... | 63 |
| Washing | 51 | STAINLESS STEEL SURFACES | 64 |
| Drying..... | 51 | WINDOWS..... | 64 |
| Waxing | 51 | WINDOW TREATMENTS | 64 |
| Paint Codes | 52 | Mini-Blinds | 64 |
| Tire Care..... | 52 | Day/Night Shades | 64 |
| Wheels - Polished Aluminum..... | 52 | CONDENSATION | 65 |
| Bright Metal | 53 | MOLD & MILDEW..... | 65 |
| EXTERIOR MAINTENANCE..... | 53 | PEST CONTROL..... | 66 |
| Fiberglass | 53 | STORAGE | 68 |
| Roof Care & Seal Inspections | 53 | Short Term..... | 68 |
| Sealant Types..... | 54 | Long Term | 69 |
| INTERIOR CARE | 55 | Winter Storage Checklist | 70 |
| Cockpit..... | 55 | Removal from Storage..... | 71 |
| FABRICS..... | 56 | | |
| General Care & Cleaning..... | 56 | | |
| Vinyl | 56 | | |
| Optima Leather & “O” Vinyl | 57 | | |
| Leather | 58 | | |
| Ultra-Leather | 58 | | |
| FLOORS..... | 58 | | |
| Carpet Cleaning..... | 58 | | |
| Tile Floor..... | 59 | | |
| Laminate Floor | 60 | | |
| SHOWER..... | 60 | | |
| CEILING..... | 61 | | |
| WALL COVERINGS | 61 | | |
| WOOD CARE..... | 61 | | |



INFORMATION

Section 3 covers basic cleaning and care of items and materials found in the motorhome. Due to variations in options and floor plans, some items and materials discussed in this section will not apply to all motorhomes.

EXTERIOR CARE***Corrosion***

The most common cause of corrosion to the motorhome exterior is accumulation of road salt, grime and dirt. These elements, combined with moisture, may possibly cause early component failure. The undercarriage, around wheel openings and the radiator charge air cooler package require periodic cleaning to prevent component failure caused from corrosive materials collected on roadways.

If the motorhome is stored or driven in areas where road salts are used or near the ocean, it should be washed at least once a week, including the undercarriage. Otherwise, it is recommended to hose off the undercarriage area at least once a month to help minimize the corrosion process.

High-pressure washers or steam cleaners are the most effective way of cleaning off the undercarriage and inside wheel openings. However, these devices can cause damage. Avoid directly spraying the painted surface with a high-pressure washer of any type. Also avoid directly spraying electrical wiring, connectors or electro-mechanical components with high pressure.

CAUTION

It is up to the motorhome owner to properly wash and protect the motorhome and its components from corrosion. Sources of corrosion can come from road surfaces treated with de-icing agents or atmospheric conditions such as coastal regions.

CAUTION

Exercise caution when cleaning the radiator charge air cooler package. **Damage to the fins can result when using a high pressure washer or steam cleaner. The nozzle discharge pressure of these devices can exceed 1800 psi. Also avoid using high pressure/high temperature steam cleaners on the exterior paint surfaces. Remove all spattered washing debris from the exterior paint surfaces as soon as possible.**

CAUTION

When washing the exterior of the motorhome, avoid a direct stream of water into the furnace vents. This can cause damage to the furnace.

Winter Drive Protection

Various substances and chemicals are applied to roadways to reduce hazardous winter driving conditions. These substances can include rock salt, sand, gravel or chemical applications such as LMC (Liquid Magnesium Chloride).

Road salts are known for their corrosive properties to steel and other metals. Road salt can also damage other vehicle components and materials. Vehicles located in or traveling through areas where road salt is used are subject to rapid corrosion. LMC is a moisture

activated chemical applied directly to the road surface for the purpose of lowering the freeze point of water. According to published information, LMC is a suitable replacement for road salt or sanding.

The draw back is LMC is highly corrosive to all metals, plastics and can even destroy rebar embedded inside concrete. After application, road traffic will cause LMC to become airborne vapor traveling as much as 2000 feet from the point of origin. Vehicles located within that distance, even when stored outside, are exposed to the same corrosive affects as vehicles traveling over a road treated with LMC. LMC lowers the freeze point allowing moisture to further penetrate surfaces, and remains active down to 27% humidity. Foot traffic will also track road salt and LMC into living spaces.

While most sand, road salt and LMC accumulation can be washed away through use of a high-pressure washer, road salt and LMC is still bonded to all exposed surfaces including paint. Only chemical washing can neutralize road salts or LMC. However, chemical washing can only neutralize open surfaces. LMC and road salt remains trapped between mating surfaces and will corrode wiring as well.

Local or state governments determine what is applied during winter months and these substances can change by location. It is possible to encounter one or all of these substances while driving. Only regular weekly washing of the exterior and undercarriage can slow corrosion during the winter months. No single treatment can be used to eliminate and neutralize the affects of these corrosive substances.

Diligent washing and awareness of what substances applied to the road surface will dictate if a neutralizing agent must be applied to help slow the process of corrosion to exterior surfaces including the paint finish. Therefore; it is up to the motorhome owner to perform regular washing maintenance and neutralize any corrosive agent applied to the roadway by local or state governments.

Washing

Periodic cleaning will help to preserve the paint finish. The motorhome is painted with a “base coat, clear coat system.” Clear coat is a polyurethane-based material which brings out the shine and luster to the base coat paint. Care should be used when washing the motorhome. Use only mild detergents or (preferred) specifically designed automotive detergents. Avoid abrasive cleansers or laundry detergents that will scratch the clear coat and leave a soap film. Use a soft cloth to wash the paint finish. Avoid brushes as they can scratch the surface and damage the paint. Before washing the motorhome, remove most of the accumulated dirt and “road wash” behind wheel openings, below the windshield and on the rear of the motorhome. If build up is excessive, run water over a soft cotton cloth while gently wiping the surface in one direction. This will help float away the “build-up” from the clear coat. Avoid back and forth or circular motions as this may act like sandpaper, scratching the clear coat and leaving a haze or “swirl marks.” After removing the heavy build-up, use the mixed detergent solution to wash the motorhome. Start washing at the top of the motorhome working towards the bottom. If possible, wash

the motorhome in a shaded area when the exterior is not hot to the touch. If necessary, turn the motorhome around to keep the area being washed in the shade. Try not to allow the detergent to dry onto the clear coat surface. Use plenty of water when rinsing the surface to remove all detergent residue.

Drying

Chamois cloths come in natural and synthetic materials. Either type is acceptable as long as the surface is clean. Soak the chamois in clean water, then wring it dry. Remove the water from the surface, starting at the top and working towards the bottom, using a downward “S” pattern. Wring out the chamois as needed. Using a chamois cloth to remove the rinse water is not necessary, but the effort can be worthwhile.

Waxing

It is recommended to wax the motorhome twice a year: spring and fall. Many types of protective barriers are available today that may be applied to the clear coat: glazes, waxes, polishes, rubbing compounds or combinations of these products.

NOTE

Use a grease and wax remover before applying another coat of wax. Chemicals can become trapped between layers of wax, possibly damaging the paint finish.

INFORMATION

When selecting a product, follow the product manufacturer’s recommended application instructions.

Types of Products:

Glazes - Glazes are generally used to fill very fine scratches in the clear coat. They are applied either by hand or by using a polisher with a special pad.

Waxes - Waxes come in many types of chemical make-up. Most contain cleaning agents, lubricants and wax. Cleaning agents remove oxidation and leave a high gloss and wax leaves a clear film that protects the finish.

Polishes - Polishes combine wax based substances with abrasives to clean and polish at the same time. These products can be too abrasive for clear coats and are not recommended for use.

Rubbing Compounds - These types of products are generally applied by using a buffer. The use of rubbing compounds should be left to professionals as undesired results can quickly occur. These types of products are generally used to correct or flatten a surface by removing high spots or small amounts of material.

When selecting a product, the container should be marked, “safe for clear coats” or “clear coat safe.” Carefully follow the application instructions when using a product. Upon first use of a product, try it on a small test spot in an inconspicuous area in case an undesired reaction occurs.

Observe the test area from different angles to check for hazing or swirl marks. If an abnormal reaction to the finish occurs, discontinue product use and consult the product manufacturer. If the product is a paste, **DO NOT** allow dried paste to be baked on by the sun. Remove paste shortly after drying. Clean, dry, 100% cotton cloths are best suited for the removal of dried paste. Turn the cloth often. Use a separate clean cloth to buff. The surface should feel slick when rubbing the cloth lightly over it. Avoid repeated wax applications which can cause build up. Some very fine scratches or swirl marks may be removed by an application of a glaze. These types of glazes fill the scratches or swirl marks.

The motorhome has a large surface area. Washing and waxing may not be completed in one afternoon. Select sections to wax until the motorhome is complete. If the task seems overwhelming, have an automotive detailer perform the task.

Paint Codes

The motorhome color scheme is comprised of specific paint colors, each assigned a code used to achieve a desired color of paint. Touch-up paint may be used to repair a small scratch or imperfection in the paint surface. To paint a larger area, it is necessary to obtain the paint code to get the correct color match.

To Obtain the Paint Code:

- ◆ Contact National Parts at 1-877-466-6226.
- ◆ Specify the year, model, serial number and exterior color scheme name (if known).

- ◆ This formula can be mixed at a local BASF paint store.

NOTE

All special paint schemes require contacting Monaco Coach directly for paint codes.

Tire Care

Proper care and methods in cleaning must be used to obtain the maximum service years out of the tires. Use a soft brush and a mild detergent to clean the tires. If a dressing product is used to “protect” the tires from aging, use extra care and caution. Tire dressings that contain petroleum products or alcohol may cause deterioration or cracking.

In many cases it is not the dressing that causes a problem but the chemical reaction that subsequently occurs. When these same dressing products are used on a passenger car tire that is replaced every three to four years, it is rare to see a major problem. However, in most cases motorhome tires may last longer due to limited annual mileage and exposure.

Wheels - Polished Aluminum

Inside:

If the tires are removed, inspect and clean the entire rim. Air used to fill the tire may contain moisture and can cause the areas of the wheel under the tire to severely corrode. Use a soft brush to remove foreign material from the tire side of the rim. Lubricate the rim and tire bead with a non-water-based lubricant before mounting the tire and ensure the inside of tire is dry before installing.

WARNING

DO NOT use a flammable solution to coat the inside of the rim. This can lead to an explosion during tire inflation or in subsequent operation of the motorhome.

Outside:

The wheels should be treated the same as the paint finish on the motorhome. Road soils, grime and brake dust trap moisture which can cause corrosion over a period of time.

1. Frequently clean using high-pressure water.
2. Wash with a 100% cotton cloth and a mild soap solution (dish soap or car wash soap is recommended).
3. Rinse all remaining soap residue with high-pressure water and wipe the surface dry using a 100% cotton cloth to avoid water spots.
4. A secondary hand washing may be required to remove some stubborn road films.
5. Carnauba wax can be applied to help protect the finish.

NOTE

Allow heated wheels that are extremely hot to cool before spraying with cold water.

CAUTION

DO NOT use the following items on aluminum wheels:

- ◆ Synthetic cleaning pads, wire or abrasive brushes, steel wool or scouring pads (these can mar or scratch the finish).
- ◆ Strong detergents, alkaline or acidic cleaners, acids or lye-based chemical products or solvents.

CAUTION

Rinse aluminum wheels using high-pressure water to remove debris from the surface before washing. DO NOT scrub. Rubbing debris against the surface of the wheel can result in scratches. DO NOT allow soap solution to dry on the finish of the wheel as spotting will occur.

Bright Metal

All chrome and stainless steel should be washed and cleaned each time the motorhome is washed. Use only automotive approved non-abrasive cleaners and polishes on exterior bright work. **DO NOT** use rubbing compounds. **DO NOT** use abrasive cleaners or compounds to clean the mirrors.

NOTE

When using chemicals to remove road tars, use only automotive products that are recommended for painted surfaces and fiberglass. Observe the warning recommendations and directions printed on the container of any agent being used.

EXTERIOR MAINTENANCE

The motorhome is exposed to extreme temperatures, humidity, ultraviolet rays, rain and other environmental conditions. While in operation the motorhome is subject to twisting and flexing caused by rough roads, potholes and winding mountain roads. Maintenance is necessary not only to keep the exterior looking nice, but also to keep it in proper working order.

Fiberglass

Inspect the fiberglass exterior. Periodic inspection may reveal that flexing of the fiberglass exterior has created imperfections in the surface commonly known as “spider” or “hairline” cracks. A crack that has opened up to reveal the cloth weave threatens the integrity of the fiberglass. If the exterior exhibits signs of damage, prevent moisture penetration, particularly in freezing climates. Cover the area using plastic sheeting and/or tape, and have the damaged fiberglass repaired as soon as possible.

Roof Care & Seal Inspections

Whenever there is something affixed to the motorhome, such as a vent attached the roof, a seal is applied to prevent water intrusion. Each type of sealant has a specific use. While the beltline uses a silicone or urethane base sealant to prevent water intrusion, roof openings use an acrylic based sealant. Moisture intrusion can occur at any time for a number of reasons.

Therefore regular sealant inspection and maintenance will greatly reduce the likelihood of moisture intrusion and costly repairs.

The motorhome is sealed at the factory. However, extreme weather conditions can shorten the life of the sealant while harsh road conditions can compromise sealant integrity. Maintaining sealant integrity is part of regular motorhome maintenance. Inspect all joints, seams and openings at least once every 6 months. While sealant integrity may appear fine, a small void under the right conditions can quickly cause major damage. Make a full interior inspection for signs of moisture intrusion every two weeks if the motorhome is in storage.

CAUTION

Inspect exterior seals, seams and joints for sealant integrity at least twice a year. Make a full interior inspection for water leaks every two weeks while the motorhome is in storage.

INSPECTING

Surface must be clean and dry. Inspect seal for voids, cracks, bubbling, peeling or pulling away. Sealant that looks fine without imperfections is acceptable for continued service. Sealant that is old, cracking, flaking or bubbling will allow moisture intrusion and must be repaired.

WARNING

Inspecting sealant will require use of a ladder or scaffold assembly. Roof access is also required. Follow proper safety measures accordingly. Exercise extreme care whenever using a ladder/scaffold assembly. Avoid getting on the roof if it is icy or moisture laden as the surface can be very slick. Use judgment if inspection is considered dangerous. Have the motorhome inspected or sealed (if necessary) by a qualified service technician.

Sealant Replacement:

Carefully remove sealant that is cracking, flaking, bubbling, peeling or pulling away from the surface. The area under the removed sealant will need to be clean and dry before applying new sealant. Applying new sealant over a dirty or moisture laden surface will not allow proper adhesion. Sealant application may require simple hand tools and paper towels or rags for cleanup. Some sealants may be labeled hazardous or require chemicals for cleanup. Follow all of the manufacturer's warnings and precautions when dealing with these substances.

WARNING

Some sealants may be labeled hazardous or require use of petroleum distillates for cleanup. Use proper precautions as suggested by the sealant or chemical manufacturer. Use of protective eye wear, gloves, respirator or open ventilation may be required. Use judgment when working with chemicals. If health limits exposure to chemicals or inhibits skills or abilities, employ a qualified service technician to perform the tasks.

Sealant Types**General Maintenance – Roof: Titan 76 - AM Brush Grade Slow Cure MS**

This product is used for large roof openings such as around vents, skylights, any roof mounted antennas and ladder roof mounts. Clean the old sealant that is lifting before applying the new. Make sure the roof is dry and free of dirt. This product is found in a tub container. Care should be used when near an edge, as the product will spread out. Masking tape may be used to mask around area to avoid mishaps.

CAUTION

Use product in well-ventilated areas only. Inhalation of vapors during application or curing can cause eye or throat irritation. Avoid contact with eyes, mouth and lips. If contact, flush thoroughly with water. Avoid repeated and prolonged contact with skin. Keep product out of reach from children. Consult manufacturer data for application and safety instructions.

For small areas of maintenance various rubber sealants are available in a tube. These products are available at RV supply locations.

General Maintenance – Roof Air Conditioner:

The roof air conditioners use a closed cell foam base gasket. No sealants are required. The roof air conditioners should be checked for tightness by the four mounting bolts located in each interior corner of the air conditioner roof opening. Torque specification is 40 to 50 in/lbs. The base gasket should be compressed to about 1/2".

General Maintenance – Windshield: Black Silicone Sealant: Dow Corning #999-A Black

Used for sealing small areas or imperfections around windshields. The product is available in a tube. Clean up using solvents such as mineral spirits. Consult manufacturer data for application and safety instructions.

General Maintenance – Exterior Attachments: Dow Corning #999-A Clear Silicone or Colorimetric High Performance Clear Silicone

Primarily used on the sidewalls around windows, doors, handles, beltline molding, latches and bases of surface mounted items such as clearance lights. Old peeling sealant should be removed with nylon sticks or equivalent. Avoid using metal utensils which can scratch the painted surface. Use nylon sticks or equivalent. Avoid lacquer thinners or ketone based solvents as these chemicals can damage painted surfaces. Confirm that surface is clean and dry before a new application. Cut the tube at an angle with the smallest usable opening. Avoid a heavy bead as a little goes a long way. Use finger at a 45° angle on beaded surface to smooth out product. **DO NOT** moisten finger, use a disposable latex glove. Keep rags or paper towels handy for clean up. Use care when applying silicone and plan ahead before starting a bead. Look for obstacles that may impede application.

CAUTION

Avoid eye and skin contact and breathing of vapors. Consult manufacturer data for application and safety instructions.

General Maintenance – Openings: Spray Foam

This product is used as a sealant where a hole has been made for items such as water lines or wires that are coming through a floor or bulkhead opening. Consult manufacturer data for application and safety instructions.

Windshield Installation: Black Urethane


Used for sealing the windshields, not to fill holes or other imperfections. Black urethane comes in a tube and applies much the same as silicone. Clean up with solvents such as paint thinner. Product is considered a hazardous material. Gloves are required

WARNING

Avoid eye and skin contact and breathing of vapors. Consult manufacturer data for application and safety instructions.


Sealing Under a Painted Surface: Acrylic Sealants: Geocel # 2300

Used where items are sealed under a painted surface such as the metal corners of slide out rooms and roof mounted awning brackets. The material is specially formulated to allow paint adhesion. Consult manufacturer data for application and safety instructions.

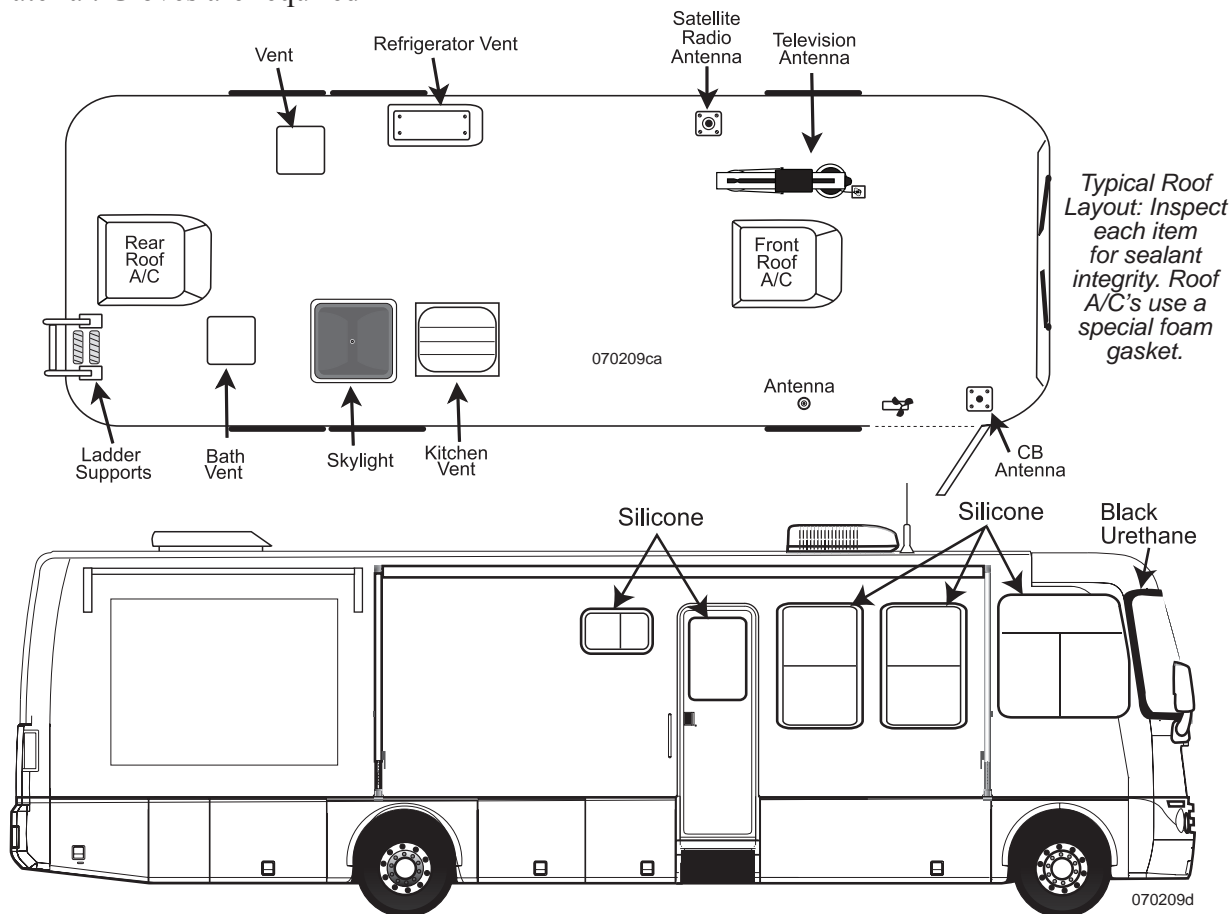

Typical Side View: Side window seals require silicone. Windshield requires black urethane

INTERIOR CARE Cockpit



The cockpit area dashboard is a molded-fiberglass, vinyl-wrapped pod. The instrument panel is comprised of various gauges and switches. The dashboard and instrument panel each have different cleaning requirements. Clean the vinyl wrapped dash pod following the instructions under Vinyl Care in this section. In the event a blemish or small cut occurs in the vinyl, contact a professional upholstery repair service.

Clean the plastic or *Plexiglas*® instrument panels using a cloth dampened in a mild soap and water solution. Dry using a separate cotton cloth. Plastic polish products that will help to brighten the appearance of plastic or *Plexiglas* instrument panels are *Novus Plastic Care*®, a three-part system; *Meguires*® and *Johnson Paste Wax*®, which will require extensive buffing and rubbing.

Glass lens gauges can be cleaned using glass cleaner. Spray cleaner on the cloth, not directly onto the lens, to prevent over spray or runoff.

CAUTION

DO NOT allow glass cleaners to come in contact with the plastic. Glass cleaning products can damage plastic by dulling the finish or causing it to become brittle.

TIP

To determine if the lens is glass or plastic, tap the lens with a fingernail. Plastic lens will have a dull hollow sound whereas glass will have a clear ping sound.

FABRICS**General Care & Cleaning**

Special care needs to be taken when the motorhome is exposed to a very humid climate for an extended period of time. Protect the fabric from any unnecessary exposure to moisture. Cover all upholstery and make sure window coverings are down to protect fabrics from sun damage. Frequently used items require more attention than those not regularly used.

If a spill occurs, blot the moisture as quickly as possible. **DO NOT** use soap and hot water as this may set a stain. Clean the spot as soon as possible.

Cleaning Upholstery Fabrics:

- ◆ Water-based cleaners are not recommended.
- ◆ If a spill does occur, blot the soiled area, **DO NOT** rub it.
- ◆ Some solvents may have an adverse reaction on a specific backing of the upholstery fabric and are not recommended.
- ◆ To prevent overall soiling, frequently vacuum or lightly brush to remove dust and grime.
- ◆ Clean spots using a mild water-free solvent or dry cleaning product.
- ◆ Clean only in a well ventilated area and avoid any product containing carbon tetrachloride or other toxic materials.
- ◆ Use a professional furniture cleaning service for overall cleaning.

Vinyl

Several areas of the motorhome, such as the dash, ceiling and items of furniture, may be covered in vinyl. The care and cleaning of these areas are as follows:

Normal Cleaning:

Most common stains can be cleaned using warm soapy water and a clear water rinse. Moderate scrubbing with a medium bristle brush will help to loosen soil from the depression of embossed surfaces. For stubborn stains use the following commercially available mild detergents in accordance with the manufacturer's instructions: *Mr. Clean* or *Fantastik®*.

Full strength rubbing alcohol or mineral spirits may be tried cautiously as a last resort on very stubborn stains if the above suggestions do not work. Indiscriminate use of any solvent, or solvent containing cleaner, can severely damage or discolor the vinyl. Stains may become permanent if they are not immediately removed.

NOTE

Detergents should never be used on a regular or repeated basis for normal cleaning.

CAUTION

Powdered cleaners containing abrasives, steel wool and industrial strength cleaners are not recommended for vinyl.

Bird Excreta & Vomit Stains:

Sponge the area with soapy water containing a diluted bleach until the stain is removed. Rinse thoroughly with clean water.

Urine Stains:

Sponge with soapy water containing a small amount of household ammonia. Rinse thoroughly with clean water.

Surface Mildew:

Wash with diluted bleach and use a soft brush for stubborn growth. Rinse repeatedly with clear, cold water.

Ballpoint Ink:

Wipe the stain immediately with rubbing alcohol in a well ventilated area.

WARNING

If flammable solvents such as alcohol, turpentine or varsol are used for cleaning, use only small quantities while in a well-ventilated area. Exercise proper caution by notifying any persons in the area. Keep away from any ignition source. Always wear protective gloves.

Oil-Base Paint:

Use turpentine in a well ventilated area to remove any fresh paint. Dried paint must be moistened using a semi-solid, gel-type stripper. The softened paint can be gently scraped away. Rinse with soap and water.

CAUTION

Lacquer solvent will cause immediate irreparable damage to the vinyl. **DO NOT use wax on vinyl upholstery as it will cause premature embrittlement and cracking. Dilute chlorine bleach before using. DO NOT use full strength bleach. Paint strippers will remove the print pattern and damage the vinyl if it comes in direct contact.**

Latex Paint:

Fresh paint can be wiped off with a damp cloth. Hot soapy water will normally remove dried latex.

Tar or Asphalt:

Remove immediately. Prolonged contact will result in a permanent stain. Use a cloth lightly dampened with mineral spirits and rub the stain gently, working from the outer edge of the stain toward the center to prevent spreading. Rinse with soap and water.

Crayon, Mustard or Ketchup:

Sponge with mild soap and water. For stubborn stains that have set, use a cloth soaked in diluted mild detergent with gentle rubbing. Any remaining stain should be washed with diluted bleach. Rinse repeatedly with cold water.

Chewing Gum:

Scrape off as much gum as possible using a dull knife. Rub the gum with an ice cube to harden and for easier removal. In a well ventilated area, use a cloth saturated with mineral spirits and gently rub the remaining gum. Rinse thoroughly with clean water.

Blood or Plant Residue:

Rub out spots using a clean cloth soaked in cool water. For stubborn spots, use household ammonia and rinse repeatedly with a clean, wet cloth. **DO NOT use hot water or soap suds as this will set the stain.**

Lipstick, Grease, Oil, Make-Up or Shoe Polish:

Apply a small amount of mineral spirits with a cloth. Rub gently. Be careful not to spread the stain by smearing beyond the original source. Remove shoe polish immediately as it contains a dye which will cause permanent staining. Rinse thoroughly with clean water.

Candy, Ice Cream, Coffee, Tea, Fruit Stains, Liquor, Wine, Tanning Lotion or Soft Drinks:

Loose material should be gently scraped with a dull knife. Use lukewarm water and sponge repeatedly. Any soiled area that remains after drying should be gently rubbed with a cloth or dampened with a mild detergent solution. Rinse thoroughly with clean water.

TIP

Vinyl requires periodic cleaning to maintain its appearance and to prevent the buildup of dirt and contaminants that may permanently stain or reduce the life of the vinyl if left untreated. Frequency of cleaning and procedures used depend upon the amount of use and the environmental conditions in which the vinyl is subjected. Tears or holes in the vinyl can be temporarily covered with clear tape to prevent

further damage. Repairs should be made by a professional upholstery shop. Commercial repair products may contain lacquers and cause the vinyl to become brittle and more difficult to repair.

Optima Leather & "O" Vinyl**Cleaning Suggestions:**

The following steps are to be performed in sequence. Each subsequent step is to be used if the previous step was not successful. Clean area with warm water after each process.

For General Cleaning:

Wipe the soiled area with warm water, a mild detergent soap and a soft cotton cloth.

For Oil-based Stains:

Spray soiled area with household cleaner, such as 409® or Fantastik®, and wipe with warm water using a soft cotton cloth.

For Marker-type Stains:

Dab stained area with solution of 50% Isopropyl Alcohol and 50% warm water using a soft cotton cloth.

WARNING

DO NOT use an alcohol solution near open flames or hot lighting.

CAUTION

DO NOT use any abrasive cleaner with this material.

NOTE

A five parts water to one part bleach solution is recommended for disinfecting.

Leather

Spots & Spills:

Absorb excess liquid immediately with a clean cloth or sponge. Use water only if necessary. **DO NOT** use a cleaning product. If water is used, clean the entire area where the spot occurred. An example would be the entire seat cushion or the entire arm. Allow to air dry. **DO NOT** dry the wet areas with hair dryers, etc.

Stubborn Spots and Stains:

Use lukewarm water and a mild soap to work up a thin layer of suds on a piece of cheesecloth. Scrub the surface. Rinse with a piece of clean, damp cheesecloth. Allow to air dry. **DO NOT** use saddle soap, cleaning solvents, furniture polish, oils, varnish, abrasive cleaners, soaps or ammonia water.

NOTE

These are recommended or suggested methods of cleaning. The manufacturer is not responsible for damage incurred while cleaning. Always test the cleaning method in an inconspicuous area first before applying to the entire area.

Ultra-Leather

Care Instructions:

- ◆ Spot clean with mild soap and water.
- ◆ Air dry or dry using a hair dryer on the warm setting.
- ◆ For stubborn stains, use mild solvent.
- ◆ For tougher stains, try *Fantastik*® brand spray cleaner.

- ◆ Disinfect with a 5:1 NON-CHLORINATED (only) bleach solution.
- ◆ Dry clean using commercial dry cleaning solvents only.
- ◆ Use a mild detergent for:
 - Red Wine, Liquor, Coffee, Tea, Cola, Milk
 - Ketchup, Mustard, Mayonnaise, Steak Sauce, Soy Sauce
 - Butter, Salad Oil, Chocolate, Lipstick, Make-up, Face Cream
 - Suntan Oil, Machine Oil, Urine, Blood

Removing ballpoint pen stains:

Wipe the stain off with ethanol (ethyl alcohol). Follow all manufacturer safety instructions when using chemicals.

If the stain remains, use the following procedure:

1. Dilute household bleach (sodium hypochloride) with the same amount of water. (One part to one part solution.)
2. Apply the bleach/water solution to a piece of tissue (**DO NOT** apply too much). Place the tissue on the stained surface and cover it with polyethylene film to prevent the solution from drying.
3. Periodically remove the tissues to check on the condition of the stain. When the stain is almost gone, remove the tissues completely. **DO NOT** leave on for more than one hour.
4. Wash the stain with sufficient amount of clean water.

CAUTION

If bleach residue remains on the fabric, the polyurethane resin and back cloth will yellow and deteriorate.

Neutralize bleach by the following method:

- ◆ Place a piece of tissue, as in Step 2, and apply hydrogen peroxide solution (15%).
- ◆ Leave the solution on for approximately 30 minutes, then remove the tissue.
- ◆ Completely remove the residue of hydrogen peroxide on the Ultra-leather with water.

For more information, please call:
Ultrafabrics, LLC Customer Service:
1-877-309-6648

FLOORS

Carpet Cleaning

Spot Removal Procedures:

- ◆ Act quickly when anything is dropped or spilled. Remove spots before they dry.
- ◆ Blot liquids with a clean, white absorbent cloth or paper towel.
- ◆ For semi-solids, scoop up with a rounded spoon.
- ◆ For solids, break up and vacuum out as much as possible.
- ◆ Pretest the spot removal agent in an inconspicuous area to make certain it will not damage the carpet dyes.
- ◆ Apply a small amount of the cleaning solution recommended for the particular spot. **DO NOT** scrub. Work from the edges of the spot to the center. Blot thoroughly. Repeat until spot is removed.

- ◆ Follow steps on the Carpet Spot Removal Guide.
- ◆ After each application, absorb as much as possible before proceeding to the next step.
- ◆ Absorb remaining moisture with layers of white paper towels, weighted down with a non-staining glass or ceramic object.
- ◆ When completely dry, vacuum or brush the pile to restore texture.
- ◆ If the spot is not completely removed, contact a professional carpet cleaner.

Cleaning Solutions:

A. Dry Cleaning Fluid: A nonflammable spot removal liquid, available in grocery and hardware stores.

B. Nail Polish Remover: Any acetate, which often has a banana fragrance. **DO NOT** use if it contains acetone.

C. Detergent Solution: Mix two cups of cold water and 1/8 teaspoon mild liquid detergent (no lanolin, non-bleach).

D. Warm Water: Lukewarm tap water.

E. Vinegar Solution: One cup white vinegar to one cup water.

F. Ammonia Solution: One tablespoon household ammonia to one cup water.

G. Stain Removal Kit: Available from retail carpet stores or professional cleaners.

H. Call Professional: Additional suggestions, special cleaning chemicals or the ability to patch the area may be available.

| | A | B | C | D | E | F | G | H | I |
|---|--------------------|---------------------|--------------------|------------|------------------|------------------|-------------------|-------------------|------------------|
| Use the solution specified in order from 1-8 until stain is removed. | DRY CLEANING FLUID | NAIL POLISH REMOVER | DETERGENT SOLUTION | WARM WATER | VINEGAR SOLUTION | AMMONIA SOLUTION | STAIN REMOVAL KIT | CALL PROFESSIONAL | PERMANENT CHANGE |
| SPOTS | | | | | | | | | |
| Acid | | | | 2 | | 1 | | 3 | * |
| Acne Medication | | 1 | | 2 | 5 | 4 | 3 | 6 | * |
| Alcoholic Beverage | | | 1 | 4 | 3 | 2 | | | * |
| Ammonia | | | | 2 | 1 | | | | * |
| Bleach | | 1 | 2 | | | | | 3 | * |
| Blood | | 1 | 3 | | 2 | 4 | | | |
| Candle Wax | 1 | | | | | 2 | | | |
| Cement & Glue | 2 | 1 | 3 | | 5 | 4 | 6 | | * |
| Chalk | | 1 | 2 | | | | | | |
| Charcoal | | 1 | 2 | | | | | | |
| Chewing Gum | 1 | | | | | | | | |
| Coffee | | | 1 | 3 | 2 | | 4 | 5 | * |
| Cosmetics | | 2 | 1 | 3 | 6 | 5 | 4 | 7 | * |
| Crayon | 1 | | 2 | 3 | | | | | |
| Drain/Toilet Cleaner | | | 2 | 1 | 3 | | | 4 | * |
| Dye | 1 | 2 | | 4 | 3 | 5 | 6 | | * |
| Food | | | 1 | 4 | 3 | 2 | 5 | 6 | * |
| Fungicides, Insecticides, Pesticides | 1 | | 2 | 5 | 4 | 3 | 6 | * | |
| Furniture Polish (Water Based) | | | 1 | 4 | 3 | 2 | 5 | 6 | * |
| Furniture Polish (Solvent Based) | 2 | 1 | 3 | 6 | 5 | 4 | 7 | 8 | * |
| Furniture Stain | 2 | 1 | 3 | 6 | 5 | 4 | 7 | 8 | * |
| Graphite | | 1 | 2 | | | | | | |
| Grease | 1 | 2 | 3 | | | | 4 | 5 | * |
| Ink | 2 | 1 | 3 | 6 | 5 | 4 | 7 | 8 | * |
| Iodine | 1 | | 2 | 5 | 4 | 3 | 6 | 7 | * |
| Lipstick | 2 | 1 | 3 | 6 | 5 | 4 | 7 | 8 | * |
| Medicine | 2 | 1 | 3 | 6 | 5 | 4 | 7 | 8 | * |
| Merthiolate | | | 1 | 4 | 3 | 2 | 5 | 6 | * |
| Nail Polish | 2 | 1 | 3 | | | | 4 | 5 | * |
| Oil | 1 | | 2 | 4 | | 3 | | 5 | * |
| Paint | 2 | 1 | 3 | | | | 4 | 5 | * |
| Plant Food | | | 1 | 4 | 3 | 2 | 5 | 6 | * |
| Rust | | | 2 | 3 | 1 | | 4 | 5 | * |
| Shoe Polish | 2 | 1 | 3 | 5 | | 4 | 6 | 7 | * |
| Soft Drinks | | | 1 | 4 | 3 | 2 | 5 | 6 | * |
| Soot | 1 | | 2 | 3 | | | | 4 | * |
| Tar | 1 | | | | | | 2 | 3 | * |
| Toothpaste | | | 1 | | | | | | |
| Urine | | | 1 | | 2 | | 3 | 4 | * |
| Vomit | | | 1 | 4 | 3 | 2 | 5 | 6 | * |

* While recommended cleaning agents are effective, some stains may become permanent.

I. Permanent Change: Due to the nature of the stain, there may be color loss. The carpet has been permanently dyed or the carpet yarns have been permanently damaged.

NOTE

While the recommended cleaning agents have proven to be effective, some stains may become permanent.

Tile Floor

Tile floors vary in porosity and surface irregularities. Regular maintenance is important to keep the tile in the motorhome looking showroom new. When the slide-out is extended, keep the tile floor clean to prevent dirt from scratching the tiles prior to retracting the slide-out.

NOTE

Tile is ceramic and will chip or break. Avoid dropping heavy or sharp objects on the tile.

Cleaning Tile:

Use a damp sponge mop or a cloth to clean tile. If moderate staining occurs, cleaning with a window cleaner such as *Windex*® should do the job. A mild solution of hot water and all-purpose cleaner for tile floors, walls and countertops can also be used. Rinse well with clear water and dry with a soft cloth to prevent streaking. Avoid cleaning tile with soap. Soap forms a film to dull the luster. Soap also promotes the growth of mildew and bacteria. **DO NOT** use powdered cleaners on unglazed tile floors. Undissolved powder will dull the surface.

NOTE

Before using any solution to clean the tile, check the manufacturer's warning label to ensure safety of the product. If there is any doubt, apply several test patches of the solution in an inconspicuous place to determine product suitability.

Grout:

Typical grout is a two part concrete mix and can develop surface cracks over time. In motorhome application, due to the constant flexing of the flooring, this process may accelerate. If the grout requires cleaning, scrub with a plastic brush. **DO NOT** use steel wool as small particles may remain and produce unsightly stains.

Sealing the Tile:

Grout sealers are available that protect the porous surfaces. If a sealer is used, follow the sealant manufacturer guideline for application. Never use sealers on unglazed tile. With the exception of terra-cotta, which may be oiled or waxed, tile does not need to be polished or buffed to maintain its finish.

Apply sealant to the tile floor and grout to prevent discoloring from soils and spills. Follow the sealant manufacturer's application instructions carefully.

CAUTION

Open windows, vents and doors to provide adequate airflow during sealant application.

NOTE

It is recommended to test a small amount of sealant on an inconspicuous area before applying to the entire floor. Avoid getting sealant onto surfaces other than the flooring.

To Apply:

1. Extend slide room(s) and clean floor. Allow floor and grout to thoroughly dry.
2. Working from rear towards doorway, apply sealant direct from container onto a cloth towel or broom handle applicator. Grout sealant applicators are available at large hardware stores.
3. Apply only enough sealant to wet surface. **DO NOT** allow sealant to puddle in grout lines. Extra care should be used to make sure all grout is sealed. Only one application is necessary.
4. Allow five hours to dry. Sealant will cure in approximately 72 hours.

NOTE

If a spill occurs before sealant has cured, it may be necessary to clean and additionally treat area with sealant as needed.

Laminate Floor

Laminate flooring used in the motorhome provides style, durability and ease of maintenance. This high-pressure laminated flooring is designed to be incorporated as a floating floor.

Laminate flooring is constructed of three main material components. The surface, similar to many countertops, contains aluminum oxide particles to form an extremely hard, durable outer layer. The carrier, or core layer, is constructed from high density fiberboard. A tongue and groove design provides a tighter bond. The backer or bottom layer is also made of laminate for strength.

Cleaning and Maintenance:

For everyday cleaning, vacuum the floor to remove dirt and debris. It is recommended to occasionally mop the floor using a cotton string mop and a minimal amount of water. Use a mixture of soap-free household cleaner (either vinegar or ammonia work well) and water for a more thorough cleaning.

SHOWER

Showers are susceptible to soap build-up. To control mildew growth, spray the shower with household chlorine bleach. Allow it to stand for five minutes, then rinse with clear water. Clean the glass shower doors with window cleaner on a weekly basis to maintain shine. If water spots cannot be removed from glass, rub lightly with the flat edge of a razor blade to remove deposits.

To prevent excessive moisture and a continual growth of mildew, use the shower only with adequate ventilation. The sealant in a regularly used shower should be replaced once a year. To replace sealant, remove the old sealant using a sharp non-metallic instrument. Apply a new sealant, which can be found at most recreational vehicle supply stores.

CEILING

The ceiling of the motorhome can be a variety of materials or fabrics.

Hardwood, Vinyl and Decorated Paneling:


Certain cleaning agents will affect the surface on both printed and unprinted vinyl. Use only a mild, non-abrasive detergent and warm water with a soft cloth or sponge to clean. **DO NOT** use bleach, alcohol, oil-based spray cleaners or cleaning agents that contain solvents, citrus oil or harsh chemicals.

WALL COVERINGS

Immediately remove solvent based or pigmented substances from wall coverings. **DO NOT** use abrasive cleaners containing chlorine bleach or solvents. *Fidelity* and *Jolie* brands are recommended. Always begin with a mild detergent or soap and warm water. To remove normal dirt, clean with a soft sponge. Rinse and wipe dry. Before applying a cleaner, test the cleaning agent on a small, inconspicuous portion of the wall covering to ensure the cleaner does not affect the color or gloss of the wall covering.

Care for the Tower Wall Covering:

Remove ordinary stains with mild soap and warm water. Sponge on. Rinse well and dry with a soft cloth. To remove ball point pen, blood, lipstick, etc., use a sponge or soft bristle brush and *Formula 409*®, *Fantastik*® or a similar product. Rinse well and dry. Finish cleaning by applying full strength isopropyl alcohol with a sponge or soft brush. Rinse well and dry.



Care for the Satinesque Wall Covering:

Remove stain quickly to minimize the reaction on the wall covering, especially if the stain is solvent-based or pigmented. *Examples:* nail polish, oil, shampoo, lacquer, enamel, paint, ink and lipstick.

Begin cleaning the stain with a mild soap-based detergent; and if necessary, move to a stronger cleaner such as household bleach, liquid household cleaners or rubbing alcohol. Before applying a stronger cleaner, test the cleaning agent on a small inconspicuous portion of the wall covering to ensure the cleaner does not affect the color or gloss of the wall covering.

Removal Procedures for Specific Stain Types:

Normal Dirt:

Remove normal dirt using a mild soap or detergent and warm water. Allow it to soak for a few minutes then rub briskly with a cloth or sponge.

Nail Polish, Shellac or Lacquer:

Remove liquid using a dry cloth. Use care not to spread the stain. Quickly clean the remaining stain with rubbing alcohol. Rinse with clean water.

Ink:

Remove immediately by wiping with a cloth dampened in rubbing alcohol. Rinse with clean water.

Chewing Gum:

Rub with an ice cube to cool and harden. Gently pull off the bulk of the gum. Remove remaining gum with rubbing alcohol.

Pencil:

Erase as much of pencil mark as possible. Wipe remaining marks with rubbing alcohol.

Blood, Feces or Urine:

Remove these staining substances as quickly as possible. Wash the stained area with a strong soap. If the stain does not disappear, rinse the soapy area thoroughly with clean water. Mix a solution of 50% water and 50% household bleach. Clean the stained area with the bleach solution. Rinse with clean water.

WOOD CARE

For general cleaning, regularly wipe wood surfaces using a soft cloth lightly dampened with clear warm water. Thoroughly dry to prevent streaking. For stubborn stains, use a clean cloth dampened with a solution of mild non-alkaline soap (dishwashing liquid) and water and rinse. Dry thoroughly, buffing in the direction of the wood grain. **DO NOT** use abrasive cleaners, scouring pads or powdered cleansers. Polishing products used on the solid wood surface depends on individual preference. Always follow product instructions.

Excessive dampness, dryness, heat, or cold can damage solid wood finishes. Sunlight can change the color or age the wood. **DO NOT** allow moisture or spills to stand, always blot dry immediately. Solvents, alcohol, nail polish and polish removers, as well as harsh cleaners, should not be used on finished wood surfaces.

Minor damage to solid wood surfaces can be repaired quickly and effectively with a bit of hard work, some careful attention to details, and most importantly, the right materials. However, any wood repair or finishing job is best left for a professionally trained individual.

NOTE

It is important to inform the service technician of any products used for the care and cleaning in the event of wood repairs.

Sanding and Sandpaper:

The following table is a general guide, but this may vary with wood type. The key to sanding is using the right sandpaper for the repair that is needed. Always sand with the grain.

| GRIT | GRADE | USE |
|---------|------------|--|
| 80-120 | Medium | Smoothing the surface, removing small marks. |
| 150-180 | Fine | Final sanding prior to finishing. |
| 220-240 | Very Fine | Sanding between coats of sealing. |
| 280-320 | Extra Fine | Removing dust spots or marks between finish coats. |
| 360-600 | Super Fine | Removing luster or surface blemishes. |

Steel Wool:

Abrasive material composed of long steel fibers of varying degrees of fineness that are matted together. Coarser grades are used to

remove paint and other finishes; the finer grades for polishing or smoothing a finished surface.

Nail Holes and Small Cracks:

Fill nail holes and small cracks with wood putty or dough for unstained woods prior to any sanding. Stained finishes require filling holes and cracks after the stain has been applied. Putty should match the stain closely in color.

TIP

A little sawdust and wood glue can be used to make putty for end grains.

Scratches and Nicks:

“Quick and simple” rarely describes repairs to stained wood finishes; however, a few tricks used by professional woodworkers can be tried to repair nicks and scratches.

Fixing scratches in stained woodwork:

Light scratches will often disappear when carefully rubbed with furniture polish or paste wax. When scratches appear lighter than the surrounding dark-stained woodwork, it usually means either that the scratch goes through the stain into the wood or that the varnish is flaking off. Deeper scratches can be hidden by carefully rubbing with a piece of oily nut meat such as Brazil nut, black walnut or pecan. Be careful to rub the nut meat directly into the scratch to avoid darkening of the surrounding wood. Color the scratch with brown coloring crayon or liquid shoe dye (especially good on walnut). Always test a procedure on an inconspicuous area on the wood to ensure no damages to the finish occurs.

Staining the scratch with iodine:

Mahogany - Use new iodine.

Brown or Cherry Mahogany - Use iodine that has turned dark brown.

Maple - Dilute one part iodine with one part denatured alcohol.

Commercial scratch removers, or stick wax to match the wood finish, can also be used. After the scratch has been hidden, polish or wax the entire area. Deep scratches should be repaired and finished by a professional.

Dents:

Small dents may be repaired by using steam. To raise a small dent, place a damp cloth over the area and hold a medium-hot iron on it. The steam causes the wood fibers to swell back into place. It may be necessary to repeat this process until the dented area is level with the surface. Allow the area to dry.

Restoring the clear finish:

The finished surface on the wood is a clear lacquer coating. The lacquer finish can be repaired should the finish become dulled or scratched. Scratches extending into the wood will require wood repair by filling the damaged area. If there is light damage, the wood can be steamed to bring the wood surface level.

Lacquer finish sheen can be restored by carefully using 0000 steel wool or equivalent. Sand damaged lacquer with fine sandpaper. Once the scratched surface is smooth, apply a clear lacquer coating using an aerosol. Lacquer can be applied by cloth or brush, but best results are obtained from an aerosol. If necessary, use 0000 steel wool or equivalent to bring out the luster and smooth overspray.

CAUTION

Use top coats and finishes in accordance with the manufacturer's safety instructions. Use only in well ventilated areas with proper respiratory filters and masks.

Re-staining the wood:

If bare wood is visible at the bottom of the scratch, the wood will need to be re-stained. To remove damaged varnish, lightly roughen a small area around the scratch with sandpaper, steel wool or synthetic steel wool. Find a stain that is a shade lighter than the wood finish. Stain the bare wood with a very small amount of stain on a rag, brush or cotton swab. If the color is too light, apply additional coats. Rub away excess stain with a dry rag. If the wood becomes too dark, use a rag moistened in mineral spirits to lighten the wood. Select a lighter color stain and continue.

Several companies have simplified this repair process by designing oil-based wood stain into marker-like containers to rub on to the scratch. Torn and scratched wood fibers will absorb stain and darken quickly. Start with a stain color that is lighter than the original finish. A second coat can always be applied if the color of the first coat is too light. Once the color is blended, patch the clear finish as described above and apply a wipe-on finish.

COUNTERTOPS

Solid Surface

Routine Care:

The motorhome solid surface countertops and sinks have a matte/satin finish. Soapy water or ammonia-based cleaners will remove most dirt and stains from all tops and bowls.

Individual techniques may be used to remove different stains. Follow the recommendations below.

Cleaning the Countertops:

- ◆ **Most dirt and stains:** Use soapy water or ammonia-based cleaner.
- ◆ **Water marks:** Wipe with damp cloth and towel dry.
- ◆ **Difficult stains:** Use soft scrub and a grey *Scotchbrite* Pad.
- ◆ **Disinfecting:** Occasionally wipe surface with diluted household bleach (one part water and one part bleach).

Cleaning the Solid Surfaces Sink:

Occasionally clean by using *Soft Scrub Liquid Cleanser* and a grey *Scotchbrite* pad. Scrub the sink, rinse and towel dry.

Removing Cuts and Scratches:

Solid Surface countertops are completely renewable. Use the following instructions to remove minor cuts and scratches.

- ◆ Sand area starting with 180 grit sandpaper, working your way up to 2000 grit or until blemish is gone and renewed finish is achieved.
- ◆ **DO NOT** sand in one small area. Feather out lightly at each increase in sandpaper grit to blend restoration.

Preventing Heat Damage:

Hot pans and heat-generating appliances, such as frying pans or crockpots, can damage the surface. To prevent heat damage, always use a hot pad or a trivet with rubber feet to protect the surface.

Other Important Tips:

Avoid exposing the solid surface to chemicals such as paint removers or oven cleaners. If these chemicals come in contact with the Solid Surface, quickly wash with water. Avoid contact with nail polish or nail polish remover. If contact is made, quickly wash with water.

CAUTION

DO NOT cut directly on the solid surface. When pouring boiling water into the Solid Surface sink, run the cold water faucet to dilute the excess heat.

Laminate

Clean laminate countertops with a damp cloth or sponge. Use a spray cleaner to remove stubborn stains. Avoid using harsh abrasives, scouring powders, peroxides or bleaches as these products may dull or damage the surface. Avoid contact with dyes, bleaches and indelible inks used on food packages. **DO NOT** use laminated countertops as a cutting board. Laminated countertops are resistant to minor heat; however, hot pans, irons and lit cigarettes damage the surface. Use hot pads under pans taken directly from the stovetop.

CAUTION

DO NOT cut directly on the laminate surface.

STAINLESS STEEL SURFACES

Stainless steel can be easily damaged by improper cleaners. For example: many liquid cleansers designed to be gentle on smooth surfaces will damage stainless steel. Only use the methods outlined below, and always follow the directions that come with the cleaner (usually located on the bottle).

General Cleaning:

- ◆ Use warm, soapy water and dry with a soft, clean cloth.

For Heavy Soiling:

- ◆ Only use a stainless steel cleaner designed specifically for appliances.
- ◆ Follow all directions from the manufacturer of the cleaner.

DO NOT USE:

- ◆ Abrasive powders or cleaners
- ◆ Citrus-based cleaners
- ◆ Ammonia
- ◆ Steel wool pads
- ◆ Abrasive cloths
- ◆ Oven cleansers
- ◆ Acidic or vinegar based cleaners

CAUTION

Citric acid permanently discolors stainless steel. Immediately remove the following items from stainless steel surfaces: mustard, tomato juice, marinara sauce and citrus-based sauces or products.

CAUTION

DO NOT cut directly on the stainless steel surface.

WINDOWS

Water Spots:

Glass will develop water spots when not properly cleaned. Water spots are magnified on a reflective finish. Use a squeegee immediately after washing to reduce water spotting. To remove stubborn water stains from reflective glass we recommend *Cerium Oxide Polishing Compound*, made by C.R. Lawrence, available at most glass shops.

WINDOW TREATMENTS

Mini-Blinds

Dusting:

Regular dusting will maintain the appearance of the mini-blinds. Keep aluminum blinds looking their best by periodically wiping with a soft cloth or a dusting mitt. By tilting the slats down, not quite closed, most of the top surface of each slat can be cleaned. Blinds may be cleaned while hanging in place using this method.

Vacuuming:

For deeper cleaning, vacuum gently with the soft brush attachment of a vacuum cleaner.

Compressed Air or Hair Dryer (non-heat setting):

Blow dust off each slat. Dust will be air-borne using this method so ventilate the motorhome.

Spot-Cleaning:

Spot-clean shades and blinds using a soft cloth or a moistened sponge with lukewarm water. Add mild detergent, if needed.

Blot gently to avoid creasing. In a dusty environment the blinds may need to be regularly cleaned using a sponge or dampened soft cloth. Use warm (not hot) water and a mild detergent that does not contain abrasives. Rinse the blinds using a clean cloth and water to prevent water spots. Place a towel directly under the blinds to absorb water that may drip.

Ultrasonic cleaning:

Professional ultrasonic cleaning may be preferred.


Day/Night Shades

Leave Day/Night shades in the up position when not in use to help the shades hold their shape.

Tension Adjustment:

Tension should be adjusted if the shades are loose or there is excessive vibration. A button is located on the bottom of the shade at each end. Two lines on each side of the shade are threaded through the button and tied off.

- ◆ Pull the tied-off lines through the button to increase tension. Leave some slack so the shades are not too tight.
- ◆ Tie the lines off at the new position. Adjust each side equally.
- ◆ Operate the shades to ensure tension is set correctly and equally on both sides.
- ◆ Trim excess line from both sides if desired.

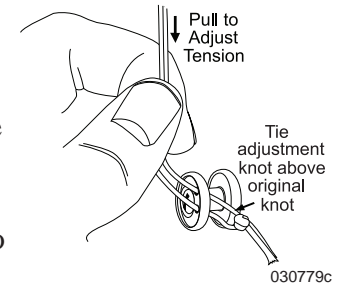

Dusting:

Vacuum with a brush attachment or use a dusting tool on a regular basis.

Cleaning:

A dry foam cleaner may be used for soil and dirt removal. Follow all directions on the container, or use a cleaning solution of ¼ oz. clear liquid soap to 8 oz. water.

NOTE

DO NOT use colored liquid soap as a stain may appear when fabric dries.

CONDENSATION

Condensation occurs from water vapor present in the air. More vapor is added by breathing, bathing, cooking, etc. collects wherever there is available air space. When the temperature reaches the dew point, the water vapor in the air condenses and changes to liquid form.

Controlling Moisture Condensation:

Reduce or eliminate interior moisture condensation during cold weather by using the following steps:

- ◆ Partially open the roof vents and windows so that outside air can circulate into the interior. Increase the ventilation when large numbers of people are in the motorhome. Even in raining or snowing conditions the air outside will be far drier than interior air.

- ◆ Install a dehumidifier. Continuous use of a dehumidifier is effective in removing excess moisture from interior air. Using a dehumidifier is not a cure-all, however, it will reduce the amount of outside air needed for ventilation.
- ◆ Run the range vent fan when cooking and the bath vent fan (or open the bath vent) when bathing, to reduce water vapor. Avoid excessive boiling or use of steam producing hot water.
- ◆ **DO NOT** heat the motorhome interior with the range or oven. Heating with the range or oven increases the risk of toxic fumes and depletes oxygen. Open flames also add moisture to the interior air and increase condensation.
- ◆ In very cold weather, leave cabinet and closet doors partially open. Air flow will warm and ventilate the interior storage compartments and exterior walls to reduce or eliminate condensation and prevent the possibility of ice formations.

MOLD & MILDEW**What is Mold?**

Mold is a type of fungus that occurs naturally in the environment and can leave a musty odor, discolor fabrics, stain surfaces and cause considerable damage to the motorhome.

What Does Mold Need to Grow?

Mold requires a food source to grow such as grease or soil. Synthetic fabrics, such as acetate, polyester, acrylic and nylon, are mildew resistant, but soil on the surface of these fabrics are susceptible to mold.

Temperate climate and moisture also help to cultivate mold growth. Moisture in the motorhome can result from unattended spills, leaks, overflows and condensation. Moisture allowed to remain on a growth medium can develop mold within 24 to 48 hours. Minimizing moisture inside of the motorhome can reduce or eliminate favorable mold growth conditions. Good housekeeping and regular maintenance are essential in the effort to prevent or eliminate mold growth.

Consequences of Mold:

All mold is not necessarily harmful, but certain strains of mold have been shown to cause, in susceptible persons, allergic reactions, including skin irritation, watery eyes, runny nose, coughing, sneezing, congestion, sore throat and headache. Individuals with suppressed immune systems may risk infection. Some experts contend that mold causes serious symptoms and disease which may even be life threatening. However, experts disagree about the level of mold exposure that may cause health problems, and about the exact nature and extent of the health problems that may be caused by mold. Moreover, the Center for Disease Control states that a casual link between the presence of toxic mold and serious health conditions has not been proven.

Standards or threshold limit values for concentration of mold or mold spores have not been set. Currently, there are no EPA regulations or standards for airborne mold contaminants. There is simply no practical way to eliminate all mold and mold spores in the indoor environment. For example, studies have shown that ozone cleaners are not effective at killing airborne mold or surface mold contamination.

Controlling Mold Growth:

The motorhome owner should eliminate mold growth in the motorhome. Take the following steps to eliminate mold growth in the motorhome:

- ◆ Carefully examine items for signs of mold before loading them in the motorhome. Potted plants (roots and soil), furnishings, clothing and linens, as well as many other household items, may contain mold.
- ◆ Regular vacuuming and cleaning will help reduce mold levels. Mild bleach solutions and most tile cleaners are effective in eliminating or preventing mold growth.
- ◆ Indoor humidity can be reduced by 30 to 60% when venting clothes dryers to the outdoors. Ventilate the kitchen and bathroom by opening windows, using exhaust fans or a combination of both. Operating the air conditioning will remove excess moisture in the air, and help facilitate evaporation of water from wet surfaces.
- ◆ Promptly clean up spills, condensation and other sources of moisture. Thoroughly dry any wet surfaces or material. **DO NOT** let water pool or stand in the motorhome. Promptly replace materials that cannot be thoroughly dried.
- ◆ Inspect for leaks on a regular basis. Look for discolorations or wet spots. Repair leaks promptly. Inspect condensation pans (refrigerators and air conditioners) for mold growth. Take notice of musty odors and any visible signs of mold.

- ◆ Should mold develop, thoroughly clean the affected area with a mild solution of bleach. First, test to see if the affected material or surface is color safe. If mold growth is severe, call on the services of a qualified professional cleaner.
- ◆ If mold cannot be removed, throw the item away.

Whether or not a motorhome owner experiences mold growth depends largely on how the motorhome is managed and maintained. As a manufacturer, our responsibility is limited to things that we can control. As explained in the written warranty, we will repair or replace defects in the construction (defects defined as a failure to comply with reasonable standards of motorhome construction) for the Limited Warranty coverage period provided. **THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR DAMAGE CAUSED BY MOLD THAT MAY BE THE CONSEQUENCE OF OR ASSOCIATED WITH DEFECTS IN THE CONSTRUCTION.**

PEST CONTROL

Regardless of the area one lives in or travels to, it is safe in stating there will be pests waiting. These pests are not only annoying; they can pose a health risk and create serious damage to the motorhome.

- ◆ Common pests include insects such as ants, cockroaches, termites, flies, pantry pests and wasps as well as wildlife such as rodents, raccoons, bats, birds and snakes. It is important to remember that pests are searching for food, water and a place to live. Eliminating any one of those elements will help control the pest infestation. Take immediate steps to remove pests as soon as their presence is detected.

Steps to help control pests:

- ◆ Reduce clutter inside the motorhome and storage compartments. All storage items, particularly food (including pet food), should be kept in tightly sealed containers. Seal all cracks and holes, and insure that window, door and vent screens are securely in place.
- ◆ Routinely clean the motorhome, including storage compartments. Wipe down the water service center. Promptly remove all crumbs from areas where food is regularly prepared and eaten. Garbage should be placed in a sealed container and removed to an outside receptacle daily. Only put out pet food that will be immediately eaten.
- ◆ Keep foods such as flour, cereal, spaghetti and pet food in re-sealable containers with tight lids.
- ◆ Sweep and vacuum often (especially in eating areas) to help eliminate a food source for pests.
- ◆ Seal cracks, crevices, and gaps around doors and windows.

- ◆ Many pests need moisture to successfully live and reproduce. Limit their access to water or moisture sources by sealing any cracks and leaks in pipes and faucets. Reduce moisture in the motorhome by controlling condensation, immediately wiping up spills and promptly repairing leaks. Be extra alert around areas that attract rodents and insects, including the sewer hose, fresh water hose, compartment doors and items that may be leaning against the outside of the motorhome, such as fishing poles and golf clubs.
- ◆ When the motorhome is stored outdoors, clear the surrounding area of all rodent friendly hiding places: shrubs, trees and clutter. Completely seal the underside of the motorhome. Wire mesh will work well to prevent points of entry, but beware of blocking necessary air vents. Prior to operating the motorhome after storage, remove all insect and animal nests that may have developed around vents, engine compartments, the exhaust pipe and in the wheel wells.

Rodents:

Rodents may chew through wires or build nests in components of the motorhome. Signs of rodent infestation include droppings, shredded material or chewed furniture fabrics and vinyl. Rodents like to build nests with wire insulation, and are commonly attracted to the outside coating of 120 Volt AC wiring more than 12 Volt DC wiring.

NOTE

Although the back cap of the motorhomes is well sealed, rodents are capable of chewing through the foam insulation and that area should be routinely inspected.

If there are signs of rodent infestation around the motorhome, place traps or poisons in suspected areas. Keep the traps and poisons safely away from pets and children. Cheese is not the best bait for a rodent trap. Use peanut butter or chocolate in small amounts. Place the bait on the trigger of the trap to induce the rodent to climb onto the trigger to reach the bait. Rodents do not limit invasion to unused vehicles.

Insects:

Eliminate insects when signs of infestation appear. If unable to identify the type of insect, purchase sticky traps from the hardware store and place the tape where the insects have been seen. Once a sample is caught, seek assistance in identifying the insect to determine what will be required to remove the infestation.

Regularly inspect the exterior of the motorhome for signs of a budding wasp nest, and promptly destroy small nests before they become too large.

Spiders can be in any structure. Immediately remove spider webs. Some types of spiders like to nest on top of the diesel tank and around the diesel hoses. Dispense of spiders using a vacuum. Use care to capture the spider and egg sacs. Throw the vacuum bag away in a sealed bag.

Fruit flies invade the motorhome by attaching to fresh fruits and vegetables. Determine what food items are generating the flies and discard that item in an outdoor trash

receptacle. Fruit flies can be eliminated with a homemade trap. Pour a few ounces of vinegar into a cup and cover the cup with plastic wrap. Secure the wrap with tape or a rubber band and poke a ¼" hole in the plastic. Place the trap in the area where fruit flies are present.

Ants live in colonies. Only a fraction of the ant colony will leave to seek food. Spraying pesticides will only kill the ants that are away from the colony. The colony must be destroyed to eliminate all ants. Keep ants away from the sewer hose by spraying the hose ends with a soap and water solution.

Fleas can be removed by properly treating pets with a veterinarian approved treatment and by thoroughly cleaning the motorhome. Vacuum vinyl areas and tile floors to remove dust, flea larva and flea eggs. Follow by thoroughly washing those areas with soap and water. Carpets must be vacuumed and treated with a residual flea control product labeled safe for indoor carpet and furniture use. Perform the cleaning treatment daily for three days to ensure that all fleas have encountered the treatment.

Flying outdoor insects are attracted to bright light. Yellow porch light covers on the motorhome work to discourage insect invasion. During nighttime hours insects will be attracted to docking lights, or other bright exterior lighting.

If the presence of moths is detected inside of the motorhome, usually by holes appearing in material, clean the affected clothing and all other items stored in the same area. Follow by completely cleaning the closet, dresser or storage area. If cracks are detected, seal the cracks and treat the area with a properly labeled indoor pest control product.

Birds:

Even birds can be considered pests, particularly when the motorhome is parked in the flight path of a flock. Bird droppings are hard to remove and will leave stains. Prevent permanent staining to the motorhome roof by regularly cleaning the surface to remove all bird droppings.

Damage from Pests:

Lizards have been known to crawl into the inverter and short out the circuit board. Lizards can be captured using glue traps. To remove the lizard from the trap, dissolve the glue with vegetable oil and release it outside and well away from the motorhome. A scorpion will glow blue-green in UV light. If the presence of scorpions in the motorhome is suspected, investigate with an UV black light during the nighttime hours.

Best sources of information about common household pests:

The Internet is a great place to find information about common pests. The National Pest Management Association website can be useful resource about common pests. Another good source for information are colleges and universities with entomology (study of insects) departments.

Electronic pest control devices can be costly and most likely will not work on all types of rodents and insects. When calling on the services of a professional to combat pest infestation, call a reputable business that is licensed in handling pesticides. Check references. Explain that you are seeking assistance for a motorhome, as treatments may differ from standard household jobs.

If a pest problem is suspected in the motorhome, consider professional pest control help. The following guidelines can be used for selecting a pest control service:

- ◆ Seek referrals from those who have used pest control services. Inquire about the type of pest problem encountered and if they were satisfied with the service.
- ◆ Membership in the national, state or local pest control associations is a good indicator that the company has access to modern technical information and is committed to further education.
- ◆ Reach a complete understanding with the company before work starts; find out what the pest is, how the problem will be treated, how long the period of treatment will be, and what results can be expected.
- ◆ Be sure to understand what is guaranteed and what is not.

**STORAGE
Short Term**

Short term storage is defined as storing the motorhome for a period of thirty days or less. Properly preparing the motorhome during periods of short term storage will make bringing the motorhome out of storage a much easier process. Winterize the plumbing system if the motorhome is stored in winter months, or if stored when temperatures are below 32° F.

Checklist - Short Term Storage:

- ◆ Retract the slide rooms. **DO NOT** store the motorhome with slide rooms extended.

- ◆ Shut off all appliances. Close the primary propane shut-off valve.
- ◆ Remove all articles from refrigerator/freezer and clean thoroughly. Prop doors open to prevent mildew.
- ◆ Drain holding tanks. Winterize the fresh water system using FDA RV antifreeze or air pressure to evacuate the plumbing system.
- ◆ Retract and secure all awnings.
- ◆ Turn OFF the interior house power using the battery cut-out switch.
- ◆ Store house and chassis batteries fully charged. Batteries stored in a discharged state will readily freeze.
- ◆ If possible, position the motorhome so the house and chassis batteries are accessible. This allows a battery to be charged or replaced without moving the motorhome.
- ◆ If available, leave the motorhome hooked to shore power. Leave both the house and chassis battery disconnect switches ON.
- ◆ Careful placement of a small heat source in the interior will help control moisture. Desiccate filter systems will help remove interior moisture.
- ◆ If AC power is not available, turn both the house and chassis battery disconnect switches OFF.
- ◆ If possible, store the motorhome inside a storage building.
- ◆ If stored outside, inspect all seams and seals twice a month for possible leakage.
- ◆ Store the motorhome with a full fuel tank to minimize moisture condensing at top of fuel tank.

- ◆ Close vents and windows to prevent wind driven rain entrance.
- ◆ Store tires at maximum inflation pressure.
- ◆ Leave cabinet doors and drawers open to facilitate air movement behind those areas.
- ◆ Perform a full interior inspection for water leaks twice a month. Be sure to check behind all cabinet doors.

Long Term

Long term storage of the motorhome can be defined as leaving a motorhome unattended for a period of thirty days or more. A motorhome requires protection from the elements just as a house or a car would. When left out in the environment without proper storage or maintenance, a motorhome is vulnerable to the moisture and oxidation processes inherent in the environment.

NOTE

The natural process of condensation will occur with temperature changes of 30° F or more in one day. Humidity readings of 60% or greater will allow the accumulated moisture to remain for extended periods of time.

If AC power is not available in storage area:

- ◆ Turn OFF all appliances.
- ◆ Turn OFF interior house power using the battery cut-out switch.
- ◆ If possible, situate the motorhome so the house and chassis batteries remain accessible. This allows a battery to be charged or replaced without moving the motorhome.

- ◆ Charge the house and chassis batteries to a full state of charge.
- ◆ Turn both the house and chassis battery disconnect switches OFF.
- ◆ If applicable, cancel the Automatic Generator Start program. This will prevent unexpected power generation, exhaust fumes and a hot exhaust pipe from becoming a safety hazard.
- ◆ Check battery voltage while the motorhome is in storage. If the motorhome is stored outside, solar panels may offset the parasitic loads.
- ◆ Preventive measures should be used if the voltage readings are low. When using preventative measures, taking the motorhome out of storage or moving the motorhome in case of emergency is a much easier process.

NOTE

Batteries in a low state of charge will readily freeze. Freezing will damage the battery.

If AC power is available:

The house and chassis battery disconnect switches should remain ON. The inverter will charge both house and chassis battery banks. A 30 Amp shore power service will be more than adequate.

CAUTION

A 20 Amp service using light duty extension cords and the required adapters create serious voltage loss. Line voltage loss and the resistance at each electrical connection is a hazardous combination and should be avoided. Damage to sensitive electronic equipment may result!

Surfaces to park/store the motorhome on:

- ◆ Avoid parking the motorhome on a grass or gravel surface to prevent moisture accumulation.
- ◆ Concrete pads seal the surface and allow better ventilation under the motorhome.
- ◆ Storage buildings with concrete floors, or heated storage facilities, greatly reduce the amount of moisture accumulation and protects the motorhome from moisture damage.

Outdoor Storage Area:

- ◆ The interior should be heated to help prevent mold and mildew growth. Moisture removing desiccate filter systems are available from hardware and RV supply stores. Place the filter system inside the motorhome to reduce interior moisture condensation or humidity.
- ◆ Proper winterization of the fresh water system will prevent potential damage in extreme cold
- ◆ Ultraviolet radiation affects soft goods and rubber products such as privacy curtains, window shades and tires. These items should be protected. Store Day/ Night shades in the up position.
- ◆ Cardboard templates can be made for the windows to protect the interior from exposure to direct sunlight.
- ◆ Tire covers are available to protect the sidewall of the tires from cracking. Make sure tires in storage contain the correct air pressure to prevent damaged caused by underinflation.
- ◆ Regularly wash the exterior to help control moss accumulation. Waxing the motorhome twice a year will augment these substances.

Inspect the motorhome:

- ◆ Leave cabinet doors and drawers open to facilitate air movement behind those areas.
- ◆ Perform a full interior inspection for water leaks every two weeks while the motorhome is in storage. Check inside all cabinets for signs of dampness or leaks. Inspect the ceiling areas around roof vents or other roof openings.
- ◆ Inspect and clean the roof and sidewall seams at least once a year. Inspect for exterior sealant gaps of all roof seams, vents, skylights, roof air conditioners and windows.

Fuel:

Storing the motorhome with a full fuel tank will minimize moisture condensing at the top of the tank. Diesel fuel is an organic material which will develop a microbe growth (black slime). Fuel stabilizers may be added to control microbe growth and degrading of the fuel. Consult the engine OEM manual or a distributor for further detailed information on fuel stabilizers and additives.

Brakes:

Brakes suffer from non-use during periods of storage. The bare metal machined surfaces of brake drums or rotors have only a light coating of dust from the brake lining friction material. The brake dust is the only thing protecting the bare metal surfaces from rusting. Only regular brake applications dry the moisture preventing rust on brake drum or rotor surfaces. During periods of non-use, oxygen and moisture oxidize the machined surfaces. Only occasional use keeps these surfaces from

oxidizing. Rusty brake drum or rotor surfaces permeate the brake lining upon the first few applications, reducing the friction action of the linings.

Engine:

Internal combustion engines need to be “exercised” on a regular basis to ensure an adequate supply of lubricating oil coats the cylinder walls and piston rings. Valve and valve seat surfaces also suffer from non-use. Some valves will remain open depending at which part of the combustion cycle the engine has stopped. The heat and cold of the day allows moisture to accumulate through the exhaust system. Start all engines, including the generator, at least twice a month.

Electric Motors:

Electric motors in the motorhome should be occasionally operated to help lubricate and keep surfaces freely rotating. These include such items as the roof air conditioners, dash fans, dash blower motor, furnace and powered roof vents.

Winter Storage Checklist

- ◆ **Plumbing Lines** - Drain and protect. (*See Winterizing - Section 6.*)
- ◆ **Fresh Water Tank** - Drain.
- ◆ **Body** - Clean and wax. Oil locks and hinges. Repair roof seams as needed.
- ◆ **Countertop and Cabinets** - Wash with mild soap and water.
- ◆ **Curtains** - Remove and clean according to care specifications.

- ◆ **Windows** – To protect interior fabric from fading, cover windows by pulling blinds. For Day/Night shades use a separate cover such as a sheet or a cut out template. Day/Night shades hold their shape better if stored in the up position.
- ◆ **Holding Tank** - Drain and rinse. Close valves.

LUBE

Add a small amount of antifreeze to waste holding tanks to keep valves and gaskets lubricated.

- ◆ **Drain Traps** - Pour RV antifreeze down all drains.
- ◆ **Refrigerator** - Clean and leave both doors propped open. Cover exterior panels and roof vents. If equipped with an icemaker, drain icemaker and icemaker tray. See the manufacturer’s manual for more detail.
- ◆ **Batteries** - Add distilled water and recharge if needed. If necessary, disconnect the cables, remove the batteries and store them in a cool dry place. Check and recharge as needed.
- ◆ **Air Conditioner** - Remove the air filters. Clean or replace.
- ◆ **Roof** - Keep clear of snow accumulation or damage may occur.
- ◆ **Interior/Exterior** - Storing under cover or indoors helps extend interior and exterior life.
- ◆ **Fuel Tank** - Diesel fuel tank should be full of fuel.

Removal from Storage

Extensive freeze damage or other serious deterioration can occur if the motorhome is not properly winterized. If the motorhome is properly and carefully prepared for storage, removal from storage will not be difficult. The following checklist pertains to items or areas that should be inspected when it is time to take the motorhome out of storage and put back into operation. If there are any questions regarding storage or winterization, consult a qualified service technician.

- ◆ Thoroughly inspect the outside of motorhome. Look for animal nests in the wheel wells or in other out of the way places.
- ◆ Remove all appliance flue vent covers, ceiling vent covers and air conditioning covers. Be sure the refrigerator openings are free of debris, insect nests, webs, etc.
- ◆ Open all doors and compartments. Check for animal or insect intrusion, water damage or other types of damage which may have occurred.
- ◆ Check the state of charge of the batteries. If necessary, fill LLA cells with distilled water only. Charge as necessary. Inspect the cable ends and terminals. They should be secure and free of corrosion.
- ◆ Check all the chassis fluid levels: engine oil, engine coolant, hydraulic fluid reservoir, transmission oil and rear axle oil.
- ◆ Start the engine, allowing it to reach operating temperature. Ensure the engine instruments indicate proper readings.

- ◆ While the engine is running, check the operation of headlights, taillights, turn signals, back-up lights, license plate light and emergency flasher. Operate the dash air conditioner. If the air conditioner does not work or the compressor makes unusual noise, have the system checked by a qualified air conditioner technician.
- ◆ Shut the engine down. Adjust or add fluids as necessary. Inspect around the engine and under the motorhome for fluid leaks.
- ◆ Drain, sanitize and flush the fresh water system as outlined in the Water Systems-Section 6. Inspect the sewer drain hose and connections for leaks. Replace if necessary.
- ◆ Operate all faucets and fixtures in the fresh water system. Run a sufficient amount of fresh water through all the water lines and faucets to thoroughly purge any potable antifreeze from the fresh water system.

CAUTION

Discard at least the first two trays of ice from the icemaker to ensure the ice does not contain traces of antifreeze or other contaminants.

- ◆ Open cabinet doors and drawers. Inspect for water leaks at joints or fittings. Repair as necessary.
- ◆ Operate all 12 Volt DC lights and accessories. If something does not work there may be a bad 12 Volt DC circuit breaker or blown fuse.

- ◆ Install new batteries in battery operated safety detectors or devices. Test the Carbon Monoxide, propane and smoke detectors for proper operation.
- ◆ Check that the monitor panel is properly functioning.
- ◆ Inspect the 120 Volt AC electrical system which includes the power cord, inverter, all outlets and exposed wiring.

INFORMATION

Prepare the generator for operation following the instructions in the generator OEM manual.

- ◆ Start and run the generator.
- ◆ Confirm that the house and chassis batteries are charging. Operate the 120 Volt AC appliances and air conditioners. If an electrical item or appliance is not properly functioning, contact the dealer or an authorized service center to have it evaluated.
- ◆ Have a qualified technician inspect the propane system and perform an propane leak test. The leak test should also include an propane regulator adjustment (if needed). The test can also verify if the regulator is faulty and should be replaced. Have the propane tank inspected.
- ◆ Operate each propane appliance. Observe all burner/pilot flames for proper color and size.
- ◆ Inspect and clean the interior.
- ◆ Check the sealant around all roof and body seams and windows. Reseal if necessary.

- ◆ Lubricate all the exterior locks, hinges and latches with a graphite lubricant.
- ◆ Check the windshield wiper blade condition. Check the wiper/washer operation.
- ◆ Wash and wax the exterior. Check the body for scratches or other damage; touch up or repair as necessary. Flush the underside thoroughly.
- ◆ Run through the operational checks for steering, brakes, engine and transmission. Operate the motorhome slowly during these checks to allow sufficient circulation of fluids and resetting of the components.
- ◆ If desired, have the dealer or repair center double-check preparation to make necessary adjustments and/or correct defects.

NOTE

Normal use of the motorhome may cause certain fittings and fasteners to loosen due to road vibration and excessive use. Periodic inspection and maintenance should be performed.

| | | | |
|---|-----------|--|-----------|
| APPLIANCES - INTRODUCTION | 74 | REMOTE CONTROL | 87 |
| REFRIGERATOR | 74 | Display | 87 |
| Operation Specifics | 74 | Using the Remote Control..... | 87 |
| REFRIGERATOR CONTROLS | 75 | Replacing Batteries | 88 |
| Control Panel - Four Door | 75 | FURNACE | 88 |
| Icemaker..... | 76 | Operation | 88 |
| Refrigerator Alarm..... | 76 | If the Furnace Fails to Light..... | 89 |
| Cooling Unit Fans | 77 | WATER HEATER | 89 |
| Doors | 77 | Tips | 91 |
| Storage Procedures..... | 77 | WASHER/DRYER PREPARED | 92 |
| Interior Light..... | 77 | WASHER/DRYER (OPTIONAL) | 93 |
| Service | 77 | Setting a Wash-to-Dry Cycle | 93 |
| Exterior Refrigerator Access Panel..... | 77 | Setting a Wash Cycle | 94 |
| Control Panel – Two Door (Optional) | 78 | Setting a Dry Cycle | 94 |
| AIR IN REFRIGERATOR PROPANE | | Maintenance | 94 |
| SUPPLY LINES | 79 | Winterization | 94 |
| MICROWAVE CONVECTION OVEN | 80 | CENTRAL VACUUM (OPTIONAL) | 95 |
| AC Power for Microwave Convection..... | 80 | Operation | 95 |
| Care & Cleaning | 81 | Maintenance | 95 |
| COOKTOP | 82 | FIREPLACE ELECTRIC (OPTIONAL) | 96 |
| Operation..... | 82 | Operation | 97 |
| Cooktop Covers | 83 | Remote Control/Receiver..... | 97 |
| Burner Grate | 83 | Light Bulb Replacement..... | 98 |
| COOKTOP/OVEN (OPTIONAL) | 83 | | |
| Operation | 83 | | |
| Lighting Oven Pilot | 84 | | |
| Cooktop Covers | 84 | | |
| Burner Grate | 84 | | |
| COOKTOP/OVEN CLEANING & MAINTENANCE .. | 85 | | |
| AIR CONDITIONER - ROOF | 85 | | |
| Unit Display and Controls | 86 | | |
| Filter Maintenance | 86 | | |
| General Maintenance..... | 87 | | |
| Air Conditioner Cover Maintenance..... | 87 | | |



APPLIANCES - INTRODUCTION

This section covers operation and care of various appliances found in the motorhome: refrigerator, cooktop, microwave, roof air conditioner and optional appliances. These appliances operate on AC or DC current, propane or a combination of the three.

NOTE

Appliance features and options vary with floorplans.

INFORMATION


Detailed information with **CAUTION** or **WARNING** instructions for the various appliances, other than what is found in this section, can be found in the OEM manuals.

WARNING

Before entering any type of refueling station, turn off all propane operated appliances. Most propane appliances used in motorhomes are vented to the outside. When parked close to a gasoline pump, it is possible for fuel vapors to enter this type of appliance and ignite, resulting in an explosion or fire.

WARNING

Carbon Monoxide gas may cause nausea, fainting or death. Operating a propane appliance with inadequate ventilation or partial blockage of the flue can result in Carbon Monoxide poisoning. **DO NOT** store flammable liquids such as lighter fluid, gasoline or propane in the outside refrigerator compartment.

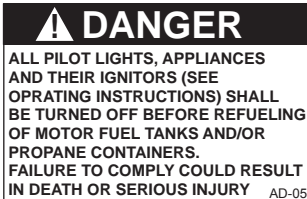

NOTE

Some appliance displays and appliance manuals may refer to LP-Gas as a fuel source; however, the actual fuel source used and required for these appliances is propane. The phrase “LP-Gas” is synonymous with not only propane, but butane and propane/butane mixtures. Since propane is the actual fuel required, the term “Propane” will be used throughout this manual except for references to third party appliances (such as the refrigerator) that include the term “LP-Gas” on their displays or other literature.

REFRIGERATOR

Follow the specific guidelines in the refrigerator OEM manual for detailed operating and maintenance instructions. This will help ensure longevity and proper operation of the refrigerator. With proper care and maintenance, the refrigerator should provide years of trouble-free service.

INFORMATION

The refrigerator may require special winterization procedures. Refer to the refrigerator OEM manual for instructions and recommendations.


TIP

To reduce the possibility of food spoilage, keep the interior box temperature at or below 40° F. The refrigerator will consume more energy to maintain low temperature, especially in hot, humid climates. Lower temperature may also lead to more frost build-up.

Operation Specifics

- ◆ The refrigerator operates from propane or 120 Volts AC electric.
- ◆ DC Voltage for control pad operation must be no higher than 15.4 Volts DC or lower than 10.5 Volts DC.
- ◆ AC voltage must be no higher than 132 Volts AC or lower than 108 Volts AC.

Important: Operate refrigerator only when level. Level the refrigerator using a torpedo or bulls eye level. Place the levels on the bottom shelf of the refrigerator. The bubble should be at least half-way inside the circles.

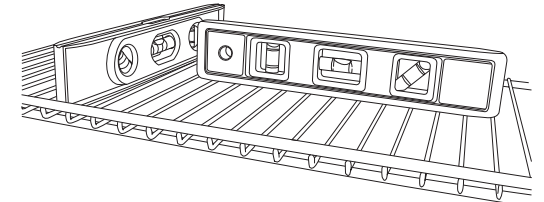

020295

CAUTION

Operating the refrigerator off-level separates chemicals, causing them to crystallize and block the circulation action of the cooling unit. Damage is cumulative and irreversible.

WARNING

DO NOT use the refrigerator if there is an ammonia smell inside or outside of the refrigerator, or if a yellowish substance appears inside or at the outside access compartment. This can be an indication of a refrigerant leak. Contact an authorized repair facility.


For the refrigerator to operate:

- ◆ The house batteries must be charged and on.
- ◆ The primary propane shut-off valve must be open.


◆ **Figure A:** The refrigerator 120 Volt AC cord(s) must be plugged in.

◆ **Figure B:** If controls do not light up, check house battery charge status or see if the 12 Volt DC wires are plugged into the refrigerator circuit board.

Figure A

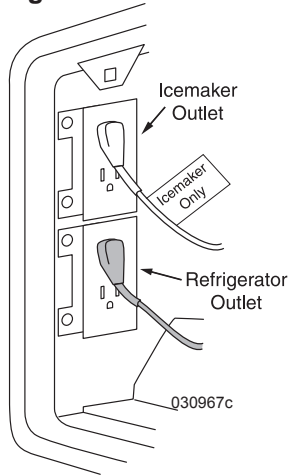


Located behind the exterior refrigerator access door.

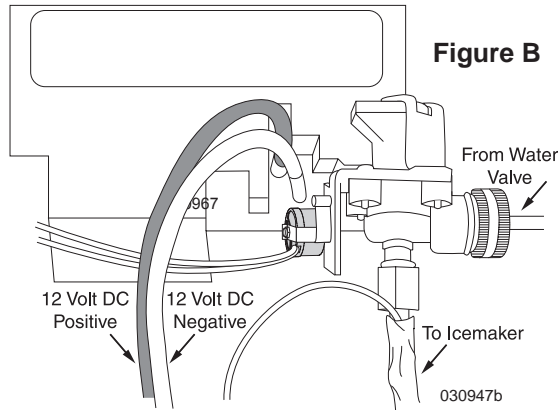


Located behind the exterior refrigerator access door.

◆ **Figure C:** The water valve must be open if the refrigerator is equipped with an icemaker. (Floor plan 41 PDQ has an additional secondary water (icemaker) valve located in the water service center. The water valve(s) must be open if the refrigerator is equipped with an icemaker).

Figure C

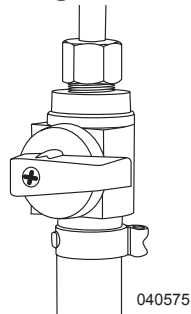

Water Valve: Located under the refrigerator or behind the exterior refrigerator access door.

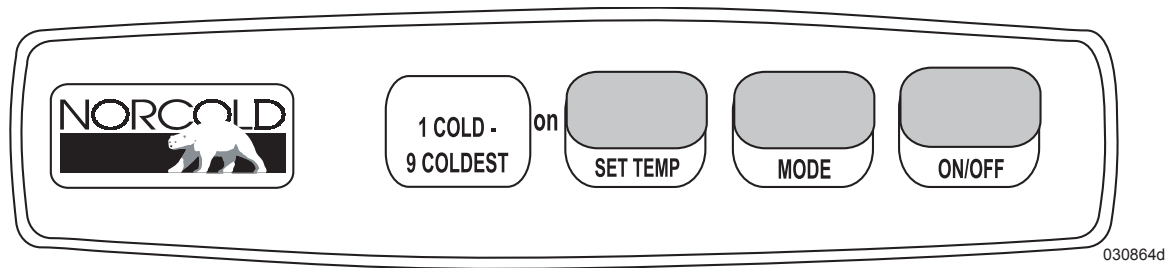

REFRIGERATOR CONTROLS

Control Panel - Four Door

ON/OFF Button:

Turns the refrigerator ON or OFF.

- ◆ Push the ON/OFF button to start the refrigerator in Auto mode.
- ◆ Push and hold the ON/OFF button for two seconds to shut it off.

LED Display:

This screen is used for mode, temperature and fault code display.

MODE Button:

Controls the operation mode of the refrigerator.

- ◆ Press the MODE button to select between Automatic AU, AC or LP operation.

SET TEMP Button:

Adjusts the temperature.

- ◆ To adjust, push and hold the SET TEMP button.
- ◆ Number 9 is the coldest setting.

Manual Mode (MAN):

When one of the two manual modes is selected:

1. **AC** = The refrigerator is operating on AC electric.
2. **LP** = The refrigerator is operating on propane.

Automatic Mode (AU):


This feature selects AC over propane operation. If AC discontinues, the refrigerator will automatically switch to propane operation. An alarm will sound and a code will display if the propane igniter fails to light.

- ◆ Press the MODE button until AU displays. Release the button.
- ◆ Press and hold the SET TEMP button until the desired temperature displays. Release button.
- ◆ In AUTO mode, AU/AC or AU/LP will alternate three times when a mode has changed.

If the propane does not ignite within 30 seconds, the control changes to a different energy source or the propane safety valve closes and NO FL displays. Turn the refrigerator OFF then back ON. If the propane does not ignite after several attempts, consult an authorized service technician.

Tips:

- ◆ Cool items first, if possible, before putting them into the refrigerator.
- ◆ Keep the doors shut. Think about desired contents before opening the doors.
- ◆ Allow the refrigerator 24 hours of operation before actual use to kick start the refrigeration process.
- ◆ A box of open baking soda will help absorb food odors.
- ◆ Ice build up can be slowed in high humidity if the end of the drain tube is submersed in drip pan. It may be necessary to add water to the drip pan to keep the tube submersed.

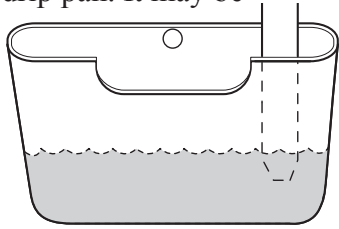


030987
Drip Pan: Located behind the exterior refrigerator access door.

Icemaker

The icemaker requires 120 Volts AC to operate. Only after the freezer reaches freezing temperature will the icemaker function. City water or the water pump must be on and the valve for the water supply line to the icemaker must be on. The water supply valve, located under the refrigerator or outside behind the refrigerator access door must be open. (Floor plan 41 PDQ has an additional secondary water (icemaker) valve located in the water service center. The water valve(s) must be open if the refrigerator is equipped with an icemaker).


- ◆ Pull the metal arm (bail) down to turn the icemaker ON.
- ◆ Push the arm up to turn the icemaker OFF.

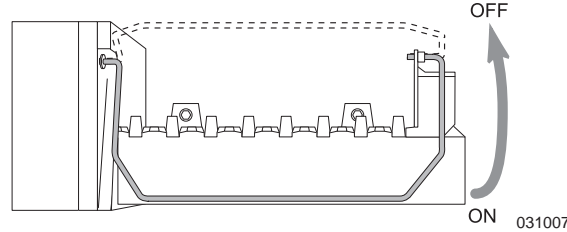**NOTE**

Water may spill out of the ice tray if the icemaker is in operation while the motorhome is in transit. Operating the icemaker without water pressure supplied to the refrigerator will risk damage to the icemaker assembly.

Water Line Heater:

A thermal disc supplies voltage to heater tape when ambient temperature is less than 38° F (+/- 4°) and shuts off at temperature greater than 48° F (+/- 5°). The water line heater is only for the line from the solenoid to the icemaker. The line from the icemaker shut-off valve to the water valve is protected with foam insulation.

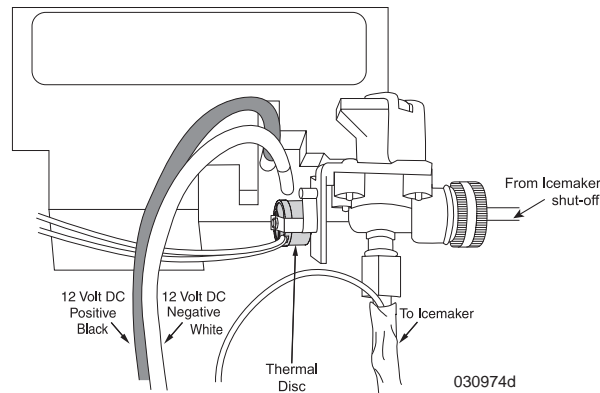**CAUTION**

Icemaker must be connected to a potable water source. The icemaker does not make untreated water potable.

POISON

DO NOT use the first several trays of ice from the icemaker. New plumbing connections or impurities in the water supply line from the first use or after winterizing can cause the ice to be discolored or have an odd flavor.

Refrigerator Alarm

The refrigerator audible alarm will sound for the following reasons:

- ◆ DC or AC voltage is higher or lower than allowed.
- ◆ The refrigerator fails to light on propane or fails to light after a period of operation.
- ◆ Refrigerator is set to Auto, 120 Volts AC is discontinued and propane fails to light. NO AC will display, followed by NO FL, and the alarm will sound. Consult the OEM manual.
- ◆ Door is open longer than two minutes.
- ◆ The circuit board detects a failure. The control panel will display a code.

NOTE

If the alarm sounds, note the code in the LED display and turn the refrigerator off to silence the alarm.

INFORMATION

Refer to the refrigerator OEM manual for the list of codes and their meanings.


Cooling Unit Fans

The cooling unit is equipped with a pair of cooling fans that pass air across the cooling unit. These fans start automatically and are audible when in operation.

Doors

The refrigerator doors use a positive latch that secures the door with a “click” to prevent the door from opening during travel. The doors use a heating element located in the flapper on the left door. The heating element activates when operating the refrigerator in any mode to help prevent moisture accumulation in high humidity conditions.

Mold and mildew may contaminate a completely sealed refrigerator in storage. The refrigerator has a storage position to lock the doors partially open and promote airflow that will help prevent mold build up.

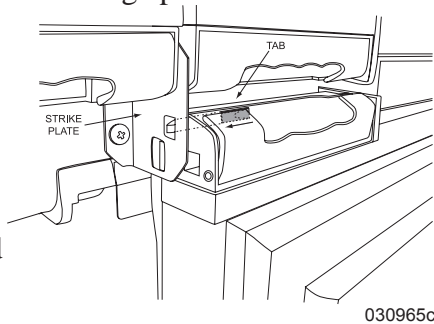

To use the refrigerator storage position:


- ◆ Completely empty the refrigerator.
- ◆ Disconnect power to the refrigerator.
- ◆ Thoroughly clean the interior box using a soft cloth to remove all stains and spills.
- ◆ Partially open the doors and slide tab into the cut-out of the striker plate.

Storage Procedures

- ◆ Turn the refrigerator OFF and remove all items. Leave the drip tray under the cooling fins.
- ◆ **DO NOT** use a heating gun, hair dryer to remove frost. Permanent damage could result to plastic parts.
- ◆ **DO NOT** use a knife, ice pick or any other sharp instrument to remove ice from the freezer as these can puncture and damage the interior or cooling unit.
- ◆ **DO NOT** use scouring pads or abrasive cleaners that can damage the interior finish.
- ◆ Wash the interior using mild spray cleaners or a solution of liquid dish detergent and warm water.
- ◆ Rinse with a solution of baking soda and water. Dry with a clean cloth.
- ◆ Lock the doors open.

Interior Light

The interior light is located at the top of the fresh food compartment. When the door is open the light will illuminate.

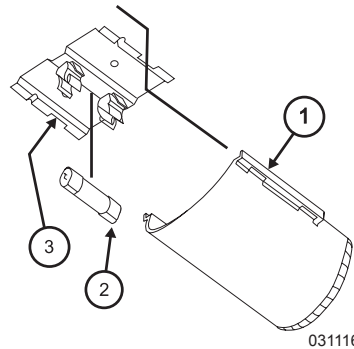

Bulb Replacement:

1. Remove the light cover by pulling it toward the front of the refrigerator.
2. Remove the light bulb from the holder.
3. Install a GE#214-2 replacement bulb and replace the cover.

NOTE

Replacement bulb number is accurate at time of printing. Confirm part number before ordering or obtaining replacement.

Service


The propane function of the refrigerator and propane pressure will require annual service. Over time, the BTU rating of the flame can change, affecting refrigerator performance. Ambient temperature, high humidity and altitude above 5,500 ft. can affect performance and function. If possible, switch mode operation to AC while at a higher altitude.

Exterior Refrigerator Access Panel

The refrigerator access panel **MUST** be properly closed and secured after opening.

CAUTION

Ensure the exterior refrigerator access panel is properly replaced after removal. Failure to do so may result in the panel jarring loose during travel.

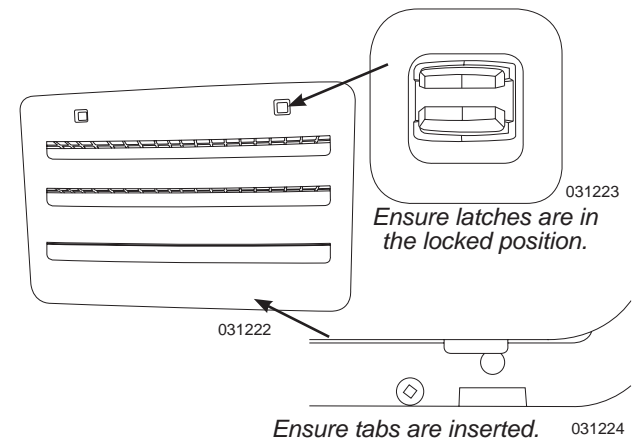

Control Panel – Two Door (Optional)


- ◆ **ON/OFF Button** – Turns the refrigerator on or off.
- ◆ **AUTO/STORE Button** – Used to select energy mode between AUTO AC, AUTO Gas, or Propane. The AUTO/STORE button is also used to save settings.
- ◆ **LED Display** – The screen displays temperature, different modes of operation, and status messages:
 - Temperature in frozen food compartment.
 - Temperature in fresh food compartment.
 - AUTO AC mode.
 - AUTO Gas mode.
 - Propane mode.
 - Temperature setting.
 - Clock.
 - Status and error messages.
- ◆ **SET Button** – Used to adjust the temperature range and to set the clock.

Starting Up:

Press the main power ON/OFF button. If the clock has to be set the LED display will show flashing horizontal bars "-- --".

WARNING

Before starting the refrigerator, check that all propane (gas) valves are in the ON position. This includes the shut off valve (if equipped) in the rear of the refrigerator.

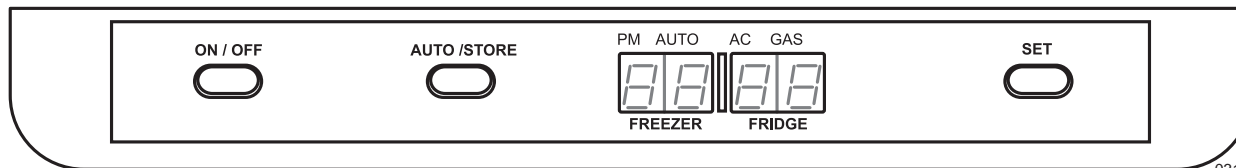

INFORMATION

For detailed operating instructions refer to the refrigerator OEM manual.

Setting the Clock:

- ◆ Press the SET button until figures flash on the LED display. Hours are on the left and minutes to the right.
- ◆ Press the SET button to adjust time. PM is indicated by a dot under PM on the LED display.
- ◆ Save settings by either pressing the AUTO/STORE button, or waiting 5 seconds (the settings will automatically save).

Setting the Temperature:

- ◆ Press the SET button to the desired temperature setting - 1 to 5. Number 5 is the coldest temperature.
- ◆ Save settings by either pressing the AUTO/STORE button, or waiting 5 seconds (the settings will automatically store).

Selecting Mode of Operation:

The mode of operation ranges between AUTO AC, AUTO Gas, or propane.

- ◆ To select automatic operation press the AUTO/STORE button until AUTO is displayed. In this mode the system will automatically select the most suitable energy source available - AC or propane operation.

- ◆ To select propane operation only, press the AUTO/STORE button until a dot is indicated above LP.

NOTE

Current mode of operation and the energy source, AC or propane, will be indicated by a dot on the LED display.

Automatic Defrost:

The refrigerator will automatically defrost the frozen and fresh food compartments every 24 hours.

Manual Defrost:

If desired, the refrigerator may be manually defrosted. A defrost cycle takes about 1 hour, depending upon the amount of frost in the refrigerator.

- ◆ Before defrosting, press the ON/OFF button to turn off the refrigerator.
- ◆ Press and hold the AUTO/STORE button, then press the ON/OFF button. "dE Fr" will show in the LED display.

Status Message:

At times the LED display may show either a status message or error message. Refer to the OEM manual for the list of codes and their meanings.

WARNING

DO NOT use strong chemicals or abrasives to clean the refrigerator. Damage to the protective surfaces will occur.


NOTE

If the refrigerator will not be in operation for a period of weeks, it should be emptied, defrosted, cleaned and the doors left ajar. The ice trays should be dried and kept outside the refrigerator.

Automatic Ice Dispenser: The ice dispenser on the freezer door conveniently dispenses ice.

To Operate:

- ◆ Press either the Cube or Crush button, and place a glass against the dispensing arm.
- ◆ To stop dispensing ice, pull the glass away from the dispensing arm.

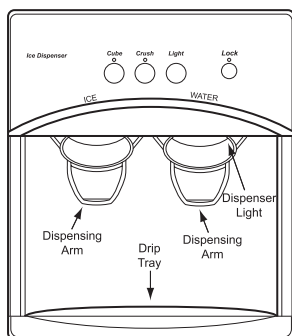

Drip Tray Feature:

A drip tray is located beneath the dispenser to catch small spills. The tray is removable and dishwasher safe.

NOTE

The drip tray is not a drain. DO NOT pour water into the drip tray.

Lock Out Feature:

The ice dispensing system can be “locked out” to prevent unwanted use.

- ◆ To Lock Out press lock button for 3 to 5 seconds until the red light comes on.
- ◆ To Unlock press the lock button for 3 to 5 seconds until the red light goes out.

Dispenser Light:

The light illuminates the dispenser area and can be turned on and off by pressing the light button. The dispenser light will also turn on automatically when ice is dispensed.

NOTE


If the bulb needs to be replaced use an E14, 120V, 6-Watt appliance bulb. Replacement bulb number is accurate at time of printing. Confirm part number before ordering or obtaining replacement.

INFORMATION

When opening the freezer door, the ice dispensing and ice making system will automatically shut off for safety reasons. Closing the freezer door automatically resumes operation of ice dispensing and ice making operation.

Ice Maker:

The ice maker works from 120 Volts AC only. The water valve supplying the refrigerator must be turned on and the ice level bail arm must be in the down position.

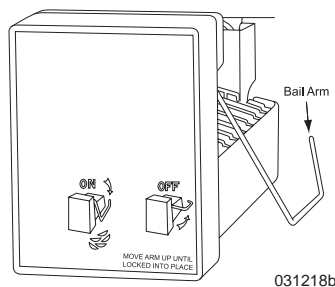

CAUTION

Icemaker must be connected to a potable water source. The icemaker does not make untreated water potable.

POISON

DO NOT use the first several trays of ice from the icemaker. New plumbing connections or impurities in the water supply line from the first use or after winterizing can cause the ice to be discolored or have an odd flavor.

CAUTION

If the ice maker is in operation while the motorhome is in motion, water may spill out of the ice tray. Raise the bail arm to the full UP/OFF position about 1 ½ hours before departing. This will allow water in the ice tray to freeze. DO NOT use the first 1 or 2 trays of ice if the refrigerator has been in storage. Ice cubes may have contaminants. DO NOT operate the icemaker without water pressure supplied to the refrigerator as this can damage the ice maker assembly.

AIR IN REFRIGERATOR PROPANE SUPPLY LINES

For safety reasons, the refrigerator will attempt to ignite on propane gas within a specified amount of time. When starting the refrigerator for the first time after storage, or after servicing the propane supply system, propane gas supply lines may contain air. Due to the air in the propane supply lines, the refrigerator may not ignite on propane gas within the specified amount of time. Follow the procedure on how to remove air from the propane supply lines.

To purge the air from the propane supply lines:

- ◆ Ensure the primary propane shut-off valve on propane tank is open. Some refrigerator models may have a shut off valve in the rear of the refrigerator. This valve must also be on.
- ◆ Try lighting the cooktop burners first to quickly purge air from the main distribution line.
- ◆ Turn the refrigerator on.
- ◆ Set refrigerator to LP (propane) operation. The refrigerator will start an attempt for ignition during which the propane safety valve opens and the igniter sparks. Depending on refrigerator model, the ignition cycle time can vary.
- ◆ If the refrigerator fails to light, turn the refrigerator OFF then back ON and set to LP (propane) mode. If after the third attempt the refrigerator fails to light, stop and consult local dealer or an authorized Service Center.

MICROWAVE CONVECTION OVEN

The microwave convection oven operates from 120 Volt AC supplied by shore power, the generator or inverter.

AC Power for Microwave Convection

Typically, the AC outlet for the oven is found on the side. On some floor plans the AC outlet may be found above the oven behind the spice rack. Remove the spice rack to access the AC outlet.

Operation Tips:

- ◆ Ensure cookware being used is microwave safe. Gold paint or glaze may contain a trace amount of gold which is electrically conductive and not compatible for the microwave. Hand painted china commonly contains traces of metal.
- ◆ The glass tray and roller guide must always be in place during cooking.
- ◆ Ensure the door is firmly closed before use.
- ◆ If the control pad is not lit, plug another electrical appliance into the same outlet to verify 120 Volt AC power is present. If the test item works, contact an appliance repair facility to have the oven checked.
- ◆ Steam accumulating inside or around the outside of the oven door may occur when the oven is operated under high humidity conditions and in no way indicates a malfunction of the oven. Wipe away steam using a soft cloth.

Microwave Convection Facts:

One of the most useful documents for the microwave convection is the OEM manual, located in the owner's information file box. Read it carefully and keep for reference.

A properly functioning microwave convection presents no hazard with ordinary use. Safety features should be kept in good condition. **DO NOT** attempt to bypass safety interlocks or allow debris or residue to accumulate on the door or oven face. If the oven is damaged, discontinue use.

Oven adjustments or repairs should be made by qualified service personnel. Check the microwave convection OEM manual for maintenance tips and other information. Remember to register the microwave convection with the manufacturer.

CAUTION

If a fire flares up when using the cooktop, turn OFF the microwave convection ventilation fan as it may spread the flames. The ventilation fan does not manually turn off when automatically started from a heated cooktop. Turn off the two Main AC circuit breakers, found on the distribution panel located above the driver, to prevent the flames from spreading into the oven.

NOTE

When dry camping, minimize using the inverter to operate the microwave convection due to the high rate of battery consumption.

NOTE


The microwave convection is for food preparation only. **DO NOT** use the oven to dry clothes, newspapers, shoes or other items.

CAUTION

Long-term use of the inverter to operate the microwave convection oven while in transit will damage the alternator. Use the generator to operate the oven while in transit.

Care & Cleaning

The exterior of the microwave convection oven is plastic and metal. The interior is metal. **DO NOT** clean with scouring pads, harsh or abrasive cleaners, chemical cleaners or petroleum based thinners that can damage the finish. Use mild soap and water with a damp cloth or paper towel to remove stains or spills. When cleaning the touch pad, open the door to prevent accidental operation. Use mild soap and water with a soft cloth. Avoid using excess amounts of water on the touch pad. The turntable plate and oven racks are dishwasher safe.

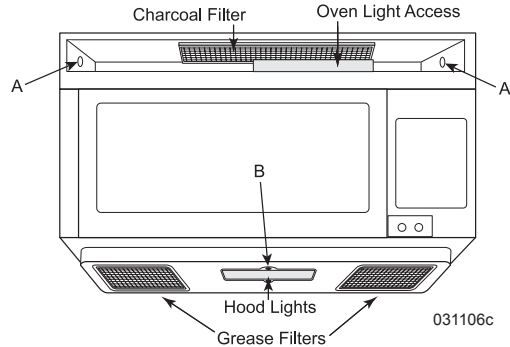

Charcoal Filter:

Depending on use, the charcoal filter should be replaced every 6 to 12 months. Use the following procedure to remove the louvers to replace the charcoal filter and oven light:

- ◆ Remove power to the microwave convection.
- ◆ Remove the screws (A) securing the louver.
- ◆ Insert a flat edge screwdriver over each tab pressing downward and move the louver away from the oven.
- ◆ Remove and replace the charcoal filter. Ensure the filter is positioned on the supporting tabs.

- ◆ Replace louver and mounting screws.

Oven Light:

- ◆ Remove the louver as previously indicated.
- ◆ Slide the metal light cover forward and lift upwards.
- ◆ Remove the light bulb and replace only with an equivalent watt bulb. **DO NOT** exceed 30 watts.
- ◆ Replace light cover, louver and mounting screws.

Hood Light:

- ◆ Remove power to the microwave convection.
- ◆ Remove the screw (B) securing the light cover.
- ◆ Remove the light bulb and replace only with an equivalent watt bulb. **DO NOT** exceed 30 watts.
- ◆ Close the cover and re-secure with screw.

CAUTION

DO NOT touch glass when lamp is on. Light cover may be hot.

CAUTION

DO NOT use the light for prolonged periods, such as a night light.

Grease Filters:

Operating the microwave convection without the grease filters in place can damage the oven. Grease filters should be cleaned at least once a month. To remove the filters, use the pull-tab to slide the filter to the end of the opening and tip down. Soak the filters in the sink or in a dishpan filled with hot water and detergent.

- ◆ **DO NOT** use ammonia or other alkali-based products that may darken the filter material.
- ◆ Agitate the filter. Use a scrub brush to remove caked on grease.
- ◆ Rinse the filter thoroughly and shake dry. Place the filter back into the opening, tip upward and slide filter to the end of the opening. Lock in place. Be careful not to kink or warp the filter upon installation.

Cleaning Tips:


- ◆ Turn the oven OFF before cleaning.
- ◆ Cover food while cooking to keep spattering to a minimum.
- ◆ Clean up all spills or spatters before they dry. Wipe up food spatters or spilled liquids with a damp cloth. Mild detergent may be used for stubborn spills. **DO NOT** use harsh detergent or abrasive cleaner.
- ◆ It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm, sudsy water or in a dishwasher.
- ◆ The roller guide and oven cavity floor should be regularly cleaned to avoid excessive noise. Wipe the bottom surface of the oven with mild detergent water or window cleaner and then dry. The roller guide may be washed in mild sudsy water.
- ◆ Food odors may linger inside oven. To help eliminate odors, combine the juice and the peel from one lemon, several whole cloves and 8 oz. of water into a two cup bowl. Place in oven on high power; bring to a boil for several minutes. Let cool in the oven for several minutes.

- ◆ Clean the outside oven surface with soap and water. Wipe away any residue using a damp cloth. Dry with a soft cloth. To prevent damage to the operating parts inside the oven, **DO NOT** allow water to seep into the ventilation openings.
- ◆ If the control panel becomes wet, clean with a soft, dry cloth. **DO NOT** use harsh detergents or abrasive when cleaning the control panel.

COOKTOP

The cooktop uses only propane as a fuel source. The burners use a piezo type igniter. The cooktop is to be used for cooking purposes only and not as a heating source. When the burner valve is opened the fuel source flows through the valve into the mixture tube. The fuel passes by a hole or venturi in the mixture tube, which draws air in with the fuel for a proper fuel/air ratio. The flame should have a blue appearance with a lighter blue defined flame at the burner head.

A yellow flame or yellow tips indicate a rich fuel mixture which can leave a black color or carbon on the bottom of a pot or pan.

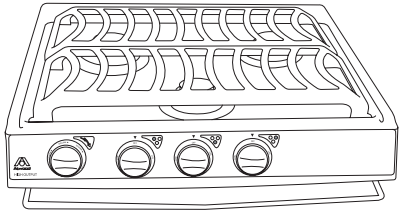

031274f

POISON

DO NOT heat the motorhome interior with the cooktop. Gas combustion consumes oxygen inside the motorhome. Carbon Monoxide is an odorless, colorless and highly poisonous gas.

INFORMATION

For more detailed information and operating instructions, refer to cooktop OEM manual.

Operation

The cooktop will operate under the following conditions:

- ◆ The primary shut-off valve on the propane tank is open.
- ◆ The house battery disconnect switch is on.
- ◆ Battery cut out switch is on.
- ◆ House batteries are charged.

WARNING

DO NOT leave burners unattended during cooking. **DO NOT** leave burner valve(s)

open while burner(s) are not lit. Propane is heavier than air and will settle on the floor and "hide" in corners. If a gas smell exists, extinguish all open flames. Open all windows and doors. **DO NOT** touch any electrical switches. They may cause a spark that can ignite. Evacuate the motorhome and shut off the primary shut-off valve on the propane tank. Propane is highly volatile, highly explosive and extremely dangerous. Explosion, fire, property damage, injury or death can result. Contact a qualified service center to have the problem correctly diagnosed and repaired before resuming operation.

⚠ WARNING

IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.


Cooking appliances need fresh air for safe operation.

Before operation:

1. Open overhead vent or turn on exhaust fan.
2. Open window.

FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

020327

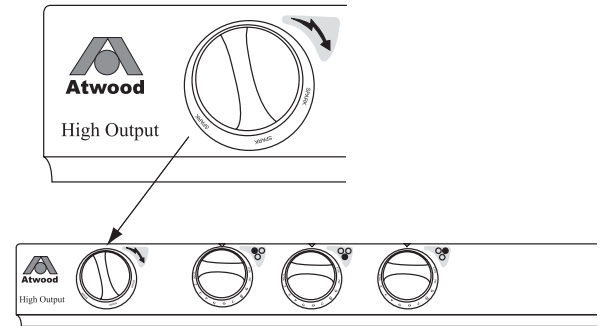

031274c

Lighting Top Burners:

- ◆ Turn the desired burner knob counterclockwise to LITE. **DO NOT** light more than one burner at a time.
- ◆ Turn the spark knob clockwise several clicks until the burner lights. The burner should light within six clicks or one full rotation of the knob.
- ◆ After the burner lights, adjust the surface burner control knob between HI and LOW to select the desired flame size.
- ◆ Turn the burner knob clockwise to OFF to extinguish the top burner flame.

WARNING


Cooktop covers must be off when the cooking surface is in operation.

Operation Tips:

- ◆ A yellow flame is an indication of incorrect fuel/air ratio. Lowered BTU output and carbon build up can occur.
- ◆ Flame appearance may change and BTU output will lower when operating the cooktop at an altitude above 5,000 ft. Allow extra cooking time.
- ◆ **DO NOT** allow the flame tips to extend beyond pan or pot edge. When this occurs heat is wasted and possibility of injury increases.

- ◆ Cooking time can be reduced if the least amount of liquid is used. The choice of cookware selected can make a big difference.


Cooktop Covers

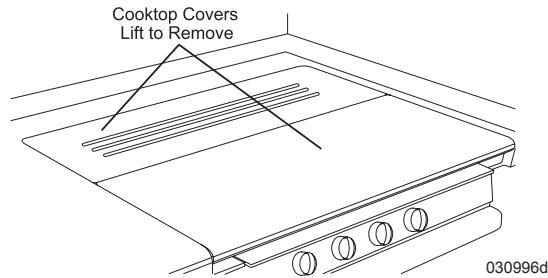

- ◆ **DO NOT** use cooktop unless the covers are removed.
- ◆ **DO NOT** place the covers on the cooktop while the burners are in use.
- ◆ **DO NOT** use the covers as a griddle.
- ◆ The covers must be in place while the motorhome is in transit.

Burner Grate

The burner grates can separate from the cooktop

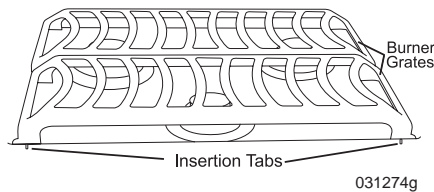

cover for cleaning purposes. The grates are attached to the cooktop by insertion tabs. Place a towel next to the cooktop and lift burner grate straight up to remove and place on towel to clean. Use only warm soapy water to clean the burner grates. To re-install a burner grates align the two insertion tabs with the two grommets and push down.

COOKTOP/OVEN (OPTIONAL)

The cooktop range/oven uses only propane as a fuel source. The burners use a piezo type igniter. The cooktop is to be used for cooking purposes only and not as a heating source. When the burner valve is opened the fuel source flows through the valve into the mixture tube. The fuel passes by a hole or venturi in the mixture tube, which draws air in with the fuel for a proper fuel/air ratio. The flame should have a blue appearance with a lighter blue defined flame at the burner head.

A yellow flame or yellow tips indicate a rich fuel mixture which can leave a black color or carbon on the bottom of a pot or pan.

POISON

DO NOT heat the motorhome interior with the cooktop. Gas combustion consumes oxygen inside the motorhome. Carbon Monoxide is an odorless, colorless and highly poisonous gas.

INFORMATION

For more detailed information and operating instructions, refer to cooktop OEM manual.

Operation

The cooktop will operate under the following conditions:

- ◆ The primary shut-off valve on the propane tank is open.
- ◆ The house battery disconnect switch is on.
- ◆ Battery cut out switch is on.
- ◆ House batteries are charged.

WARNING

DO NOT leave burners unattended during cooking. DO NOT leave burner valve(s) open while burner(s) are not lit.

Propane is heavier than air and will settle on the floor and "hide" in corners. If a gas smell exists, extinguish all open flames. Open all windows and doors. DO NOT touch any electrical switches. They may cause a spark that can ignite. Evacuate the motorhome and shut off the primary shut-off valve on the propane tank. Propane is highly volatile, highly explosive and extremely dangerous. Explosion, fire, property damage, injury or death can result. Contact a qualified service center to have the problem correctly diagnosed and repaired before resuming operation.

WARNING

IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.



Cooking appliances need fresh air for safe operation.

Before operation:

1. Open overhead vent or turn on exhaust fan.
2. Open window.

FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

020327

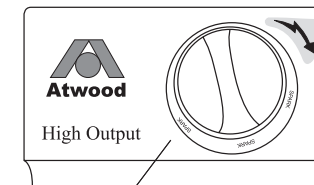

031274e

Lighting Top Burners:

- ◆ Turn the desired burner knob counterclockwise to LITE. **DO NOT** use the spark knob to light more than one burner at a time.

- ◆ Turn the spark knob clockwise several clicks until the burner lights. The burner should light within six clicks or one full rotation of the knob.
- ◆ After the burner lights, adjust the surface burner control knob between HI and LOW to select the desired flame size.
- ◆ Turn the burner knob clockwise to OFF to extinguish the top burner flame.

WARNING

Cooktop covers must be off when the cooking surface is in operation.


Operation Tips:

- ◆ A yellow flame is an indication of incorrect fuel/air ratio. Lowered BTU output and carbon build up can occur.
- ◆ Flame appearance may change and BTU output will lower when operating the cooktop at an altitude above 5,000 ft. Allow extra cooking time.
- ◆ **DO NOT** allow the flame tips to extend beyond pan or pot edge. When this occurs heat is wasted and possibility of injury increases.
- ◆ Preheat the oven for approximately 10 minutes prior to use.
- ◆ Cooking time can be reduced if the least amount of liquid is used. The choice of cookware selected can make a big difference.

Lighting Oven Pilot

- ◆ Push in the oven control knob and rotate counterclockwise to PILOT ON.

- ◆ Light the oven pilot located near the back of the oven, under the broiler shelf and to the right of the oven burner.
- ◆ Set the oven control knob to PILOT ON to maintain pilot flame. The oven and broiler are now ready for operation. The oven pilot has been factory set and requires no further adjustment.
- ◆ Rotate oven thermostat to desired temperature.
- ◆ To extinguish the oven pilot push in the oven control knob and rotate clockwise to OFF.

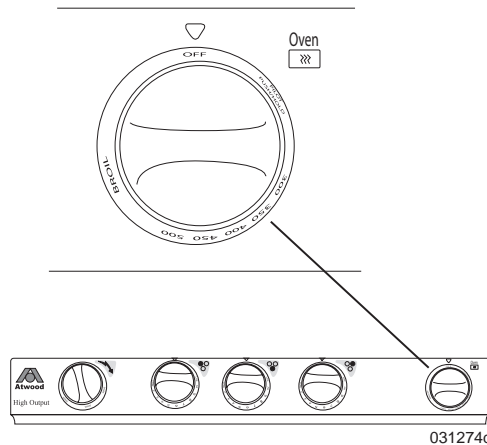


WARNING

Extinguish all pilots when refueling or traveling. DO NOT block vents in oven with cookware or other objects.

Cooktop Covers


- ◆ **DO NOT** use cooktop unless the covers are removed.
- ◆ **DO NOT** place the covers on the cooktop while the burners are in use.
- ◆ **DO NOT** use the covers as a griddle.

- ◆ **DO NOT** use the oven with covers on cooktop.
- ◆ The covers must be in place while the motorhome is in transit.

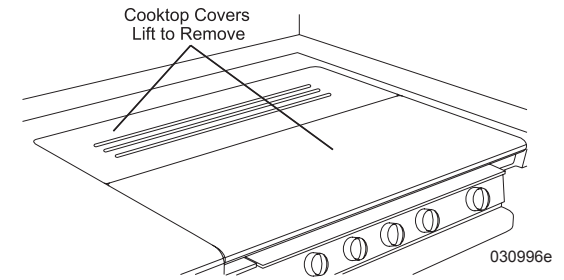

Burner Grate

The burner grates can separate from the cooktop cover for

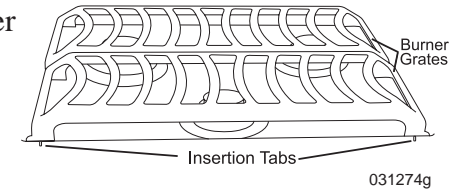

cleaning purposes. The grates are attached to the cooktop by insertion tabs. Place a towel next to the cooktop and lift burner grate straight up to remove and place on towel to clean. Use only warm soapy water to clean the burner grates. To re-install a burner grates align the two insertion tabs with the two grommets and push down.

Cooktop Safety:

- ◆ **DO NOT** leave children alone or unattended in the galley area when the cooktop is in use.
- ◆ **DO NOT** allow anyone to sit, stand or climb on any part of the cooktop. Serious injury or burns could occur.
- ◆ **DO NOT** store items that children may want above the cooktop. Children can be burned or injured when climbing on cooktop.

- ◆ **DO NOT** wear loose or hanging garments when using the cooktop. Loose clothing can ignite if it touches an open flame and serious burns or death could occur.
- ◆ **DO NOT** let potholder touch an open flame. Use only dry pot holders. Damp pot holders on hot surfaces may result in burns from steam.
- ◆ **DO NOT** heat unopened containers. Containers could explode.

CAUTION

DO NOT leave the cooktop unattended.

INFORMATION

Consult the cooktop OEM manual for detailed safety instructions and procedures.

COOKTOP/OVEN CLEANING & MAINTENANCE

Regular cleaning with a soft cloth and a warm detergent solution is generally enough to keep the cook top clean. Wash, rinse and dry with a soft cloth. Thoroughly clean the cook top when it is cool. Use a dry cloth or paper towel while the surface is warm to the touch to clean splatters or spills. Cleaning will be more difficult if spills bake onto the surface.

- ◆ Use glass cleaner sprayed on a paper towel for the cook top surface.
- ◆ **DO NOT** spray glass cleaner directly on the surface.
- ◆ **DO NOT** use abrasive cleaners, steel wool or harsh cleaners such as bleach, ammonia or oven cleaner.

- ◆ The surface burner grate and caps should be cleaned using the same guidelines as the cook top surface.
- ◆ Clean all surfaces as soon as possible after a boil over or spill. However, allow porcelain surfaces to cool before cleaning. Burns from the heated surface may occur or the cook top porcelain can crack.
- ◆ Use warm, soapy water to clean the burner grates, cook tops, painted surfaces, porcelain surfaces, stainless steel surfaces and plastic items on cook top. Grit or acid-type cleaners may ruin the surface.
- ◆ Use only non-abrasive plastic scrubbing pads.
- ◆ **DO NOT** allow foods containing acids (such as lemon, tomato juice or vinegar) to remain on porcelain or painted surfaces. Acids may remove the glossy finish. Wipe up egg spills when cook top is cool.
- ◆ Remove the cooktop cover to clean the underside of the cooktop.
- ◆ To keep the cooktop floor pan clean, carefully place strips of aluminum foil on the floor pan and under burners.
- ◆ **DO NOT** restrict air flow of the mixture tubes.

Porcelain Enamel:

Porcelain enamel, a type of glass fused on steel at a very high temperature, is not extremely delicate but must be treated as glass. Sharp blows, radical surface temperature changes, etc., will cause enamel to chip or crack. Some foods, such as vinegar, lemon juice, tomatoes and milk, contain acids which can dull the finish of the enamel. To avoid

dulling the finish, wipe up the spill before it is baked on. The surface is glass and must be given consideration when cleaning. Steel wool and coarse, gritty cleanser will scratch or mar the surface. Any gentle kitchen cleanser powder or grease cleaner will be suitable.

For further information on care of the porcelain, call "Hopes Cultured Marble Polish" at 1-800-325-4026.

AIR CONDITIONER - ROOF

The roof air conditioner operates from 120 Volts AC supplied by shore power or the generator.

Operating controls are a hand held remote control and on the unit. The controls on the unit are for an emergency when the remote control is inoperative or lost. These controls include Emergency Heat and Emergency Cool.

INFORMATION

For more detailed information and operating instructions refer to the air conditioner OEM manual.

TIP

Keep a supply of spare batteries handy for the remote control. This will ensure continuous operation of the air conditioner and furnace.

The remote control also controls the furnace operations. The air conditioner is equipped with a time delay on the compressor during the start of the cooling cycle. This time delay may be up to 3 minutes after starting.

Operation Requirements:

- ◆ 120 Volts AC from either shore power or the generator.
- ◆ House batteries are fully charged.
- ◆ House battery disconnect switch is ON.
- ◆ Battery cut-out switch is ON.

Energy Saving Tips:

- ◆ Select the temperature that suits comfort needs and leave it at that setting.
- ◆ Keep the unit air filters clean.
- ◆ During hot outdoor temperatures park the motorhome in a shaded area, if possible. Keep windows and doors closed and shades and blinds down to block sun glare. Avoid the use of heat producing appliances.

Heat Pump (Optional):


In HEAT mode, the principle of air conditioning is reversed. The refrigerant flow blows heated air into the interior of the motorhome. When outdoor ambient temperature is down at conditions which would cause the outdoor coil to freeze up, the control will automatically select the FURNACE operation and the "AUX.HEA" red LED will display. The unit will return to Heat pump (optional) operation and the "AUX. HEA" LED will turn off when the outdoor ambient and coil temperatures are above 43°F. auxiliary.

NOTE

When the outdoor coil is frosted in the HEAT mode, the indoor blower and outdoor fan will turn off and the compressor will turn on to remove the frost on the outdoor coil. The defrost mode stops in 10 minutes, or when the defrosting process is complete.

Unit Display and Controls

- 1. TIMER ON (Orange LED):** When the unit is in reservation ON/OFF timer mode an orange LED will display. Turn timer ON or OFF using the remote control.
- 2. UNIT ON (Green LED):** When the unit is switched ON by the remote control or the unit emergency button the green LED will display.
- 3. (OPTIONAL) AUXILIARY HEAT ON (Red LED):** When the unit is in HEAT mode and the ambient temperature is below 43°F, the furnace will automatically turn ON and the red LED will display.
- 4. FURNACE EMERGENCY BUTTON (Optional):** Used when remote control is lost or inoperative. Press to turn heat ON. The unit operates automatically according to room temperature. The setting conditions of furnace emergency operation are Operation Mode (FURNACE), Fan Speed (OFF), Preset Temperature (73°F), and Timer mode (Disabled).

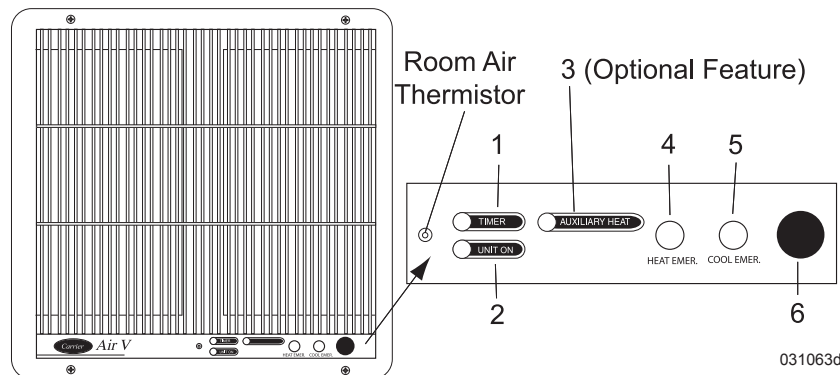**5. COOL EMERGENCY BUTTON:**


Used when the remote control is lost or inoperative. Press the button to turn the air conditioner ON. The unit operates automatically according to room temperature. The setting conditions of cool emergency operation are Operation Mode (COOL), Fan Speed (Auto), Preset Temperature (75°F), and Timer Mode (Disabled).

6. REMOTE CONTROL SIGNAL

RECEIVER: When the remote control sends a signal to the air conditioner, a beep will sound indicating the signal is received. Remote must be directly in line with receiver to properly perform.

Filter Maintenance

- ◆ Remove and clean filters once a month, or more frequently depending on air quality. Filters are located in the ceiling cover.
- ◆ To remove filters, pull down slightly and remove them from the cover.
- ◆ Wash filters with clean water allowing them to air dry or vacuum them using a soft brush.

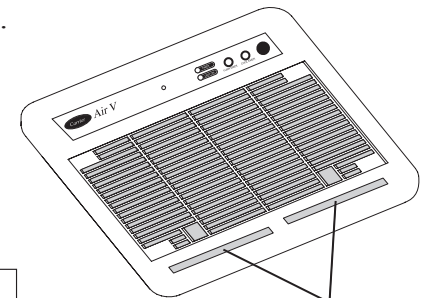

Pull Filters Out to Clean

070192f

General Maintenance

- ◆ Remove ceiling cover and wash condenser coil twice a year.
- ◆ Remove ceiling cover and clean the water drains yearly.


Air Conditioner Cover Maintenance

Ensure that the screws on the air conditioner cover are tight and the air conditioner cover is secure. Check the cover whenever the roof is accessed.

WARNING

Use extreme caution and safety when accessing the roof. Serious injury or possible death could occur from a fall. **DO NOT** access roof during rain or snow when roof may be slippery.


Depending on air conditioner model, screws can be found in different locations. Some models have screws on front and rear side, other models have screws located on both sides. The illustration indicated is a typical air conditioner showing possible screw locations.

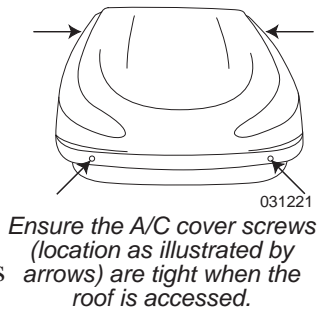

REMOTE CONTROL Display

1. Indicates the selected operating mode.
2. Lights up when the signal from the remote control is transmitted. The receiving beep is heard from the unit.

3. Indicates the selected temperature.
4. Indicates the selected or remaining time of the ON TIMER and OFF TIMER modes.
5. Indicates the selected fan speed.
6. Indicates the selected timer mode.

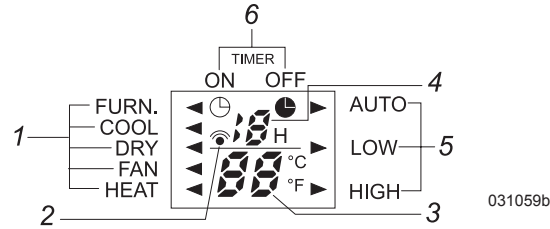


Using the Remote Control

1. ON/OFF BUTTON:

Press this button to begin operation. (Two receiving beeps.) Press the button again to cease operation. (One receiving beep.) The air conditioner compressor will not operate for three minutes after being turned off to prevent overload.

2. MODE SELECTOR BUTTON:

Press this button to select the desired mode. In COOL mode the unit will run at the normal cooling mode. In DRY mode the microcomputer of the unit controls the fan motor to automatically cycle on and off according to room temperature for efficient moisture removal. In FAN mode only the fan will operate at the selected fan speed and circulate the room air. In FURNACE mode the unit will run at the

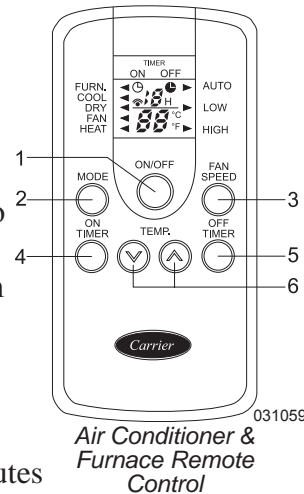

normal furnace mode. In HEAT mode (optional) the unit will run at the normal heat pump mode.

3. FAN SPEED SELECTOR BUTTON: Press this button to select HIGH, LOW, or AUTO. In AUTO mode fan speed is controlled by the microcomputer of the unit.

4. ON TIMER BUTTON: Press the ON TIMER button to select the desired time, in hours, for the unit to automatically turn on.

5. OFF TIMER BUTTON: Press the OFF TIMER button to select the desired time, in hours, for the unit to automatically turn off.

6. TEMPERATURE SELECTOR BUTTONS: Set the desired room temperature for unit to maintain. In COOL mode, if the room temperature is higher than the setting, the compressor will automatically turn on to provide a cooling effect. If the room temperature is lower than the setting, the compressor will automatically turn off to stop cooling operation. However, the fan will continue to circulate air even if the compressor is turned off. In HEAT mode (optional), if the room temperature is lower than the setting, the compressor will automatically turn on to provide heat. If the room temperature is lower than the setting, the compressor will automatically turn off to stop heating operation. However, the fan will continue to circulate air even if the compressor is turned off.

GENERAL OPERATION**ON/OFF button**

For Unit Operation

MODE button

For Desired Mode

COOL→ DRY→ FAN→ HEAT→ FURN.

FAN SPEED button

For Desired Fan Speed

HIGH→ LOW→ AUTO

TEMPERATURE buttons

(63~90°F)

∨ : Decreasing temperature

∧ : Increasing temperature

ON TIMER button**OFF TIMER button**

The Setting Order:

1hr→ 2hr→ 3hr→ 4hr→ 5hr
→ 6hr→ 7hr→ 8hr→ 9hr→ 10hr
→ 11hr→ 12hr→ cancel

031344

*General Operation for Remote Control***Replacing Batteries**

- ◆ Turn remote control OFF.
- ◆ Remove the battery compartment cover at the back of the remote by sliding cover out.
- ◆ Remove old batteries and insert new batteries.
- ◆ Replace batteries once a year with two new alkaline batteries (1.5V).
- ◆ Press the RST button with a sharp object to reset the remote control before closing the battery compartment cover.

Wireless Remote Controller

Battery : DC3V (LR/R03 1.5 V x 2EA)


*After inserting the new batteries, press the RST switch with a sharp object.

*Remove batteries if the remote controller is not going to be used for a long time.

*Do not use batteries of a different type.

031302b

RST Switch

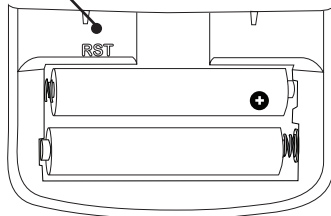

- ◆ If air conditioner does not operate normally after replacing batteries, remove batteries, refit them, and repress the RST button after 5 seconds.

INFORMATION

Confirm battery type in remote control before obtaining a replacement. DO NOT replace with used batteries or batteries of a different type. This may cause remote control to malfunction.

FURNACE

The furnace and related components are 12 Volt DC operated and use propane as the fuel source. Electronic circuitry (automatic ignition) ignites the burner. The furnace uses outside air for burner combustion. Exhaust is expelled through the outside vent. Inside air is drawn into the furnace and blown across the internal heat exchanger. Heated air is then discharged through ducted hoses that run throughout the motorhome.

Operating controls are the same hand held remote used for the air conditioner and controls on the unit. The controls on the unit are for an emergency when the remote control is inoperative or lost and include Emergency Heat.

INFORMATION

Refer to the furnace OEM manual for complete operation information.

TIP

Keep a supply of spare batteries handy for the remote control. This will ensure continuous operation of the furnace.

Operation

The furnace operates with a hand held remote control that sends a signal to the front roof air conditioner. The air conditioner sends an electrical signal to the furnace to begin ignition cycle. There is a small time delay before the blower motor begins. Once the blower motor attains a predetermined speed it will close the air prover or sail switch. The sail switch, which is now closed, sends the electrical signal through a high temperature protection switch, then to the automatic ignition circuit board. After the thermostat is satisfied the gas valve closes and extinguishes the burner. The blower motor stops about two or three minutes after cool down.

Operation Requirements:

- ◆ Primary propane shut-off valve on the propane tank is open.
- ◆ House batteries are fully charged.
- ◆ House battery disconnect switch is ON.
- ◆ Battery cut-out switch is ON.

WARNING

If a propane smell exists, extinguish all open flames and turn off the main gas supply. Propane is an extremely dangerous gas that can ignite and explode, resulting in property damage, injury or death. Propane is heavy and can float on the floor or hide in corners. Open all windows and doors. DO NOT touch electrical switches as they may spark. Keep open flame, spark producing devices and smoking material out of the area. Contact a qualified service center to have the problem correctly diagnosed and repaired before resuming operation.

CAUTION

DO NOT store any items or materials in the furnace area. Restricted air flow may hamper furnace operation leading to failure and/or fire hazard.

NOTE

The automatic ignition circuit board will attempt to light the furnace burner three times before the ignition board will go into “lock-out.” Lockout is a safety feature and means that the furnace burner has failed to properly light or stay lit. It is important to remember that if the burner does not light (lock-out), the furnace blower motor will continue to run. The hand held remote **MUST** be turned off to disengage the lockout safety feature and shut off the blower motor. Once the blower has stopped, the furnace can be re-ignited by starting the process over with the hand held remote with the heat turned up higher. If the furnace has repeated lockout problems consult a qualified technician.

CAUTION

DO NOT allow compartment door to block furnace access door while operating.

CAUTION

When washing the exterior of the motorhome, avoid a direct stream of water into the outside furnace vents. This can cause damage to the furnace.

CAUTION

It is not advisable to use the furnace to heat the inside of the motorhome during transit.

Furnace Operation:

- ◆ Operation of the furnace may produce a musty smell during the first couple of cycles after the motorhome has been removed from storage.
- ◆ Operating the furnace at altitudes above 5,000 feet reduces the BTU output due to air/fuel ratio.
- ◆ Have the furnace periodically serviced by a qualified technician, especially if the system exhibits unusual symptoms such as noise or a foreign odor.

If the Furnace Fails to Light

- ◆ Make sure the primary propane shut-off valve is open.
- ◆ The furnace will not light if the blower motor fails to spin at a specified speed. This may be due to a low house battery charge condition.


To Charge the House Batteries:

- ◆ Hook-up to shore power, start the generator, or start the motorhome.

If the blower motor fails to operate after verifying the batteries are charged and the fuses are good, use a screwdriver or coin to open the furnace access panel outside of the motorhome.

To Reset Furnace:

- ◆ Turn the reset switch to OFF and then back to RESET.

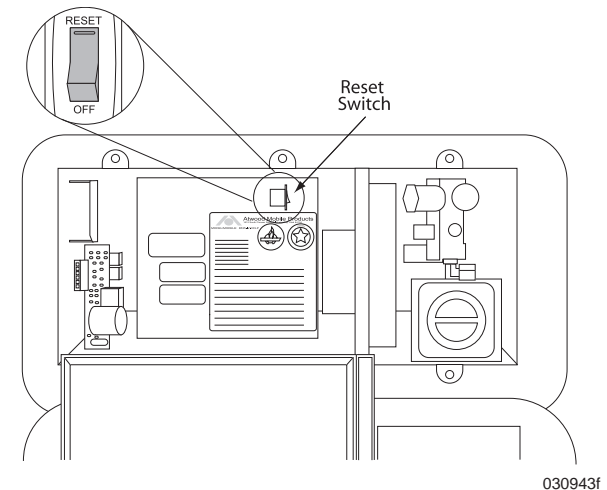**WARNING**

If a propane smell exits and the blower motor is spinning, DO NOT attempt additional furnace operation. This may result in an explosion, fire or personal injury. Contact a qualified technician.

WATER HEATER

The water heater uses two different methods to heat water:

- ◆ 120 Volt AC supplied either by shore power or the generator.
- ◆ Propane supplied by the propane tank.

The 120 Volt AC function is most energy efficient when operated from shore power. The burner for propane operation is controlled by an automatic ignition circuit board powered by 12 Volt DC. Two thermostats control water temperature, one for 120 Volt AC and the other for propane. Thermostat temperature is preset by the water heater manufacturer and not adjustable. For ease of winterization, the water heater is equipped with a tank drain plug and bypass valve.

INFORMATION


Refer to the Water Heater OEM manual for detailed instructions.

Before Using the Water Heater:

Use water to purge air from the water system and water heater. If necessary, purge FDA approved RV antifreeze from the system.


To Purge Air and Pressurize the System:

- ◆ Turn the water heater bypass valve to Normal Flow. If necessary install drain

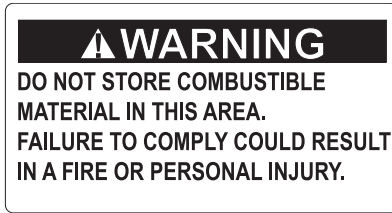

040638

plug. Depending on floor plan, the water heater can be located in one of several areas. One location is in the bedroom closet. Another location is an exterior compartment, typically a curbside compartment.

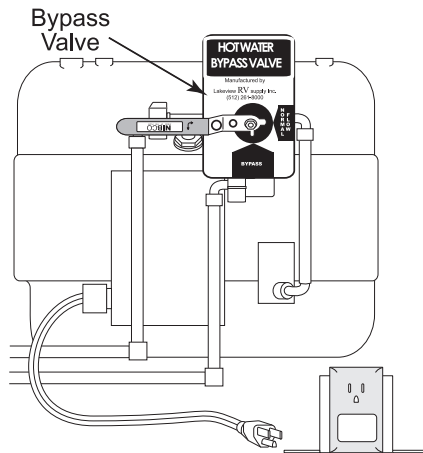

040405e

Bypass Valve: Located at back of water heater

- ◆ Fill the fresh water tank or hook to city water.
- ◆ Turn on the water pump or city water.

- ◆ One at a time, open the hot and cold valves of all faucets until a steady stream of clear water flows with no bubbles or pockets of air. **DO NOT** operate the water heater until the system is purged of air.
- ◆ Inspect the water heater and water system for leaks after the water system is purged of air.

CAUTION

After purging the water lines and water heater, small air pockets or hydrogen gas may be present. After the first heat cycle of the water heater, initially open hot water faucets slowly to minimize potential spattering of hot water.

WARNING

If a propane smell exits, extinguish all open flame and turn off the primary propane valve. DO NOT touch any electrical switches. They may cause a spark that can ignite. Open all windows and doors. Evacuate the motorhome. Propane is a “heavy” gas and will lie on the floor and “hide” in corners. Liquid propane is highly volatile, explosive and extremely dangerous. Explosion, fire, property damage, injury or death can result. Contact a qualified service center to repair propane leaks before resuming operation.

Water Heater Operation:

- ◆ Turn on the battery cut-out switch.
- ◆ 120 Volt AC is supplied from shore power (preferred) or the generator.
- ◆ The house batteries are fully charged.
- ◆ Open the primary propane shut-off valve on the propane tank.

CAUTION

DO NOT operate the water heater without water. Damage to the thermostats and electric heating element can occur.

Heating Water with 120 Volt AC:


- ◆ Have either shore power (preferred) or the generator supplying AC voltage.
- ◆ Press the water heater 120 Volt switch. The indicator lamp will glow steady.

TIP

It is not fuel efficient to use the generator to operate the water heater on 120 Volt AC.

Heating Water with Propane:

- ◆ Turn on the propane.
- ◆ Press the water heater 12 Volt switch. The indicator will glow. If the DSI (Direct Spark Ignition) fault light illuminates this will indicate

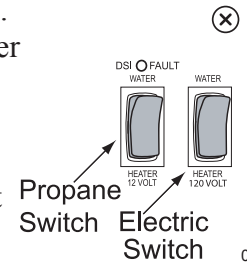

060306j

lockout. Press the switch twice to reset the ignition cycle. If problems persist, consult a qualified technician.

NOTE

Propane and 120 Volt AC functions can be on at the same time. This will speed up the process of heating water for large volume use.

CAUTION

It is not recommended to operate the water heater on propane while the motorhome is in transit. Be sure the water heater is off before refueling.

WARNING

Before beginning any service work on the water heater make sure the propane is turned off, the 120 Volt AC source has been disconnected and the 12 Volt DC source has been disconnected. Failure to do so can result in explosion, fire or injury.

Direct Spark Ignition (DSI):

Direct Spark Ignition (DSI) means an automatically lit water heater. There is no pilot flame and the burner lights by turning on the 12 Volt gas water heater switch.

NOTE

Due to a possible problem (air or obstruction) in the propane lines, the water heater burner will attempt three ignition cycles. If the burner does not light after the third attempt, the propane function will lock-out and the DSI (Direct Spark Ignition) fault light will illuminate. Reasons for lockout may be air in the propane system or burner tube obstruction caused by an insect or spider web. Cycling the 12 Volt gas water heater switch ON and OFF will reset the internal ignition board. If problem persists, consult a qualified technician.

High Temperature Thermostat:


Separate thermostats are used for propane and AC electric. If a thermostat fails, a high-temperature safety limit switch will open.

CAUTION

If the high-temperature safety limit should open, discontinue using the water heater. Have the water heater inspected by a qualified technician to determine the cause of the over temperature condition.


Water Heater Bypass Valve:

Turning the valve to the bypass position prevents water from entering the water heater. Turn the valve to the bypass position when winterizing. For normal operation, turn bypass valve to normal flow.

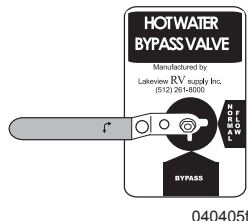

Pressure & Temperature Relief Valve:

The water heater is equipped with a Pressure & Temperature (P & T) relief safety valve. The P & T valve is designed to open if water temperature in the tank exceeds 210° F (98.8° C) or internal pressure exceeds 150 psi. If water begins to weep from the valve, it may be due to a loss of the air pocket in the tank and not a defective valve. See re-establishing the air pocket.

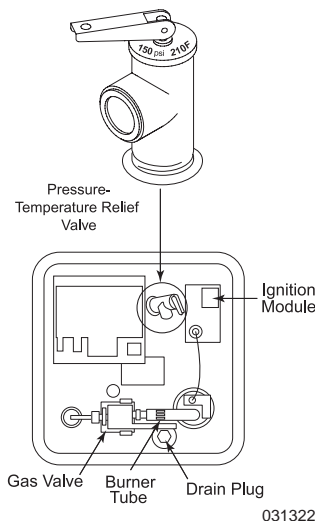

Re-establishing the Air Pocket:

Water may weep from the P & T valve under normal operation. This is not necessarily a faulty valve but more likely caused by lack of an air pocket and water expansion. The water heater tank is designed with an internal air pocket. Eventually, the cyclic expansion of water will absorb the air pocket. When weeping from the valve occurs, the air pocket will need to be re-established utilizing the following procedure. If the valve continues to weep after establishing the air pocket, contact a qualified service center to evaluate the valve.


CAUTION

Ensure the water heater is cool prior to establishing the air pocket.

- ◆ Turn Off the water heater.
- ◆ Turn Off the incoming water supply.
- ◆ Open the hot water faucet closest to the water heater.
- ◆ Open the handle of the P & T valve.
- ◆ Allow excess water to drain from the water heater through the P & T valve. When draining is complete, close the P & T valve by allowing it to snap shut. Close the faucet and turn on the water supply.
- ◆ Turn on the water heater.

Water Heater Compartment:

Periodically inspect the water heater compartment and door screen for foreign material that can prevent the flow of combustion and ventilating air. The water heater drain plug and pressure relief valve are located inside.

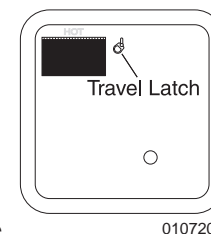

CAUTION

DO NOT block any opening.

Tips

- ◆ Conserve propane by turning off the water heater when not in use.
- ◆ Conserve energy and hot water by shutting off the shower water when not in use.

- ◆ Use caution when hooked to anything less than 30 Amp shore service. When the water heater element is in operation it will use approximately 12 Amps at 120 Volts AC. Appliances will need to be operated in sequence to avoid tripping a breaker.
- ◆ Water may drip occasionally from the Pressure-Temperature relief valve until the pressure has dropped. Avoid opening the Pressure-Temperature valve manually as collected minerals may cause the valve to leak continually. The valves can be purchased from most hardware stores.
- ◆ Operate the water heater using propane when hooked to 30 Amp shore power. This will reduce the likelihood of tripping the shore power breaker.

Draining & Storage:

Drain the water heater to prevent freeze damage if the motorhome is to be stored during the winter months.

- ◆ Turn off electrical power to the water heater.
- ◆ Turn off the primary propane shut-off valve.
- ◆ Open low point drains.
- ◆ Open both Hot and Cold on all faucets.
- ◆ Remove water heater drain plug.
- ◆ Turn the water heater bypass valve to the bypass position.

NOTE


Be sure to refill the water heater with water before resuming operation.

Troubleshooting:

- ◆ Insects may make nests in the burner tube. Check the burner tube for obstructions if the water heater fails to light. It is recommended to clean the burner tube with a brush and not compressed air. Compressed air may not fully remove the obstruction.
- ◆ If the water heater indicator light does not illuminate and the water heater does not light, ensure interior house power is on. Ensure shore power is plugged in and working, and the AC breaker is on. Check for a blown fuse in the house distribution panel.
- ◆ If the water heater fails to operate after checking the fuses, the high-temperature safety limit fuse may be blown. Have a qualified technician inspect the water heater.

WARNING

Before beginning any service or work on the water heater, make sure the propane is turned off, the 120 Volt AC source has been disconnected and the 12 Volt DC source has been disconnected. Failure to do so can result in explosion, fire or injury.

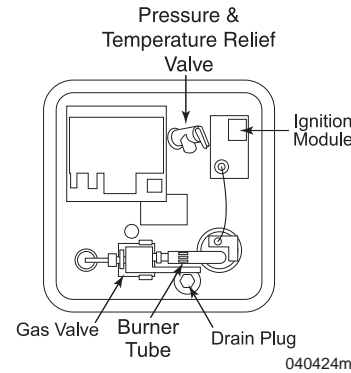

WASHER/DRYER PREPARED

The washer/dryer “prep” package includes the following items:

- ◆ Color coded water supply lines. A red line for hot; a blue line for cold.
- ◆ A 1½” water drain line with threaded cap, P-trap and an automatic vent cap.
- ◆ A 120 Volt receptacle located in the compartment.


NOTE

Sidewall dryer vents are not part of the prep package. If a sidewall vent is to be installed, properly seal vent to sidewall.

If a washer/dryer is to be installed at a later date, follow the manufacturer’s installation instructions.

Listed here are further instructions which should be adhered to for safe and reliable operation:

- ◆ **DO NOT** connect the clothes dryer exhaust duct to any other duct, vent or chimney.
- ◆ **DO NOT** terminate the exhaust duct beneath the motorhome.
- ◆ Use proper length fastener when attaching exhaust vent to exterior sidewall. Stainless steel fasteners are best suited for this as they will not rust.

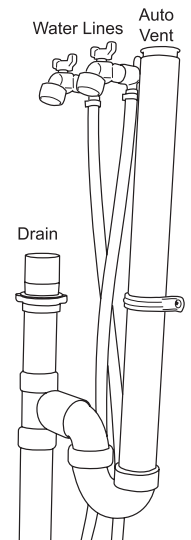

040495e

- ◆ If the cabinet or closet in which a washer/dryer is installed does not have vented louvered doors, the manufacturer's installation instructions may require installation of vented doors or vents to be installed for sufficient circulation of air.

WASHER/DRYER (OPTIONAL)

The automatic washer/dryer is front loading with an extra large door opening for easier access. Various wash and dry programs are available along with variable water temperature settings.

- ◆ The washer/dryer operates on 120 Volt AC from shore power or the generator.
- ◆ The washer/dryer uses about 12 to 20 gallons of water per wash cycle.

INFORMATION

Refer to the washer/dryer OEM manual for detailed operating instructions and maintenance.

CAUTION

It is highly recommended that the motorhome is hooked to shore services when using the washing machine due to limited fresh water supply and limited holding tank capacity. On certain model floor plans and options, the washer may drain into the black tank.

WARNING

Open a window or vent while operating the dryer. The washer/dryer can create negative air pressure inside the motorhome that can accumulate Carbon Monoxide or propane while operating fuel-burning appliances.

CAUTION

DO NOT use the washer/dryer while traveling. Suspension movement, combined with the weight of the drum while in the wash cycle, can damage the internal components of the washer/dryer.

Before Starting a Cycle:

- ◆ Sort and pre-treat clothes.
- ◆ Determine load size.
- ◆ Make sure the drum is correctly loaded.
- ◆ Door is closed.
- ◆ The ON/OFF button has been pressed and machine power is on.
- ◆ Laundry aids have been added to the dispenser drawer. Follow the specified amount.

| Cotton Heavy Duty | Permanent Press | Gentle |
|-------------------|-------------------|-------------|
| 1 Super | 6 Heavy | 11 Silk |
| 2 Heavy | 7 Regular | 12 Wool |
| 3 Regular | 8 Delicates | 13 Wool Dry |
| 4 Express | 9 Express | |
| 5 Cotton Dry | 10 Synthetics Dry | |

Extra Capacity - 10 Wash Cycles - 3 Dry Cycles - 1200 RPM High Spin - Auto Balance System

031331

WARNING

DO NOT wash or dry articles that have previously been cleaned, washed, soaked or spotted with gasoline, dry cleaning solvents or other flammable or vaporous substances that could ignite or explode. DO NOT add gasoline, dry cleaning solvents or other flammable or explosive substances to the wash water.

WARNING

This appliance can only be used to dry clothes that have been pre-washed in water.

CAUTION

DO NOT attempt to open the door when the Door LED is lit solid.

CAUTION


DO NOT use heat to dry articles containing foam rubber or similar textured, rubber-like materials.

CAUTION

During the drying phase, the door will get hot. Use caution when touching the door.

Setting a Wash-to-Dry Cycle

- ◆ Select a washing cycle using the Cycle Selector
- ◆ Select the wash water temperature using Wash Temp.
- ◆ Press available Option buttons. This is optional.
- ◆ Select the length of drying time with Dry Time.
- ◆ Press Start. When the wash cycle ends, the appropriate dry cycle will automatically start.

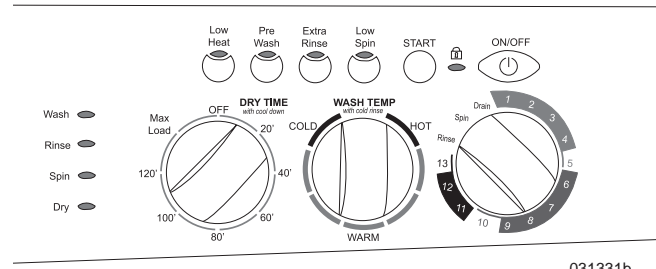

031331b

Setting a Wash Cycle

- ◆ Select a washing cycle using the Cycle Selector.
- ◆ Select the wash water temperature using Wash Temp.
- ◆ Press available Option buttons. This is optional.
- ◆ Set the Dry Time to OFF.
- ◆ Press the Start. When the wash cycle ends, the machine will stop.

Setting a Dry Cycle

- ◆ Select the dry cycle by setting the Cycle Selector to position 5, 10 or 13.
- ◆ Select the length of drying time with the Dry Time knob (20 to 180 minutes).
- ◆ Press Start. When the dry cycle ends, the machine will stop.

Laundry Tips:

- ◆ Wash cycles are 35 to 100 minutes.
- ◆ Dry times for average sized loads are 90 to 120 minutes.
- ◆ Wash cycles use 7 to 18 gallons of water. Some water may remain in drum, this is normal.
- ◆ Door automatically locks during the wash and dry cycles.
- ◆ **DO NOT** overload the drum. Use small loads.
- ◆ **DO NOT** exceed recommended detergent or fabric softener amounts
- ◆ Always use a fabric softener or detergent with built-in softeners.
- ◆ Only use Cotton Heavy Duty for heavy cotton such as jeans and towels.
- ◆ For items that may wrinkle use Low Spin in wash and Synthetics Dry.

- ◆ **DO NOT** over dry laundry.

Cleaning the Machine:

- ◆ The exterior and rubber parts can be cleaned with a soft cloth soaked in lukewarm soapy water.
- ◆ **DO NOT** use solvents or abrasives.
- ◆ **DO NOT** use polish on plastic trim.

Cleaning the Dispenser Drawer:

- ◆ Remove the dispenser by raising it and pulling it out.
- ◆ Wash it under running water.
- ◆ Repeat as needed.

Caring for the Door and Drum:

- ◆ When not in use, leave the door ajar to prevent unpleasant odors from forming.

Turning Off Water or Electric Supply:

- ◆ After every wash turn off water supply. This will limit the wear on the water system and also prevent leaks.
- ◆ When cleaning, on vacation or during maintenance operations, unplug the appliance.

Maintenance

- ◆ Check water inlet hoses at least once a year.
- ◆ Clean filters and water valves
- ◆ If any cracks, bulges or wear are seen, replace hoses immediately.

CAUTION

DO NOT reuse inlet hoses.

INFORMATION

Replace the inlet hoses at least every five years of use. When replacing the inlet hoses, mark the date of replacement on a label with a permanent marker.

INFORMATION

Should the washer/dryer need removal for service, care should be taken as the appliance weighs approximately 150 lbs. Use proper accommodations to avoid personal injury or damage to the cabinetry.

Cleaning the Pump Pre-Chamber:

The washer/dryer is fitted with a self-cleaning pump that does not require regular maintenance. However, if small items such as coins or buttons fall into the pre-chamber that protects the pump, these items will need to be removed.

- ◆ Consult washer/dryer OEM manual on how to access the pre-chamber.

Lint:

The unit removes lint automatically. There is no lint filter to clean. It is recommended that the exterior vent and dryer ducting be inspected to remove lint accumulation.

Winterization

WARNING

It is highly recommended that a qualified RV service technician familiar with motorhomes, such as an authorized dealer, do the winterization procedure and the de-winterization procedure.

POISON

Use only non-toxic FDA approved RV antifreeze that is specifically made for potable water systems. **DO NOT use automobile engine antifreeze. If ingested, automobile antifreeze can cause blindness, deafness or death.**

To Winterize:

- ◆ With washer-dryer power off, pour ½ quart of FDA approved RV antifreeze into the washer drum.
- ◆ Close door.
- ◆ Advance Cycle Selector to Spin.
- ◆ Press On/Off button, then press Start. Let the washer/dryer run for 1 to 2 minutes.
- ◆ Unplug washer/dryer from electrical outlet (disconnect power).
- ◆ Turn water supply faucets Off. Disconnect inlet hoses from faucets.
- ◆ Drain remaining water from the hoses.

To Winterize Pumping Antifreeze Through Fresh Water Plumbing:

- ◆ Follow the “Using Non-Toxic Antifreeze” procedure in Section 6. Antifreeze must be pumping through the system by the water pump.
- ◆ With washer/dryer Off, turn Wash Temp knob to Hot.
- ◆ Advance Cycle Selector to Position 3.
- ◆ Press On/Off button, then press Start. Let washer/dryer fill until the drum turns. This may take 1 to 2 minutes.
- ◆ Press On/Off button to turn power Off.
- ◆ Advance Cycle Selector to Spin.
- ◆ Press On/Off button, then press Start.
- ◆ After letting antifreeze drain completely from drum, press the On/Off button to turn power Off.

To De-Winterize:


- ◆ Reconnect water inlet hoses to corresponding Hot/Cold faucets. Turn faucets On.
- ◆ Check water inlet hoses and pumps periodically for leaks.
- ◆ Plug washer/dryer into appropriate electrical outlet (reconnect power).
- ◆ With washer/dryer power Off, pour ½ Tbsp. of powder detergent (or liquid equivalent) into Compartment 2 of the Dispenser Drawer.
- ◆ Advance Cycle Selector to Position 9.
- ◆ Press On/Off button, then press Start.
- ◆ Allow washer/dryer to run through complete cycle to clean out any remaining antifreeze.

Technical Service:

For detailed technical service contact Splendide at 1-800-356-0766.

**CENTRAL VACUUM (OPTIONAL)
Operation**

- ◆ Plug into shore power or start generator.
- ◆ Lift lid on wall receptacle to start vacuum. Insert the hose in the receptacle and release lid.
- ◆ Connect desired attachment on hose and start vacuuming.

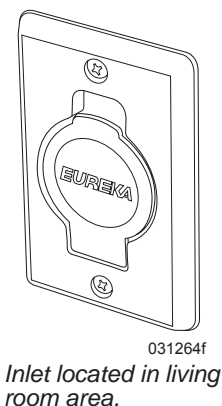

INFORMATION

Consult vacuum OEM manual for detailed operation and maintenance.


Maintenance

Vacuum has a thermal protector built into the motor to prevent overheating. If motor will not operate, it will automatically reset in about ½ hour. If motor brushes or bearings are worn out, the circuit protector will trip off again after a short period of time. If this happens, contact a qualified service representative. Depending on floor plan, the vacuum is located in either a roadside or curbside compartment or under the bed.

Changing the Bag:


To keep your vacuum at top efficiency, change the filter bag at regular intervals. To maintain cleanability, replace filter bag when it is about ¾ full.

- ◆ Unplug the power unit from grounded outlet.
- ◆ Rotate the bag cover counterclockwise and remove cover.
- ◆ With a finger on each side of the inlet, slide the bag off the inlet tube.

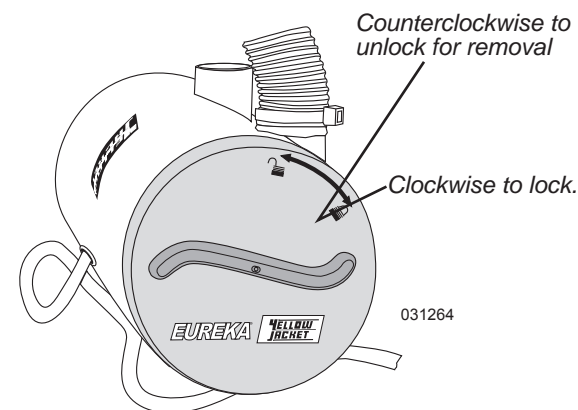


- ◆ Pull the center cardboard tab to automatically seal the bag and prevent dust leakage.

- ◆ Remove the bag from the vacuum and discard. **DO NOT** reuse.

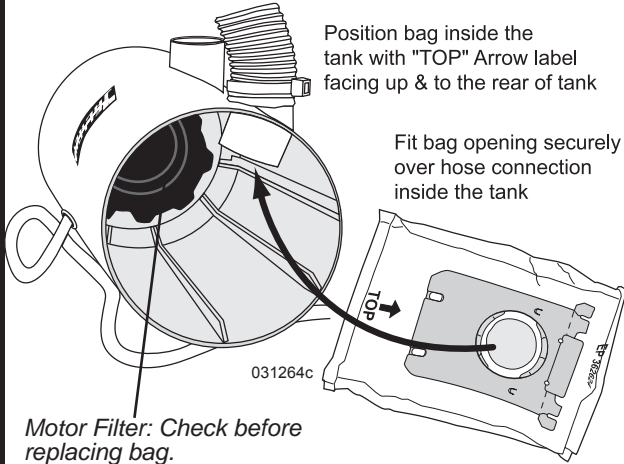

- ◆ Check support (motor) filter.
- ◆ Unfold the new “OX” bag and insert into the vacuum so the center cardboard seal tab is toward bag cover. The top arrow should point to the bag cover.

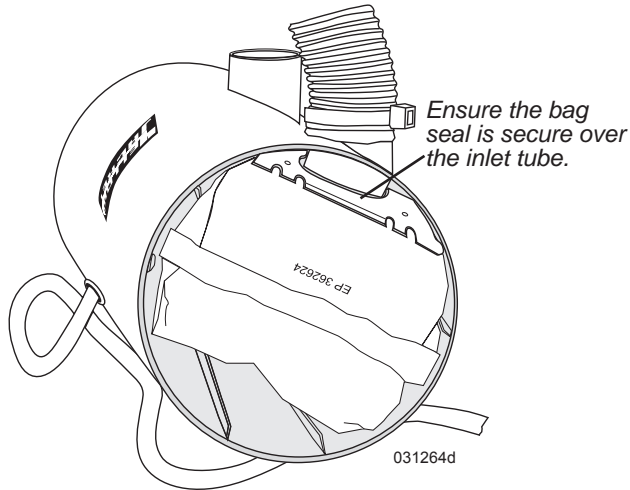

- ◆ With a finger on each of the cardboard tabs, slide the bag on the inlet tube.
- ◆ Line up the mark on the bag cover with the unlock symbol and rotate clockwise to lock symbol.

INFORMATION

Replacement bag is “OX”. Bag is accurate of time of printing. Confirm part number/letters before ordering or obtaining replacement.

Replacing & Cleaning the Support (Motor) Filter:



- ◆ Inspect during each bag change. The filter should be cleaned every fifth bag replacement or when excessively dry.
- ◆ Remove dust bag as previously instructed.
- ◆ Locate the support (motor) filter in the bottom of the bag compartment and lift out.
- ◆ Clean by rinsing under warm water and let air dry if heavily soiled. Replace torn or obstructed filters.
- ◆ Reinstall dry motor filter before use. Be sure filter is tucked under retaining tabs.
- ◆ Reinstall bag as previously instructed.

WARNING

To reduce the risk of fire, electric shock or injury:


- ◆ Unplug and disconnect power before servicing.
- ◆ Avoid wet surfaces.
- ◆ Use only manufacturer recommended attachments.
- ◆ **DO NOT** use without dustbag and/or filters in place.
- ◆ **DO NOT** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- ◆ Use extra care when cleaning on stairs.

- ◆ **DO NOT** use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.

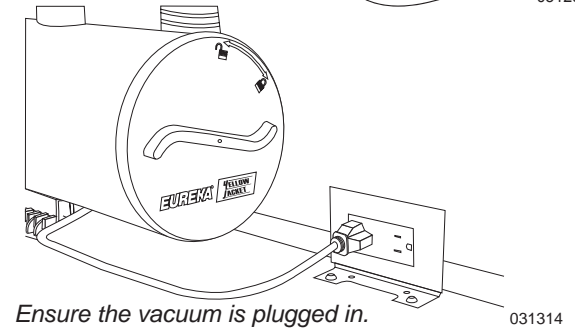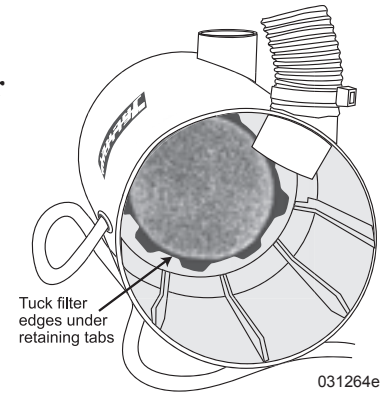

FIREPLACE ELECTRIC (OPTIONAL)

The fireplace operates on 120 Volt AC supplied by shore power or generator

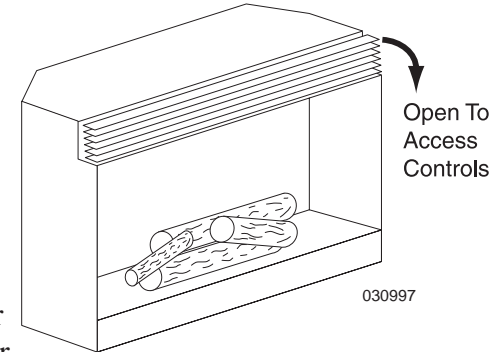

and produces heat using interior lamps. At start up the fireplace may emit a slight, harmless odor caused by the initial heating of internal parts. Follow the recommendations listed below to reduce the risk of fire, electrical shock or injury.

- ◆ Read all instructions prior to using the fireplace.
- ◆ The fireplace is hot while in use. To avoid burns, **DO NOT** let skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, paper, cloth and curtains at least 3' from the front of the unit.
- ◆ Extreme caution is necessary when the fireplace is operated by or near children and/or handicap persons and whenever the fireplace is left operating unattended.
- ◆ Foreign objects in any ventilation or exhaust opening can cause electric shock, fire or damage the heater.
- ◆ To prevent a possible fire, **DO NOT** block air intake or exhaust in any manner.
- ◆ The fireplace contains hot and arcing interior parts. **DO NOT** store gasoline, paint, or flammable liquids where the unit will be exposed to flammable vapors.
- ◆ **DO NOT** modify the fireplace, use it only as described. Any other use not recommended by the manufacturer may cause fire, electric shock or injury.
- ◆ **DO NOT** burn wood or other materials in the fireplace.
- ◆ **DO NOT** strike fireplace glass.
- ◆ Always disconnect power before performing fireplace cleaning or maintenance.

INFORMATION

Consult fireplace OEM manual for detailed maintenance and operating instructions.

Operation

The following will explain the function of each control. To access the controls, open the upper grill by pulling the top forward and down. To conceal the controls during operation, return the grill to the original upright position.

Main ON/OFF Switch: The ON/OFF switch supplies power to all fireplace functions (Heater/Flame). The fireplace can also be turned on and off using the remote control (if equipped). The main ON/OFF switch must be turned ON before remote control will operate.

Flame Action Control: Turn the flame action control knob to adjust flame speed to the desired level.

Flame Brightness Control: Turn the knob to increase or decrease brightness of the flame and embers.


Heater ON/OFF Switch: Supplies power to heating unit when main ON/OFF switch is ON.

Heater Thermostat Control: Turn the thermostat control clockwise to increase temperature setting or counterclockwise to decrease temperature setting.

Temperature Cut-off Switch: This unit is equipped with a thermostat to control room temperature. In the event the fireplace overheats, an automatic cut-out will turn the unit off. The fireplace can be reset by switching the ON/OFF switch to OFF and waiting five minutes before turning the unit back to ON.

CAUTION

Contact a service technician if it becomes necessary to frequently reset the fireplace.

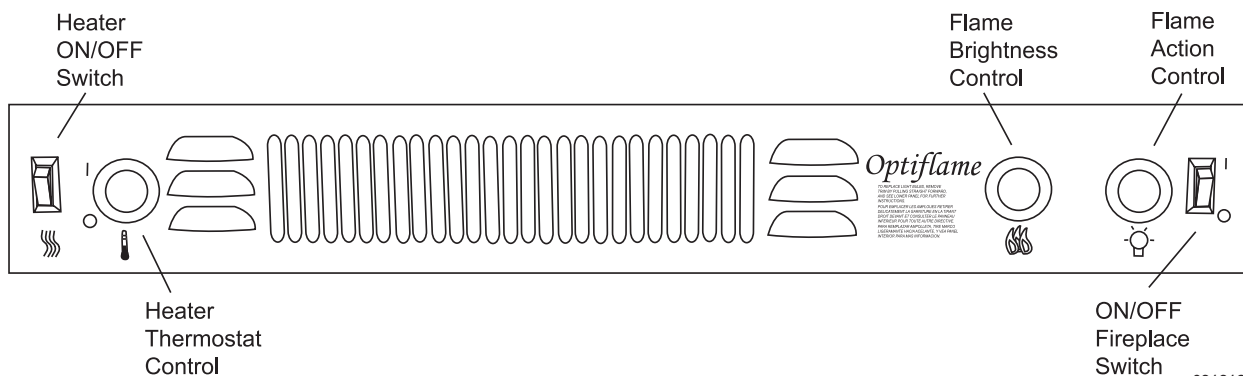

031312b

Light Bulb Replacement

Light bulbs should be replaced when a section of the flame is dark or when the clarity and detail of the log exterior disappears. Two bulbs at the top of the opening illuminate the log set exterior. Four bulbs under the log set generate the flames and embers.

WARNING

To reduce the risk of fire, electric shock or damage to persons, turn OFF circuit breaker before attempting maintenance or cleaning.

NOTE

DO NOT exceed 60 watts per bulb. Verify brand and size of bulb before obtaining replacements. Allow at least five minutes for light bulbs to cool before touching to avoid accidental burning of the skin.

TIP

Replace all light bulbs at one time if bulbs are close to the end of rated life. Group replacement will reduce the number of times needed to open the unit to replace light bulbs.

To Open the Light Bulb Area:

- ◆ Remove the trim by pulling straight forward.
- ◆ Hold glass in place while removing retaining top clip.
- ◆ Lift glass out and store in a safe place.

CAUTION

Safety glass may break if bumped, struck or dropped. Use care when handling the glass.

2009 DIPLOMAT

EQUIPMENT – SECTION 5

| | | | | | |
|---|------------|--|------------|---|------------|
| EQUIPMENT - INTRODUCTION | 100 | POWER SUNVISORS | 110 | DISC CD CHANGER (OPTIONAL) | 119 |
| ENTRY STEP | 100 | DOOR - SLIDING | 110 | HOME THEATRE SURROUND SOUND | 119 |
| Maintenance | 100 | SEAT CONTROLS | 110 | Speaker Switch – When Used | |
| Step Cover | 101 | Swivel Seats | 110 | With Home Theatre Surround Sound..... | 119 |
| Stepwell Storage Compartment | 101 | SOFA | 111 | Remote Control | 119 |
| GRAB HANDLE | 101 | Jack Knife Sleeper Sofa..... | 111 | BEDROOM DVD (OPTIONAL) | 120 |
| ENTRY DOOR | 101 | Hide-A-Bed (Optional) | 111 | SATELLITE SYSTEM PREP | 120 |
| Latch Adjustments | 101 | Hide-A-Bed Air Mattress (Optional)..... | 111 | Coaxial Pre-Wire | 120 |
| Screen Door..... | 102 | Select Comfort Air Mattress (Optional) | 112 | Satellite Receiver Connection – Main Room | 120 |
| KEYLESS ENTRY (OPTIONAL) | 102 | DINETTES | 113 | Satellite Receiver Connection – Bedroom.... | 120 |
| Operation | 102 | Free Standing Dinette (Optional) | 113 | SATELLITE SYSTEM (OPTIONAL) | 121 |
| SLIDE-OUT OPERATION | 102 | Arched Back Booth Dinette..... | 113 | WINEGARD TRAV'LER | |
| Extending & Retracting Slide Rooms..... | 103 | STORAGE UNDER BED | 113 | MULTI-SATELLITE (OPTIONAL) | 122 |
| Locking Bar | 103 | LADDER - REAR | 114 | EXTERIOR ENTERTAINMENT | |
| Safety Precautions | 104 | STORAGE BAY SLIDE-OUT TRAY (OPTIONAL) | 114 | CENTER (OPTIONAL) | 123 |
| Troubleshooting | 104 | CITIZEN BAND (CB) RADIO - PREP | 114 | SYSTEMS CONTROL CENTER | 123 |
| Manual Override – Hydraulic | | NAVIGATION SYSTEM (OPTIONAL) | 114 | SURGE PROTECTOR | 124 |
| Main Slide-Out Room | 104 | SATELLITE RADIO (OPTIONAL) | 114 | | |
| Manual Override - Bedroom..... | 105 | TV ENTERTAINMENT COMPONENTS | 115 | | |
| Broken Cable - Bedroom Slide-Out | 106 | Television (Front) Lockout Feature | 115 | | |
| AWNINGS | 107 | Connections - Cable TV, Computer | | | |
| Slide-Out Cover..... | 107 | & Phone..... | 115 | | |
| Rain Water | 107 | TV Antenna | 115 | | |
| Front Door Awning | 107 | Antenna Select..... | 116 | | |
| Window Awning | 107 | ENTERTAINMENT SYSTEM | 116 | | |
| Patio Awning..... | 108 | Operating Components..... | 116 | | |
| Awning Care & Cleaning..... | 108 | DASH RADIO | 118 | | |
| Storm Precautions | 109 | Dash Radio Power Switch – On Dash | 118 | | |
| FANS | 109 | Dash Radio On/Off Switch – In Bedroom | 119 | | |
| Automatic | 109 | Speaker Switch – When Used With | | | |
| BEDROOM CEILING FAN (OPTIONAL) | 109 | Dash Radio | 119 | | |



EQUIPMENT - INTRODUCTION

This section covers the basic operation and care of equipment found in the motorhome, most of which are provided for entertainment and comfort. More detailed information about specific equipment may be found in the OEM manuals. Optional equipment will also be discussed in this section which may not apply to all motorhomes.

INFORMATION

Detailed information with CAUTION or WARNING instructions for the various electronics, other than what is provided in this section, can be found in the OEM manuals.

ENTRY STEP

The exterior electric entry step features retractable steps, automatic retraction with the ignition key in the RUN position and a last out feature.



080498z
Located by
entry door

NOTE

When dry camping it is important to note that when the switch is illuminated, all step circuits are active and drawing current from the chassis battery. Chassis battery disconnect switch must be on for entry step to operate.

Operating the Entry Step:

- ◆ With the entry door open, turn the step switch on. Ensure the chassis disconnect switch is on.

- ◆ Close the door. The step should retract and lock in the IN position.
- ◆ Open the door. The step should extend and lock in the OUT position. The step will retract when the door is closed.
- ◆ When the switch is turned off, the step should remain in the extended position. Close the door and turn on the ignition switch. The step will retract for travel.
- ◆ With the power switch off, the step extended, the entry door closed and the ignition turned on, the ignition override system will engage to automatically retract the step.
- ◆ Turn the ignition off and open the door. The step will extend and lock in the OUT position. This is the “last out” feature. When the ignition is on the step will always activate with door movement, regardless of the power switch position.

WARNING!

This vehicle is equipped with an automatic electric step. Turning the ignition switch to the "ON" position while the vehicle is parked will cause the step to retract. Visually confirm that the step is fully extended prior to exiting the vehicle.

BE SAFE - LOOK BEFORE YOU LEAP!

020325

WARNING


Turning the ignition switch to the ON position while the motorhome is parked will cause the entry step to retract. Visually confirm that the entry step is fully extended prior to exiting the motorhome.

CAUTION

High curbs can impede step operation. Use care when parked on side streets.

If the entry step fails to operate:

- ◆ Verify that the entry step switch is ON.
- ◆ Check the main power supply for the step: a 25 Amp fuse located in the roadside front electrical panel.
- ◆ A magnetic door jam switch is used to control step operation. Use a separate magnet to apply a “trigger” to the door jam switch. Rotate test magnet to align polarity field.

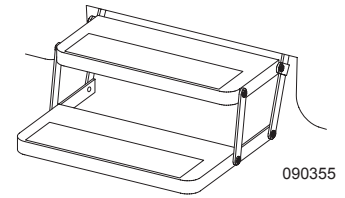

WARNING

If the motorhome is driven with the step in the extended position major damage to both the step and the motorhome could occur.

CAUTION

Keep fingers, clothing and other hardware away from moving components.

Maintenance

The steps are equipped with self-lubricating bushings in the drive assembly and step joints and require no maintenance. If in extreme weather conditions and lubrication is deemed necessary a silicon based grease or spray can be used on the bushings.

NOTE

Clean and inspect step more frequently in adverse weather conditions. Mud, snow, road salts and sand could quickly break down lubricant and corrode painted surfaces.

WARNING

No repairs should be attempted by anyone other than by a qualified technical professional. The deployment and retraction of the steps can cause serious injuries.

Step Cover

An electrically operated stepwell cover will extend and retract using the switch on the center console. Power is supplied by a 15 Amp circuit breaker in the roadside front electrical panel.

To operate the Stepwell Cover:


- ◆ Chassis Battery Disconnect must be on.
- ◆ Press and hold the Step Cover switch to the desired direction. Release the switch to stop movement.

CAUTION

DO NOT operate the stepwell cover while standing in the stepwell area. When operating the stepwell cover, make sure there are no pets, shoes or other obstructions in the stepwell area.

Stepwell Storage Compartment

The interior stepwell features a storage compartment in the upper step. This compartment is ideal for storing such items such as gloves (for refueling), tire pressure gauge, flashlights or outside slippers.

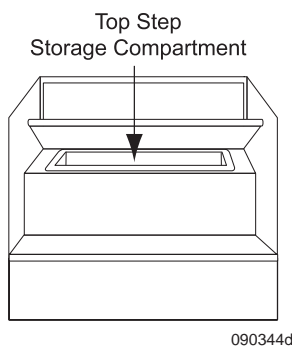

090344d

GRAB HANDLE


The grab handle is used to aid in entering and exiting the motorhome.

Cleaning the Handle:

- ◆ Clean the acrylic grab handle using mild soap and water only!

What Not To Use:


- ◆ **DO NOT** use alcohol based glass cleaners as these solutions adversely affect acrylic material causing stress cracks leading to eventual failure of the grab handle.
- ◆ Use of alcohol based cleaners combined with heat and light will expedite deterioration of the acrylic material.

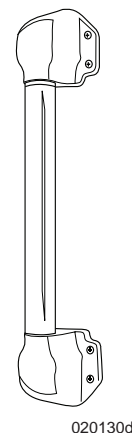

020130d

ENTRY DOOR

The entry door is adjusted at the factory and tested for all operations. The door uses two separate locks for safety and security. One locking system is the door lock and the other is a dead bolt. The door handle incorporates a primary and secondary latching system to ensure safety. There are adjustments which can be made to help maintain entry door performance.

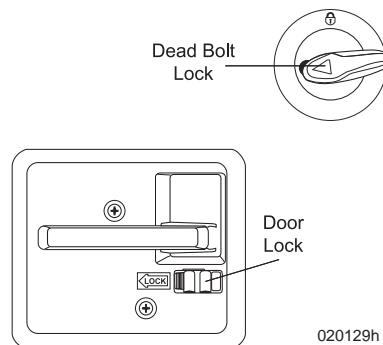

020129h

Latch Adjustments**Adjusting the Entry Door Latch:**

- ◆ Determine which bolt needs adjustment.
- ◆ Slowly close the entry door, observing the latch and strike bolt alignment. **DO NOT** attempt to latch if the alignment is off. If the alignment is correct, allow the latch to catch in the first (primary) position only.
- ◆ The latch should move to the second position with only slight pressure applied to the entry door. Upper and lower latches should be evenly timed. Press on the entry door to check for further movement.
- ◆ The entry handle should operate with little effort to open the entry door. Excess pressure indicates the bolts are set too far back.
- ◆ With a box wrench or socket, loosen the movable strike bolt. Make all adjustments in small increments. Tighten the bolt firmly after making adjustments. The bolts should have slight up and down movement for vibration control in travel.
- ◆ Test the operation of the dead bolt lock to ensure proper functions.
- ◆ Apply silicone weekly to the entry door rubber gaskets to prevent squeaking while the motorhome is in use. Use a 1" sponge paint brush, sprayed with silicone for easy application.

CAUTION

When operating the entry door, ensure the dead bolt latch is fully unlocked prior to closing. Failure to do so can result in damage to the dead bolt and/or entry door.


Screen Door

Changing Screen Door Glass:

- ◆ The screen slider is Tuffak; the slider can be bowed for removal and replacement.
- ◆ Replace with new Tuffak and reverse the procedure.


Adjusting the Screen Door:

- ◆ Loosen the fasteners on the hinge side of the screen door; two on the top and two on the bottom.
- ◆ Slots in the hinge allow for in and out movement.
- ◆ Adjust the screen door to fit.
- ◆ Four screws are on the top hinge and four on the bottom hinge. These screws ensure proper fit to the entry door.
- ◆ The hinge should fit tightly to the trim of the door when the screen door is latched and the door is open.

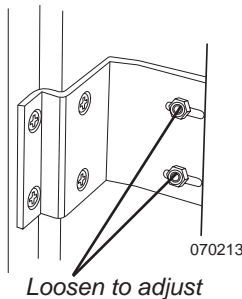

Removable Screen:

- ◆ The top half of the screen door is removable, allowing a clear view through the entry door glass while in operation.
- ◆ To remove the top half of the screen door for travel, rotate clips and remove the screen.
- ◆ To store the screen for travel, use the clips provided on the bottom half of the screen door.

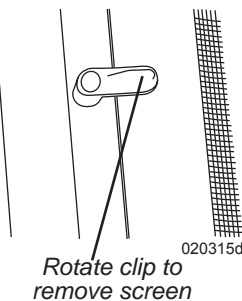


KEYLESS ENTRY (OPTIONAL)

Operation

Key Fob:

1. Locks entry door.
2. No function. Button is OEM/dealer defined.
3. Unlocks entry door.
4. Panic mode. Activated by pressing and holding button for approximately two seconds. Motorhome lights will flash. Pressing the lock or unlock button deactivates panic mode.

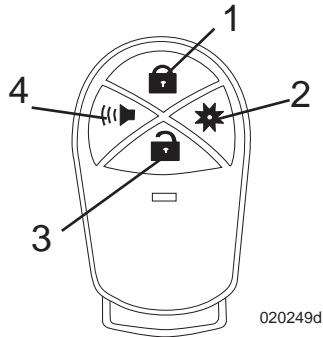

INFORMATION

The assignment of key fob buttons and functions is accurate at time of printing. Assignment buttons and functions can vary from what is printed.

To Operate:

- ◆ Chassis battery disconnect must be ON.

NOTE

Key fob operation distance is within approximately 50 feet of the motorhome.

SLIDE-OUT OPERATION

Slide room operation uses safety features to prevent mechanical damage or physical harm. Slide room(s) will not operate until all safety requirements are met. To prevent damage to cabinet doors or the slide room, secure all


cabinet doors in the closed position prior to room activation. Some interior doors may require being fully open or fully closed for the slide room to operate.

Safety Requirements:

- ◆ Ensure the ignition key is in the OFF position when extending to the OUT position.
- ◆ The park brake must be applied.

CAUTION

DO NOT leave the slide room extended during severe weather. Conditions such as high winds or heavy rain may cause damage. Rain water can pool on the slide room awning, adding weight and causing the awning to sag. Retract the room in small increments to allow water run off.

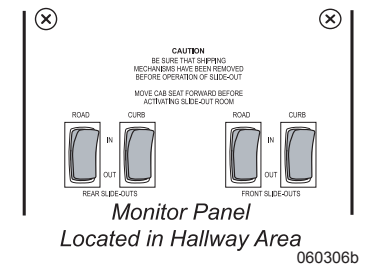

CAUTION

DO NOT move the motorhome with any slide room extended.

CAUTION

Extensive damage could occur to the slide-out room and awning when extending the slide-out room in snow, sleet, ice or freezing rain conditions. If the slide room is extended in such conditions, clear the awning and ensure free movement prior to operating the slide-out room.

Operation Requirements:

- ◆ House or chassis (depending on model) battery disconnect switch must be on.
- ◆ House batteries are fully charged.

Guidelines to ensure long life of slide system:

- ◆ Inspect slide roof slide for debris such as pine needles, dirt, leaves, sticks, etc. Debris left on the top may cause damage to the seals during retraction. If debris is present, wash with soap and water, then rinse.
- ◆ When the room is out, visually inspect the wipe seal for dirt or other foreign material and for tears.
- ◆ If the slide room leaks, fully retract the room. If necessary, tape exterior opening closed with duct tape until repairs to the motorhome can be completed.
- ◆ Open a window or vent to equalize pressure during slide operation.

CAUTION

Firmly latch all cabinet doors adjacent to the slide before extending or retracting the rooms. Damage to doors or the fascia may occur.

CAUTION

Dirt and grit trapped under the slide room can scratch and damage the floor. Clean the floor before retracting the slide room.

CAUTION

DO NOT use petroleum based products on the slide seal. Petroleum based products can damage the paint and will cause premature aging of the rubber seal.

Extending & Retracting Slide Rooms

CAUTION

To extend/retract the slide-out room, the ignition must be OFF, park brake set, jacks retracted and the motorhome supported by the air suspension (air bags). DO NOT operate the slide out room with the air suspension (air bags) deflated or when supported by hydraulic jacks. Damage to the slide out room, the mechanism or seals can occur. Confirm the house batteries are fully charged.


MOVE CAB SEAT FORWARD BEFORE ACTIVATING SLIDE-OUT ROOM

020329

To Extend or Retract Slide Rooms:

- ◆ Move the driver or passenger seat forward. Clean the floor of dirt or grit that could result in damage during operation.
- ◆ Confirm there is enough clearance inside/outside the motorhome for the room to extend/retract. Allow at least five feet of clearance to extend a slide-out.
- ◆ Retract hydraulic jacks. Start engine. Allow time for the air suspension to support the chassis.
- ◆ Turn off the engine. Ensure park brake is applied when extending and retracting the slide room.
- ◆ Open a window or vent to equalize pressure during slide-out operation.
- ◆ Confirm the house batteries are fully charged and operating.
- ◆ People, pets and objects must be clear of the slide room path.
- ◆ Remove the locking bars if extending.

- ◆ Firmly latch all cabinet doors and close drawers. Damage to the doors, drawers and fascia can occur.
- ◆ Locate the slide-out room control switch. Press and hold the slide room switch to the desired (IN or OUT) position.
- ◆ Release the switch anytime to stop room movement. The drive motor will not automatically stop; the switch must be released. A change in motor sound indicates full extension/retraction.
- ◆ If applicable, install any locking bars for travel.

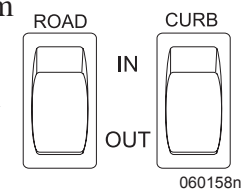


Locking Bar

A locking bar is a manual locking device to help retain the slide-out room in position.

CAUTION

Remove locking bar prior to extending slide-out.

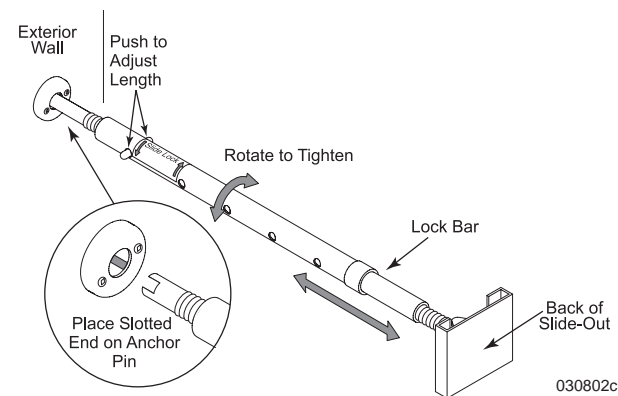

Safety Precautions

CAUTION

Continuous operation of the slide room can drain the batteries and overheat the motor.

WARNING

The exterior area must be clear of obstructions that can restrict slide room operation. Ensure there is five or more feet of clear space outside the slide room prior to extending the room or damage to the slide, the motorhome or property can occur. When retracting the slide room, ensure there is sufficient clearance inside the motorhome. Move the driver or passenger seat forward before activating the slide room.

CAUTION

If a problem with the slide-out occurs, contact a qualified technician.

Troubleshooting


If the slide room does not operate, a safety feature may be engaged to prevent room operation.

If the slide room does not respond from the switch:

- ◆ Ensure ignition key is OFF.
- ◆ Ensure the park brake is applied.
- ◆ Make sure the locking bar is removed.
- ◆ House battery disconnect switch is ON.
- ◆ House batteries are fully charged.

If the slide room does not operate after checking the safety requirements:

- ◆ Examine all electrical connections at the slide-out switch.
- ◆ Check fuses and, if applicable, circuit breakers.
- ◆ House batteries are fully charged.

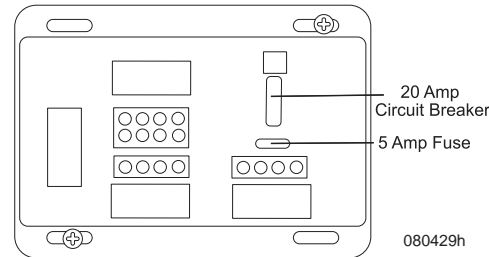

Located in curbside battery compartment.
Fuse and circuit breaker location may vary.

- ◆ It may be necessary to contact a repair facility to have the problem diagnosed and repaired.

WARNING

DO NOT work on slide-out system unless both house and chassis batteries are disconnected. Make sure floor is clean before retracting slide-out room.

Manual Override – Hydraulic Main Slide-Out Room

If the slide-out must be manually retracted, there are a number of key components on the hydraulic pump.

Refer to the illustration for these components:

- ◆ Connection to the control valve.
- ◆ Control valve.
- ◆ Manual drive access located under the protective label.

If there is a problem with the slide-out not retracting, follow these steps.

Determine if Hydraulic Pump is Running:

- ◆ Two people are needed. One person accesses the hydraulic motor, the other presses the slide-out retract button on the Systems Control Panel. Listen to determine if the pump is running.
- ◆ If only one person is available stay inside the motorhome and press the slide-out retract button on the Systems Control Panel. Listen to determine if the pump is running.

CAUTION


DO NOT run the hydraulic motor for an extended, continuous period of time. Damage to the motor can occur.

CAUTION

DO NOT continue to run the hydraulic motor if the slide out does not retract. Damage to the motor could occur.

WARNING

The hydraulic motor can be extremely hot. Use extreme safety when accessing and working on the motor. Hot metal can result in serious burn injuries.

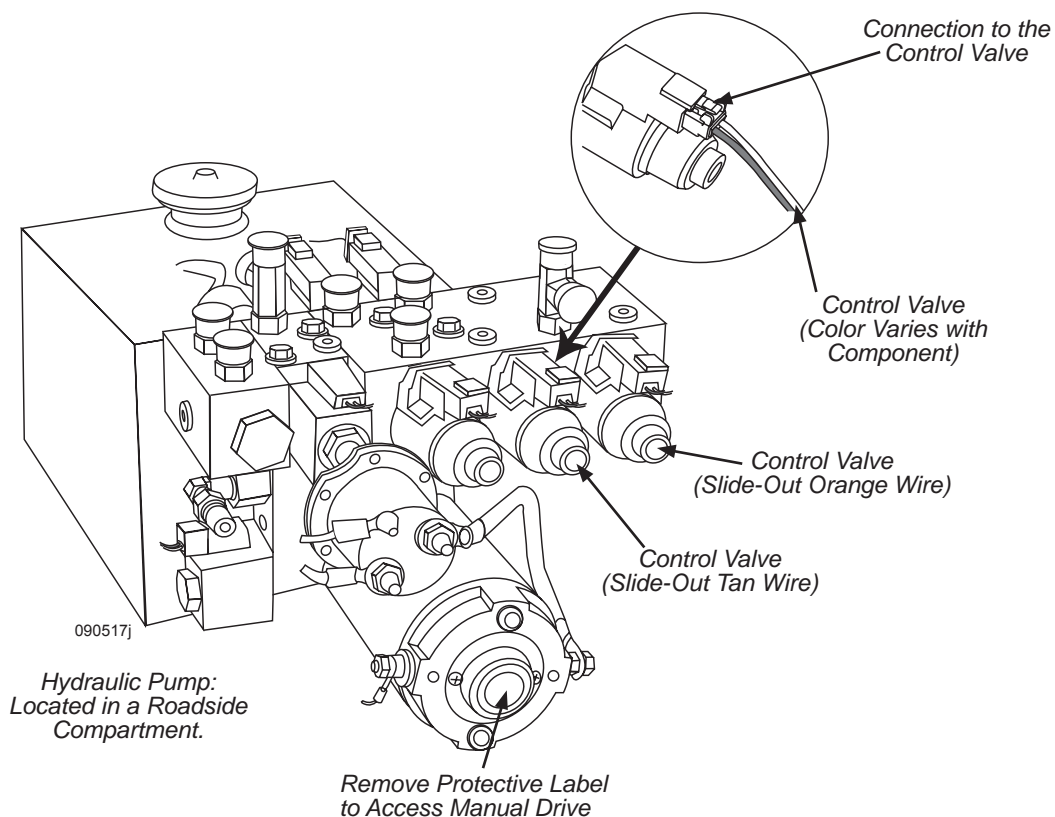

Control Valve:

Each control valve operates a specific slide-out. The control valve (specific slide-out) is identified by a colored wire on top of the control valve:

- ◆ **Tan Wire** – living room slide-out.
- ◆ **Orange Wire** – kitchen slide-out.

If Pump Runs:

- ◆ Disconnect both the house and chassis disconnect switches.
- ◆ Access the hydraulic pump.
- ◆ Ensure that the connection to the control valve is plugged in. If loose, properly secure the connection.
- ◆ Locate slide-out control valve on pump by finding the appropriate colored wire (tan or orange) on top of the control valve.

- ◆ Using an Allen wrench turn the control valve clockwise (IN).
- ◆ Turn on both the house and chassis disconnect switches.
- ◆ Go inside motorhome and press the slide-out retract button on the Systems Control Panel. This will retract slide-out(s).
- ◆ Disconnect both the house and chassis disconnect switches.
- ◆ Using an Allen wrench turn control valve on hydraulic pump counterclockwise.
- ◆ Turn on both the house and chassis disconnect switches.
- ◆ Take motorhome to an authorized repair center.

If Pump Does Not Run:

- ◆ Disconnect both the house and chassis disconnect switches.
- ◆ Locate slide-out control valve on pump by finding the appropriate colored wire (tan or orange) on top of the control valve.
- ◆ Using an Allen wrench turn the control valve clockwise (IN).
- ◆ Remove the protective label on the hydraulic pump to access the manual drive coupler.
- ◆ Attach a standard hex bit into a drill.
- ◆ Insert the hex bit into the coupler found under the protective label.
- ◆ Run drill counterclockwise to retract.
- ◆ Disconnect both the house and chassis disconnect switches.
- ◆ Using an Allen wrench turn control valve on hydraulic pump counterclockwise.
- ◆ Turn on both the house and chassis disconnect switches.
- ◆ Take motorhome to an authorized repair center.


Manual Override - Bedroom

Depending on floorplan the bedroom may have either a cable or an above floor slide-out system. The above floor slide-out is used when the bed moves with the slide out. If the closet moves with the slide-out, the system is cable.

Another method of checking for the cable system is with the bedroom slide-out extended a cable is visible under the slide-out.

To Move the Bedroom Slide Room (Above Floor System) Manually:

- ◆ Turn off both the battery and house disconnect switches.
- ◆ The above floor slide-out motor is located under the bed. Lift the bed and remove the access panel.
- ◆ Disconnect the slide-out motor electrical plug to remove 12 Volt DC power from the slide-out motor. The plug can be located by following wires that run from the motor to the plug.
- ◆ Use a wrench to turn driveshaft and retract room.
- ◆ Once the slide room is manually retracted, apply pressure to the wrench to firmly set the room and prevent room drift.
- ◆ Take the motorhome to an authorized repair center.

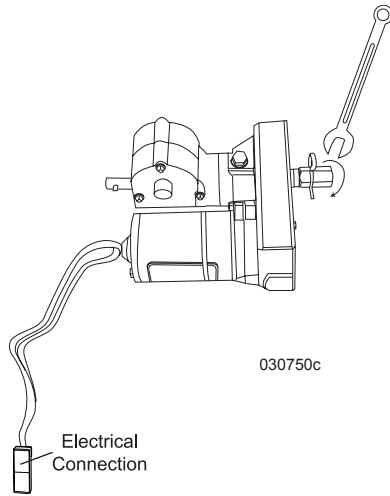


CAUTION

DO NOT continue to turn the motor after the room is fully extended or retracted. Damage to the slide mechanism can occur.

To Move the Bedroom Slide Room (Cable System) Manually:

- ◆ Turn off both the battery and house disconnect switches.
- ◆ Locate the bedroom slide-out motor. The motor is located near the ceiling of the slide-out. Remove the trim.
- ◆ Disconnect the slide-out motor electrical plug to remove 12 Volt DC power from the slide-out motor. The plug can be located by following wires that run from the motor to the plug.
- ◆ Attach the flexible shaft to the fitting on the end of the slide-out motor.

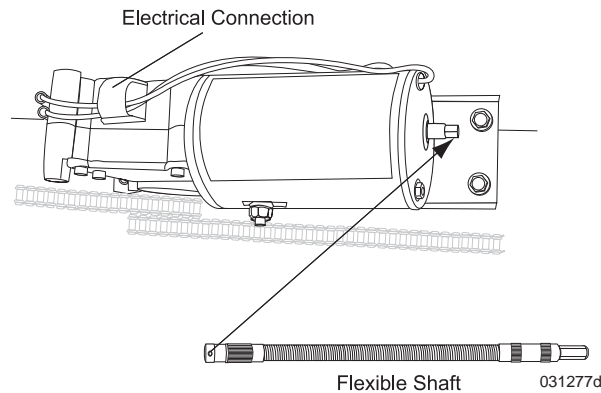

- ◆ Attach a socket and ratchet or drill to the other end of the flexible shaft. reverse the direction. Over-torquing can cause severe damage.
- ◆ Turn in proper direction to move the room. If the cables tighten and the motor is difficult to turn, reverse the direction. Over-torquing can cause severe damage.
- ◆ Take motorhome to an authorized repair center.

Broken Cable - Bedroom Slide-Out

If the cable on the bedroom slide-out breaks, call an authorized repair center for roadside assistance.

If this is not possible, the slide-out must be manually pushed in. When pushing, use extreme care and safety. Take extra precautions from getting fingers pinched. Avoid getting fingers near edge of slide wall or around wall edge.



Push slide-out from the back. **DO NOT** wrap hands and fingers around edge of slide-out, see illustration.

Keep fingers away from frayed or broken cables. Frayed wire is sharp and can cut.

Cables can also jam, then whip free causing serious injury or death.

Manual Procedure:

- ◆ Turn off both the battery and house disconnect switches.
- ◆ The bedroom slide-out room is heavy. Use safety and care when pushing to prevent personal injury. It will require 1-2 people to push the room into position.
- ◆ Once the slide-out is in position, take the motorhome to an authorized repair center.

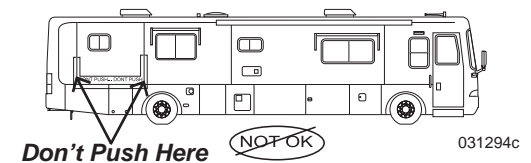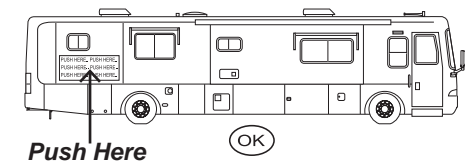


AWNINGS

Slide-Out Cover

The slide-out cover automatically reacts to slide-out direction. A fixed edge of the slide-out cover is installed into an awning rail, mounted just above the slide-out. A spring-loaded roller with special brackets mounts to the slide-out. In a hard rain the cover helps prevent water from penetrating the seal of the slide-out. The slide-out cover will automatically reach full extension when the slide-out room is fully extended.

The slide-out cover automatically rolls up into the travel position when the slide-out room is completely retracted.

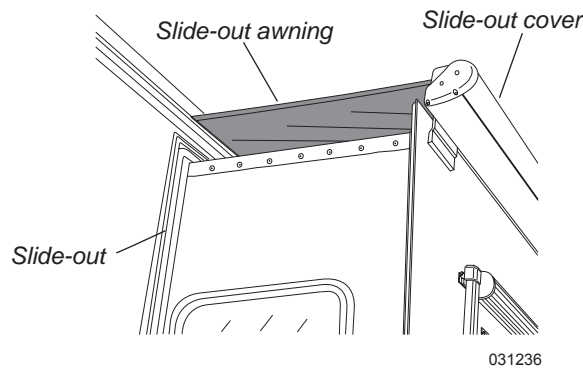

INSPECTION

When retracting the slide-out, stop the room approximately halfway. Confirm that the fabric is properly rolling before fully retracting the slide-out.

CAUTION

The slide room and slide-out awning should be retracted before heavy wind, rain or snow to prevent damage to the awning or motorhome. Wind can drive rain under the slide-out awning and into the motorhome.

CAUTION



At least five feet of clearance is needed between the side of the motorhome and any objects, such as trees or fences, to allow the slide room and slide-out awning to fully extend.

Rain Water

Use caution because rain water can pool on the slide-out awning. The added weight will cause the awning to sag. Upon retracting the room, material can become caught in between the top of slide room and the opening in the motorhome. It will be necessary to retract the room in small increments and allow the water time to run off.

Front Door Awning

The awning operates on 12 Volt DC by the push of a button to extend the awning to full extension.

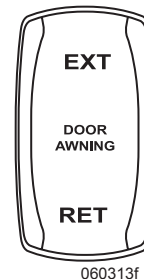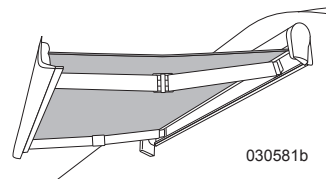

To Operate:

- ◆ Check for sufficient clearance before extending the awning.
- ◆ Chassis battery disconnect switch must be on.
- ◆ Turn the ignition switch OFF.
- ◆ Push the Door Awning Extend/Retract button and hold. When desired extension is reached, release the button.
- ◆ To close, push the Door Awning Extend/Retract button and hold to retract the awning to its travel position.

If the awning fails to operate:

- ◆ Ensure ignition is off.
- ◆ Check power at 15 Amp circuit breaker in front electrical panel in roadside front compartment.


INFORMATION

See awning OEM manual for detailed operation instructions.

Window Awning

To Extend the Window Awning:

- ◆ Hook loop of pull strap with catch rod and pull awning, reel assembly and side arms to extend fully away from motorhome.
- ◆ Hook pull strap on side strap hook, remove catch rod from pull strap and store.

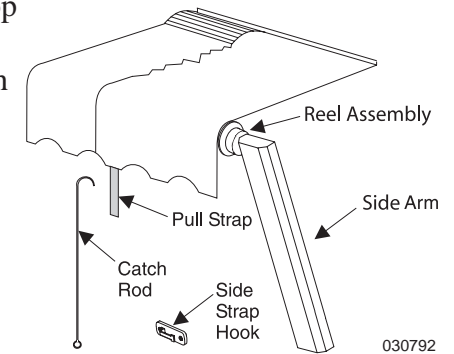

To Retract the Window Awning:


- ◆ Hook catch rod on pull strap, remove pull strap from side strap hook and slowly allow awning to retract.
- ◆ Remove catch rod from pull strap and store for future use.

Patio Awning

The awning operates on 12 Volt DC by the push of a button. The awning requires 10' of lateral side clearance.


To Operate:

- ◆ Turn the ignition switch OFF.
- ◆ Check for sufficient clearance before extending the awning.
- ◆ Chassis battery disconnect switch must be ON.
- ◆ Turn the Awning Power On/Off button to ON.
- ◆ Push and hold the Extend/Retract button to extend the awning. Release the button at any time for partial extension.
- ◆ Push the Extend/Retract button and hold to retract awning.

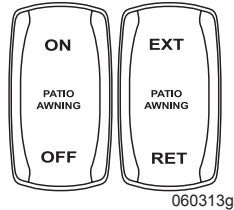

External Control Switch:

An external control switch is located at the bottom of the front outside arm.

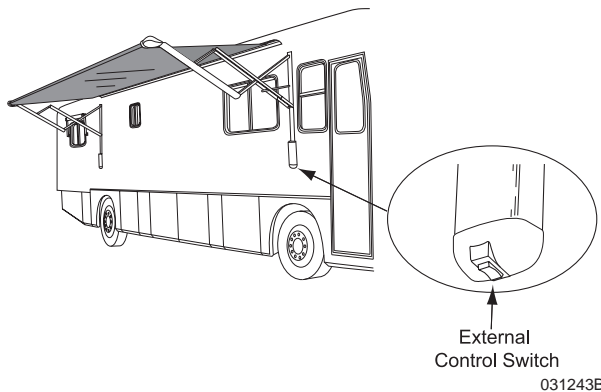

To Operate:

- ◆ Turn the ignition switch OFF.
- ◆ Check for sufficient clearance before extending the awning.
- ◆ Chassis battery disconnect switch must be ON.
- ◆ Turn the Awning Power On/Off button to ON.
- ◆ Push and hold the external control switch to extend and retract the awning. Release the button at any time for partial extension.

If the awning fails to operate:

- ◆ Ensure ignition is off.
- ◆ Check power at 15 Amp circuit breaker in front electrical panel in roadside front compartment.

INFORMATION

See awning OEM manual for detailed operation instructions.

Awning Care & Cleaning

On a monthly basis, loosen hardened dirt and remove dust from the awning with a dry, medium bristle brush. Thoroughly rinse both the top and bottom with a garden hose.

A high-quality fabric cleaner may be used to help maintain appearance. Carefully follow the instructions on cleaning products. Metal surfaces should be cleaned with soapy water and thoroughly rinsed. Allow the awning to thoroughly air dry while extended. Awning maintenance products can be found at RV supply stores.

Carefree Awnings:

Acrylic Awnings - Wash both sides of the awning with a mild soap (i.e., dish soap) and lukewarm water. **DO NOT** use detergents. If necessary, reapply the solution to keep fabric saturated. Rinse the awning thoroughly. Repeat, if necessary, until most of the stains disappear. Contact *Carefree of Colorado* for removal of stubborn stains.

Polyweave and Vinyl Awnings - Mildew will not form on the awning material itself, but may form on the dust accumulated on the canopy. A quality vinyl cleaner, such as *Carefree Awning Magic*, will help keep the awning looking new. A mild soap (i.e. dish soap) and lukewarm water solution can be used. **DO NOT** use detergents. Be sure to follow the instructions on the container.

Leaks:

It is normal for slight leakage to occur through the fabric where water is allowed to accumulate. If water drips through the needle holes in the stitching use a commercial seam sealer that is available in canvas and trailer supply stores. Paraffin wax may also be applied to the top of the seams. As the awning “weathers” these holes will normally seal themselves.

Soap or chemical residue can “wet” the fabric so that it appears unable to repel water. Rinse the fabric thoroughly and test to see if it is water repellent after it dries. If leakage continues after washing and thoroughly rinsing, please contact *Carefree of Colorado*.

Storm Precautions

The warranty does not cover damage caused by acts of nature; therefore, steps should be taken to prevent damage from occurring due to wind, rain or storms. Retract the awning in inclement weather conditions or when leaving the motorhome unattended. Should the awning need to be retracted while the fabric is wet, extend it as soon as possible and allow to completely dry.

INFORMATION

Water weighs 8.33 pounds per gallon. The awning was not designed to withstand the 500 to 700 pounds of water that could accumulate on the canvas.

FANS

Automatic

A wall rheostat controls the automatic vent and power of the fan. The system operates from 12 Volt DC power.

Fan Operation:


- ◆ Ensure house batteries are on.
- ◆ Turn on the battery cutout switch.
- ◆ Push the vent cover knob to the Automatic position.
- ◆ Use the wall switch to raise the vent cover. The vent cover must be open approximately 2" before the fan will run.
- ◆ Turn power knob clockwise to turn fan on. The power knob also adjusts fan speed.

NOTE


Push the knob in for automatic. Pull the knob out for manual.

NOTE

To override the automatic setting, pull the vent cover knob out to the manual position and close vent. The fan blade will stop spinning when the vent is closed.

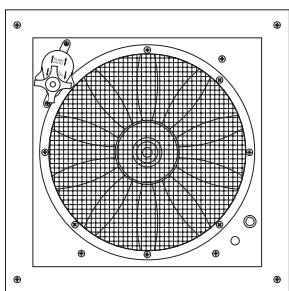

030832k

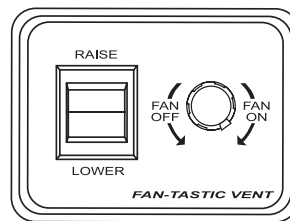

031205d

WARNING

DO NOT hold switch after the motor has stopped. This may cause damage to the automatic lift system resulting in a stuck vent.

NOTE

The safety switch built into the fan will not allow the fan blade motor to operate unless the vent is open approximately 2" or more.

Tips for Fan Operation:

- ◆ Operate the fan to reduce condensation inside the motorhome. Condensation occurs naturally from fluctuations in interior and exterior temperatures, humidity, steam from cooking. Shower use is another source of condensation.
- ◆ If the fan fails to operate, check for a blown fuse either in the house fuse panel or the 4 Amp fuse on the fan.

- ◆ To remove the screen, loosen the screws holding the screen in place. Use a non-abrasive soap and water to clean and reinstall.
- ◆ Slightly open windows on the shaded side of the motorhome to create the most airflow, especially on hot, sunny days. Direct airflow by slightly opening selected windows. Maximum airflow is achieved between an open window and the Fantastic Vent.

CAUTION


DO NOT leave the fan switch in the active mode while the motorhome is stored or unattended for extended periods. High winds, unusual conditions or obstructions may prevent the fan cover from fully closing, resulting in leakage and serious damage.

BEDROOM CEILING FAN (OPTIONAL)


A bi-directional 12 Volt DC powered ceiling fan is located in the bedroom. Place the switch in the up position to move the blades counterclockwise and push air down (for cooling in summer). Place the switch in the down position to move the blades clockwise and pull air up (for warming in winter). Turn the fan off before reversing fan blade direction.

Fan operation is controlled by a switch next to the bed and has three positions: Off, High Speed, and Low Speed. The battery cutout switch must be on for the ceiling fan to operate.



Periodic maintenance consists of cleaning the blades with a soft cloth towel or a vacuum to remove dust build up.

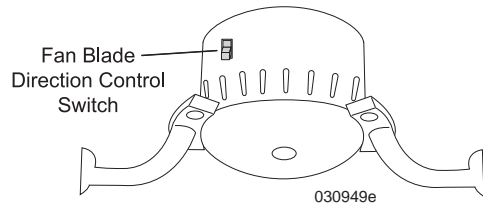**CAUTION**

Fan blades are not enclosed. Use caution not to enter into fan path when on. Serious injury can occur.

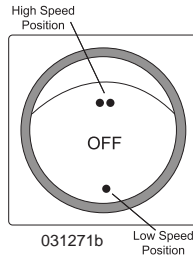**POWER SUNVISORS**

To extend the sunvisor, press and hold the lower portion of the control switch until the desired location is obtained. To retract the sunvisor, press and hold the upper portion of the control switch. Clean the sunvisor using a soft clean brush.

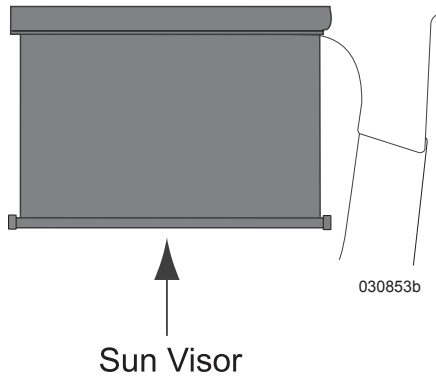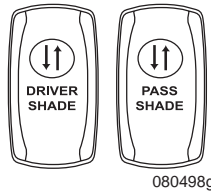**Requirement for Operation:**

- ◆ Chassis battery disconnect switch must be on.
- ◆ Chassis batteries fully charged.

WARNING

DO NOT attempt to move or drive the motorhome with any window view obstructed.


DOOR - SLIDING

The top sliding pocket door rollers may require adjustment during the life of the motorhome. Locate the small wrench and turn the adjusting screw upward or downward.

If the pocket door needs to be removed, locate the portion that is secured to the top of the pocket door and rotate the small lever outward to release the latches.

LUBE


The pocket door rollers should be lubed with just a small drop of oil once a year to help increase the life of the rollers and improve sliding.

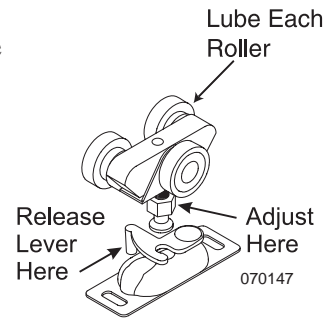**SEAT CONTROLS**

The Pilot and Co-Pilot seats are adjustable to provide maximum comfort. Seats must be locked in the forward facing direction while traveling.

NOTE

The seats operate from 12 Volt DC house power.

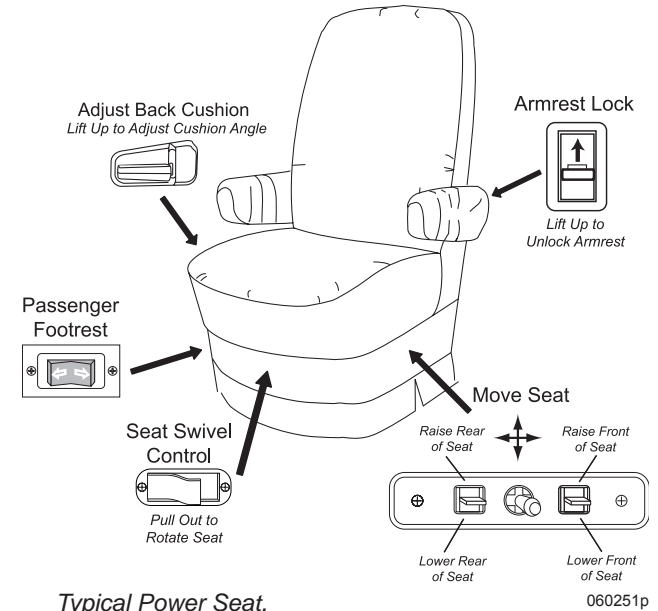

Typical Power Seat.

Location of controls will vary

Requirements for Seat Operation:

- ◆ House battery disconnect must be on.
- ◆ Battery cutout switch must be on.

Swivel Seats**Swivel Seat Operation:**

- ◆ To swivel, pull out on the swivel control lever.
- ◆ When rotating the driver seat, put the steering wheel in the upright position.
- ◆ Move the seat forward, then pull the swivel lever out and rotate to the desired position.

WARNING


Seats must be locked in the forward facing position while the motorhome is in transit.

NOTE

If the either seat is rotated 180°, it must be rotated back in the opposite direction. The 12 Volt wiring in the seat may disconnect if seat is rotated 360 degrees.

NOTE

Types of seat controls vary depending on seat manufacturer.

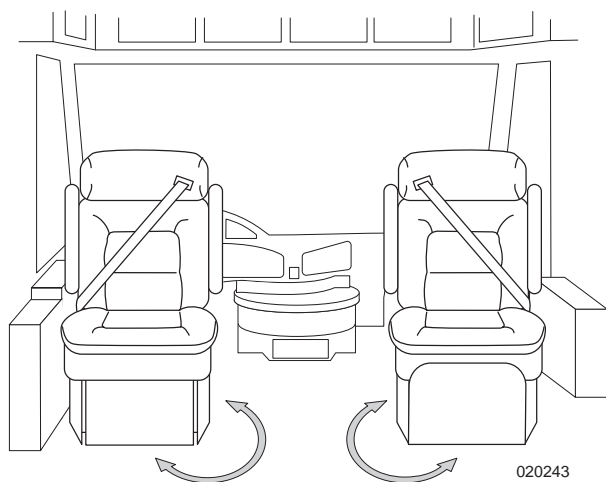**SOFA****Jack Knife Sleeper Sofa**

The sofa will convert easily into a bed. Before converting the sofa to a bed, clear the area of obstruction.

Sofa to Sleeper:

- ◆ If applicable, release lock.
- ◆ Raise the sofa seat base until seat base and backrest form a V shape by lifting up from the center of sofa just below the seat cushions.
- ◆ Push down on seat base until the seat base and backrest are flat.

Sleeper to Sofa:

- ◆ Lift the seat base up until seat and back rest are in a "V" shape.
- ◆ Push down on seat base.


WARNING
DO NOT use the sofa for transporting infants or children that require safety seats or booster seats.

Hide-A-Bed (Optional)





The sofa hide-a-bed will convert easily into a bed. Clear the area of obstruction and debris.

Sofa to Sleeper:

- ◆ Remove the three seat cushions to access the hide-a-bed. The seat cushions should be stored safely until the bed is converted back to a sofa.

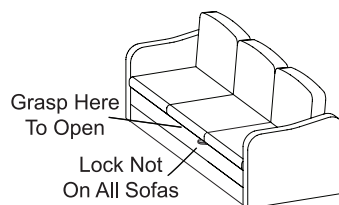

Jack Knife Sleeper Sofa

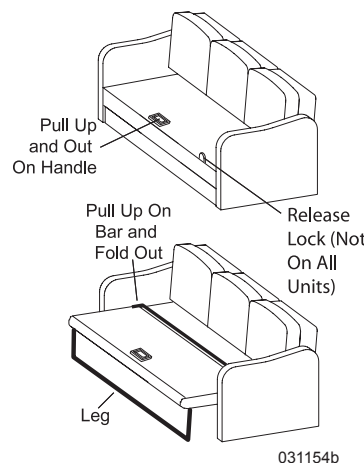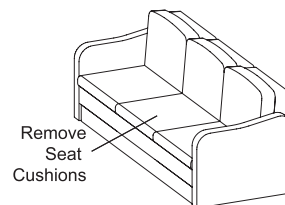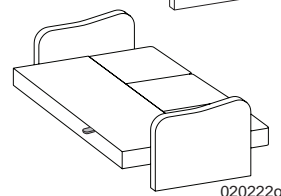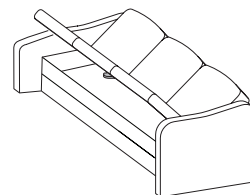

- ◆ If applicable, release the lock on the right side of metal bar, grasp the front metal bar and lift up pulling out on the bar slightly until the leg of the bed is firmly resting on the floor.
- ◆ When the legs of the bed are firmly on the floor there will be another lifting bar exposed to complete the conversion process.
- ◆ Grasping and opening the lifting bar will open the bed fully. The bed is now ready for linen.

Sleeper to Sofa:


- ◆ Remove all bedding from the hide-a-bed.
- ◆ Grasp the foot of the hide-a-bed in the center using the metal lifting bar.
- ◆ Fold over the bottom portion of the bed that will form the seat.
- ◆ Lift the front portion of the lifting bar to raise and lower the hide-a-bed back into the sofa base.
- ◆ Replace the seat cushions.

Hide-A-Bed Air Mattress (Optional)

The air mattress inflates and deflates in a matter of seconds. Inflate the mattress by using the electric inflation pump that operates from any 120 Volt AC outlet. For ease of operation, position the sofa so that accessing an electrical outlet is convenient.

To Inflate Mattress:

- ◆ Open sofa and allow the mattress to lie flat.
- ◆ Unzip the corner of the mattress labeled Air Pump Access.

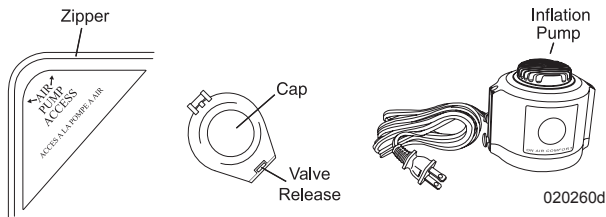

- ◆ Remove valve cap by turning cap counterclockwise.
- ◆ After cap is removed, insert pump motor and turn clockwise until pump is engaged.
- ◆ Plug in pump motor and inflate to full, approximately 60 seconds. A motor pitch change occurs when mattress is full.
- ◆ Remove pump and reseal valve cap by turning clockwise.
- ◆ Zip the Air Pump Access cover closed. The bed is now ready for linen.

To Deflate Mattress:

- ◆ Remove bed linen.
- ◆ Unzip the corner cover of the mattress labeled Air Pump Access.
- ◆ Open deflation valve by lifting valve latch. Allow mattress to deflate.
- ◆ Once mattress is deflated swing valve to closed position. **DO NOT** lock valve closed by locking the valve. Air trapped in the mattress could cause damage.
- ◆ Zip the Air Pump Access cover closed and close the sofa.

NOTE

DO NOT close deflation valve when closing the sleeper mechanism.

WARNING

The electric inflation pump is for indoor use only. **DO NOT** use near or place in water. Keep infants and small children away from pump and product when not fully inflated. Partially inflated product can cause suffocation.

Removing the Mattress Valve:


- ◆ Open deflation valve by lifting up on valve tab.
- ◆ Remove old valve by lifting the black plastic on the outer edge of the valve toward the center. The valve will then lift out.

Installing New Mattress Valve:

- ◆ To install the new valve, first open the replacement.
- ◆ Once open, seat the hinge area on to the hinge support, then squeeze the vinyl towards the center of the mattress opening.
- ◆ Feed the vinyl through the opening of the new valve.
- ◆ Once installed make sure there are no bulges in the vinyl. Use thumb to make sure that it is smooth.
- ◆ Next, lock the replacement shut.

Select Comfort Air Mattress (Optional)

The Air Mattress uses uniquely designed air chambers to provide a gentle cushion of support which can be adjusted for comfort and firmness. The mattress can be personalized to an owner's ideal comfort level.



031117c

Air Mattress Remote

To Operate Air Mattress:

The air mattress requires 120 Volt AC power from shore power or the generator to operate. The inverter can be used, but battery power may be depleted by continued use.

Ensure the battery-cut out switch is on and the house batteries are charged.

What is a Sleep Number:

- ◆ It is a setting between 0 and 100 that represents the ideal combination of mattress comfort, firmness, and support.
- ◆ Use the initial Sleep Number on the remote as a starting point.

Setting the Sleep Number:

- ◆ Lie on the bed in a normal sleep position.
- ◆ Press and release any remote button to display the current Sleep Number setting.
- ◆ To change setting, press the firmer or softer buttons until desired comfort setting is achieved.
- ◆ Remain still until the number change is complete.
- ◆ When adjustment is complete, the Sleep Number will stay lit for five seconds and then the display will turn off.

NOTE

Finding the ideal Sleep Number may require experimenting with different settings.

CAUTION

To prevent damage to the remotes, ensure the remotes are placed in wall-mounted holders before extending or retracting the slide-out. Broken or damaged remotes are not warrantable.

Mattress Care:

The cover may be spot cleaned with carbonated water or mild detergent. **DO NOT** dry clean the mattress cover or put it in a washing machine. **DO NOT** apply a stain-guard, as this may cause yellowing of the fabric.

In rare instances, mold or mildew may form inside mattress or bedding. If this occurs call the manufacturer's customer service department at 800-318-2231.

Mountain Traveling:

If traveling into a mountainous region, either (1) temporarily disconnect the mattress from the pump hose to allow air escape or (2) partially deflate the mattress chamber to a Sleep Number of 20.

WARNING

Rapid changes in altitude will effect the air pressure inside the mattress. The chamber may be damaged if the pressure becomes too great.

INFORMATION

For more detailed information consult OEM manual or call (800) 318-2231 or see manufacturer's website at www.selectcomfort.com.

DINETTES***Free Standing Dinette (Optional)***

The free standing dinette comes with two standing chairs and two folding chairs.

To Extend/Retract Table:

- ◆ To extend, pull out on table until it locks.
- ◆ To retract, push in on table until it locks.

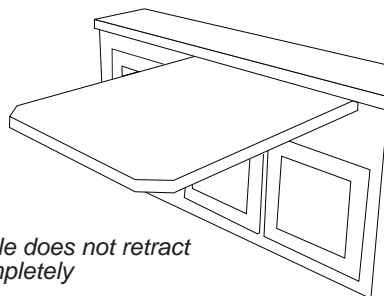


Table does not retract completely


031273

WARNING

Only forward facing booth dinette seats equipped with seat belts are designed for occupancy while the motorhome is in motion. DO NOT occupy dining chairs while the motorhome is in motion. To avoid injury in case of a crash or sudden stop, chairs should be stored in an enclosed area or secured with tie down straps.

Arched Back Booth Dinette**For Bed:**

- ◆ Remove the seat cushions. This allows the table to move down into the bed position.
- ◆ Under the table locate the button lock found on front bracket. Push button to unlock leg. Swing leg up.
- ◆ Tilt table up to release table from wall bracket.
- ◆ Pull table out and push down lowering table until it fits between the two seats.
- ◆ Use cushions for a mattress.

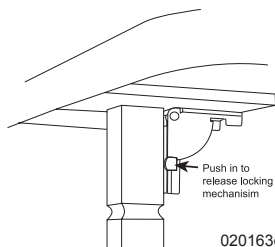

020163g

For Table:

- ◆ Swing table up and attach to wall bracket.
- ◆ Unlock leg lock and extend leg into position.
- ◆ Place cushions back into seat cushion positions.

Storage: Storage is provided under both seats.


- ◆ Remove cushions and lift lid to access storage compartments.
- ◆ Open front doors to access storage compartments.

WARNING

Only forward facing booth dinette seats equipped with seat belts are designed for occupancy while the motorhome is in motion. DO NOT occupy booth dinette (if not equipped with safety belts) or the dining chairs, while the motorhome is in motion. To avoid injury in case of a crash or sudden stop, chairs must be stored in an enclosed area or secured with tie down straps while the motorhome is in motion.

STORAGE UNDER BED

To use the storage compartment located under the bed, lift up the bed by the front edge of the mattress platform. Gas struts hold the mattress and platform open.

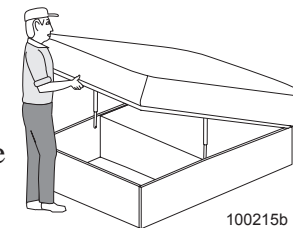

100215b

CAUTION

Over stressing gas struts by rapidly opening or closing the bed access cover can damage the struts or mounts. In extreme cold, struts may not hold the mattress platform open.

LADDER - REAR

The rear ladder allows access to the roof. Care should be used when climbing the ladder. Access to the roof should be limited to cleaning and sealing purposes only. Stow the lower portion of the ladder in the cargo bay during travel.

NOTE

Maximum weight capacity for the ladder is 300 lbs.


WARNING

Use extreme caution and safety when accessing the roof. Serious injury or possible death could occur from a fall. **DO NOT** access the roof during inclement weather, such as rain or snow, when roof may be slippery.

STORAGE BAY SLIDE-OUT TRAY (OPTIONAL)

The slide-out tray is located in a storage compartment. The slide-out tray allows for the pay-load to slide outward for easier access.

- ◆ The motorhome must be level before opening.
- ◆ To open, press down on the latch and hold to unlock. The tray can then be pulled out.
- ◆ To close, slide the tray in and the latch
- ◆ **DO NOT** exceed maximum weight capacity (800 lbs).

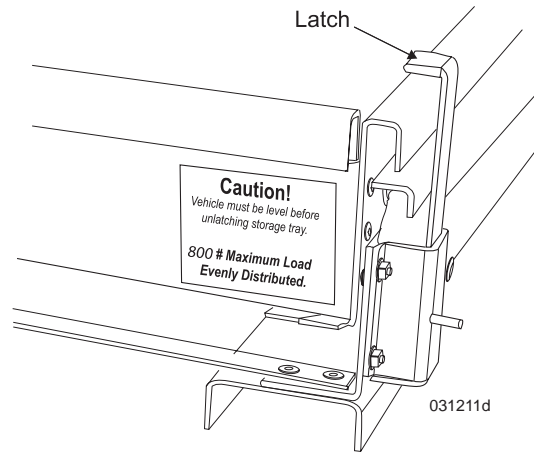

WARNING


The motorhome must be level when sliding the drawer out of the bay compartment. The drawer can slide out abruptly and cause bodily harm if the motorhome is not level.

CITIZEN BAND (CB) RADIO - PREP

A two pin connector labeled Citizens Band Radio is located behind the dash panel, along with the CB Antenna coax, which is routed to the roof mounted base. The red wire is + 12 Volt DC (positive) and has a five amp fuse in the front electrical panel. The white wire is connected to the frame (ground).


NAVIGATION SYSTEM (OPTIONAL)

The navigation system displays through the rear vision monitor. The Gramin GVN 52 provides detailed street maps, points of interest such as restaurants, hotels, and gas stations; a trip computer and turn-by-turn directions

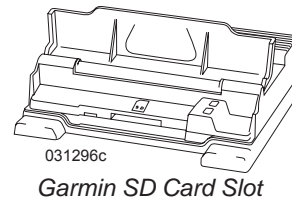

with voice guidance. The unit is preloaded with street mapping for all of North America which is displayed through the back-up monitor. Map perspectives include 3-D, top-down, track-up, or north-up view. The unit is operated by a remote control.

An SD card slot is available for loading custom points of interest, additional maps, and software updates.

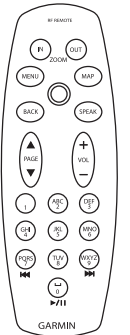

CAUTION

For safety, only perform navigation operations when motorhome is parked.

INFORMATION

Complete operating instructions and information are found in the Garmin OEM manual.

SATELLITE RADIO (OPTIONAL)

The satellite radio is a digital signal decoder and tuner. Satellite signals are transmitted from a ground station to satellites orbiting over the continental United States. The satellite then transmits the signal to an antenna in the motorhome. The radio receiver decodes the transmission and plays the selected channel within that transmission. Signals are also transmitted to ground repeaters for listeners in urban areas where the satellite signal can be interrupted.

INFORMATION

For information regarding subscriptions and service coverage areas, contact the provider for the system.

Sirius® Radio
1-888-539-7474
www.siriusradio.com

INFORMATION

For detailed information, account activation and operating instructions on the satellite radio, refer to the OEM manual located in the Owner's Information File box.

TV ENTERTAINMENT COMPONENTS


The following paragraphs will discuss the operations and various components that make up the entertainment center.

INFORMATION

It is recommended to become familiar with individual components. Refer to OEM manuals for detailed instructions on operating individual components.

NOTE

All components of the entertainment system require 120 Volts AC to operate. Hook to shore power, start the generator or turn on the inverter. The satellite system (if equipped) requires 12 Volts DC to operate. Turn on the interior house power using the battery cutout switch.

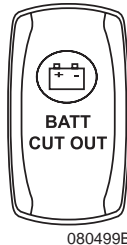


Television (Front) Lockout Feature


The ignition switch controls the outlet for the front TV, allowing the front TV to only operate when the vehicle is at rest. Viewing time of the front TV from the inverter depends on state of charge of the house batteries and any additional 12 Volt DC lighting being used.

Connections - Cable TV, Computer & Phone

The motorhome is equipped with cable TV, satellite and phone hook-up located in the roadside rear compartment. For convenience, auxiliary outlets are located throughout the motorhome.

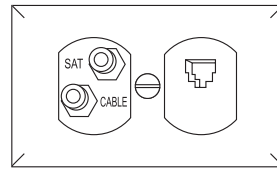

Located in roadside rear compartment

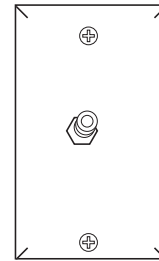


Cable out connection
Located curbside compartment

NOTE

The cable connection in the roadside rear compartment is a **CABLE IN** that connects, for example, to a campground cable hook-up. A second cable connection is located in a curbside compartment. This is a **CABLE OUT** that is used to connect to an independent television monitor, for example, a monitor sitting on a picnic table.

TV Antenna

The television (TV) antenna is a manual crank style antenna with built in electronics that use 12 Volts DC to “boost” signal strength. A weak or fuzzy signal can be amplified by turning on the TV antenna power button on the video selector box. The antenna and booster work together to provide the best possible picture for most situations.

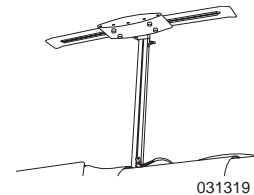


Certain conditions may occur that require no amplification, and amplification may actually worsen the reception. In this case, the picture quality may improve by lowering the antenna and providing no amplification.

WARNING

DO NOT raise the TV antenna near overhead electrical wires. Contact may cause serious injury or death. **DO NOT** move the motorhome when the TV antenna is up.


To Raise the Antenna:

- ◆ Rotate the crank handle clockwise to raise the antenna (about 14 ½ turns).
- ◆ Pull down on the outside directional wheel and rotate the antenna until the best picture is obtained. The directional wheel is spring loaded.

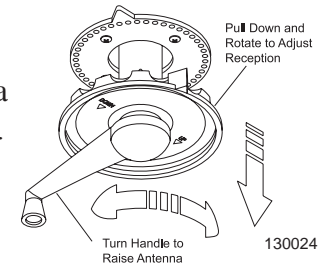

To Lower The Antenna:

- ◆ Pull down on the directional wheel and align arrows together.
- ◆ Rotate the crank handle counterclockwise to lower the antenna fully into the cradle. Make an outside visual inspection to ensure the antenna is properly stowed.

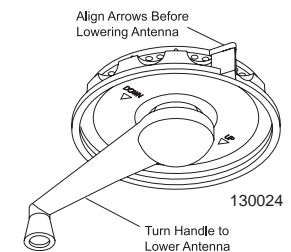

CAUTION

DO NOT move motorhome with antenna in the raised or partially raised position and risk damage by tree limbs or wires. Worm gear damage or breakage may result.

WARNING

Before raising antenna, make an outside visual inspection for any obstructions or overhead electrical wires. Damage to the antenna, severe shock, personal injury or death can occur from inadequate clearance.

Antenna Select

The antenna select switch will select between the roof antenna or shore cable.

To Watch TV**Using Roof Antenna:**


- ◆ With the button in the ON position, the input to the TV is set to roof antenna and the LED will illuminate.

To Watch TV Using Shore Cable:

- ◆ With the button in the OFF position, the input to the TV will be set to shore cable and the LED will be off.

ENTERTAINMENT SYSTEM

The front television entertainment system consists of a TV and DVD Home Theater System. All the entertainment components require 120 Volt AC to operate.

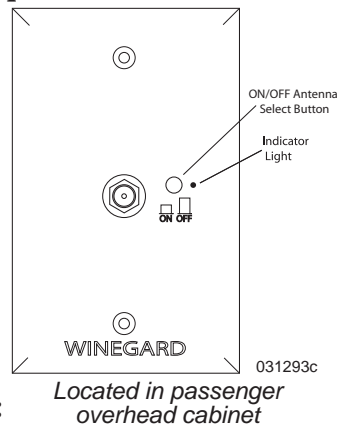**INFORMATION**

It is necessary to read the individual component OEM manuals to fully understand the entertainment system components.

NOTE

Operation of the entertainment components is accurate at the time of printing. Due to changes in the entertainment equipment, motorhome floor plans and the motorhome electrical systems, operation of various entertainment components may vary from what is printed.

NOTE

Due to different floor plans, changes to the motorhome and to the televisions, the input needed (selected by the Input button) for component operation may vary from what is printed.

Operating Components

- ◆ Hook to shore power, start the generator or turn on the inverter.
- ◆ Ensure house batteries are fully charged.
- ◆ Use the battery cutout switch to turn on interior house power.
- ◆ Ignition key must be in the OFF position.

To Watch Main Television from the Antenna (Sharp Television):

- ◆ Press the antenna select button to ON.
- ◆ Turn on TV. Using Input button select TV.
- ◆ Select desired channel.
- ◆ Use volume control on TV to select desired sound level.
- ◆ If Home Theatre sound is desired, turn DVD player on. Press source button on DVD player until AUX 1 appears in

window. Press Home Theatre speaker switch to Home Theatre. Use volume on DVD player to select desired sound level. Turn the television volume down for best results.

To Watch Bedroom Television from the Antenna (Sharp Television):

- ◆ Press the antenna select button to ON.
- ◆ Turn on TV. Use Input button to select TV.
- ◆ Select desired channel.
- ◆ Use volume control on TV to select desired sound level.

INFORMATION

To receive local channels television must be on Air setting (also called TV or Mono by some manufacturers). This setting is found in the set-up menu. In addition, a channel search must be initiated to scan available channels in area. Refer to television OEM manual on how to receive all available channels in the area.

NOTE

The picture quality from the outdoor television antenna varies by location of the station in relationship to the antenna. If picture quality is poor and there is no external power supply, try turning the television antenna select button OFF and ON.

To Watch Main Television from a Cable Signal (Sharp Television):

- ◆ Press the antenna select button to the OFF position.
- ◆ Turn on TV. Using Input button, select TV.
- ◆ Select desired channel on TV.
- ◆ Use volume control on TV to select desired sound level.

- ◆ If Home Theatre sound is desired, turn DVD player on. Press source button on DVD player until AUX 1 appears in window. Press Home Theatre speaker switch to Home Theatre. Use volume on DVD player to select desired sound level. Turn the television volume down for best results.

To Watch Bedroom Television from a Cable Signal (Sharp Television):

- ◆ Press the antenna select button to the OFF position.
- ◆ Turn on TV. Use Input button to select TV.
- ◆ Select desired channel on TV.
- ◆ Use volume control on TV to select desired sound level.

INFORMATION

To receive cable channels television must be on the Cable setting (also called CATV by some manufacturers). This setting is found in set-up menu. In addition, a channel search must be initiated to scan available channels in area. Refer to television OEM manual on how to receive all available channels in the area.

NOTE

To view Cable TV signals the motorhome must be connected to Cable TV. Cable TV inputs are available at many of today's campgrounds.

To Watch Main Television from Satellite Signal (Sharp Television):

The satellite receiver is not provided. Input (1, 2, 3, etc.) for satellite reception will be determined after satellite receiver is installed.

- ◆ Turn on TV. Use Input determined upon satellite receiver installation.
- ◆ Turn ON satellite receiver. Use tracking system to acquire satellite.
- ◆ Use satellite remote control to select desired channel.
- ◆ Use volume control on TV to select desired sound level.

To Watch Bedroom Television from Satellite Signal (Sharp Television):

The satellite receiver is not provided. Input (1, 2, 3, etc.) for satellite reception will be determined when satellite receiver is installed.

- ◆ Turn on TV. Use Input determined upon satellite receiver installation.
- ◆ Turn ON satellite receiver. Use tracking system to acquire satellite.
- ◆ Use satellite remote control to select desired channel.
- ◆ Use volume control on TV to select desired sound level.

NOTE

Satellite Receiver is not provided.

To Watch Main Television from DVD Player (Sharp Television):

- ◆ Turn DVD player on.
- ◆ Open DVD tray.
- ◆ Insert DVD into tray. Close tray. DVD will load and play automatically.
- ◆ Press source button on DVD player until DVD appears in window.
- ◆ Turn TV on. Using Input button select Input 1.
- ◆ For Home Theatre sound use volume control on DVD player select desired sound level.

To Watch Bedroom Television from a (Optional) DVD Player (Sharp Television):

- ◆ Turn DVD player on.
- ◆ Open DVD tray.
- ◆ Insert DVD into tray.
- ◆ Close tray. DVD will load and play automatically.
- ◆ Turn TV on. Using Input button select Input 1.
- ◆ Use volume control on TV to select desired sound level.


To Play CD Using Front DVD Player:

- ◆ Turn DVD player on.
- ◆ Open DVD tray.
- ◆ Insert CD into tray. Close tray. CD will load and play automatically.
- ◆ Press source button on DVD player until DVD appears in window.
- ◆ For Home Theatre sound use volume control on DVD player select desired sound level.
- ◆ To view tracks turn TV on. Using Input button select Input 1.

To Play CD Using Bedroom DVD Player:

- ◆ Turn DVD player on.
- ◆ Open DVD tray.
- ◆ Insert CD into tray.
- ◆ Close tray. CD will load and play automatically.
- ◆ Turn TV on. Using Input button select Input 1.
- ◆ Use volume control on TV to select desired sound level.

DASH RADIO

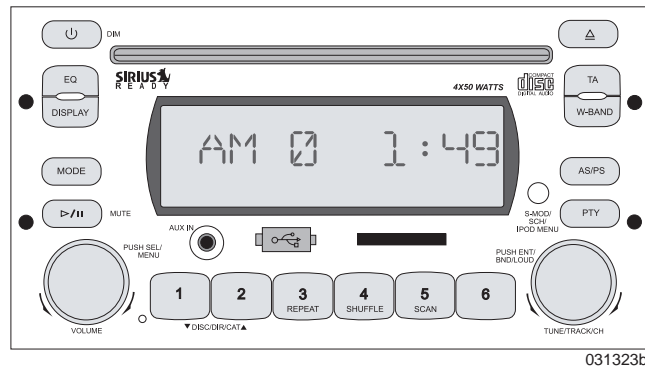

The dash radio is Sirius ready and includes an AM/FM tuner, CD/DVD player, Weather Band and auxiliary inputs.

Operation Requirements:

- ◆ Turn ON the Battery Cutout switch by.
- ◆ Turn the dash Radio Power switch ON.
- ◆ Turn ON the radio.

To Play Radio:

- ◆ Press the MODE button until AM1, AM2, F1, F2, F3 or radio call letters appear in the display.
- ◆ Press the TUNE/TRACK knob and select from AM1, AM2, F1, F2 or F3
- ◆ Rotate and hold the TUNE/TRACK knob until Manual appears in the display then release.
- ◆ Rotate TUNE/TRACK knob until desired station appears in the display.
- ◆ Adjust VOLUME knob to desired level.

To Play Weather Band:

- ◆ Press the W-BAND button and the tuner will scan for strongest weather band station.

- ◆ Adjust VOLUME knob to desired level.

To Play CD:

- ◆ Insert CD.
- ◆ CD will load and play automatically.
- ◆ Adjust VOLUME knob to desired level.

To Set Clock:

- ◆ Press and hold the DISPLAY button until clock starts flashing.
- ◆ Rotate the VOLUME knob counterclockwise to adjust hours. Make sure to set the correct AM or PM indicator.
- ◆ Rotate the VOLUME knob clockwise to adjust minutes.
- ◆ Press the DISPLAY button to set.

Auxiliary Audio Input (Front):

- ◆ Turn radio ON.
- ◆ Press the MODE button until Aux Frt appears in the display.
- ◆ Refer to the audio device OEM manual for operation instructions.

USB Operation:

- ◆ Connect a portable MP3 player to the USB socket on the front panel.
- ◆ The unit will automatically switch to the USB mode and start playing.

NOTE

Not all MP3 players may be compatible. If not, use the stereo jack ("Aux In") input. The radio will automatically switch modes to play back from this input when a USB device is connected. Depending on the source material, the radio may display track title and file type information.

SD Card Operation:

- ◆ Insert the Secure Digital (SD) flash memory card, label side up, into the SD card slot on the front panel.
- ◆ The unit will automatically switch to the SD Card mode and start playing.
- ◆ Depending on the source material, the radio may display track title and file type information.

Aux In (Stereo Jack):

- ◆ Connect a cable with a 1/8" stereo plug (male) on both ends from an auxiliary device (such as an MP3 player headphone jack or a laptop computer speaker/headphone output) to the Aux In input. This will give audio reproduction through the dash stereo.
- ◆ Set the auxiliary device to a mid-range volume level and adjust volume at the dash stereo for best results.
- ◆ Source information will not display on the radio screen (such as song title, artist, etc.).

INFORMATION

Refer to the dash radio OEM manual for detailed operating instructions and information.

Dash Radio Power Switch – On Dash


The switch on the dash, labeled RADIO, turns power on to the radio. In addition, the dash radio ON/OFF button must also be on in order for the radio to operate.



080498v
Radio
Power
Switch on
Dash

Dash Radio On/Off Switch – In Bedroom

This switch turns the dash radio On/Off from the bedroom. The switch can be utilized for all dash radio functions such as AM/FM station play and CD operation.

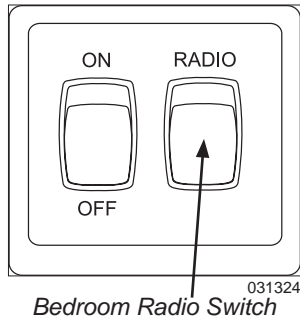

TIP

For the bedroom radio switch to function the dash radio must be on.

When activated the switch performs these functions:

- ◆ **On Position:** Allows sound through the bedroom and front speakers.
- ◆ **Off Position:** Turns the dash radio OFF.

Speaker Switch – When Used With Dash Radio

A speaker switch is located in the compartment above the passenger. When activated, sound is played in the motorhome.




- ◆ **Dash Radio Position:** Sound is heard through front and bedroom speakers.
- ◆ **Home Theater Position:** Bedroom speakers play only.

DISC CD CHANGER (OPTIONAL)

The 10 disc changer is operated by the dash radio.



INFORMATION

For detailed information and operating instructions, refer to the CD changer and dash radio OEM manuals.

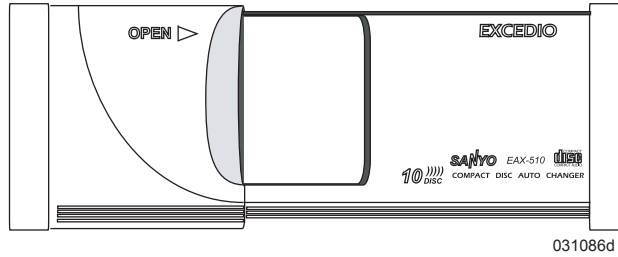

HOME THEATRE SURROUND SOUND

The Home Theatre Surround Sound System speakers are located throughout the living room area. The system operates from 12 Volt DC powered from the coach batteries or the inverter. Home Theatre Surround Sound operates through the DVD player only. Surround Sound is not capable through the dash radio or bedroom speakers.

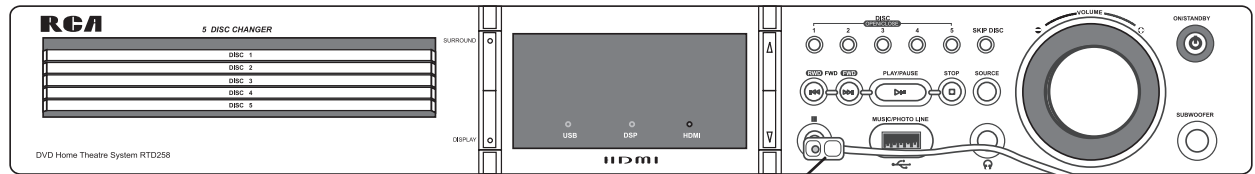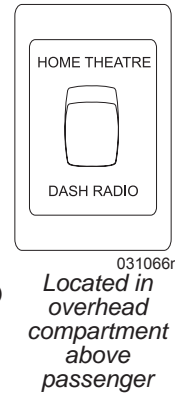

Infra-Red transmitter plugged in

Speaker Switch – When Used With Home Theatre Surround Sound

- ◆ **Home Theater Position:** Turns Surround Sound on.
- ◆ **Dash Radio Position:** Turns sound off.


Remote Control

The remote control can be used to perform many entertainment functions.

Requirements for Remote Control Operation:

- ◆ Batteries in remote control are operating and charged.
- ◆ Infra-Red transmitter must be connected into the Infra-Red input on the DVD player.
- ◆ Remote control must be pointed at the Infra-Red eye near the Main TV to perform functions.



BEDROOM DVD (OPTIONAL)

031242b

The bedroom DVD player has many features including multi-format playback for movies, photos and music and progressive scan for enhanced picture quality.

To Play DVD:

- ◆ Turn DVD player on.
- ◆ Open DVD tray. Insert DVD into tray.
- ◆ Close tray. DVD will load and play automatically.
- ◆ Turn TV on. Using Input button select Input 1.
- ◆ Use volume control on TV to select desired sound level.

To Play CD Using DVD Player:

- ◆ Turn DVD player on.
- ◆ Open DVD tray. Insert CD into tray.
- ◆ Close tray. CD will load and play automatically.
- ◆ Turn TV on. Using Input button select Input 1.
- ◆ Use volume control on TV to select desired sound level.

INFORMATION


For more detailed operating information refer to the bedroom clock player OEM manual.

SATELLITE SYSTEM PREP***Coaxial Pre-Wire***

The motorhome is pre-wired with coaxial cable. The satellite coaxial is located in the roof approximately 12" in front of the forward air conditioner.

Satellite Receiver Connection – Main Room

The following corresponds to the connections on the Satellite Receiver Connection plate located above the passenger in a cabinet.

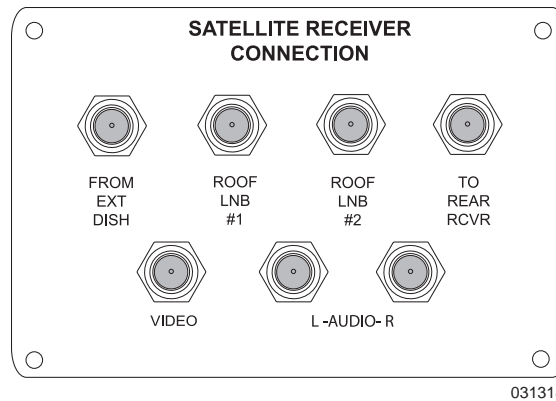

FROM EXT DISH: This connection is used to hook-up to a portable satellite dish. Run a coaxial cable from this connection to Satellite In.

ROOF LNB #1: This connection is used to hook-up to the roof satellite dish. Run a coaxial cable from this connection to Satellite In.

ROOF LNB #2: This connection is used to hook-up to the roof satellite dish. Run a coaxial cable from this connection to Satellite In.

TO REAR RCVR: This connection is used to hook-up to the rear bedroom receiver.


VIDEO: This connection is used to hook-up an Auxiliary (for example video games, camcorder) out to the TV.

L – AUDIO: This connection is used to hook-up left audio.

R – AUDIO: This connection is used to hook-up right audio.

Satellite Receiver Connection – Bedroom

The following corresponds to the connections on the bedroom plate.

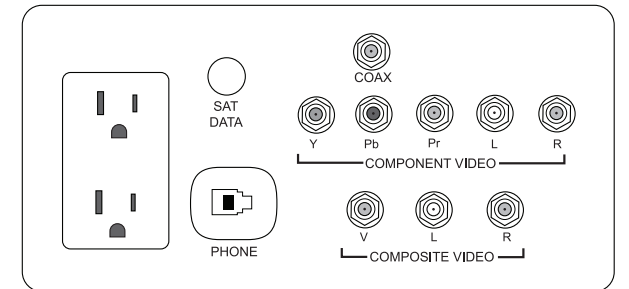

COAX: This connection is to the satellite control module from the multi-switch.

SAT DATA: This connection is to the KVH component (satellite control module).

PHONE: This connection is for a phone hook-up.

COMPONENT VIDEO (Y, Pb, L, R): These connections are used for component video with audio for High Definition use.

COMPOSITE VIDEO (V, L, R): These connections are used for composite video with audio for Standard Definition use.

SATELLITE SYSTEM (OPTIONAL)

The KVH R5 system includes an antenna (dish) and a power switch plate. The KVH system powers the antenna and sends information to a receiver, which decodes the satellite signal from the antenna and sends it to the television. The system is designed to operate whether the motorhome is in motion or parked.

The KVH R5 system is preconfigured to track the DIRECTV 101 and 119 satellites allowing immediate access to DIRECTV programming.

INFORMATION

Refer to the KVH R5 OEM manual for complete operating instructions and information.


INFORMATION

Satellite service requires subscription activation. Contact a service provider to activate the account. For specific satellite coverage areas and providers see the OEM manual. Satellite receiver is not provided.

Turning On the System:

- ◆ Turn on the KVH satellite system by pressing the power button on the switch plate to the ON position. The power button is located in the overhead cabinet above passenger.
- ◆ Turn on the satellite receiver.
- ◆ Wait 30 to 60 seconds for the antenna to acquire the satellite signal.

- ◆ Turn on TV. Use Input button to select Input that was determined upon receiver installation.

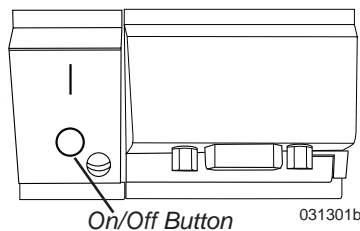

- ◆ It takes approximately one minute for the receiver to download guide data. Channels can be selected once the guide is downloaded. Use satellite remote control to select desired channel.

Turning Off the System:

- ◆ Press the Power button on the switch plate to the OFF position.

Satellite View Needs - The antenna requires a clear, unobstructed view of the southern sky to receive satellite TV signals. Common causes of blockage include trees, buildings, highway overpasses, bridges, equipment on the motorhome, and mountains. The system will also not work inside a garage. Moving the motorhome may restore signal quality.

Acquiring a Satellite - To minimize the time it takes the antenna to acquire the satellite, **DO NOT** change the channel during the startup or cable unwrap. The motorhome must be located within the selected satellite coverage area in order to receive signal. Refer to the satellite television OEM manual to check the viable coverage area.

Channel Availability - Channel availability will vary with satellite system and providers. Consult the OEM manual for providers, coverage areas and channel availability.

Bad Weather - Inclement weather conditions, such as heavy rain or snow, may interrupt satellite signal acquisition and reception. Degraded audio and video signals through the receiver will result.

While In Motion - If the motorhome is in motion, avoid turning the motorhome for 60 seconds after turning on the antenna to allow the antenna gyro to initialize properly. **DO NOT** forget to turn the system back on before resuming driving. The antenna must be turned on to track the satellite while motorhome is moving.

While Parked - If the motorhome is parked and there is good satellite TV picture, there is no need to switch between satellites the system may be turned off to conserve power. While the motorhome is parked the antenna will stay locked onto the satellite.

If the decision is made to change to a channel that is broadcast by another satellite, the system must be turned on so the antenna can search for, identify and lock onto the different satellite.

Cable Unwrap - The antenna can rotate a full 720 degrees before coming to the end of its cable. If it does so, the system automatically unwraps the cable by rotating the dish in the opposite direction. During this process, television transmission is frozen momentarily while the cable unwraps and the antenna reacquires the satellite.

Dew or Rain Pooling on Dome - Dew or rain can occasionally pool on the top of the dome. While this moisture will usually be dispersed when the motorhome is in motion, it can disrupt signal quality when the motorhome is parked.

To minimize Water Pooling:

- ◆ Spray the dome with hosed water to remove dew from the dome surface. **DO NOT** spray the dome with high-pressure water.
- ◆ Periodically apply liquid dish detergent to the dome surface. Wipe the full-strength detergent on the dome and allow it to dry. This treatment provides a film that will allow moisture to bead up and roll off.

Monthly Maintenance:

- ◆ Periodically clean the dome with water and mild soap if necessary. Dirt buildup can affect satellite TV reception.
- ◆ **DO NOT** spray the dome with high-pressure water.
- ◆ **DO NOT** apply abrasive cleaners or volatile solvents, such as acetone, to the ABS dome.
- ◆ **DO NOT** use any compounds that react with plastic when cleaning the dome.

Annual Maintenance:

- ◆ Have the satellite system inspected by a professional RV Technician or satellite installer.
- ◆ Remove the dome and examine the interior of the antenna unit for signs of corrosion, loose connections and frayed or broken wires.

- ◆ Visually inspect the elevation drive shaft to be certain that it moves easily and is clear of grit and debris.

CAUTION

If a need arises to paint the radome, ONLY use non-metallic automotive paint without a primer coat to avoid degrading the RF signal strength and the reception quality. Metallic paint impairs satellite signals.

TIP

For optimum signal strength, keep the dome clean from dirt, bugs and other debris. Periodic washing of the dome with mild soap and water is recommended. If the motorhome is stored for long periods of time it is recommended that the system be put through a search procedure on a quarterly basis to keep all moving parts in good working order.

Technical Support:

- ◆ For assistance in operation or for technical support, call KVH Technical Support at 1-401-847-3327.

WINEGARD TRAV'LER MULTI-SATELLITE (OPTIONAL)

The optional Winegard Trav'ler stationary satellite system includes a roof-mounted antenna and interface box. The interface box is used to raise and stow the antenna. This option package does not include receivers. The Winegard system is compatible with virtually any DirecTV® receiver, including HD and DVR receivers. Before ordering service from a satellite provider, ensure the service provider's receiver is compatible with the Winegard system. Consult the receiver manual or www.winegard.com for receiver compatibility.

NOTE

The satellite system does not include a satellite receiver. Refer to the satellite receiver OEM manual for complete operating instructions and information.

NOTE

Satellite service requires subscription activation. Contact your service provider to activate the account.

INFORMATION

For specific satellite coverage areas and providers see the OEM manual.

Operation:

- ◆ Press and hold the Power button for two seconds or until the interface box screen displays Power On. The system is on and the satellite antenna will raise.

For Travel:

- ◆ Press and release the Power button to stow the satellite antenna. The interface box will not turn off until the satellite antenna is successfully stowed.

NOTE

Operation procedures will vary depending on the satellite service provider and receivers added to the Winegard system. See the satellite service provider operating instructions.

Satellite View Needs – The antenna requires a clear, unobstructed view of the southern sky to receive satellite TV signals. Common causes of blockage include trees, buildings, highway overpasses, bridges, equipment on the motorhome and mountains. The system will not work inside a garage.

Bad Weather - Inclement weather conditions, such as heavy rain or snow, may adversely affect satellite signal acquisition and reception. Degraded audio and video signals through the receiver will result.

WARNING

DO NOT paint the antenna.

Technical Support:

- ◆ Call (800)-788-4417 for Technical Support.

EXTERIOR ENTERTAINMENT CENTER (OPTIONAL)

The exterior entertainment has a LCD television, AM/FM /CD radio and two speakers.

To Operate Any Component:

Entertainment components require 120 Volt AC from shore power, generator, or the inverter.

- ◆ Turn on the house battery disconnect switch.
- ◆ Ensure house batteries are charged.
- ◆ Battery cutout switch must be on.

INFORMATION

For detailed information on features and operating instructions refer to OEM manual for particular entertainment component.

SYSTEMS CONTROL CENTER

The System Control Center enables a central location for many of the switches and control monitors used to operate the motorhome.


1. Carrier Control - Controls Furnace, Roof A/C and Fan.

2. Bay Heat - Turns on the 12 Volt Bay Heater in the Water Service Center. Bay Heat is also called System Heat.

3. Generator - Starts and stops the Generator.

4. Tank Monitor Panel - Displays the status of the Black and Grey Holding Tanks, Fresh Water Tank and Propane Tank. Also displays status of House Batteries.

5. Tank Test Switch - Switch displays tank and house battery status on the monitor panel.

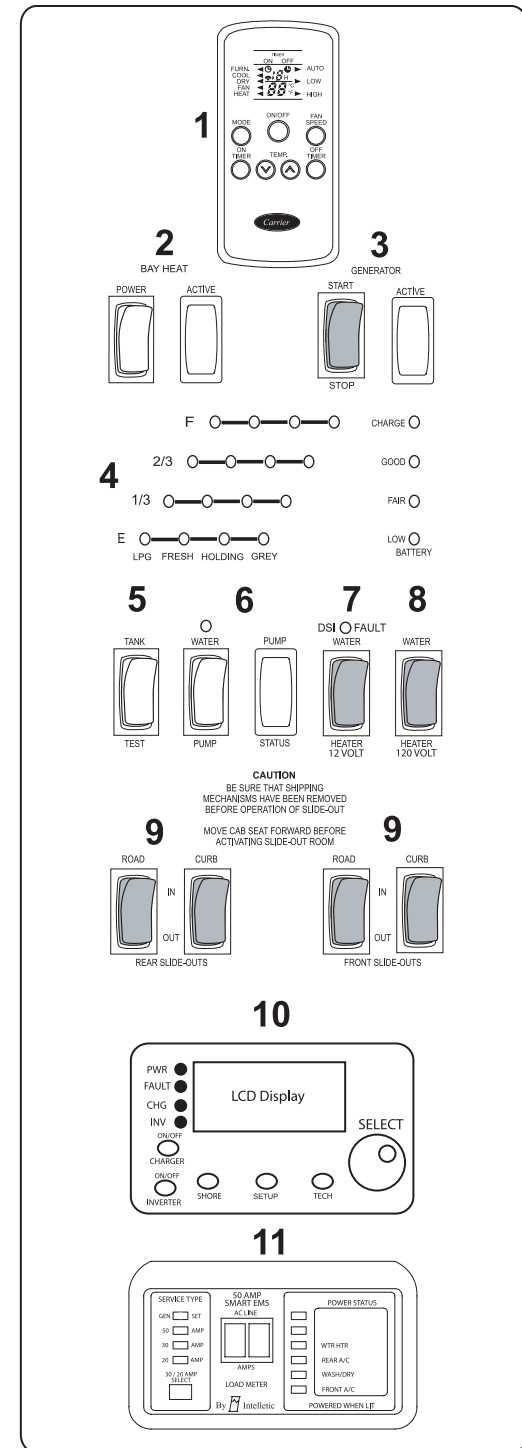


060306wa

6. **Water Pump Switch** - Applies 12 Volt DC power to the Water Pump if operating from the on-board fresh water tank. The pump status light illuminates when the water pump is on.
7. **Water Heater Switch** - Applies 12 Volt DC power to ignite the Water Heater. If the Water Heater fails to ignite, the DSI FAULT lamp will illuminate. If problems persist consult a qualified technician.
8. **Water Heater Switch** - Applies 120 Volt AC power to the Water Heater.
9. **Slide-Out Room Controls** - Extends and retracts Slide Rooms.
10. **Inverter Remote Panel** - Turns Inverter on or off and monitors battery charging status.
11. **50 Amp Energy Management System** - Provides circuit protection for all 120 Volt AC loads and manages 120 Volt AC distribution.

SURGE PROTECTOR

The transfer switch is not a surge protector. Plug sensitive electronic equipment (such as laptops) into a surge protector for protection from power surges.

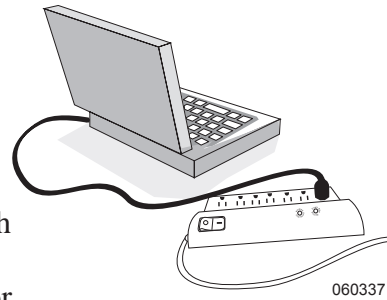

CAUTION


The transfer switch does not cut out at high or low voltages.

| | | | |
|--|------------|---|------------|
| WATER SYSTEMS - INTRODUCTION | 126 | COLD WEATHER CONDITIONS..... | 138 |
| WATER TANKS | 126 | Cold Weather Storage..... | 138 |
| Measurements & Calibration | 126 | WINTERIZATION..... | 138 |
| Fresh Water Fill | 127 | Using Air Pressure For 38 PDQ..... | 138 |
| WATER TANK - FRESH GRAVITY FILL | 127 | Using Non-Toxic Antifreeze For 38 PDQ..... | 140 |
| City Water Hook-Up..... | 128 | De-winterization | 141 |
| POWER WATER HOSE REEL (OPTIONAL)..... | 128 | Using Air Pressure | |
| WATER PUMP | 128 | (For 41 SKQ & 41 PDQ) | 141 |
| Water Pump Troubleshooting..... | 129 | Using Non-Toxic Antifreeze | |
| WATER FILTER - FAUCET | 129 | (For 41 SKQ & 41 PDQ) | 143 |
| WATER SYSTEMS | 130 | De-winterization | 144 |
| Troubleshooting | 130 | WATER SERVICE CENTER FOR 38 PDQ..... | 145 |
| Disinfecting Fresh Water..... | 130 | WATER SERVICE CENTER | |
| FAUCET SCREENS..... | 131 | (41 SKQ & 41 PDQ)..... | 146 |
| WASTE WATER SYSTEMS | 131 | | |
| Proper Waste Disposal | 131 | | |
| What Not to Put in Waste Holding Tanks | 131 | | |
| What to Put in Holding Tanks..... | 131 | | |
| Sewer Hose | 132 | | |
| Tank Flush..... | 132 | | |
| WASTE PUMP (OPTIONAL) | 133 | | |
| TOILET | 135 | | |
| Pedal Flush | 135 | | |
| Electric Toilet-Tecoma | | | |
| (41 SKQ Model Only) | 136 | | |
| Cleaning | 137 | | |
| Maintenance | 137 | | |
| Winterization | 137 | | |
| DRAIN TRAPS & AUTO VENTS | 137 | | |



WATER SYSTEMS - INTRODUCTION

This section contains information about the operation and care of various water system equipment found in the motorhome. Optional water equipment will also be discussed, so not all information may be applicable to each motorhome. More detailed information with CAUTION or WARNING instructions for various equipment, other than what is found in this section, can be found in the OEM manuals in the owner information box.

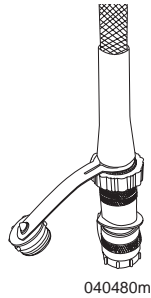

Water Consumption:

Newcomers to a self-contained motorhome soon discover water does not last long unless consumption is drastically reduced. For example, less water can be used for showering if the shower is turned off while soaping down, then turned back on to rinse. Plenty of water will be available to meet personal needs once habits are adjusted.

Plumbing Overview:

The motorhome plumbing system may be operated with or without shore services. The plumbing system holding tanks include a fresh water tank, a grey water tank and a black water tank. The sinks, shower and optional clothes washer drain into the grey tank, and the toilet drains into the black tank. An onboard water pump will supply all faucets and toilets with water from the fresh tank. Close monitoring of the holding tanks is necessary when shore services are not available.

Water Service Center:

The motorhome plumbing system can be attached to shore services (city water and sewer) at the roadside service center. The service center includes the city water/fresh tank fill connection and the grey and black tank valves, drains and tank flush connections. If shore services are available, the shore water supply (city water) can be used to pressurize the water system so the water pump can be left off. The grey and black tanks share a common termination drain. A sewer hose can be attached from the termination drain to the shore sewer facility. It is recommended to leave the black tank drain valve closed and the grey tank drain valve open when hooked to shore services to avoid a clogged sewer hose. Drain and flush the grey and black tanks after dumping and/or prior to departure.

Fresh Water System:

The fresh water system consists of a fresh water tank, water pump, gravity fill connection, water filter, a city/fresh water connection and a water hose that is marked for potable water use only. Proper care of the hose is necessary. After each use, drain and neatly coil the water hose. Attach the ends together to keep dirt, debris and insects out of the hose. If the motorhome has the optional power water hose reel, the hose will be included. Coil hose on the reel after each use and attach plug to keep debris and insects out.



INFORMATION

Potable water is safe for human consumption.

Waste Water System:

The waste water system consists of a liquid waste holding tank (grey water), sewage holding tank (black water), flush system, toilet, sewer hose and drains.


WARNING

Water is electrically conductive. DO NOT use any electrically powered item or electrical outlet that may be exposed to a water source. Such use can result in a serious shock, causing injury or death.


WATER TANKS

Measurements & Calibration

The motorhome is equipped with a monitor panel to aid in managing the storage tanks. The switch marked Test is a momentary switch which requires being held down while testing the level of the storage tanks. Read the scale for the desired storage tank that is being monitored. Each scale uses colored lights along with a corresponding scale reading.

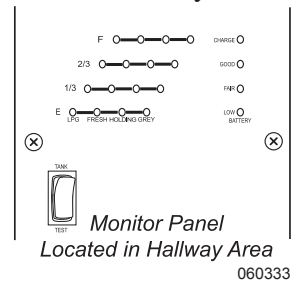

Monitor Panel
Located in Hallway Area
060333

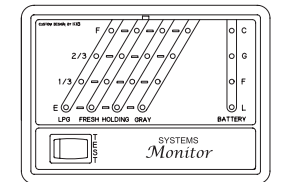


Monitor Panel (Optional)
Located in Service Center
030446g

| Propane Tank & Fresh Tank | Holding & Grey Tanks |
|---------------------------|----------------------|
| Red = Empty | Green = Empty |
| Red = 1/3 Full | Yellow = 1/3 Full |
| Yellow = 2/3 Full | Red = 2/3 Full |
| Green = Full | Red = Full |

Fresh Water Fill

When connecting the motorhome to fresh water, use a hose manufactured and labeled for potable water. This ensures that the hose will not flavor the water. It is recommended to install a pressure regulator on the water line to prevent the hose from expanding and bursting due to excessive pressure.

1. If the motorhome has the optional power hose reel, pull hose out. Connect one end of the pressure regulator to the water source and the other end to the hose and go to step #4. If motorhome does not have the optional power hose reel, proceed with step #2.
2. Connect one end of the pressure regulator to the water source and the other end to the potable hose.
3. Connect potable hose to the City/Fresh Water Fill valve.
4. Depending on floor plan, open the fresh water shut-off valve (38 PDQ) or fresh water tank fill valve (41 SKQ & 41 PDQ)
5. Make sure all low point drain valves are closed.
6. Turn the City/Fresh Water Fill handle to the Tank Fill position.

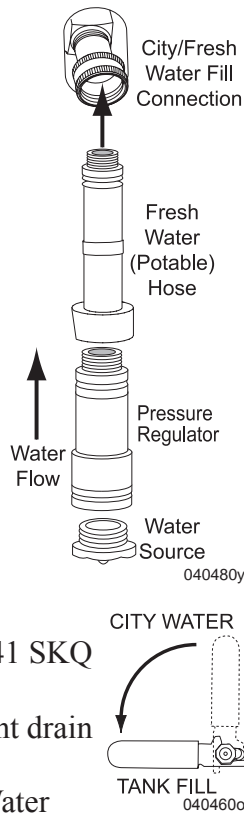

7. Turn water pump OFF.
8. Turn on water at the source. The water should be audible as the fresh water tank fills. Observe tank fill by using monitor panel(s).
9. Frequently press the Test switch and read the scale as the fresh water tank fills. **DO NOT** leave the motorhome unattended while filling the fresh water tank.
10. The tank is nearing full when the light marked F illuminates. When the tank is completely full, water will flow out an overflow tube under the motorhome.
11. Turn off water supply and return the City/Fresh Water Fill handle to City Water position.
12. Disconnect the potable hose. Remove pressure regulator. Store the hose with both ends connected to prevent debris from entering the hose.
13. If applicable, activate the (optional) power hose reel switch to coil the hose on the reel. Attach plug to keep debris and insects out.

CAUTION

Some outside water sources develop high water pressure, particularly in mountainous regions. High water pressure is anything over 55 psi (pounds per square inch). Excessive water pressure may cause leaks in water lines and/or damage the water heater. Excess pressure can cause the water hose to swell and burst. It is recommended to use a pressure regulator.

WATER TANK - FRESH GRAVITY FILL


The gravity fill inlet allows fluids to be introduced directly into the fresh water tank. When dry camping, water can be poured directly from a container into the fresh water tank. The gravity fill inlet can be used to pour disinfecting solution into the fresh water tank. Use only potable water sources, solutions and delivery systems when using the gravity fill inlet.

INFORMATION

For floor plans 41 SKQ and 41 PDQ gravity fill is located in a roadside compartment. For floor plan 38 PDQ, gravity fill is located in the roadside water service center.

Filling the Tank:

1. Unscrew fill cap taking care to keep cap and inlet clean.
2. Insert potable water hose into inlet.
3. Fill tank until water overflows from inlet.

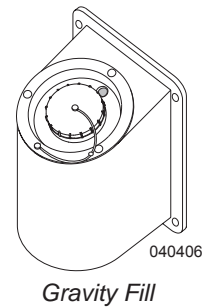

NOTE


DO NOT leave the gravity fill inlet unattended when in use.

City Water Hook-Up

When connecting the motorhome to fresh water, use a hose manufactured and labeled for potable water to ensure the hose will not flavor the water. It is recommended to install a pressure regulator on the water line to prevent the hose from expanding and bursting due to excessive pressure.

1. If the motorhome has the optional power hose reel, pull hose out. Connect the pressure regulator to the water source and the other end to the hose and proceed to #4. If motorhome does not have the optional power hose reel, proceed with step #2.

2. Install one end of the pressure regulator to the water source.
3. Connect the pressure regulator to the potable hose and the potable hose to the City/Fresh Water Fill Valve.

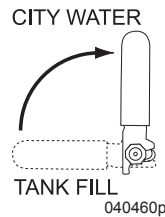


4. City/Fresh Water Fill handle should be in the City Water position.
5. Turn on the water at the source.
6. The water pump can either be OFF or ON. It will not affect the water pump to leave it on.
7. Open each faucet, one at a time, to rid any trapped air inside the pipes.

CAUTION

Some water sources develop high water pressure, particularly in mountainous regions. High water pressure is anything over 55 psi (pounds per square inch). Excessive water pressure may cause leaks in water lines and/or damage the water heater. Excessive pressure can cause the water hose to swell and burst. It is recommended to use a pressure regulator.

POWER WATER HOSE REEL (OPTIONAL)

To extend, manually spool the hose and connect the hose to the water source.

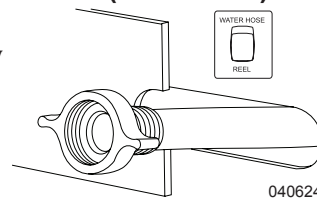


Hose retrieval is accomplished by pushing the water hose reel switch that powers the 12 Volt DC motor. The rocker type switch prohibits the reel from being inadvertently left on.

TIP

When not in use make sure the end of the water hose is capped. This will prevent debris and insects from entering the hose.

WATER PUMP

The water pump pressurizes the fresh water system when the system is not connected to city water. The water pump is self-priming, operating on demand as water is used. The water pump is located in the water service center.

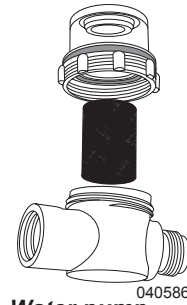

Water pump inlet screen:
Clean every two months.

Operation Requirements:

- ◆ House battery disconnect switch must be on.
- ◆ Turn on battery cutout switch.

WARNING


Before leaving the motorhome for extended periods of time (i.e. overnight or longer) be sure that the city water source and water pump have been turned off. Damage from neglect will be the responsibility of the owner, not the manufacturer.

The water pump can be operated from these following locations:

- ◆ Hallway Systems Control Panel
- ◆ Water Service Center
- ◆ Kitchen Galley

To turn the water pump ON or OFF:

- ◆ Momentarily press the water pump switch. The indicator lamp illuminates when the water pump is turned on.

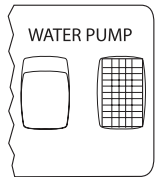

Service Center Water Pump Switch

CAUTION

DO NOT continue water pump operation if the fresh water holding tank is empty. Damage to the water pump or electrical supply system may result.

To operate the water pump after unhooking from a city water supply or after storage:

- ◆ Close all drain valves and low point drains.
- ◆ Fill the fresh water tank.
- ◆ Open the hot and cold water valves of each faucet.

- ◆ Turn the water pump ON. Wait for the water lines and the hot water tank to fill.
- ◆ Close each faucet when it delivers a steady stream of water (cold water faucets first).

Water Pump Troubleshooting

Vibration induced by road conditions can cause the plumbing or pump hardware to loosen. Check the water pump system for components that are loose. Many symptoms can be resolved by tightening the hardware. Check the following items:

Water pump will not start or blows the fuse:

- ◆ Check the electrical connections, fuse or breaker, main switch and ground connection.
- ◆ Is voltage present at the pressure switch on the pump? If voltage is present, the pressure switch may be faulty. As a test, temporarily bypass the pressure switch.
- ◆ Check the charging system for correct voltage and good ground.
- ◆ Check for an open or grounded circuit or motor.
- ◆ Check for a seized or locked diaphragm assembly (water frozen).

Water pump will not prime or sputters (No discharge/motor runs):

- ◆ Is the pump inlet strainer clogged with debris?
- ◆ Is there water in the tank or has air collected in the water heater?
- ◆ Is the inlet tubing and plumbing sucking in air at plumbing connections (vacuum leak)?

- ◆ Check for proper voltage with the pump operating.
- ◆ Check the pump housing for cracks or loose drive assembly screws.

Water pump will not shut-off or continues to run when the faucet is closed:

- ◆ Check to see if the fresh water/tank fill valve is completely closed.
- ◆ Check the output (pressure) side plumbing for leaks and inspect for a leaky toilet or valves.
- ◆ Look for a loose drive assembly or pump head screws.

Water pump is noisy or rough in operation:

- ◆ Check for plumbing that may have vibrated loose.
- ◆ Does the mounting surface multiply noise (flexible)?
- ◆ Check for mounting feet that are loose or compressed too tight.
- ◆ Look for loose pump head to motor screws.

Water pump is rapid cycling:

- ◆ Look for restrictive water flow in the faucets or shower heads.

WATER FILTER - FAUCET

The filtration system filters up to 1,000 gallons between filter changes. Depending on use change filter cartridge approximately every 6 months (this is about 1,000 gallons) or when water flow is noticeably reduced.

INFORMATION

For specific water filter information and cautions consult water filter OEM instructions.

NOTE


Depending on floor plan, the water filter is located in the water service center, a curbside or roadside compartment.

CAUTION

Protect filter from freezing or damage to the system could occur.

Filter Removal:

- ◆ Turn off the water supply and the water pump.
- ◆ Open faucets to bleed off pressure.
- ◆ Unscrew the filter bowl using the bowl wrench.
- ◆ Check o-ring for damage and lubricate if necessary. O-ring should be changed every third cartridge change to ensure proper sealing.
- ◆ Remove the old cartridge and discard.
- ◆ Empty any remaining water in the bowl.

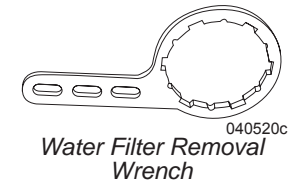

Filter Installation:

- ◆ Insert new cartridge into filter bowl.
- ◆ Screw filter bowl back onto head and hand securely tighten.
- ◆ Turn on water pump or city water.
- ◆ Thoroughly flush and purge air from the system by opening faucets and running the water for approximately 20 minutes.
- ◆ Check for leaks.


Filter Replacement: RV-10C1

INFORMATION

Replacement filter number is accurate at time of printing. Confirm replacement filter number before ordering or obtaining a replacement.

To Winterize:

- ◆ Disconnect the two water line connections (normal usage) on either side of the filter bowl head.
- ◆ Connect a bypass hose to the two water lines.
- ◆ Unscrew the filter bowl using the bowl wrench.
- ◆ Remove the old cartridge and discard.
- ◆ Empty any remaining water in the bowl.
- ◆ Store the filter bowl. **DO NOT** screw filter bowl back onto filter head.
- ◆ Winterize the motorhome.

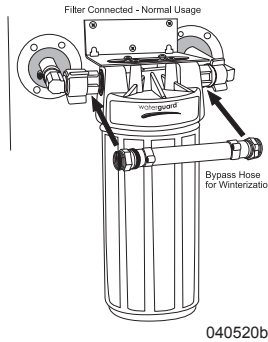**To De-Winterize:**

- ◆ Disconnect the bypass hose to the two water lines. Store bypass hose.
- ◆ Reconnect the two water lines to the filter bowl head.
- ◆ Insert new cartridge into filter bowl.
- ◆ Screw filter bowl back onto head and securely hand tighten.
- ◆ Turn on water pump or city water.
- ◆ Thoroughly flush and purge air from the system by opening faucets and running the water for approximately 20 minutes.
- ◆ Check for leaks.

CAUTION

O-ring must be properly seated in the groove of the lower housing or a water leak could occur.

NOTE

For further assistance and information contact Shurflo Customer Service at 1-800-854-3218.

**WATER SYSTEMS
Troubleshooting**

If the water pump cycles after closing the faucets, drain valves and inlet valves, a leak may be present. At this time check for leaks around fittings, valves, filters and connections of the hot and cold water system. If problems continue, take the motorhome to an authorized dealer for repair.

Disinfecting Fresh Water

Disinfecting the water system with household bleach (superchlorination) protects against bacteriological or viral contamination from common water sources.

Disinfect the fresh water system:

- ◆ If the motorhome is new.
- ◆ If the motorhome has been in storage.
- ◆ Every three months during use.

NOTE

Use the gravity fill to perform this task. Remove cap from the gravity fill. Add the solution. When finished, secure the gravity fill cap.

Gravity Fill Location:

For floor plans 41 SKQ and 41 PDQ gravity fill is located in a roadside compartment. For floor plan 38 PDQ, gravity fill is located in the roadside water service center.

Procedure:

- ◆ Remove the water line connections and connect the bypass hose to the water lines on water filter (See “Water Filter”).
- ◆ Prepare a household chlorine bleach solution of 1 gallon water and ¼ cup of chlorine bleach. Use 1 gallon of solution for every 15 gallons of tank capacity. This mixture puts a 50 ppm (parts per million) residual in the water system, and acts as a quick-kill dosage for harmful bacteria, viruses and slime-forming organisms. Concentrations higher than 50 ppm may damage the water lines and/or tanks.
- ◆ Turn the water pump OFF.
- ◆ Close the water heater bypass valve, to ensure none of the prepared disinfecting solution enters the water heater. Refer to the water heater OEM instructions on flushing the water heater.
- ◆ Drain the fresh water tank. Close the drain.
- ◆ Pour the solution into the gravity fill inlet using a funnel.
- ◆ Top off the fresh water tank with fresh water.
- ◆ Turn the water pump ON.
- ◆ Open each faucet, in turn, and run the water until there is a distinct chlorine bleach odor. **DO NOT** forget both interior and exterior faucets and showers.

- ◆ Turn off all faucets and showers and allow the system to stand for four hours.
- ◆ Drain the system and flush with fresh water.
- ◆ Flush with fresh water repeatedly until the water system no longer smells or tastes like chlorine bleach.
- ◆ Remove water filter bypass hose and store. Reconnect water lines to water filter. Install the new water filter.
- ◆ Turn water heater bypass valve to Normal Flow position.

TIP

Use the same hose labeled for potable water to introduce the chlorine solution into the system. This will disinfect the potable water hose at the same time. Several flushes will be required to remove chlorine residue from the potable hose.

INFORMATION


Household bleach is 5.25% Sodium Hypochlorite. Higher concentration will increase PPM ratio.

FAUCET SCREENS

Fresh water sources will vary by location. Build up of lime deposits or debris on the faucet screen will restrict or plug the flow of water coming from the faucets. Should the flow of water reduce, the filter screen in the faucet head may be clogged. All faucet screens should be checked and cleaned every two weeks of use.

- ◆ Faucet screens are normally located on the outlet side of the faucet and held in place with a threaded collar.

- ◆ Remove screen from faucet.
- ◆ Clean screen using a small soft brush and de-liming solution.
- ◆ Reinstall screen and check water flow.

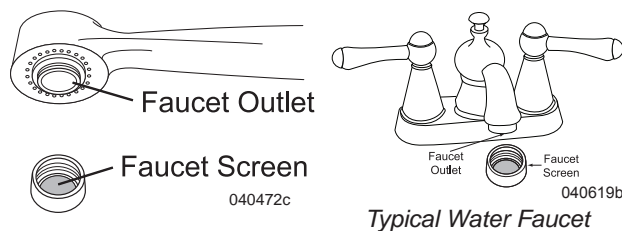

WASTE WATER SYSTEMS

Proper Waste Disposal

Dumping raw sewage from waste holding tanks, except at authorized dumping stations, is universally prohibited. Most National, State and private parks have either a central dump facility or campsite hook-up for sewage. Many modern rest areas along the interstate now have dump stations available. Woodall's Campground Directory, Trailer Life's RV Campgrounds and Services Directory, Rand McNally's Campground and Trailer Park Guide, Good Sam Park Director (Good Sam Club) and other similar publications list dumping stations. Some major oil companies offer dump facilities at selected stations also.

What Not to Put in Waste Holding Tanks

- ◆ **DO NOT** use strong or full strength detergents to deodorize and disinfect. Use odor control chemicals made especially for holding tanks.

- ◆ **DO NOT** use any products that contain petroleum distillate or ammonia in place of RV odor controlling chemicals. Petroleum distillate or ammonia will damage the ABS plastic holding tanks and seals.
- ◆ **DO NOT** use automotive antifreeze, ammonia, alcohol or acetone in holding tanks. These products will dissolve plastic.
- ◆ **DO NOT** dispose of table scraps or cooking grease into the tanks. They can clog pipes or damage termination valve seals.
- ◆ **DO NOT** dispose of sanitary supplies or other non-dissolving items into the system. Facial tissue, wet strength tissue, paper towels or an excessive amount of toilet tissue can create clogging in the holding tank system.
- ◆ **DO NOT** use any type of tissue that remains in one piece. Paper designed specifically for holding tanks is available at most RV supply stores. Facial tissue is thicker, softer and stronger than a rapidly dissolving tissue. White toilet paper dissolves faster than colored. To test tissue dissolving ability, immerse one tissue square into a jar of water. Shake the jar five times to determine how the tissue disintegrates.

What to Put in Holding Tanks

Grey Water Tank:

The grey water waste tank stores the sink, shower and clothes washer (if equipped) drain water. A reduced mixture of chemicals may help to control odor in the grey tank.

Ensure that there is enough liquid in the holding tanks prior to dumping to provide a smooth flow through the valve, termination drain and sewer hose. Empty the waste holding tanks weekly to prevent stagnation and overflowing.

Black Water Tank:

Before initially operating the toilet, treat the sewage holding tank with a pre-charge of water and an odor-control chemical (available at most RV supply stores). First, add approximately three gallons of water to the holding tank. Next, mix the chemicals, in accordance with the manufacturer instructions, with approximately one gallon of water. Pour mixture through toilet to the holding tank. Be careful not to spill the chemical on hands, clothing, toilet bowl or carpet. Hot weather conditions may require adjusting the amount of chemical used to control odor. Repeat the chemical pre-charge to the holding tank each time the tank is cycled.

WARNING

Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using holding tank additive. DO NOT use any products that contain petroleum distillate or ammonia in place of RV odor controlling chemical. Petroleum distillate or ammonia will damage the ABS plastic holding tanks and seals.

Sewer Hose



A flexible three-inch sewer hose attaches between the common termination drain and the sewer shore facility. Sewer hoses usually come in 10 or 20 foot lengths.

The shore fitting for the sewer hose may be a three or four-inch, male or female thread pipe; or a four-inch pipe with no threads covered by a metal plate. Different style of adapters are available to fit most configurations. Hose ladders may also be purchased to support the hose.

It is important that the sewer hose remains secure. Always tighten clamps and restraining devices before use. Lay the sewer hose inline between the termination drain and the shore fitting. Restrain the hose to prevent movement during use. Wear protective and/or disposable gloves when handling the sewer hose.

To Attach the Hose:

- ◆ Remove termination cap. Align coupler tangs with termination tabs. Twist coupler clockwise 90° locking coupler to termination drain.
- ◆ Attach other end of hose to shore sewer facility. Restrain hose to prevent movement during use.
- ◆ Open the liquid waste drain (grey water) valve.

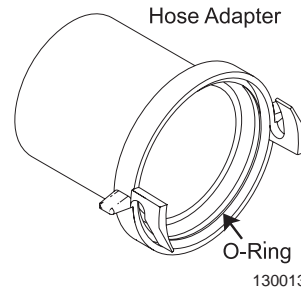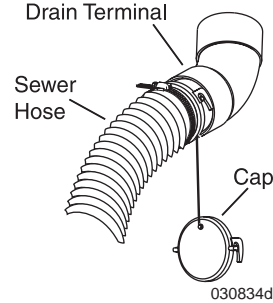

The solid waste drain (black water) valve remains closed until the tank is full or until time of departure to help prevent clogging. Use the outside faucet or shower attachment for washing or rinsing the sewer hose after dumping the black tank.

NOTE

Use care when connecting the sewer hose adapter to the termination drain in cold weather.

NOTE

Close the grey water valve 24 hours prior to departing to allow the tank to fill with liquid to help in the dumping process.

LUBE


Periodically lubricate the O-ring on the sewer hose adapter with silicone spray.

Tank Flush

The motorhome comes equipped with a power flush nozzle located in the black tank to help reduce solids build-up. Flush the black tank each drain cycle. Failure to thoroughly rinse the black tank may result in accumulated solids and a clogged spray nozzle.

Gravity Drain Hose Dumping:

- ◆ Attach sewer hose to the terminal drain and shore facility.
- ◆ Prepare to dump the solid waste (black) tank first. Close the liquid waste drain (grey) valve.
- ◆ Fill the grey tank to at least 50% by running water in the shower or sinks.

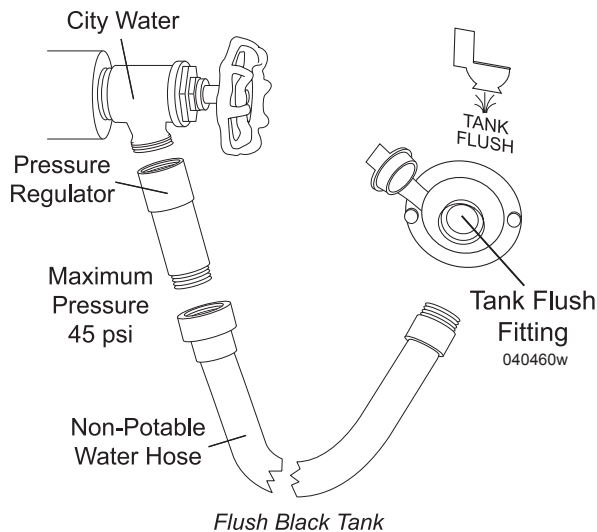

- ◆ Open the solid waste drain (black) valve. Allow the black tank to drain.
- ◆ Connect one end of the pressure regulator to the water source and one end to a non-potable water hose. Connect the non-potable hose to the tank flush fitting.
- ◆ Turn on the water source and allow water to rinse the black tank at least three minutes. **DO NOT** operate the system unattended. Ensure the water flows freely through the drain hose.
- ◆ When completed, turn off the water source and close the black water valve.
- ◆ Open the grey water valve. The water in the grey tank will flush remaining solids from the hose. With the grey water valve open, run two gallons of water down any drain to flush grey tank. The grey valve remains open until the next drain cycle, or time of departure.

WARNING

Operating the flush system unattended can risk flooding. Use the tank flush system each time the holding tanks are cycled. Failure to routinely use the tank flush system will result in a clogged spray nozzle. Turn off the water supply when finished flushing the tank.

- ◆ When preparing for travel, close both dump valves. Undo restraining devices from the hose. Disconnect the hose from the termination drain by rotating the fitting counterclockwise 90°.
- ◆ Raise the hose and drain using hand over hand method working the hose towards shore fitting. Rinse the hose with outside facility and repeat the hose drain process.
- ◆ Remove the hose from shore fitting. Install hose in carrier and lock door. Secure the termination cap (required by law in some states) to termination drain.
- ◆ If desired, add chemicals to the tanks to control odor. Follow the directions given by the manufacturer of the chemical.

NOTE

Dump the black tank before driving.

WASTE PUMP (OPTIONAL)

The waste pump (Sani-Con system) is a self-priming impeller pump designed to minimize clogging when draining the tanks. The system comes with a 1½” outlet hose with sewer pipe adapter and a 13 gallon per minute macerator pump.

When operating Sani-Con it is recommended to wear disposable gloves, safety glasses and protective clothing. The house battery disconnect switch, located in curbside battery compartment, must be on for the Sani-Con system to operate. The waste pump operates on 12 Volts from the house battery.

INFORMATION

For additional information consult RV Sani-Con manual or Customer Service at 800-521-3032 or 866-410-1965 www.emptythetanks.com



ATTENTION

This R.V. is equipped with an R.V. Sani-Con Waste management device. In order to assure trouble free service with this device, it is imperative that no foreign object enter the commode. Items that include, but are not limited to, personal hygiene products, cigarette butts, paper towel, etc. are considered foreign. Introduction of these or any other products considered to be of foreign nature will void the manufacturer's warranty.

72-139

100220

WARNING

DO NOT place in the toilet personal hygiene products, cigarette butts, paper towels, table scraps, grease, any tissue that remains in one piece, any object that can be considered foreign. These objects will damage the Sani-Con system and void manufacturer's warranty.



100220b

WARNING

DO NOT leave the Sani-Con pump unattended while in use. DO NOT allow the pump to run dry for any period of time. Damage to the pump impeller and Sani-Con system will result and void manufacturer's warranty.



**DO NOT RUN THE RV SANI-CON DRY!
THIS WILL VOID THE WARRANTY**

THETFORD CORPORATION, P.O. BOX 1285 ANN ARBOR, MI


1-800-521-3032 www.TheTford.com
040640

To Empty the Black Tank (Solid Waste):


- ◆ Close the black tank (solid waste) and grey tank (liquid waste) valves.
- ◆ Remove the terminal drain outlet cap.
- ◆ Secure the flexible sewer hose from the Sani-Con macerator pump to the termination drain outlet by aligning the sewer hose coupler tangs with the terminal tabs. Twist the coupler clockwise to lock it to the terminal outlet.
- ◆ Remove the drip cap at 1 ½" end of discharge nozzle (see illustration).

WARNING

Be sure to remove the drip cap from the Sani-Con hose end (see illustration). Failure to do so will result in damage to the Sani-Con system.

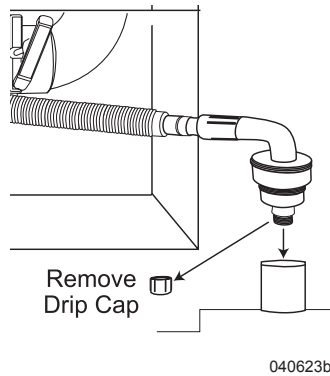**CAUTION**

If the pump is activated while the drip cap is on the hose end, switch the pump off (use the Sani-Con On/Off switch) and wait at least 30 seconds to allow pressure to dissipate before removing the drip cap.

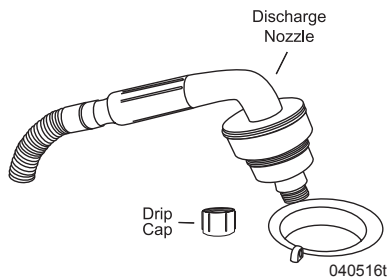**TIP**

It is recommended to always open the grey tank first and run the pump for a few seconds before opening the black tank valve. This will confirm that the system is operational and working properly. If there is a system failure the pump and sewer hose may have to be removed from the termination drain. It is easier to work on the system if grey water is stored in the system.

- ◆ Periodically tighten all hose clamps.
- ◆ Install discharge nozzle to the sewer connection (dump station). Adapters allow the discharge nozzle to fit a 3" to 4" threaded or non-threaded sewer connection. Ensure the discharge nozzle is correctly installed prior to operation.
- ◆ Open the solid waste (black tank) valve by pulling outward.
- ◆ Turn on the waste pump using the Sani-Con switch located on Water Service Center panel.
- ◆ Push the test switch on the monitor panel to read tank level. Allow the black tank to empty.
- ◆ When the black tank is empty, turn off the Sani-Con pump and leave the black tank valve open.
- ◆ Store sewer hose and Sani-Con discharge nozzle for travel. Secure termination cap (required by law in some states).
- ◆ If desired, add chemicals to the holding tanks to control odor. Follow the chemical manufacturer's directions.

To Empty the Grey Tank (Liquid Waste):

- ◆ Secure the flexible sewer hose from the Sani-Con macerator pump to the termination drain outlet.

- ◆ Remove the drip cap at 1 ½" end of discharge nozzle (see illustration).
- ◆ Periodically tighten all hose clamps.
- ◆ Install discharge nozzle to the sewer connection (dump station). Adapters allow the discharge nozzle to fit a 3" to 4" threaded or non-threaded sewer connection. Ensure the discharge nozzle is correctly installed prior to operation.
- ◆ If applicable, close the black tank (solid waste water) valve.
- ◆ Open the grey tank valve.
- ◆ Turn on the Sani-Con pump. Allow the grey tank to empty.
- ◆ Push the test switch on the monitor panel to read tank levels.
- ◆ If applicable, the black tank (solid waste) can be emptied at this time.
- ◆ Turn the Sani-Con pump off.
- ◆ Close the grey tank drain valve and, if applicable, the black tank valve.
- ◆ Store sewer hose and Sani-Con discharge nozzle for travel. Secure termination cap (required by law in some states).
- ◆ If desired, add chemicals to the holding tanks to control odor. Follow the chemical manufacturer's directions.

Using Tank Flush:**WARNING**


DO NOT operate the flush system unattended. Flooding may occur. Use the tank flush system each time the holding tanks are cycled. Failure to routinely use the flush system will result in a clogged spray nozzle. Turn off the water supply when finished flushing the tank.

- ◆ Secure the flexible sewer hose from the Sani-Con macerator pump to the termination drain outlet.
- ◆ Remove the drip cap at 1 1/2" end of discharge nozzle (see illustration).
- ◆ Periodically tighten all hose clamps.
- ◆ Install discharge nozzle to the sewer connection (dump station).
- ◆ Connect a non-potable water hose with pressure regulator to the water source. Connect the other end of the water hose to the Tank Flush fitting.
- ◆ Open the solid waste (black tank) valve.
- ◆ Turn on the water source and allow the water to rinse the black tank at least three minutes. **DO NOT** operate the system unattended.
- ◆ Turn the water off, disconnect the non-potable hose and pressure regulator. Store the hose and regulator for future use.
- ◆ Turn the Sani-Con pump on and allow black tank to empty.
- ◆ Turn the Sani-Con pump off.
- ◆ Close black tank drain valve.
- ◆ If applicable, the grey tank (liquid waste) can be emptied at this time. Close grey tank valve.
- ◆ Store sewer hose and Sani-Con discharge nozzle for travel. Secure termination cap (required by law in some states).
- ◆ If desired, add chemicals to the holding tanks to control odor. Follow the chemical manufacturer's directions.

Grey Water Bypass:

The grey water bypass system allows continuous grey water flow. The liquid (grey) waste uses gravity to drain from the tank and bypasses the pump by going through the


bypass hose into the sewage service. The bypass hose is the small hose connected at the termination point of the dump valves and "T-s" into the small flexible hose on the outlet side of the macerator pump. The bypass system is located inside the housing that covers the sewer hose.

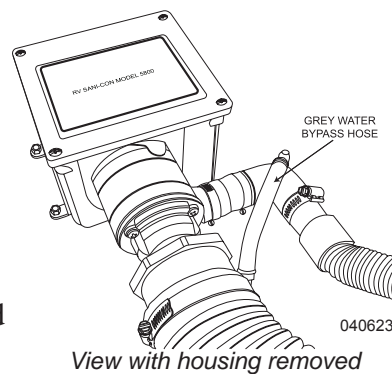

Troubleshooting:


- ◆ The house battery disconnect switch must be on.
- ◆ 12 Volt DC power for the macerator pump comes from the house batteries and is protected with a 20 Amp mini-breaker. The breaker is located in the curbside electrical battery compartment. Open the black box above the batteries to access the mini-breaker.

| |
|-----------------------------|
| 30 AMP SLIDE-OUT CONTROL |
| 30 AMP SYSTEM HEATER |
| 20 AMP SANICON |
| 30 AMP TANK PADS OPTIONAL |
| 40 AMP ELEC TOILET OPTIONAL |
| OPEN |
| 03213370 C |

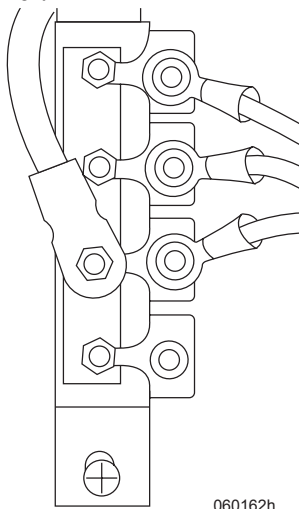

NOTE
Due to options and changes to the motorhome, the amperage values and items listed on fuse label will change.

TOILET Pedal Flush

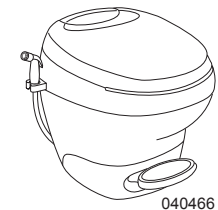

The toilet uses water from either the fresh water tank or a city water supply. The water pump must be turned ON or connect the motorhome to city water. The toilet flushes directly into the sewage holding tank (black water).


CAUTION

To prevent accumulation of solids below toilet, add several gallons of water to the holding tank before use. Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using any holding tank additive.

NOTE

DO NOT dispose of sanitary supplies or other non-dissolving items into the toilet. Facial tissue, wet strength tissue, paper towels or an excess toilet tissue can clog the tank or termination valve.

- ◆ To add water to the toilet before using, press and hold the pedal halfway until the desired water level is reached. Generally, more water is required only when flushing solids.
- ◆ To flush the toilet, push the lever all the way down until the sewage leaves the toilet.

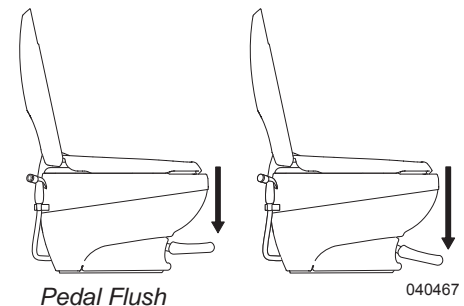

Water flow pressures vary. Therefore, holding the flush lever down for several seconds may be required. Release the flush lever, allowing it to snap back, permitting positive sealing around the flush ball. A small amount of water should remain in bowl.

- ◆ To operate the hand sprayer, depress the thumb lever. Step on foot pedal. Direct water into the bowl.



Leak between closet flange and toilet:

Confirm that flange screws are snug. **DO NOT** over tighten screws. If leak continues, remove toilet and check flange height. Adjust the flange height to 7/16" above floor, if necessary. Replace flange seal if damaged.

Poor flush: Flush should be obtained within two to three seconds. If a problem persists, adjust the water level. If problems continue, the water pressure or flow rate may be low. Remove the water supply line and check flow rate. Flow rate should be at least ten quarts (9.5 liters) per minute. Water pressure should not be below 25 psi.

Bowl will not hold water: Check for and remove any foreign material from blade seal track. Check blade seal compression with mechanism. If blade seal is worn, replace.

Electric Toilet-Tecoma (41 SKQ Model Only)

The toilet is an electric macerating toilet. To avoid damage, only flush organic material and toilet paper. To operate the toilet the house battery disconnect switch must be on.



The toilet uses a 40 Amp mini-breaker located in the curbside battery compartment. Open the black box above the batteries to access the mini-breaker. To operate the toilet the house batteries must be on and charged.

CAUTION

To prevent accumulation of solids below toilet, add several gallons of water to the holding tank before use. Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using any holding tank additive.

NOTE

DO NOT dispose of sanitary supplies or other non-dissolving items into the toilet. Facial tissue, wet strength tissue, paper towels or an excess toilet tissue can clog the tank or termination valve.

Water Saver Flush:

- ◆ Press and release left button. This mode is recommended for flushing liquids and small amounts of toilet paper only.

Normal Flush:

- ◆ Press and release right button. This mode is recommended for flushing solids and toilet paper.


Empty Bowl:

- ◆ Press both buttons simultaneously and release. This empties the bowl and leaves it dry for travel.
- ◆ Press either button once to add water, run motor, and return to normal use.

Programming the Water Level:

The water level in the bowl can be programmed.

The minimum recommended refill level is 1/2" above the bowl outfall hole (the "opening" is the bowl outfall

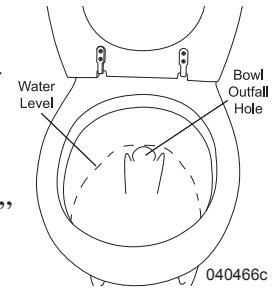


hole). After changing water source from municipal to pump, resetting water may be necessary. To program the water level, perform the following steps.

- ◆ Press both buttons on the toilet control panel and hold.
- ◆ LEDs will flash indicating the toilet is in program mode.
- ◆ As water enters the bowl, release fingers from buttons to set the level of standing water in the bowl. The level set remains constant after each flush until changed.

Holding Tank Level Sensors:

- ◆ The toilet system has tank level sensors mounted on the outside of the black tank. On the toilet control panel is a small water icon located in the bottom right corner. The following information pertains to that water icon.

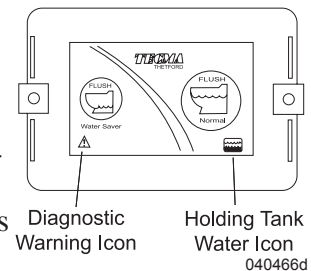

Water Icon Not Lighted:

- ◆ Toilet system is Off, in sleep mode or not receiving power.

Water Icon Lighted Green:

- ◆ Toilet system is On and the holding tank is between empty and half full.

Water Icon Lighted Yellow:

- ◆ Toilet system is On and the holding tank is at least half full.

Water Icon Lighted Red:

- ◆ Toilet system is On and the holding tank is full.

Full Tank Lockout:

- ◆ For the safety of the system, the toilet will not flush when the system senses a full tank. This occurs when the Water Icon is red.

Emergency Override:

If the tank is full (Water Icon is red) and an emergency flush is needed, do the following:

- ◆ Press and hold either flush button for 6 seconds to flush toilet.

WARNING

Drain the black tank. If the black tank is not drained flushing will cause overflowing of the black waste tank and system back up. The diagnostic LED warning icon will flash.

LED Sleep Mode:

To save power consumption when not in use, an automatic LED sleep mode is programmed on this control panel. If the toilet is not used for 8 hours, the keypad LED lights will go out. The press of any button will start a flush and reactivate backlighting.

Cleaning

The toilet should be cleaned regularly for maximum sanitation and operational efficiency. Clean the toilet bowl with a mild bathroom cleaner. DO NOT use chlorine or caustic chemicals, such as drain opening types, as they will damage the seals.

Clean out the system by flushing several gallons of fresh water through with one cup of dry laundry detergent. Add odor control deodorant, in the amount specified for your holding tank capacity, after cleaning and every few days during use.

POISON

Most chemical mixtures for holding tank odor control are poisonous. Follow the product manufacturer's directions and warnings when using any holding tank additive.

Maintenance

To find leaks, check behind or under toilet. Take four or five sheets of toilet tissue and wipe all the water line connections. Start at the top of the unit and work downward. When the tissue comes in contact with leaking water it immediately changes texture.

CAUTION


If the motorhome is in storage for six months, spray silicone on the toilet valve and work it back and forth. Perform this maintenance monthly (silicone will evaporate in about 30 days). DO NOT use a petroleum-based lubricant, damage to the seals will occur.

NOTE

Before storing the motorhome, the toilet must be flushed repeatedly to remove any solids that may have built up.

Toilet Shut-Off Valve:

A shut-off valve is located behind the toilet. In the event of an emergency the water line that leads into the toilet can be shut off.

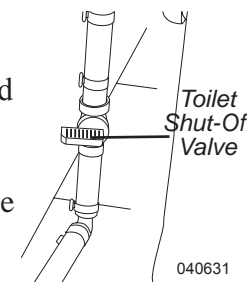


Winterization

The toilet must be winterized to avoid freeze damage. Follow the winterization in Section 6. With the electric Tecma toilet it is recommended to flush toilet until antifreeze is seen in the bowl. Flush an additional 5 times with the antifreeze mixture to ensure discharge line is winterized.

DRAIN TRAPS & AUTO VENTS

Sinks, shower and clothes washer (if equipped) drains incorporate a water trap (P-Trap) and auto vents to prevent waste water holding tank odor from entering the motorhome.

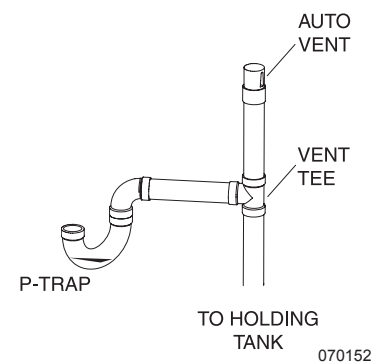

Drain Traps:

P-Traps are usually within 54" of a vent tee and must contain water to block odors. During storage water can evaporate and allow odor into motorhome. If odor is detected, run water into sinks, shower and clothes washer (if equipped) to fill P-traps.

AutoVents:


The auto vent is designed to assist in the smooth flow of water in the drain without creating a vacuum. If stuck in the open position the auto vent can allow grey odors to enter the motorhome. Some auto vents can double as "clean outs" in the event the line needs to be snaked out.

COLD WEATHER CONDITIONS

Extended use in below freezing (32° F/0° C) weather will require operation of the furnace to protect interior water lines, fixtures, water storage tanks and pumps. Exposed drains may freeze quickly. If in doubt about what temperature the motorhome will tolerate, winterize with potable antifreeze. Cold temperature can adversely affect water systems below the floor level because the furnace does not provide heat to these components.

12 Volt Bay Heater:


A 12 Volt DC bay heater and thermal snap disc are located in the water service center. The Bay Heat switch on the interior Systems Control Panel operates the 12 Volt bay heater. Turn the system on when ambient temperatures approach 44° F (+/-6° F) and freezing temperatures occur.

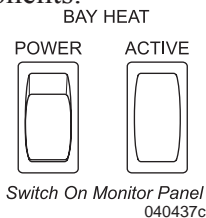**INFORMATION**

Bay Heat is also called System Heat. The two terms are used interchangeably.

Bay Heat Operation:

- ◆ Turn the Bay Heat switch ON when cool or freezing temperatures may occur.
- ◆ When storage compartment temperature reaches 40° F (+/-6° F) the snap disc thermostat closes. The bay heater and Bay Heat indicator light turns on. The heater continues to operate until storage compartment temperature reaches 55° F (+1 - 6° F). The bay heater and Bay Heat indicator light on the Systems Control Panel will turn OFF.

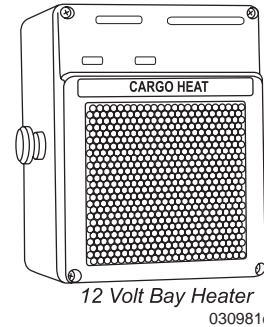**Requirement for Operation:**

- ◆ House battery disconnect switch must be on.

NOTE

The bay heater consumes about 20 Amps when operating. House battery power can be quickly consumed. It is recommended to hook shore power when using Bay Heat.

Cold Weather Storage

If the motorhome is stored where freezing temperatures may occur, drain the fresh water system. Begin draining the fresh water tank allowing the water to drain.

CAUTION

Icemakers, water filters, and water heaters all use the fresh water tank for water. These systems should be drained and stored in accordance with the OEM recommendation for winterization. Consult specific OEM manual for instructions and recommendations.

WINTERIZATION

Water, plumbing and sewer systems require winterization when the motorhome is placed in storage. The recommended method of winterizing the motorhome is using air pressure to remove liquids that may freeze and cause damage to the various systems and appliances. The lines can then be left empty or filled with an FDA approved RV antifreeze. When plumbing lines are drained, antifreeze is not necessary, and the decision to use antifreeze is left to the motorhome operator.

POISON

Use only non-toxic FDA approved RV antifreeze that is specifically made for potable water systems. Automotive antifreeze, if ingested, can cause blindness, deafness or death.

Using Air Pressure For 38 PDQ

Access to an air compressor and an adapter to connect the air line regulator to the water system is necessary. Air adapters used for winterization are available at RV supply locations. Air pressure SHOULD NOT exceed 40 PSI. Higher pressure can damage the lines.

WARNING

It is recommended that a qualified RV service technician familiar with motorhomes, such as an authorized dealer, perform the winterization procedure.

NOTE

Freeze damage is not covered under warranty.

1. Empty and flush the holding tanks.
2. Disconnect the water line connections on either side of the water filter bowl head. Connect the bypass hose to the water lines. Unscrew filter bowl, remove old cartridge and empty any remaining water in the bowl. **DO NOT** screw filter bowl back onto filter head (see “Water Filter.”).
3. Drain the fresh water tank by opening the fresh water tank shut-off valve and fresh water tank low point drain valve.
4. Open winterization valve, hot water low point drain valve and cold water low point drain valve.
5. Allow all water to exit from drains.

WARNING



Ensure the water is not hot when draining the low point water drain lines. Hot water from the lines can burn or injure skin.

6. Turn the water pump on for 30 - 60 seconds and allow it to run so that all the water is cleared out of the water pump and fresh water tank.
7. Turn the pump off.
8. If applicable, disconnect water line to icemaker.

CAUTION

Some appliances such as the washer/dryer and ice maker require special winterizing instructions not covered in this section. Refer to the specific appliance OEM manual for instructions and recommendations.


9. Close fresh water tank shut-off valve and fresh water tank low point drain valve.
10. Close hot water low point drain valve, cold water low-point drain valve, and winterization valve.
11. Open the high temperature/pressure relief valve to vent water heater. Remove water heater drain plug to allow water heater to drain. When water has finished draining, close the pressure relief valve.

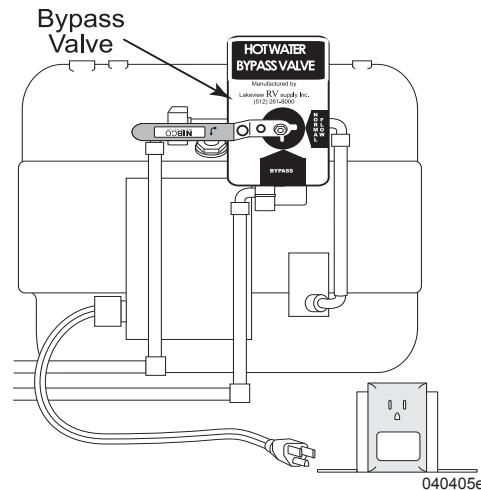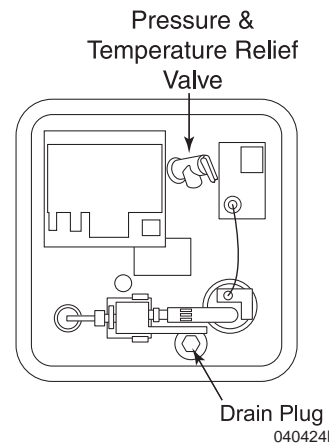

WARNING

Before removing water heater drain plug and opening the high temperature/pressure relief valve turn off power to the water heater and allow water heater to cool. Hot water can result in serious burn injuries.

12. Locate bypass valve at back of water heater and move valve to BYPASS position.
13. Connect an air hose with regulator to the City Water/Fresh Tank Fill connection. If equipped with the (optional) power water hose reel, connect the air hose to the power water hose reel. Position the City/Fresh Water control lever to the City Water position. Set regulator to 40 PSI and turn on air compressor. **DO NOT** exceed 40 PSI in the water lines and faucets.
14. Open all faucets, including outside faucet and shower, one at a time until air comes out.
15. Hold toilet mechanism open (flush toilet) until the water has stopped running.
16. Open hot water low point drain valve, cold water low-point drain valve, fresh water tank low point drain valve, and winterization valve.
17. Leave closed fresh water tank shut-off valve.
18. Allow any water to drain.
19. Shut off the air compressor and disconnect the air hose.

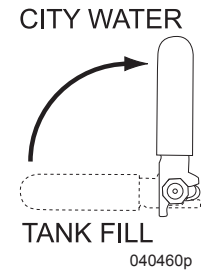

20. One gallon of FDA approved RV antifreeze is needed to protect various water drain lines in the motorhome. Pour 1 pint into the kitchen drain and pour 1 pint into the bath shower drain. Pour 2 pints into the bath sink drain. This will protect the P-traps, with some of the antifreeze going into grey tank to protect the drain valve. Open the toilet bowl valve. Pour another 3 pints into the toilet, letting the antifreeze run into the black tank to protect the valve located there. If applicable, pour the last pint of antifreeze into the washer/dryer drain after the toilet bowl valve has been closed.

POISON

Use only non-toxic FDA Approved RV antifreeze that is specifically made for potable water systems. DO NOT use automobile engine antifreeze. If ingested, automobile antifreeze can cause blindness, deafness or death.

21. Use a soft cloth to wipe out the sinks and shower (after the antifreeze is poured in) to protect the surfaces from stains.
22. Leave open hot water low point drain valve, cold water low point drain valve, fresh water tank low point drain valve and winterization valve. Open fresh water tank shut-off valve. Also leave open water heater drain.
23. When the motorhome is to be used again, install water heater drain plug. Also close fresh water tank low point drain valve, hot water low point drain valve, cold water low point drain

valve and winterization valve. Fresh water tank shut-off valve stays open (this allows fresh water tank to be filled).

24. Install new water filter. Reconnect water lines to the water filter bowl head.
25. Turn water heater by-pass valve to Normal Flow position.

NOTE

Clean up antifreeze spills immediately to prevent permanent staining.

Using Non-Toxic Antifreeze For 38 PDQ

Approximately five to eight gallons of FDA approved antifreeze required to winterize the motorhome.

WARNING

It is recommended that a qualified RV service technician familiar with motorhomes, such as an authorized dealer, do this procedure.

POISON

Use only specifically designed, non-toxic, FDA Approved RV antifreeze for potable water systems. DO NOT use automobile engine antifreeze. If ingested, antifreeze can cause serious injury or death.

NOTE

Freeze damage is not covered under warranty.

1. Empty and flush the holding tanks.
2. Disconnect the water line connections on either side of the water filter bowl head. Connect the bypass hose to

the water lines. Unscrew filter bowl, remove old cartridge and empty any remaining water in the bowl. **DO NOT** screw filter bowl back onto filter head (see "Water Filter.").

3. Drain the fresh water tank by opening the fresh water tank shut-off valve and fresh water tank low point drain valve.
4. Open winterization valve, hot water low point drain valve and cold water low point drain valve.
5. Allow all water to exit from drains.

WARNING

Ensure the water is not hot when draining the low point water drain lines. Hot water from the lines can burn or injure skin.

6. Turn the water pump on for 30 - 60 seconds and allow it to run so all water is cleared out of the water pump and fresh water tank.
7. Turn the pump off.
8. If applicable, disconnect water line to icemaker.

CAUTION

Some appliances such as washer/dryer and ice maker require special winterizing instructions not covered in this section. Refer to the specific appliance OEM manual for instructions and recommendations.

9. Open the high temperature/pressure relief valve to vent water heater. Remove water heater drain plug to allow water heater to drain.

WARNING


Before removing water heater drain plug and opening the high temperature/pressure relief valve turn off power to the water heater and allow water heater to cool. Hot water can result in serious burn injuries.

10. After the water is drained place water heater bypass valve to BYPASS position.
11. Replace the water heater drain plug and close the pressure relief valve.
12. Close all faucets and showers, interior and exterior.
13. Close the fresh water tank shut-off valve, fresh water tank low point drain valve, hot water low point drain valve and cold water low point drain valve.
14. Open winterization valve.

CAUTION

Ensure the fresh water tank is completely drained. Antifreeze will not enter the fresh water tank.

15. Connect a hose to the Winterization connection and place the other end into the container of antifreeze.
16. Turn ON the water pump.
17. Open all faucets, one at a time, hot and cold starting with the faucet farthest from the pump. Turn faucet off when a small amount of antifreeze appears.
18. Exterior faucet and shower should be opened and closed using the same procedures as the interior faucets.

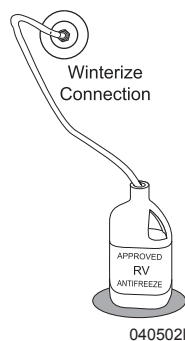

19. Hold the toilet flush mechanism open until antifreeze appears.
20. Use a soft cloth to wipe out the sinks and shower to protect surface from antifreeze stains.
21. Turn water pump off.
22. Disconnect the power supply line affecting water pump operation.

NOTE

Clean up antifreeze spills immediately to prevent permanent staining.

De-winterization

1. Open the fresh water tank shut-off valve, fresh water tank low point drain valve, hot water low point drain valve, cold water low point drain valve and winterization valve. This will allow any water to drain.
2. Close fresh water tank low point drain valve, hot water low point drain valve, cold water low point drains and winterization valve.
3. Leave open fresh water tank shut-off valve. This will allow water to circulate in the plumbing system.
4. Fill the fresh water tank with water.
5. Connect the power supply line for the water pump. Turn water pump on.
6. Operate all faucets, one at a time, until clear water is present.
7. If applicable, cycle ice maker several times until fresh water is present and reconnect valve outlet line.
8. Disconnect bypass hose on water filter and reconnect water lines to filter bowl head. Install new water filter cartridge.

9. Turn water heater bypass valve to Normal Flow position. Fill water heater with water.

CAUTION

The first two trays of ice from the icemaker may contain contaminants. Discard and replenish the icemaker as needed.

NOTE

Depending on length of storage, the fresh water tank may need to be sanitized.

Using Air Pressure (For 41 SKQ & 41 PDQ)

Access to an air compressor and an adapter to connect the air line regulator to the water system is necessary. Air adapters used for winterizing are available at RV supply locations. **DO NOT** exceed 40 PSI air pressure. Higher pressure can damage the water lines.

WARNING

It is recommended that a qualified RV service technician familiar with motorhomes, such as an authorized dealer, perform the winterization procedure.

NOTE

Freeze damage is not covered under warranty.

1. Empty and flush the holding tanks.
2. Disconnect the water line connections on either side of the water filter bowl head. Connect the bypass hose to the water lines. Unscrew filter bowl, remove old cartridge and empty any remaining water in the bowl. **DO NOT** screw filter bowl back onto filter head (see “Water Filter”).
3. Open hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve, water pump low point drain valve, and if equipped, secondary icemaker valve (41 PDQ).
4. Drain the fresh water tank by opening the fresh water tank drain valve, winterization valve and fresh water tank fill valve.
5. Allow all water to exit from drains.

WARNING


Ensure the water is not hot when draining the low point water drain lines. Hot water from the lines can burn or injure skin.

6. Turn the water pump on for approximately 30-60 seconds and allow it to run so that all the water is cleared out of the water pump and fresh water tank.
7. Turn the water pump off.
8. If applicable, disconnect water line to icemaker.

CAUTION

Some appliances, such as washer/dryer and ice maker, require special winterizing instructions not covered in this section. Refer to the specific appliance OEM manual for instructions and recommendations.


9. Close hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve and water pump low point drain valve, and if equipped, secondary icemaker valve (41 PDQ).
10. Leave open fresh water tank drain valve and fresh water tank fill valve.
11. Close winterization valve.
12. Open the high temperature/pressure relief valve to vent water heater. Remove water heater drain plug to allow water heater to drain. When water has finished draining, close pressure relief valve.

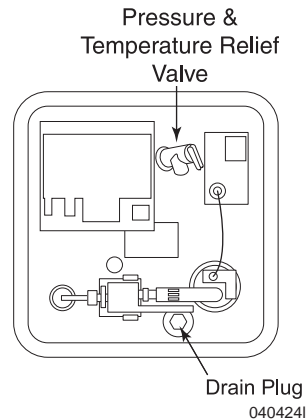



WARNING

Before removing water heater drain plug and opening the high temperature/pressure relief valve turn off power to the water heater and allow water heater to cool. Hot water can result in serious burn injuries.

13. Locate bypass valve at back of the water heater and move valve to BYPASS position.
14. Connect an air hose with regulator to the City/Fresh Water Fill connection.
15. Position the City/Fresh Water Control lever to the Tank Fill position. If equipped with the (optional) power water hose reel, connect the air hose to the power water hose reel. Set regulator to 40 PSI and turn on air compressor for no more than 30 seconds. **DO NOT** exceed 40 PSI. Air will come out of the fresh water tank drain valves.
16. Turn air off.
17. Position the City/Fresh Water Control lever to the City Water position. Ensure regulator is set to 40 PSI and turn on air compressor. **DO NOT** exceed 40 PSI in the water lines and faucets.

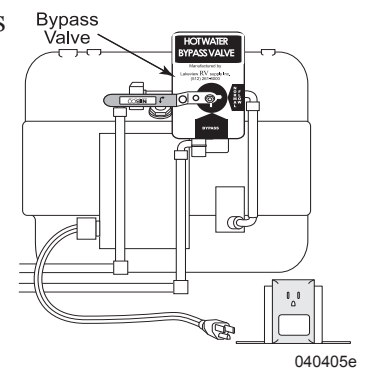

18. Open all interior faucets and shower, including outside shower and faucet, one at a time until air comes out. This will clear water from supply lines.

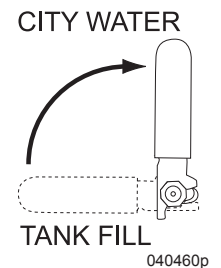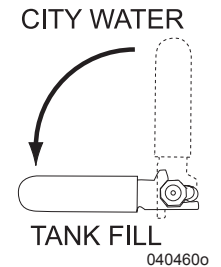

19. If equipped, open and close secondary icemaker valve (41PDQ) until air comes out.
20. Hold toilet mechanism open (flush toilet) until the water has stopped running.
21. Shut off the air compressor and disconnect the air hose.
22. One gallon of FDA approved RV antifreeze is needed to protect various water drain lines in the motorhome. Pour 1 pint into the kitchen drain and 1 pint into the bath shower drain. Pour 2 pints into the bath sink drain. This will protect the P-traps with some of the antifreeze going into grey tank to protect the drain valve. Open the toilet bowl valve. Pour another 3 pints into the toilet, letting the antifreeze run into the black tank to protect the valve located there. If applicable, pour the last pint of antifreeze into the washer/dryer drain after the toilet bowl valve has been closed.

POISON

Use only non-toxic FDA Approved RV antifreeze that is specifically made for potable water systems. DO NOT use automobile engine antifreeze. If ingested, automobile antifreeze can cause blindness, deafness or death.

23. Use a soft cloth to wipe out the sinks and shower (after the antifreeze is poured in) to protect the surfaces from stains.

24. Open hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve and water pump low point drain valve. Leave open fresh water tank drain valve and fresh water tank fill valve. Open winterization valve.
25. When motorhome is to be used again, install water heater drain plug. Close hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve and water pump low point drain valve. Close winterization valve and fresh water tank drain valve. Fresh water tank fill valve stays open.
26. Install new water filter. Reconnect water lines to the water filter bowl head.
27. Turn water heater by pass valve to Normal Flow position.

WARNING

Clean up antifreeze spills immediately to prevent permanent staining.

Using Non-Toxic Antifreeze (For 41 SKQ & 41 PDQ)

Approximately five to eight gallons of FDA approved antifreeze will be required to winterize the motorhome.

WARNING

It is recommended that a qualified RV service technician familiar with motorhomes, such as an authorized dealer, perform the winterization procedure.

POISON

Use only specifically designed, non-toxic, FDA Approved RV antifreeze for potable water systems. DO NOT use automobile engine antifreeze. If ingested, antifreeze can cause serious injury or death.

NOTE

Freeze damage is not covered under warranty.

1. Empty and flush the holding tanks.
2. Disconnect the water line connections on either side of the water filter bowl head. Connect the bypass hose to the water lines. Unscrew filter bowl, remove old cartridge and empty any remaining water in the bowl. **DO NOT** screw filter bowl back onto filter head (see “Water Filter”).
3. Open hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve and water pump low point drain valve.
4. Drain the fresh water tank by opening the fresh water tank drain valve, winterization valve and fresh water tank fill valve.
5. Allow all water to exit from drains.

WARNING

Ensure the water is not hot when draining the low point water drain lines. Hot water from the lines can burn or injure skin.

6. Turn the water pump on for approximately 30-60 seconds and allow it to run so that all the water is cleared out of the water pump and fresh water tank.

7. Turn the pump off.
8. If applicable, disconnect water line to icemaker.

CAUTION

Some appliances, such as washer/dryer and ice maker, require special winterizing instructions not covered in this section. Refer to the specific appliance OEM manual for instructions and recommendations.

9. Open the high temperature/pressure relief valve to vent water heater. Remove water heater drain plug to allow water heater to drain. When water has finished draining, close pressure relief valve.


WARNING

Before removing water heater drain plug and opening the high temperature/pressure relief valve turn off power to the water heater and allow water heater to cool. Hot water can result in serious burn injuries.

10. After water has drained, move water heater valve to BYPASS position.
11. Replace the water heater drain plug and close the pressure relief valve.
12. Close all faucets and showers.
13. Close hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve and water pump low point drain valve.
14. Close fresh water tank fill valve. Leave open fresh water tank drain valve and winterization valve.

CAUTION

Ensure the fresh water tank is completely drained. Antifreeze will not enter the fresh water tank.

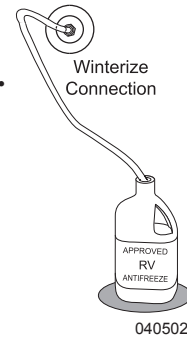

15. Connect a hose to the Winterization connection and place the other end into the container of antifreeze.
16. Turn ON the water pump.
17. Open all faucets and showers, one at a time, hot and cold starting with the faucet farthest from the pump. Turn faucet off when a small amount of antifreeze appears.
18. Exterior faucet and shower should be opened and closed using the same procedures as the interior faucets.
19. Hold the toilet flush mechanism open until antifreeze appears.
20. Use a soft cloth to wipe out the sinks and shower to protect surface from antifreeze stains.
21. Turn water pump off.
22. Disconnect the power supply line affecting water pump operation.

NOTE

Clean up antifreeze spills immediately to prevent permanent staining.

De-winterization

1. Open hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve and water pump low point drain valve.

2. Open the fresh water tank drain valve, winterization valve and fresh water tank fill valve. This will allow any water to drain.
3. Close hot water low point drain valve, cold water low point drain valve, secondary cold water low point drain valve and water pump low point drain valve.
4. Close winterization valve and fresh water tank drain valve. Fresh water tank fill valve stays open.
5. Fill the fresh water tank with water.
6. Connect the power supply line for the water pump. Turn water pump on.
7. Operate all faucets, one at a time, until clear water is present.
8. If applicable, cycle ice maker several times until fresh water is present and reconnect valve outlet line.
9. Disconnect bypass hose on water filter and reconnect water lines to filter bowl head. Install new water filter cartridge.
10. Turn water heater by pass valve to Normal Flow position. Fill water heater with water.

CAUTION

The first two trays of ice from the icemaker may contain contaminants. Discard and replenish the icemaker as needed.

NOTE


Depending on length of storage, the fresh water tank may need to be sanitized.

WATER SERVICE CENTER FOR 38 PDQ

1. Power Water Hose Reel Switch (Optional)
2. City/Fresh Water Fill Connection or (Optional) Power Water Hose Reel
3. Water Pressure Regulator
4. Hose Faucet
5. Compartment Lights/Water Pump Switch
6. Sewage Tank Flush Connection
7. City/Fresh Water Fill Handle
8. Shower
9. Tank Monitor Gauge (Optional)
10. Gravity Tank Fill
11. Winterization Connection
12. Sani-Con Switch (Optional)
13. Sani-Con Tank Flush System (Optional)
14. Hot Water Low Point Drain Valve
15. Cold Water Low Point Drain Valve
16. Systems Test Port Shut-Off Valve (For Qualified Technicians Only)
17. Systems Test Port (For Qualified Technicians Only)
18. Fresh Water Tank Low Point Drain Valve
19. Fresh Water Tank Shut-Off Valve
20. Winterization Valve
21. Access Port
22. 12 Volt Bay Heater
23. Grey Tank (Liquid Waste) Drain Valve
24. Black Tank (Solid Waste) Drain Valve
25. Common Termination Drain
26. Sewer Hose
27. Water Pump


NOTE

Layout of the Water Service Center and location of components will vary with floor plans, options, and changes to the motorhome.

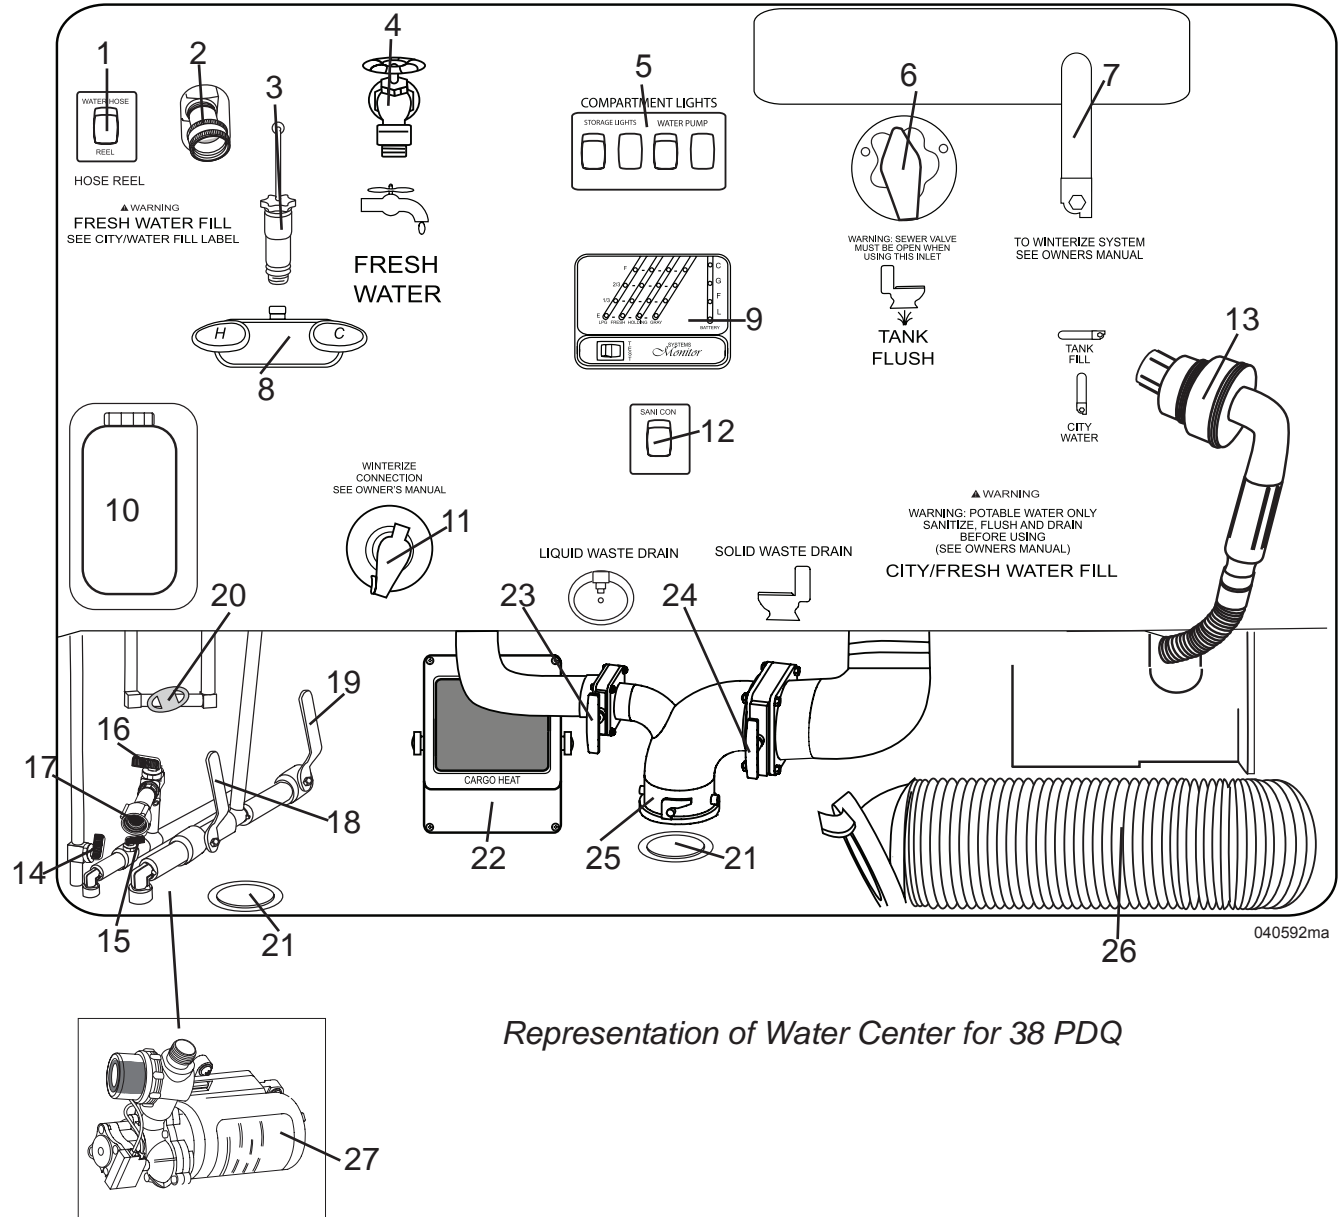


**WATER SERVICE CENTER
(41 SKQ & 41 PDQ)**


1. Power Water Hose Reel Switch (Optional)
2. City/Fresh Water Fill Connection or (Optional) Power Water Hose Reel
3. Water Pressure Regulator
4. Compartment Lights/Water Pump Switches
5. Tank Monitor Gauge (Optional)
6. Water Filter (Can Also be Located in a Curbside Compartment)
7. City/Fresh Water Fill Handle
8. Shower
9. Sewage Black Tank Flush Fitting
10. Sani-Con Switch (Optional)
11. Hose Faucet
12. Hot Water Low Point Drain Valve
13. Secondary Cold Water Low Point Drain Valve
14. Secondary Icemaker Valve (41 PDQ Only)
15. Cold Water Low Point Drain Valve
16. Water Pump Low Point Drain Valve
17. Systems Test Port Shut-Off Valve (For Qualified Technicians Only)
18. Systems Test Port (For Qualified Technicians Only)
19. 12 Volt Bay Heater
20. Black Tank (Solid Waste) Drain Valve
21. Grey Tank (Liquid Waste) Drain Valve
22. Common Termination Drain
23. Access Port
24. Sewer Hose
25. Sani-Con Tank Flush System (Optional)
26. Water Pump
27. Winterization Connection
28. Winterization Valve
29. Gravity Fill
30. Fresh Water Tank Fill Valve
31. Fresh Water Tank Drain Valve

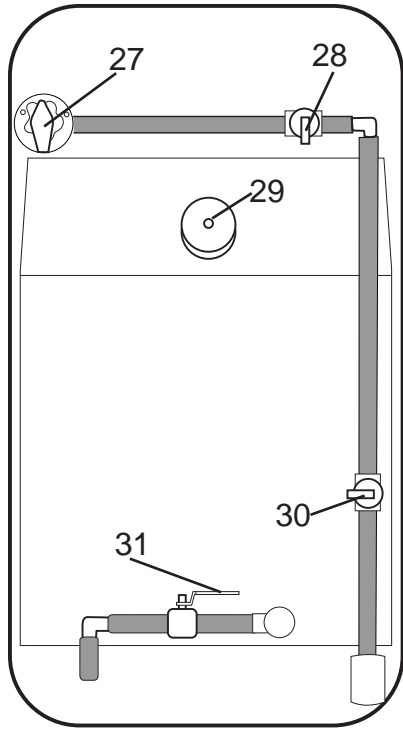

Located in a Roadside Compartment

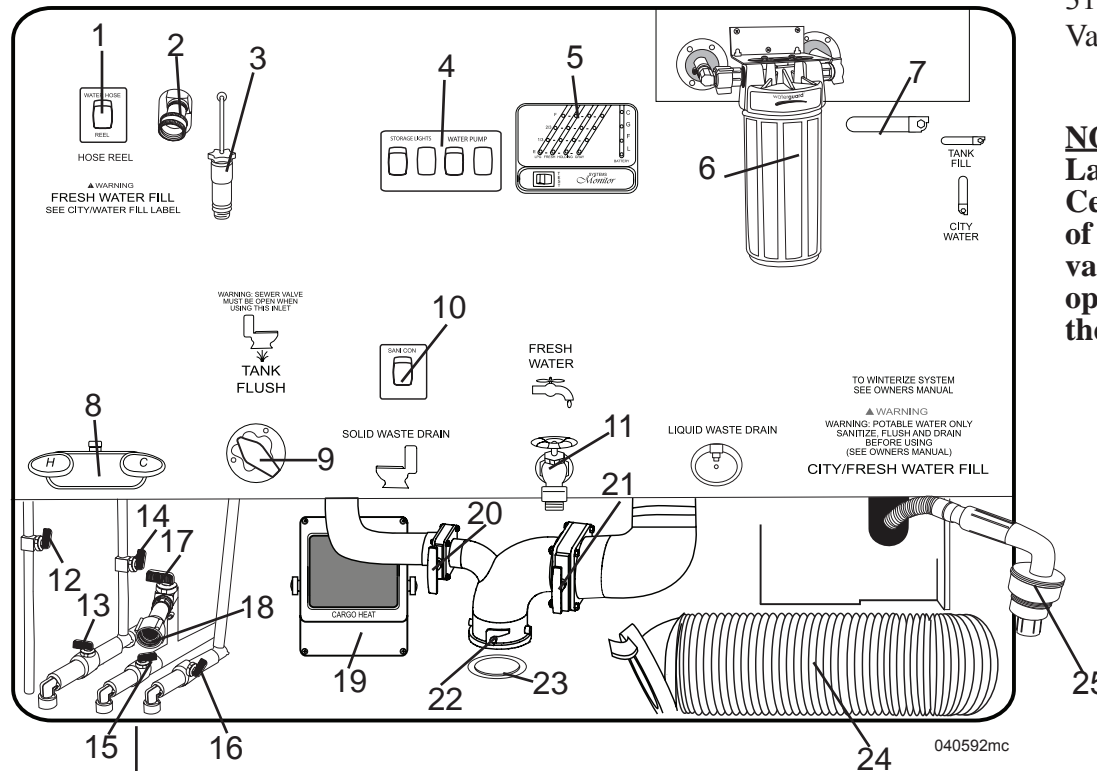

Representation of Water Center for 41 SKQ and 41 PDQ

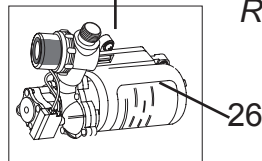

NOTE
Layout of Water Service Center and location of components will vary with floor plans, options, and changes to the motorhome.

| | |
|--|------------|
| PROPANE SYSTEMS | 148 |
| PROPANE DETECTOR | 149 |
| Testing | 149 |
| Alarm..... | 150 |
| Maintenance | 150 |
| PROPANE EMERGENCY | |
| PROCEDURES CHECKLIST | 150 |
| PROPANE TANK..... | 151 |
| Measurement..... | 151 |
| Tank Capacity | 151 |
| Tank Filling..... | 151 |
| Tank Operation | 151 |
| EXTERIOR PROPANE LINE HOOKUP PREP | 152 |
| PROPANE FUNDAMENTALS | 152 |
| PROPANE REGULATOR..... | 153 |
| PROPANE HOSE INSPECTION..... | 154 |
| PROPANE DISTRIBUTION LINES | 155 |
| PROPANE CONSUMPTION..... | 155 |
| PROPANE SAFETY TIPS | 156 |



PROPANE SYSTEMS

This section contains safety information and operating instructions of the Liquefied Petroleum Gas (propane) system and related equipment in the motorhome. Some items discussed may not be applicable to all motorhomes. More detailed information with CAUTION or WARNING instructions for various equipment other than items within this section, can be found in the OEM manuals in the owner's information box.

NOTE

Some appliance displays and appliance manuals may refer to LP-Gas as a fuel source; however, the actual fuel source used and required for these appliances is propane. The phrase "LP-Gas" is synonymous with not only propane, but butane and propane/butane mixtures. Since propane is the actual fuel required, the term "Propane" will be used throughout this manual except for references to third party appliances (such as the refrigerator) that include the term "LP-Gas" on their displays or other literature.

Propane Overview:

The propane tank mounted in the motorhome contains propane that is under high pressure. As fuel is used, the liquid vaporizes and passes through the primary tank valve to a regulator that reduces pressure. Low-pressure gas is then distributed to components through a pipe manifold system.

Component ignition problems are commonly caused by air in the manifold system or incorrect gas pressure. **DO NOT** attempt to adjust the regulator. Adjustments must be made by a dealer or an authorized service personnel with the proper equipment. In higher elevations or extreme cold weather (10° F/-12° C or lower) a shortage of propane may be experienced. If propane is going to be used in higher elevations or cold climates for a long period of time, have authorized service personnel adjust the propane regulator for these conditions.

Propane System Testing:

Have the propane system tested by an authorized dealer or service center at least once a year and before every extended trip. The test will include having the system checked for leaks and the regulator pressure checked and tested for functionality. Although the manufacturer and the dealer test the system carefully for leakage, travel vibrations can loosen fittings.

WARNING

When storing portable propane tanks that are not connected to a propane system, install an approved plug in the tank outlet hole to prevent leaks. DO NOT store or transport empty propane tanks, portable tanks, gasoline or other flammable liquids in the interior area of the motorhome. Keep open flame and spark producing materials away from the propane area. Shut off all appliances and the primary propane tank valve when the motorhome is in storage. If this warning is ignored, a fire or explosion could result.

Propane Leaks:

Leaks (identified by the odor of rotten eggs or sulfur) can be easily found by applying a leak detector solution on all connections. **DO NOT** light a match, have an open flame or use any spark producing equipment or appliance to test for leaks. Leaks can usually be repaired by tightening the fittings. If not, turn off the primary gas valve at the tank. Hand-tighten the primary valve only. **DO NOT** use a wrench or pliers as over tightening may damage valve seats and cause leaks. If a leak is suspected, immediately see an authorized dealer or service center for repairs.

WARNING

Propane is highly volatile and extremely explosive. DO NOT use matches or a flame to test for leaks. Only approved propane leak testing solution for leak detection should be used. Unapproved solutions can damage copper tubing and brass fittings. A liquid dish soap solution of 10 parts water may be used. Shake the solution until bubbles form and then apply the mixed solution to fittings and accessory control valves. All fittings tested should be thoroughly rinsed and dried after testing. DO NOT attempt to adjust propane regulators. Only qualified service personnel should perform maintenance or repairs to the propane system.

NOTE

It may be illegal to travel in some states and Canadian provinces with the primary propane shut-off valve open. Failure to comply with these State and Canadian province requirements may result in fines and/or pose a safety hazard.

PROPANE DETECTOR

The propane detector is required safety equipment in RVs. American National Standards Institute (ANSI) 1192 - Fire & Life Safety 6.4.8 Propane Detectors states

“All recreational vehicles equipped with a propane appliance and electrical system shall be equipped with a propane detector listed as suitable for use in recreational vehicles under the requirements of UL 1484 and installed according to the terms of its listing.”



Propane Detector

Propane is heavier than air and will settle to the lowest point in the motorhome. The propane detector is also sensitive to other fumes such as hair spray, of which most contain butane as the propellant. Butane, like propane, is heavier than air and will settle to the floor level. Sulfated batteries (rotten egg odor) will also sound the alarm. When this occurs, reset the detector to stop the alert sound.

About the Propane Detector:

Be aware of the difference between a leak versus propane escaping from an unlit, open burner. Pure propane vapors from a leaking pipe or fitting are heavier than air and will build up heaviest concentration at the leak and float down to mix with air. If a burner is left on, the area around the burner, range and adjoining counter space is combustible and can cause injury and damage when ignited.

This condition will exist for an extended time period. Eventually, the propane will reach the detector's location and cause the alarm to sound.

CAUTION

The propane detector indicates the presence of propane only at its sensor. Combustible levels of propane may be present in other areas. The detector is intended for detection of propane only.

The propane detector is not designed to detect other types of gas. However, some products may cause the detector to alarm, such as alcohol, liquor, kerosene, gasoline, deodorants, colognes, propellant used in spray cans and cleaning solvents. In some cases, vapors from glue and adhesive used in the manufacturing of the motorhome may also cause the detector to alarm for several months after the date of manufacture. If it is determined that the detector has false alarmed because of the above mentioned nuisance gases, reset the detector and ventilate the motorhome with fresh outside air. Take precautions to ensure one of these cases has not masked an actual propane alarm condition.

The propane detector draws less current than one instrument panel lamp and will detect gas until the battery is drained down to 7.0 Volts. A voltage higher than 7.0 Volts is needed for the detector to operate properly. If the power source is disconnected, or if the power is otherwise interrupted, the detector will not operate.

The propane detector has a self-check circuit running at all times while the detector is powered. In the event that the circuitry fails, a failure alarm will sound and the operating indicator will cease to light.

The propane detector is wired to the house batteries. This allows reliable protection by alerting the build up of potentially dangerous levels of propane.

WARNING


If the motorhome is unplugged from shore power, the house battery disconnect switch must be ON for the propane detector to operate.

Propane Detector Operation:

Upon first application of power the LED will flash yellow for three minutes while the detector is stabilizing. At the end of the start cycle the LED will turn Green indicating full operation. If the detector senses unsafe levels of propane it will immediately sound an alarm. The propane detector operates on 12 Volt DC, with a current draw of less than 1/10th of one amp.

CAUTION

The detector will not sound an alarm during the three minute warm up cycle.

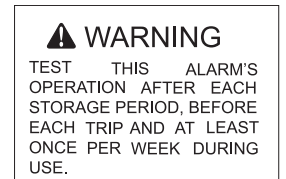


020155e

Testing

Press the TEST button any time during the warm up

cycle or while in normal operation. The LED will turn red and an alarm will sound. Release the switch. This is the only way to test full operation of the detector.

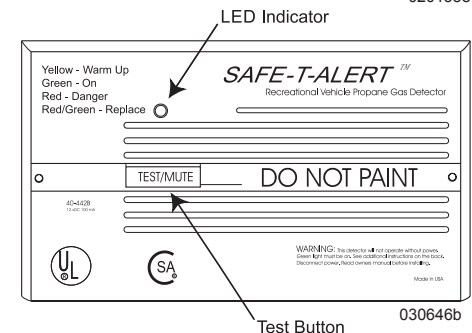


Alarm

The red LED will flash and the alarm will sound whenever dangerous levels of propane are detected. The detector will continue to alarm until the gas clears or the Test/Mute switch is pressed.

Alarm Procedures:

- ◆ Turn off all propane appliances (stove, water heater, furnace, refrigerator), extinguish all flames and smoking material. Evacuate immediately. Leave doors and windows open.
- ◆ Turn off primary shut-off valve on the propane tank.
- ◆ Determine and repair the source of the leak. If necessary, contact a qualified professional for service.

WARNING
DO NOT
operate
any electric
switch.
This can
produce a
spark and
ignite the
gas.

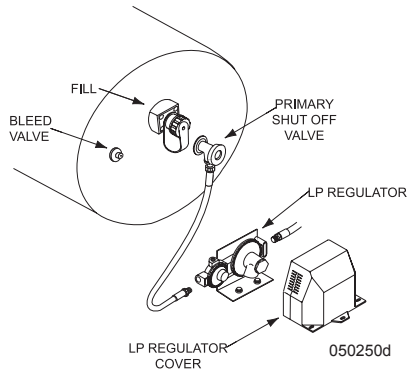

POTENTIAL SOURCES OF PROPANE LEAKS WHEN OPERATING THE MOTORHOME

| | |
|-------------------|---|
| ◆ Cooktop burners | ◆ Defective Propane Connection |
| ◆ Oven | ◆ Defective Regulator |
| ◆ Refrigerator | ◆ Portable Propane Powered Appliances/Accessories |
| ◆ Water Heater | ◆ Furnace |

CAUTION
DO NOT re-enter until the problem is corrected.

Alarm Mute:

Press the Test/Mute switch when the detector is in alarm.

- ◆ The red LED will continue to flash and the alarm will beep every 30 seconds until the gas level has dropped to a safe level.
- ◆ The LED will flash green until the end of the Mute cycle.
- ◆ If dangerous gas levels return before the end of the Mute cycle, the alarm will beep four times and return to phase 1.
- ◆ After two minutes the detector will return to normal operation (solid green) or resound the alarm if dangerous levels of propane remain in the area.

Fault Alarm:

Should the microprocessor sense a fault in the gas detector, a fault alarm will sound twice every 15 seconds. The LED will alternately flash red to green and the MUTE switch will not respond to any command. The propane detector must be repaired or replaced.


Maintenance

1. Vacuum the dust off the detector cover weekly (more frequently in dusty locations) using the soft brush attachment of a vacuum.
2. **DO NOT** spray cleaning agents or waxes directly onto the front panel. This action may damage the sensor, cause an alarm or cause a detector malfunction.

PROPANE EMERGENCY PROCEDURES CHECKLIST

If a propane smell is detected (a rotten egg or sulfur smell) at any time, perform the following steps immediately:

- ◆ Shut off propane appliances.
- ◆ Manually turn off the primary shut-off valve at the propane tank.
- ◆ **DO NOT** operate any electric switch. This can produce a spark and ignite the gas.
- ◆ Open windows and doors.
- ◆ Evacuate the motorhome. Stay clear of the surrounding area.
- ◆ Keep all ignition sources out of the area.
- ◆ Contact a qualified service technician to find the source and repair the propane leak.

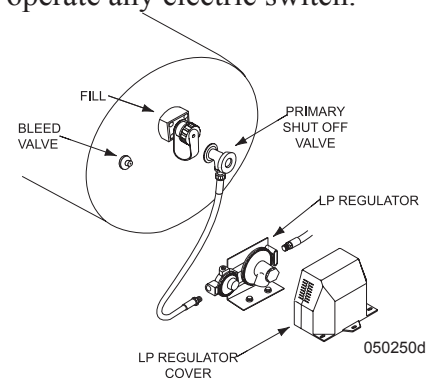

WARNING
A fire or explosion
from ignited
propane or
propane
fumes can
cause serious
injury or
death.

⚠ WARNING





Hazardous vapors, explosive and flammable gas. Can cause suffocation severe injury or death.

PROPANE TANK Measurement

The motorhome is equipped with a monitor panel to aid in managing the propane tank. The monitor panel is located on the systems control panel in the hallway area. A second optional monitor panel can be found in the roadside water service center. The switch marked TEST is a momentary switch which requires being held down along with a corresponding scale reading.

| Propane and Fresh Tank | Holding and Grey Tanks |
|------------------------|------------------------|
| Red = Empty | Green = Empty |
| Red = 1/3 Full | Yellow = 1/3 Full |
| Yellow = 2/3 Full | Red = 2/3 Full |
| Green = Full | Red = Full |

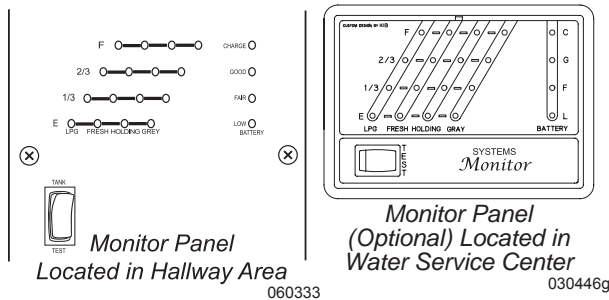

Tank Capacity

NOTE

This chart reflects product specifications available at the time of printing.


| Propane Tank Capacity |
|--|
| *39 Gallons |
| *Actual filled propane capacity is 80% of listing due to safety shut-off required on tank. |

NOTE

Propane tank capacity is estimated based upon calculations provided by the tank manufacturer and represents approximate capacity. The actual “usable capacity” may be greater or less than the estimated capacity. Actual full liquid capacity is 80% of full tank capacity.

Tank Filling

Woodall’s Campground and Trailer Guide, and other similar publications, list refueling stations. Many travel parks sell propane. Before filling the propane tank, shut off pilot lights, appliances and igniters to prevent a fire or explosion. Have a trained service person fill the propane tank.

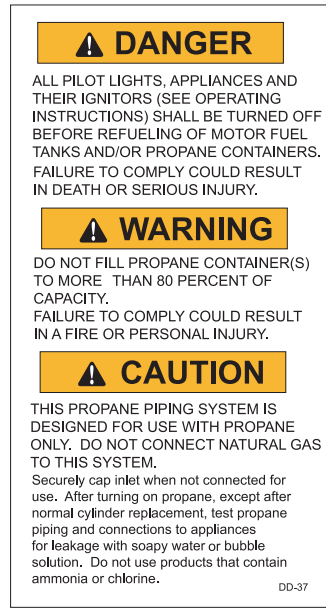

0201551

WARNING

Before entering a refueling station, turn off all pilot lights and propane operated appliances. Most propane appliances used in motorhomes are vented to the outside. Fuel vapors can enter an appliance vent on a motorhome that is parked close to a gasoline pump, resulting in an explosion or fire.

WARNING

Extinguish all sources of heat, sparks, flames and smoking materials within a 50’ radius during the fueling process.

The propane tank fill is located in a roadside compartment. The tank must be filled to the proper level to allow for expansion. An overfilled tank may cause the safety valve to release pressure emitting a strong rotten egg odor near the tank and/or a hissing noise may be detected.

WARNING

Small amounts of propane can escape and evaporate during the fueling process. Protect bare skin. Instant freezing will occur if exposed to propane.

Propane exists in both liquid and vapor form within the tank. A full tank is approximately 80% liquid. The pressure inside the tank varies with the temperature of the liquid. All tanks are required to have a safety pressure relief device to release excess pressure. Actual full liquid capacity is approximately 80% of full tank capacity. The monitor panel is adjusted for this and will indicate full at this point.


NOTE

If the tank is new and being filled for the first time, inform the service technician to purge any air from the tank prior to filling.

Tank Operation

- Manually open the primary shut-off valve located on the propane tank when operating appliances.

- ◆ Turn off the primary shut-off valve on the propane tank when the tank is being filled, during drive time, in between trips and while in storage.
- ◆ Hand-tighten the primary valve only. **DO NOT** use a wrench or pliers. This will over-tighten the valve. The primary valve is designed to be closed by hand. Over-tightening may permanently damage the valve seat.

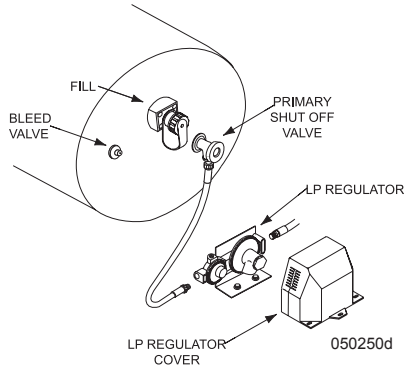


CAUTION

In some States and Canadian provinces, it may be illegal to drive the motorhome while primary valve on the propane tank is open.

EXTERIOR PROPANE LINE HOOKUP PREP

An auxiliary remote propane hookup is for external propane accessories and to be used for external components only. For safety, only approved propane quick disconnect fittings and flexible hose should connect external accessories to the remote hookup. A propane quick disconnect fitting should be installed by a qualified agency as defined in the National Fire Protection Association NFPA (Fire) 54-02 code.

The exterior propane line hookup prep is found in a curbside compartment.

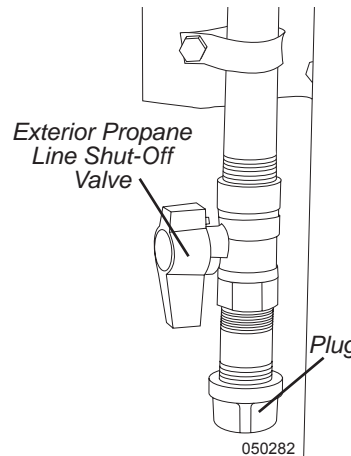

INSPECTION

Check for leaks on all connections each time the remote propane is used. If a leak is detected, turn off the primary shut-off valve on the propane tank. Contact a qualified service center for the necessary repairs.

! WARNING

Hazardous vapors, explosive and flammable gas. Can cause suffocation severe injury or death.

PROPANE FUNDAMENTALS


| #Capacity | Gallon Capacity | BTU Capacity |
|-----------|-----------------|--------------|
| 5 | 1.18 | 107,909 |
| 10 | 2.36 | 215,807 |
| 11 | 2.59 | 237,387 |
| 20 | 4.72 | 431,613 |
| 30 | 7.08 | 647,420 |
| 40 | 9.43 | 863,226 |

The above capacities allow for 20% vapor space on each cylinder. Data taken from the National Fire Prevention Association (NFPA). Pamphlet #58-1998.

CONVERSIONS

Gallons to Liters (1 Gallon = 3.785 Liters)
 Fahrenheit to Celsius (F° - 32 ÷ 1.8 = C°)
 11 in Water Column = 6 1/4 ozs. per sq. in. pressure.
 27.7 in. Water Column = 1 lb. per sq. in. pressure.

QUICK DISCONNECT FITTING



NOTE:

COUPLING TO BE INSTALLED BY A QUALIFIED AGENCY AS DEFINED IN THE NATIONAL FUEL GAS CODE (NFPA 54)

INSTALLATION INSTRUCTIONS

- 1) INSTALL SOCKET WITH SHUT-OFF VALVE ON THE GAS SUPPLY SIDE
- 2) INSTALL PLUG ON THE ACCESSORY SIDE
- 3) LEAK TEST USING SOAPY WATER SOLUTION

OPERATING INSTRUCTIONS

TO CONNECT:

- 1) CLOSE SHUT-OFF VALVE
- 2) PULL SOCKET SLEEVE BACK
- 3) INSERT PLUG; RELEASE SLEEVE
- 4) PUSH PLUG INTO SOCKET UNTIL SLEEVE SNAPS FORWARD
- 5) OPEN SHUT-OFF
- 6) LEAK TEST USING SOAPY WATER SOLUTION

TO DISCONNECT:

- 1) CLOSE SHUT-OFF VALVE
- 2) TO RELEASE PLUG, PULL SLEEVE BACK AWAY FROM PLUG; PULL OUT PLUG
- 3) INSERT PLUG; RELEASE SLEEVE
- 4) LEAK TEST USING SOAPY WATER SOLUTION

BASIC FACTS ABOUT PROPANE

- ◆ Propane detectors are a federal requirement on all propane equipped recreation vehicles.
- ◆ Propane is a by-product produced by refining oil.
- ◆ Oil is added to propane after the refining process.
- ◆ Each liquid gallon of propane produces 91,502 BTUs (British Thermal Units).
- ◆ Temperature affects pressure of propane. Internal tank pressure can exceed 200 psi.
- ◆ Tanks or valves contain pressure relief valves. The relief valve opens at 125% above tank rating.
- ◆ Propane stops vaporizing at -44° F.
- ◆ Standard propane operating pressure is 11" of Water Column or approximately 6 ¼ ounces per square inch.
- ◆ An inch of Water Column is a measurement of applied pressure to one side of a U-Tube ½ filled with water at sea level. The amount of pressure required to raise the water level 11", represents 11" of Water Column.

PROPANE STATISTICS

| | |
|-------------------------------------|--------|
| Pounds Per Gallon | 4.24 |
| Specific Gravity of Gas | 1.50 |
| Specific Gravity of Liquid | .504 |
| Cubic Feet Gas Per Gallon of Liquid | 36.38 |
| Cubic Feet Gas Per Pound | 8.66 |
| BTUs Per Gallon | 91,502 |
| BTUs Per Gallon | 21,548 |
| Dew Point in Degrees Fahrenheit | -44° F |
| Vapor Pressure at 0° F | 31 |
| Vapor Pressure at 70° F | 127 |
| Vapor Pressure at 100° F | 196 |
| Vapor Pressure at 110° F | 230 |
| Flash Point | 842° F |

NOTE

The propane fundamentals information is not a complete guide for the use of propane tanks or appliances. In cold climates keep propane level above 50% to keep vaporization of propane at the highest level.

PROPANE REGULATOR

Propane is compressed into liquid form in the tank. Only the vapor is used during combustion by an appliance. As vapor is removed from the tank, the remaining liquid will vaporize to maintain pressure that is removed during consumption. This process will continue until there is no liquid remaining in the tank.

Temperature affects the vaporizing action of the liquid. If temperature of the liquid is - 44° F, the liquid remains stable with tank pressure, about 0 psi. If liquid temperature is 100° F, the liquid quickly vaporizes with tank pressure, about 200 psi. Vapor pressure must remain relatively consistent, regardless of temperature, for the appliance heat output to remain stable. Vapor pressure regulation is performed by the regulator.

The two-stage regulator reduces vapor pressure so that it is safe for use. The first stage of the regulator reduces tank pressure to a range of 10 to 13 psig (pounds per square inch gauge). The second stage further reduces pressure to a working pressure of 0.4 psig (11 Inches of Water Column or about 6¼ ounces psi.). A vent is installed to allow the internal diaphragm to move with atmospheric pressure change. It is important to keep the vent clean and clear of obstruction or corrosion. If the vent becomes clogged, pressure from

the propane tank may cause erratic pressure regulation. If there is any corrosion, contact a qualified propane service technician. The regulator is mounted so that the vent faces downward. If the vent becomes clogged, clean it with a toothbrush.


Under normal atmospheric conditions a propane regulator will not freeze, nor will the propane. Vapor passing through the regulator will expand and cool, condensing moisture in the propane. The moisture will freeze, build up and block the vent. The possibility of freeze up is greatly reduced with the two-stage regulator.

To Prevent Freeze Up:

- ◆ Ensure the propane tank is totally free of moisture prior to filling.
- ◆ Ensure the tank is not overfilled.
- ◆ Keep the valve closed when the tank is empty.

If A Freeze Up Occurs:

- ◆ Have an propane distributor purge the tank.
- ◆ Have the propane distributor inject methyl alcohol in the tank.

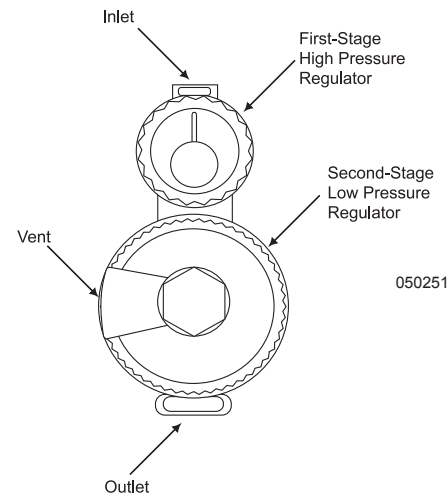



Damage to the regulator can occur when the tank is overfilled. The regulator is designed to work with vapor only. This is why the tank is filled to only 80% of its liquid capacity. The other 20% allows for vaporization of the liquid. The primary vapor valve is located in the vapor section of the tank. In an overfilled tank, liquefied petroleum can fill the regulator. Vaporizing liquid can freeze the diaphragm. High tank pressure on a frozen diaphragm can cause a rupture and result in erratic pressure regulation. This is why it is important to have the propane pressure checked for proper pressure and accurate regulation during appliance operation. Erratic pressure regulation dramatically affects refrigerator operation on propane.

WARNING

DO NOT attempt to adjust the regulator. Adjustments require special equipment. Failure to follow these instructions may result in a fire or explosion, and can cause severe personal injury or death. DO NOT operate propane appliances until the propane pressure is checked and a leak down test is performed!

Manometers:

The manometer is the best way to accurately determine propane pressure. There are two different styles of manometers: Gauge and U-tube. Propane pressure is measured in Inches of Water Column. This is the amount of pressure applied to one side of a U-shaped tube half filled with water. The amount of pressure needed to raise the column of water 11" represents 11 Inches of Water Column.

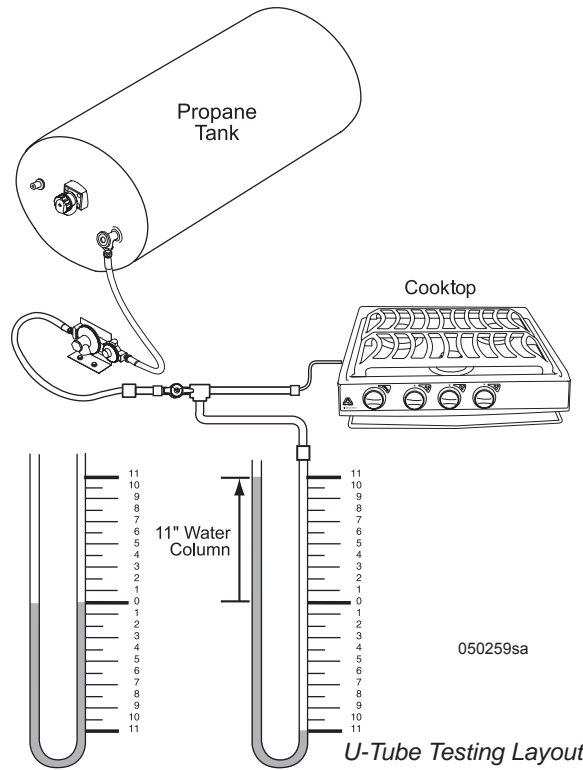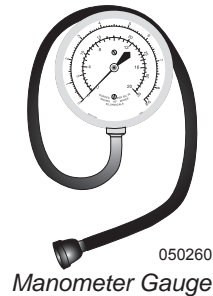

TIP

Attach the manometer gauge to the accessory hookup line to avoid loosening any interior propane line connections.

PROPANE HOSE INSPECTION

The hose manufacturer suggests that a flexible propane supply hose undergo regular inspection. As a guideline, it is recommended that all flexible propane lines connecting the slide-out, appliances and tanks be inspected in the spring and fall of each year by a qualified RV technician.

Inspection tips:

Hose strength is controlled by the plies of reinforcement. Damage in this area cannot be tolerated. It is important that if a damaged propane hose is found, the source of the damage be determined and corrected prior to the replacement. Small cuts, nicks, or gouges that do not go completely through the cover are not cause for replacement of the hose. Inspection should be performed when the hose is not under pressure.

NOTE

Pricking of the cover in the manufacture of this type of hose is common and necessary for satisfactory hose performance. Consequently, the uniformly pricked cover should not be viewed with alarm.

Cause for hose replacement:

- ◆ Damage to the textile reinforcement or wire braid; wire braid reinforced hose, which has been kinked or flattened so as to permanently deform the wire braid in the un-pressurized state.
- ◆ Blistering or loose outer cover.
- ◆ Slippage; evidenced by the misalignment of the hose and coupling and/or the scored or exposed area where slippage has occurred.

CAUTION

Only a qualified RV service technician should complete replacement of propane components.

Additional suggested maintenance:

After performing extensive testing the manufacturer of the flexible propane supply hoses has determined that the hoses be replaced every ten (10) years as the failure rate may increase after this period of time. The motorhome manufacturer recommends following this guideline to assure continued safety and dependable use.

PROPANE DISTRIBUTION LINES

A primary manifold black steel pipe running throughout the motorhome distributes propane to secondary lines. All secondary lines leading to propane appliances are made of copper tubing with flared fittings. It is recommended that propane distribution work be performed by an authorized dealer or an authorized service technician.

INSPECTION

Inspect the rubber flexible lines twice a year for abrasions, tears, kinks or other signs of damage.

If a propane leak is suspected, have the system inspected and repaired by a qualified service technician as soon as possible.

PROPANE CONSUMPTION

Each gallon of propane produces 91,502 BTUs of heat. One 27 gallon tank produces two million BTU's. Total consumption depends on the rate of usage by each appliance and the operating time. The cooktop typically uses the most propane.

Determine Fuel Consumption:

To determine approximately how many hours an appliance will operate on one gallon of propane, use the following formula:

- ◆ Propane appliances are rated in Input BTU (British Thermal Units). The rating is usually stamped or printed on a tag affixed to the appliance. For example: the Input rating of the appliance is 10,000 BTUs.
- ◆ One gallon of propane produces 91,502 BTUs.
- ◆ Divide the amount of BTUs of one gallon of propane (91,502) by the rating on the appliance in this example 10,000. Net continuous operation time for one gallon of propane for this appliance would be approximately 9.2 hours.

The above formula can be useful when trying to determine the approximate length of time a tank of propane will last. Generally, propane appliances do not continuously operate. An example would be the typical cycling of the refrigerator.


Determining how long a tank of Propane will last:

- ◆ Combine the BTU input totals of all appliances and the approximate length of time these appliances operate per day.
- ◆ Multiply the number of liquid gallons in the propane tank by 91,502.
- ◆ Divide the total of BTUs of the Propane tank by the total number of BTUs the appliances consume, equals the approximate number of hours of operation before refueling.

Typical Appliance BTU Ratings

Cooktop
Large - 9,500 BTU
Small - 6,500 BTU

Refrigerator (Norcold)
4-door - 2,200 BTU

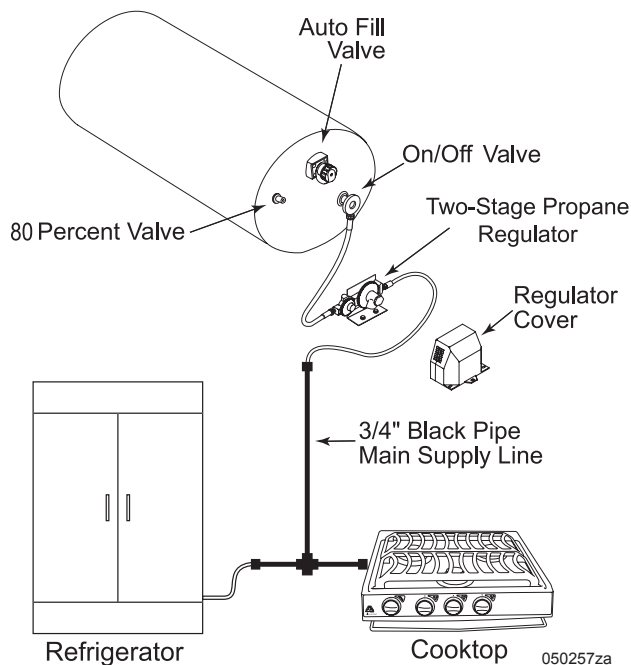

WARNING

Propane is highly volatile and extremely explosive. DO NOT use matches or open flame to test for leaks. Use only approved propane leak testing solution to test for leaks. Unapproved solutions can damage copper tubing and brass fittings. DO NOT attempt to adjust the propane regulator without the use of proper equipment. Improper propane regulator adjustment will affect the performance of propane operated appliances. Incorrect flame or explosion can occur. Only qualified personnel should perform any maintenance or repair to the propane system.

PROPANE SAFETY TIPS

Propane is one of the safest and most reliable fuels available on the market when handled properly. Propane, however, does have a great explosive potential if handled improperly. Danger is minimized by becoming familiar with and following a few safety precautions, and by learning how to properly operate propane appliances. Use of propane requires the responsibility to enforce extra safety measures.

The motorhome is equipped with many propane operated appliances because it is a convenient and efficient source of fuel. Propane appliances must be operated and maintained in accordance with the product manufacturer's instructions.

The National Propane Gas Association (NPGA) has a special service program offered called GAS® (Gas Appliance System) Check. The GAS® Check program is aimed at educating users about the convenience of propane with safety and peace of mind. For information on the **NPGA Gas® Check program**, call **(202) 466-7200** or visit **www.npga.org**.

Maintenance and Safety Tips for the Propane Refrigerator and Furnace:

- ◆ Have the refrigerator and furnace systems inspected annually by an authorized service center.
- ◆ Have the venting system checked for blockage before using the refrigerator or furnace for the first time each season. Insects may have built nests that will obstruct flow.

- ◆ At the first indication of incomplete combustion (yellow flame instead of a blue flame or soot is present) contact a service technician. Improper combustion can cause Carbon Monoxide buildup, which is potentially fatal.

Maintenance and Safety Tips for the Propane Cooktop:

- ◆ Burner flame should be a blue color, which indicates complete combustion. If not, have the cooktop serviced by a qualified technician.
- ◆ **DO NOT** cover the oven bottom with foil. Air circulation will be restricted.
- ◆ **DO NOT** use propane cooktop or ovens for heating purposes.
- ◆ Ensure children understand never to turn or play with the knobs on the front of the propane cooktop.

Maintenance and Safety Tips for the Propane Water Heater:

- ◆ Have the water heater venting system inspected annually or before first use of the season.
- ◆ Keep flammable substances away from the water heater. **DO NOT** store items close to it as this may block the airflow the water heater needs to operate completely.
- ◆ At the first indication of incomplete combustion (yellow flame instead of a blue flame or soot is present) call a service technician immediately. Improper combustion can cause Carbon Monoxide buildup, which is potentially fatal.

| | | | |
|--|------------|---|------------|
| HOUSE ELECTRICAL - INTRODUCTION | 158 | AUTOMATIC RESET CIRCUIT BREAKER..... | 171 |
| BATTERY DISCONNECT | 159 | FUSES & CIRCUIT BREAKERS – 12 VOLT DC .. | 171 |
| House..... | 159 | BATTERIES - HOUSE | 172 |
| BATTERY CUTOUT SWITCH..... | 159 | Battery Slide-Out Tray (Optional)..... | 172 |
| SHORE POWER HOOK-UP | 159 | Battery Maintenance | 173 |
| Manual Shore Cord Reel..... | 161 | Testing the Battery | 173 |
| Power Shore Cord Reel (Optional) | 161 | Battery Charge Time & Consumption Rate .. | 174 |
| TRANSFER SWITCH | 162 | SOLAR PANEL (OPTIONAL) | 175 |
| GENERATOR - 120 AC DIESEL..... | 162 | Charge Controller | 175 |
| Pre-Start Checks..... | 162 | Inspection and Maintenance | 176 |
| Starting the Generator | 163 | Solar Panel Care..... | 176 |
| Stopping the Generator..... | 163 | LIGHTS..... | 177 |
| Powering the Equipment..... | 163 | Incandescent | 177 |
| Generator Fuel..... | 164 | Interior Halogen..... | 177 |
| Resetting the Circuit Breaker..... | 164 | Map Light | 177 |
| Generator Exercise | 164 | ELECTRICAL LAYOUT | 178 |
| INVERTER | 165 | | |
| Providing AC Power with Inverter..... | 165 | | |
| Battery Charging with the Inverter..... | 165 | | |
| Auto Generator Start (Optional) | 166 | | |
| Remote Sensor | 166 | | |
| Factory Default Settings | 166 | | |
| Battery Temperature Sensor | 166 | | |
| DISTRIBUTION PANEL (50 AMP)..... | 167 | | |
| House 120/240 Volt AC Panel | 167 | | |
| Energy Management System | 167 | | |
| Circuit Breaker | 169 | | |
| GFCI Breakers & Outlets | 169 | | |
| DISTRIBUTION PANEL..... | 170 | | |
| House 12 Volt DC..... | 170 | | |



HOUSE ELECTRICAL - INTRODUCTION

This section contains guidelines, procedures and information to assist in understanding the electrical system and operation of various components. Refer to the OEM manuals included in the Owner's Information File box for their respective, in-depth, individual component operating instructions.

General Overview:

The motorhome can utilize various sources of electrical power: shore power connection, generator, inverter, solar panel (optional), chassis and house batteries. All of these electrical power sources, while independent of each other, can be combined in a variety of ways to provide a highly efficient electrical operating system. Two types of electrical systems are used: 120/240 Volt AC and 12 Volt DC.

The motorhome 120/240 Volt AC system can be operated from three different power sources: shore power, generator or inverter. Shore power is the most efficient and should be used whenever possible. The generator can be used when shore power is unavailable. The inverter supplies silent A/C power using the house batteries of the motorhome. The inverter supplies AC power to the sub-panel. However, the inverter AC power output is limited and should be used sparingly to conserve house battery power.

Two different sources supply the main AC circuit breaker panel with power: the shore power cord or the generator. The power source used is automatically selected by a switching device known as a transfer switch. The inverter supplies AC power to the sub-panel.

WARNING

The electrical system is engineered and tested for safety. Circuit breakers and fuses protect the electrical circuits from overloading. When planning modifications or additions to the electrical system, ensure safety of the electrical system. Please note that any modifications may void the warranty.

WARNING

Water is electrically conductive. DO NOT use any electrically powered item or outlet that may be exposed to a water source. Such use can result in a serious shock causing injury or death.

12 Volt DC System:

The motorhome has two 12 Volt DC systems: chassis and house. These two systems, for the most part, are separate from one another. The house system does not operate engine functions; the engine system does not operate house functions. However, within the two systems there are some inner connections. *For example:* While the motorhome is driven the alternator on the engine will charge the house batteries. Likewise, while the motorhome is plugged into shore power, or the generator is running, the engine batteries are being charged. Each system will supply 12 Volt DC power to the 12 Volt DC distribution panels.

Chassis and House System:

The chassis and house systems have their own sets of batteries. The chassis batteries supply 12 Volt DC power to the front distribution panel. This panel contains mostly engine system circuits and wiring such as headlights, taillight, dashboard functions, gauges, etc.

The house batteries supply 12 Volt DC power to the distribution panel. This panel contains fuses for the house interior lighting and appliances.

Become familiar with these panels and the items they operate.

Maintenance:

With all the technological advancements taking place in the past several years manufacturers have now incorporated electronics into these systems. It is important to keep the 12 Volt DC systems in good working order. These systems, with their incorporated electronics, are voltage sensitive. Some items can be damaged if the DC voltage is not maintained within the designed specifications.

Why Batteries are Important:

A majority of the lighting and appliances are designed to operate from 12 Volt DC (direct current) power. This is why the batteries play such an important role in the function of the motorhome. There are exceptions with appliances such as the microwave or television; however, indirectly they still operate from 12 Volt DC power, as they can be operated from the inverter.

The chassis functions (engine, transmission, dash air, etc.) are also 12 Volt DC.

Shore Power:

The motorhome is equipped with a shore power cord to connect the motorhome to outside electrical services. Shore power service is the most efficient source of electrical power. The plug end of the shore power cord is 50 Amp 120/ 240 Volt AC. When this type of power source is not available, electrical adapters are required to allow proper and safe connection to the electrical service supply.

NOTE

When 50 Amp shore service is not available, care will have to be used when operating the appliances and using the outlets to avoid overloading the shore power service.

Generator:


The generator can be selected for use when shore power is unavailable. The maximum amount of generator output power, measured in watts, is calculated at an elevation of 500' above sea level. This figure decreases slightly at higher altitude. Ambient temperature also effects total maximum output. The amount of AC electrical load applied to the generator determines fuel consumption.

Inverter:

The inverter is an auxiliary 120 Volt AC power source that inverts 12 Volt DC house battery power to 120 Volts AC. This device has limited AC power output, measured in watts, and operates only selected appliances and outlets. The inverter also converts 120 Volts AC power, supplied from either shore power or the generator, to 12 Volts DC power, to recharge the batteries. When dry camping, the inverter may be used to supply power to selected outlets.

BATTERY DISCONNECT House


The house battery disconnect switch turns the house battery power supply on or off by disconnecting 12 Volt DC power to the following items: inverter, interior house fuse panel and exterior house fuse panel. Turn the house battery disconnect switch off when the motorhome is going to be stored for more than 48 hours or before performing electrical maintenance. If possible, leave the motorhome plugged into an outside electrical service with the house battery disconnect switch on to help prevent the possibility of dead batteries. Use of the house battery disconnect switch will not turn off all DC electrical items or other parasitic loads present on the house battery.

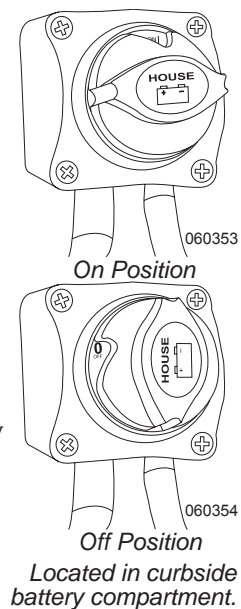

Located in curbside battery compartment.

BATTERY CUTOUT SWITCH

The battery cutout switch controls 12 Volt DC power to the house fuse panels. When the switch is activated, power is supplied to all the interior DC lighting and DC operated appliances. Some appliances require both DC and AC power to operate, such as the roof air conditioner. This switch is helpful when dry camping to conserve house battery power. Refrigerator and inverter operation are unaffected by the operation of this switch. When turned off, this switch will not stop all

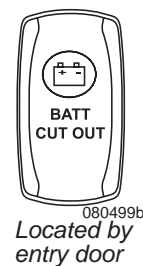

Located by entry door


parasitic loads and therefore is not a substitute for the house battery disconnect switch.

CAUTION

To avoid flash damage to electrical contacts, turn off the interior lighting before activating the battery cut-off switch.

SHORE POWER HOOK-UP

The power requirement for the motorhome is 50 Amp 120/240 Volt AC single phase. The motorhome can be operated from 30 Amp 120 Volt AC but with limited capacity. If 50 Amp shore power service is available, connect the supplied shore power cord. If less than 50 Amp service is available, electrical adapters will be required and power consumption must be reduced to avoid tripping the shore power breaker.

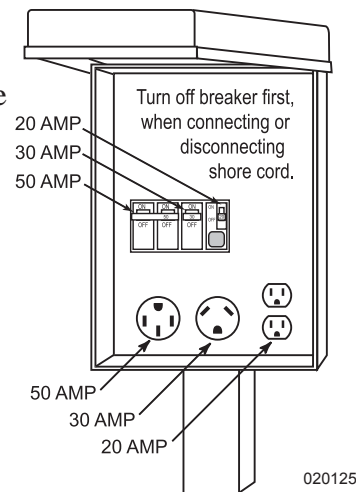**CAUTION**

Avoid flash damage to the electrical system contacts. Before plugging the motorhome into shore power, starting the generator or using the inverter make sure all the appliances are off.

WARNING



Keep fingers away from metal contacts of the shore plug end. **DO NOT** stand in water when making electrical connections. Serious electrical shock and personal injury can occur. To avoid the risk of an electrical shock, turn the circuit breaker off for the power supply outlet before making the shore power connection.

CAUTION

DO NOT remove cover from shore power supply to troubleshoot electricity to the motorhome. Serious personal injury or death may occur. Inform the park manager if there is no power to the motorhome. It is the park manager's responsibility to fix problems with the shore power pedestal.

Plugging in the Shore Cord:

- ◆ Located in a rear roadside compartment is the shore power cord.
- ◆ Unscrew the deck plate and extend a sufficient amount of cable through the deck plate to reach the socket.
- ◆ Turn all appliances off.
- ◆ Check the shore power source amperage. If 50 Amp service is not available, install the proper electrical adapter(s) to the cord.
- ◆ Always turn OFF the shore power breaker at the power supply before connecting or disconnecting the shore cord to prevent accidental shock or flashing of electrical contacts.
- ◆ Align cord end with socket terminals. Push cord all the way into socket so the cord blades do not show.

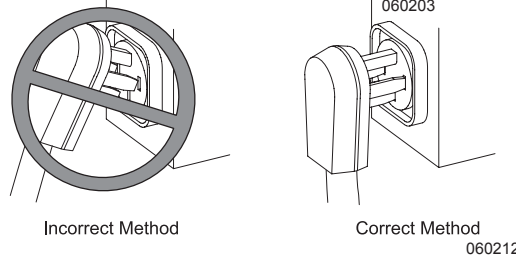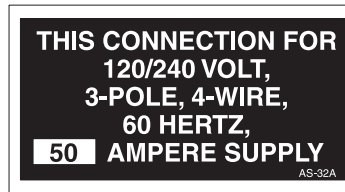

- ◆ After the connection is made, turn the shore power breaker on. The transfer switch should make an audible click.

Disconnecting the Shore Cord:

- ◆ Turn off all AC appliances.
- ◆ Turn off the shore power breaker to prevent accidental shock and flashing of electrical contacts when disconnecting.
- ◆ Grasp housing of electrical cord. Without touching electrical contacts, work cord out and away from socket.
- ◆ Straighten, clean and manually rewind the cord. Store in compartment.
- ◆ If equipped, press the power cord switch to retract cord. Assist and guide cord during retraction. Store in compartment.

When Hooked to 50 Amps:

After verifying proper voltage, wait approximately one minute for the inverter to stabilize charging of the batteries before starting air conditioners or other large AC loads.

When Hooked to 30 Amps:

If 50 Amp service is not available, wait approximately one hour before operating electric appliances. Use caution when operating appliances to avoid overloading the supplied shore service breaker. Operate appliances and outlets in sequence rather than all at the same time.


Power Supply:

Different amperage supplies vary greatly in the amount of available current.


- ◆ The continuous amount of current through a breaker or fuse is only 80% of its rated capacity.
- ◆ 50 Amp 240 Volt AC shore power service consists of two power supply conductors (120 Volts AC each), a neutral and a safety ground. The 50 Amp breaker simultaneously limits each power supply conductor to no more than a short-term maximum of 50 Amps for each conductor. The 50 Amp 240 Volt service actually provides 80 continuous amps.
- ◆ Use care when hooked to anything less than 50 Amp shore services. Shore power service less than 50 Amps consists of one power supply conductor, a neutral and a safety ground; 30 Amp shore service is limited to 24 continuous Amps; 20 Amp shore service is limited to 16 continuous Amps.

Electrical Adapters:

There are different electrical adapters to suit a variety of needs. Only UL approved adapters should be used. The most common adapter is a 50-30 Amp adapter. This type of connector adapts the 50 Amp shore cord to a 30 Amp shore power outlet. Always install the adapter to the cord prior to making the connection to the outlet.

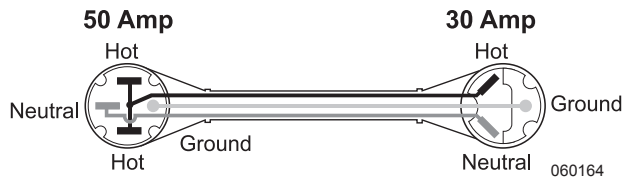

Another common adapter is a 30 to 20 Amp adapter. This type of connector adapts the 30 Amp shore cord to a 20 Amp shore power outlet. Always install the adapter to the cord prior to making the connection to the outlet.

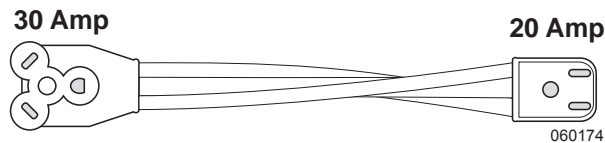

CAUTION


If shore power service is limited to 15 or 20 Amps, use of light duty extension cords and electrical adapters will create a voltage loss through the cord and at each electrical connection. Line voltage loss and the resistance at each electrical connection can be a hazardous combination. Damage to sensitive electronic equipment may result!

WARNING

Avoid the risk of electrical shock or component damage by disconnecting from shore power during electrical storm activity. Use the inverter or start the generator if AC power is needed.

NOTE

Three types of shore power outlets most commonly used are shown in the illustration.

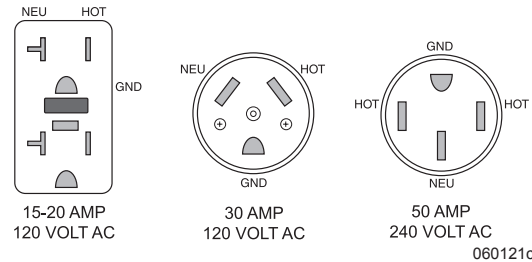

WARNING

Before working on the electrical system, disconnect from shore power and turn off the inverter. Disconnect the negative 12 Volt DC battery cables at the batteries. Remove rings, metal watch bands and other metal jewelry before working around batteries and connectors. Use caution when working with metal tools. If the tool contacts a battery terminal or metal connected to it, a short circuit could occur causing personal injury, explosion or fire.


Manual Shore Cord Reel

The cord reel will coil and store the shore cord. Use the hand crank to retract the shore cord. To extend cord, pull out. Extend only as much shore cord as required to reach the outlet. The cord should not be taut, but slightly slack.

Maintenance:


Kinks may form in the shore cord when only a short section is frequently used.

- ♦ Routinely extend cord the full distance.
- ♦ Straighten the cord on the ground to relieve kinking.
- ♦ It is important the cord remains clean. Accumulated dust and dirt on the cord may cause difficulty in retracting the cord.
- ♦ After cleaning and straightening, manually retract the cord.
- ♦ Check cord reel at least once each year for maintenance.

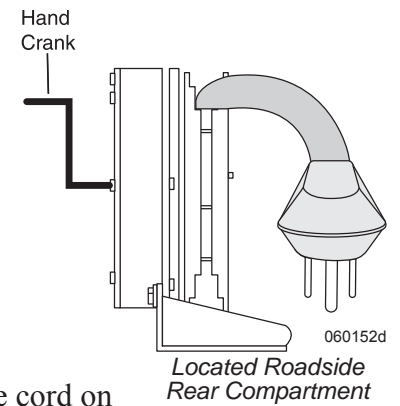

Power Shore Cord Reel (Optional)

The power shore cord reel is a 12 Volt DC motorized assembly designed to mechanically coil and store the shore cord. The power switch operates the 12 Volt DC motor to retract the cord.

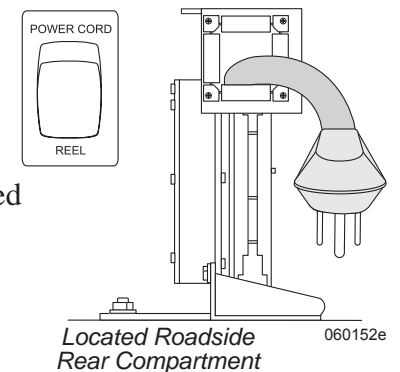

Press the power switch to retract the cord. Assist the cord, following the direction of travel. When the cord is connected to shore power, the cord should be slightly slack.

Maintenance:

Kinks may form in the shore cord when only a short section is frequently used.


- ◆ Routinely extend cord the full distance.
- ◆ Straighten the cord on the ground to relieve kinking.
- ◆ It is important the cord remains clean. Accumulated dust and dirt on the cord may cause difficulty in retracting the cord.
- ◆ After cleaning and straightening, allow the cord reel to retract the cord.
- ◆ Check all AC and DC wiring at least once each year to ensure corrosion-free, tight connections.
- ◆ Check the cover on the power switch to confirm it is free of cracks or fractures.

TRANSFER SWITCH

The transfer switch will automatically transfer AC power from the shore power cord or generator through the transfer switch to the 120/240 Volt AC breaker panel.

In the event both shore and generator power are available, generator power will override shore power after a 30 second delay. This allows the generator time to warm up before applying an AC load.


Once the generator is shut down, shore power will be available after a two second delay.

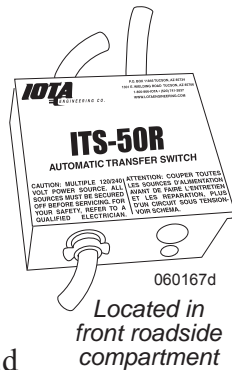

Located in front roadside compartment

CAUTION

The transfer switch does not have a surge protection or high/low voltage cutout.

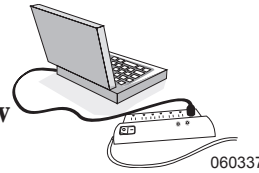

A surge protector is recommended to protect sensitive equipment.

NOTE

The shore cord is NOT electrically connected to the generator. When the generator is operating, the electrical contacts of the shore cord are not electrically energized.

CAUTION

To prevent damage to transfer switch contacts, discontinue appliance operation and turn off auxiliary electrical loads operated by outlets before connecting/disconnecting shore power or starting/stopping the generator.

GENERATOR - 120 AC DIESEL

The generator is located in the front compartment of the motorhome. To open the compartment, pull and release the manual locking mechanism handle located within the license plate access. To close the generator compartment, push the door closed until the slide mechanism latches.


INFORMATION

For detailed operating instructions and information refer to the generator OEM manual.

Generator can be started from these locations:

- ◆ The generator remote switch on the dash.

- ◆ The generator switch located on the generator.
- ◆ The generator switch on the hallway systems control panel.
- ◆ If applicable, the inverter control Auto Gen start feature.

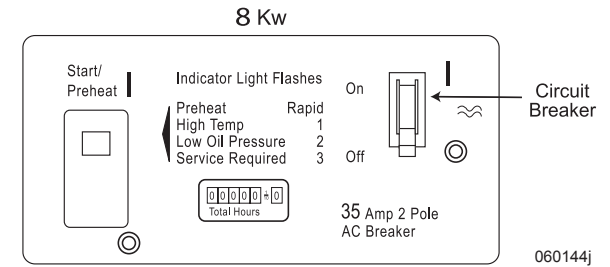**Pre-Start Checks**

Prior to the first start of the day, perform a general inspection including oil and coolant levels. Keep a maintenance log on number of hours in operation since the last service. Perform any service or maintenance that may be due.

8.0 Kw

| SERVICE INFORMATION | |
|---|----------------------|
| Refer to operator's manual for maintenance specifications and adjustments. | |
| Air Cleaner | - 140-2897 |
| Oil Filter | - 122-0833 |
| Fuel Filter | - 149-2513 |
| Oil Capacity | - 3 Qts w/oil filter |
| API Designation | - CE |
| Temp | SAE Viscosity |
| 5° - 120 F | 15W-40 |
| (-13° F) - 68° F | 10W-30 |
| (-40° F) - 68° F | 5W-30 |
| If service/parts are needed the Onan distributor can be located in the yellow pages under Generators-Electric. In the USA or Canada call 1-800-889-Onan DC Fuss & Radiator Cap Under Cover. | |


020159o

Before Starting the Generator:

- ◆ Clear people and animals from hazards of electrical shock and moving parts.
- ◆ All appliances and other large AC electrical loads must be off.

CAUTION

Allow the generator to cool before removing the coolant fill cap.

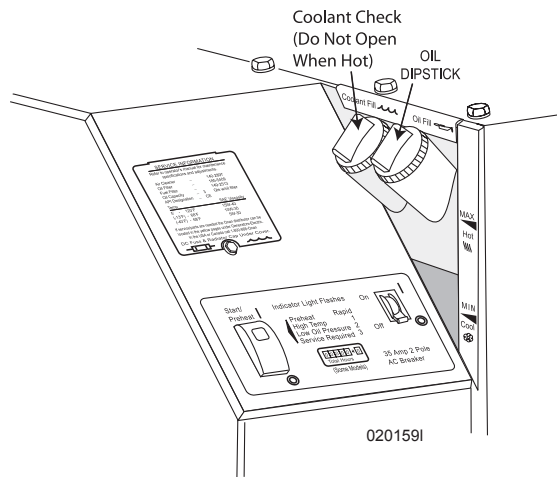**WARNING**


If applicable, disable the Auto Gen Start feature before servicing the generator.

NOTE

The generator may require priming. To prime, hold control switch in the OFF position. Repeat if necessary. The diesel generator fuel pick-up tube is cut to approximately 1/4 tank so as not to run the main engine out of fuel.

Starting the Generator

For generator operation the house battery disconnect switch must be on. Push and hold the control switch in START position until the generator starts. Release switch. On diesel models the control switch may flash up to 15 seconds, indicating engine preheat.

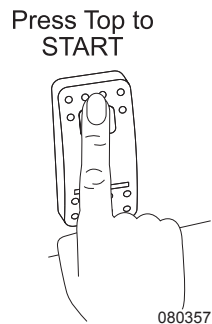**WARNING**

DO NOT crank the engine more than 30 seconds at any one time. Wait at least two minutes before resuming. If the generator fails to start refer to the OEM manual. Excessive cranking can overheat and damage the starter motor.

WARNING

DO NOT block the exhaust pipe or put the motorhome where the exhaust may accumulate outside, underneath, or inside the motorhome or nearby vehicles. Operate the generator only when there is a safe dispersion of exhaust. Monitor outside conditions to ensure the exhaust continues to disperse safely. When the motorhome is parked, position the dash air conditioner vent control in the OFF position to prevent exhaust gases from entering the motorhome. The engine exhaust contains carbon monoxide, which is poisonous and can cause unconsciousness and/or death. Inspect the exhaust system before starting the generator.

WARNING

DO NOT allow the hot exhaust to come into contact high grass when parked. It can be a fire hazard. The hot exhaust pipe or hot exhaust gases can ignite the grass.


WARNING

Exhaust extensions add weight to the generator exhaust system. Exhaust piping or manifold damage can result, allowing carbon monoxide to accumulate or leak into the motorhome.

Stopping the Generator

Turn off the appliances and disconnect other AC loads being used. Allow the generator to run unloaded for at least one minute before shutdown to allow the engine to cool. Momentarily push the control switch to the STOP position. Release the switch.

Press Bottom to STOP

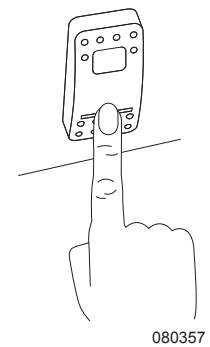**NOTE**

The generator requires only a momentary stop signal.

Powering the Equipment

The AC output of the generator powers the motorhome air conditioners, the AC Inverter and all appliances and items plugged into the electrical outlets of the motorhome.

The number of electrical appliances that can be operated at any given time depends upon how much power is available from the generator. If the generator is overloaded or a short circuit causes over current, either the generator will shut down or the circuit breaker will trip. If power consumption, in total, exceeds the generator power output, compensation for temperature and elevation may be necessary. Operate appliances in sequence, rather than all at the same time.

NOTE

The generator may shut down when loaded nearly to full power and an air conditioner (or other large motor load) cycles on. Briefly during start up an electric motor can draw up to three times the rated power. For this reason it may be necessary to operate some appliances in sequence when air conditioners or other large motor loads are on.

Compensation for temperature and elevation may also be necessary. The generator's maximum output is rated at 500 feet above sea level. Beyond this point, the generator will lose approximately 3.5% of its rated power for every 1000 feet gained in elevation. High and low temperatures can also affect generator output. Power decreases 1% for every 10°F above 85°F. Counteract these effects by operating appliances in sequence rather than at the same time.

INFORMATION

The generator may shut down for reasons other than an overload. If a blink code appears on the control switch, refer to the OEM manual to obtain an explanation for the code.

Generator Fuel

There is always a possibility fuel may be contaminated. Diesel fuel may contain water or a microbe growth (black slime). Any contamination of fuel will greatly reduce the total output of the generator, and may cause erratic AC output.

NOTE

The motorhome manufacturer does not cover damage to the generator caused by fuel contamination, or to appliances due to erratic AC voltage.

| Average Fuel Consumption | Diesel 8,000 Watts (gal./hrs.) |
|--------------------------|--------------------------------|
| No load | 0.13 |
| Half Load | 0.49 |
| Full Load | 1.02 |

Resetting the Circuit Breaker


If a circuit breaker trips in the main AC breaker panel, or on the generator control panel, there may be a short circuit or too much load.

NOTE

The generator will continue to run after a circuit breaker trips.

If a circuit breaker trips, disconnect or turn off as many loads as possible. To reset the circuit breaker, switch the circuit breaker to OFF. Then switch back to ON to reconnect the circuit.

If the circuit breaker immediately trips, the electrical distribution system has a short or the circuit breaker is faulty. Call a qualified electrician. If the circuit breaker does not trip, reconnect a combination of loads that will not overload the generator or cause the circuit breaker to trip again. Remember to compensate for elevation and temperature changes when reconnecting loads.

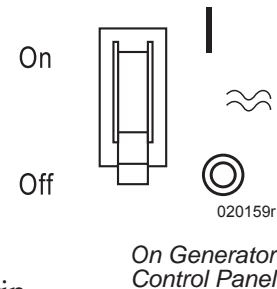**CAUTION**

DO NOT continue to reset breaker if circuit breaker continues to trip after reconnection. The appliance or load may have a short. Have the problem corrected immediately before resuming operation.

Generator Exercise

If use of the generator is infrequent, exercise the generator once a month by operating it at approximately half the maximum rated output for two hours. This exercise will help promote better starting, more reliable operation and longer engine life. This procedure drives off moisture, lubricates the internal engine parts, replaces the old stale fuel with a fresh supply, and also promotes removing oxides from the electrical switches and contacts.


NOTE

Avoid short run periods of the generator. Run the generator set under a load for a minimum of one-half hour.

INVERTER

The inverter changes DC battery power to AC electrical power, and charges the house and chassis


batteries when hooked to shore power or operating from the generator. Use the inverter to supply AC power when shore power is not available and the generator is not going to be used as a secondary AC power source. The inverter supplies AC power to most outlets and appliances. Remember that using the inverter quickly consumes house battery power. Turn off the inverter when not in use to conserve house battery power. The remote panel is used to change the variable settings.

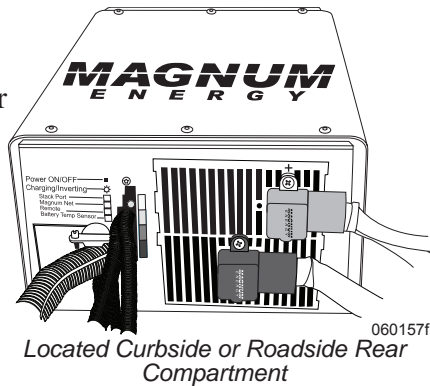

INFORMATION

Refer to the inverter OEM manual for detailed information and operating instructions.

Providing AC Power with Inverter

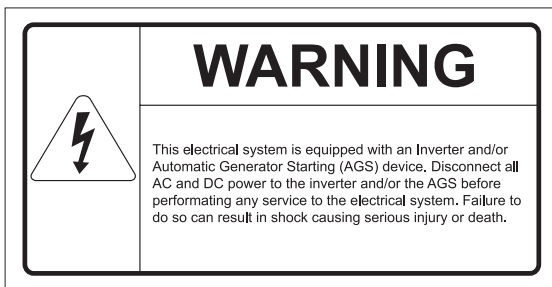

100218

To turn the inverter on:


Press the INVERTER ON/OFF switch at the remote panel. If the inverter doesn't sense AC power from the generator or shore power, it will provide AC power from the motorhome batteries to most outlets and appliances. If the generator is started or the motorhome is connected to shore power, the inverter will automatically begin charging.

Battery Charging with the Inverter

The inverter will automatically begin charging when AC power is supplied from shore service or the generator. The inverter uses a three-stage charge cycle to charge the batteries. The charger may be turned off, if desired.

To turn the charger on and off:

- ◆ Press the switch marked CHARGER ON/OFF on the remote panel.

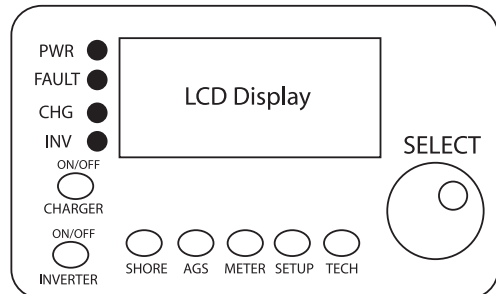

Remote Panel

060254

Shore Setting:

The Shore setting in the remote panel adjusts the amount of AC current the battery charger can use. If hooked to less than 50 amp service, select the proper Shore setting to help prevent combined AC loads such as the roof air conditioner and the charger from overloading limited shore power service.

To Adjust Shore Power Setting:

- ◆ Press the Shore button on the inverter remote.
- ◆ Turn the knob on the inverter remote left or right to scroll through shore setting options.
- ◆ Press the knob to select. An arrow will appear next to the selected setting.


NOTE

Settings 20 Amp and below limits battery charge capacity and may hamper ability to efficiently operate DC electrical loads. Remember to reset to higher amperage when available.


| Shore Setting | AC Power |
|---------------|--|
| 50 Amp | When hooked to 50 Amp Shore Service. |
| 30 Amp | When hooked to 30 Amp shore service. |
| 20 Amp | When hooked to 20 Amp shore service. |
| 10 Amp | Used when shore service is severely limited or experiencing shore power overload. |
| 5 Amp | Minimum charge capacity setting. Used when shore service is severely limited or experiencing shore power overload. |

Inverter three-stage charging cycle:

- ◆ **Bulk Charge Cycle:** Brings the DC voltage up high, initially between 14.2 - 14.6 Volts DC. The length of time the inverter is in Bulk Charge depends on the state of charge of the batteries.
- ◆ **Absorb Cycle:** Absorb Cycle battery voltage is the same as the Bulk Charge Cycle, between 14.2 - 14.6 Volts DC. Length of the Absorb Cycle is a timed event determined by the inverter.
- ◆ **Float Charge Cycle:** Charge voltage is generally around 13.3 - 13.7 Volts DC. Approximately 80% of the charging cycle has been completed by this time.

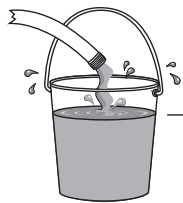

80%
Bulk Charge
Water (charger) on full until bucket (battery) is 80% full.

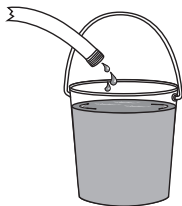


90%
Absorb Charge
Water (charger) slows until bucket (battery) is 90% full.



100%
Float Charge
Water (charger) slowly trickles into bucket (battery) until 100% full. Water (charger) will adjust flow to maintain level.

Hose = Inverter in Charge Mode
Bucket = Battery

06023b

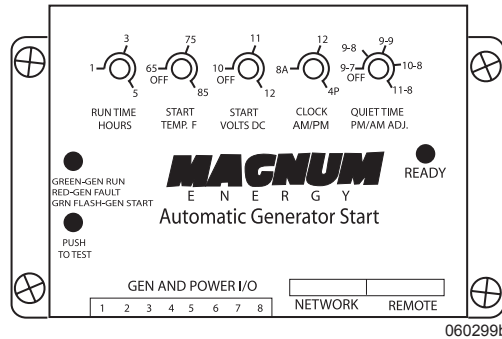Auto Generator Start (Optional)

AGS Controller: Typically Located Curbside Rear

The Auto Gen Start (AGS) allows the inverter remote control to start the generator when battery voltage or interior motorhome temperature reaches a preset point. The generator run time, battery voltage and interior temperature settings for the AGS function are selected with the AGS controller.

INFORMATION

Refer to the OEM manual for detailed operating instructions.

To Enable AGS:


- ◆ Press the AGS button on the inverter remote panel.
- ◆ Use the select knob to scroll through the AGS menu options until “AutoGenSt Enabl” appears.
- ◆ Press the select knob to activate the AGS.

To Disable AGS:

- ◆ Press the AGS button on the inverter remote panel.
- ◆ Use the select knob to scroll through the AGS menu options until “AutoGenSt OFF” appears.
- ◆ Press the select knob to deactivate the AGS.

Remote Sensor

A remote temperature sensor is located in the bedroom area to ensure accurate temperature control. The remote sensor is used only with the Automatic Generator Start (AGS) option.

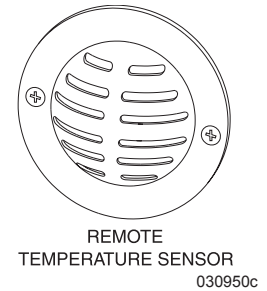

REMOTE
TEMPERATURE SENSOR
030950c

Factory Default Settings

| Function | Default |
|--------------------|------------------|
| Search | 5 Watts |
| Low Battery Cutoff | 11 Volts DC |
| Battery Bank | 400 AH |
| Battery Type | Liquid Lead Acid |
| Charge Rate | 80 % |
| Contrast | 75 % |

NOTE


The inverter will charge the batteries with AC power applied regardless of remote status.

Battery Temperature Sensor

A Battery Temperature Sensor (BTS) is affixed to one of the house battery terminals to measure battery temperature and send that information to the inverter. When battery temperature rises, the inverter will decrease charge voltage to prevent boiling the batteries. When battery temperature cools, the inverter will raise charge voltage. Voltage compensation with temperature variation is necessary to keep charge voltage at optimum values. If the BTS cord is unplugged from the inverter, the inverter will use a temperature default setting of 77° F/25° C as a reference point.

DISTRIBUTION PANEL (50 AMP) House 120/240 Volt AC Panel

The main 240 Volt AC panel receives power from the transfer switch, which is supplied by either shore power or the generator. The AC power is supplied to the 50 Amp main breaker first. Then the power is supplied to the individual branch circuit breakers. The panel label describes the breaker layout and the item, outlet or appliance to which they pertain.

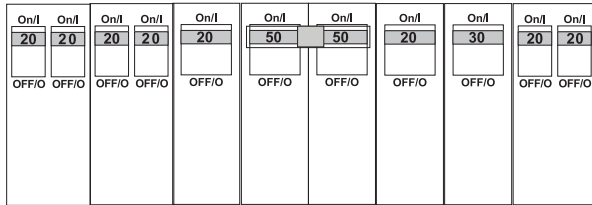

| LINE 1 | | | | | | LINE 2 | | | | | | | |
|--------------|------------|---------------|---------|----------------|-----------|--------|---|--------------|----------|--------------|--------------|---|---|
| 6 | 5 | 4 | 3 | 2 | 1 | M | M | 1 | 2 | 3 | 4 | 5 | 6 |
| CENT VAC OPT | WTR HEATER | BLOCK HTR OPT | BEDROOM | FIRE PLACE OPT | FRONT A/C | MAIN | | REAR A/C OPT | INVERTER | WASH/DRY OPT | REFRIGERATOR | | |

060286qc

Typical Distribution Panel: Located in the roadside overhead cockpit cabinet. Refer to label on the panel for circuit assignment.


NOTE
Actual Distribution Panel will vary with options or changes to the motorhome.

WARNING

The 120/240 Volt AC panel contains high voltage which can cause serious injury or death. Before beginning any work or testing procedures involving the electric panels or any of the branch circuits, be sure the motorhome is unplugged from shore power, the generator is not running and the inverter is in the off position. Certain testing procedures can require the AC power to be on. Only qualified personnel or personnel with electrical backgrounds should attempt any testing procedures.

Energy Management System

The 50 Amp Smart EMS (Energy Management System) consists of two elements: the display panel and the distribution panel. The distribution panel is a self-contained 120/240 Volt AC power distribution and energy management system intended to be used in recreational vehicles. It is housed behind the house distribution panel in a sheet metal enclosure, the front of the distribution panel is removable. It provides circuit protection for all the 120 Volt AC loads in the motorhome and an energy management system that minimizes the over-loading and tripping of circuit breakers.

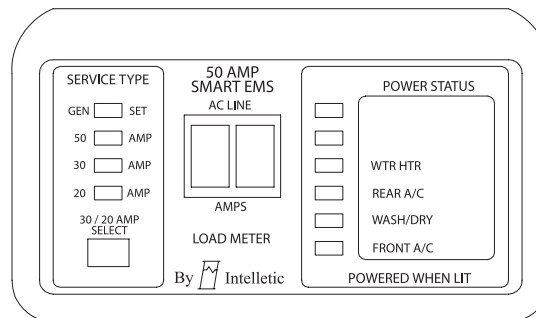

Typical EMS Display Panel: Located on Systems Control Center 060303b

Circuit Breakers:

The distribution panel offers slots for eight single or dual standard 120 Volt circuit breakers. Two of these breakers, located in the center position of the distribution panel, are 50 Amp and act as input protection for each of the lines supplying the remainder of the branch breakers.

Energy Management:

The 50 Amp Smart EMS automatically senses the available power to the motorhome and determines whether it is connected to a 120 Volt AC-30 Amp shore power source, 50 Amp shore power source or generator source. Depending upon available power, the EMS controls the operation of 4-6 (depending on options) possible loads as indicated on the distribution panel. These are typically heavier loads that can be postponed until the correct current is available. If the available power source is 120 Volt AC-30 Amp shore power, the EMS attempts to keep the total 120 Volt current draw to less than 30 Amps.

NOTE

The battery cutout switch at the entry door must be on for the Energy Management System to operate.

Operation:

If 120 Volt AC is not available at the distribution panel, the system shuts itself off. This feature is intended to prevent the system from drawing current from the +12 Volt DC battery supply when not in operation.

When 120 Volt AC power is applied, the system automatically powers up and determines the nature of the power source. On 50 Amp shore power, the load meter will not indicate Amp load.

If the generator is running, 120 Volt AC will be present at the distribution panel L1 (Line 1) and L2 (Line 2) inputs. In this mode the energy management feature is disabled and all control relay contacts are closed, energizing all of the controlled loads. The control module sends a signal to the display panel causing the load meter to display actual load current, the GEN SET service indicator to light and all power status indicators to light.

If 120 Volt AC is present at the distribution panel L1 and L2 inputs, the system will assume that 120 Volt AC, 30 Amp shore power is available and the energy management feature will enable. The load meter will indicate the Amp's Load. If only 20 Amp service is available the user must select the 20 AMP service mode by momentarily pressing the 20/30 Amp select switch on the display panel.

All relay contacts are initially closed and the total current is monitored. If the total current should exceed the service limit, the system will turn off the first load in the shedding table and calculate the amount of current that was removed. This value is placed in memory. If the current remains above the service limit, the system will turn off the next load in the shedding table, again calculating the amount of current that was removed and placing this value in memory. The system continues to turn off loads until the total current falls below shore power amperage or all of the 4-6 (depending on options) controlled loads have been shed.

Through this process the system has "learned" the amount of current that each particular load draws. This feature compensates for the differences in current draw over a range of line voltage and ambient temperature, by re-learning the load each time it is turned off or "shed."

The 50 Amp Smart EMS now waits until the total current is lower than the service limit and enough current is available (as compared with the amount in memory for the last load shed) before turning that load back on. This assures that there is sufficient current to operate the load.

NOTE

There is a two minute minimum delay period after a load is shed before the load will be turned on again to prevent air conditioners from turning on with a head pressure.

Three Hour Averaging:

The RVIA (Recreational Vehicle Industry Association) in conjunction with the NEC (National Electrical Council) have established rules regarding the rating of electrical systems and the use of energy management systems. One of these rules requires that, if any energy management system is used, the average total load current for the system over a 3 hour period be limited to 80% of the service rating. For that reason the 50 Amp EMS calculates the average running current for the system and, if it exceeds 80% of the service rating, the EMS sheds loads to reduce the average current below that limit.

For example, if a system operating under 120 Volt AC, 30 Amp service has been running at the 30 Amp limit for three hours, the EMS will change its shedding threshold to 24 Amps and turn off loads until the 24 Amp limit is attained. If the user selects the 20 Amp service mode this limit will translate to 16 Amps. Because the EMS calculates a running 3 hour average, if the average load current drops below the limit the system will restore power to loads based on their impact on the limit. If the system is in the averaging mode the decimal point at the lower right corner of the load meter on the display panel will illuminate.

Display Panel:

The display panel is connected to the distribution panel. Four to Six (depending on options) power status LEDs indicate power is applied to those loads. These LEDs are on when the power is applied. The load meter has a two digit display to indicate the amount of current actually being drawn by all the appliances in the motorhome.

Four service type LEDs indicate the source for 120/240 Volt AC power. Three of these sources are automatically detected and indicated by the EMS, namely: Gen Set Service, 50 Amp Service and 30 Amp Service.

NOTE

The 20 Amp service mode is not automatically detected and the operator must manually select the 20 Amp mode when 20 Amp service is available.

The service select button allows the current threshold to be set to either 30 Amps or 20 Amps, to match the incoming service.

Circuit Breaker

The internal configuration of the circuit breaker is designed to trip when excess current causes the breaker to heat up. The trip action of the circuit breaker can occur within milliseconds due to the speed at which electricity can travel. Breakers are designed to operate at a continuous load of 80% of the breaker's rated capacity.

For example: A breaker with a 20 Amp rating will operate a continuous 16 Amp load. This design leaves a small amount of working capacity within the breaker. When an inductive load is applied, such as when an electric motor turns on, the motor starts to spin and current consumption may momentarily exceed the rated capacity of the breaker. As the electric motor comes up to operating speed, the electric motor's current consumption will decrease. The AC current load then falls back into the breaker's rated 80% set point. This electric principle should be kept in mind when using anything other than 50 Amp shore service and using appliances with electric motors, such as air conditioners.

When using outlets, care should be considered when applying loads such as electric motors, heaters, coffee makers, toasters, hair dryers or other large current consuming loads. The current rating is usually stated on most electrical items. The current rating will either be rated in amps or watts. Current ratings stated on electrical items will change slightly with voltage fluctuations. As voltage increases, current consumption decreases. As voltage decreases, current consumption increases. This may explain why in some instances items operated at borderline voltage to current tolerances may seem fine in one location but problematic in another.

NOTE

To calculate watts to amps simply divide the watt figure by the voltage of which the item operates. For example: The electrical item is rated at 1370 watts. Divide that by the operating voltage of 115 Volts AC which equals 11.913 Amps. Use this formula to calculate the amount of load and compare to the available power supply.

GFCI Breakers & Outlets

A Ground Fault Circuit Interrupter (GFCI) can be found in two different types of applications. One type is incorporated in a breaker used in 120 Volt AC breaker panels; the other is incorporated in an outlet.

The GFCI, whether it is a breaker or an outlet, offers two types of protection. One type of protection is from over-current or shorts to guard against hazardous ground fault currents that can result in injury or death. Ground fault currents flow from the "hot" or power terminal through a person to the ground. For example: touching a faulty appliance while making contact with an electrical ground such as a water fixture or the earth.

The GFCI offers protection against the type of shock that can result from faulty insulation, wet wiring from inside an appliance, or any device or equipment plugged in or wired to that circuit. The ground fault portion of the outlet or breaker uses sensitive electronics inside the outlet or breaker to detect a ground fault problem. The electronics monitor the normal current of power flowing to the hot (black) wire through the load (eg. a light bulb or appliance) and coming back on the neutral (white) wire. If a small amount of current

comes back on the safety ground wire, the electronics will trip the breaker or outlet, stopping the flow of electricity. The amount of current it takes to trip the device from a ground fault varies slightly from the different outlet or breaker manufacturers (approximately 4 to 6 milliamps or less).

NOTE

One milliamp is 1/1000 of one Amp.

Electrical shocks resulting from ground faults can be felt, but such a shock is considerably less than one without ground fault protection. People with medical conditions that make them susceptible to shock can still be seriously injured. A GFCI outlet or breaker will not protect against shock from a normal current flow. For example: a shock from touching both metal prongs of an electrical cord or appliance while plugging it in.

WARNING


If a breaker or outlet continually trips, DO NOT continue to reset breaker or outlet until the problem has been identified and corrected.

NOTE

The ground fault outlet or breaker should be tested once a month to ensure it is operating. Use the TEST button on the outlet or breaker. It should trip with an audible "click." The breaker or outlet will not trip if AC power is not present at the device. If power is present and the device will not trip, replace it before using that circuit.

DISTRIBUTION PANEL**House 12 Volt DC**

The 12 Volt house distribution panel contains fuses that protect the electrical circuits. These fuses are the standard automotive type.

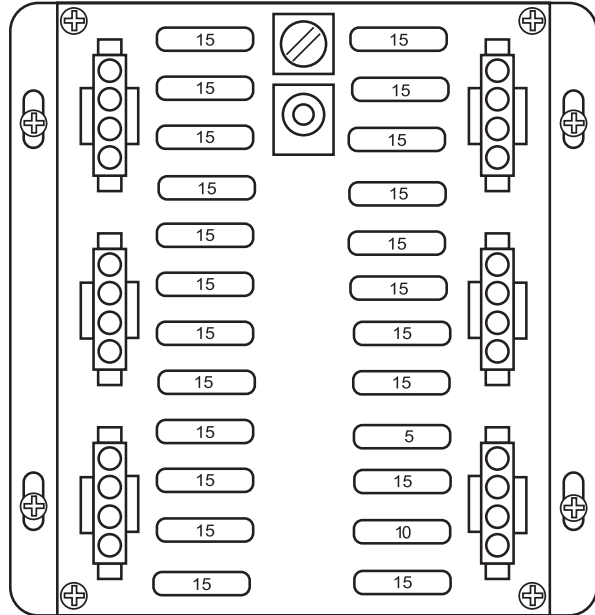

Typical Distribution Panel: Located in the roadside overhead cockpit cabinet. Refer to label on the panel for circuit assignments.

NOTE

Actual panel will vary with options or changes to the motorhome.

| FUSE | CIRCUIT | AMP | COLOR |
|------|--------------------------------|-----|---------|
| F1 | CENTER LITS OR PASS BATH | 15 | BLU |
| F2 | PORCH, CURB VAL/OH LTS | 15 | YEL |
| F3 | BEDROOM | 15 | GRN |
| F4 | FRONT FANS, ROAD VAL/OH LTS | 15 | VIO |
| F5 | CEILING LTS. FRONT | 15 | RED |
| F6 | REAR CEILING FANS | 15 | VIO/BLK |
| F7 | ACC LITS HUTCH/CEILING LTS GAL | 15 | BROWN |
| F8 | REAR RADIO (OPT.) | 15 | GRY/BLK |
| F9 | CENTER LTS OR DR BATH | 15 | ORG |
| F10 | GALLEY LIGHTS/CEILING LTS | 15 | RED/BLK |
| F11 | CENTER LTS OR REAR BATH (OPT.) | 15 | BLU/BLK |
| F12 | REAR LIGHTING (OPT) | 15 | GRN/BLK |
| F13 | FURNACE/ROOF A/C | 15 | GRY |
| F14 | MONITOR PANEL/WATER PUMP | 10 | RED |
| F15 | OPEN | 15 | |
| F16 | DASH RADIO SWITCH (OPT.) | 5 | GRY |
| F17 | AUTO GEN START (OPT.) | 15 | ORG |
| F18 | EMS (OPT) | 15 | BRN |
| F19 | REAR S/O BED/SOFA | 15 | GRN |
| F20 | REAR S/O WARDROBE | 15 | BLK |
| F21 | EXT RADIO (OPT.) | 15 | VIO/BLK |
| F22 | 110V WTR HTR SYSTEMS PANEL | 15 | BLK |
| F23 | KITCHEN FURNACE (OPT.) | 15 | GRY/BLK |
| F24 | OPEN | | |

Typical Distribution Fuse Label: Located in the roadside overhead cockpit cabinet. Refer to label on the panel for circuit assignments.

060286na


NOTE

Actual label will vary with options or changes to the motorhome.

AUTOMATIC RESET CIRCUIT BREAKER

Located in the battery compartment is a black box that contains various automatic reset circuit breakers. An automatic reset circuit breaker automatically resets after opening (tripped). If the fault still exists, the circuit breaker will continue to recycle between ON and OFF until the overload is corrected.

| |
|-----------------------------|
| 30 AMP SLIDE-OUT CONTROL |
| 30 AMP SYSTEM HEATER |
| 20 AMP SANICON |
| 30 AMP TANK PADS OPTIONAL |
| 40 AMP ELEC TOILET OPTIONAL |
| OPEN |
| 03213370 C |

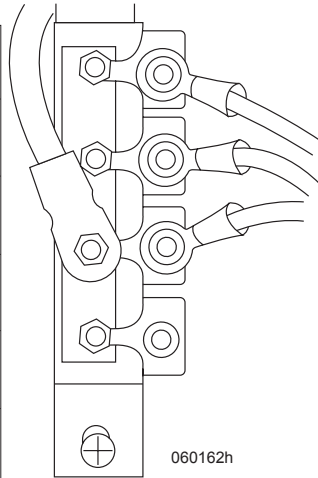


Several factors are considered when designing a circuit to operate an electrical load. The amperage required to operate the electrical load will determine wire size and wire insulation type. The application of the electrical load can determine whether a fuse or circuit breaker is selected.

Circuit protection devices come in a variety of shapes and ratings. Most common are the blade style plug in fuse and auto reset circuit breakers. These types of circuit protection devices are readily available from auto supply stores. Circuit protection devices in a 12 Volt DC system are actually rated at 32 Volts DC due to voltage variances in a 12 Volt DC system. Replacement devices must use the same amperage rating and be of the same type as the original for proper circuit protection and electrical safety.

Generally a fault exists in the circuit when an over-current condition has caused a fuse to blow or circuit breaker to trip. Until the condition that caused the fault is corrected, replacing the fuse may be a temporary fix. Continually replacing the fuse or circumventing the protection device can jeopardize safety and circuit integrity.

WARNING


Replacement fuses or circuit breakers must be of the same type and rating as the original equipment. Installing protection devices other than the original type and rating will create a safety hazard that will potentially result in circuit and/or component damage and fire.

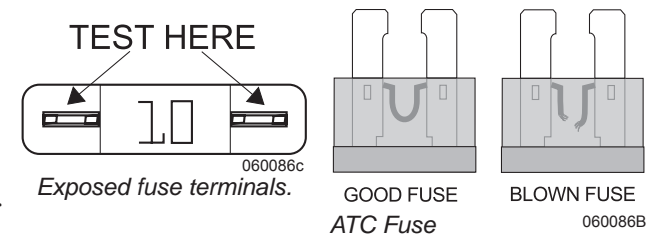

BLADE FUSE GUIDE

| | Mini | Standard | Maxi |
|------------|-------|----------|------|
| Black | 1 | | |
| Gray | 2 | 2 | 25 |
| Violet | 3 | 3 | |
| Pink | 4 | 4 | |
| Tan | 5 | 5 | 70 |
| Brown | 7 1/2 | 7 1/2 | 35 |
| Red | 10 | 10 | 50 |
| Blue | 15 | 15 | 60 |
| Yellow | 20 | 20 | 20 |
| Clear | 25 | 25 | 80 |
| Green | 30 | 30 | 30 |
| Blue-Green | 35 | | |
| Orange | 40 | | 40 |

Mini, Standard and Maxi fuse colors and amperage ratings

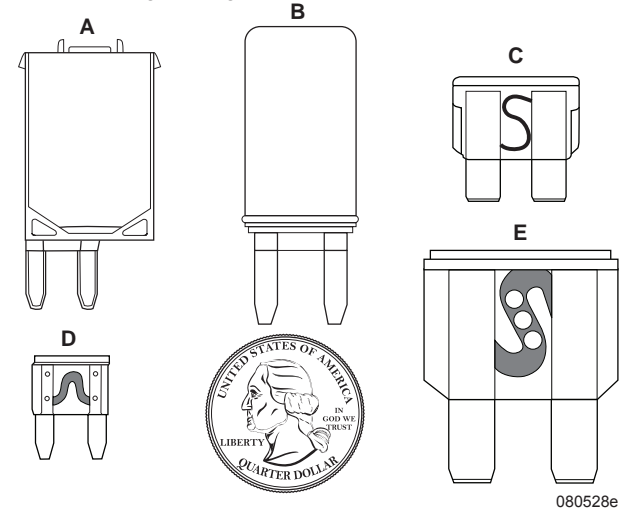

Quarter is used for size comparison of fuses.

- A. Manual Reset Circuit Breaker D. Mini Fuse
 B. Auto Reset Circuit Breaker E. Maxi Fuse
 C. Standard Fuse

Representation of various fuses and a circuit breaker

FUSES & CIRCUIT BREAKERS – 12 VOLT DC

Circuit protection devices are installed to protect circuit wiring in case an over-current condition occurs. An over-current condition usually falls into one of two categories: a short circuit or overload. A short circuit is when a break or fault in the circuit allows electricity to flow directly to ground. Circuit overload is when circuit amperage or the electrical load exceeds designed operating parameters.

Fuses:


Blade fuse comes in three sizes: Mini, Standard and Maxi. Fuse color determines amperage ratings. A blown fuse indicates an over-current condition has occurred. Typically the conductor strip in the center of the fuse is broken, but not always, and is best verified by use of a 12 Volt DC test light. Located atop the blade style fuse housing are two exposed terminals. The fuse is good if the test light illuminates at both terminals. This may require the circuit be activated for power to be present at the fuse. The fuse is bad if the test light illuminates at only one terminal.

There are three types of Circuit Breakers:

Type 1 is an automatic reset type circuit breaker. This type of breaker may cause component damage under a short circuit condition. It will not damage the circuit, the installation or present a safety risk.

Type 2 is an automatic reset type circuit breaker. Under a short circuit condition, this type of breaker will not cause component damage or damage to the circuit, the installation or present a safety risk.

Type 3 is a manual reset circuit breaker. This type of breaker will open under a short circuit condition and must be manually reset.

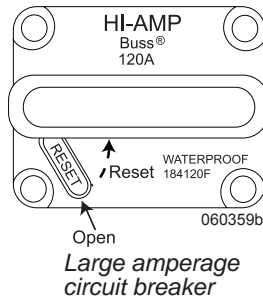**BATTERIES - HOUSE**

House batteries are designed for use with 12 Volt DC operated lights, appliances and inverters.

House Battery Types:

- ◆ Liquid Lead Acid (LLA)

Deep Cycle Batteries:


Deep cycle batteries are a type of Liquid Lead Acid (LLA) battery. Deep cycle batteries are best suited for use with 12 Volt operated lights, appliances and inverter/converters. Deep cycle batteries are designed to have a majority of their capacity used before being recharged.

NOTE

Tap water contains minerals which can alter chemistry and ruin the battery. Use only distilled water when refilling the LLA battery.

Battery Slide-Out Tray (Optional)

The slide-out battery tray is secured in place by a locking mechanism at the front of the tray. To slide the tray out, pull up on the two handles to unlock then pull tray out until it stops. To secure the battery tray, push it back in until the tray latches.

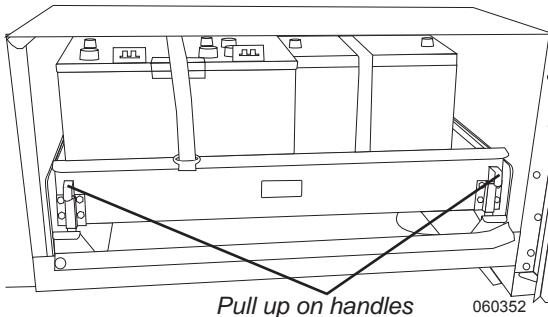**Slide Tray Maintenance:**

The battery tray does not require lubrication. If lubrication is deemed necessary, minimally use a non-lithium bearing grease. Use care. Lubricant can attract dirt and dust, causing slide problems with the tray.

If, due to extreme weather conditions, lubrication is deemed necessary follow these steps.

- ◆ Use the red nozzle on *WD-40* to clean the tray mechanism, not to lubricate it.
- ◆ Use an air hose to blow out all the dirt, dust and *WD-40*.
- ◆ Minimally use a non-lithium bearing grease.

CAUTION

DO NOT drive without the tray secured. Damage can result.

CAUTION

Many types of petroleum based products or battery by-products can damage the paint finish. DO NOT allow these types of chemicals to get on the paint finish. If the chemicals splatter on to the painted surfaces, immediately rinse the surface using plenty of water and a mild detergent.

WARNING

No repairs should be attempted by anyone other than by a qualified technical professional. The deployment and retraction of the tray could cause serious injuries.

Battery Maintenance

IMPORTANT!

IMPORTANT!

This motorhome is equipped with Non-sealed Liquid Lead Acid (LLA) house batteries which require regular maintenance. Lack of maintenance will result in a shortened battery life.


NOTE:

Read your owners manual for storage, dry camping and battery maintenance.

MONACO CUSTOMER SERVICE: 1-877-4-MONACO

060331

Liquid Lead Acid (LLA) battery cells should be checked at least once a month. The level should be above the top of the plates, but not overfull. The electrolyte level should be approximately 3/8" below the well to allow room for expansion while the battery is being charged. Over-filling the battery will allow the electrolyte solution to boil or gas out of the battery cap. Remember to use only distilled water to refill the battery. A battery with a low electrolyte level will rapidly boil out the water once the plates have been exposed to air.

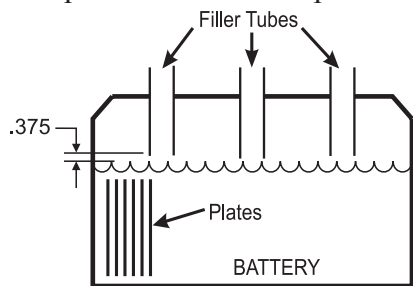


| Battery State of Charge | Spec. Gravity | Voltage |
|-------------------------|---------------|--------------|
| 100% | 1.265 | 12.7 |
| 75% | 1.225 | 12.4 |
| 50% | 1.190 | 12.2 |
| 25% | 1.155 | 12.0 |
| Discharged | 1.120 | 11.9 or Less |

NOTE: The distilled water level in battery should be 3/8" below the filler tube.

020034

Periodically check the batteries for corrosion and cracks. Replace vent plugs that are cracked or missing. Keep the top of the batteries clean. The accumulation of electrolyte and dirt may permit small amounts of current to flow between the terminals, which can drain the battery.

Check the battery connections for tightness and corrosion. If corrosion is found, disconnect the cables (mark cable locations) and carefully clean them with a mild solution of baking soda and water, or an aerosol product specifically designed for battery maintenance. **DO NOT** allow cleaning solution to seep into the battery and damage the electrolyte balance. Use water to rinse the top of the battery and surrounding area when done. Carefully hook the cables back to the battery. The battery cable to battery terminal connections should be metal to metal. Coat the terminals with petroleum jelly or an anti-corrosion grease.

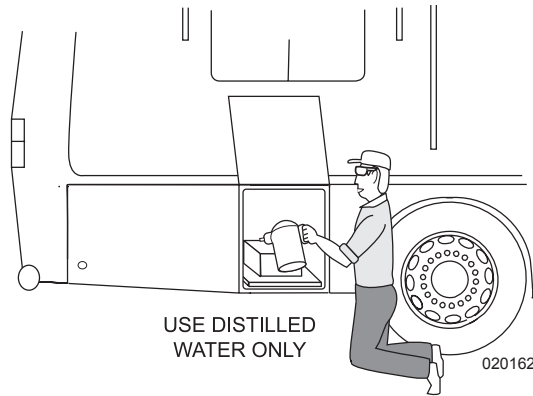


WARNING

DO NOT smoke around batteries and keep all sources of ignition or flames away from batteries. Liquid lead acid batteries produce hydrogen gas while charging. This is highly explosive. The hydrogen gas may explode resulting in fire, personal injury, property damage or death.

Testing the Battery

A battery can be tested and monitored several ways. The monitor panel on the hallway Systems Control Center and the optional monitor in water service center show voltage of the house batteries. Press the Test switch to check battery status.

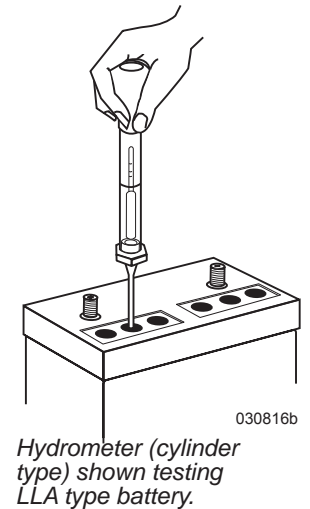

Hydrometer (cylinder type) shown testing LLA type battery.


Checking the Electrolyte Solution

The most efficient way of testing the batteries is to check the electrolyte solution. The only way to test a battery's electrolyte solution is with a hydrometer. Many styles are available, from types with cylinder graduation (shown here) to types with floating balls. Hydrometers can be purchased from most auto parts stores. The hydrometer tests the battery's electrolyte solution which is measured in specific gravity. Distilled water has a specific assigned gravity of 1,000. The hydrometer is calibrated to this mark. Pure sulfuric acid has a specific gravity reading of 1,840. The acid is 1.84 times heavier than water. The electrolyte solution is about 64% water to 36% acid (fully charged battery). Hydrometers with cylinder graduation are graphed and the exact state of specific gravity can be determined.

Temperature and recent battery activity (charging or discharging) affect the hydrometer readings. It is best to check the battery when it has been “at rest” for at least three hours, although readings taken at other times will give a “ballpark” figure. When using the hydrometer, draw the electrolyte solution up into the tube. Allow the hydrometer to attain the same temperature as the electrolyte solution. Note the reading for that cell. Complete the same test for the rest of the cells on that battery bank.

The hydrometer is calibrated at 80° F. Temperature affects the hydrometer readings. The higher the electrolyte temperature, the higher the specific gravity reading. The lower the temperature, the lower the specific gravity reading. Add or subtract four points for each 10° variance from the 80° F chart. Readings between cells should not vary more than 50 points.

If one cell in a particular battery bank being tested is at a 50% state of charge while the others are indicating a full charge, charge only that battery to see if the low cell will come up. At the same time, **DO NOT** over charge the “healthy” cells.

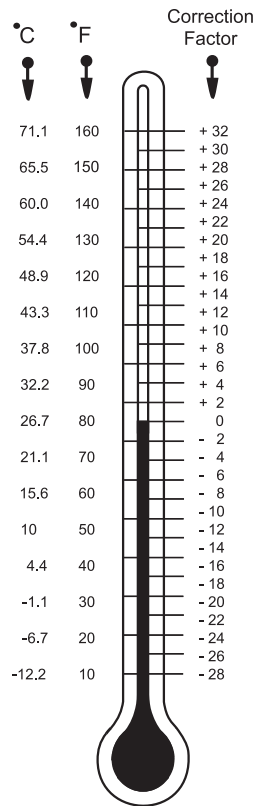

Temperature Compensation Chart 030815
Temperature Correction Chart

If the low cell does not come up after charging, this battery can damage the rest of the battery bank and should be replaced. An accurate digital Volt meter + - .5% will also give an indicator of the battery’s state of charge.

Placing a load on the Battery:


Another test that can be performed is to place a specific load on the battery for a predetermined length of time equal to that particular battery’s rating. This machine is usually an adjustable carbon pile that can vary the load being applied to the batteries while monitoring voltage to see if they will perform to their specific rated capacities.

NOTE

See the temperature correction chart for temperature compensation. Liquid levels should be even between the cells of the battery being tested as it will affect the accuracy of the test.

WARNING

Sulfuric acid in the batteries can cause severe injury or death. Sulfuric acid can cause permanent damage to eyes, burn skin and eat holes in clothing. Always wear splash-proof safety goggles when working around the battery. If the battery electrolyte is splashed in the eyes, or on skin, immediately flush the affected area for 15 minutes with large quantities of clean water. In case of eye contact, seek immediate medical aid. **DO NOT** add acid to a battery once the battery has been placed in service. Doing so may result in hazardous splattering of electrolyte.

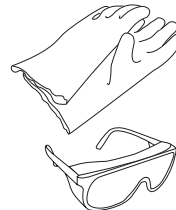

Battery Charge Time & Consumption Rate

Calculating Run Times:

Calculating run time figures when operating 120 Volt AC electrical items with an inverter can be exponential due to battery characteristics. Flow characteristics of electrons vary with different battery types and chemical compositions. Deep cycle batteries are generally designed to slowly release a majority of their charge capacity. Deep cycle batteries are rated in amp hours (Ahrs) with the discharge occurring over an extended period of time before the battery is charged. Engine starting batteries are designed to quickly release large amounts of current for short durations, without depleting battery reserves. Commercial type batteries bridge the gap of deep cycle and engine batteries. Commercial batteries release medium amounts of current over a longer period of time but they are not designed to cycle their charge capacity.

The working range of a deep cycle battery is between 50 and 100% state of charge (SOC). Deep cycle batteries should not be cycled below 50% state of charge. Discharging a deep cycle battery below 50% state of charge shortens the life of the battery. Deep cycle batteries use an amp hour rating which is usually calculated over a 20 hour discharge interval.

For example: A deep cycle battery with a rated capacity of 100 Ahrs. is designed to release current at the rate of 5 Amps per hour. Multiply a 5 Amp load over a 20 hour discharge period equals the rated 100 Ahr. capacity. These discharge figures are calculated with the battery starting at 100% state of charge with the battery at 80° F when the discharge cycle begins. However, increasing the discharge load applied to the battery from 5 Amps to 10 Amps on a 100 Ahr battery does not yield ten hours of discharge time. This is due to the internal reactions which occur when a battery is discharging. Actual discharge time for a 10 Amp load may be closer to eight hours of discharge time. Increasing the load applied to the battery to 20 Amps will not yield five hours discharge time but may be less than three hours. It might be understood as a point of diminishing return.

Calculating applied loads to an inverter to approximate run time from the battery amp hours available is not an equal trade up when voltage is inverted and amperage is calculated. When the inverter is used to operate an AC load it uses approximately ten times the DC current needed from the battery when inverting 12 Volts DC to operate the 120 Volt AC item. There is also a small efficiency loss of about 10% when inverting. *For example:* When using the inverter to operate an AC electrical item, which has a current draw rating of 2 Amps, the inverter will use over 20 Amps DC power from the batteries.


Determining Current Consumption:

First determine the amount of current used by an AC item. *For example:* The television is rated at 200 watts at 120 Volts AC. Calculate watts to amps. Divide 200 watts by the operating voltage of 120, this equals 1.6 Amps. Multiply 1.6 Amps AC current by a factor of ten the inverter will use, this equals 16 Amps DC battery current. Add the revised 10% efficiency loss figure, this calculates to a total of 17.6 Amps DC. If the battery bank capacity is rated at 500 Ahrs., actual elapsed time to the suggested 50% state of charge would net viewing time for the television at approximately 13 hours in ideal conditions.

The run time figure will vary greatly with the actual state of charge of the battery bank when the discharge process begins. Ambient temperature, combined with other working loads, such as lights and parasitic loads applied to batteries, affect run times. Calculating the exact run time is not precise due to all the variables and equations involved; however, an approximate time figure can be obtained. Proper battery maintenance and charge cycles affect battery performance. Observe the battery condition with hydrometer and voltage readings. Use only distilled water when filling batteries. To achieve the highest quality of battery performance and longevity maintain the batteries in their proper operating range.

SOLAR PANEL (OPTIONAL)

The motorhome is equipped with a fully automatic solar-powered battery charging system. The system consists of one roof-mounted solar panel and a charge controller that is capable of charging the house batteries.

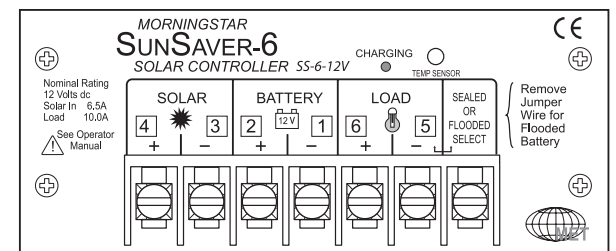

Located in curbside battery compartment

030944e

The solar panel is a laser-grooved, buried-grid panel that is capable of delivering about 2-3 amps of charge per hour in full sunlight (usually between 9:30 a.m. and 2:30 p.m.).

Extensive testing has shown that the solar panel delivers enough power to offset the normal day-to-day drain on batteries caused by various parasitic electrical loads such as transmission memories, alarm systems, natural self-discharge of batteries and other like items. This means that the solar panel is only intended to cover these parasitic loads while dry camping.

WARNING

The solar panel needs to be cleaned monthly. The solar panel may need to be cleaned more frequently depending on weather conditions.

Charge Controller

The Charge Controller was built to accommodate either Flooded Lead-Acid batteries or (sealed) Absorbed Glass Matte (AGM) batteries. The Charge Controller is limited to a maximum of three-amp charge.

The faceplate of the controller is used as a heat sink for the electronics. Therefore, it will become warm to the touch, especially when processing higher amperage. Automatic thermal shutdown (indicated by the Load Disconnect red LED light) will activate if the charge controller gets too warm.

The jumper wire is removed from the two right hand terminals. This sets the float voltage for the controller to Flooded Wet Cell batteries. Installing the jumper lowers float voltage for Absorbed Glass Matte batteries. This feature resets the charge parameters to work with either flooded wet cell batteries or AGM batteries. Float voltage changes from 14.2 to 13.4 Volts, which is what the AGM battery manufacturer recommends.

CAUTION

The Charge Controller panel may be warm to the touch. This is a normal function of the Charge Controller.

Green LED:

The Green LED (Charging) indicator illuminates whenever sunlight is available for battery charging. The green LED will turn off at night.

Red LED:

If the controller includes an automatic load disconnect feature, the red LED (Load Disconnect) illuminates whenever the battery charge state falls below the load disconnect setpoint. This indicates low voltage and that the charge controller has disconnected the load to protect the battery from further discharge and possible damage.

After a period of recharging the battery such that it recovers approximately 40% to 50% of its rated capacity, the load will automatically be reconnected and the red LED will turn off.

Inspection and Maintenance

The following inspections and maintenance tasks are recommended at least once per year for best charge controller performance.

- ◆ Confirm that the correct battery type has been selected (sealed or flooded with jumper).
- ◆ Confirm that the current levels of the PV (Photovoltaic) array and load **DO NOT** exceed the ratings.
- ◆ Tighten all terminals, inspect for loose, broken, or burnt wire connections. Be certain no loose strands of wire are touching other terminals.
- ◆ Check that the charge controller is securely mounted in a clean environment. Inspect for dirt, insects, and corrosion.
- ◆ Check that the air flow around the charge controller is not blocked.
- ◆ Protect from direct sun and rain. Confirm that water is not collecting under the cover.
- ◆ Check that the charge controller functions and LED indicators are correct for the system conditions at that time.

INFORMATION

Further information and instruction can be found by contacting Morningstar Corporation at (215) 321-4457, or at www.Morningstarcorp.com

Solar Panel Care

A critical part of maintaining the solar powered battery charging system is keeping the panels clean.

The amount of power that a panel will produce is directly related to the intensity of sunlight that reaches the internal crystals. A dirty panel will allow less light to reach the crystals resulting in reduced power output. A layer of dust or road grime can reduce power output by 15 to 25%. Combining dust with leaves and debris that cover two or three of the individual cells can reduce output power by 50 to 75%.

Use of the basic maintenance tips, regular inspections and regular cleaning will assure maximum performance from the solar charging system.

To clean the panels use non-abrasive cleanser and paper towels. The surrounding environment and the amount of road dust encountered determines how frequently the panels should be cleaned. One to two times a month is preferred.

Tips to Follow:

- ◆ The panels should be cleaned if a film or a layer of dust is on the windshield.
- ◆ On a bright sunny day, charging current of 2 or 3 amps can be obtained during the peak charge cycle.
- ◆ High winds blow dust and debris causing dirt build up on the panel. Frequently inspect the panel and clean as necessary.

LIGHTS


Light fixtures found in the motorhome vary greatly depending on floor plans. The articles that follow reflect a general overview of some of the more common fixture types. Actual styles and types may differ.

Incandescent

The bulb inside the 12V incandescent light is replaceable.

To Replace a Bulb:

- ◆ Carefully squeeze the lens cover then gently pull the cover out. The cover has tabs that lock the cover in place.
- ◆ Using a clean cloth or piece of tissue carefully grasp the bulb and rotate to the unlock position.
- ◆ Remove bulb from the socket.
- ◆ The bulb replacement is 1141 12V 21CP.

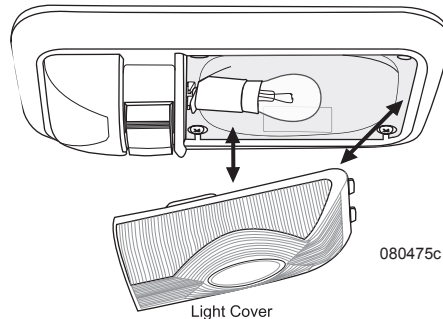

INFORMATION

Replacement bulb number is accurate at time of printing. Confirm replacement bulb number before ordering or obtaining a replacement.

- ◆ Using a clean cloth or piece of tissue grasp the new bulb and align the prongs on the bulb with the slot on light socket.
- ◆ Push bulb in and rotate to lock position.
- ◆ Gently squeeze lens cover and insert tabs on cover into fixture.

CAUTION

DO NOT touch the incandescent bulbs while on. Allow bulb to cool down before replacing because a hot bulb can cause a burn.

Interior Halogen


To Remove:

- ◆ Grasp light fixture and pull down slightly then tilt fixture to one side. This will allow one spring clip to come out.

CAUTION

Push spring clip inward with a finger as clip is being eased out. If this is not done spring clip can snap back on fingers.

- ◆ Tilt fixture to other side and ease the other spring clip out.
- ◆ Unscrew the light lens counterclockwise and remove.
- ◆ Carefully grasp bulb and pull from socket.

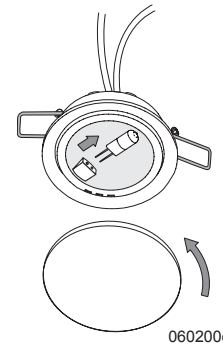

The bulb replacement is 12V 10W CE.

INFORMATION

Replacement bulb number is accurate at time of printing. Confirm replacement bulb number before ordering or obtaining a replacement.

- ◆ Use a clean cloth or piece of tissue to grasp new bulb. **DO NOT** touch bulb directly as this can cause a “hot spot” and result in immediate bulb failure.
- ◆ Align contacts of bulb with terminals in fixture base. Insert bulb until contacts are firmly seated.

To Reinstall:

- ◆ Align tabs on light lens with slots in fixture base. Rotate lens clockwise until light lens locks into place.
- ◆ Fold up both spring clips and insert light fixture into opening. Once in, opening the spring clips will expand and lock light fixture into place.

CAUTION


DO NOT touch halogen lighting while on. They can cause a burn. DO NOT touch replacement bulbs. Oil in the hands can cause a “hot-spot” to occur. If the bulb is touched, allow it to cool and clean the bulb with alcohol.

Map Light

Operation:

Turn the map light on by pressing the On/Off switch on the map light. The map light pivots left and right to allow illumination of different areas.

A wall switch located next to the bed also turns the map light on/off. For the light to operate from the wall switch, the On/Off switch on the map light must be on.

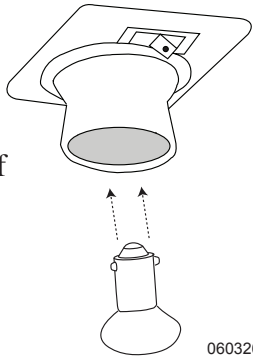


To Replace a Bulb:

- ◆ Carefully push in on the bulb and turn counterclockwise.
- ◆ Pull bulb from the socket.
- ◆ Bulb replacement is 1383 12V. To re-install align the two pins on the bulb with the two channels on the socket. Insert the bulb and turn clockwise.

INFORMATION

Replacement bulb is accurate at time of printing. Confirm replacement bulb number before ordering or obtaining a replacement.

ELECTRICAL LAYOUT

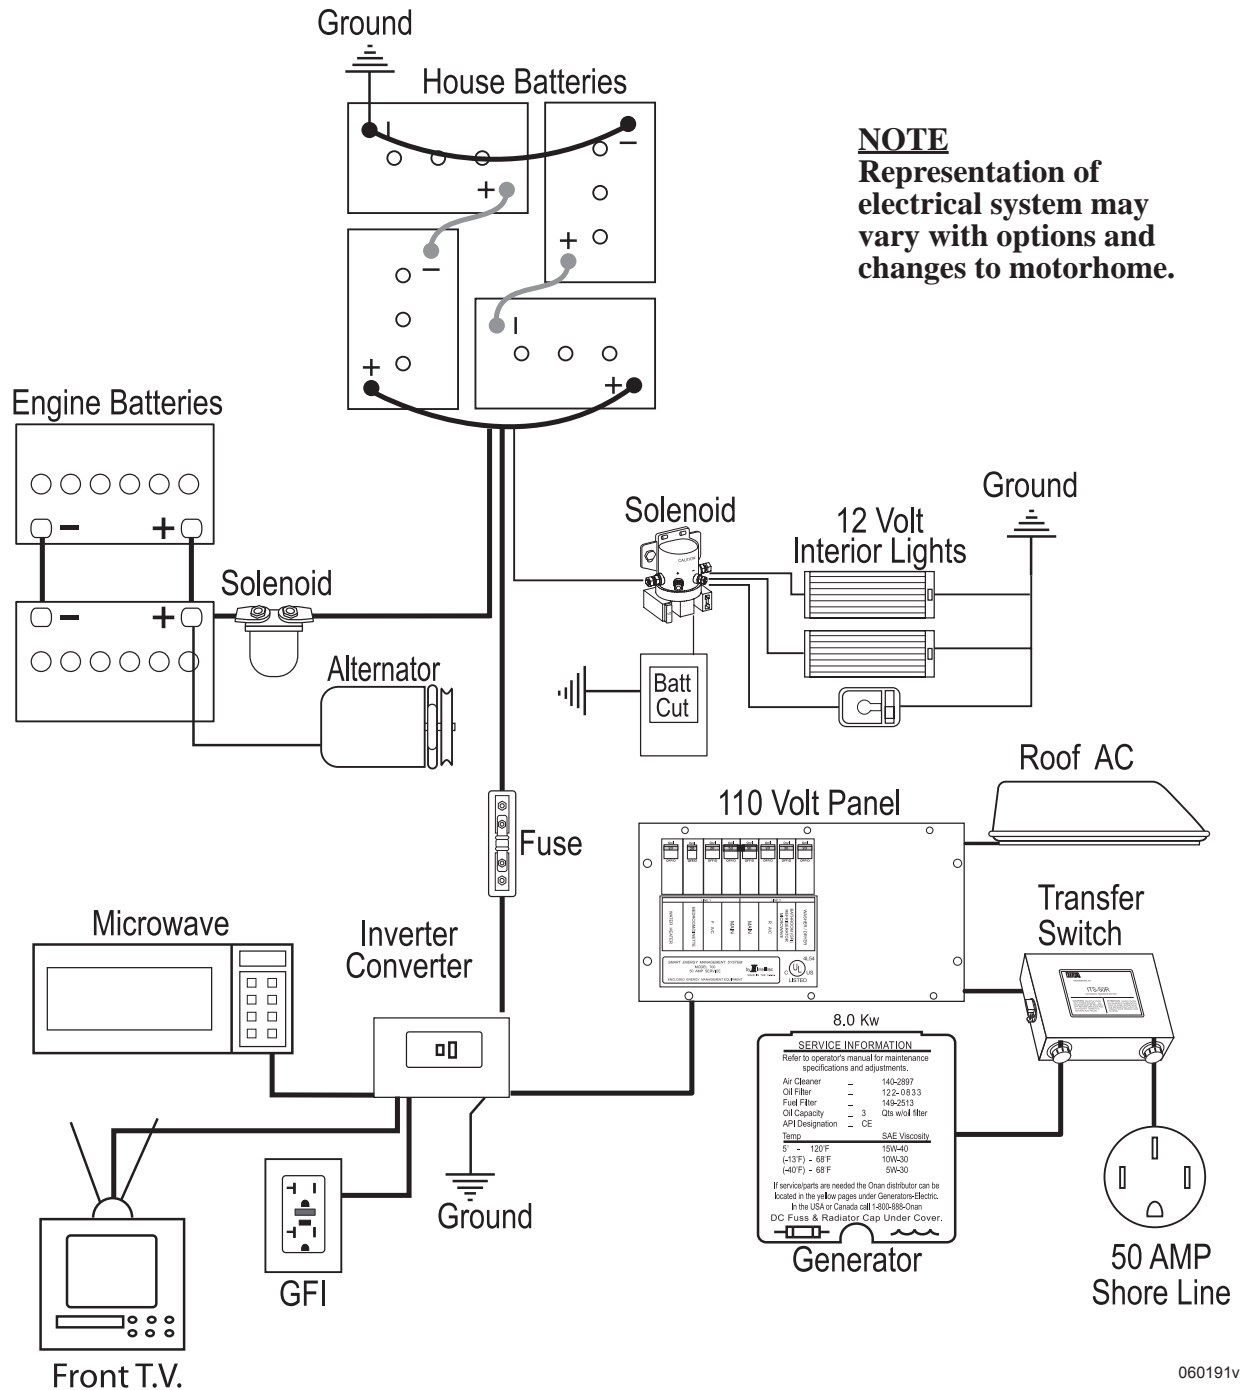

| | | | |
|---|------------|---|------------|
| CHASSIS ELECTRICAL - INTRODUCTION | 180 | AIR CONDITIONER & HEATER CONTROLS..... | 192 |
| BATTERY DISCONNECT | 180 | Blend Air System | 192 |
| Chassis | 180 | Maintenance | 193 |
| BATTERY - CHASSIS | 180 | Operating Tips & Hints | 193 |
| FUSE & CIRCUITS | 180 | System Components | 194 |
| BATTERY MAINTAINER | | Troubleshooting | 194 |
| (BI-DIRECTIONAL ISOLATOR RELAY DELAY)... | 183 | DIAGNOSTIC PLUG LOCATION..... | 195 |
| Relays | 183 | ENGINE “NO START” FLOW CHART | 196 |
| ALTERNATOR..... | 184 | | |
| Alternator Testing Procedure..... | 184 | | |
| STEERING COLUMN | 185 | | |
| Smart Wheel Operation | 185 | | |
| Left Control Pad | 185 | | |
| Right Control Pad | 186 | | |
| Wiper Function | 186 | | |
| Tilt & Telescope | 186 | | |
| Turn Signal Lever | 186 | | |
| Hazard Flashers | 187 | | |
| CONSOLE | 187 | | |
| Transmission Shift Selector | 187 | | |
| Parking Brake..... | 187 | | |
| Leveling Controls | 187 | | |
| DASH | 187 | | |
| Instrument Panel | 187 | | |
| LCD Controller | 189 | | |
| Indicator Lights | 189 | | |
| Switches..... | 190 | | |
| DRIVER’S CONSOLE..... | 190 | | |
| Driver’s Dash & Dash Console | 191 | | |
| Passenger Console | 191 | | |
| By Entry Door | 191 | | |



CHASSIS ELECTRICAL - INTRODUCTION


This section contains guidelines, procedures and information that will assist in understanding the chassis electrical system and the operation of various components. Refer to the OEM manuals included in the Owner's Information File box for their respective, in-depth, individual component operating instructions.

BATTERY DISCONNECT Chassis

The chassis battery switch controls the DC power to the front electrical panel, front distribution box and rear distribution box. Most chassis and engine functions are interrupted when the battery disconnect is turned off. Some electronic components of the engine and transmission require a constant power source and will continue to draw power when the disconnect is engaged.

Turn the chassis battery disconnect switch off when the motorhome is going to be stored or when performing electrical maintenance. If possible, leave the motorhome plugged into an AC source with the chassis battery disconnect switch on to help prevent the possibility of dead batteries.

If an AC source is not available and the motorhome is going to be stored more than 48 hours, it is recommended to turn the chassis battery disconnect switch off.

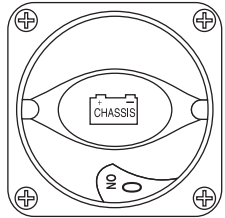

*Battery Disconnect:
Located in the
Curbside Battery
Compartment*

WARNING

When welding is involved for motorhome repair or modification, **only qualified, experienced technicians should weld on the chassis. Improper welding procedures and materials may weaken the assembly or result in damage that is not obvious and may not cause an immediate problem or failure. Unauthorized modifications or repairs to the chassis could result in a forfeiture of warranty coverage.**

DANGER

Due to the sensitive nature of the electronics on the chassis, the following precautions are required to protect electrical components in the motorhome chassis:



1. Disconnect the (+) positive and (-) negative battery connection.
2. Cover electronic control components and wiring to protect from hot sparks.
3. Disconnect the terminal plugs from the engine Electronic Control Unit, located on the curbside of the engine block.
4. Disconnect all the plugs from the transmission Electronic Control Unit located in the roadside front electrical panel.
5. **DO NOT** connect welding cables to electronic control components.
6. Attach the welding ground cable no more than two feet from the part to be welded.

BATTERY - CHASSIS

The chassis battery is designed to produce high amperage necessary to start the engine. Maintain the chassis battery through regular electrolyte level inspections and hydrometer readings. High electrolyte consumption or inconsistent hydrometer cell readings may indicate a charging system problem. Perform a charging system and current draw check if the battery is exhibiting abnormal hydrometer readings.

NOTE

Replacement batteries should have the same cold cranking amp (CCA) rating.

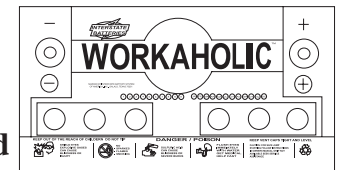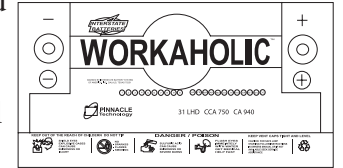

*Battery with cover removed.
Cut plastic to remove cover.*

FUSE & CIRCUITS

The motorhome relies on three electrical panels to control chassis functions and some house operated items.

The front electrical panel (also called the front run box) contains fuses, self resetting manual reset supply circuit breakers, solenoid and relays for many chassis and house related functions. The front distribution box controls front chassis functions. A rear distribution box controls rear chassis functions.

The fuses are standard plug-in type (ATM). When a fuse “BLOWS,” the wire in middle of the plastic case will be broken. A bad or blown fuse must be replaced with a fuse of the same rating and type.

Using a fuse of a different rating will defeat the circuit protection provided by the fuse, which could result in damage to the motorhome electrical system. A fuse that has been replaced and continues to blow may indicate a fault exists or an electronic component has failed. It is recommended that the motorhome be taken to a qualified RV technician before any future use to diagnose and repair the problem.


Circuits are identified on the fuse label located on the inside of the panel.

- ◆ For the front electrical panel remove 3 wing nuts to view label.
- ◆ For front and rear distribution boxes turn handle to unlock box and view label.


NOTE
Components and location of components will change with options or changes to the motorhome.

| FUSE NO. DESCRIPTION | MAX FUSE SIZE | FUSE NO. DESCRIPTION | MAX FUSE SIZE | FUSE NO. DESCRIPTION | MAX FUSE SIZE | |
|---------------------------|---------------|--|---------------|-----------------------------------|-----------------------|----|
| C401(F) CHASSIS | | C404(F) IGN#2 | | C406(F) SWITCHED HOUSE 12V | | |
| 4-1 STEP MOTOR | 25 | 4-19 STEP/ISO SENSE | 7.5 | 4-33 DRV POWER SEAT | CB-15 | |
| 5-2 STEP SWITCH | 7.5 | 5-20 LEVELING JACKS | 15 | 5-34 PASS POWER SEAT | CB-15 | |
| 6-3 SPARE | 25 | 6-21 SPARE | 3 | 6-35 STORAGE LIGHTS | 15 | |
| 3-4 SPARE | 7.5 | 3-22 SLIDE-OUT RELAY | 15 | 3-36 SERVICE LIGHT | 7.5 | |
| 2-5 LEVELING AIR/HYD. | 15 | 2-23 SPARE | 15 | 2-37 POWER CORD REEL | CB-15 | |
| 1-6 AIR LEV COMPRESSOR | 15 | 1-24 SPARE | 15 | 1-38 POWER HOSE REEL | CB-15 | |
| C402(D) | | C405(D) ACC#1 | | C407(F) | | |
| 4-7 NAVIGATION | 15 | 2-25 REAR VISION | 5 | 2-39 DRIVER FRONT SLD 40 PDQ | 20 | |
| 5-8 STEP COVER | CB-15 | 1-26 ALADDIN ING FEED | 5 | 1-40 BAY 12V/CPTR RECEPT. | 15 | |
| 6-9 SUNVISOR | 5 | 4-27 ADJ PEDALS/WIPER SIMBA | CB-15 | 4-41 SPARE | 5 | |
| 3-10 CB RADIO PREP | 5 | 7-28 OVER HEAD DEFROST | 15 | 7-42 SPARE | 15 | |
| 2-11 KEYLESS | 15 | 8-29 ACCESSORY | 15 | 8-43 SPARE | 3 | |
| 1-12 ALADDIN MAIN PWR | 15 | 9-30 AIR DUMP | CB-15 | 9-44 SPARE | 15 | |
| C403(D) IGN#1 | | 6-31 AIR LEVELING | | 15 | 6-45 STEP WELL LIGHTS | 15 |
| 4-13 DASH A/C | 20 | 3-32 FOG LAMPS | 15 | 3-46 SPARE | 15 | |
| 5-14 JACK/ANT WARNING | 5 | C412(F) NON SWITCHED HOUSE 12V | | C408(F) | | |
| 6-15 TV/LEVEL LOCKOUT | 7.5 | 4-66 RADIO MEMORY | 10 | 4-47 SPARE | 3 | |
| 3-16 MIRROR HEAT | 15 | 5-67 REFER | 10 | 5-48 SPARE | 15 | |
| 2-17 MIRROR MOTORS | 2 | 6-68 AIR LEVELING | 15 | 6-49 DRVRS S/O PWR #1 | 15 | |
| 1-18 SIDE DOCKING LIGHTS | 20 | 3-69 LP/CO DETECTOR | 5 | 3-50 PASS S/O PWR | 15 | |
| C415(F) RELAY FUSE | | 2-70 SYST. HEAT/SNAP DISC | 3 | 2-51 DRVRS S/O PWR #2 | 15 | |
| 1-59 PATIO AWNING | CB-15 | 1-71 HOUSE READ OUT | 3 | 1-52 PASS S/O PWR BED/LAV | 15 | |
| 2-60 ENTRY DOOR AWNING | CB-15 | CIRCUIT BREAKERS | | C409(D) | | |
| 3-61 SIDE DOCK LT REALAY | 15 | INTERIOR FUSE PANEL 80 | | 4-53 MAP LIGHT | 7.5 | |
| 6-62 N/A | 15 | THIS FUSE PANEL COVERS STANDARDS AND OPTIONS THAT ARE ASSOCIATED WITH THIS PANEL. CHECK YOUR BUILD ORDER TO SEE HOW YOUR COACH IS EQUIPPED. | | | | |
| 5-63 N/A | 15 | P/N 03213970 rev.G | | | | |
| 4-64 N/A | 15 | | | | | |
| 65 MARKER LIGHTS | 10 | | | | | |


Representation of Front Electrical Panel Label. Label Will Vary with Options and Changes to the Motorhome. ¹⁰⁰²¹⁶¹

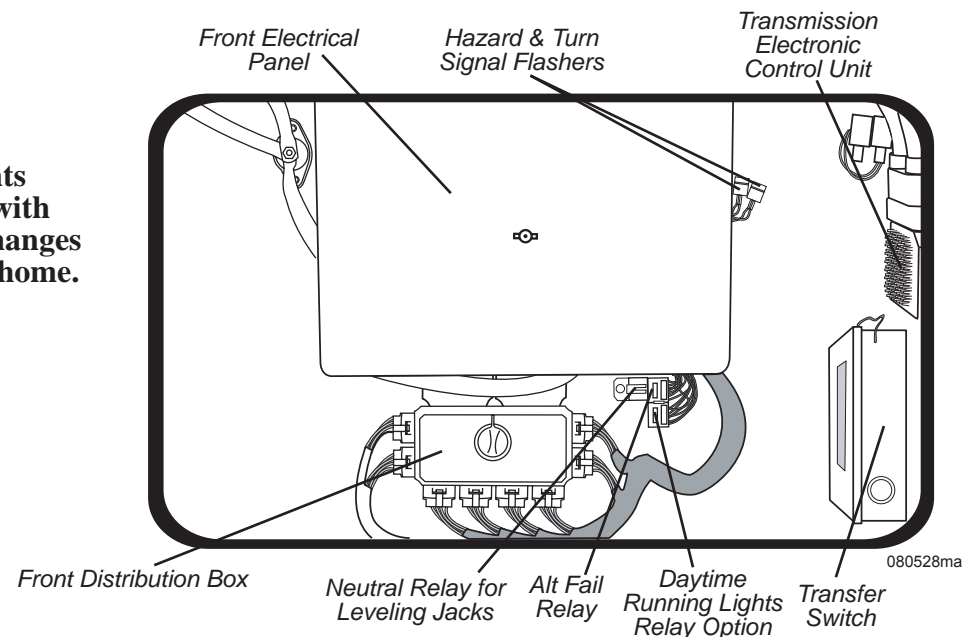

Representation of Front Electrical Panel: Located in the Roadside Front Compartment.

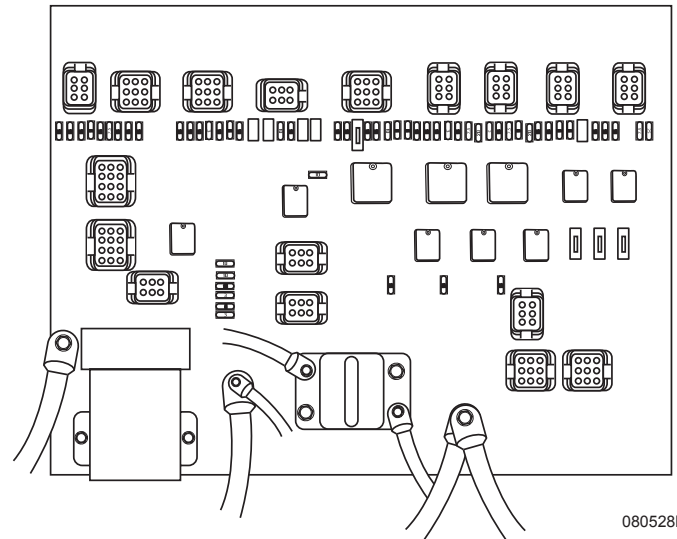


Representation of Front Electrical Panel Layout: Located in the Roadside Front Compartment.

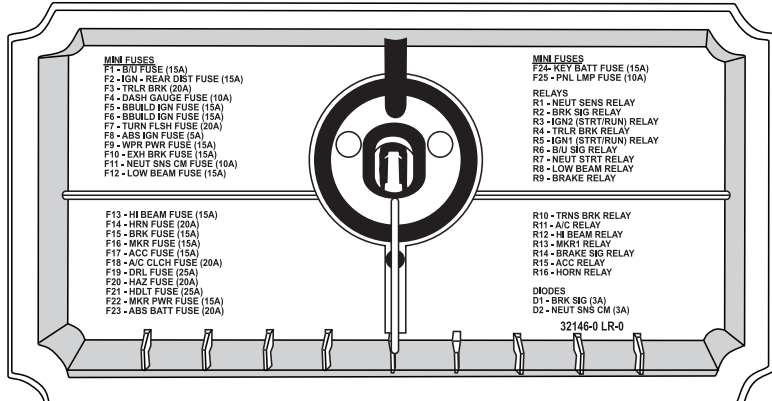


Front Distribution Box Label

080522f

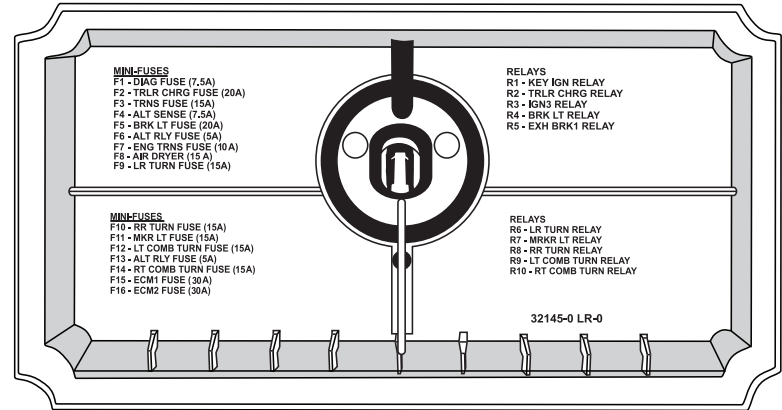


Rear Distribution Box Label

080522i

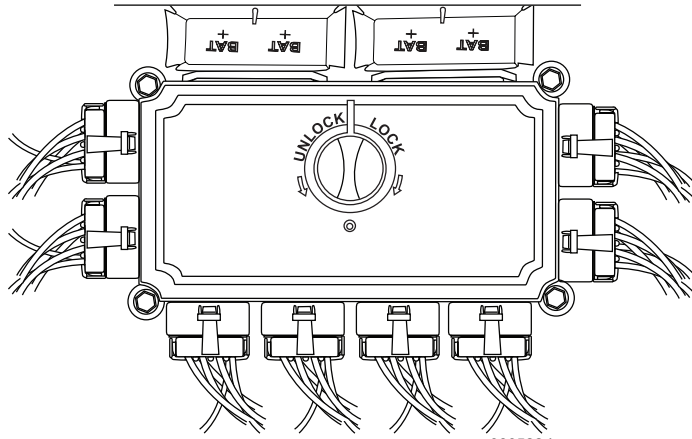


Front Distribution Box: Located Below Front Electrical Panel in the Roadside Front Compartment


Representation of front and rear distribution boxes. Actual boxes and labels will vary with options and changes to the motorhome.

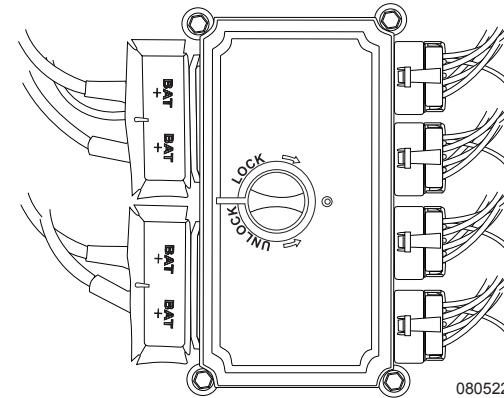

Rear Distribution Box: Located in a Rear Curbside Compartment

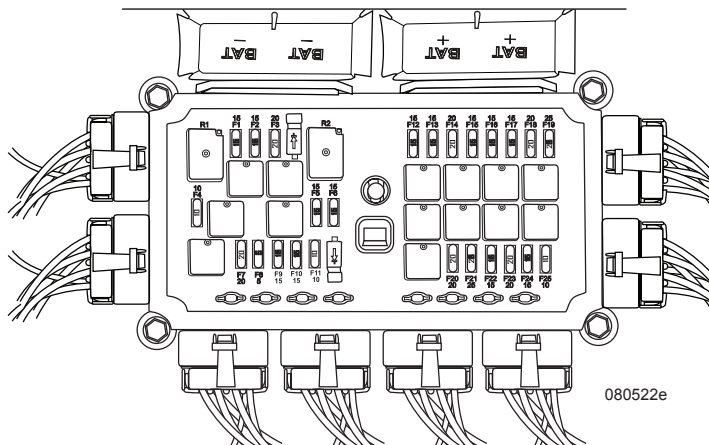


Front Distribution Box Layout

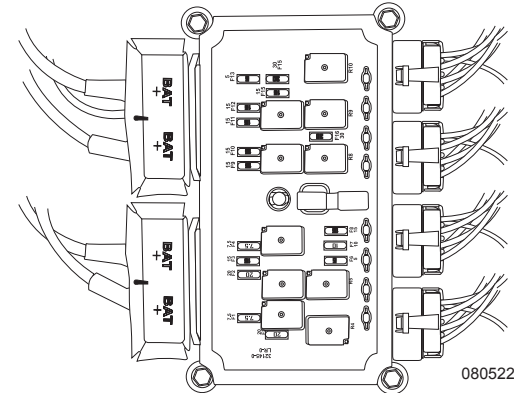

Rear Distribution Box Layout

BATTERY MAINTAINER (BI-DIRECTIONAL ISOLATOR RELAY DELAY)

The Battery Maintainer (Bi-Directional Isolator Relay Delay) constantly senses voltage of the house and chassis batteries.

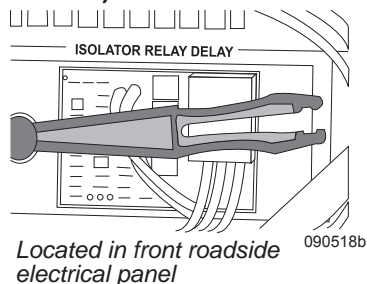


With engine running, both the house and chassis batteries are charged from the engine alternator. When the motorhome is plugged into shore power or operating from the generator, both the house and chassis batteries are charged from the inverter. If neither battery is being charged, the batteries are fully isolated.

The battery maintainer also senses heavy loads on either battery to prevent the wrong battery from inadvertently discharging.

Relays

The motorhome uses various relays to operate electrical equipment, such as lights and motors. If a relay needs replaced, carefully record the location of each wire and all markings or labels.



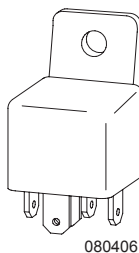


Relays can look the same in appearance, but differ in function. Note on the side of the relay a schematic drawing identifying the relay as 87 or 87a. These current ratings differ, and if mixed, will create problems. Ensure the replacement relay is of the current rating to assure proper operation.

Another indicator to the type of relay is the post or legs. Turn the relay over and look at the post.

Note the differences between the numbered posts:

1. The 30 post is the incoming fuse and/or breaker power. Some relay applications supply power to the 30 post. Some use it for ground. The 30 post can be used many different ways.
2. The 85 post is one side of the coil, tripped different ways.
3. The 86 post is the opposite side of the coil, tripped different ways.
4. The 87 posts are not common to the 30 post until the relay is tripped. When the relay trips, both 87 posts are common to the 30 post.
5. Using an 87a relay, the 30 post and the 87a post are common.

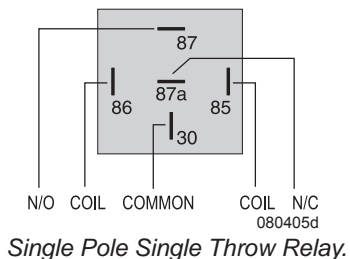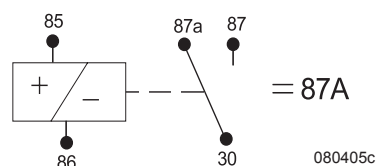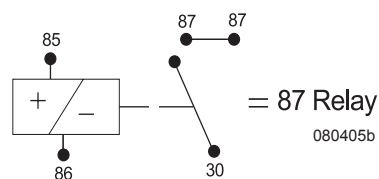


NOTE

Fuse panels, components and location of components will vary with options or changes to the motorhome.

A Single Pole Single Throw relay (SPST) is an electro-magnetic switch consisting of a coil (terminals 85 & 86), one common terminal (30), one normally closed terminal (87a), and one normally open terminal (87).

When the coil of the relay is at rest (not energized) the common terminal (30) and the normally closed terminal (87a) have continuity. When the coil is energized, the common terminal (30) and the normally open terminal (87) have continuity.

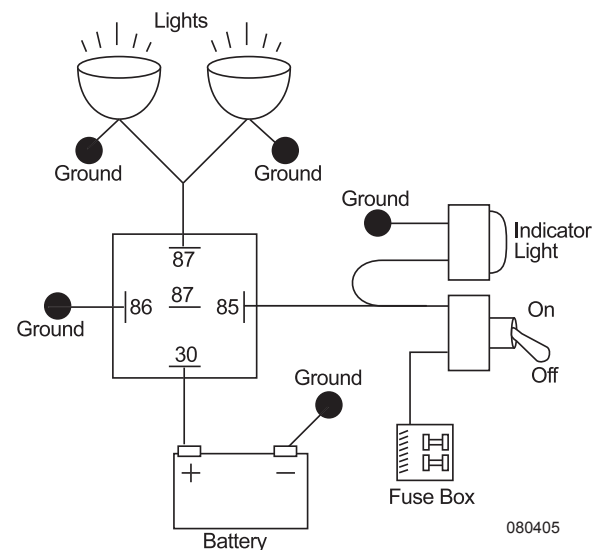

NOTE


When there is power applied to the coil, the coil sets up a magnetic field in the windings. When the power is removed, the field collapses. A momentary high voltage discharge will occur. This is how an ignition coil works.

ALTERNATOR

The function of the alternator is an electrical system voltage maintainer, not a battery charger. When the engine is operating, the alternator maintains electrical system voltage relative to a load, such as headlights and windshield wipers. When a heavy load is placed on the alternator, such as trying to charge dead house batteries, the operating temperature of the alternator will increase. Excess operating temperature of the alternator for extended periods of operation can lead to premature failure of the alternator.

The alternator replaces amp hours the chassis battery used to start the engine. The amount of charge the alternator sends to the chassis battery is dependent on the amount of time the engine is operated. Repeatedly starting the engine for short periods may not be enough operating time to adequately replace the amp hours the chassis battery uses to start the engine.

When traveling, keep an eye on the voltmeter in the dash area. Normal readings should be between 13 to 14.5 Volts DC. Voltage indications higher or lower indicate a potential problem with the charging system. If the alternator output drops below an acceptable level, a charge indication warning lamp will illuminate.

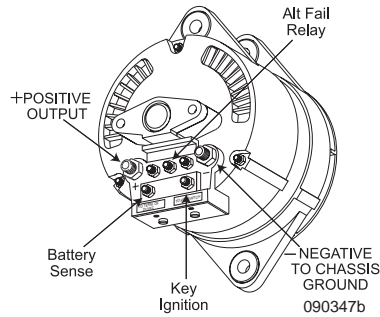

NOTE

The alternator is not designed to charge the house batteries from a complete discharge to a full state of charge. The alternator will maintain battery charge during travel, supplying the DC current necessary to operate running lights or other DC loads.

If the house batteries are in a low state of charge, it is recommended to charge the house batteries with the inverter or an auxiliary battery charger before driving the motorhome.

CAUTION

Long-term use of the inverter to operate the microwave while in transit will damage the alternator. Use the generator to operate the microwave while in transit.

Alternator Testing Procedure

Alternator Testing:

- ◆ Check all wiring for burnt or loose electrical connections. Repair as needed.
- ◆ Check all grounds and electrical connections to confirm they are clean and tight.
 - Alternator ground to chassis frame.
 - Motor block ground to chassis frame.
 - Chassis battery ground to chassis frame.
 - Alternator positive output to isolator relay terminal.
- ◆ Inspect the alternator for damage.
- ◆ Check belt, pulley and fan for wear. Replace as needed.

- ◆ **DO NOT** disconnect the battery or battery wire from the alternator with the engine running as this can damage the alternator or regulator.
- ◆ The pulley for the alternator should be torqued to 80 ft. lbs.
- ◆ Chassis battery voltage with the engine OFF should range from 12.2 to 12.7 Volt DC.
- ◆ Chassis battery voltage with the engine at idle should range 13.5 to 14.2 Volts DC.
- ◆ The output of the alternator range is 13.6 to 15.4 Volts DC. Connect a volt meter to the (B+) terminal of the alternator and chassis ground. Idle the engine up to 1200 RPM.
- ◆ Connect a clamp-on amp-meter, if available, to the positive battery cable to verify the battery state/rate of charge.

CAUTION

The alternator is not a battery charger. The alternator is designed to maintain proper electrical system voltage. A battery with a low state of charge, or a dead battery, may overheat and damage the alternator.

STEERING COLUMN Smart Wheel Operation


The steering wheel system consists of electronic modules enclosed in the steering wheel and a Master Controller located inside the dash.



080508

Four wires utilizing a “clock-spring” connector in the steering column accomplish communication between the steering wheel and the Master Controller. The Master Controller decodes the signal for the closed switch and operates the corresponding outputs for that function. Two additional wires provide power and ground for the steering wheel backlighting.

The 3 Amp fuse on the Master Controller is for backlighting the switch panel. LED draw is

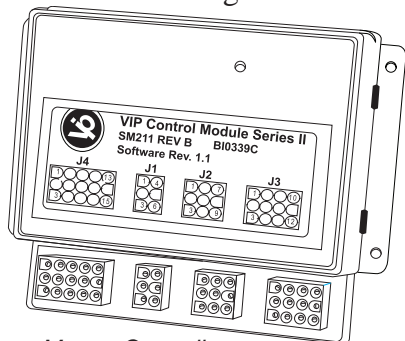

Master Controller

080490b


approximately 20 mA.

Another function of the smart wheel is the “High Idle” feature.


HORN: The horn bar on the steering wheel sends the appropriate signal to the Master Controller causing the horn to sound when pressed.

Left Control Pad

HEADLAMP FLASH: The headlights must be on low beam for this switch to operate. Press and hold the headlamp flash switch to dim headlights from low beam to daytime running light brightness (approximately 80% of low beam). Daytime running lights are activated with the ignition and cannot be turned off.

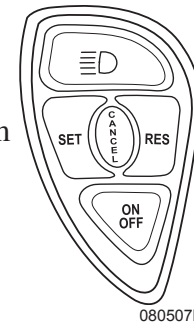

080507b



Cruise Function:

ON/OFF: Cycles cruise system on and off.

CANCEL: Signals cruise system to disengage without losing the current speed memory setting.

RES (RESUME): Actuates cruise resume function of engine controller.

SET: Sets cruise speed.

WARNING

DO NOT use cruise control in heavy traffic or on roads that are winding, slippery or unpaved. DO NOT shift the transmission into “N” (Neutral) with the cruise control on. High engine RPM run up will occur until the cruise control is turned off.



To Use High Idle Feature:


- ◆ With the cruise control ON (see dash light), press and release the RES button. Each time the switch is pressed and released, the idle will rise 25 RPMs, from approximately 500-800 RPM. To lower the idle, press and hold the SET button. Engine idle speed will decrease.
- ◆ With the Cruise Control ON, press and release the RES button once. Engine speed will increase to approximately 1,100 RPM. Push and hold the RES button, engine speed will increase to 1,400 RPM. Use CANCEL or turn the cruise control OFF to return the engine to an idle.
- ◆ With the Cruise Control ON, press the SET button once. Engine will increase to approximately 1,200 RPM. Press and hold the SET button, engine speed will decrease to 800 RPM. Use CANCEL or turn the cruise control OFF to return the engine to idle.

NOTE

The transmission will not shift into gear if the engine RPM is at or above 900. The display will flash “6” indicating the engine RPM is excessive. Select “N” and lower the engine RPM. The brake also deactivates high idle.

Right Control Pad**MARKER FLASHLAMP:**

Pressing Marker Flash lamp causes the taillights and all marker lights to momentarily flash.

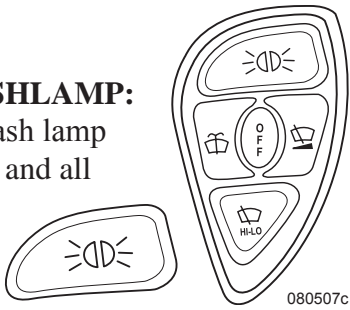

080507c

Wiper Function

The windshield wipers are driven by a single motor. Turning ON any wiper function will turn on the headlamps. To turn off headlight illumination, turn off the ignition, or activate and then deactivate the dashboard headlamp switch.

OFF: Cancels all wiper operations. Wiper function is also cancelled when the ignition is turned off.



HI-LO: When the button is pressed, wipers activate on low speed. If the button is pressed again, the high wiper speed setting is activated. Subsequently pressing the HI-LO button will alternate wiper operation between low and high speed mode.



WIPER WASH: Activates the wash pump relay while the button is pressed. If no wiper function is selected, the low wiper will activate for a period of approximately three wiper cycles, after the switch is released. If any wiper functions are selected, the wipers will continue to run in the selected mode after the wash button is released.



WIPER VARIABLE: Operation of the Wiper Variable button causes the low speed wiper function to activate for one wipe. If the button is pressed again within approximately 30 seconds, the low speed wiper function activates and repeats at an interval determined by the time between the last two operations of the button. Additional button operations will shorten the cycle. Activating other wiper modes cancels the variable mode.




Example: In light rain or misting conditions press the button once to initially clear the windshield. If the windshield requires a second clearing, press the button again, setting the timed interval between subsequent wipes required by the current conditions. To extend the wipe interval, press the intermittent button twice more, or switch the wipers off and use the same method to set the desired interval.

Tilt & Telescope

Tilt and telescope steering wheel control lever is located on the steering column.

Push Forward For Right Turn,
Pull Back For Left Turn
For Bright or Dim
Headlights Pull Up and
Release

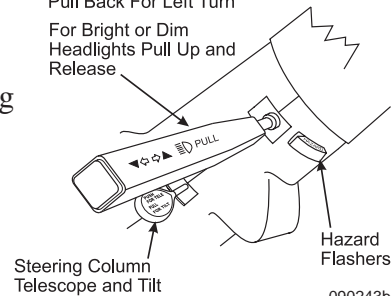Hazard
Flashers
090243b**To Tilt:**

- ◆ Pull the lever up and tilt the steering wheel to the desired level.
- ◆ Release the lever to lock the steering wheel in the new position.

To Telescope:

- ◆ Push and hold the lever down.
- ◆ Move the steering wheel to the desired location.
- ◆ Release the lever to lock the steering wheel in the new position.

Turn Signal Lever

A turn signal lever is located on the steering column. The ignition must be on for the signals to operate.

To Activate:


- ◆ Push the lever forward to activate right turn indicator.
- ◆ Pull the lever back to activate left turn indicator.

NOTE

An audible sound is heard when turn signals are activated. Applying the foot brake cancels the turn signal sound, releasing the foot brake activates the audible turn signal sound.

Turn Signal Indicator

on Mirror: A turn signal indicator is mounted on the side of each mirror. Upon activation of a turn signal the indicator will blink.

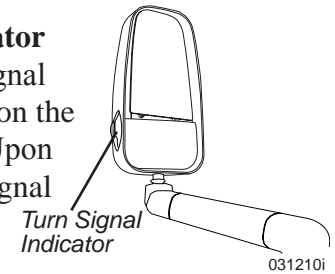

031210f

Headlight High/Low Beam Control

- ◆ Pull the turn signal lever up to select high/low beam circuits when the headlights are on.

Hazard Flashers

A hazard flasher button is located on the steering column.

To Activate:

- ◆ To turn on the four way flashers, pull out on the flasher button.
- ◆ To turn off the flashers, push the button in.


CONSOLE

NOTE

Switch and component placement on panels may vary.

Transmission Shift Selector

The keypads on the shift control are R (Reverse), N (Neutral), D (Drive), Arrow up, Arrow down, Mode button. A digital display window shows gear selection, various transmission modes, oil level and transmission fault codes.

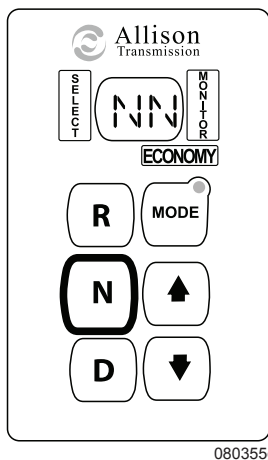

080355g


Parking Brake

The parking brake system is activated by pulling the push-pull control knob located on the driver's console. When the knob is pushed, the brake is released.

The air system must be fully charged and the motorhome at ride height prior to driving. Start the engine and allow the air system to fully pressurize. The air dryer will audibly purge air when the air governor attains cutout pressure.


WARNING

If the air system is not depleted when parked, it is possible to accidentally release the parking brake. Traveling with small children and/or pets may require fabrication of a small block to be placed under the park brake knob. A wooden clothes pin, clasped at the base of the shaft, will also work (block or clothes pin not included). DO NOT forget to remove before travel.

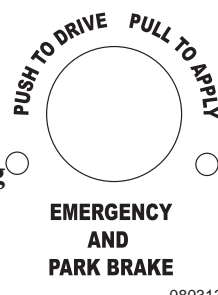

Leveling Controls

The hydraulic leveling system is operated from the control module to manually or automatically level the motorhome. The control features a multiple warning system with flashing lights and an alarm to alert of a jack down.

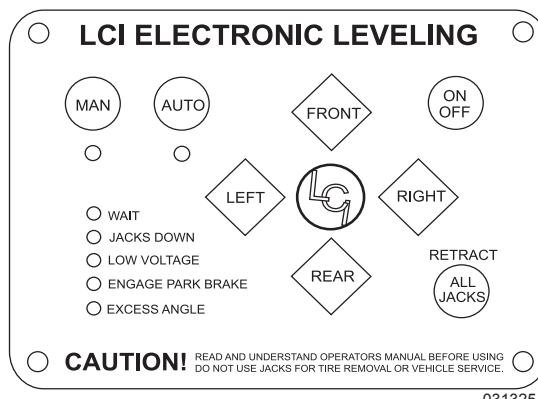

031325

DASH Instrument Panel

1. **COOLANT TEMP:** Indicates an approximate normal operating range. Monitor this gauge frequently when climbing hills, towing or in high ambient temperatures. If the needle indicates an out of range condition take IMMEDIATE ACTION to avoid engine damage. Refer to the OEM instructions for specific temperature recommendations.
2. **TACHOMETER:** Displays engine speed in revolutions per minute (RPM).
3. **OIL PRESSURE:** Indicates oil pressure not the amount of oil in the engine. Refer to OEM manual for specific pressure recommendations.


WARNING

If oil pressure drops and the CHECK ENGINE icon illuminates, stop the engine and check oil level.

NOTE

When operating the engine cold, the pressure will be considerably higher due to increased viscosity (thickness) of the oil.

4. **SPEEDOMETER:** Indicates the speed of the motorhome. The gauge indicates MPH and KPH.
5. **ODOMETER:** Displays total mileage.

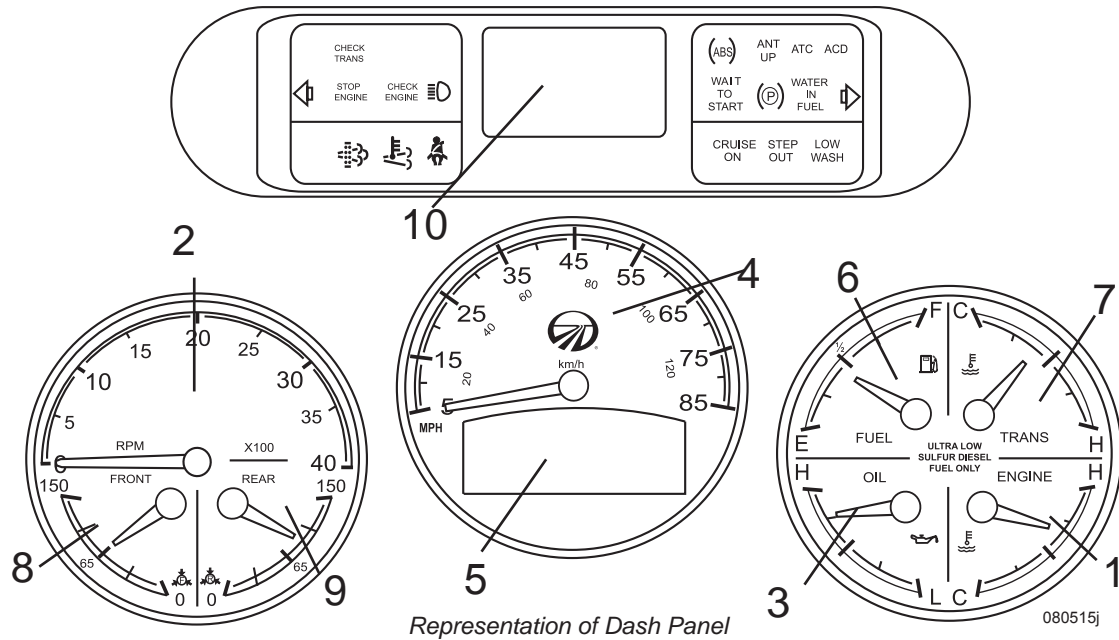

Representation of Dash Panel

6. FUEL: Fuel gauge registers approximate fuel tank level when ignition switch is in the run position.

NOTE

Fuel mileage varies with driving style and road conditions. Always average more than one tankful to obtain a more accurate figure. The diesel generator uses fuel from main tank and will affect fuel mileage figures. Diesel generators will not operate below $\frac{1}{4}$ tank to ensure there is enough fuel to run main engine.

7. TRANS TEMP: Shows approximate temperature of the transmission fluid. **DO NOT** let the transmission cooler oil temperature exceed OEM specifications. If excess temperature is indicated, stop the motorhome and shift to neutral. Accelerate the engine at 1200 to 1500 RPM and allow temperature to return to normal.

8./9. AIR PRESSURE GAUGE: Uses two needles to indicate air system pressures. One needle indicates air pressure of the front air tank. The other needle indicates air pressure of the rear air tank. The normal air system operating pressures are 90 to 130 psi. These air pressures are preset at the factory. If a problem occurs with either air system not maintaining normal operating pressure, it is an indication of a malfunction in the air system. Use caution and stop the motorhome in a safe area. Contact a qualified technician immediately.

10. LCD DISPLAY: The LCD displays chassis data and fault codes. A ten button controller is located on the dash. Press the up and down arrows to scroll through menus, and press the enter button to select items.

The LCD display will show the following warnings:

- ◆ Eng Comm Failure
- ◆ ABS Comm Failure
- ◆ Trans Comm Failure
- ◆ Low Oil Pressure
- ◆ High Trans Temp
- ◆ High Coolant Temp
- ◆ Low/High Battery
- ◆ Low Air Pressure – Front
- ◆ Low Air Pressure – Rear
- ◆ Low Fuel Level
- ◆ Engine Not Running
- ◆ Low Coolant Level
- ◆ Alt Fail
- ◆ Turn Signal
 - For “Turn Signal” to display the motorhome must be driven at least one mile with turn signal activated before warning appears.


How to Adjust Screen Contrast:

1. Press DIAG button on LCD Controller.
2. Arrow down to 4 – Ins. Diag. Press enter.
3. Arrow down to 5-Contrast. Press enter.
4. Use arrow buttons to select value desired. 40 is the default value.
5. Press MAIN button on LCD Controller to exit.

NOTE

Layouts may vary with difference in models or options.

LCD Controller

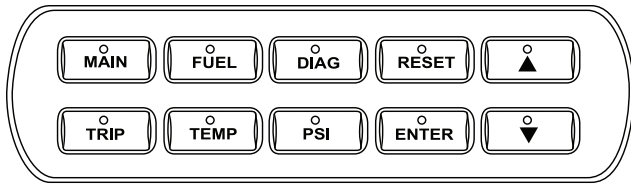

LCD Controller

080515f

Main – Press at any time to return to the main screen. The main screen displays outside temperature, chassis battery voltage and odometer.

Trip – Press to view Trip menu. Use the up or down arrow to highlight a trip, and press the Enter button to view trip information. Trip information includes average speed, distance traveled, trip time and fuel used.

Fuel – Press to display average miles per gallon, instantaneous miles per gallon, and fuel used. Hold the reset button for five seconds to clear.

Temp – Press to view outside, basement, transmission and engine coolant temperature.

Diag – Press to view engine, transmission, ABS, and LCD diagnostic menu. Use the up and down arrow to highlight an option from the menu. Press the Enter button to view diagnostic information and options.

NOTE

PnP (Plug & Play) is a diagnostic function for qualified service technicians only.

PSI – Press to view oil pressure, turbo boost pressure and front and rear air tank PSI.

Reset – Press and hold for five seconds to clear selected trip information (trips 1 through 4 can be individually selected for reset).

Indicator Lights

1. CHECK TRANS: Alerts of problems related to the Allison Transmission. The light should momentarily illuminate when the ignition is switched ON. When starting, the lamp will extinguish indicating the circuits are working properly. If the lamp fails to illuminate or remains on, the transmission needs to be checked immediately. Contact the nearest Allison dealer.

2. LEFT ARROW: Audible Turn Indicator: Left turn indicator circuits active. Alarm cancels when service brake is applied.

3. STOP ENGINE: A severe out of range condition exists within the engine protection circuits. Pull over and stop as soon as possible. Shut-off the engine to avoid damage to the engine or related systems.

4. CHECK ENGINE: An out of range condition exists within the engine protection circuits. Have the motorhome serviced as soon as possible.

5. HIGH BEAM: High beams are active.

6. DPF: The DPF (Diesel Particulate Filter) light signals an active regeneration cycle is necessary, but unable to initiate. See Section 10 for more information.



090502
DPF
Indicator Light


7. HEST: The HEST (High Exhaust System Temperature) light illuminates when an active regeneration cycle is underway and exhaust temperatures are elevated. No fault exists as long as there are no other active warning lights. See Section 10 for more information.



090502
HEST
Indicator Light

8. SEATBELT LIGHT: Stays lit for approximately eight seconds after the key is turned on.

9. ABS: Indicates possible fault in the ABS Brake system.

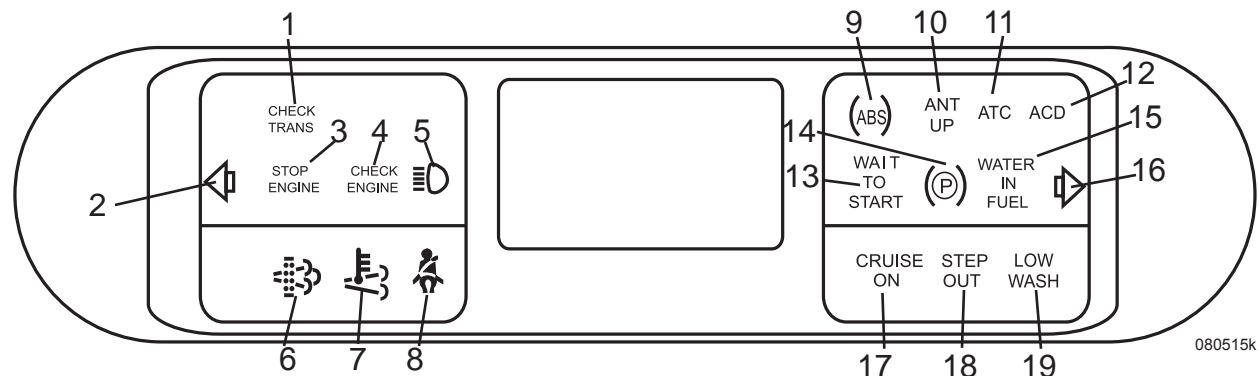

080515k


10. **ANTENNA UP:** Illuminates when the TV antenna is raised. Lower the antenna before moving the motorhome.
11. **ATC:** The ATC (Automatic Traction Control) light is continuously lit when ignition is first turned on and stays lit until the brakes are used for the first time and then turn off. The ATC light will flash continuously when the ATC switch (located on the driver console) is on. See Section 10 for more information.
12. **ACD:** Not used.
13. **WAIT TO START:** Monitors manifold preheat. Wait for lamp to cycle off before cranking engine.
14. **PARK BRAKE:** Parking/emergency brake is applied.
15. **WATER IN FUEL:** Water has been detected in the primary fuel filter. Purge water from filter at engine compartment.
16. **RIGHT ARROW:** Audible Turn Indicator: Right turn indicator circuits active. Alarm cancels when service brake is applied.
17. **CRUISE ON:** Cruise control is activated.
18. **STEP OUT:** Not Used.
19. **LOW WASH:** Indicates low windshield washer fluid.

NOTE

Some of the items depicted in the dash drawing are not used depending on floorplans and equipment options.

Switches

Dash switches come either with or without a bar light. The bar light indicates the item/function is active. Icon lighting for both switch types illuminate with panel lamps. Dash switches can be illuminated and dimmed if desired, by turning the headlight switch counterclockwise. Rotating clockwise dims and turns off the switch light.

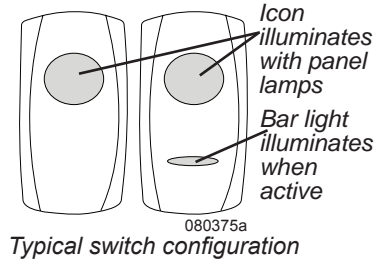

Typical switch configuration

DRIVER'S CONSOLE

EXH BRAKE: The exhaust brake is an auxiliary braking device for slowing down the motorhome. The exhaust brake is an effective device for speed control in town and on local routes. The exhaust brake is not a substitute for service brakes. **DO NOT** neglect service brake maintenance.

ATC: The ATC system improves traction on slippery or unstable surfaces by preventing excessive wheel slip. (See Section 10 for detailed information.) An indicator light on the dash turns on with the switch.

PEDAL IN/OUT: Use the pedal in/out switch to adjust the brake and throttle pedals. The switch moved the pedals inward or outward. When the pedals reach the end of

their traveling distance the motor will stop. Release the switch. **DO NOT** continue moving the pedals. Damage to the motor and/or fuse may result if operation of the switch continues after reaching the fullest extend or retract position.


AIR DUMP: Manually dumps all air out of air bags. Air dump may aid in leveling the motorhome. Releasing the air from air bags gives more range of travel for leveling. Ignition must be in accessory or run position.

CAUTION

DO NOT drive the motorhome with the air bags deflated. This may damage the motorhome.

MIRROR HEAT: Turns on the heaters in outside rear view mirrors. The mirror heaters should be used when defogging or deicing is needed. Mirror heat should not be left in the ON position unless continuous fogging conditions occur.

MIRROR ADJUST: To adjust the rear view mirror the small selector in the middle of the switch must be placed in the desired side. The middle position is to prevent accidental bumping of the switch and changing of the mirror position. The outside mirrors have been placed to easily adjust with the Allen wrench. After taking delivery of the new motorhome it will be necessary to adjust both the driver and the passenger mirrors.

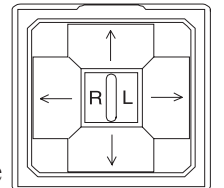

060097

Driver's Dash & Dash Console

HEADLIGHT: Pull one click to operate the parking lights. Pull two clicks to operate the headlights. Rotating the headlight switch counterclockwise illuminates the dash lights. Rotating the switch clockwise dims the dash lights.



NOTE

If the headlights are left ON and the ignition turned OFF a warning bell sounds alerting the driver that headlights are still ON.

- **Driver Map Light:** Above the driver is a map light. To turn on, rotate headlight switch counter-clockwise. To turn off, rotate switch clockwise. The battery cut-out switch must be on for the map light to operate. The map light cannot be dimmed.

SIDE DOCK: Operates the side docking lights to increase visibility when parking.

FOG LIGHTS: Operates the fog lights with the ignition key on and the headlights in the low beam position. The fog lights will go off when the headlights are switched to high beam.

BATT BOOST: A switch that connects the house batteries and chassis batteries to assist in starting the engine in the event the motorhome chassis battery has been drained and cannot start the engine.

DRIVER SHADE: Operates the power sun visor located on driver's side.

PASS SHADE: Operates the power sun visor located on the passenger side.

GEN SET: The generator automatically initiates a preheat cycle when the switch is pressed to START. The preheat cycle is indicated by the light on the switch flashing rapidly. Depending on ambient temperature, preheat cycle may last up to fifteen seconds.

- **To Start the Generator:** Press and hold the switch to START. The light flashes rapidly indicating the preheat cycle. At the end of the preheat cycle the engine will crank and start. Release the switch after the generator has started and is operating smoothly.

- **To Stop the Generator:** Momentarily press the switch to STOP. It is not necessary to hold the switch until the generator has stopped.


STEP COVER: Extends and retracts the step cover.

WARNING

When operating the stepwell cover be sure there are no pets, shoes or other obstructions in the stepwell area. Do not operate the stepwell cover while standing in the stepwell area.

RADIO: This is a power switch for the radio. The dash radio ON/OFF switch must also be on in order for the dash radio to operate.

BACKUP MONITOR: Used with the back up camera and will display the rear view of the motorhome.

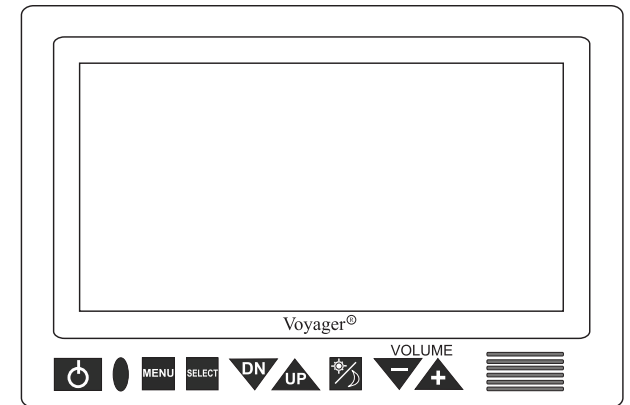

Passenger Console

STEP COVER: Extends and retracts the step cover.

MAP LIGHT: Turns ON and OFF map light. The battery cut-out switch must be on for map light to operate.

STEP LIGHT: Operates step light.

By Entry Door

BATT CUT OUT: Turns house battery power on to 12 Volt interior fuse panel.

CEILING LIGHT: Illuminates the front ceiling light from the entry area.

ENTRY STEP: Provides power to operate the entry step through magnetic switches.

PORCH LIGHT: Turns ON and OFF the outside porch light.

PATIO AWNING ON-OFF: Turns power on and off to the patio awning.


PATIO AWNING EXT-RET: Extends and retracts patio awning.

DOOR AWNING: Extends and retracts door awning.

STOR LIGHTS: Turns the storage compartment lights ON and OFF.

AIR CONDITIONER & HEATER CONTROLS

Blend Air System

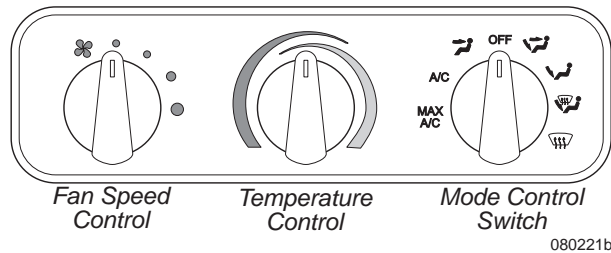

The system is designed to provide heating, cooling and defrost for the pilot and co-pilot area. The system is not capable of heating or cooling the entire motorhome.

Fan Speed Switch: Controls the four speeds of the blower motor. This is one of the most effective ways of controlling temperature. The mode control switch must be in the OFF position for the blower to activate.

Temperature Control Switch: Setting the switch to the red zone controls an electric water valve regulating the amount of engine coolant passing through the heating coils in the system giving warm air. Rotating to the blue zone sets the cut-in/cut-out temperature of the air conditioning compressor on the engine giving cool air.

Mode Control Switch: Directs air flow by opening or closing damper doors. Use the Mode Control Switch to direct airflow where it is needed to maximize comfort in the cockpit area.

NOTE

The air conditioning compressor is activated when using MAX A/C, A/C, MIX and DEFROST.

LUBE

Activate the A/C system monthly to keep internal components of the compressor lubricated.

MAX A/C – Use this setting for maximum cooling. Rotate the Temperature Control switch fully counterclockwise into the blue scale then select the highest Fan Speed. In MAX A/C mode, the Temperature Control switch will have minimal effect on temperature. MAX A/C operation is achieved by closing off a damper door to outside air and using re-circulated air from the motorhome interior. The air is discharged through the dash louvers and foot louvers. In addition, select this position to keep outside air from entering the motorhome.

A/C – Use this setting for cooling. Adjust the Fan Speed switch and the Temperature Control switch to the desired comfort level. In the A/C position air is drawn through the front air intake (exterior) of the motorhome through the A/C coil. The air is discharged through the dash louvers and foot louvers.

VENT – Use this setting to ventilate the interior when air conditioning is not required. Adjust the Fan Speed switch and Temperature Control Switch for desired comfort level. In the VENT position air is drawn in and discharged through the dash louvers and foot louvers.



OFF – Use this setting to turn the system off. This will shut off the blower and prevent outside air from entering the system.




BI-LEVEL – Use this setting to utilize outside air. Adjust the Fan Speed switch and Temperature Control switch for desired comfort level. The air is discharged through the floor louvers and the dash louvers.



FLOOR – Use this setting for maximum heating. Rotate Temperature Control fully clockwise into the red scale, and move Fan Speed clockwise to the highest fan speed. For reduced heating, adjust Fan Speed, then Temperature Control to desired comfort level. In the FLOOR position air is drawn in and discharged through the floor louvers and defrost louvers. The system will also discharge a smaller amount of air through the dash louvers.




MIX – Use this setting to heat the interior and help defrost the windshield. Adjust Fan Speed and Temperature

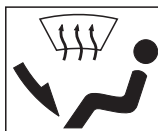

Control for desired level of heating and defrosting. In the MIX position air is drawn in and discharged through the floor louvers and defrost louvers. The system will also distribute a smaller amount of air through the dash louvers. The system also operates to dehumidify the discharged air.

DEFROST – Use this setting for maximum defrosting.

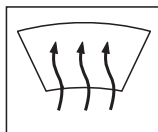

Rotate Temperature Control fully clockwise, and select the highest Fan Speed. In DEFROST position air is drawn in and discharged through the defrost louvers and foot louvers. The system will also distribute a smaller amount of air through the dash louvers. The A/C compressor operates to dehumidify discharged air.

TIP

Air will heat up faster with a slower Fan Speed until normal operating temperature ranges are reached.

Maintenance

A seasonal inspection should be performed by a qualified service technician. Some items to check include:

- ◆ Inspect the inlet to the evaporator coil for lint, dirt or other foreign materials which may have been drawn into the unit. Any obstruction of the evaporator coil will impair cooling efficiency and reduce air flow.

- ◆ Clean the condenser coil of bugs, leaves, or other debris.
- ◆ Inspect compressor drive belt for wear and proper tension.

INFORMATION

For additional information contact SCS/Frigette Technical Service at 1-800-275-7524 or Customer Service at 1-800-545-6341.

Operating Tips & Hints

Air intake and discharge temperatures are greatly affected by ambient temperatures and relative humidity. A large amount of cooling capacity is used to dehumidify as well as cool air. After three to five minutes of A/C operations, discharged air temperature should be approximately 20° to 30° F. cooler than the fresh or recirculated air entering the A/C system.

At the beginning of the day, activate the compressor with the engine at idle. This will avoid sudden high speed activation resulting in possible damage from lack of internal compressor lubrication.

Winter Use:

- ◆ De-ice the windshield using the DEFROST mode.
- ◆ Air will heat up faster with a slower fan speed until normal operating temperature ranges are reached.

Summer Use:

- ◆ Close all windows and vents to hot, humid outside air.
- ◆ MAX A/C and HI fan provides quick cool down.

- ◆ Use a lower fan speed to produce cooler air.
- ◆ Temperature Control switch must be set to the blue zone for cool air.

Heat and Defrost Operation:

- ◆ Set the Mode Control Switch to the desired position.
- ◆ Set the Temperature Control Switch to the red zone.

Heater: The heater warms the air in the dash area. Much like the refrigeration side of the system, a liquid will be used in the process. This liquid is the engine coolant. The coolant is passed from the radiator to an electronic water valve. When open, the water valve will allow the coolant to flow through the heater core. The heater core is much like a miniature radiator. Air is drawn into the system by a blower motor through the outside recirculation door opening. Air is blown through the A/C evaporator core and then through the heater core. When the temperature control is in the WARM position coolant flows through the heater core. When the temperature is in the COOL position coolant flow bypasses the heater core. In either position, the airflow is felt at the discharge vents.

Electric Water Valve: The water valve controls the water flow to the heater core.

Functional Test:

- ◆ Start and operate the engine until the water reaches normal operating temperature.
- ◆ Set the HVAC temperature control to the full hot position.

- ◆ The discharge air outlets should have hot air.
- ◆ Rotate the temperature control to full cold position.
- ◆ Allow 10 minutes for the temperature to stabilize.
- ◆ The discharge air outlets should have cold air.

System Components

Compressor - The compressor is belt driven from the engine through the compressor and electronic clutch pulley. The compressor will pump refrigerant from a low-pressure gas into a high-pressure, high-temperature gas. This is the start of the refrigeration process.

Condenser - The condenser is made of coils and fins which provide rapid transfer of heat from the refrigerant as external air passes over the coils. The high-pressure gas is changed to a high-pressure liquid.

Condenser Fan - A steady flow of cooling air is maintained across the condenser during system operations.

Receiver-Drier - Refrigerant leaves the condenser, enters the receiver-drier and is stored until needed. The drier filters out moisture in the system. It only takes one drop of moisture to cause a malfunction in the cooling unit.

Expansion Valve - The expansion valve suppresses refrigerant into the evaporator according to cooling requirements. The pressure is reduced in the restrictive effort of the expansion valve. A part of the valve is the capillary tube assembly. The capillary tube is the sensing bulb at the outlet of the evaporator.

Evaporator - A tube core and fins are used in the evaporator similar to the condenser. Air is blown through the fins to allow the evaporator to cool and reduce pressure.

Blower and Motor - The evaporator has a fan called the blower. The blower will draw air from the cab area and force the air over the evaporator coils and fins. This forced air will ensure continuous vaporizing of the refrigerant.

Relays and Switches - Both electronic and vacuum switches are used in the control and operations of the system.

Vacuum Generator - The vacuum generator, located at the front firewall, is important to the operation of the dash heating and A/C systems. This provides the vacuum to open and close the vacuum switches. The vacuum generator creates 15 inches of vacuum that is passed to a reservoir ball. Most dash heater and A/C systems will only require 10 inches of vacuum to operate the switches. The output from the reservoir is sent to the vent

control knob. The control knob will then direct the vacuum operation to the appropriate vacuum switch to open or close vents and switches. When the ignition is on and the A/C is operating, the vacuum generator will operate.

Troubleshooting

The dash A/C and Heat system uses a combination of compressed air (developed by the chassis system), vacuum air (developed by the vacuum generator) and electric relays and vacuum switches. Therefore, any repair can be classified in one of five categories:

- ◆ Electrical
- ◆ Vacuum
- ◆ Air Conditioner
- ◆ Heater
- ◆ Defroster

No Cooling:

- ◆ Check that the blower is operating, A/C switch is in A/C or MAX A/C position, temperature control is turned to MAX cooling (blue area).
- ◆ System fuses are not blown.
- ◆ Condenser fan is operating.
- ◆ Check power supply to unit and grounding of system.
- ◆ Check wiring.
- ◆ Coolant valve is leaking.
- ◆ Drive belt is loose or broken.
- ◆ Compressor Clutch is inoperative, will not engage.
- ◆ Expansion Valve is faulty or frozen.
- ◆ Thermostat control is faulty.
- ◆ Mode control switch is faulty.

- ◆ Compressor is faulty.
- ◆ Loss of refrigerant.

NOTE

An ultraviolet or UV Blue Light cube is used for leak detection when dye is introduced to the A/C System.

Reduced Cooling:

- ◆ Coolant valve not operating correctly.
- ◆ Air passages are obstructed.
- ◆ Loose or worn drive belt.
- ◆ Check blower and select switch.
- ◆ Thermostat control valve is faulty.
- ◆ Expansion valve is faulty.
- ◆ Compressor is faulty.
- ◆ Low refrigerant charge.

No Heating:

- ◆ A/C switch is turned off.
- ◆ Blower switch is turned off.
- ◆ Verify the proper engine coolant level.
- ◆ Verify that the engine is reaching operating temperature.
- ◆ Verify engine coolant is reaching water valve attached to unit.
- ◆ Verify operation of water valve to permit engine coolant to pass through valve to heater core.
- ◆ Check unit fuses.
- ◆ Check power supply to water valve and grounding.
- ◆ Check wiring.
- ◆ Engine thermostat faulty.

Blower Does Not Operate or Runs Slow:

- ◆ Check fuses.
- ◆ Check for loose or corroded connection.
- ◆ Check wiring.
- ◆ Check to ensure ignition switch is on.


- ◆ Check blower and select switch.
- ◆ Motor shaft has seized.
- ◆ Blower wheel is out of alignment.

Damper Doors Do Not Operate:

- ◆ Is the vacuum generator being powered and producing a vacuum?
- ◆ Check the vacuum line entering the unit for vacuum.
- ◆ Check that the vacuum solenoid mounted on unit is receiving power from the mode switch. If operating properly, the vacuum solenoid will feel hot if current is engaging the solenoid.
- ◆ Check the mode switch.
- ◆ Check wiring.
- ◆ Check for a pinch in the vacuum line leading to the vacuum motor that operates the damper door in question.

DIAGNOSTIC PLUG LOCATION


The diagnostic plug is located under the dash on the left side of the steering column. Through this plug, ABS, engine and transmission systems communicate over SAE J1939 electronic technology. J1587 is used to retrieve diagnostic codes from a particular system, such as the engine for example.

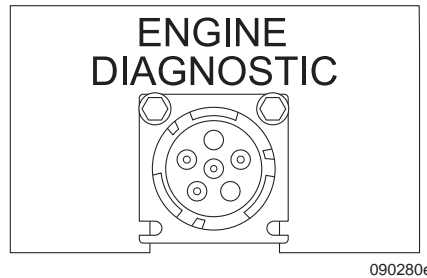

Engine Diagnostics:

The engine diagnostics will notify the operator of deviations from the programmed limits of the engine through the Warning light on the standard dash or Check Engine light on the optional dash. Should a system component with the engine develop a deviation, the Warning light or Check Engine light will illuminate and a diagnostic code will be logged and stored in the system memory. These codes are accessed by a service technician using special equipment.

ENGINE "NO START" FLOW CHART

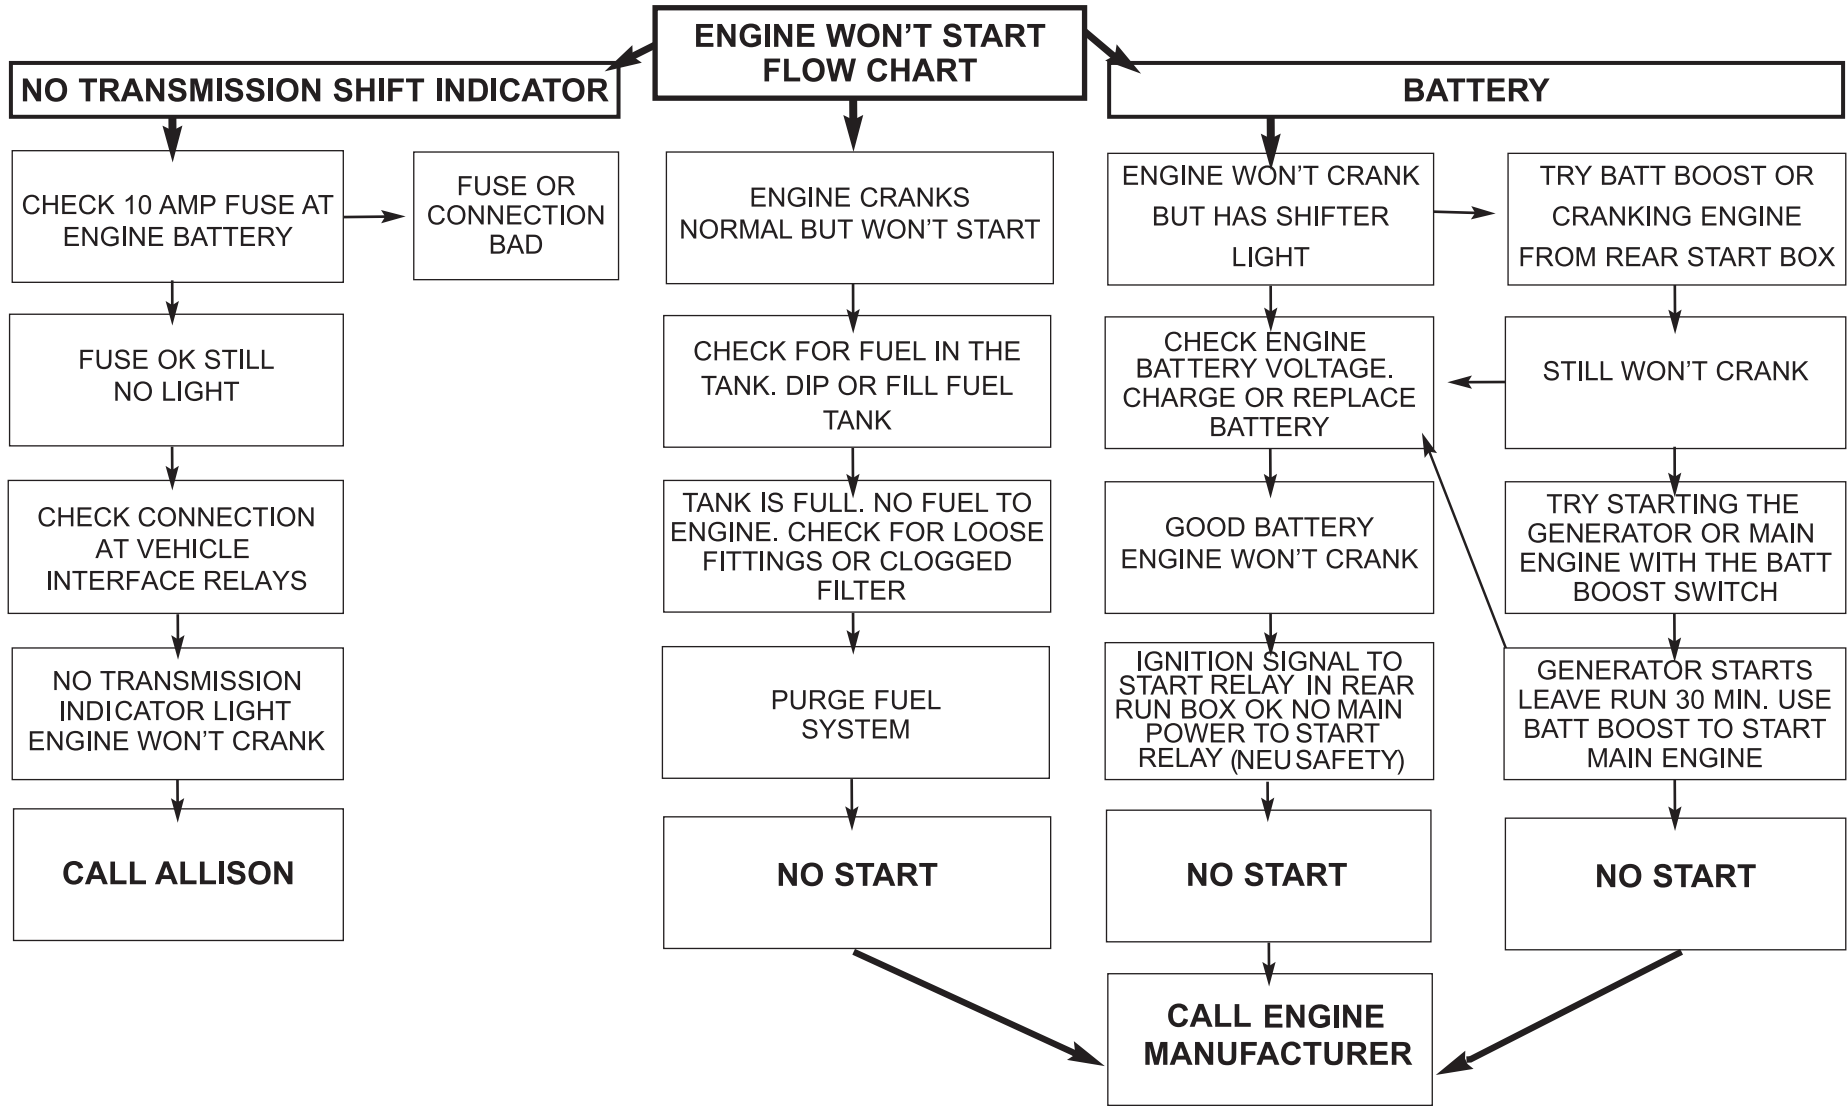

| | | | | | |
|--|------------|---|------------|--|------------|
| CHASSIS - INTRODUCTION | 198 | SHOCK ABSORBER | 215 | LUBRICATION MAINTENANCE | 238 |
| AIR SUPPLY SYSTEM | 198 | LEVELING SYSTEM | 216 | LUBRICATION CHARTS | 240 |
| Air Governor | 199 | Landing Gear Maintenance | 219 | SPECIFICATIONS CHARTS | 242 |
| Air Storage Tanks | 199 | Manual Override – If Jacks Fail To Retract... 220 | | Tank Capacities | 242 |
| Air Fittings..... | 200 | ENGINE - GENERAL INFORMATION | 222 | Engine Specifications | 242 |
| Air Coupler..... | 200 | STARTING PROCEDURE | 222 | Chassis Fluid Capacities..... | 242 |
| Air System Charging (External)..... | 201 | Normal Starting..... | 222 | Generator Specifications | 242 |
| Air System Test..... | 201 | Cold Weather | 223 | Belts & Filters..... | 242 |
| AIR DRYER | 202 | ENGINE OIL | 224 | FUSE & CIRCUIT BREAKER LOCATION | 243 |
| Desiccant Cartridge..... | 203 | ENGINE SHUTDOWN | 224 | Fuse & Circuit Breaker Location Chart | 243 |
| Desiccant-Type Air Dryer | 204 | Extended Engine Shutdown | 224 | BATTERY SPECIFICATION CHARTS | 244 |
| Air Dryer Cycle..... | 204 | COOLANT SYSTEM | 224 | Maintenance Records | 244 |
| AIR SPRING INSPECTIONS | 204 | Radiator/Charge Air Cooler | 227 | | |
| HEIGHT CONTROL VALVES | 204 | REAR GRILL | 228 | | |
| BRAKE SYSTEMS | 205 | EXHAUST BRAKE | 228 | | |
| Air Brakes | 205 | Operation | 228 | | |
| Park & Emergency Brake System | 205 | Functions..... | 228 | | |
| Automatic Slack Adjuster | 206 | TRANSMISSION | 228 | | |
| Brake Systems - Backup | 206 | Shift Selector | 229 | | |
| ABS/ATC SYSTEM (ANTI-LOCK BRAKES) | 207 | Check Trans Indicator..... | 230 | | |
| ABS Diagnostic | 207 | Periodic Inspections..... | 231 | | |
| FRONT AXLE | 209 | TRANSMISSION FLUID & FILTERS | 231 | | |
| Alignment | 209 | FUEL SYSTEM | 233 | | |
| Lubrication Maintenance Safety..... | 210 | Fuel Requirements..... | 233 | | |
| Steering Components..... | 211 | Fuel Tank..... | 233 | | |
| Steering Column | 211 | Fuel Sender..... | 234 | | |
| Drag Link | 212 | Fuel Lines & Hoses | 234 | | |
| Center Link | 212 | Fuel Filters | 234 | | |
| Steering Spindles | 212 | HYDRAULIC SYSTEM | 235 | | |
| Control Arm Bushings | 212 | Hydraulic Reservoir..... | 235 | | |
| Drum Brake Lubrication..... | 212 | Power Steering Hydraulic Filter..... | 235 | | |
| Steering Gear | 212 | AIR INTAKE & CHARGE AIR SYSTEM | 236 | | |
| DRIVE AXLE & DRIVE SHAFT | 213 | Air Filter | 236 | | |
| U-Joint Angles Phasing & | | Air Filter Restriction Indicator..... | 236 | | |
| Driveline Balance..... | 214 | DIESEL PARTICULATE FILTER | 237 | | |



CHASSIS - INTRODUCTION

This section contains information and instruction regarding various components of the motorhome chassis. Follow the guidelines and procedures to help understand and operate the motorhome. Complete instructions for engine and transmission may be found in each product's OEM manual included in the Owner's Information File Box.

WARNING

When welding is involved for motorhome repair or modification, only qualified, experienced technicians should weld on the chassis. Improper welding procedures and materials may weaken the assembly or result in damage that is not obvious and may not cause an immediate problem or failure. Unauthorized modifications or repairs to the chassis could result in a forfeiture of warranty coverage.

DANGER

Due to the sensitive nature of the electronics on the chassis, the following precautions are required to protect electrical components in the motorhome chassis.

1. Disconnect the (+) positive and (-) negative battery connection.
2. Cover electronic control components and wiring to protect from hot sparks.
3. Disconnect the terminal plugs from the engine Electronic Control Unit located on the curbside of the engine block.

4. Disconnect all the plugs from the transmission Electronic Control Module located in the roadside front electrical panel.
5. Disconnect the wiring from the alternator.
6. DO NOT connect welding cables to electronic control components.
7. Attach the welding ground cable no more than two feet from the part to be welded.

The Roadmaster chassis design provides exceptional balance, handling and braking characteristics. The Roadmaster chassis is an engine and frame unit featuring an all steel frame design, providing greater structural integrity and uniform stress distribution. Incorporated in the Roadmaster chassis is the air suspension system using eight air bags and gas shock absorbers. This design provides the smoothest ride, best handling and trouble free service while delivering excellent drive ability. The chassis also has a hydraulic leveling system. The Roadmaster chassis design offers unsurpassed ease of maintenance and service.

The towing system rating incorporated in the construction of the frame is 10,000 lbs. towing and 1,000 lbs. tongue weight.



The Roadmaster's exclusive raised rail chassis with air suspension consists of front and rear axles, with trailing links. A panhard bar on each axle controls side motion. Each axle mounts to the trailing links that are connected to the chassis. The raised rail design

of main chassis offers increased compartment storage space. The suspension control arms attach to the frame through bushings, which require no lubrication. The preset suspension ride height automatically maintains proper suspension height throughout the load range.


AIR SUPPLY SYSTEM

The air compressing system on the motorhome is comprised of several items: air compressor, air governor, air dryer, a front air tank and a rear air tank. The compressed air system operates several items, some of which include brakes, suspension, air horns, air gauge. The air system is charged by a gear driven air compressor mounted on the engine. As engine speed increases, compressed air output increases. When air is compressed, heat is generated. Heat dissipates as air is discharged from the compressor. Moisture condenses in the compressed air as it cools. The moisture laden air then enters an air dryer where the air is filtered. The filtered air charges the front air tank. The front air tank is divided in two halves: a wet side and a dry side. The compressed air enters the wet side before entering the dry side. A discharge line from the dry side of the front air tank charges the rear air tank. Discharge lines use inline check valves to prevent back flow of compressed air.

The pneumatically operated items are divided into two categories: brakes and accessory air. Brakes have full use of supplied air pressure. Accessory air items, such as air horns, receive air through pressure protection valves (PPV). The PPV will not allow compressed air flow until about 60 psi. In the event of an air system problem, the pressure protection valve will leave a reserve air charge for braking. Pressure protection valves are installed for safety.

Air Governor


The air governor regulates the air compressor to cut-in and cut-out, keeping the air system in the specified operating range of 90 to 130 psi, then sends an air “purge” signal to the Air Dryer.

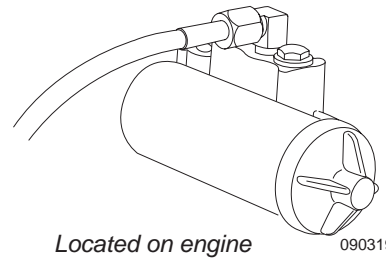

Located on engine


090319

Cut-in pressure of about 90 psi is factory preset from the governor manufacturer and is not adjustable. Cut-out pressure is calibrated to 125-130 psi. When cut-out pressure is reached, the governor will send an air purge signal to the Air Dryer. This opens the purge port of the Air Dryer, expelling moisture. The purge action of the Air Dryer is identified by the short release of air at the rear of the motorhome.

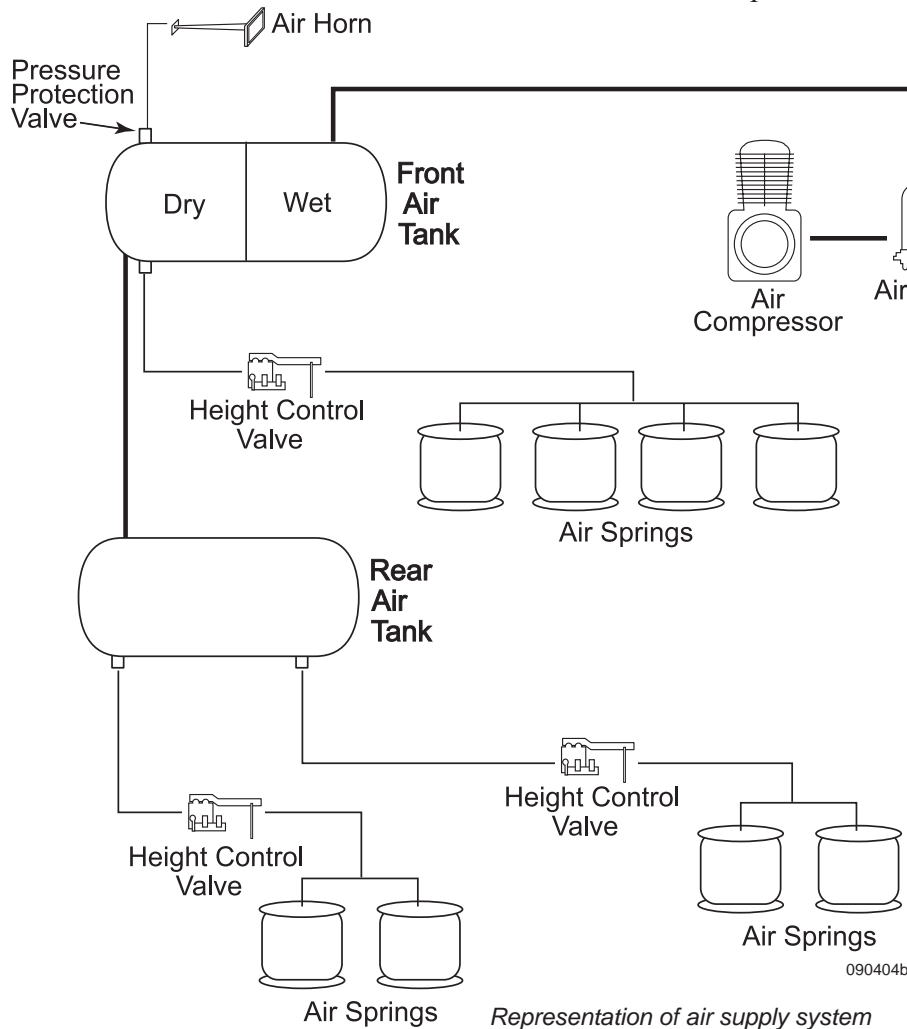


Air Storage Tanks

Manually drain the front and rear air tanks once a month, or more, depending on operating conditions and humidity levels.

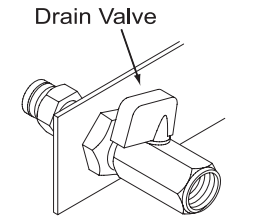

Rear tank drain: located next to rear hitch

090435c

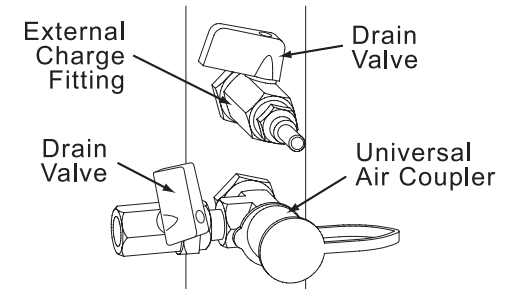

Front Tank Drain: located in generator compartment

090435b

To Drain the Tanks:

- Slowly open the drain valves. Moisture will be expelled under pressure. After all moisture and air is purged from the tanks, the valves should remain open an additional five minutes to allow any moisture remaining a chance to drain.
- Close valves and start engine. Check valves for leaks.

WARNING

Wear safety glasses to prevent eye injury from expelled moisture. Open drain valves slowly as moisture will be expelled under high-pressure.

NOTE


Both air tanks have a pressure relief valve which is set to release at approximately 130 psi.

Air Fittings

Push-in fittings are used to connect air hoses between pneumatically operated items. Fittings, sizes and types vary for different applications. Threaded fittings adapt the push-in fittings to connect pneumatically operated items. Parts include the release ring, locking ring, solid brass body and special rubber compound O-ring. Damaged hoses can be repaired by splicing.

To Disconnect Hose:


- ◆ Push hose into fitting.
- ◆ Push release ring down against locking ring portion of the fitting body.
- ◆ While holding the release ring down, pull hose away from fitting.

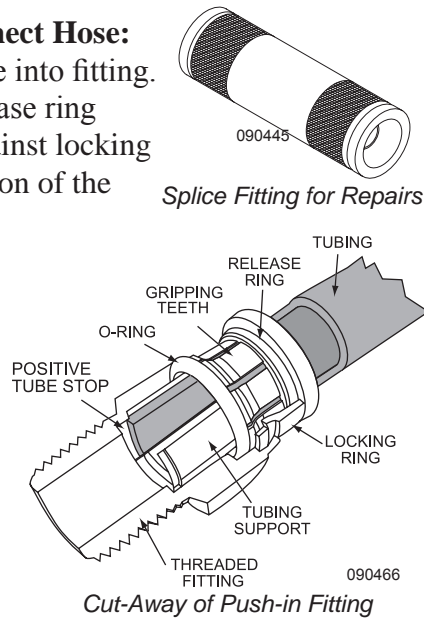


To Connect Hose:

DISCONNECT

Push hose and ring in.




Hold release ring in place.




Pull hose away from fitting.

CONNECT

Twist hose into fitting.




Pull hose to secure.




- ◆ Push hose into fitting through the release ring and the O-ring. Use a slight twisting motion to seat firmly against the internal tube stop.
- ◆ Pull hose away from fitting to expand and set inner seal. Ensure hose is properly retained in fitting.

CORRECT



INCORRECT

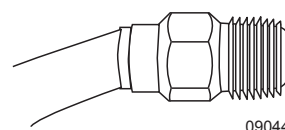

090446

NOTE

When putting air hose back into fitting, be sure that hose is cut as squarely as possible for an even seal in the fitting. The cavity of the positive tubing stop provides support to prevent leakage.

WARNING

DO NOT remove air hoses from fittings while system is pressurized. Serious injury may occur.


WARNING

DO NOT allow anyone under the motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Air Coupler

Provided for convenience is a remote air supply coupler located in the generator compartment. This female fitting will accept type C automotive connectors. This auxiliary air fitting may be used to inflate tires, air mattresses or other pneumatic items. This fitting is not designed to charge the air system

on the motorhome. The air supply for the auxiliary air fitting is charged from the front air tank through a pressure protection valve.

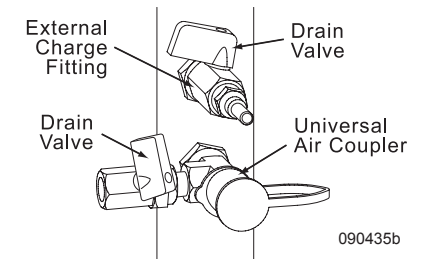

090435b

Located in generator compartment

To use this feature:

- ◆ Slide the locking collar back. Using a firm grip, fully insert the air fitting into the auxiliary air supply. Release the locking collar to retain the air fitting after the fitting is properly inserted.

To remove fitting:


- ◆ Firmly grip the air hose near the fitting to prevent recoil.
- ◆ Slide the locking collar back to release fitting.

NOTE

Due to air pressure restrictions in the pressure protection valve and tire stem valve, the maximum amount of tire pressure achieved when the system is used to fill a tire is approximately 115 psi with the air system on the motorhome charged to 130 psi. Maximum outlet air pressure is achieved when the air system completes the fill cycle indicated by the purge cycle of the air dryer. Use a short hose to reduce tire fill time.

Air System Charging (External)

The air system on the motorhome can be charged from an external air supply source. Located in the front generator compartment is a type C automotive male fitting. Caution should be used when charging the air system from this fitting. The air supplied from an external source may contain moisture. Compressed air introduced into the air system from this fitting is not filtered by the air dryer. The auxiliary air charge fitting will charge the front and rear air tanks. A shut-off valve is installed to prevent air from escaping.

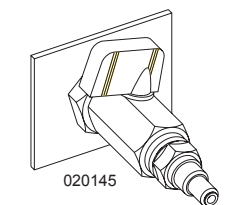

Located in generator compartment

CAUTION

The external air supply source should be regulated to charge the air system on the motorhome no higher than 120 psi. Damage to the air system or pneumatically operated items may occur.

Air System Test

Air system integrity is tested at the factory. The air system is equipped with several safety features. Periodically test these safety features for function as well as checking the air system for possible leaks.

NOTE

These tests can also be found in the Department of Motor Vehicle (DMV) air brake certification requirement. Some tests will require precautions for safety purposes.

Inflation Rate Test:

This will test how long it takes the air system to achieve a specific pressure in a timed event when starting at a lower pressure. This test will verify the minimum acceptable volume of compressed air created by the air system.

- ◆ Start engine. Increase engine speed to 1000 rpm.
- ◆ Beginning time for the test will commence when air system pressure obtains 85 psi.
- ◆ End time when system pressure obtains 100 psi.

Elapsed time must not exceed 45 seconds.

Air Governor Cutout Test:

The air governor controls action of the air system pump. This will test the air governor cutout pressure setting, which indicates system pressure has achieved maximum set psi.

- ◆ Start engine.
- ◆ Run engine until a chuff (air release) is heard from the air dryer.

Maximum cutout pressure must not exceed 155 psi. Air system pressure will stabilize between 135 to 145 psi.

Unapplied Pressure Loss Test:

This test will verify maximum acceptable air system pressure loss rate without use of any pneumatically operated devices. This test requires a flat, level surface as the park brake will be released with the engine off. Chock wheels to prevent vehicle movement.

- ◆ Start engine.
- ◆ Run engine until a chuff (air release) is heard from the air dryer.
- ◆ Shut engine off.
- ◆ Release the park brake.

Note system pressure after air system stabilizes from release of park brake. Air system pressure must not lose more than 2 psi per minute.

Applied Pressure Loss Test:

This test will verify the rate of maximum acceptable air system pressure loss with only the service brakes applied. **DO NOT** use other pneumatically operated devices during this test. This test requires a flat, level surface as the park brake will be released with the engine off. Chock wheels to prevent vehicle movement.

- ◆ Start engine.
- ◆ Run engine until a chuff (air release) is heard from the air dryer.
- ◆ Shut engine off.
- ◆ Release the park brake.
- ◆ Apply and hold service brake pedal.

Note system pressure after air system pressure stabilizes. Air system pressure must not lose more than 3 psi per minute.

Low Air Warning Test:

This test will verify low air warning buzzer/lamp activation. A Low Air warning buzzer or lamp will sound/illuminate should air system pressure fall to 60 or 65 psi.

- ◆ Start engine.
- ◆ Run engine until low air warning indicators are inactive.

- ◆ Shut engine off then turn key to ignition on.
- ◆ Fan (apply/release in quick succession) service brake pedal.

Low air warning indicator will sound no lower than 60 psi.

Park Brake Apply Test:

The park brake will automatically apply if low air warning indicator(s) are ignored and system pressure falls well below safe operating levels. A flat, level surface is required as the park brake will be released with the engine off. Chock wheels to prevent vehicle movement.

- ◆ Start engine.
- ◆ Run engine until low air warning indicators are inactive.
- ◆ Shut engine off.
- ◆ Release park brake.
- ◆ Fan (apply/release in quick succession) service brake pedal.

The park brake will automatically apply between 20 to 40 psi.

Park Brake Hold Test:

This test will verify engagement of the park brake. A flat, level surface is required. While the test is performed with the park brake applied, use precautions in case of vehicle movement. This test only verifies the park brake is engaged. It is not intended to verify the maximum amount of braking force created by the park brake.

- ◆ Start engine.
- ◆ Place transmission into gear. **DO NOT** release park brake.
- ◆ Apply light throttle, not to exceed 1,000 RPM.

Test confirms that the park brake is engaged and holding.

Air Governor Cut-In Test:

The air governor controls action of the air system pump. This will confirm the air governor cut-in pressure setting.

- ◆ Start engine.
- ◆ Run engine until a chuff (air release) is heard from the air dryer.
- ◆ Fan (apply/release in quick succession) service brake pedal until system pressure is between 110 and 115 psi.

Air governor cut-in pressure is approximately 90 psi.

Brake Grab Test:

This test will verify brake friction torque between the front wheels. This test requires a rapid and full pressure application of service brake pedal. Use proper precautions to prevent movement of cargo or other items that are not secured. This is a single vehicle test. Select deserted and level road surface (preferably a large and empty parking lot). Road crown, depending on severity, may affect test results.

- ◆ Start engine.
- ◆ Run engine until a chuff (air release) is heard from the air dryer.
- ◆ Release park brake.
- ◆ Accelerate to approximately 5 mph.

- ◆ Rapidly and firmly apply service brake pedal to bring vehicle to an abrupt stop.

The steering wheel will not pull to the left or right if front wheel braking torque is symmetrical.

AIR DRYER


The air dryer, located between the frame rails next to the transmission, removes moisture from the compressed air system to prevent freezing of brakes or other pneumatically operated items. The three functions of the air dryer are cooling, filtering and drying the system air. This prevents valve and seal damage or wash away of lubricants as well as freeze damage to the system components.

Air Dryer Cycle:

The governor turns the compressor on when the supply tank pressure drops below cut-in pressure. Compressed air then passes into the air dryer at the inlet port. Moisture-laden air and contaminants pass through the desiccant. Moisture is retained by the desiccant and collects in the base of the dryer. When the compressor reaches cut-out pressure the purge valve opens and the dryer purges and expels water collected in the dryer base. The regeneration valve opens sending a small charge of dry system air from the front air tank back through the dryer. The backflow dries the desiccant, preparing it for the next cycle.

Air Dryer Components:

1. **Purge Valve:** A valve located on the bottom of the air dryer base that remains open during a compressor unload cycle to allow collected moisture, condensation and contamination to expel from the air dryer during the purge cycle.
2. **Pressure Relief Valve:** Protects the air dryer from over-pressurization.
3. **Regeneration Valve:** Controls regeneration of the desiccant by allowing air from the supply and secondary tanks to bypass the outlet check valve.
4. **Heater Power Connection:** Provides 12 Volt DC power to the heating element.

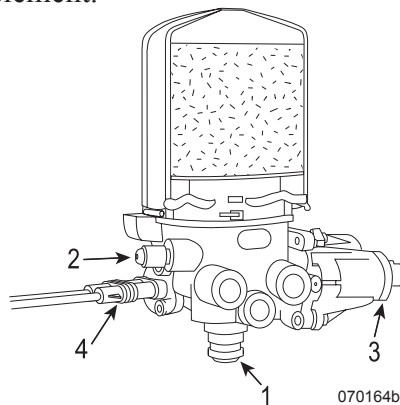

070164b

In extreme cold, verify that the air dryer heater is in good working order. The 100-watt heater in the air dryer is controlled by ignition power. The heater turns on below 45° F and off when the air dryer temperature is above 86° F.

WARNING

Remove all pressure from the air system before disconnecting any component, including the desiccant cartridge. Pressurized air can cause serious personal injury.

Desiccant Cartridge

Warm, humid air from the compressor condenses into either water or water vapor. A desiccant-type air dryer protects the air brake system by drying moisture-laden air before it passes through the air reservoirs and into the brake system. The replacement kit contains one cartridge and one O-ring.



To Replace the Cartridge:

- ◆ Loosen and remove the old cartridge. Use a strap wrench, if necessary.
- ◆ Remove and discard the O-ring from the dryer base.
- ◆ Inspect and clean the seal seat. Repair any minor damage.


NOTE

If the seats are damaged so badly that a tight seal cannot be maintained, replace the air dryer.

- ◆ Install a new O-ring.
- ◆ Lubricate the O-Ring on the stem with a thin layer of grease.
- ◆ Lubricate the cartridge seal with a thin layer of grease.
- ◆ Thread the replacement cartridge onto the base until the seal touches the base. Tighten the cartridge ONE additional turn. **DO NOT** overtighten.

NOTE

If an excess amount of water is present when performing the monthly air tank drain service, the filter for the air dryer may need to be changed.

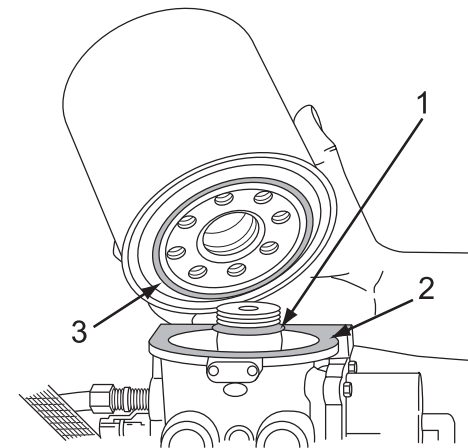

080223

1. O-Ring
2. Seal Seat
3. Cartridge Seal

| REPLACEMENT REQUIREMENTS | | |
|--------------------------|--|--|
| Components | When to replace? | Why? |
| Desiccant Cartridge | <ul style="list-style-type: none"> • Every two to three years. • When compressor is replaced. • Water in supply tank. | <ul style="list-style-type: none"> • Preventive maintenance. • Contaminated cartridge. • Saturated or contaminated cartridge, high duty cycle (wrong application of air dryer). |

Desiccant-Type Air Dryer

- ◆ Warm, humid air from the compressor condenses into either water or water vapor before entering the air dryer.
- ◆ A desiccant-type air dryer protects the motorhome air brake system by drying moisture-laden air before it passes through the air reservoirs and into the brake system.
- ◆ Water collects in the base of the dryer when warm air condenses the water before it enters the dryer, or inside of the dryer before the water reaches the desiccant.
- ◆ The desiccant material then removes additional water vapor, further drying the air.
- ◆ During regeneration phase, the regeneration valve and pressure-controlled check valve remove water from the desiccant bed with a backflow of dried, expanded system air.

Air Dryer Cycle

The governor turns the compressor on when the supply tank pressure drops below cut-in pressure. Compressed air passes into the air dryer at the inlet port:

- ◆ Moisture-laden air and contaminants pass through the desiccant.
- ◆ Moisture is retained by the desiccant. Moisture also collects in the base of the dryer.
- ◆ The governor turns the compressor off when the system reaches cutout pressure (approximately 130 psi).

- ◆ The dryer purges and expels water collected in the dryer base.
- ◆ When the regeneration valve opens, the dry system air flows back through the dryer. A small charge of air from the front air tank backflows through the filter. The backflow dries the desiccant, preparing it for the next cycle.

AIR SPRING INSPECTIONS

Items listed below should be checked when the motorhome is in for periodic maintenance.

WARNING

DO NOT attempt to service the air suspension on a motorhome with the air spring inflated.

- ◆ Inspect the Outer Diameter (OD) of the air springs. Check for irregular wear or heat cracking.
- ◆ Inspect air lines to ensure contact does not exist between air line and OD of the air springs. Air lines can rub a hole in an air spring very quickly.
- ◆ Ensure there is sufficient clearance around the complete circumference of the air spring while at maximum diameter.
- ◆ Inspect the OD of piston for buildup of foreign materials. On a reversible sleeve style air spring, the piston is the bottom component of the air spring.
- ◆ The correct ride height should be maintained. All motorhomes with air springs have a specified ride height established by the manufacturer. This height should be maintained within $\frac{1}{4}$ inch. This dimension can be checked with the motorhome loaded or empty.

- ◆ The leveling valves (or height control valves) assist in ensuring the total air spring system works as required. Clean, inspect and replace if necessary.
- ◆ Make sure to check shock absorbers for leaking hydraulic oil and worn or broken end connectors. If a broken shock is found, replace it immediately. The shock absorber will normally limit the rebound of an air spring and keep it from over extending.
- ◆ Check the tightness of all mounting hardware (nuts and bolts). If loose, tighten. **DO NOT** over-tighten.

Cleaning:

The approved cleaning method is to use soap and water, methyl alcohol, ethyl alcohol or isopropyl alcohol. Unapproved cleaning methods include all organic solvents, open flames, abrasive and direct pressurized steam cleaning.

HEIGHT CONTROL VALVES

Height Control Valves (HCV) inflate or deflate air springs to maintain proper suspension height throughout the load range. Two Height Control Valves are installed at the rear drive axle to control rear suspension height and left or right tilt of the motorhome. A separate HCV is installed to control front suspension height. The three HCVs mount to the main frame of the motorhome, above the axles, with a linkage rod connecting the valve to the axle.

Actuating components inside of the valves are oil dampened to reduce valve reaction to momentary suspension bounce and rebound. When a constant suspension change occurs, such as a load change or weight transfer through a sustained corner, the valve reacts by adding or purging air from the air springs as needed.

The air springs mount between the axle H-frame assembly and the two main frame rails. Air spring support plates mount to the main frame and the H-frame. There is a specified distance the air spring must maintain between the mounting plates. Other than specified distance between the plates will compromise ride quality and handling, and affect shock absorber travel, drive shaft angle, as well as various other running gear components.

BRAKE SYSTEMS

Air Brakes

The air brake system on the motorhome differs from a conventional automotive hydraulic braking system and should be treated differently. Proper maintenance and lubrication are the keys to keeping the air brake system in working order.

The air system supplies air to the foot brake, or treadle valve. Pushing down on the treadle valve supplies an air charge signal to a sealed brake chamber that consists of a spring and air bladder. The air charge signal pushes on the bladder and extends a threaded rod connected to the automatic slack adjuster. The slack adjuster rotates the S-cam expanding the shoes against the drum. Air disc brakes follow much the same principle, with the exception of the threaded rod directly activating calipers.

Consideration needs to be given to stopping distances and air system pressures. The motorhome requires longer stopping distances. Each brake application uses air from the air system, and engine speed is directly proportional to how fast that air system is replenished. Prepare for downhill grades. It may be necessary to select a lower gear and/or use the exhaust brake. Use individual short brake applications down long hills, rather than “riding” the brakes, to extend the life of the brake lining. Avoid overheating the brakes. Hot brakes have less stopping power. When maneuvering the motorhome around small areas, or backing into spaces, several individual brake applications might be made. Watch the air gauge. When preparing to back into a space swing the motorhome so it is aligned with the parking slot before backing up.

The air braking system on the motorhome is equipped with a low air pressure warning system safety feature. Should a low air condition arise while the vehicle is in operation, a warning will sound and a dash panel warning will appear at approximately 60 to 65 psi (pounds per square inch) to alert the operator.

Park & Emergency Brake System

The Park and Emergency Brake System (Spring Brakes) applies to the rear drive axle only. When the park brake is applied, air is released from the rear brake chambers, allowing the large spring in each rear brake chamber to manually push the brake pads against the rotor. The air system must be charged above 35 psi to allow the park brake to release. Pushing down on the park brake handle charges the rear brake chambers with air pressure, overriding the emergency brake springs and releasing the brakes. In the event of air loss while the vehicle is under operation, the park brake will automatically apply (this occurs at approximately 30 psi), acting as an automatic emergency brake system.

When preparing to depart, allow the air system to achieve full air pressure as indicated by the air gauge needles. Listen for the air dryer to purge, indicating function. Look and listen for abnormalities. Abnormal air pressure readings by either needle of the air gauge alerts the operator to have the air system checked to avoid an untimely failure.

Should a failure occur in the air system, preventing the air pressure from building, it may become necessary to “cage” the spring brakes (“cage” procedure in Section 2 Towing Procedures - Disabling Parking Brake). This is an emergency procedure only. Caging the rear air brake chambers manually overrides the spring brakes and allows the vehicle to move. This procedure does not affect normal service braking.

NOTE

When the park brake is released, the Park illumination lamp will remain lit until air system pressure is above 65 psi.

WARNING

When parked with the air tank not depleted, there is possibility of an accidental release of the parking brake. Traveling with small children and/or pets may require a small block to be fabricated to prevent accidental release. The block should be placed under the knob on the dash panel. A wooden clothes pin clasped at the base of the shaft will work.

Automatic Slack Adjuster

The braking system is equipped with automatic slack adjusters. As brake lining wears, the slack adjusters will automatically ratchet on the return stroke as needed. This ratchet action will keep the brake lining at proper adjustment. Automatic slack adjusters and the connecting S-cam shaft require periodic lubrication and inspection.

NOTE

Replacement parts should be of the same original equipment size and type. Mixing brake components may result in unequal braking action. Brake maintenance is not covered by the manufacturer.

WARNING

Brake lining may contain asbestos material and should only be serviced by qualified service technicians who are trained in the appropriate precautionary procedures. If any loss of braking effectiveness or abnormal braking indications are noticed, the

brakes and slack adjusters should be inspected by a qualified brake technician.

WARNING

DO NOT manually adjust the slack adjusters. If any loss of braking effectiveness or abnormal braking indications are noticed, the brakes and slack adjusters should be inspected by a qualified brake technician. Automatic slack adjusters are not designed to be manually adjusted.

Brake Systems - Backup

The motorhome air braking system is equipped with backup safety systems and warning alarms in the event of air system failure. For example: should the air compressor fail to charge the air system and low air gauge readings go undetected, a low air pressure buzzer will sound and a low air pressure dash light will flash. These warning indicators occur at approximately 65 psi to alert the operator of an impending situation. If the motorhome is allowed continued operation, the pneumatic emergency spring brake relay valve installed in the air system senses the low air pressure condition and will release the air charge from the spring brake air chambers on the rear drive axle. In this case, the park brakes will automatically apply at approximately 30 psi. This safety backup system acts as an automatic emergency brake system.

Another backup safety is the air system separation of the front and rear brakes, implemented by using two air tanks. One tank is located in the front and the other is located in the rear. This separation allows the front air tank to operate the front brakes; the rear tank operates the rear drive axle brakes. This tank division gives reassurance in case one tank experiences a failure of an accessory air item allowing the compressed air to escape.

Accessory air items are other pneumatically operated items such as the air horn, vacuum generator, etc. The accessory air items operate only when air tank pressures exceed 65 psi. This is done with pressure protection valves. Should an accessory air item fail, the pressure protection valve (PPV) reserves the remaining air pressure of 65 psi for braking. This will leave the motorhome with one air tank fully charged for safety backup.

The rear air tank also has a safety backup - the safety inversion valve. The inversion valve senses the absence of rear air tank pressure. In this case the inversion valve will allow the operator to make a modulated spring brake application in conjunction with the emergency spring brake relay valve. The inversion valve allows the front air tank pressure to recharge the rear brake chambers after the modulated spring brake application is made. This backup system implements use of all the brakes, allowing the operator to bring the motorhome a safe stop. In case of all compressed air charge escaping from the front air tank, the operator will still have full use of the rear brakes.

ABS/ATC SYSTEM (ANTI-LOCK BRAKES)

The motorhome is equipped with an anti-lock braking system (ABS) and automatic traction control system (ATC). The ABS system monitors wheel rotation speeds by using a 100-tooth magnetic tone ring mounted to the hub. Revolving with the wheel, the magnetic tone ring is polarized giving positive and negative pulsations. A stationary sensor is mounted adjacent to the tone ring to monitor magnetic pulses. The pulses are monitored by the ABS electronic control unit (ECU).

The ECU monitors all wheel sensors at the rate of 100 times per second. The ECU controls Pressure Modulator Valves. Pressure Modulator Valves have two electric-over-air solenoids, a hold solenoid and a release solenoid. The modulator valves are open under normal braking, allowing a straight through air signal from the treadle valve to the brake chamber. Should a wheel lose traction under a braking application, the ECU will energize the hold solenoid of the Pressure Modulator Valve to interrupt the air signal from the treadle valve to the brake chamber. The release solenoid vents the existing air signal at the brake chamber to the atmosphere, allowing the skidding tire to regain traction. Skidding tires have less tractive efficiency. It is possible, under certain conditions, to have the wheel(s) skid with a normal functioning ABS system.


The ABS itself does not apply additional braking power. The purpose of the ABS is to limit wheel lock and decrease stopping distance. Cautious driving practices and maintaining adequate safe distance when following vehicles is the key to safe vehicle operation.

WARNING

The ABS/ATC system is designed to increase tire to road surface traction but cannot overcome naturally occurring laws of physics. The ABS/ATC system, combined with safe driving practices, will reduce the possibility of wheel skid and loss of lateral stability.

ABS Component Function:

- ◆ Speed sensors and tone rings on each wheel monitor wheel rotation.
- ◆ Each speed sensor communicates wheel rotation pulses to the Electronic Control Unit.
- ◆ The ECU receives the speed sensor signal pulses to calculate speed and acceleration rates of each wheel.
- ◆ Based on the speed sensor input, the ECU detects impending wheel lock and operates the ABS Modulator Valves required for proper control. The Modulator Valves are operated in the Air, Release or Hold modes to regulate air pressure to the brake chambers.
- ◆ Braking force is applied at a level which minimizes the stopping distance while maintaining as much lateral stability as possible.

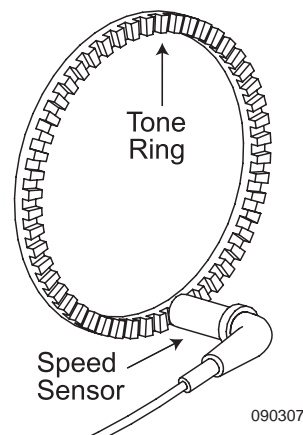

ABS Warning Light:

The ABS will perform a dash indicator lamp check and self-diagnostic test each time the ignition is switched to the on position.

- ◆ When the ignition is turned on, the ABS indicator illuminates momentarily (3 seconds) verifying the self-diagnostic test. If the ABS indicator light remains on, or illuminates while the motorhome is being operated, this indicates a fault in the anti-lock brake system. This fault will not affect normal service braking. The motorhome will need to go to a service center to repair the problem.

INFORMATION

If a fault code occurs, call a Bendix service locator at 1-800-247-2725 and take the motorhome to the nearest repair facility.

ABS Diagnostic

If the ABS light on the dash comes on it indicates that a fault has occurred with the Anti-lock Brake System only. Normal braking is not affected but the motorhome will need to go to a service center. The service center can retrieve ABS diagnostic fault codes.

Retrieving Codes Using ECU:

System configuration codes and fault codes are displayed through the dash ABS warning light as a series of blinked sequences. The fault codes can be accessed by properly grounding Terminal 18 in the X1 connector found on the ABS ECU module. The Bendix ABS ECU module is located under the shift selector panel. On the back of the ECU locate the black X1 connector, pin 18. Ground pin 18 as described by inserting a wire at the rear of the connector. Pin 18 is located in the bottom right corner (labeled ABS Warning).

NOTE

System configuration codes are sequences of six blinked digits while fault codes are sequences of two blinked digits. Refer to an authorized Bendix service center for a list of blink code sequences. If grounding out is not done correctly for a specific readout, stop then start the procedure again.

NOTE

All blink codes are displayed by the ABS warning light only.

The system is capable of performing several diagnostic mode functions. After ignition on, a two second delay must be observed prior to grounding.

Active code retrieval: ground 1 time.

Inactive code retrieval: ground 2 times.

Clearing active codes: ground 3 times.

System configuration check: ground 4 times.

Dynamometer test mode: ground 5 times.

Reconfigure ECU: ground 7 times.

NOTE

Reconfigure Mode is entered by grounding prior to "ignition on." Once ignition is on, stop grounding, then ground 7 times.

ATC System:

The ATC system improves traction on slippery or unstable road surfaces by limiting excessive drive wheel slip. This is accomplished two ways, limiting engine torque to the drive wheel or engaging a brake to the spinning drive wheel. During normal operation engine torque is unaffected. The ATC system works in conjunction with the ABS Electronic Control Unit. The ECU monitors tone ring speed of the drive wheel in relation to the other wheels. If a speed differential occurs in the drive wheel, the ECU enters Automatic Traction Control mode.

During an ATC event, the ECU will automatically react to optimize traction and safety if the motorhome encounters a slippery road surface. Engine torque is normally reduced to limit drive wheel slip.

NOTE

The ATC system is always active.


ATC reacts to drive wheel slip by:

- ◆ Reducing engine torque to the drive wheel if road speed is above 25 mph.
- ◆ Reducing engine torque and activating drive axle brake controls if road speed is below 25 mph. If the brake control activates, it remains active regardless of road speed.

How Automatic Traction Control (ATC) Works

If this wheel is spinning due to a slippery surface or because the wheel is off the ground, the ABS system with ATC applies the brake to this wheel.

This wheel then delivers torque to the ground.

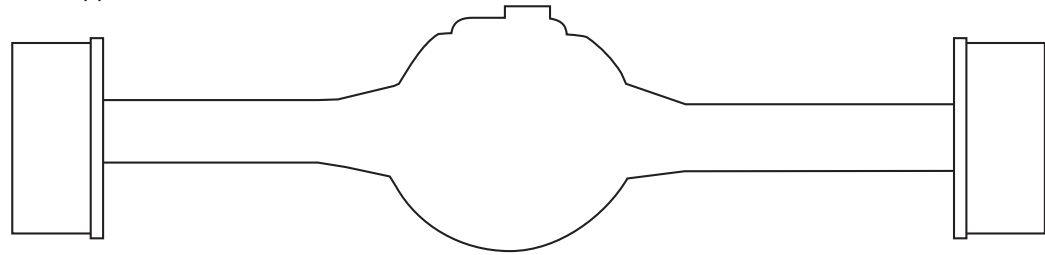

Torque is then transferred through the differential to the other wheel.


090372

ATC Switch:

Activating the ATC switch reduces ECU control over engine torque. Momentarily pressing the ATC switch allows the ECU to increase the amount of engine torque applied to the drive wheel in an ATC event. The amount of engine torque applied to the drive wheel will vary with the amount of drive wheel slip versus road speed. In an ATC event, the ECU remains active regardless of road speed or switch position. The light flashes slowly when the ATC switch is activated.

ATC Indicator Light:

During normal operation, the ATC indicator light on the dash will illuminate steady when the ignition key is turned ON. If an ATC event occurs, the indicator light will flash quickly. The indicator light will flash slowly if the ATC switch is activated.

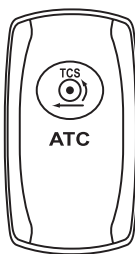

080498y

Located on driver's console

CAUTION

Normally the switch should remain inactive. During an ATC event (drive wheel slip) the ECU will automatically optimize drive wheel traction in most situations. Activating the switch during periods of wheel slip can increase torque to the spinning drive wheel. Drive train damage can occur if the spinning drive wheel should suddenly regain traction. If the motorhome is stuck it is advised to call a professional towing company to limit the possibility of body and drive train damage.

FRONT AXLE

While driving the motorhome, be aware of any changes in the feel of steering and have the system checked when noting apparent differences. It is normal to hear some hydraulic noise from the steering, especially when the steering is at maximum, or while turning the wheel when the motorhome is parked. Investigate any unusual or loud noises that occur. Begin by checking the level of the hydraulic fluid. Traveling at slow speeds over rough surfaces may cause a “clunking” noise to emanate from the steering column, but if noise is heard on smooth surfaces while sharply turning back and forth, the noise should be inspected and repaired as necessary.

Shimmy and looseness should be checked and corrected as soon as possible. If looseness is felt in the steering, the steering linkages can be observed while someone turns the steering wheel left and right. Watch the linkages for evident play or uneven interaction between components to help pinpoint a problem. Wheel bearings should be cleaned and repacked with high temperature disc brake grease every 30,000 miles. Have the steering system checked for damage after a severe impact, such as striking large potholes or curbs, and front-end collisions. Observe the alignment of the steering wheel; a change in the alignment may indicate damage to the steering components or suspension.

Maintenance for the system entails adequate lubrication. Use only a hand operated grease gun on the fittings. Grease fittings for the steering system are found on the both ends of the drag link (the bar connecting the steering gear to the axle), and on the intermediate steering shaft located between the steering


wheel and steering gear. The correct wheel alignment promotes longer tire wear and ease of handling while minimizing the strain on the steering system and the axle components. Use NLGI #2 Lithium soap base lubricant for all steering linkage and brake components.

Alignment**Camber:**

Camber, as shown, is vertical tilt of wheel as viewed from the front of the motorhome. This is machined into the axle when manufactured and is not adjustable.

“**Positive**” camber is an outward tilt of the wheel at the top.

“**Negative**” camber is an inward tilt of the wheel at the top.

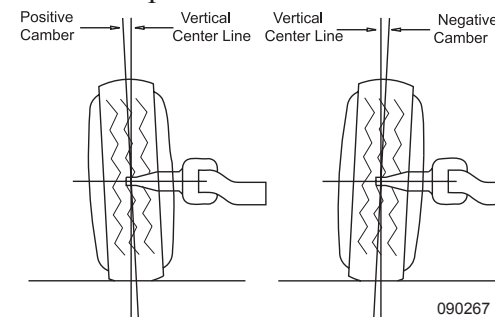

Toe Setting: The toe setting represents different distances between the front and rear of the tires (measured at the vertical center line of the tires).



Toe-in: Occurs when the tire front distance is less than the tire rear distance.

Toe-out: Occurs when the tire front distance is greater than the tire rear distance.

Wheels are generally set with initial toe-in. As the motorhome operates tires tend toward a toe-out condition. By starting with an initial toe-in setting, a desirable “near zero toe-in” can be achieved when the motorhome is in motion.

Incorrect toe settings, where toed-in or toed-out, can have a significant affect on tire wear. The toe setting is adjusted by lengthening or shortening the cross tube.

FRONT OF MOTORHOME
(Top View of Axle)

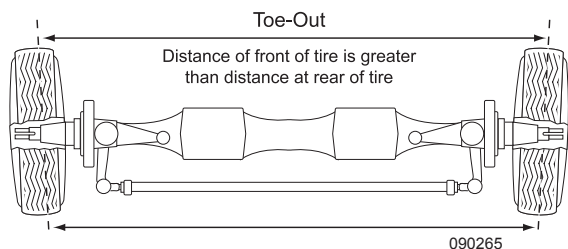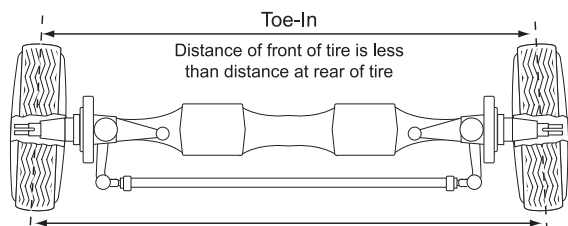


Caster Adjustments:

Caster is the fore and aft tilt (toward the front or rear of the motorhome) of the steering kingpin as viewed from the side of the motorhome.

“Positive” caster is the tilt of the top end of the kingpin toward the rear of the motorhome.

“Negative” caster is the tilt of the top end of the kingpin toward the front of the motorhome.

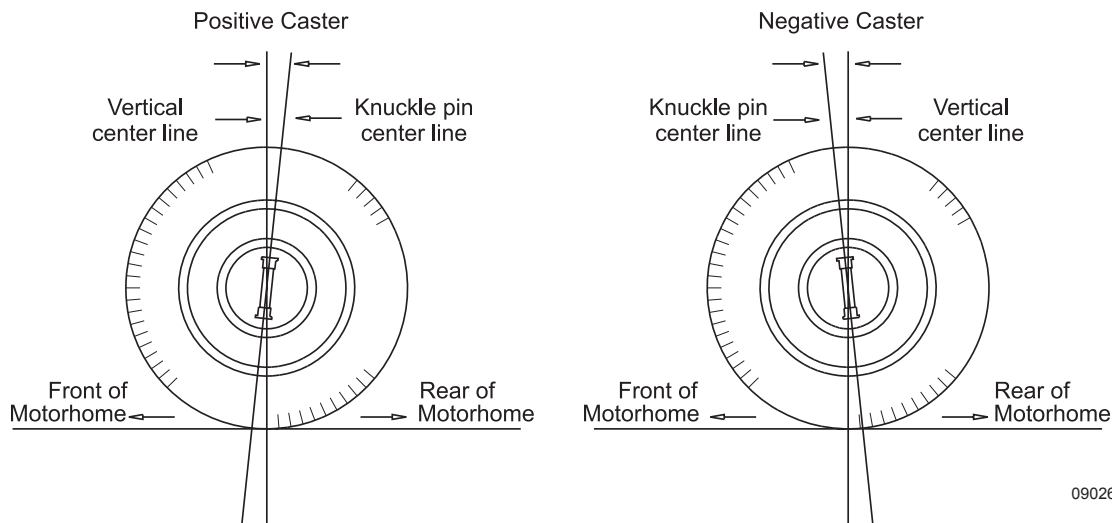

| | Left | Right |
|------------------|----------------|----------------|
| Camber | 1/8° +/- 7/16° | 1/8° +/- 7/16° |
| Caster* | 3.5° +/- .5° | 4.0° +/- .5° |
| Total Toe | 1/16" (0.08°) | |

* Right must exceed Left at least 1.5°, but less than 2.5°.

NOTE: Motorhome must be at ride height for proper alignment.

Setting the caster angle more positive than specified may result in excess steering effort and/or shimmy. Decreasing the angle may result in the motorhome wandering or poor steering return to center. The caster angle is determined by the installed position of the steer axle.

Lubrication Maintenance Safety

The front axle components require periodic lubrication maintenance. Chock wheels for safety prior to accessing components underneath the motorhome.


WARNING

DO NOT allow anyone under the motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

NOTE

Suspension and steering components are lubricated at factory using a NLGI 2 Lithium Soap based grease.

Steering Components

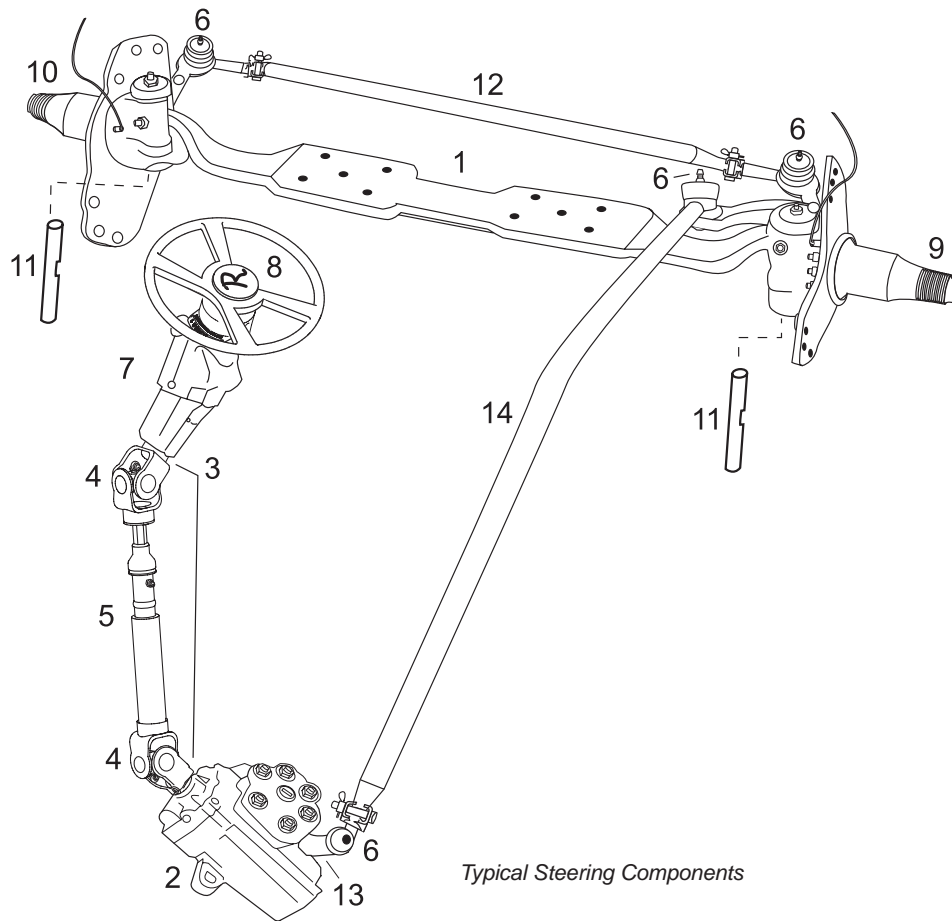

Typical Steering Components

- | |
|--|
| <ol style="list-style-type: none"> 1. Axle Beam 2. Steering Box 3. Intermediate Steering Shaft 4. Universal Joints 5. Slip Yoke 6. Ball Joint 7. Steering Column 8. Steering Wheel 9. Right Knuckle Assembly 10. Spindle 11. Kingpin 12. Centerlink 13. Pitman Arm 14. Drag Link |
|--|

Steering Column


The intermediate steering shaft connects the steering wheel to the steering box. Service the intermediate steering shaft universal joints and slip yoke every 30,000 miles or annually. Check the torque on the clamp bolt at least every five years or 50,000 miles. Remove the steering column cover to access the upper universal joint and slip yoke lubrication points. The lower universal joint is accessed from underneath in the generator compartment behind the front electrical box.

WARNING

DO NOT place yourself under motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Greasing the Intermediate Steering Shaft Universal Joints:

- ◆ Check the shaft for looseness. Repair if loose or worn.
- ◆ Apply the specified grease at the grease fitting on the universal joint. Apply until the new grease purges from all the seals.
- ◆ If the new grease does not purge from the seals, disassemble and clean the joint or replace the universal joint. **DO NOT** lose the needle bearings.

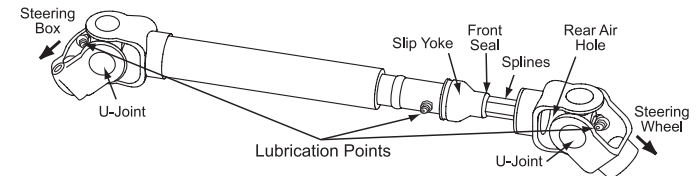

Intermediate Steering Shaft: Torque clamp bolt to 48 ft. lbs. for 3/8" and 75 ft. lbs. for 7/16".


Greasing the Intermediate Steering Shaft Slip Yoke and Splines:

- ◆ Check the shaft for looseness. Repair if loose or worn.
- ◆ With finger, cover the rear air hole so grease flows to the front seal. Apply the specified grease at the grease fitting on the slip yoke. Apply until new grease purges and forces finger away from the air hole in the end of the slip yoke. Greasing interval is yearly or every 30,000 miles.

LUBE

Depending upon application, universal joints may have two grease fittings each. It is necessary to apply grease to each fitting to properly lube the universal joint.

Drag Link

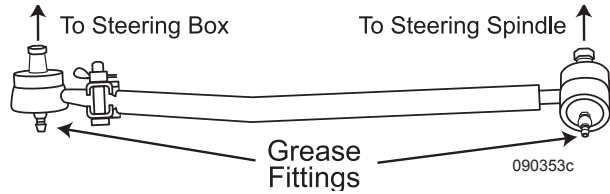


The drag link connects the steering box pitman arm to the steer axle. The movable joint (ball joint) uses sealed boots to prevent water intrusion. **DO NOT** rupture the boot when applying grease. Grease interval is six months or every 5,000 miles.

NOTE

It will be necessary to start the motorhome and turn the steering wheel to access fitting(s).


Center Link

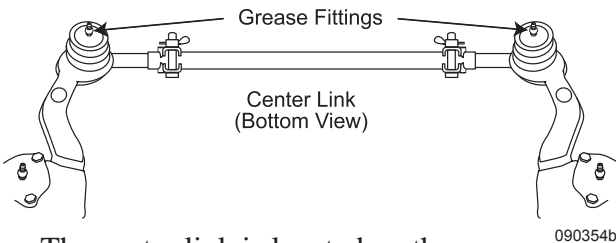

The center link is located on the backside of the steer axle. The center link attaches the two wheels together causing the right front to track with the left front. Greasing interval is every six months or 5,000 miles.

Steering Spindles

The steering spindles attach to the front axle and pivot on the kingpin. The wheel end assembly and brake system attach to the spindle. There are upper and lower lubrication points for the kingpin. The drag link attaches to the roadside spindle. After initially lubricating the roadside and curbside kingpins, rotate the steering assembly lock to lock (full left to right) then move assembly back to center. This purges any remaining air pockets. Continue lubricating the kingpins until new grease purges with no air pockets. Greasing interval is every six months or 5,000 miles.

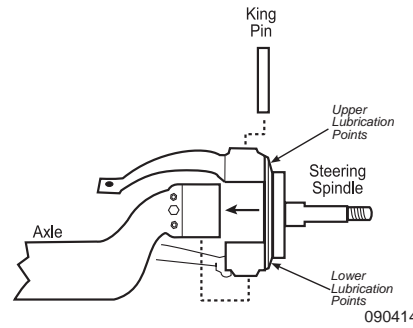


Control Arm Bushings

Control arms align the axles perpendicular with the frame. The panhard bar controls side to side motion of the axles in the frame. Control arm bushings and panhard bar bushings do not require lubrication.

Drum Brake Lubrication


Drum brakes are equipped with slack adjusters. Both the slack adjuster and brake cam need to be lubed periodically to ensure proper brake operation. Lubricate every 10,000 miles or three months, whichever occurs first. Use NLGI #2. Lithium soap base chassis lubricant. Lubricate at points shown and lubricate until new grease appears at exit points. Avoid contaminating brake linings with lubricant.

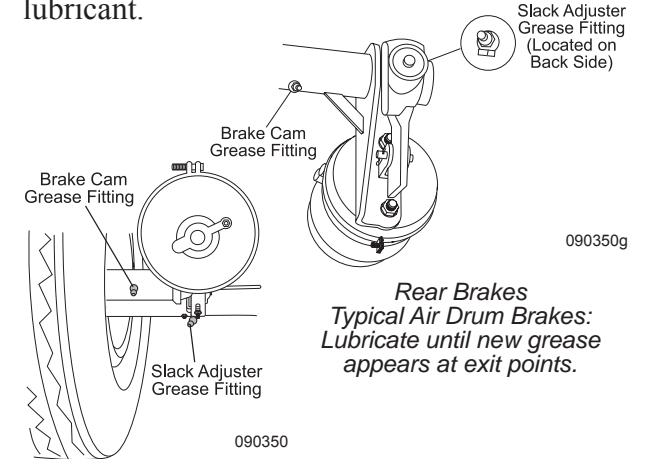

*Rear Brakes
Typical Air Drum Brakes:
Lubricate until new grease
appears at exit points.*

*Front Brakes
Typical Air Drum Brakes:
Lubricate until new grease
appears at exit points.*

Steering Gear

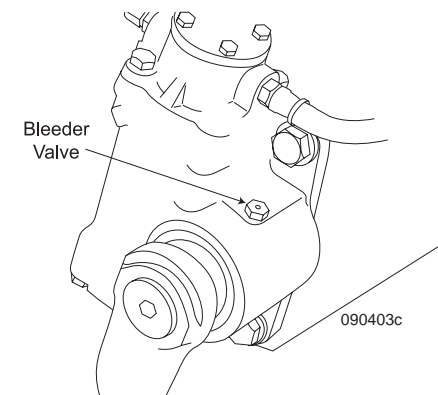

The steering gear has been designed to provide long service life and simple service repair. The rack and sector shaft does not require center point adjustment. The clearance between the cylinder bore and the piston is closely controlled and a piston ring was added to better use the hydraulic oil supplied. With reasonable care and limited maintenance the steering gear will provide many miles of reliable performance. The bleeder valve is used on initial installation and replacement.

Power steering is provided by using hydraulic pressure to assist rotating the output shaft of the steering gear. Located at the end of the input shaft of the steering gear is a poppet valve and worm drive. The poppet valve directs the hydraulic fluid pressure to a type of spool. The worm drive threads in the center of the spool. When in the center position, pressurized hydraulic fluid bypasses the spool. When a turn is made, the poppet valve shifts to one direction or the other, directing the hydraulic pressure to one side of the spool depending on turning direction. The hydraulic fluid is then cooled before returning to the reservoir.

NOTE

Inspect for signs of leakage when performing fluid level checks.

Changing the hydraulic filter in the engine compartment at regular intervals will help ensure trouble-free operation.

DRIVE AXLE & DRIVE SHAFT

Drive Axle:


The chassis drive axle is a single reduction axle. The differential gears consist of a hypoid pinion and ring gear set and bevel differential gears. The differential carrier can be removed from the axle housing as a unit in order to perform repairs.

All power from the engine to the rear tires is transferred through the rear axle. For this reason, it is important that maintenance be performed on the axle as required to avoid premature wear of the gears and bearings in the axle.

Drive Axle Lubricant:

The rear axle is filled with synthetic gear oil meeting MIL-L-2105D specifications. Change interval is every 250,000 miles or 36 months, whichever occurs first.

During lubricant change, fine metal particles will be observed clinging to the magnetic fill and drain plugs of the axle. These are normal wear particles from the axle components, but will cause faster than normal wear of the axle components if allowed to circulate through the lubricant. It is recommended that the magnetic plugs be tested, if not replaced, at each lubricant change. These plugs should have sufficient magnetic strength to pick up a 1.5 pound weight of low carbon steel. **DO NOT** replace a magnetic plug with a non-magnetic "pipe plug" as they will not keep the lubricant clear of metal particles or seal properly.

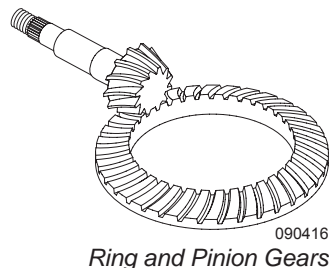


The level of lubricant in the rear axle should be checked every 30,000 miles or 6 months, whichever occurs first. This will ensure adequate lubricant in the axle for proper operation. Regular inspection of the drive axle lube levels is an essential maintenance procedure.

WARNING


DO NOT allow anyone under the motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Proper Drive Axle Lubricant Level:

- ◆ With the motorhome parked on a level surface and rear axle warm, place a large container under axle.
- ◆ Clean the area around the fill plug, which is located approximately halfway up the axle housing bowl.
- ◆ Remove the fill plug and observe the lubricant level.
- ◆ The lubricant should be level with bottom of the hole.
- ◆ Important: The lube level close enough to the hole to be seen or touched is not sufficient. The lube must be level with the hole.
- ◆ Correct the level as necessary.
- ◆ Re-install the fill plug and tighten to 35 to 50 ft. lbs.

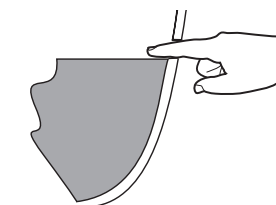

Correct Oil Level

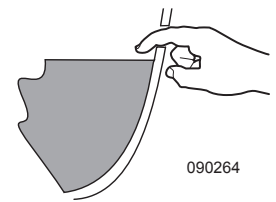

Incorrect Oil Level


To Drain and Replace Lubricant:

1. Place a large container under the axle.
2. Remove drain plug and allow axle to completely drain.
3. Properly dispose of oil.
4. Clean the drain plug and test (replace the drain plug if needed).
5. Install and tighten drain plug to 35 to 50 ft. lbs.
6. Clean the area around the fill plug from the axle-housing bowl.
7. Fill the axle with approved lubricant until the level is even with the bottom of the fill plug hole.

**WARNING**

When checking or changing the lubricant, always ensure that the axle is not hot. Oil temperature 90° F or hotter can easily cause severe burns.

NOTE
When checking the lube level also check the housing breathers on top of axle housing. Clean the breathers if dirty or replace them if damaged.

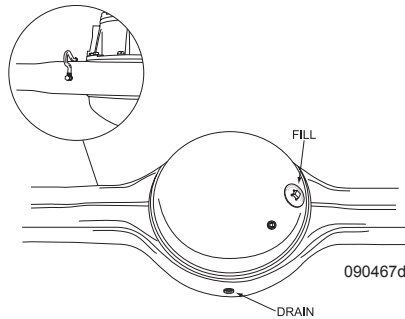**Drive Shaft:**

The drive shaft transfers the power produced by the engine to the drive axle. A worn or out of balance drive shaft causes chassis vibration that generally increases in intensity with road speed.

Lubrication Maintenance:

The drive shaft requires periodic lubrication maintenance. Lubricate the slip joint and universal joints every 5,000 miles or 6 months, whichever occurs first. Use NLGI #2 chassis lubricant.

NOTE


It will be necessary to move the motorhome forward or backward to access all fittings on the drive shaft.

Greasing the Drive Shaft Universal Joints:

- ◆ Check the drive shaft for looseness. Repair if loose or worn.
- ◆ Apply the specified grease at the grease fitting on the universal joint. Apply until new grease purges from all the seals.
- ◆ If new grease does not purge at the seals, loosen the bearing cap bolts and re-grease until all four caps purge. If new grease still does not purge, disassemble and clean or replace the universal joint.

NOTE

Depending upon application, universal joints may have two grease fittings each. It is necessary to apply grease to each fitting to properly lube the universal joint.

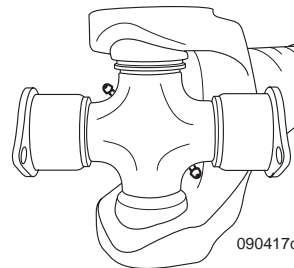

Dual Zerk U-Joint

Greasing the Drive Shaft Slip Yoke and Splines:

- ◆ Check the drive shaft for looseness. Repair if loose or worn.

- ◆ With finger, cover the rear air hole so grease flows to the front seal. Apply the specified grease at the grease fitting on the slip yoke. Apply until new grease purges and forces finger away from the air hole in the end of the slip yoke.

WARNING

Rotating shafts can be dangerous. Rotating shafts can snag clothes, skin, hair, hands, etc. causing serious injury or death. DO NOT work on or near a shaft with or without a guard when the engine is running.




090341

U-Joint Angles Phasing & Driveline Balance

Correct U-joint working angles, U-joint phasing, and driveline balance is vital to maintaining a quiet-running drivetrain and long life of drivetrain components (including driveline components).

When in phase, the slip yoke lugs (ears) and tube yoke lugs (ears) are in line. Normally this is the ideal condition and gives the smoothest running shaft. There may be an alignment arrow stamped on the slip yoke and on the tube shaft to assure proper phasing when assembling these components. If there are no alignment marks, they should be added before disassembly of the shaft to assure proper reassembly.

Phasing is relatively simple on a two-joint set. Be sure the slip yoke lugs and the tube yoke lugs are in line.

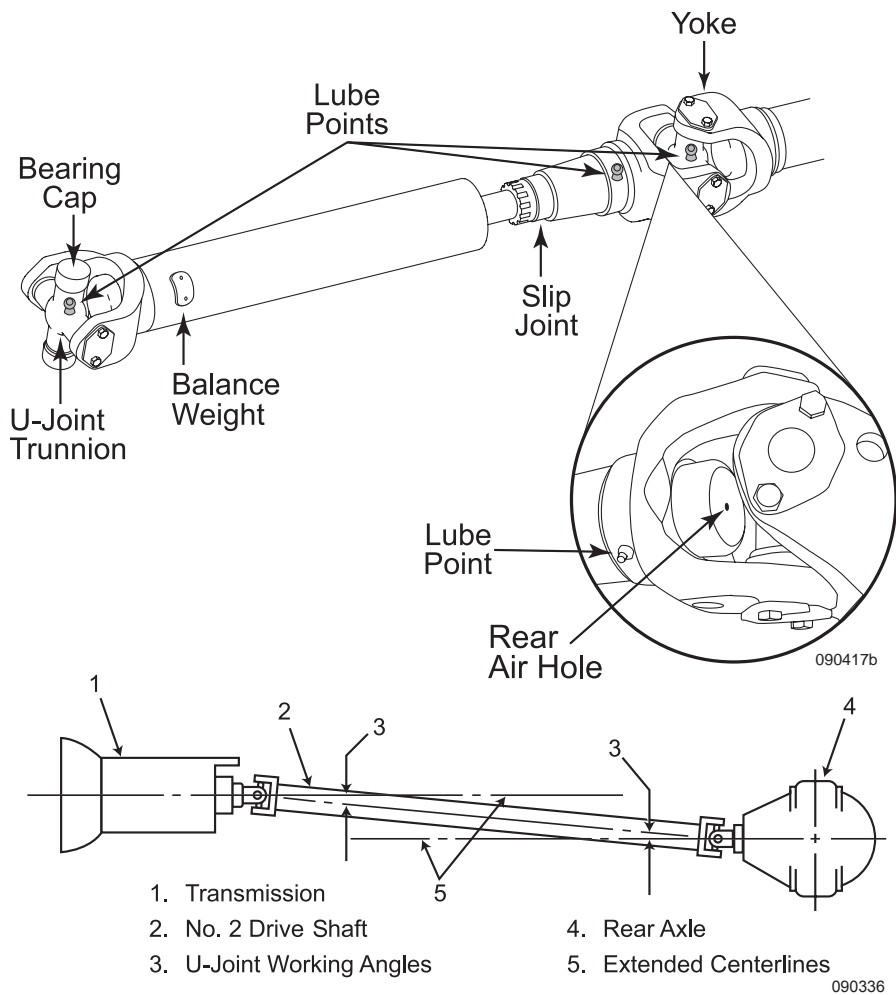


The U-Joint working angle is the angle formed by the intersection of the driveshaft centerline and the extended centerline of the shaft of any component to which the U-joint connects. Because the double oscillating motion of a U-joint that connects angled shafts causes a fluctuating speed difference between the shafts, the effect created by the U-joint at one end of the shaft must cancel the effect created by the U-joint at the other end. This is done by making U-joint working angles at both ends of the driveshaft about equal, with the U-joints in phase. If the yoke lugs at both

ends of the shaft are lying in the same plane (a plane which bisects the shaft lengthwise), the U-joints will be in phase.

Any condition which allows excessive movement of a driveshaft will cause driveline imbalance: loose end yoke nuts, loose U-joint bearing caps, worn U-joint trunnions, bearings and worn slip-joint splines.

Among the most common causes of U-joint and slip joint damage is lack of lubrication. To keep the motorhome operating smoothly and economically, the driveline must be carefully checked and lubricated at regular intervals.

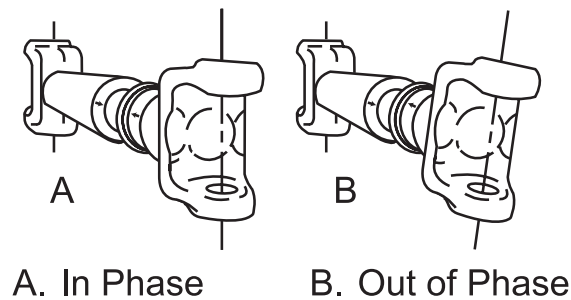

090337

SHOCK ABSORBER

The shock absorber is a hydraulic device used to dampen suspension/body movement. Road surface irregularities are compensated by the shock absorber. The Roadmaster chassis incorporates the shock in the design of the exclusive air glide suspension system. This shock absorber is a telescopic, mono tube unit filled with nitrogen gas and hydraulic oil. The result of the mixture is uninterrupted damping for the smallest of wheel deflection.

By design, a self lubricating seal is used which will allow approximately 10% of the total oil capacity to pass onto the piston rod. The gradual process of oil loss does not affect the performance of the shock absorber during the service life. This process will be evident after a long period of service by an oil film on the body of the shock absorber. The appearance of a coating or film on the body or rod is completely normal, it is an indication the shock is functioning normally.

Road holding, handling, balance and braking characteristics all can be contributed to the shock absorber. The operating conditions for which the shock absorber must endure will determine the life span. However, since the only moving part is the piston rod, there are no springs, hinges or pins to wear out, get weak or deteriorate.



090315

LEVELING SYSTEM

The hydraulic jack system is designed to reduce sight selection problems and stabilize the motorhome when parked. A control panel located on the driver's console operates the leveling system. The warning system consists of a Jacks Down light and an alarm that sounds when any jack is retracted. The leveling system hydraulic pump is located in a rear roadside compartment.

CAUTION

No single jack should be used solely to level the motorhome. Using an improper leveling process can result in applying excess torsion stress/twist to the chassis, frame and body, resulting in damage to the windshield and/or entry door malfunction.

CAUTION

The leveling jacks are not designed for changing tires. Using the jacks to elevate any wheel position off the ground will cause problems with the suspension system, frame alignment and damage to the windshields.

WARNING

DO NOT access the underside of the motorhome when jacks are operating. Serious personal injury may occur.

Safety Features:

The leveling system has safety features to prevent a jack from extending during travel. The control panel will not activate until these safety features are in place.

- ◆ Ignition is switched ON and the engine is running.
- ◆ Transmission is in Neutral.
- ◆ Park brake is applied.

Control Panel:


The control panel includes jack extend switches, an AUTO (automatic) switch, a MAN (manual) switch, a retract ALL JACKS switch and a power ON/OFF switch.

CAUTION

DO NOT move the motorhome while the jacks are still in contact with the ground or extended. Damage to the jacks can occur.

Prior to Leveling:

- ◆ Chassis battery voltage must be at least 12 Volts DC.
- ◆ Park the motorhome on solid, level ground. If the motorhome is parked on an excessive slope, the motorhome must be moved to a solid, level surface before the leveling system is deployed.
- ◆ Apply the park brake.
- ◆ Place the gear selector in Neutral.
- ◆ Lower the air suspension by stepping on the brake several times until system air pressure is below 60 psi. With the ignition on, push and hold the Air Dump switch to lower the suspension. This reduces the amount the jack will need to extend before making contact with the surface.
- ◆ Be sure all people and pets are clear of the motorhome while the leveling system is in operation.

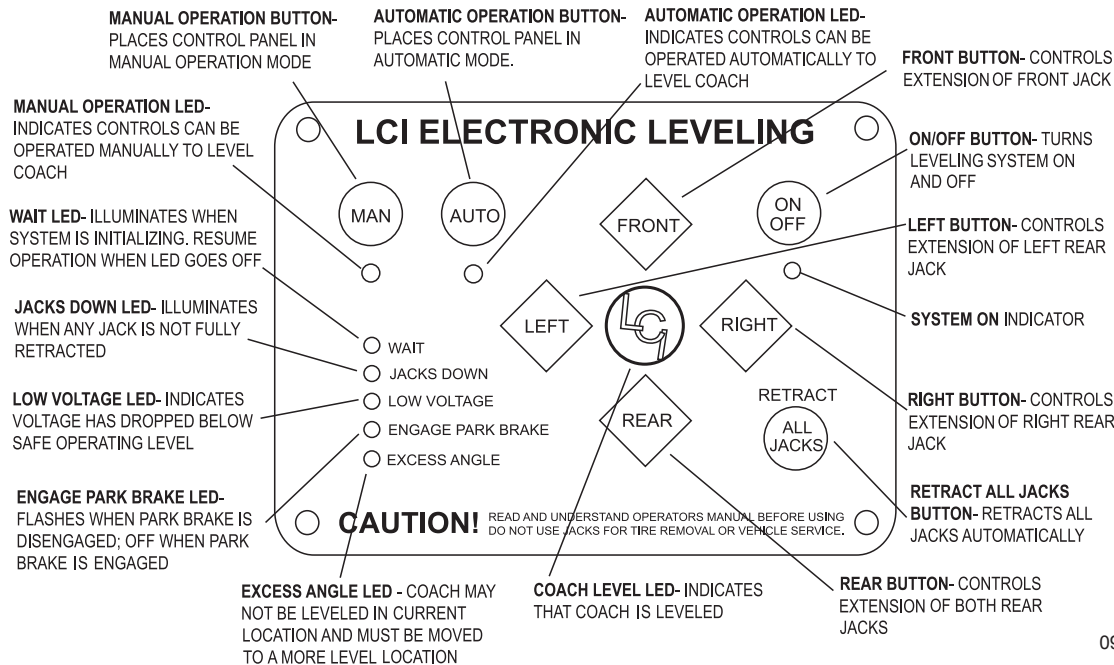

090520b

CAUTION


Survey the area around and under the motorhome for obstructions that can damage the motorhome or undercarriage components before lowering the suspension. Damage to the mud flap may occur if it is located over a raised area.

CAUTION

Clear all jack landing points of debris and obstructions. Location must also be free of depressions before operation.

CAUTION


Keep all people and pets clear of the motorhome during the leveling system operations. DO NOT expose hands or other parts of the body near hydraulic leaks. Hydraulic lines are under high pressure. Oil leaks may cut and penetrate the skin causing serious injury.

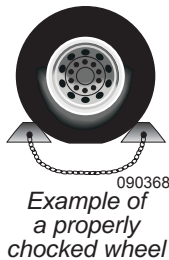**CAUTION**

Hot asphalt, gravel or dirt may not support the weight that is placed on the hydraulic jack pads. Place thick plywood under the jack pads to help disperse the weight. If blocking up a rear jack pad to gain added clearance when the motorhome is on a slope, place a wheel chock at the opposite set of rear wheels to prevent the motorhome from rolling.

NOTE

If additional height or surface support is needed, construct a 1' x 1' wooden block made from two pieces of 3/4" plywood for a total thickness of 1 1/2". Drill hole in corner and use awning wand to slide wooden block under jack pad.

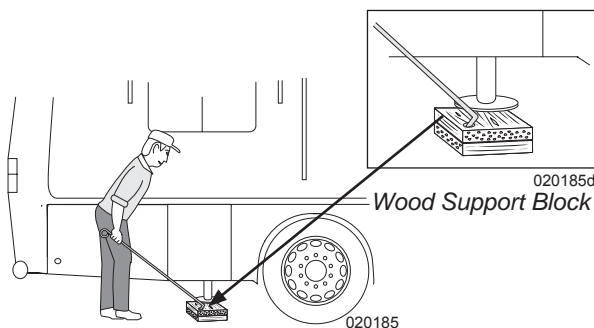**Warning Features Include:**

- ◆ Flashing lights on the control panel and an alarm that sounds when a jack is retracted.
- ◆ The alarm may activate momentarily when driving over rough roads or when negotiating curves and corners. This could indicate a low fluid level in the reservoir.

Automatic Leveling Procedure:

- ◆ Follow the instructions in *Prior to Leveling*.
- ◆ Start the engine. The engine must be running for the leveling system to operate.
- ◆ Place the gear selector in Neutral.
- ◆ Apply the park brake.
- ◆ Press the ON/OFF button on control pad. The system is now operational and the electronic leveling lights will become active.

Please follow these tips each time you operate your leveling system for optimum performance:

1. Start your motorhome's engine and leave it running.
2. Be sure your batteries are fully charged.
3. Turn off all lights and other electrical elements during operation.
4. Minimize movement inside the coach when you are in auto leveling mode.

If you have questions or need assistance, please contact Lippert Customer Service at 1-866-524-7821

- ◆ Check to see that the ENGAGE PARK BRAKE light is not flashing on the control panel. If ENGAGE PARK BRAKE is flashing engage the park brake.
- ◆ Push the AUTO button to begin leveling.

WARNING

After starting the automatic leveling cycle it is very important not to move around in the motorhome until the unit is level and the green LCI logo light illuminates in the center of the touch pad. Failure to remain still during the leveling cycle could affect the performance of the leveling system.

- ◆ The green LCI logo light will illuminate when the motorhome is level.
- ◆ If further adjustments are necessary, push and hold the MAN button for approximately 5 seconds until the light under this button is illuminated. Push the appropriate leveling leg button to override the system and the level the motorhome.
- ◆ Turn off the system using on ON/OFF button on the control pad.
- ◆ Turn off the ignition switch.

WARNING

DO NOT lift all the wheels off the ground to level the motorhome. Lifting all wheels of the ground may result in serious personal injury or death.

Manual Leveling Procedure:

- ◆ Follow the instructions in *Prior to Leveling*.
- ◆ Start the engine. The engine must be running for the leveling system to operate.
- ◆ Place the gear selector in Neutral.
- ◆ Apply the park brake.
- ◆ Press the ON/OFF button on control pad. The system is now operational and the electronic leveling lights will become active.
- ◆ Check to see that the ENGAGE PARK BRAKE light is not flashing on the control panel. If ENGAGE PARK BRAKE is flashing engage the park brake.

Please follow these tips each time you operate your leveling system for optimum performance:

1. Start your motorhome's engine and leave it running.
2. Be sure your batteries are fully charged.
3. Turn off all lights and other electrical elements during operation.
4. Minimize movement inside the coach when you are in auto leveling mode.

If you have questions or need assistance, please contact Lippert Customer Service at 1-866-524-7821

090524

INFORMATION

When leveling the motorhome, the motorhome should be leveled from front to rear first. After the motorhome is level from front to rear, level the motorhome from left to right.

- ◆ Push and hold the manual MAN button for approximately five seconds.
- ◆ Push FRONT button until jack contacts the ground.
- ◆ Push REAR button until jacks contact the ground. Keep button depressed until bubble is centered.
- ◆ Push button FRONT or REAR; if bubble is towards front of coach push REAR button; if bubble is towards rear of coach, push FRONT button. Keep button depressed until bubble is centered.
- ◆ Push LEFT or RIGHT button; if bubble is towards left of coach, push RIGHT button; if bubble is towards right of coach push LEFT button. Keep button depressed until bubble is centered.

INFORMATION

The right and left jacks are used to level the coach side to side. Pushing the left button on the control panel will extend left rear jack. Pushing the right button on the control panel will extend right rear jack.

- ◆ Repeat steps if needed.
- ◆ Turn off the system using on ON/OFF button on the control pad.
- ◆ Turn off the ignition switch.
- ◆ Visually inspect all jacks to ensure all shoes are touching ground. Should one of the rear jack shoes not be touching the ground, press the corresponding LEFT or RIGHT rear jack buttons to lower the corresponding jack to the ground.

WARNING

DO NOT lift the wheels off the ground when leveling the motorhome. Lifting all wheels may result in serious personal injury or death.

CAUTION

DO NOT move the motorhome while jacks are in contact with the ground or extended. Damage to the jacks may occur.

Low Voltage Signal:


- ◆ If Low Voltage light is flashing, it is indicating the motorhome engine is not running. Start engine to turn Low Voltage light off.
- ◆ If Low Voltage light is solid, it is indication of a charging system problem. Turn ignition OFF and then back ON to reset system.
- ◆ If Low Voltage light persists, test battery under load at battery and at the motor solenoid on the pump. Check all power and ground connections at the battery, alternator and chassis.

Jack Retract Procedure:

- ◆ Ensure the park brake is set.
- ◆ The gear selector is in Neutral.
- ◆ The engine must be running.
- ◆ Press the ON/OFF button on control pad to turn the system on.
- ◆ Push the RETRACT ALL JACKS button. All jacks will automatically return to fully retracted position.
- ◆ When all jacks return to full retract position the JACKS DOWN light will go out.
- ◆ Push the ON/OFF button to turn system off.

INSPECTION

Always perform a visual inspection of leveling jacks to make sure they are fully retracted prior to moving the motorhome. Remove any debris that may be on the jack pad.

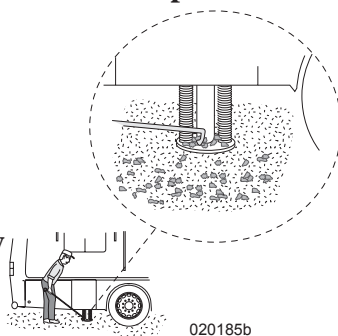

020185b

NOTE

If jacks need to be stopped from retracting, turn the system OFF and back ON again by pushing the ON/OFF pad twice. The motorhome can then be re-leveled.

NOTE

When in the manual mode, if the retract button is pushed the jacks will only retract as long as the retract button is depressed. In automatic mode, the retract button need only be pressed once and released for the jacks to fully retract.

If the jacks fail to extend or retract:

- ◆ Ensure the park brake is set.
- ◆ The gear selector is in Neutral.
- ◆ The engine must be running.
- ◆ If jacks still do not operate, check the leveling system fuses.

NOTE

The hydraulic pump is equipped with an internal thermal breaker for protection against overheating. If the pump is used repeatedly in a short period of time the breaker will trip and then reset automatically in 5 to 30 minutes.

Automatic Safety Shutoff:

- ◆ If the control panel is left on and inactive for four minutes it will shut off automatically.
- ◆ To reset the system the ignition must be turned off, then back on and the ON/OFF button on the control pad must again be pushed.

Drive-Away Protection:

If the engine is running, jacks are down, and the parking brake is released, all indicator lights will flash and the alarm beeper will activate. The system will then automatically retract the jacks until the jacks are fully retracted or the parking brake is reset.

INSPECTION

A full visual inspection is required to confirm full retraction of jacks before moving the motorhome.

Landing Gear Maintenance**Jack Rod Maintenance:**

- ◆ If jacks are down for long periods, it is recommended to spray exposed leveling jack rods with a silicone lubricant every seven days for protection.
- ◆ If the motorhome is located in a salty environment, it is recommended to spray the rods every 2 to 3 days.
- ◆ Remove dirt and road debris from the jacks as needed.
- ◆ Operate landing gear once or twice a week to keep seals and internal moving parts lubricated.
- ◆ Check for any visible fluid leakage before and after movement of the system.

- ◆ If squeaks are heard, apply a coat of lightweight oil or silicone lubricant to jack rod, but remove excess so dirt and debris do not build up.
- ◆ **DO NOT** use grease on the jack rod.

Checking/Adding Hydraulic Fluid:

The hydraulic leveling pump is located behind the entry steps.

- ◆ Chock a wheel fore and aft for safety.
- ◆ When checking fluid level ensure that landing jacks and all slide-outs are completely retracted. Filling reservoir when jacks are extended will cause reservoir to overflow when jacks are retracted.
- ◆ Check the fluid level every month. The fluid level should be within 1/4 inch of spout lip.
- ◆ Unscrew the breather cap. Make sure breather cap is free of contamination before removing, replacing or installing.
- ◆ Use automatic transmission fluid (ATF). A fully synthetic or synthetic blend such as Dexron 3 or Mercon 5 works best.

WARNING

USE ONLY
DEXRON III OR MERCON V
ATF FOR THIS PUMP

031333

- ◆ **DO NOT** allow any contamination into reservoir during fill process. Fill the system within 1/2 inch from the spout lip.
- ◆ Replace the breather cap.
- ◆ Change fluid in reservoir every 36 months.

INFORMATION

In colder temperatures (less than 10° F) the jacks may extend and retract slowly due to the fluid's molecular nature. For cold weather operation, fluid specially formulated for low temperatures may be desirable.

WARNING


The hydraulic motor can be extremely hot. Use extreme safety when accessing and working on the motor. Hot metal can result in serious burn injuries.

Electrical Connections:

- ◆ Inspect and clean all hydraulic pump electrical connections every 12 months. If corrosion is evident, spray with WD-40 or equivalent.

WARNING

DO NOT work on the hydraulic pump unless both the house and chassis battery disconnect switches are OFF.

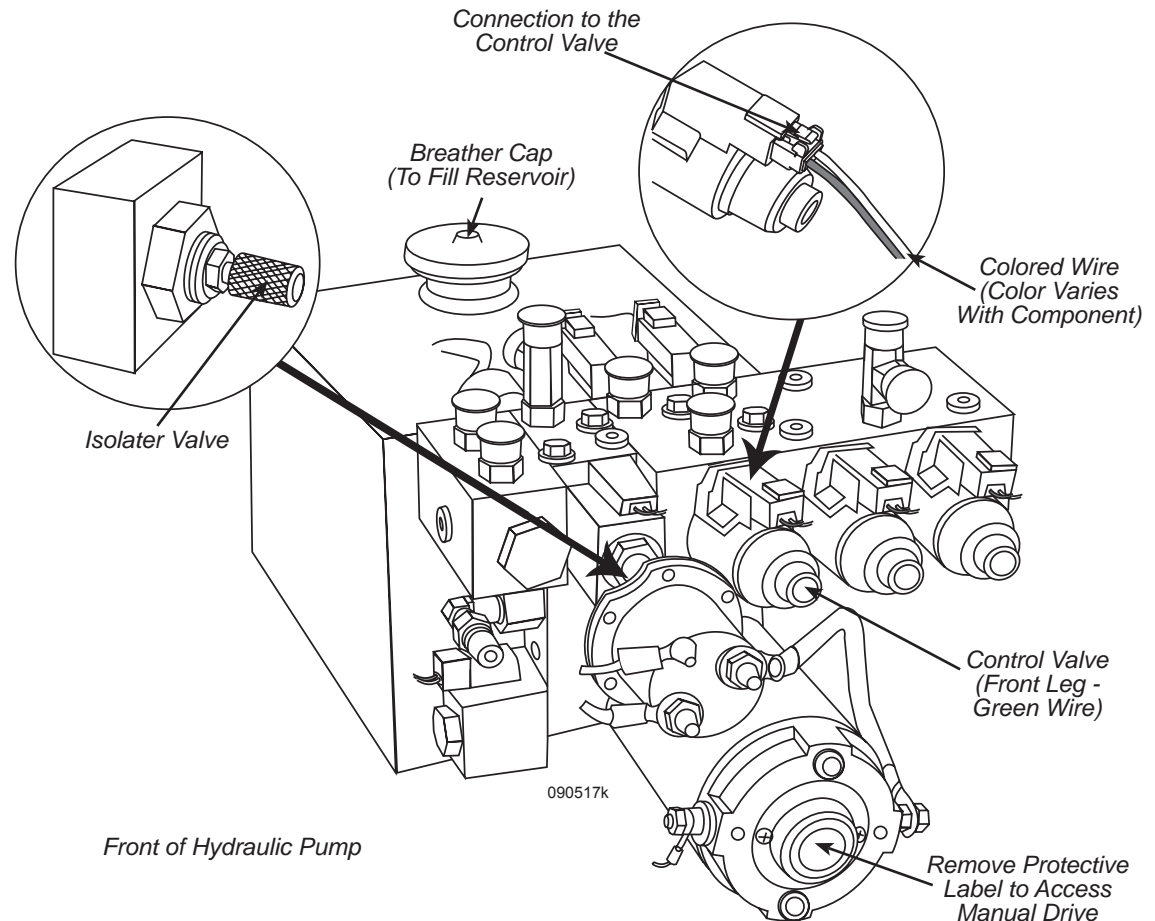**Manual Override – If Jacks Fail To Retract**


There are a number of key components on the hydraulic pump. The pump is located under the entry steps. Remove the two fasteners on the entry step, then lift step up.

Refer to the illustration for these components:

- ◆ Isolator valve

The isolator valve can be two different types. Both are located in the same area on the hydraulic pump.

- **Type # 1** has an exposed blue knurled knob. Push in on the isolator valve and turn counter clockwise all the way until valve stops. Valve will now pop out.
- **Type #2** has a black cap over it. Unscrew the black cap. Turn brass knurled knob counter clockwise.
- ◆ Connection to the control valve.
- ◆ Control valve.
- ◆ Manual drive access located under the protective label.

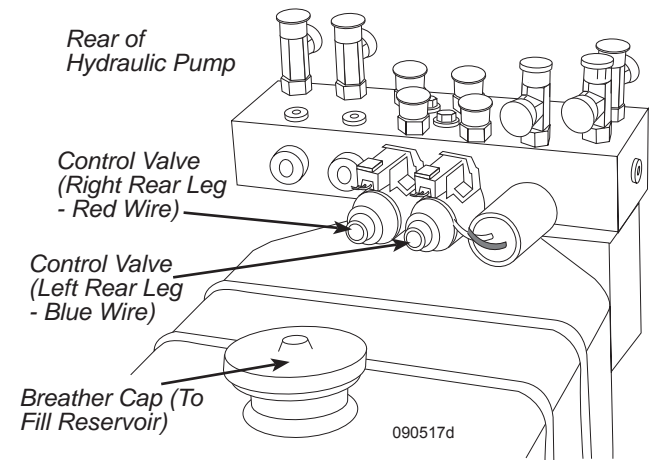

If there is a problem with landing legs not retracting, follow these steps.

Determine if Hydraulic Pump is Running:

- ◆ Two people are needed. One person to access the hydraulic motor, the other to operate the leveling control pad. The person by the motor listens to determine if the pump is running.
- ◆ If only one person is available, stay inside the motorhome and operate the leveling control pad. Listen to determine if the pump is running.

CAUTION

DO NOT run the hydraulic motor for an extended period of time. Continuous operation of the motor can drain the batteries and overheat or damage the motor.

CAUTION

DO NOT continue to run the hydraulic motor if the landing leg(s) do not retract. Damage to the motor could occur.

WARNING

The hydraulic motor can be extremely hot. Use extreme safety when accessing and working on the motor. Hot metal can result in serious burn injuries.

WARNING

DO NOT work on the hydraulic pump unless both the house and chassis battery disconnect switches are OFF.

Control Valve:

Each control valve operates a specific leveling leg. The control valve (specific leveling leg) is located by a colored wire on top of the control valve:

- ◆ **Green Wire** - front leveling leg (on front of hydraulic pump).
- ◆ **Red Wire** - right rear leveling leg (on rear of hydraulic pump).
- ◆ **Blue Wire** - left rear leveling leg (on rear of hydraulic pump).

INFORMATION

The hydraulic pump can operate two slide rooms and the hydraulic leveling system. If the correct leveling jack is not retracting, the wrong control valve may have been selected. Turn the control valve counterclockwise and try another valve.

If Pump Runs:

- ◆ Disconnect both the house and chassis disconnect switches.
- ◆ Access the hydraulic pump.
- ◆ Ensure that the connection to the control valve is plugged in. If loose, properly secure the connection.
- ◆ Locate isolator valve on the pump. Turn isolator valve counterclockwise.
- ◆ Locate control valve(s) on pump that operates leveling leg(s).
- ◆ Insert an Allen wrench into control valve(s) and turn clockwise (IN).
- ◆ Turn on both the house and chassis disconnect switches.
- ◆ Enter motorhome and use the leveling control pad retract the landing leg(s).
- ◆ Disconnect both the house and chassis disconnect switches.
- ◆ Use an Allen wrench to turn control valve(s) on hydraulic pump counterclockwise.

- ◆ Turn on both the house and chassis disconnect switches.
- ◆ Take motorhome to an authorized repair center.

If Pump Does Not Run:

- ◆ Disconnect both the house and chassis disconnect switches.
- ◆ Locate isolator valve on the pump. Turn isolator valve counterclockwise.
- ◆ Locate control valve(s) on pump that operates landing leg(s).
- ◆ Insert an Allen wrench into control valve and turn clockwise (IN).
- ◆ Remove the protective label on the hydraulic pump. This will access the manual drive coupler.
- ◆ Attach a standard hex bit into a drill, cordless or standard.
- ◆ Insert the hex bit into the coupler found under the protective label.
- ◆ Run drill counterclockwise to retract.
- ◆ Locate isolator valve on the pump. Turn valve clockwise. If isolator valve has a black cap, screw on black cap over isolator valve.
- ◆ Use an Allen wrench to turn control valve(s) on hydraulic pump counterclockwise.
- ◆ Turn on both the house and chassis disconnect switches.
- ◆ Take motorhome to an authorized repair center.

ENGINE - GENERAL INFORMATION

The diesel engine operates differently from a conventional gasoline engine. Gasoline engines control engine speed using a butterfly throttle plate controlling air/fuel mixture inlet flow. As the throttle plate opens, vacuum created by the piston velocity draws the metered fuel/air charge into the combustion chamber, then ignites from a controlled electric ignition source. Closing the throttle plate limits the fuel/air supply, slowing engine speed, increasing intake manifold vacuum.

The diesel engine in the motorhome controls engine speed by varying fuel supply only. No throttle plates are used. An exhaust driven turbine system (turbocharger) compresses the fresh air supply into the engine. The fuel is injected under pressure into the combustion chamber. Ignition of fuel/air charge occurs from heat generated by rapid high compression. The turbo boost gauge registers amount of intake manifold pressure measured in lbs./in². Therefore, no intake manifold vacuum exists.

Diesel engine RPM (revolutions per minute) operating speeds are generally much lower than that of the gasoline engine. Peak torque and horsepower output values occur at much lower engine speeds. Idle speeds between the two engine types are similar, however maximum engine speeds are quite different. The gasoline engine generally is not regulated to a maximum engine speed. The maximum engine speed on a diesel engine is controlled by an engine speed governor set by the engine manufacturer.

WARNING

DO NOT operate a diesel engine where there are or can be combustible vapors. Vapors can be drawn through the air intake system and cause engine acceleration and over-speeding, resulting in fire, explosion and extensive property damage. Numerous safety devices are available, such as air intake shutoff devices, to minimize risk of an engine over-speeding where an engine (due to its application) might operate in a combustible environment, such as fuel spills or gas leaks.

INFORMATION

The equipment owner and operator is responsible for safe operation of engine. Consult the engine OEM manual or authorized repair location for more information.

STARTING PROCEDURE

Normal Starting

CAUTION

To avoid starter motor damage, DO NOT crank the engine for more than 15 seconds at one time. If the engine fails to start, wait two minutes before attempting to start the engine again.

WARNING

DO NOT attempt to start the engine by “jumping” relays or any means other than using the ignition start switch. DO NOT attempt to start the engine unless all persons are clear of the engine before starting.

The engine is equipped with an intake manifold grid heater. The grid heater helps engine starting in cold weather. Intake manifold air temperature is monitored by the Electronic Control Module on the engine. If intake manifold temperature is below specified level (approximately 40° F.), the manifold grid heater will activate. Grid heater activation is indicated by the WAIT TO START indicator lamp.

WARNING

Use of ether starting fluids may cause an explosion upon grid heater activation.

To Start the Engine:

With the throttle in idle position, turn ignition to ON. Allow the WAIT TO START lamp

to extinguish. Turn key to the start position. When the engine starts the grid heater will again energize for a time period determined by the Electronic Control Module. Allow the engine to idle with no load for three to five minutes. The engine coolant temperature should be up to normal operating range (140° F/60 ° C to 212° F/100° C) before operating the engine under full throttle.

NOTE

DO NOT idle the engine for long periods of time. Consistent periods of long idle wastes fuel and may cause engine damage.

CAUTION

Do not depress accelerator pedal when starting engine.

To start engine...
turn ignition key only.


020328

Cold Weather

In sub-freezing or extreme cold, engine oil becomes thick and battery output is reduced. Thick oil, combined with less amperage available from the battery, increases difficulty in starting the engine.

Depending on ambient temperature it may be necessary to pre-heat the engine. Located in the coolant passage in the engine is a heating unit that operates from 120 Volt AC. If it is necessary to pre-heat the engine due to ambient temperature, it is recommended to activate the block heater the night before, allowing several hours for the block heater to warm the engine.

It is possible to operate diesel engines in extremely cold environments when the engine is properly equipped with the correct lubricants, fuels and coolant. Cold weather operation can be defined in two categories: Winter and Arctic.

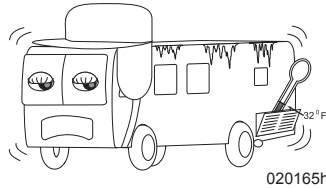

WINTER (32° to -25° F) (0° to -32° C):

Use a 50% antifreeze to 50% water coolant mixture, use multi-viscosity oil meeting manufacturers specifications and fuel to have maximum cloud pour points 10° F (6° C) lower than the ambient temperature in which the motorhome operates.

ARCTIC (-25° to -65° F) (-32° to -52° C):

Use a 60% antifreeze to 40% water coolant mixture. Use oil meeting manufacturer specifications and fuel to have maximum cloud pour points 10° F (6° C) lower than the ambient temperature in which the motorhome operates.

INFORMATION

Refer to the engine OEM manual for information on proper fuels, lubricants and coolants for cold weather operation.

NOTE

The engine is filled with 15-40w multi-viscosity oil from the factory. Generally this will start the engine in temperature down to 15° F. If the engine has normalized to a temperature below 15° F it will be necessary to pre-heat the engine before starting.

CAUTION

Upon cranking the engine in cold temperature, the starter may rapidly engage and disengage. If this occurs STOP attempting to crank the engine to prevent starter damage. Pre-heat the engine before making further attempts to start.


Block Heat:

The block heater is rated between 850 and 1500 watts, depending on engine size. For efficiency, hook to shore power or plug the block heater cord to a separate power cord rated for 15 Amps and a GFCI protected outlet rated at 20 Amps. The engine may require several hours of pre-heating before starting.

It is recommended to start preheating the engine the night before departure.

To Use the Block Heater:

- ◆ Hook to shore power and plug the block heater cord into the block heater receptacle.

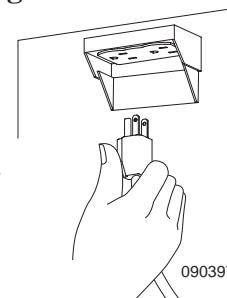

Located roadside rear compartment

Tips:

- ◆ When operating below 32° F, the block heater preheat can enhance engine starting by easing cranking and helping to prevent engine misfire and white smoke during starting.
- ◆ Always follow the recommended oil, fuel, and coolant specifications as outlined in the OEM Engine Manual. Proper oil viscosity and coolant concentration eases engine starting and helps to avoid engine damage.
- ◆ Allow the engine to idle until it sufficiently warms for operation. Utilize the fast idle feature to quicken the process. Wait to operate the motorhome for at least three minutes or until the coolant temperature begins to rise.
- ◆ Check the air inlet and filter daily, or as necessary, when driving in snow conditions.
- ◆ The demand on batteries increase during winter; check and service the batteries frequently to help ensure trouble-free starts.
- ◆ Start out slowly with the motorhome to allow the transmission and axle lubricants time to circulate and warm before putting them under full load.

WARNING

DO NOT use ether cold starting additives to start the engine, damage could occur.


ENGINE OIL

Cummins Engine Requirements:

Maintenance guidelines and requirements are located in the Cummins Operation & Maintenance Manual. These recommendations for the engine will extend engine life and improve performance, resulting in cost efficient operations. A good maintenance schedule begins with a daily awareness of the engine and its various systems.

A high grade 15W-40 multi-viscosity heavy duty lubricating oil meeting American Petroleum Institute (API) specification CJ-4/SL and Cummins Engineering Standard (CES) 20081 is recommended. A critical factor in maintaining engine performance and durability is the use of high grade, multigrade lubricating oil and strict adherence to the maintenance service intervals.

A straight weight or monograde lubricating oil is not recommended. Shortened drain intervals may be required as determined by a close monitoring of the lubricating oil condition by means of an oil sampling program. The use of oil analysis to extend drain interval is not recommended. There are numerous variables which is the basis of the recommendation.

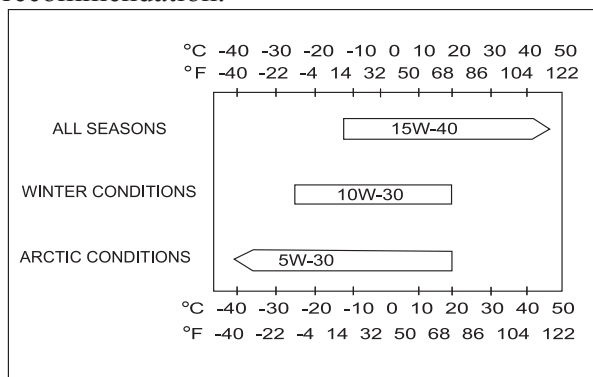

Lubricating oil recommendations and specifications.⁰⁷⁰²⁰¹

Synthetic oils API category III specifications are recommended for extreme cold temperatures only. Low viscosity oils used for winter operations will aid in starting. Synthetic oils, or oil with adequate low temperature properties used for Arctic operations where the engine cannot be kept warm when shut down, will aid in starting. The use of synthetic oils should not be used to extend drain intervals. Extended oil change intervals can decrease engine life and possibly affect the engine warranty.

Oil additives should not be used unless the oil supplier or oil manufacturer are consulted and provide positive evidence or data establishing satisfactory performance in the engine.

NOTE

The Engine is filled with SAE 15W-40 multi-viscosity oil from the factory.

INFORMATION

Refer to the engine OEM manual for details on the oil maintenance schedule.

ENGINE SHUTDOWN

Allow the engine to idle three to five minutes after a full load operation. This allows adequate cool down of pistons, cylinders, bearings and turbocharger components. Under normal driving conditions, exiting the highway is generally lighter engine operation and the need for the three to five minutes is not necessary.

Extended Engine Shutdown

When the motorhome is sitting for 30 days or more, verify all the fluid levels are correct. Follow the normal starting procedures. If the oil pressure gauge does not register within 15 seconds, shut off the engine immediately to avoid damage. Consult the engine OEM manual for guidelines on troubleshooting low oil pressure, or contact a qualified service technician. Allow the engine to idle for five minutes before operating under a load.

COOLANT SYSTEM

A fully formulated coolant is recommended to simplify cooling system maintenance. The system uses a fully formatted antifreeze or coolant. Coolant that is fully formulated contains balanced amounts of antifreeze, Supplemental Coolant Additive (SCA), buffering compounds and clean, quality water.

The difference between fully formatted antifreeze and fully formatted coolant is the percentage of water. The antifreeze of coolant must meet ethylene glycol or propylene glycol recommendations.

Antifreeze not fully formulated must be mixed with clean, quality water (distilled water preferred) in a 50/50 ratio (40 to 60% working range). This ratio will provide protection from -33° F. to 226° F boiling point. The actual lowest freezing point of ethylene glycol antifreeze is at 68 percent. Using higher concentrations of antifreeze will raise the freezing point of the solution and increase the possibility of a silica gel problem.

Antifreeze must be of low silicate content as defined by ASTM D-4985. The 50/50 ratio of antifreeze and clean quality water plus SCA must be premixed prior to being put in the cooling system. Placing antifreeze and then water in the cooling system is not recommended. Refer to the engine OEM manual for more information.

CAUTION

An over-concentration of antifreeze will reduce freeze protection. Use of high silicate antifreeze can damage the cooling system and engine. SCA is required in the cooling system to inhibit cylinder liner pitting as a result of cavitation erosion.

WARNING

DO NOT continue engine operation if engine temperature rises and the Warning light on the dash illuminates. The engine protection software will begin to decrease fuel (derate) to the engine regardless of throttle position. Continued operation will result in severe engine damage.

Good-Quality Water:

Good quality water is important for cooling system performance. Excessive levels of calcium and magnesium contribute to scaling problems. Excessive levels of chlorides and sulfates cause cooling system corrosion.

Testing the Coolant:

A refractometer must be used to accurately measure the freezing point of the coolant. **DO NOT** use a floating ball hydrometer. Using floating ball hydrometers can give an incorrect reading.

Coolant System Sealing Additives:

DO NOT use sealing additives in the cooling system. The use of sealing additives will:

- ◆ Build up in coolant low-flow areas.
- ◆ Plug the radiator and oil cooler.
- ◆ Possibly damage the water pump seal.

Cooling System Soluble Oils:

DO NOT use soluble oils in the cooling system. The use of soluble oils will:

- ◆ Corrode brass and copper.
- ◆ Damage heat transfer surfaces.
- ◆ Damage seals and hoses.

Check the coolant level before each trip, refueling, and when checking the oil level. Coolant freeze point is checked at every oil change interval or as specified by the engine manufacturer. Coolant drain and flush intervals are specified by the engine manufacturer. Refer to the engine OEM manual for more information on service maintenance intervals.

Coolant Types:

- ◆ Use a low-silicate antifreeze that meets ASTM4985 (GM6038M specification) criteria.
- ◆ Fully formulated coolant **MUST** meet ASTM D-6210/D-6211.
- ◆ Recommendations include using either a 50/50 mixture of good quality water and fully formulated antifreeze or fully formulated coolant.

NOTE

For detailed information on engine coolants for Cummins engines, refer to Cummins Coolant Requirements and Maintenance Bulletin 3666132.

Engine Coolant Reservoir:

The engine coolant reservoir is connected to the radiator by a hose. Coolant heats and expands as the motorhome is driven. Coolant displaced by expansion overflows from the radiator into the reservoir. Coolant contracts as it cools and is drawn back in the radiator by a vacuum. Thus, the radiator is filled to capacity with coolant at all times to increase cooling efficiency. The coolant level should be at, or slightly above, the appropriate mark on the reservoir tank when the system is cold.

The reservoir is marked MIN (cold check)/MAX (hot check), or the reservoir has upper (hot check) and lower (cold check) sight windows. Maintain coolant between the appropriate reservoir indicators.

CAUTION


DO NOT remove the reservoir cap while the engine is running or if the engine is hot. Cap removal can result in severe burns and damage to the engine cooling system.

NOTE

Be sure to replace cap after adding fluid.

Coolant Levels:

- ◆ Check coolant level before each trip, when refueling, and when checking the oil level.
- ◆ A low coolant alarm will sound and a low coolant indication will appear on the instrument panel if coolant level drops below acceptable levels in the reservoir. Stop the motorhome and inspect the coolant level before continued operation.

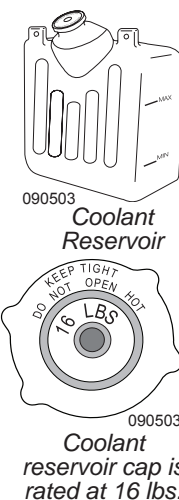

- ♦ Coolant level should remain between the MIN and MAX indicators on the reservoir when the cooling system is properly filled.

Supplemental Coolant Additive (SCA):

SCA is required to protect the cylinder liner/sleeve from cavitation erosion. Cavitation erosion is caused by minute air pockets that collect on the cylinder liner. The air pockets will pop (implode) during engine operation. Over time this can erode a hole through the cylinder liner. Supplemental coolant additives inhibit formation of the air pockets. The SCA content of the coolant is checked with Litmus paper. Test kits are available from the engine manufacturer as well as aftermarket. Litmus paper is time and light sensitive. Check the SCA content at each oil change following the directions in the test kit.

Refer to the engine OEM manual for further information.

NOTE

SCA test kits are time and light sensitive. Store test kit in a dry and dark location. Discard if out of date. Pink colored antifreeze may not be compatible with certain test kits.

Cooling System Maintenance:

Refer to the engine OEM manual for detailed information regarding cooling system service and maintenance intervals. Services include draining and replacing the coolant, flushing the cooling system, inspecting the water pump and standpipe and replacing the thermostat, gasket or seal.

Coolant Overheated:

The engine can overheat for a number of reasons. Before engine temperature reaches a critical point, it is preceded by illumination of dash indicator lamps as well as above normal temperature gauge readings. It is best to adhere to these indicators and take corrective action before the engine is subjected to extreme heat and potential damage.


If the engine should begin to severely overheat, engine protection software will begin to decrease fuel regardless of throttle position (derate) to reduce heat created by combustion. Damage to the engine will occur if engine operation continues and cause of the overheat condition is not immediately corrected. At this point it is best to shut off the engine as soon as possible to avoid further engine damage.

WARNING

It is advised to shut off the engine should the engine overheat. It may take several hours before engine temperature has lowered to a safe operating range. DO NOT remove the coolant reservoir cap as severe burns may result. DO NOT add cold water to an overheated engine as this will cause uneven rapid cooling and possibly result in further engine damage.

Freeze Protection:

Coolant freeze protection is checked using a refractometer for accuracy. This meter checks at what point the coolant begins to freeze. Refer to the engine OEM manual for test procedures.

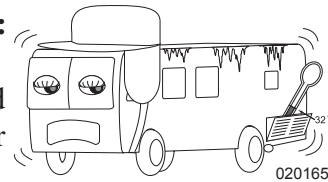

Coolant System - Thawing:

If the coolant system becomes frozen, the motorhome must be towed. Place the motorhome in a warm area until completely thawed. If the engine is operated when the cooling system is frozen, the engine may overheat due to insufficient coolant circulation. Once thawed, check the engine, radiator and related components for damage caused by expansion of frozen coolant.

Coolant Hoses:

Inspect coolant hoses and connections when checking engine or transmission fluids. Look for any signs of chaffing at hose restraints or sharp edges. Indications that hoses have reached the end of service life include cracking or swelling around clamps and connections. Oil leaks can also deteriorate hoses.

Overheating can be caused by a collapsed hose. Old hoses can also deteriorate on the inside causing partial clogs and reducing cooling efficiency. Replace any hose found to be cracked, swollen or damaged. Periodically check hose clamp torque.

Inspect:

Every 12 months - Inspect all hoses, clamps, and fittings for leaks due to cracking, softness and loose clamps/fittings. Look for signs of fluid leaks, damaged end fittings or ballooning; chafed, kinked, or crushed hoses, loose clamps and fittings. Correct any deficiencies found.


Radiator/Charge Air Cooler

The diesel engine uses compression to ignite the fuel/air charge. To increase compression inside the combustion chamber


(resulting in increased power output) a turbocharger is added to the engine. The turbocharger is a paired housing assembly with impellers inside each housing connected by a common shaft. One impeller is propelled by the engine exhaust which drives the other impeller. The function of the other impeller is to increase compression inside the combustion chamber by forcing air into the intake manifold.

This process works well, however, the intake air charge is heated two different ways: through convection by the exhaust gases driving the turbocharger and when air is compressed. This negative effect inside the combustion chamber results in lost power potential. Therefore, a Charge Air Cooler (CAC) is installed to cool the intake air before it enters the engine. The CAC performs the same function as a radiator, cooling air instead of liquid. Ambient air passing through the CAC will cool the engine intake air charge.

After leaving the turbocharger, intake air is compressed and heated to approximately 300° to 375° F., depending on the engine load and throttle position. Before air enters the intake manifold, the CAC cools the intake air temperature to the engine manufacturer

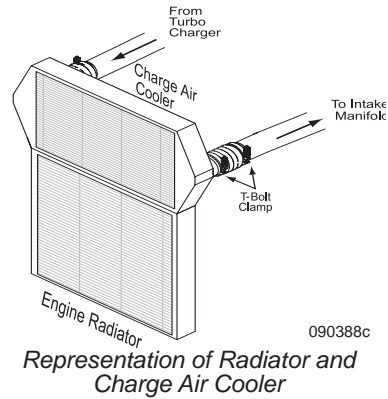

specifications. Lowered intake air temperatures reduce exhaust emissions, improve fuel economy and increase horsepower. The CAC will continually expand and contract up to 1/4" as throttle increases and decreases.

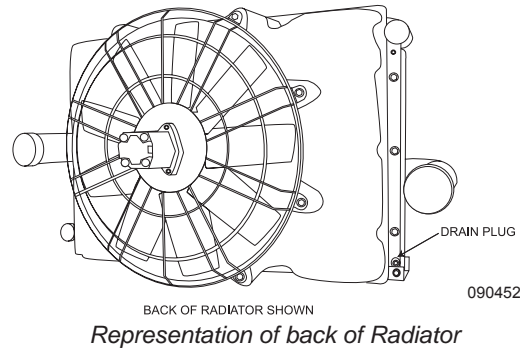

Cleaning and Maintenance:

- ◆ Regular maintenance includes draining the engine coolant, flushing/cleaning the cooling system, inspecting the water pump standpipe, replacing the thermostat, gasket and seal, and replacing the coolant and SCA element.
- ◆ Inspect the charge air cooler every six months and remove dirt and debris that may block the fins. If the motorhome develops an oil leak, there is a possibility that the oil will coat the fins of the CAC. Dust will adhere to the oil film, clog the fins and reduce cooling efficiency. When the oil leak is repaired, the CAC must be thoroughly cleaned.
- ◆ During each oil change inspect the engine side of the radiator/CAC assembly for foreign objects that may cause restriction.
- ◆ Spraying degreaser on the charge air cooler, as well as using a steam cleaner, will not damage the CAC. However, pressure washer and steam cleaner

nozzles placed too close to the CAC can bend the fins. The recommended cleaning procedure for the CAC and the radiator is to use a bucket of mild soap and water. Carefully wash with a bristle brush then rinse with minimum water pressure, standing back a distance to avoid bending the fins.

- ◆ When performing maintenance, it is also necessary to inspect other components of the cooling system. The charge air cooler and radiator also requires an inspection for cracks, broken welds, secure mounting, and general cleanliness.

Coolant Hoses:

Inspect coolant hoses and connections when checking engine or transmission fluids. Look for any signs of chaffing at hose restraints or sharp edges. Indications that hoses have reached the end of service life include cracking or swelling around clamps and connections. Oil leaks can also deteriorate hoses. Overheating can be caused by a collapsed hose or a clog caused by rubber shedding from a rotten hose. Replace any hose found to be cracked, swollen or damaged. Connections should be inspected periodically and hose clamps tightened.


Every 12 months:

Inspect all hoses, clamps, and fittings for leaks due to cracking, softness, and loose clamps/fittings. Look for signs of fluid leaks, damaged end fittings, ballooning, chafed, kinked, or crushed hoses, and loose clamps and fittings. Correct any deficiencies found.

REAR GRILL


The rear grill pulls out for access to the radiator compartment. The grill is attached by four tabs that insert into four grommets, one on each corner. To detach, place both hands evenly spaced on the grill and gently ease the grill out. To reinstall, align the tabs with the grommets and push in.

WARNING
When reinstalling it is **IMPORTANT** that the four corners of the grill are securely attached to the four grommets. Failure to do so may result in the grill jarring loose during travel.

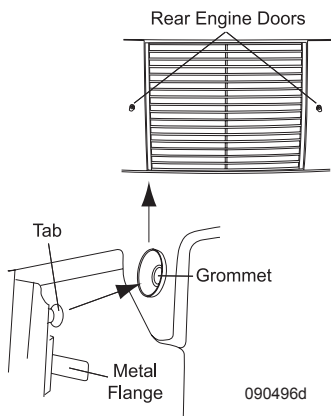

EXHAUST BRAKE

The exhaust brake (auxiliary braking system) is designed to supplement the standard air brake system. Attached directly to the engine turbocharger, the exhaust brake system is not designed to bring the motorhome to a complete stop; however, it can assist in controlling the speed of the motorhome. Use of the exhaust braking system can extend the service life of pads, shoes, rotors and drums.

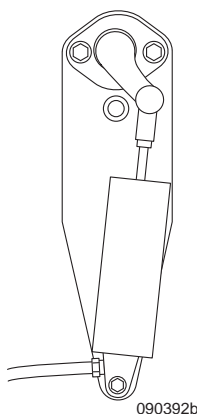

Operation

The exhaust brake will operate when the switch is on and the throttle is released.

Functions

When the exhaust brake is activated, a flapper inside the exhaust brake moves and restricts the flow of exhaust gases. This causes an increase of exhaust pressure within the engine. Increased exhaust pressure slows engine speed. The amount of engine braking power developed is related to engine speed (RPM), so the engine braking effect increases with higher engine RPM.

The exhaust brake is wired to the electronically controlled transmission. Use the exhaust brake when descending a hill or off ramp. When the exhaust brake is activated the transmission automatically optimizes downshifts, utilizing the gear selected to maximize the effectiveness of the exhaust brake.

Certain road conditions and engine speeds may require manually shifting the transmission in order to generate adequate engine RPM and increase the engine brake effect.

NOTE

The exhaust brake is designed to supplement the service brakes. The exhaust brake will not bring the motorhome to a stop. Use of the exhaust brake can help increase the life of the service brakes.



080498m
Located on Driver's Console

CAUTION

Activating the exhaust brake does not cancel cruise control.

NOTE


Idle the engine three to five minutes at approximately 1000 RPM to warm the engine before activating the exhaust brake.

TRANSMISSION

The Allison World transmission incorporates the World Transmission Electronic Control (WTEC) system. The system is comprised of five major components connected by a wiring harness: the Electronic Control Unit (ECU), engine throttle position sensor, three speed sensors, remote shift selector (keypad) and the control module. The ECU processes information received from the throttle position sensor, speed sensor, pressure switch and shift selector to provide optimum shift quality. This is accomplished by matching transmission and engine RPM during a shift to establish a desired shift profile within the ECU. Another feature of the transmission is the ability to “learn” or “adapt.” The electronic control system optimizes shift quality by using “Adaptive Shifting.” A wide variety of varied shift conditions is required before optimizing shift quality. Generally, five typical shifts of a consistent shift type are needed to optimize shift quality.

Shift Selector

The keypads on the shift control are R (Reverse), N (Neutral), D (Drive), Arrow up, Arrow down, Mode button. A digital display window shows gear selection, various transmission modes, oil level and transmission fault codes. Generation 4 keypads have a split screen displaying two number sets while in drive. The left number displays the highest forward range available. The right number is the range that the transmission is currently in. NN (Neutral) will appear in the display window when the ignition is turned On. This indicates the transmission is in neutral and it is safe to start the crank. If the NN does not display when the ignition is turned on, there is no power to the shift selector and the transmission will not allow the engine to start. No display is an indicator of electrical problems with the engine batteries, ECU or the shift selector.

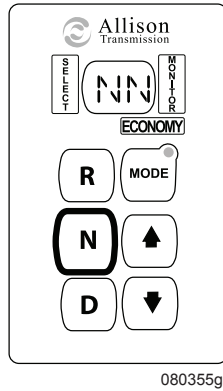

Keypad Functions:

- ◆ Select the Reverse gear by pressing R. RR will display.
- ◆ Select Neutral by pressing N. The area around the N button has a raised ridge so the driver can orient their hand to the push buttons by touch without looking at the display.
- ◆ Select Drive range by pressing D. The highest forward gear (6th gear) appears in the display and the transmission will shift to first gear indicated as 6 1.

- ◆ The Up and Down arrow buttons are used to select a higher (if not in “6”) or lower (if not in “1”) forward range. These buttons are not functional in Neutral or Reverse.
- ◆ When in Drive, one press changes the gear range selected by one. If the button is held continuously, the selected range will continue to change up or down until the button is released or until the highest/lowest possible range of gears is selected.
- ◆ The Mode button enables a secondary shift point to be selected. This is commonly referred to as Economy mode. Economy mode affects the upshift schedule 3-4, 4-5, 5-6 and downshift schedule 6-5, 5-4, 4-3. During highway driving, with the cruise control set between 55 and 65 m.p.h., setting the transmission to economy mode will eliminate about 99% of transmission downshifts from sixth to fifth when incurring a slight incline or overpass.

CAUTION

DO NOT use Economy Mode in heavy stop and go traffic or mountainous terrains. Frequent shifting while using heavy throttle occurs in Economy Mode and increases transmission fluid temperature. Exit Economy Mode until road conditions improve.

NOTE

The Mode button is used by the service technician to access diagnostic codes when troubleshooting. The diagnostic circuitry must be enabled to display.

NOTE

Cruise control switch enabled alerts the shift schedule. Turn off the cruise power switch in congested traffic and mountainous terrain.

CAUTION

Engine temperature may rise when ascending long grades using full throttle. Towing a load will increase the demand on the engine. If this occurs, manually shift the transmission to the next lower gear and use less throttle. The engine will use less fuel and RPM should increase.

NOTE

The transmission will not accept a manually selected gear change to occur if the gear selected is out of the specified operating range.

NOTE

The transmission will not shift into gear from Neutral if the engine RPM is at or above 900. The display will flash “66” indicating the engine RPM is excessive. Select “N” and lower engine RPM.

Parking the Motorhome:

- ◆ Bring the motorhome to a complete stop using the service brakes and hold the service brake pedal down.
- ◆ Allow the engine to come to a low idle (500 to 800 rpm).
- ◆ With a foot still on the service brake, apply the Park/Emergency brake by pulling up on the knob.



- ◆ Once the Park/Emergency brake is set, then move the shifter to the N (NEUTRAL) position.
- ◆ After this is accomplished release the service brake pedal.

CAUTION

Chock all the wheels securely if the motorhome is left unattended.

Check Trans Indicator

The electronic control system of the transmission is programmed to inform the operator of a problem with the transmission system and reacts automatically to protect the operator, motorhome and transmission. When the Electronic Control Unit (ECU) detects a DO NOT SHIFT (DNS) condition the ECU restricts shifting, turns on the CHECK TRANS light in the instrument panel and registers a fault code.

Each time the engine is started the CHECK TRANS icon will light, then turn off after a few seconds. This momentary lighting is to indicate that the status light circuit is working properly. If the CHECK TRANS light does not illuminate during start up, or if the light remains on after start up, the transmission system should be checked immediately.

Continued illumination of the CHECK TRANS light during vehicle operation (other than start up) indicates that the ECU has signaled a diagnostic code. Illumination of the CHECK TRANS light is accompanied by a flashing display from the shift selector. The shift selector display will show actual range attained and the transmission will not respond to shift selector requests.

Indications from the shift selector are provided to inform the operator that the transmission is not performing as designed and is operating at reduced capabilities. Before turning the ignition off, the transmission may be operated for a short time in the selected range in order to “limp home” for service assistance. Service should be performed immediately in order to minimize potential damage to the transmission.

When the Check Trans icon illuminates the keypad will not respond to command and the transmission generally will downshift to 4th gear. The torque converter will not “lock-up” and engine speed is automatically reduced. Direction changes (i.e. forward to reverse) will not be allowed. Locate a safe secure place to park the motorhome. If the engine is shut off, then engaged after a Check Trans indication, the transmission remains in Neutral until the fault causing the Check Trans light is corrected.

NOTE

Contact an authorized Allison Transmission service center whenever a transmission related concern arises. For some problems, fault codes may register without the ECU activating the Check Trans indicator. An authorized Allison Transmission Service center will have the equipment to check diagnostic codes and correct problems that may arise.

Diagnostic Codes:

The shift selector can be used to display transmission malfunctions as numerical codes. Each code is a two-digit main code and a two-digit sub code. These codes will fall in two classes: active and inactive. Active codes are codes currently affecting the ECU process and transmission operation. Inactive codes are retained in memory but may not affect the ECU process or transmission operation. A service technician will activate Diagnostic mode or hook an electronic display (Pro-Link) to the data plug to retrieve diagnostic codes. A maximum of five codes, D1 to D5, may be listed at one time. The highest priority code will be listed in D1. The Mode button will enable selection of sequential codes. Allison 4th Generation controls list each code consisting of five characters. The first being a letter followed by a four digit number string. The most severe or recent code is listed in the ECU memory first with a maximum of five codes being d1 to d5 possibly listed at the same time. When new codes are added, the oldest inactive codes will be dropped.

To Display Diagnostic Codes:

- ◆ Stop the motorhome at a safe location.
- ◆ Apply the parking brake.
- ◆ Simultaneously press the up and down arrows once to enter oil level display mode. Then press the up and down arrows again to enter diagnostic mode.
- ◆ The codes will display one digit at a time or two characters at a time on 4th Generation controls.
- ◆ Press the mode button to scroll through the codes.

- ◆ Record all diagnostic codes that are displayed. The codes then can be used by an Allison Service Center for evaluation and repair.
- ◆ Inactive codes can be cleared by holding the Mode button for approximately three seconds. 4th Generation controls require holding the Mode button for ten seconds to clear both inactive and active codes.

Some codes are self-clearing while others will require service or ignition on/off cycles to clear.

Periodic Inspections

The Allison MH Series requires very little maintenance. Careful attention to the fluid level, electrical connections and hydraulic hoses is very important.

The transmission should be kept clean for easy inspection. Make periodic checks for loose bolts and leaking fluid. Regularly check the condition of the electrical harnesses. Occasionally check the engine cooling system for evidence of transmission fluid that would indicate a faulty oil cooler. Report any abnormal condition to an Allison Service Center.

Prevent Major Problems:

Help the control system oversee the operation of the transmission. Minor problems can be kept from becoming major problems if an Allison Transmission Service center is notified when one of these conditions occur:

- ◆ Shifting feels odd.
- ◆ Transmission leaks fluid.
- ◆ Unusual transmission-related sounds (sound made by normal engine thermostatic fan cycling when climbing a long grade with a heavy load are often mistaken for transmission-related sounds).
- ◆ The Check Trans indicator frequently comes on.


TRANSMISSION FLUID & FILTERS

The transmission is filled with TranSynd™ synthetic transmission fluid at the factory. TranSynd™ synthetic transmission fluid extends service intervals. A small tag is attached to the dipstick identifying that the transmission is filled with TranSynd™ synthetic transmission fluid. A remote fill is located at the back of the engine and a transmission check/fill is located on the engine.

Fluid and Filter Change Interval:

The transmission has two filters: a main filter and a lube

filter. Follow the service intervals listed in the transmission OEM (Original Equipment Manufacturers) manual. Fluid and filters may require changing earlier than recommended in the transmission OEM manual, depending on the severity of operating conditions. Fluid must also be changed whenever there is evidence of dirt or high temperature operation

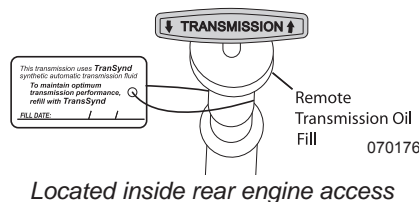

as indicated by discoloration, strong odor or fluid analysis. Local conditions, severity of operation or duty cycle will dictate more or less frequent service intervals.

CAUTION

DO NOT mix Dexron III® transmission fluid with TranSynd™ Synthetic transmission fluid.

INFORMATION

Be sure to retain the receipt for proof of the initial Main filter change. Refer to the Allison transmission OEM manual or contact an authorized Allison service center for service intervals.

Proper Fluid Levels:

Transmission fluid cools, lubricates and transmits hydraulic power. Proper fluid levels must be maintained at all times. If fluid level is too low, the converter and clutches do not receive an adequate supply of fluid. If fluid level is too high, the fluid can aerate. Aerated fluid can cause the transmission to shift erratically or overheat.

An Oil Level Sensor (OLS) is built into the transmission. The fluid level can be checked easily and cleanly using the shift selector. Check the transmission fluid level before each trip and after removing the motorhome from storage.

To Enter Oil Level Sense Mode:

- ◆ Park the motorhome on a level surface. Place the transmission in “N” and set parking brake.
- ◆ The transmission temperature must be at least at operating temperature or an error code will appear.

- ◆ The motorhome must be stationary and in Neutral for approximately two minutes to allow the fluid to settle in the sump.
- ◆ The engine must be idling lower than 800 RPM.
- ◆ Simultaneously press the Up and Down buttons once.

The transmission is now in Oil Level Sense mode. The display will indicate one character at a time. An “o” followed by “L” represents oil level check mode. One of the following will be indicated:

Common Oil Level Fault Codes

| Display | Cause of Code |
|-----------|---------------------------------|
| o,L - O,X | Setting time too short |
| o,L - 5,0 | Engine speed (RPM) too low |
| o,L - 5,9 | Engine speed (RPM) too high |
| o,L - 6,5 | Neutral must be selected |
| o,L - 7,0 | Sump fluid temperature too low |
| o,L - 7,9 | Sump fluid temperature too high |
| o,L - 8,9 | Output shaft rotation |
| o,L - 9,5 | Sensor failure |

- ◆ “o K” represents the level is okay.
- ◆ “Lo” represents a low fluid level followed by a numeric indication of the number of quarts needed fill the sump.
- ◆ “HI” represents an overfull condition followed by a numeric indication of the number of quarts the sump is overfull.
- ◆ A countdown of flashing numbers indicates the fluid is still settling. When the fluid has stabilized in the sump, the true level will be indicated.

- ◆ If an “o” “L” “-” followed by a number displays, the oil level sensor could not read the level due to one of conditions listed in the “Common Oil Level Fault Codes” chart.
- ◆ Exit by pressing “N.”

Cold Check - Manual Check Procedures:

The concept of a cold check is to determine adequate fluid level for safe operating, such as after a fluid and filter change. A cold check should be performed after transmission maintenance or service until a hot fluid level check or fluid level check from the shift selector can be performed.

To Check the Fluid When Cold:

- ◆ Park the motorhome on a level surface. Set the parking brake.
- ◆ Chock the wheels to prevent the motorhome from moving.
- ◆ Start the engine.
- ◆ Allow the engine to run at idle (500 to 800 RPM) for one minute.
- ◆ Apply the service brakes and shift to D (Drive), then to N (Neutral) and next to R (Reverse) to fill the system. Shift the transmission to N (Neutral) and release the service brakes. Allow the engine to idle at 500 to 800 RPM.
- ◆ Remove the dipstick and wipe clean. Reinsert the dipstick fully into the tube, then remove to check fluid level. Repeat to verify reading, if needed.
- ◆ Safe operating level is anywhere within the Cold Check band on the dipstick. This allows safe operation of the transmission until a Hot Check or fluid level check from the shift selector can be performed.

- ◆ If the level is not within this band, add or drain the fluid as necessary to put the level to the middle of the Cold Check band.
- ◆ Perform a fluid level check from the shift selector or a Hot Check at the first opportunity when normal operating temperatures are reached.

CAUTION

Low or high fluid level can cause overheating and irregular shift patterns. These conditions can damage the transmission if not corrected.

Fluid Levels - Hot Check

Fluid level rises as temperature increases. Fluid must be hot to ensure an accurate check. Be sure fluid has reached normal operating temperature. If a transmission temperature gauge is not present, check the fluid level when the engine water temperature gauge has stabilized and the motorhome has been driven for at least one hour.

- ◆ Park the motorhome on a level surface and shift to N (Neutral). Apply the parking brake and allow the engine to idle (500 to 800 RPM).
- ◆ After wiping the dipstick clean, check the fluid level. Safe operating level is anywhere within the Hot Run band on the dipstick.
- ◆ The width of the Hot Run band is approximately one quart of fluid at normal temperature range.
- ◆ If the level is not within this band, add or drain the fluid as necessary to put the level within the Hot Run band.

- ◆ Ensure that fluid level checks are consistent. Check the level more than once. If readings are not consistent, ensure the transmission breather is clean and not clogged. If readings are still not consistent, contact the nearest Allison Service Center.

FUEL SYSTEM

Fuel Requirements

Diesel Fuel in the United States is categorized by sulfur content. There are two categories: Low Sulfur Diesel (LSD) and Ultra Low Sulfur Diesel (ULSD). LSD fuel contains a maximum sulfur content of 500 parts per million (ppm); ULSD fuel contains a maximum sulfur content of 15 ppm.



LSD (Low Sulfur Diesel) and ULSD (Ultra Low Sulfur Diesel): Beginning June 1, 2006, 80% of available diesel fuel in the United States will have less sulfur. Beginning October 15, 2006, additional labeling on diesel fuel dispensing pumps will reflect the reduction in sulfur to include Ultra Low Sulfur Diesel (ULSD) and Low Sulfur Diesel (LSD). ULSD fuel contains a maximum sulfur content of 15 ppm (parts per million) while LSD fuel contains a maximum sulfur content of 500 ppm. 2007 and later model year engines and emission systems are designed to use ULSD fuel. Refer to the engine OEM manual for which type of fuel is acceptable for use.

WARNING
Use of LSD fuel in ULSD engines will damage emission control systems and is subject to fine.

CAUTION
Engines designed for ULSD fuel require specially formulated motor oil classified by the API (American Petroleum Institute) as category CJ-4.

Seasonal Requirements: Diesel fuel classified as # 2 is used in moderate and temperate climates. A winter blend of #1 and #2 diesel fuels is available during the winter months in cooler climates (or possibly year-round in extremely cold or arctic areas). The dispensing pump may not indicate winter blend.

Biodiesel: Biodiesel is a synthetic fuel made from plant oil or recycled cooking oil. Biodiesel is often sold as a biodiesel/ petrodiesel blend with an alphanumeric designation that indicates biodiesel content. For example: B5 is 5% biodiesel and 95% petrodiesel while B100 is 100% biodiesel. Due to variances in biodiesel, its use is restricted by the engine manufacturer. Refer to the engine OEM manual for acceptable biodiesel tolerances.

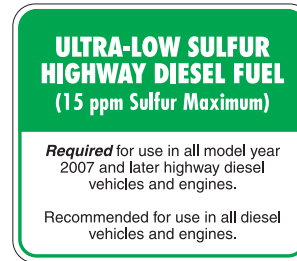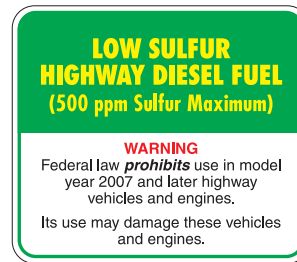

100217


Tips: Try to obtain fuel from sources that are serviced often, such as large truck service facilities. The fuel supply is fresh and the possibility of introducing contaminants or water into the fuel system is reduced. If the engine runs out of fuel, the fuel system must be thoroughly primed before the engine will start and run properly.

WARNING
DO NOT mix gasoline, alcohol or gasohol with diesel fuel. This mixture can cause an explosion.

NOTE
Due to the precise tolerances of diesel injection systems, it is extremely important that fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors. Fuel additives for lubricity are not recommended. There are numerous diesel fuel additives to help remove moisture from fuel, prevent microbe growth and to prevent gelling during cold weather. Before adding any type of fuel additive or extender, consult the OEM manual.

Fuel Tank

Pick-up and return lines are placed at opposite ends of the tank to inhibit fuel aeration. The engine pickup tube is cut at a 45° angle to allow optimum flow to the engine. The generator intake tube is set to approximately ¼ of a tank. This will prevent depleting the fuel supply while dry camping.

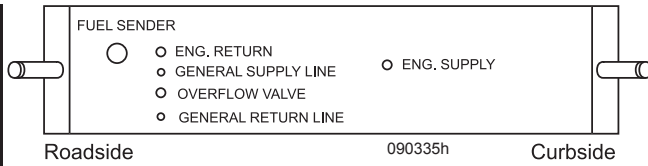


The bottom of the tank is made in a “V” configuration allowing the engine pick-up tube access to almost all available fuel in the tank. Internal baffles slow fuel slosh. A check valve placed at the bottom of the baffle, at the end of the tank with the pick-up tube, prevents fuel starvation through long corners when fuel supply is low.

NOTE

Fill the fuel tank to reduce the amount of potential condensation if the motorhome is going to be stored for any length of time. After storage, check the vent tube for blockage. It is not uncommon for insects to plug the vent tube. If pressure or vacuum exists when the fuel cap is removed, the vent tube may be blocked. The end of the vent tube is located on the curbside of the fuel tank, near the bottom.

Fuel Sender

The fuel sender, located on the top of the fuel tank, is preset at the factory and non-adjustable.

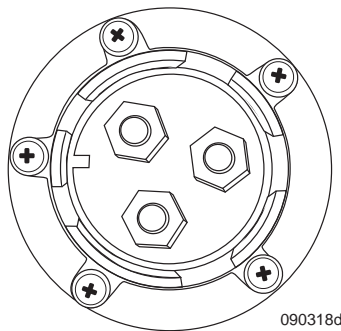

Fuel Lines & Hoses


Make a visual check for fuel leaks at all engine-mounted fuel lines, connections and at the fuel tank pick-up and return lines. Leaks in this area may best be detected by checking for accumulation of fuel under the tank. Engine performance and auxiliary equipment is dependent upon the ability of flexible hoses to transfer lubricating oil, air, coolant and fuel. Maintenance of hoses is an important step in ensuring efficient, economical and safe operation of the engine and related equipment.

INSPECTION

Check hoses for leaks daily as part of the pre-start inspection. Check all fittings, clamps and ties. Ensure the hoses are not touching shafts, couplings or heated surfaces, including exhaust manifolds, sharp edges or other obvious hazardous areas. Vibration from the engine and road can move or fatigue clamps and ties. To ensure continued proper support, frequently inspect fasteners and tighten or replace them as necessary.

Fuel Filters

Two filters are used for the engine: a primary and secondary filter. The primary filter is located roadside behind the air conditioner condenser; the secondary filter is located in the rear engine compartment.

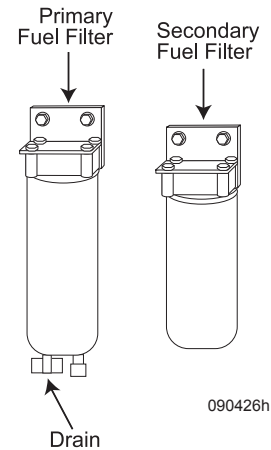

NOTE

It is recommended to wear gloves and old clothing when working with diesel fuel. Avoid getting fuel in the interior of the motorhome.

Filter Maintenance Intervals:

- ◆ Drain the primary fuel filter daily before travel.
- ◆ Change the primary fuel filter every six months, 15,000 miles or at the first indication of power loss.
- ◆ Refer to the engine OEM manual for service intervals of the secondary fuel filter.

Water in Fuel:

If water in fuel is found in the primary filter, **DO NOT** continue engine operation. Fuel contaminated with water can damage fuel injectors. Water is heavier than fuel and will collect in the primary filter bowl. Drain primary filter using the valve on the bottom of the filter.

NOTE

Always carry an extra filter as one tank full of excessively contaminated diesel fuel can plug a filter.

To Drain the Filter:

- ◆ Wear safety goggles.
- ◆ Shut off the engine.
- ◆ Open the drain valve, by hand, counterclockwise approximately 1 1/2 to 2 turns until draining occurs. Drain water/fuel into a container and dispose of in accordance with local environmental regulations.
- ◆ Close the drain valve by turning clockwise when clear fuel is visible.

NOTE

Water and sediment from the filter can contain petroleum products. Consult the local environmental agency for recommended disposal guidelines.

If unable to start, contact nearest Cummins Center or phone 1-800-343-7357 for Cummins Customer Assistance Center.

HYDRAULIC SYSTEM

On a walk around and pre-check of the motorhome, look for oil leaks under the coach and around hose fittings. If a hose connection appears to be leaking, clean the filter and the surrounding area. If seepage continues, have the problem corrected to prevent untimely failure.

Hydraulic Reservoir

The power steering reservoir with internal filter is located in the rear engine compartment. The hydraulic filter assembly, located inside the reservoir, is rated at ten micron*. The reservoir is filled with 15W-40 motor oil.

Filter assembly: Nelson 91085G


Filter number: 84365A (ten micron*)

NOTE

Filter is accurate at time of printing. Confirm part number before ordering or obtaining replacement.


The primary function of the power steering reservoir is to keep the steering system free of contamination and to dissipate excessive heat that builds during extreme operating conditions.

Check the oil level in the reservoir prior to each trip. The oil dipstick fill is located on top of the reservoir. The oil level should be kept between the full and add marks on the dipstick. If adding of fluid is required, use only 15W-40 motor oil.

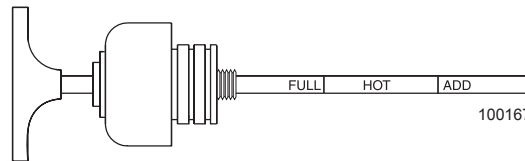

Checking the Fluid Level:


- ◆ Start the engine and allow it to reach normal operating temperature.
- ◆ While the engine is at idle, turn the steering wheel left and right several times.
- ◆ Shut the engine off.
- ◆ Rotate the grip handle counterclockwise to remove the dipstick.
- ◆ Check the fluid level on the HOT side of the dipstick in the area marked HOT. **DO NOT** exceed the full mark.
- ◆ If the fluid level is low, add fluid in small amounts, continuously checking the level until the FULL mark is reached.
- ◆ Insert the grip handle back in the reservoir and rotate clockwise until securely fastened.

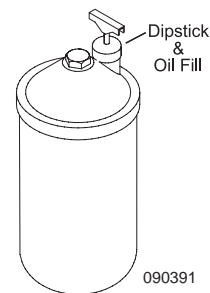

Located in the rear engine compartment

Power Steering Hydraulic Filter

A filter is located in the power steering hydraulic reservoir. Replace the filter every 15,000 miles, or once a year, for cellulose element.

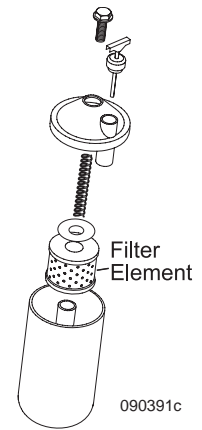

Changing the hydraulic oil filter:


- ◆ Using a wrench, typically 15/16", loosen the center cover bolt.
- ◆ Remove the bolt and cover plate to access the spring and filter.
- ◆ Place a container under the reservoir. Also have rags handy to clean up any oil that may spill.
- ◆ Remove the spring and washer to remove the filter assembly. Use care because oil may spill out.
- ◆ After replacing the filter assembly, reverse the process to re-assemble the reservoir.
- ◆ When attaching the cover plate in the rubber cover seal, check for any damage.

If needed, fill the reservoir to proper level. Fill with new 15W-40 motor oil only. **DO NOT** reuse old oil. Start the engine and allow it to reach normal operating temperature to purge trapped air. While the engine is at idle, turn the steering wheel left and right several times. Shut engine off and confirm proper oil level in reservoir.

AIR INTAKE & CHARGE AIR SYSTEM

The air intake and charge air system supply the engine with clean air for proper combustion and performance. Air entering the system is cleaned through a replaceable filter element and monitored with an air filter restriction indicator.

The airflow through the air filter is passed through the engine turbocharger, which pressurizes and heats the air. The heated pressurized air then passes through the charge air cooler, where the air is cooled before entering the engine intake manifold.

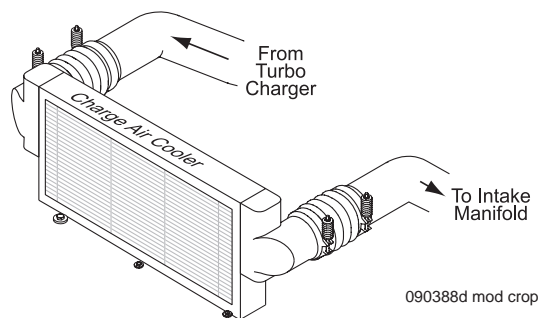


Air entering the engine must be as clean as possible. Contaminated air can cause destruction of major engine components. Even small amounts of contaminants can do major damage to an engine.

INSPECTION

Inspect the air intake system on a weekly basis, looking for damage, clogged fins, loose connections, and wear to the air ducting, clamps, and filter housing. Check to ensure that the ducting is not rubbing or wearing on other components and that all components are securely in place. Have any problems investigated and corrected as soon as possible in order to prevent engine damage.

Air Filter

To replace air filter, remove screws and cover from air cleaner body. Remove air filter cartridge and discard. Install new air filter cartridge and secure with cover and screws.

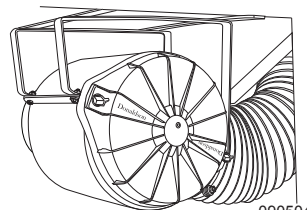

Located Roadside Rear


Air Filter Number: Donaldson P533930

NOTE

Filter is accurate at time of printing. Confirm part number before ordering or obtaining replacement.

WARNING

DO NOT start the engine with the air cleaner removed and DO NOT remove it while the engine is running.

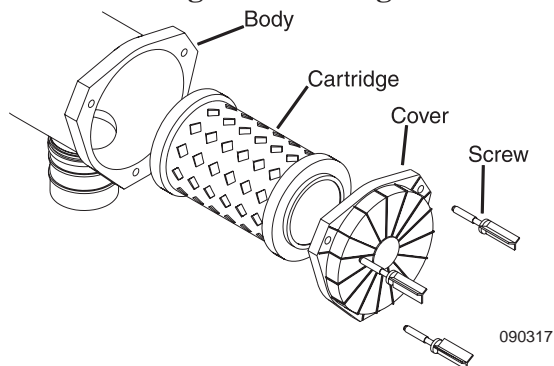

Air Filter Restriction Indicator

The air filter restriction indicator improves engine efficiency by telling the amount of restriction present in the air intake system, thus indicating when the air filter needs changing. A visual inspection of the air filter is not adequate and should never dictate service life.

What Indicator Does:


- ◆ Continuously shows how much life is left in engine air filter (window).
- ◆ Continuously reads air flow restrictions in increments (scale).

When To Monitor:

- ◆ Inspect indicator before each trip.

When To Change Air Filter:

- ◆ When the yellow indicator approaches the red (top) area it is signaling that the air filter is becoming excessively dirty. Service the air filter when the red indicator stays in the window with the engine off.

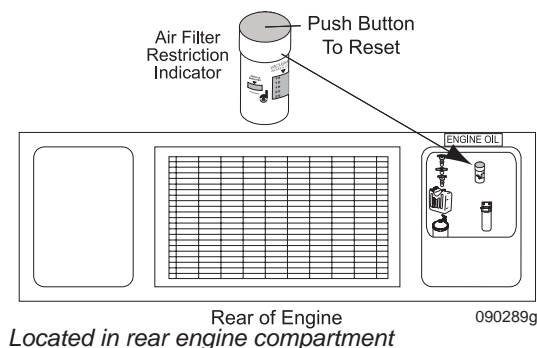

How To Reset Indicator:

- ◆ Push button on top to reset.

NOTE

If the air filter restriction indicator should become faulty, replace entire unit.

DIESEL PARTICULATE FILTER

The exhaust system is equipped with a DPF (Diesel Particulate Filter) to lower particulate emissions. The DPF traps particulate matter. Naturally occurring exhaust heat oxidizes built up particulate and regenerates the filter. This is called passive regeneration. If passive regeneration is not sufficient, an active regeneration cycle will automatically initiate at speeds greater than 20 mph. Both passive and active regeneration cycles initiate automatically.

WARNING

Use Ultra Low Sulfur Diesel (ULSD) only. Do not use Low Sulfur Diesel (LSD) with a DPF equipped engine. LSD will damage the DPF, which may cause the Stop Engine light to illuminate and cause the engine to severely derate.

Passive Regeneration:

Passive regeneration uses heat from naturally occurring exhaust gasses to oxidize built-up particulate.

Active Regeneration:

An active regeneration cycle will initiate if exhaust temperatures are not high enough to regenerate the filter. The motorhome must be traveling in excess of 20 mph for an active regeneration cycle to initiate.

During an active regeneration cycle, diesel fuel is introduced into the exhaust system upstream of the DPF. The fuel will ignite and super-heat the DPF to oxidize particulate matter. The HEST (High Exhaust System



090502
HEST Dash Light

Temperature) dash light will illuminate when exhaust temperatures reach 1450° F., indicating that an active regeneration is underway and exhaust system temperatures are elevated above normal levels. These temperature levels may occur for up to 40 minutes. The HEST light will remain on until the exhaust temperature cools to 650° F., which may not be until the engine is turned off and the exhaust system cools before restarting. The HEST light does not indicate a fault as long as there are no other active warning lights.

CAUTION


Use extreme caution if parking the motorhome while the HEST light is on. The exhaust system and exhaust gas will be extremely hot to the point of fire hazard. DO NOT park the motorhome on or around anything combustible.

NOTE

If the engine is turned off during an active regeneration cycle, the cycle will automatically begin again (if necessary) when the motorhome is operated at speeds above 20 mph.

DPF Dash Light:

A DPF (Diesel Particulate Filter) indicator light on the dash illuminates when an active regeneration cycle is necessary and has not been able to initiate. Driving the motorhome above speeds of 20 mph will allow an active regeneration cycle to initiate. The HEST light will turn on when exhaust temperatures reach 1450° F, indicating an active regeneration cycle is underway. Once the DPF is clear of particulate matter the DPF light will turn off.

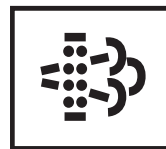

090502

DPF Dash Light

DPF Light Warning System:

If the DPF remains clogged, there are four stages of the DPF light warning system. The HEST light may illuminate during this sequence, which indicates that an active regeneration cycle is underway. This should successfully regenerate the filter. The only indication that the DPF is clear and in good working order is the DPF light turning back off.

- ◆ **Stage One:** The DPF light glows steady. This means that an active regeneration cycle is necessary but has not been able to initiate.
- ◆ **Stage Two:** The DPF light flashes. The DPF filter is clogged to the point that the engine will slightly derate (lose power).
- ◆ **Stage Three:** The DPF light flashes and the Check engine light turns on. The DPF is clogged to the point that service is required immediately. The engine will severely derate at this point.
- ◆ **Stage Four:** The DPF light and Check Engine lights extinguish and the Stop Engine light turns on. Turn off the engine as soon as possible to avoid severe engine and/or system component damage. **DO NOT** drive the motorhome in this condition. The DPF will need to be removed for repair.

LUBRICATION MAINTENANCE

Performing regular scheduled maintenance ensures reliable operation and optimum service life of the various chassis components. Completed maintenance brings peace of mind knowing the various components have received proper service. Failure to follow maintenance guidelines, or perform scheduled maintenance, results in inefficient operation, premature component wear or component failure resulting in breakdown.

Maintenance schedules are usually performed at certain mile or time intervals. When performing high level procedures, lower level service should also be performed.

NOTE

Maintenance schedules are based on normal operating conditions and use. Operating under unusual or adverse condition shortens service intervals.

INFORMATION

Engine and transmission service intervals are listed in their respective OEM manuals.

Proper Lubricant Waste Disposal:

When performing service maintenance on the engine, transmission or rear axle, waste fluids and filters should be properly disposed of or recycled. Package used oils, antifreeze and other fluids in sealed containers. In many cases used oil is accepted free of charge at county disposal sites. Waste fluids are toxic to pets and other animals. Waste fluids should not be left in open containers. The sweet odor of antifreeze is attractive to pets, but highly toxic.

CAUTION

Properly dispose of used antifreeze and waste oil. Animals like the sweet odor of antifreeze and may ingest it from open containers. Wipe up any fluid spills. Pets may lie in puddles of fluid, many of which are irritants and can cause severe chemical burns if not properly washed.

Lubricant Classification:

Lubricants are manufactured in many forms for a variety of applications. There are many different oil and grease consistencies each with a designed application. To properly select a particular type of lubricant for a specific application, the component must be evaluated. Component stress loads, ambient temperature, working temperature and environmental exposure are just a few of the variables to consider. Select the proper lubricant for its intended application. As an example: selecting high viscosity grease to lubricate a lock cylinder results in sluggish lock cylinder operation especially in a cool environment. Conversely, using graphite to lubricate a component that is under extreme temperature and load will result in component failure.

Grease ratings and their base compounds are especially important when selecting a lubricant type for an intended application. Some grease compounds are manufactured for multi-use application. These are acceptable if the grease rating is in accordance with the manufacturer's recommended lubricant type and rating.

Lubricants:

Many chassis components require lubrication. The types of lubricants used will vary with the application of the component. A component may fail prematurely due to lack of

lubrication or from using an incorrect lubricant type. The component manufacturer usually recommends a particular type of lubricant with a minimum approval rating. Most lubricants are tested under strict guidelines set by the ASTM (American Society for Testing and Materials). The NLGI (National Lubricating Grease Institute) helps disperse information to the grease production industry. Grease containers usually have an approval rating by the SAE (Society of Automotive Engineers), Mil Spec (Military Specification), API (American Petroleum Institute) or by other recognized and accepted organizations.

The correct lubricant type with an approved specific rating must be used whenever applying, changing or adding any lubricant. When purchasing lubricants for a specific application be sure the label affirms the type of lubricant required with the tested rating by the term "meets or exceeds" in accordance with the manufacturer specifications.

Lubricating greases are made from different base compounds giving the grease different lubricating consistencies, properties and maximum operating temperatures. Most containers list the base compound and maximum operating temperature usually listed as melting point or drip point. Lubricating components, such as brake component for example, require a high temperature special base compound grease. Lubricating this type of component with other than specified grease type will result in inadequate lubricating qualities and component malfunction or failure.

INSPECTION

When performing any scheduled maintenance, inspect the area around the work area. For example, changing the oil, look at the rear differential. Inspect for visual signs of fluid leaks.

Most fluids and lubricants have a distinct odor, which can be used to detect early signs of trouble. Generally, odors are most detectable soon after parking. Unusual sounds are another method of detecting a problem early. There are many types of sounds that are normal, such as the cyclic purging of the air dryer. Become familiar with the different sounds. If something sounds odd, smells peculiar or looks unusual investigate the situation.

Greasing:

Thoroughly clean all Zerk grease fittings before applying new lubricant. Keep paper towels or disposable rags handy when greasing. When lubricating items such as drive shafts and steer axle components, continued grease application is generally required until new grease appears at exit points.

Some items use sealed boots around the component to prevent moisture intrusion. When greasing these types of components, care must be given to prevent excess lubricant pressure from rupturing the seal.

WARNING

Always chock wheels before going underneath the motorhome.

WARNING

DO NOT allow anyone under the motorhome without first properly blocking frame (jackstands) from coming down in case of rapid deflation of air system.

Brake actuating components require lubrication to keep the actuating components freely operating. Avoid contaminating brake linings with lubricant. Particular care and attention to detail should be taken when lubricating brake actuating components. Wheel removal may be necessary to gain access the grease fittings.

NOTE

Suspension, steering, brake and drivetrain components are lubricated at factory using NLGI 2 Lithium Soap based grease.


To apply grease:

- ◆ Clean the grease fitting. Initially operate grease gun until new lubricant discharges from nozzle, then wipe nozzle clean to avoid introducing contaminants into the component.
- ◆ Snap nozzle onto grease fitting. Nozzle must remain in line with the grease fitting during the application process. If the nozzle is not in line, lubricant will collect around nozzle and grease fitting, failing to lubricate the component.
- ◆ Wrap the nozzle with a paper towel or rag to prevent contamination and accidental soiling of other areas.



If the component does not accept grease the Zerk fitting may be plugged or damaged. Zerk fittings are replaceable and generally available at most auto supply stores. Zerk fittings come in a variety of angles depending on the application. Every effort should be made to lubricate the component, as neglect will only result in premature component failure.

NOTE

Some grease fittings may not be accessible until the steering wheel is turned or the motorhome is moved slightly.

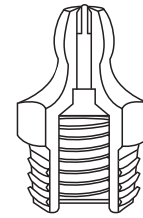


Typical Zerk Fitting

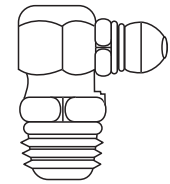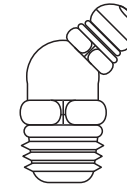


090368

Front of Chassis

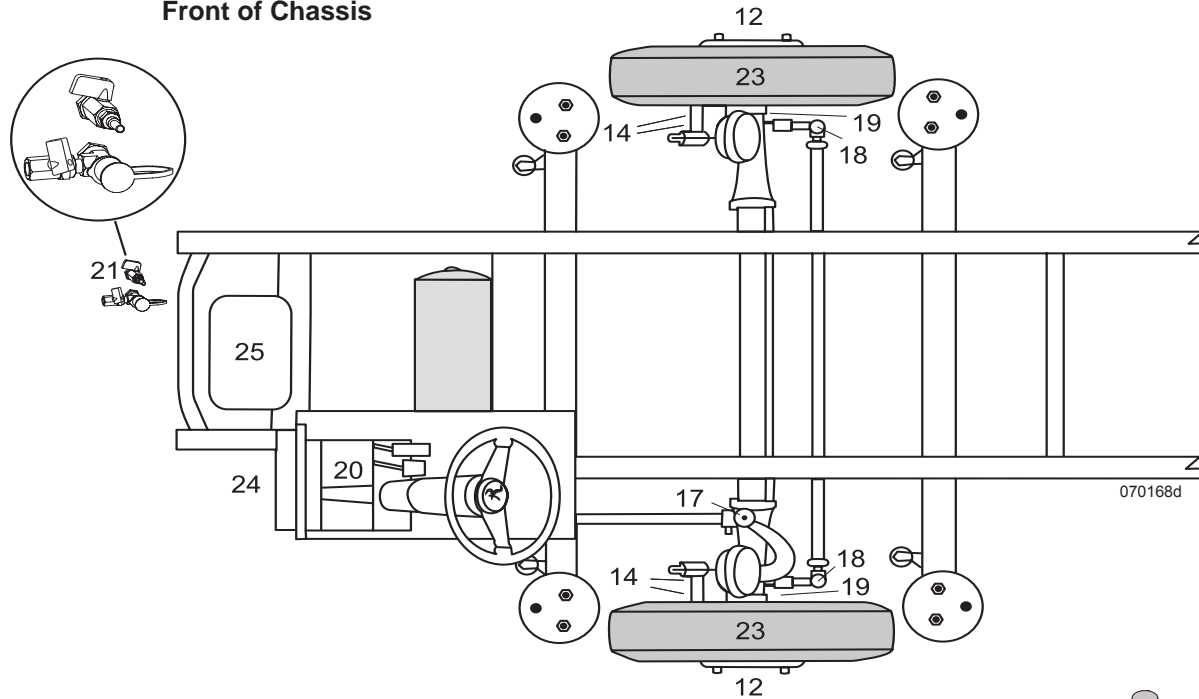

Rear of Chassis

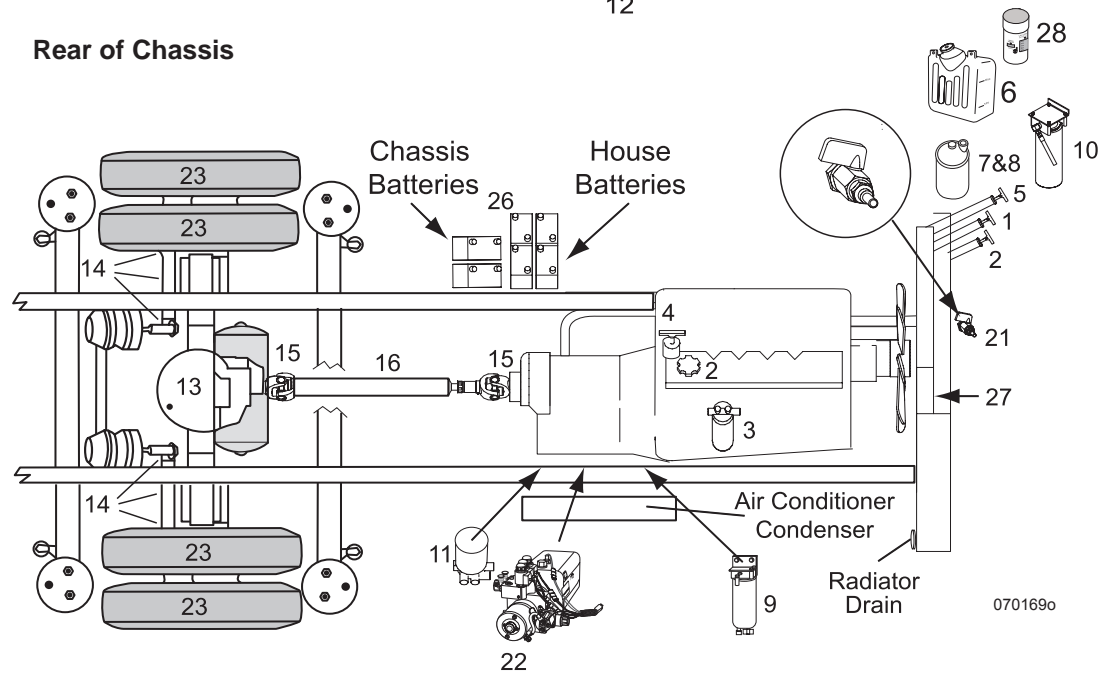

Representation of front and rear chassis. Components and location of components may vary.

| Component: | Action: | When: | Code |
|---|-----------------------|---|------|
| 1. Engine Oil Dipstick | Keep to Full Mark | Before Each Trip + Daily Enroute | EO |
| 2. Engine Oil Fill | Keep to Full Mark | Before Each Trip + Daily Enroute | EO |
| 3. Engine Oil Filter | Replace Filter | At Oil Change | OEM |
| 4. Transmission Dipstick | Keep to Full Mark | Refer to OEM Manual | TS |
| 5. Transmission Remote Fill | Keep to Full Mark | Refer to OEM Manual | TS |
| 6. Engine Coolant | Replace | Refer to OEM Manual | AF |
| 7. Hydraulic Fluid Reservoir | Keep to Full Mark | Before Each Trip | EO2 |
| 8. Hydraulic Filter | Replace | 15,000 or Annually | EO2 |
| 9. Filter Fuel/Water Separator (Primary) | Replace | 15,000 or 6 Months | FF |
| 10. Filter Fuel (Secondary) | Replace | Refer to OEM Manual | OEM |
| 11. Air Dryer Filter | Replace | 2-3 Years | - |
| 12. Wheel Bearings | Re-pack | 30,000 Miles or Annually | HT |
| 13. Rear Differential | Change Fluid | 250,000 or 3 Years | MP |
| 14. Slack Adjuster/Cam Shaft | Grease-2 Fittings ea. | 10,000 or 3 Months | CL |
| 15. Drive Shaft Universal Joints | Grease-2 Fittings | 5,000 or 6 Months | CL |
| 16. Drive Shaft Slip Yoke | Grease-1 Fitting | 5,000 or 6 Months | CL |
| 17. Drag Link | Grease-2 Fittings | 5,000 or 6 Months | CL |
| 18. Tie Rod End | Grease-2 Fittings | 5,000 or 6 Months | CL |
| 19. Spindles/Kingpins | Grease-2 Fittings ea. | 5,000 or 6 Months | CL |
| 20. Steering Shaft | Grease-3 Fittings | 30,000 or Annually | CL-4 |
| 21. Air Tank Drains | Drains | Monthly | - |
| 22. Lippert Hydraulic Reservoir | Keep to Full Mark | Check Monthly Change every 36 months | TF |
| 22. Lippert Hydraulic Slide-Out Reservoir | Keep to Full Mark | Check prior to operating system | TF |
| 23. Tire Pressure | Check | Before Each Trip + Daily En route | - |
| 24. Steering Box | Grease -1 Fitting | Twice a Year | CL |
| 25. Generator | Refer to OEM Manual | Refer to OEM Manual | OEM |
| 26. Batteries | Inspect | Bi-Monthly | DW |
| | Apply | Every 2 Weeks | P |
| 27. Radiator/Charge Air Cooler | Inspect | Weekly | OEM |
| 28. Air Filter Restriction Indicator | Inspect | Before Each Trip + Daily En route | - |

NOTE

Service must be performed every twelve (12) months, regardless of actual mileage, to protect seals, bearings and gaskets from drying out and failing. The motorhome must be started and driven for at least 20 miles every two weeks. It is important to remember the generator maintenance interval is based on hours of usage. Consult the OEM manual for the generator service interval.

| Lubrication Code Chart: | |
|-------------------------|---|
| *EO | Engine oil as recommended by engine manufacturer. |
| *OEM | Refer to the Original Equipment Manufacturer's manual. |
| MP | API GL-5 or MT-1 type gear lubricant - Penzoil Gear Plus Super-ew 75w-90, Synthetic. |
| *CL | Chassis lubricant should be a high quality non corrosive multi-purpose lithium soap base lubricant that is water resistant and designed to withstand extremely high operating temperatures. |
| *TF | Dexron 3 or Mercon 5 ATF |
| *AF | Antifreeze as recommended by the engine manufacture. |
| FF | Fuel Filter |
| BF | Dot-3 Brake Fluid |
| HT | High Temperature Bearing Grease |
| *TS | TranSynd™ synthetic transmission fluid (identified by tag on dipstick) |
| CBL | Clay-based lubricant |
| DW | Distilled Water |
| P | Petroleum Jelly or commercial battery terminal corrosion inhibitor |
| EO2 | 15W-40 Engine Oil |
| GO | EP-SAE 90 Gear Oil |
| CL-4 | U-Joints located inside the motorhome under the steering cover use chassis lubricant. |

*Fluids initially filled at factory.

SPECIFICATIONS CHARTS**Tank Capacities**

| Tank Capacities (Approx. Gallons) All Models | |
|--|-------------|
| Water Heater | 10 gallons |
| Grey Water | 62 gallons |
| Black Water | 40 gallons |
| Fresh Water | 100 gallons |
| Diesel Fuel | 100 gallons |
| Propane* | 39 gallons |

*Actual filled Propane Tank Capacity is 80% of listing due to safety shutoff required on tank.

NOTE

All tank capacities are estimated based upon calculations provided by the tank manufacturer and represent approximate capacities. The actual "usable capacity" may be greater or less than the estimated capacities based upon fabrication and installation of the tanks.

NOTE

This chart reflects product specifications available at the time of printing. Therefore any floor plans introduced thereafter may not be reflected in the chart. All other information contained throughout the manual will still apply.

Engine Specifications

| ENGINE SPECIFICATIONS | ISL 400 HP |
|-------------------------|--------------------------|
| Cubic Inch Displacement | 8.9 L/540 CI |
| Engine HP | 400 HP @ 2100 RPM |
| Engine Torque | 1200 lbs./ft. @ 1300 RPM |
| Governed Speed | 2200 RPM |
| Firing Order | 153624 |
| Rear Axle Ratio | 4:30:1 |
| Alternator Amp Size | 160 Amp |
| Idle Speed | 700 RPM |

Chassis Fluid Capacities

| CHASSIS LIQUID CAPACITIES | ISL 400 HP |
|-----------------------------------|------------------|
| Engine Oil | 24 Qts. |
| Transmission Oil (initial amount) | 22 Qts. |
| Transmission Oil (with service) | 19 Qts. w/filter |
| Radiator Coolant (initial amount) | 39 Qts. |
| A/C Refrigerant (initial amount) | 4 lbs. 134 A |
| Hydraulic Oil | 3.5 Qts. |
| Rear End | 16 Qts. Approx. |

Generator Specifications**8 Kw****SERVICE INFORMATION**

Refer to operator's manual for maintenance specifications and adjustments.

| | | |
|-----------------|---|--------------------|
| Air Cleaner | - | 140-2897 |
| Oil Filter | - | 122-0833 |
| Fuel Filter | - | 149-2513 |
| Oil Capacity | - | 3 Qts w/oil filter |
| API Designation | - | CE |
| Temp | | SAE Viscosity |
| 5° - 120°F | | 15W-40 |
| (-13°F) - 68°F | | 10W-30 |
| (-40°F) - 68°F | | 5W-30 |

If service/parts are needed the Onan distributor can be located in the yellow pages under Generators-Electric. In the USA or Canada call 1-800-888-Onan DC Fuss & Radiator Cap Under Cover.



020159o

Belts & Filters**NOTE**

Filter and belt numbers were correct at the time of printing. Verify the numbers at time of removal. The manufacturer will not be responsible for incorrect filter or belt usage. Please refer to the engine OEM manual for specific maintenance information.

| FILTERS & BELTS | MANUFACTURER | NUMBER |
|----------------------------|---------------|----------|
| Air Filter | Donaldson | P533930 |
| Alternator Serpentine Belt | Cummins | 3972387 |
| Fuel Filter Primary | Fleetguard | FS 1003 |
| Fuel Filter Secondary | Fleetguard | FF 5636 |
| Oil Filter | Fleetguard | LF 9009 |
| Transmission Filter | Allison | 29545779 |
| Air Dryer Filter | Meritor Wabco | R950011 |

FUSE & CIRCUIT BREAKER LOCATION

This is an overview of the more common fuses and circuit breakers found in the motorhome. Consult the distribution circuit breaker panel and distribution fuses above the driver, the exterior front electrical panel, automatic reset circuit breakers (black box) in battery compartment, front distribution box (located in roadside front compartment) and rear distribution box (located in curbside rear compartment) for a more complete listing.

The motorhome also employs hi amperage circuit breakers located in the battery compartment and front electrical panel. Depending on floor plan and options, various hi amperage circuit breakers can be utilized.


Typically, the circuit breakers located in the battery compartment are 120 Amp and 150 Amp. Both hi amperage circuit breakers employ a lever that pops out when the circuit breaker is opened (tripped). The circuit breaker will remain tripped (in the OFF position) until the lever is manually reset.

In addition there is an 80 Amp hi amperage house circuit breaker located in the roadside front electrical panel that has a trip lever.

The hi amperage circuit breaker(s) should also be checked if a problem exists.

NOTE

Hi Amperage circuit breakers, both amperage size and location, will change with options and changes to the motorhome.

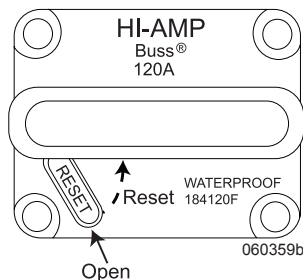

Example of 120 Amp Hi Amperage Circuit Breaker

Fuse & Circuit Breaker Location Chart

| ITEM | LOCATION | TYPE AND RATING |
|------------------------------|--|--|
| Water Pump | Distribution Panel (Above Driver) | 10 Amp Fuse |
| Water Heater | Distribution Panel (Above Driver) Distribution Panel (Above Driver) | 20 Amp Circuit Breaker 15 Amp Fuse |
| Furnace | Distribution Panel (Above Driver) | 15 Amp Fuse |
| Propane Detector | Exterior Front Electrical Panel | 3 Amp Fuse |
| Carbon Monoxide Detector | Exterior Front Electrical Panel | 3 Amp Fuse |
| Step Motor | Exterior Front Electrical Panel | 25 Amp Fuse |
| Step Switch | Exterior Front Electrical Panel | 7.5 Amp Fuse |
| Step/ISO Sense | Exterior Front Electrical Panel | 7.5 Amp Fuse |
| Refrigerator | Exterior Front Electrical Panel Distribution Panel (Above Driver) | 10 Amp Fuse 20 Amp Circuit Breaker |
| Slide-Out Control | Battery Compartment (Black Box) | 30 Amp Automatic Reset Circuit Breaker |
| | Battery Compartment (Black Box) | 20 Amp Circuit Breaker |
| | Battery Compartment (Black Box) | 5 Amp Fuse |
| Slide-Out Relay | Exterior Front Electrical Panel | 15 Amp Fuse |
| Driver Slide-Out Power #1&2 | Exterior Front Electrical Panel | 15 Amp Fuse |
| Passenger Slide-Out Power #1 | Exterior Front Electrical Panel | 15 Amp Fuse |
| Rear Slide-Out Bed | Distribution Panel (Above Driver) | 15 Amp Fuse |
| Rear Slide-Out Wardrobe | Distribution Panel (Above Driver) | 15 Amp Fuse |
| Patio Awning | Exterior Front Electrical Panel | 15 Amp Circuit Breaker |
| Radio Memory | Exterior Front Electrical Panel | 10 Amp Fuse |
| Dash Radio Switch (Optional) | Distribution Panel (Above Driver) | 5 Amp Fuse |
| Exterior Radio (Optional) | Distribution Panel (Above Driver) | 15 Amp Fuse |
| Engine/Transmission | See Front & Rear Distribution Boxes Exterior Front Electrical Panel | |
| Leveling Jacks | Exterior Front Electrical Panel | 15 Amp Fuse |
| Leveling Air Hydraulic | Exterior Front Electrical Panel | 15 Amp Fuse |
| Air Leveling Compressor | Exterior Front Electrical Panel | 15 Amp Fuse |
| Air Leveling | Exterior Front Electrical Panel | 15 Amp Fuse |
| Jack Warning | Exterior Front Electrical Panel | 5 Amp Fuse |
| Sani-Con | Battery Compartment (Black Box) | 20 Amp Automatic Reset Circuit Breaker |
| Inverter | Distribution Panel (Above Driver) | 30 Amp Circuit Breaker |

IMPORTANT NOTE

Fuses and circuit breakers, both location and amperage size, will vary with options and changes to the motorhome.

BATTERY SPECIFICATION CHARTS

| Application | AH (20 HR) | CCA† | RC (25A @ 80° F) Minutes |
|--|------------|------|---------------------------|
| 12 Volt Chassis* Group 31p - MHD (2 each) | | 950 | 195 |
| 6 Volt Domestic** (4 each) | 450 | | 75 Amp @ 80° F = 230 Min. |

*Batteries connected in parallel. **Batteries connections in a Series/Parallel connection. †CCA Ratings are 0° F. These are the minimum requirements.

| Approximate Hours of Ampere Load | | | | | |
|----------------------------------|--------|---------|---------|---------|---------|
| **U2200 | 5 AMPS | 10 AMPS | 15 AMPS | 20 AMPS | 25 AMPS |
| | 110 | 44 | 25 | 18 | 14 |

**Four batteries connected in a Series/Parallel configuration.

| Battery State of Charge vs Voltage/Specific Gravity | | | |
|---|------------------|-----------------|-----------------|
| Voltage | Specific Gravity | State of Charge | Depth of Charge |
| 12.65 | 1.265 | 100% | 0% |
| 12.45 | 1.225 | 75% | 25% |
| 12.25 | 1.190 | 50% | 50% |
| 12.05 | 1.145 | 25% | 75% |
| 11.90 | 1.100 | 0% | 100% |

Voltage Reading: Battery fully charged at rest for one hour.

| Engine Cold Cranking Amps Requirements | | | |
|--|------|-----|----------|
| ISL | 1500 | CCA | 12 VOLTS |

CCA Ratings are 0° F. These are the minimum requirements.

MAINTENANCE RECORDS

After scheduled services are performed, record the date, odometer reading and who performed the service in the boxes provided after the maintenance interval. Any additional information from “Owner Checks and Services” or “Periodic Maintenance” can be added on the following record pages. In addition, retain all maintenance receipts. The owner information portfolio is a convenient place to store them.

LUBRICATION SERVICE RECORD

KEY TO SERVICES

A -- Lubrication & Inspection
 A1 – Motor Oil & Filter Change
 A2 – Transmission Oil Change

A3 -- Drive Axle Oil Change
 A4 -- Wheel Bearing Service
 B -- Prescribed Service

C -- Prescribed Service
 D -- Prescribed Service
 E – Prescribed Service

| MILEAGE | SERVICES | | | | | | | | | | JOB PERFORMED | |
|---------|----------|----|----|----|----|---|---|---|---|------|---------------|--|
| | A | A1 | A2 | A3 | A4 | B | C | D | E | DATE | BY | |
| 1 | | | | | | | | | | | | |
| 2 | | | | | | | | | | | | |
| 3 | | | | | | | | | | | | |
| 4 | | | | | | | | | | | | |
| 5 | | | | | | | | | | | | |
| 6 | | | | | | | | | | | | |
| 7 | | | | | | | | | | | | |
| 8 | | | | | | | | | | | | |
| 9 | | | | | | | | | | | | |
| 10 | | | | | | | | | | | | |
| 11 | | | | | | | | | | | | |
| 12 | | | | | | | | | | | | |
| 13 | | | | | | | | | | | | |
| 14 | | | | | | | | | | | | |
| 15 | | | | | | | | | | | | |
| 16 | | | | | | | | | | | | |
| 17 | | | | | | | | | | | | |
| 18 | | | | | | | | | | | | |
| 19 | | | | | | | | | | | | |
| 20 | | | | | | | | | | | | |
| 21 | | | | | | | | | | | | |
| 22 | | | | | | | | | | | | |
| 23 | | | | | | | | | | | | |
| 24 | | | | | | | | | | | | |
| 25 | | | | | | | | | | | | |
| 26 | | | | | | | | | | | | |
| 27 | | | | | | | | | | | | |
| 28 | | | | | | | | | | | | |
| 29 | | | | | | | | | | | | |
| 30 | | | | | | | | | | | | |

BATTERY RECORD

| MAKE | TYPE | DATE INSTALLED | REPAIRS | DATE REPLACED | SERVICE | |
|------|------|----------------|---------|---------------|---------|-------|
| | | | | | MONTHS | MILES |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |

TIRE RECORD

| MAKE | TYPE | PLY | DATE INSTALLED | REPAIRS | DATE REPLACED | SERVICE | |
|------|------|-----|----------------|---------|---------------|---------|-------|
| | | | | | | MONTHS | MILES |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

BATTERY RECORD

| MAKE | TYPE | DATE INSTALLED | REPAIRS | DATE REPLACED | SERVICE | |
|------|------|----------------|---------|---------------|---------|-------|
| | | | | | MONTHS | MILES |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |

TIRE RECORD

| MAKE | TYPE | PLY | DATE INSTALLED | REPAIRS | DATE REPLACED | SERVICE | |
|------|------|-----|----------------|---------|---------------|---------|-------|
| | | | | | | MONTHS | MILES |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

TECHNICAL PUBLICATIONS

Manager:
Vance Buell

OPERATIONS

Technical Writers
William Birch - OR
Nate Bondurant - OR
Claudia Price - IN

Creative Designers
Aaron Graham - OR
Jennifer Tibbs - IN

ILLUSTRATIONS:

Aaron Graham, Jennifer Tibbs

PRINTING

Holiday Graphics - IN

ONLINE

Corporate Site: www.monaco-online.com

ONLINE TOURS

www.monaco-online.com/tours/

2009 DIPLOMAT OWNER'S MANUAL

Technical Writer:
Claudia Price

Manual & Cover Design:
Jennifer Tibbs

| | | | |
|--|------------|--|------------|
| <u>A</u> | | <u>C</u> | |
| Air Conditioner & Heater Controls | 192 | Carbon Monoxide Detector..... | 44 |
| Blend Air System | 192 | Operation..... | 45 |
| Maintenance..... | 193 | Alarm | 46 |
| Operating Tips & Hints..... | 193 | Testing..... | 46 |
| System Components..... | 194 | Cleaning & Maintenance | 46 |
| Troubleshooting | 194 | Ceiling | 61 |
| ABS/ATC System (Anti-Lock Brakes) .. | 207 | Central Vacuum (Optional)..... | 95 |
| ABS Diagnostic | 207 | Operation..... | 95 |
| Air Conditioner - Roof..... | 85 | Maintenance | 95 |
| Unit Display and Controls | 86 | Chassis - Introduction..... | 198 |
| Filter Maintenance | 86 | Chassis Electrical - Introduction | 180 |
| General Maintenance | 87 | Citizen Band (CB) Radio - Prep | 114 |
| Air Conditioner Cover Maintenance..... | 87 | Cold Weather Conditions | 138 |
| Air Dryer..... | 202 | Cold Weather Storage | 138 |
| Desiccant Cartridge..... | 203 | Condensation | 65 |
| Desiccant-Type Air Dryer | 204 | Console..... | 187 |
| Air Dryer Cycle..... | 204 | Transmission Shift Selector | 187 |
| Air In Refrigerator Propane | | Parking Brake..... | 187 |
| Supply Lines | 79 | Leveling Controls..... | 187 |
| Air Intake & Charge Air System | 236 | Cooktop..... | 82 |
| Air Filter..... | 236 | Operation..... | 82 |
| Air Filter Restriction Indicator..... | 236 | Cooktop Covers | 83 |
| Air Spring Inspections | 204 | Burner Grate..... | 83 |
| Air Supply System..... | 198 | Cooktop/Oven (Optional)..... | 83 |
| Air Governor..... | 199 | Operation..... | 83 |
| Air Storage Tanks..... | 199 | Lighting Oven Pilot..... | 84 |
| Air Fittings | 200 | Cooktop Covers | 84 |
| Air Coupler | 200 | Burner Grate..... | 84 |
| Air System Charging (External) | 201 | Cooktop/Oven Cleaning & | |
| Air System Test..... | 201 | Maintenance | 85 |
| Alternator | 184 | Coolant System..... | 224 |
| Alternator Testing Procedure | 184 | Radiator/Charge Air Cooler | 227 |
| Appliances - Introduction..... | 74 | Countertops | 63 |
| Automatic Reset Circuit Breaker | 171 | Solid Surface..... | 63 |
| | | Laminate | 63 |
| <u>B</u> | | | |
| Awnings..... | 107 | | |
| Slide-Out Cover | 107 | | |
| Rain Water..... | 107 | | |
| Front Door Awning | 107 | | |
| Window Awning..... | 107 | | |
| Patio Awning..... | 108 | | |
| Awning Care & Cleaning..... | 108 | | |
| Storm Precautions | 109 | | |
| Backing Up A Motorhome..... | 24 | | |
| Batteries - House | 172 | | |
| Battery Slide-Out Tray (Optional) | 172 | | |
| Battery Maintenance | 173 | | |
| Testing the Battery | 173 | | |
| Battery Charge Time & | | | |
| Consumption Rate..... | 174 | | |
| Battery - Chassis | 180 | | |
| Battery Cutout Switch | 159 | | |
| Battery Disconnect..... | 180 | | |
| Chassis | 180 | | |
| Battery Disconnect..... | 159 | | |
| House | 159 | | |
| Battery Maintainer (Bi-Directional | | | |
| Isolator Relay Delay) | 183 | | |
| Relays..... | 183 | | |
| Battery Specification Charts | 244 | | |
| Maintenance Records..... | 244 | | |
| Bedroom Ceiling Fan (Optional) | 109 | | |
| Bedroom DVD (Optional) | 120 | | |
| Brake Systems | 205 | | |
| Air Brakes | 205 | | |
| Park & Emergency Brake System..... | 205 | | |
| Automatic Slack Adjuster | 206 | | |
| Brake Systems - Backup | 206 | | |
| Breaking Camp | 27 | | |

D

| | |
|---|------------|
| Dash | 187 |
| Instrument Panel | 187 |
| LCD Controller | 189 |
| Indicator Lights | 189 |
| Switches | 190 |
| Dash Radio | 118 |
| Dash Radio Power Switch – On Dash | 118 |
| Dash Radio On/Off Switch – In Bedroom | 119 |
| Speaker Switch – When Used With Dash Radio | 119 |
| Diagnostic Plug Location | 195 |
| Diesel Particulate Filter | 237 |
| Dinettes | 113 |
| Free Standing Dinette (Optional)..... | 113 |
| Arched Back Booth Dinette | 113 |
| Disc CD Changer (Optional) | 119 |
| Distribution Panel | 170 |
| House 12 Volt DC | 170 |
| Distribution Panel (50 Amp) | 167 |
| House 120/240 Volt AC Panel | 167 |
| Energy Management System | 167 |
| Circuit Breaker | 169 |
| GFCI Breakers & Outlets..... | 169 |
| Door - Sliding | 110 |
| Drain Traps & Auto Vents | 137 |
| Drive Axle & Drive Shaft | 213 |
| U-Joint Angles Phasing & Driveline Balance..... | 214 |
| Driver's Console | 190 |
| Driver's Dash & Dash Console..... | 191 |
| Passenger Console | 191 |
| By Entry Door..... | 191 |

| | |
|-----------------------------------|-----------|
| Driving & Safety | 14 |
| Inspections | 14 |
| Familiarize Yourself..... | 14 |
| Mirror Adjust | 14 |
| Safety Seat Belts | 14 |
| Driving Tips | 16 |
| Adjust to Driving Conditions..... | 16 |
| Dry Camping | 26 |

E

| | |
|--|------------|
| Electrical Layout | 178 |
| Emergency Roadside Procedures | 28 |
| In Case of Flat Tire | 28 |
| Dead Chassis Battery | 29 |
| Engine - General Information | 222 |
| Engine “No Start” Flow Chart | 196 |
| Engine Oil | 224 |
| Engine Shutdown | 224 |
| Extended Engine Shutdown..... | 224 |
| Entertainment System | 116 |
| Operating Components | 116 |
| Entry Door | 101 |
| Latch Adjustments | 101 |
| Screen Door | 102 |
| Entry Step | 100 |
| Maintenance..... | 100 |
| Step Cover..... | 101 |
| Stepwell Storage Compartment | 101 |
| Equipment - Introduction | 100 |
| Escape (Egress) Window | 47 |
| Exhaust Brake | 228 |
| Operation..... | 228 |
| Functions..... | 228 |

| | |
|---|------------|
| Exterior Care | 50 |
| Corrosion..... | 50 |
| Winter Drive Protection | 50 |
| Washing..... | 51 |
| Drying | 51 |
| Waxing | 51 |
| Paint Codes | 52 |
| Tire Care | 52 |
| Wheels - Polished Aluminum | 52 |
| Bright Metal..... | 53 |
| Exterior Entertainment Center (Optional) | 123 |
| Exterior Maintenance | 53 |
| Fiberglass | 53 |
| Roof Care & Seal Inspections..... | 53 |
| Sealant Types | 54 |
| Exterior Propane Line Hookup Prep | 152 |

F

| | |
|--|------------|
| Fabrics | 56 |
| General Care & Cleaning..... | 56 |
| Vinyl..... | 56 |
| Optima Leather & “O” Vinyl..... | 57 |
| Leather | 58 |
| Ultra-Leather..... | 58 |
| Fans | 109 |
| Automatic..... | 109 |
| Faucet Screens | 131 |
| Fire Extinguisher | 47 |
| Fireplace Electric (Optional) | 96 |
| Operation..... | 97 |
| Remote Control/Receiver..... | 97 |
| Light Bulb Replacement | 98 |

Floors.....58
 Carpet Cleaning58
 Tile Floor.....59
 Laminate Floor60
Front Axle209
 Alignment209
 Lubrication Maintenance Safety210
 Steering Components211
 Steering Column211
 Drag Link212
 Center Link212
 Steering Spindles212
 Control Arm Bushings212
 Drum Brake Lubrication212
 Steering Gear212
Fuel System.....233
 Fuel Requirements233
 Fuel Tank.....233
 Fuel Sender234
 Fuel Lines & Hoses.....234
 Fuel Filters234
Furnace88
 Operation.....88
 If the Furnace Fails to Light.....89
Fuse & Circuit Breaker Location243
 Fuse & Circuit Breaker
 Location Chart243
Fuse & Circuits180
**Fuses & Circuit Breakers –
 12 Volt DC171**

G

Generator - 120 AC Diesel.....162
 Pre-Start Checks.....162
 Starting the Generator163
 Stopping the Generator163

Powering the Equipment.....163
 Generator Fuel164
 Resetting the Circuit Breaker.....164
 Generator Exercise.....164
Glossary of Terms5
Grab Handle101

H

Height Control Valves.....204
Hitch20
 Using the Rear Receiver20
 Tow Plug Connection.....22
Home Theatre Surround Sound119
 Speaker Switch – When Used With
 Home Theatre Surround Sound.....119
 Remote Control.....119
House Electrical - Introduction158
Hydraulic System235
 Hydraulic Reservoir235
 Power Steering Hydraulic Filter235

I,J

Interior Care.....55
 Cockpit.....55
Inverter165
 Providing AC Power with Inverter165
 Battery Charging with the Inverter165
 Auto Generator Start (Optional)166
 Remote Sensor166
 Factory Default Settings166
 Battery Temperature Sensor.....166

K

Keyless Entry (Optional).....102
 Operation.....102

L

Ladder - Rear114
Leveling System.....216
 Landing Gear Maintenance219
 Manual Override – If Jacks Fail
 To Retract220
Lights.....177
 Incandescent.....177
 Interior Halogen.....177
 Map Light177
**Limited Warranty Transfer Application/
 Change of Owner Information11**
Lubrication Charts240
Lubrication Maintenance238

M

Microwave Convection Oven.....80
 AC Power for Microwave Convection .80
 Care & Cleaning81
Mold & Mildew65

N

Navigation System (Optional).....114

O

Owner’s Manual Survey: 2009 Diplomat .9

P,Q

| | |
|---|------------|
| Pest Control | 66 |
| Power Sunvisors | 110 |
| Power Water Hose Reel (Optional) | 128 |
| Propane Consumption | 155 |
| Propane Detector | 149 |
| Testing | 149 |
| Alarm | 150 |
| Maintenance | 150 |
| Propane Distribution Lines | 155 |
| Propane Emergency Procedures Checklist | 150 |
| Propane Fundamentals | 152 |
| Propane Hose Inspection | 154 |
| Propane Regulator | 153 |
| Propane Safety Tips | 156 |
| Propane Systems | 148 |
| Propane Tank | 151 |
| Measurement | 151 |
| Tank Capacity | 151 |
| Tank Filling | 151 |
| Tank Operation..... | 151 |

R

| | |
|------------------------------------|------------|
| Rear Grill | 228 |
| Rear Vision System | 23 |
| Refrigerator | 74 |
| Operation Specifics | 74 |
| Refrigerator Controls | 75 |
| Control Panel - Four Door | 75 |
| Icemaker | 76 |
| Refrigerator Alarm | 76 |
| Cooling Unit Fans | 77 |
| Doors | 77 |
| Storage Procedures..... | 77 |
| Interior Light..... | 77 |

| | |
|--|-----------|
| Service..... | 77 |
| Exterior Refrigerator Access Panel | 77 |
| Control Panel – Two Door (Optional)..... | 78 |
| Remote Control | 87 |
| Display | 87 |
| Using the Remote Control | 87 |
| Replacing Batteries | 88 |
| Reporting Safety Defects | 4 |

S

| | |
|--|------------|
| Safety Terms | 4 |
| Satellite Radio (Optional) | 114 |
| Satellite System (Optional) | 121 |
| Satellite System Prep | 120 |
| Coaxial Pre-Wire..... | 120 |
| Satellite Receiver Connection – | |
| Main Room | 120 |
| Bedroom..... | 120 |
| Seat Controls | 110 |
| Swivel Seats | 110 |
| Set-Up Procedures | 25 |
| Shock Absorber | 215 |
| Shore Power Hook-Up | 159 |
| Manual Shore Cord Reel..... | 161 |
| Power Shore Cord Reel (Optional) | 161 |
| Shower | 60 |
| Slide-Out Operation | 102 |
| Extending & Retracting Slide Rooms..... | 103 |
| Locking Bar | 103 |
| Safety Precautions..... | 104 |
| Troubleshooting | 104 |
| Manual Override – Hydraulic | |
| Main Slide-Out Room..... | 104 |
| Manual Override - Bedroom..... | 105 |
| Broken Cable - Bedroom Slide-Out..... | 106 |

| | |
|---------------------------------------|------------|
| Smoke Detector | 44 |
| Operation..... | 44 |
| Testing | 44 |
| Maintenance | 44 |
| Troubleshooting | 44 |
| Sofa | 111 |
| Jack Knife Sleeper Sofa | 111 |
| Hide-A-Bed (Optional) | 111 |
| Hide-A-Bed Air Mattress (Optional) .. | 111 |
| Select Comfort Air Mattress | |
| (Optional)..... | 112 |
| Solar Panel (Optional) | 175 |
| Charge Controller..... | 175 |
| Inspection and Maintenance | 176 |
| Solar Panel Care..... | 176 |
| Specifications Charts | 242 |
| Tank Capacities | 242 |
| Engine Specifications..... | 242 |
| Chassis Fluid Capacities | 242 |
| Generator Specifications | 242 |
| Belts & Filters | 242 |
| Stainless Steel Surfaces | 64 |
| Starting Procedure | 222 |
| Normal Starting..... | 222 |
| Cold Weather..... | 223 |
| Steering Column | 185 |
| Smart Wheel Operation..... | 185 |
| Left Control Pad..... | 185 |
| Right Control Pad | 186 |
| Wiper Function | 186 |
| Tilt & Telescope | 186 |
| Turn Signal Lever | 186 |
| Hazard Flashers..... | 187 |
| Storage | 68 |
| Short Term..... | 68 |
| Long Term..... | 69 |
| Winter Storage Checklist | 70 |
| Removal from Storage | 71 |

| | |
|--|------------|
| Storage Bay Slide-Out Tray (Optional) | 114 |
| Storage Under Bed | 113 |
| Surge Protector | 124 |
| Systems Control Center | 123 |

T,U,V

| | |
|---|------------|
| Tires | 31 |
| Importance of Air Pressure | 32 |
| Tire Pressure Inflation Guideline | 32 |
| Inspecting & Pressure | 33 |
| Air Pressure Checklist | 34 |
| Tire Support When Leveling | 34 |
| Tire Vibration | 34 |
| Tire Rotation | 35 |
| Tire Replacement and Related Information | 35 |
| Storage of Tires - Long Term | 35 |
| Toilet | 135 |
| Pedal Flush | 135 |
| Electric Toilet-Tecoma (41 SKQ Model Only) | 136 |
| Cleaning | 137 |
| Maintenance | 137 |
| Winterization | 137 |
| Towing Procedures | 30 |
| Disabling Parking Brake | 31 |
| Transfer Switch | 162 |
| Transmission | 228 |
| Shift Selector | 229 |
| Check Trans Indicator | 230 |
| Periodic Inspections | 231 |
| Transmission Fluid & Filters | 231 |
| Trip Preparation | 19 |

| | |
|---|------------|
| TV Entertainment Components | 115 |
| Television (Front) Lockout Feature | 115 |
| Connections - Cable TV, Computer & Phone | 115 |
| TV Antenna | 115 |
| Antenna Select | 116 |

W,X,Y,Z

| | |
|---|------------|
| Wall Coverings | 61 |
| Warranty Information File | 4 |
| Washer/Dryer (Optional) | 93 |
| Setting a Wash-to-Dry Cycle | 93 |
| Setting a Wash Cycle | 94 |
| Setting a Dry Cycle | 94 |
| Maintenance | 94 |
| Winterization | 94 |
| Washer/Dryer Prepared | 92 |
| Waste Pump (Optional) | 133 |
| Waste Water Systems | 131 |
| Proper Waste Disposal | 131 |
| What Not to Put in Waste Holding Tanks | 131 |
| What to Put in Holding Tanks | 131 |
| Sewer Hose | 132 |
| Tank Flush | 132 |
| Water Filter - Faucet | 129 |
| Water Heater | 89 |
| Tips | 91 |
| Water Pump | 128 |
| Water Pump Troubleshooting | 129 |
| Water Service Center For 38 PDQ | 145 |
| Water Service Center (41 SKQ & 41 PDQ) | 146 |

| | |
|---|------------|
| Water Systems | 130 |
| Troubleshooting | 130 |
| Disinfecting Fresh Water | 130 |
| Water Systems - Introduction | 126 |
| Water Tank - Fresh Gravity Fill | 127 |
| City Water Hook-Up | 128 |
| Water Tanks | 126 |
| Measurements & Calibration | 126 |
| Fresh Water Fill | 127 |
| Weighing the Motorhome | 36 |
| Weight Limits | 36 |
| Weight Terms | 37 |
| Scales | 38 |
| Weight Label | 38 |
| Four Corner Weighing (Example) | 39 |
| Cargo Carrying Capacity | 39 |
| Cargo Carrying Capacity Flowchart | 41 |
| Weighing Procedure Worksheet | 42 |
| Weight Record Sheet | 43 |
| Wheel Mounting | 36 |
| Windows | 64 |
| Window Treatments | 64 |
| Mini-Blinds | 64 |
| Day/Night Shades | 64 |
| Winegard Trav'ler Multi-Satellite (Optional) | 122 |
| Winterization | 138 |
| Using Air Pressure For 38 PDQ | 138 |
| Using Non-Toxic Antifreeze For 38 PDQ | 140 |
| De-winterization | 141 |
| Using Air Pressure (For 41 SKQ & 41 PDQ) | 141 |
| Using Non-Toxic Antifreeze (For 41 SKQ & 41 PDQ) | 143 |
| De-winterization | 144 |
| Wood Care | 61 |

